

MRT Technology (Suzhou) Co., Ltd Phone: +86-512-66308358 Web: www.mrt-cert.com Report No.:2111RU037-U3 Report Version: V01 Issue Date: 01-07-2022

# SAR MEASUREMENT REPORT

FCC ID:	HD5-EDA510	
Applicant:	Honeywell International Inc. Honeywell Safety and Productivity Solutions.	
Application Type:	Class II Permissive Change	
Product:	Mobile Computer	
Model No.:	EDA51-0	
Brand Name:	Honeywell	
FCC Classification:	Digital Transmission System (DTS) Unlicensed National Information Infrastructure (UNII)	
FCC Rule Part(s):	FCC 47 CFR Part 2.1093	
Test Procedure(s):	IEEE 1528:2013, IEEE C95.1- 2005	
Test Date:	January 06, 2022	

Reviewed By:

Jame Yuan

Approved By:

Robin Wu



The test results relate only to the samples tested.

This equipment has been shown to be capable of compliance with the applicable technical standards as indicated in the measurement report and was tested in accordance with the measurement procedures specified in IEEE1528, KDB 447498and KDB 865664. Test results reported herein relate only to the item(s) tested. The test report shall not be reproduced except in full without the written approval of MRT Technology (Suzhou) Co., Ltd.



# **Revision History**

Report No.	Version	Description	Issue Date	Note
2111RSU037-U3	Rev. 01	Initial Report	01-07-2022	Valid



# CONTENTS

Des	scriptio	n Page	
1.	1. General Information		
2.	<ol> <li>1.1.</li> <li>1.2.</li> <li>1.3.</li> <li>1.4.</li> <li>1.5.</li> <li>1.6.</li> <li>1.7.</li> </ol>	Applicant	
	2.4.	Test Result Summary	
3.	Speci	fic Absorption Rate (SAR) 10	
	3.1. 3.2.	Introduction	
4.	DASY	6 Measurement System 11	
	4.1. 4.2. 4.3.	Introduction11DASY6 Measurement System Diagram11System Components Details12	
5.	The S	AR Measurement Procedure 23	
	5.1. 5.2. 5.3.	Measurement Process Diagram.23Test Position Definition24TestProcedure27	
6.	S. System Verificaiton		
	6.1. 6.2.	Tissue Check    29      System Check    32	
7.	SAR 1	Fest Results	
8.	Test E	Equipment Used	
9.	. Measurement Uncertainty 36		
Anr	nex A -	System Check Result	



Annex B - Test Data Plots	40
Annex C - SAR Test Setup Photos	43
Annex D - EUT External Photos	44
Annex E -Equipment Calibration Report	45

\_\_\_\_



# 1. General Information

## 1.1. Applicant

Honeywell International Inc. Honeywell Safety and Productivity Solutions 9680 Old Bailes Road, Fort Mill, SC 29707 United States

## 1.2. Manufacturer

Honeywell International Inc.

Honeywell Safety and Productivity Solutions

9680 Old Bailes Road, Fort Mill, SC 29707 United States

## 1.3. Testing Facility

$\square$	Test Site – MRT Suzhou Labor	ratory	
	Laboratory Location (Suzhou –Wuzhong)		
	D8 Building, No.2 Tian'edang Rd., Wuzhong Economic Development Zone, Suzhou, China Laboratory Location (Suzhou – SIP)		
	Laboratory Accreditations		
	A2LA: 3628.01	CNAS: L10551	
	FCC: CN1166	ISED: CN0001	
	VCCI: R-20025, G-20034,C-20020, T-20020		
	Test Site – MRT Shenzhen Laboratory		
	Laboratory Location (Shenzhen)		
	1G, Building A, Junxiangda Building, Zhongshanyuan Road West, Nanshan District, Shenzhen, China		
Laboratory Accreditations			
	A2LA: 3628.02	CNAS: L10551	
	FCC: CN1284	ISED: CN0105	
	Test Site – MRT Taiwan Laboratory		
	Laboratory Location (Taiwan)		
	No. 38, Fuxing 2 <sup>nd</sup> Rd., Guishan Dist., Taoyuan City 333, Taiwan (R.O.C.)		
	Laboratory Accreditations		
	TAF: L3261-190725		
	FCC: 291082, TW3261	ISED: TW3261	



## **1.4.** Product Information

Product Name	Mobile Computer
Model No.	EDA51-0
Serial No.	21300B995E
Hardware Version	EDA51 3.0
Software Version	215.02.00.0025
Wi-Fi Specification	802.11a/b/g/n/ac
Bluetooth Version	v4.2 dual mode
NFC	13.56MHz
EUT Type	Portable Device
Exposure Category	General Population/Uncontrolled Exposure

# 1.5. Product Specification Subjective to this Report

Wi-Fi Specification		
Frequency Range	2.4GHz Wi-Fi	
	802.11b/g/n-HT20: 2412 ~ 2462 MHz	
	<u>5GHz Wi-Fi</u>	
	For 802.11a/n-HT20/ac-VHT20:	
	5180~5240MHz, 5260~5320MHz, 5500~5720MHz, 5745~5825MHz	
	For 802.11n-HT40/ac-VHT40:	
	5190~5230MHz, 5270~5310MHz, 5510~5710MHz, 5755~5795MHz	
	For 802.11ac-VHT80:	
	5210MHz, 5290MHz, 5530MHz, 5610MHz, 5690MHz, 5775MHz	
Type of Modulation	802.11b: DSSS	
	802.11a/g/n/ac: OFDM	
Data Rate	802.11b: 1/2/5.5/11Mbps	
	802.11a/g: 6/9/12/18/24/36/48/54Mbps	
	802.11n: up to 150Mbps	
	802.11ac: up to 433.3Mbps	
Bluetooth Specification		
Frequency Range	2402~ 2480MHz	
Type of Modulation	For Bluetooth: 1Mbps (GFSK), 2Mbps (Pi/4 DQPSK), 3Mbps (8DPSK)	
	For BT-LE: 1Mbps (GFSK)	



Operating Condition	802.11a/n/ac for 5GHz Wi-Fi (1Tx, 1Rx)	
	Bluetooth BR/EDR/LE (1Tx, 1Rx)	
Antenna Type	FPC Antenna	
Simultaneously	N/A	
Transmitting Scenarios		

# 1.6. Description of Available Antennas

# 1.7. Ancillary Equipment

Ancillary Equipment 1	Adapter
Model No.	ADS-12B-06 05010E
Input	100 - 240V ~ 50/60Hz, Max. 0.3A
Output	5.0V-2.0A 10.0W
Ancillary Equipment 2	Battery
Model No.	BAT-EDA50US
Capacity	15.2Wh, 4000mAh
Rated Voltage	3.8V



# 2. Summaryof Test Result

## 2.1. Test Standards

No.	Identity	Document Title	
1	47 CFR Part 2.1093	Radiofrequency radiation exposure evaluation: portable devices	
2	IEEE 1528-2013	IEEE Recommended Practice for Determining the Peak	
		Spatial-Average Specific Absorption Rate (SAR) in the Human Head	
		from Wireless Communications Devices: Measurement Techniques	
3	IEEEC95.1-2005	IEEE Standard for Safety Levels with Respect to Human Exposure to	
		Radio Frequency Electromagnetic Fields, 3 kHz to 300 GHz	
4	KDB 447498 D01 v06	General RF Exposure Guidance	
5	KDB 865664 D01 v01r04	SAR Measurement 100 MHz to 6 GHz	
6	KDB 865664 D02 v01r02	RF Exposure Reporting	
7	KDB 248227 D01 v02r02	SAR Guidance for IEEE 802.11 (Wi-Fi) Transmitter	
8	KDB 648474 D04 v01r03	SAR Evaluation Considerations for Wireless Handsets	

## 2.2. Environment Condition

Ambient Temperature	20.5°C~24.0°C
Temperature of Simulant	20.0°C~23.5°C
Relative Humidity	38%RH~55%RH

## 2.3. RF Exposure Limits

Human Exposure	Basic restrictions for electric, magnetic and electromagnetic fields. (Unit in mW/g or W/kg)
Spatial Peak SAR <sup>1</sup> (Head and Body)	1.60
Spatial Average SAR <sup>2</sup> (Whole Body)	0.08
Spatial Peak SAR <sup>3</sup> (Arms and Legs)	4.00

Notes:

1. The Spatial Peak value of the SAR averaged over any 1gram of tissue(defined as a tissue volume in the shape of a cube) and over the appropriate averaging time.

2. The Spatial Average value of the SAR averaged over the whole body.

3. The Spatial Peak value of the SAR averaged over any 1 gram of tissue (defined as a tissue volume in the shape of a cube) and over appropriate averaging time.



## 2.4. Test Result Summary

## Worst Case SAR Spot Check List

Highest Reported SAR	Reported SAR-1g (W/kg)	Original SAR-1g (W/kg)	Deviation (W/kg)
Head (Wi-Fi 5.8GHz)	0.45	0.455	-0.005
Body (Wi-Fi 2.4GHz)	0.16	0.189	-0.029
Extremity (Wi-Fi 2.4GHz)	0.60	0.629	-0.029

Note 1: Original worst case SAR-1g level come from report no. BL-EC1850176-701 (FCC ID: HD5-EDA510).

Note 2: The EUT has replaced the NFC chip and others are same as before, we select the worst case mode from original report and do spot check testing.



## 3. Specific Absorption Rate (SAR)

## 3.1. Introduction

SAR is related to the rate at which energy is absorbed per unit mass in an object exposed to a radio field. The SAR distribution in a biological body is complicated and is usually carried out by experimental techniques or numerical modeling. The standard recommends limits for two tiers of groups, occupational/controlled and general population/uncontrolled, based on a person's awareness and ability to exercise control over his or her exposure. In general, occupational/controlled exposure limits are higher than the limits for general population/uncontrolled.

## 3.2. Definition

The SAR in the tissue-equivalent liquid can be determined by the rate of temperature increaseor by E-field measurements, according to Formulas (1) or (2):

$$SAR = \frac{\sigma E^2}{\rho}$$
(1)

$$SAR = c_{\rm h} \frac{{\rm d}T}{{\rm d}t} \Big|_{t=0}$$
<sup>(2)</sup>

where

SAR is the specific absorption rate in W/kg;

E is the rms value of the electric field strength in the tissue medium in V/m;

 $\sigma$  is the electrical conductivity of the tissue medium in S/m;

 $\rho$  is the mass density of the tissue medium in kg/m<sup>3</sup>;

ch is the specific heat capacity of the tissue medium in J/(kg K);



is the initial time derivative of temperature in the tissue medium in K/s.




## 4. DASY6 Measurement System

## 4.1. Introduction

DASY6 is the latest generation of the Dosimetric Assessment System optimized for specific absorption rate (SAR) measurements, SAR compliance. DASY6 builds on the power of our industry-leading dosimetric and near-field evaluation system, DASY52. Running on a significantly more robust platform and a more powerful measurement server, DASY6 offers much faster scanning with no sacrifice of measurement precision. All hardware and software are fully compatible with DASY52. The new system seamlessly integrates two software solutions, the novel cDASY V6.6- optimized for SAR compliance testing to significantly reduce SAR assessment costs - and the widely used DASY V5.2 for generalized near-field evaluations with maximized flexibility.

## 4.2. DASY6 Measurement System Diagram

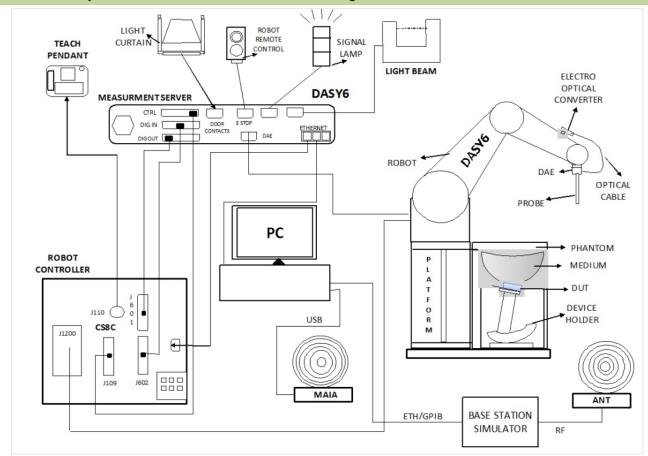

The DASY6 system in cDASY6/DASY5 V5.2 SAR Configuration is shown below:

The System consist of the following components:

DASY6 Measurement Server, Data Acquisition Electronics (DAE), Probes, Light-Beam Unit, Phantoms, Media, Device Holder for SAM-Twin Phantom, Laptop Extension Kit to Mounting Device, Robot System Platform & Pedestal, Verification of the Parameters with the Dielectric Assessment Kit (DAK), Modulation and Interference Analyzer (MAIA), Omni-Directional Ultra-Wideband Antenna (ANT), cDASY6 software, DASY5 NEO software and SEMCAD data evaluation software.





## 4.3. System Components Details

### DASY6 Platforms MP6E-TX60L

MP6E-TX60L platform is a compact cost-effective platform based on TX60L. It consists of:

- a stable non-metalic platform for the TX60L robot
- a frame for two standard-size phantoms (1.0 × 0.5 m)
- a frame for one half-size phantom (0.5 × 0.5 m)

It includes two easily moveable trolleys for the phone and tablet/computer positioner and two platforms for positioning dipoles and other antennas.



Material The beams consist of a composite of wood and epoxy (permittivity of 3.3 and loss tangent of <0.07)

Size The footprint of the platform is 1590 mm × 1060 mm.

### Robots -TX60L

The MRTDASY6 system uses the high-precision industrial robots TX60L from StaubliSA (France). The TX robot family - the successor of the well-known RX robot family - continues tooffer the features important for DASY6 applications:

- High precision (repeatability 0.02mm)
- High reliability (industrial design)
- Low maintenance costs (virtually maintenance-free as all gears are direct drive, no belt drives)
- Jerk-free straight movements (brushless synchron motors, no stepper motors)

 Low extremely low frequency (ELF) interference (motor control fields are shielded by the closedmetallic construction)

The robots are controlled by the Staubli CS8c robot controllers. All information regarding the use andmaintenance of the robot arm and the robot controller is provided on CDs delivered with the robot.Paper manuals are available directly from Staubli upon request.







## DASY6 Measurement Server

The DASY6 measurement server is based on a PC/104 CPU board with a 400MHz intel ULVCeleron, 128MB chip-disk and 128MB RAM. The necessary circuits for communication with the DAE4 electronics box, as well as the 16-bit AD converter system for optical detection and digital I/Ointerface are contained on the DASY6 I/O board,which is directly connected to the PC/104 bus of theCPU board. The measurement server performs all real-time data evaluations of field measurements and surface detection,controls robot movements, and handles safety operations.



### Data Acquisition Electronics (DAE)

The data acquisition electronics (DAE4) consist of a highly sensitive electrometer-grade preamplifier with auto-zeroing, a channel and gain-switching multiplexer, a fast 16-bit AD-converter, and acommand decoder with a control logic unit. Transmission to the measurement server isaccomplished through an optical downlink for data and status information, as well as an optical uplink for commands and the clock.





#### Probes

## E-Field Probe(EX3DV4)

The SAR measurement is conducted with the dosimetric probe manufactured by SPEAG. The probe isspecially designed and calibrated for use in liquid with high permittivity. The dosimetric probe hasspecial calibration in liquid at different frequency.SPEAG conducts the probe calibration in compliance with international and national standards (e.g.IEEE 1528, EN 62209-1, IEC 62209, etc.) under ISO 17025. Construction: Symmetric design with triangular coreBuilt-in shielding against static chargesPEEK enclosure material (resistant to organic solvents, e.g., DGBE)

Frequency: 4 MHz ~ 10 GHz Linearity:

Linearity: ±0.2 dB (30 MHz ~ 10 GHz)

Directivity:

±0.1 dB in TSL (rotation around probe axis)

±0.3 dB in TSL (rotation normal to probe axis)

Dynamic Range: 10  $\mu$ W/g to 100 mW/g; Linearity: ± 0.2 dB (noise: typically < 1  $\mu$ W/g)

Dimensions:

Overall length: 337 mm (Tip: 20 mm)

Tip diameter: 2.5 mm (Body: 12 mm)

Typical distance from probe tip to dipole centers: 1 mm

Applications:

High precision dosimetric measurements in any exposure scenario (e.g., very strong gradient fields); the only probe that enables compliance testing for frequencies up to 6 GHz with precision of better than 30%.

S/N:7524	

MSTV1 (Mother Scan Teaching V1) Electronics & TP6V2 (Teaching Probe 6V2) Probe

MSTV1 (Mother Scan Teaching V1) electronics togetherwith the TP6V2 (Teaching Probe 6V2) probe is used for mother scan of DASY6 system. This probe uses a 3DRenishaw LP2 sensor which ensures accurate detection of any shape and a measurement repeatability of8 µm.





### Light-Beam Unit

The light beam switch allows automatic "tooling" of the probe. During the process, the actual position of the probe tip with respect to the robot arm, as well as the probe length and the horizontal probeoffset, are measured. The software then corrects all movements within the measurement jobs, such that the robot coordinates are valid for the probe tip.



The repeatability of this process is better than0.1 mm. If a position has been taught with an alignedprobe, the same position will be reached with anotheraligned probe within 0.1 mm, even if the otherprobe has different dimensions. During probe rotations, the probe tip will keep its actual position.



#### Phantoms

#### SAM-Twin Phantom

The shell corresponds to the specifications of the Specific Anthropomorphic Mannequin (SAM) phantom defined in IEEE 1528 and IEC 62209-1. It enables the dosimetric evaluation of left and right hand phone usage as well as body-mounted usage at the flat phantom region. A cover prevents evaporation of the liquid. Reference markings on the phantom allow the complete setup of all predefined phantom positions and measurement grids by teaching three points with the robot.

SAM-Twin V5.0 and higher has the same shell geometry and is manufactured from the same material as SAM-Twin V4.0, but with the top structure reinforced.

Material Vinyl ester, fiberglass reinforced (VE-GF)

Liquid Compatibility The phantom shell is compatible with SPEAG tissue simulating liquids (sugar and oil based). Use of other liquids may render the phantom warranty void (see note or consult SPEAG support).

Shell Thickness  $2 \pm 0.2 \text{ mm} (6 \pm 0.2 \text{ mm at ear point})$ 

DimensionsLength: 1000 mm(incl. WoodenWidth:500 mmSupport)Height: adjustable feet

Filling Volume approx. 25 liters

SupportDASY6: standard-size platform slotDASY52 stand-alone: SPEAG standard phantom table







## ELI phantom

The ELI phantom is used for compliance testing of handheld and body-mounted wireless devices in the frequency range of 30 MHz to 6 GHz. ELI is fully compatible with the IEC 62209-2 standard and all known tissue simulating liquids. ELI has been optimized regarding its performance and can be integrated into our standard phantom tables. A cover prevents evaporation of the liquid. Reference markings on the phantom allow installation of the complete setup, including all predefined phantom positions and measurement grids, by teaching three points. The phantom is compatible with all SPEAG dosimetric probes and dipoles.

ELI V5.0 and higher has the same shell geometry and is manufactured from the same material as ELI V4.0, but has reinforced top structure. ELI V6.0, released in August 2014, has the same shell geometry as ELI V4.0 but offers increased longterm stability.

Material Liquid Compatibility	Vinyl ester, fiberglass reinforced (VE-GF) The phantom shell is compatible with SPEAG tissue simulating liquids (sugar and oil based). Use of other liquids may render the phantom warranty void (see note or consult SPEAG support).	
Shell Thickness	$2.0 \pm 0.2$ mm (bottom plate)	
Dimensions	Major axis: 600 mm	
	Minor axis: 400 mm	
Filling Volume	approx. 30 liters	
Support	DASY6: standard-size platform slot	
	DASY52 stand-alone: SPEAG standard	
	phantom table	



## SAM Face Down Phantom

The SAM Face Down Phantom V10 allows assessment of the exposure of the face and in particular the eyes for handheld devices operated in front of the face. e.g., video phones, cameras, organizers, etc. It is manufactured from high precision injection molded polypropylene. The Mounting Device for Transmitters including extensions kit can be used to position the device.

Material	Epoxy based
Liquid Compatibility	The phantom shell is compatible with
	SPEAG tissue simulating liquids (sugar
	and oil based). Use of other liquids may
	render the phantom warranty void (see
	note or consult SPEAG support).
Shell Thickness	$2 \pm 0.2$ mm (6 mm at ear point)
Head Shape	Standard compatible SAM head.





### SAM Head Stand Phantom

The SAM Head Stand Phantom V10 allows assessment of the exposure of the top-head or around-the-head wireless accessories, e.g., head-belts, etc. It is manufactured from high precision injection molded polypropylene. The Mounting Device for Transmitters including extensions kit can be used to position the device.

Epoxy based
The phantom shell is compatible with
SPEAG tissue simulating liquids (sugar
and oil based). Use of other liquids may
render the phantom warranty void (see
note or consult SPEAG support).
$2 \pm 0.2$ mm (6 mm at ear point)
Standard compatible SAM head.







#### Wrist Phantom

The Wrist Phantom V10 is shape-compatible with the CTIA approved OTA GFPC-V1 and optimized for SAR evaluation of watches and other wireless hand accessories.

Material	Epoxy based
Liquid Compatibility	The phantom shell is compatible
	with SPEAG tissue simulating
	liquids (sugar and oil based). Use
	of other liquids may render the
	phantom warranty void (see note
	or consult SPEAG support).
Shell Thickness	Shell Thickness
Wrist Shape	Design compatible with CTIA
	forearm.





## Device Holder for SAM-Twin Phantom

The SAR in the phantom is approximately inversely proportional to the square of the distance between the source and the liquid surface. For a source at 5mm distance, a positioning uncertainty of  $\pm 0.5$ mm would produce uncertainty in the SAR of  $\pm 20\%$ . Accurate device positioning is therefore crucial for accurate and repeatable measurements. The positions at which the devices must be measured are definedby the standards.

## MD4HHTV5 - Mounting Device for Hand-Held Transmitters

In combination with the Twin SAM V5.0/V5.0c or ELI phantoms, the Mounting Device for Hand-Held Transmitters enables rotation of the mounted transmitter device to specified spherical coordinates. At the heads, the rotation axis is at the ear opening. Transmitter devices can be easily and accurately positioned according to IEC 62209-1, IEEE 1528, FCC, or other specifications. The device holder can be locked for positioning at different phantom sections (left head, right head, flat).



Material: Polyoxymethylene (POM)

# MDA4WTV5 - Mounting Device Adaptor for Ultra Wide

## Transmitters

An upgrade kit to Mounting Device to enable easy mounting of wider devices like big smart-phones, e-books, small tablets, etc. It holds devices with width up to 140 mm.

Material: Polyoxymethylene (POM)

### MDA4SPV6 - Mounting Device Adaptor for Smart Phones

The solid low-density MDA4SPV6 adaptor assuring no impact on the DUT radiation performance and is conform with any DUT design and shape.

Material: ROHACELL





#### Report No.:2111RSU037-U3

## MD4LAPV5 - Mounting Device for Laptops and other Body-Worn Transmitters

In combination with the Twin SAM V5.0/V5.0c or ELI phantoms, the Mounting Device (Body-Worn) enables testing of transmitter devices according to IEC 62209-2 specifications. The device holder can be locked for positioning at a flat phantom section.

Material: Polyoxymethylene (POM), PET-G, Foam

## MDA4LAP - Mounting Device Adaptor for Laptops

A simple but effective and easy-to-use extension for the Mounting Device; facilitates testing of larger devices (e.g., laptops, cameras, etc.) according to IEC 62209-2; lightweight and fits easily on the upper part of the Mounting Device in place of the phone positioner. The extension is fully compatible with the Twin SAM as well as ELI and other Flat Phantoms.

Material: Polyoxymethylene (POM), PET-G, Foam

### Modulation and Interference Analyzer(MAIA)

MAIA is a hardware interface used to evaluate the modulation and audio interference characteristics of RF signals in the frequency range 698 - 6000 MHz. DASY6 evaluates the time-domain and frequencydomainproperties of the uplink signal transmitted by the DUT during SAR measurement with MAIA.MAIA uses USB powered active electronics to identify the modulation of the DUT. It can be operatedover the air interface using the built-inultra-broadband planar log spiral antenna (698 - 6000 MHz) orin conducted mode using the coaxial SMA 50 Ohm connector (300 - 6000 MHz).

To prevent damage in conducted mode due to high peak power, an external RF attenuator may bemounted. The LED on the MAIA hardware also indicates whether it is connected.











## DAK-3.5 (200MHz - 20GHz)

This precision dielectric measurement system is designed to cover the 200MHz – 20GHz frequency range with a single open-ended coaxial dielectric probe. The system uses advanced algorithms and novel hardware to measure the dielectric properties of liquids, solids, and semi-solids over a broad range of parameters. The measurement method is fast and non-destructive to the material under test.



Evaluation of reference liquids over a broad frequency range for specific absorption rate (SAR) measurements, in accordance with IEC 62209, IEEE 1528, and several federal regulations.

Evaluating Software: DAK software version 2.0

MRT simulating liquid		
Product	Test Frequency (MHz)	Main Ingredients
HSL450	400 – 500	Water, Sucrose, NaCl
MSL450	400 – 500	Water, Sucrose, NaCl

Speag Broad-Band simulating liquid				
Product	Test Frequency (MHz)	Main Ingredients		
HBBL600-10000V6	600 - 10000	Water, Oil		
MBBL600-6000V6	600 - 6000	Water, Oil		




## 5. The SAR Measurement Procedure

## 5.1. Measurement Process Diagram

## **General Procedure**

## For IEEE1528-2013 Head SAR

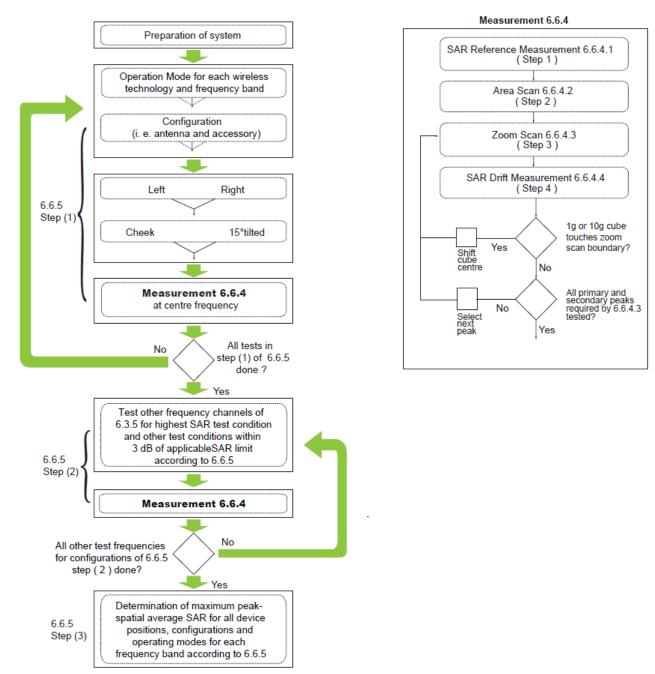

## For Body SAR


SAR scan procedures described insection 2.7of KDB 865664 D01 v01r04 should be applied to body SAR test.




## 5.2. Test Position Definition

## Head SAR Test Position

Define two imaginary lines on the handset—the vertical centerline and the horizontal line. Thevertical centerline passes through two points on the front side of the handset—the midpoint of thewidth wt of the handset at the level of the acoustic output [point A in Fixed case and Clamshell case],and the midpoint of the width w<sub>b</sub> at the bottom of the handset (point B). The horizontal line isperpendicular to the vertical centerline and passes through the center of the acoustic output [seeFixed case]. The horizontal line is also tangential to the face of the handset at point A. The two linesintersect at point A. Note that for many handsets, point A coincides with the center of the acousticoutput; however, the acoustic output may be located elsewhere on the horizontal line. Also note thatthe vertical centerline is not necessarily parallel to the front face of the handset [see Clamshell case],especially for clamshell handsets, handsets with flip covers, and other irregularly-shaped handsets, the vertical centerline passes through point A but not the tip edge of the phone.

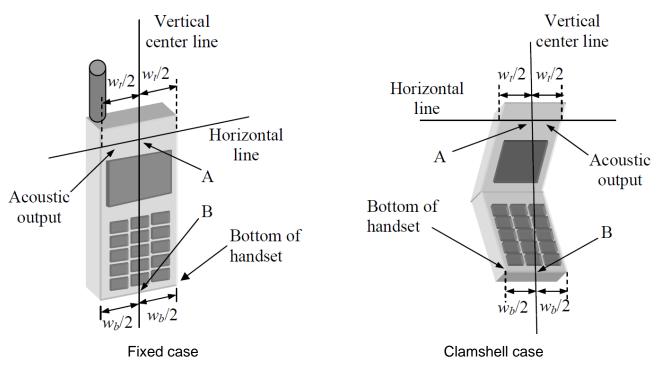




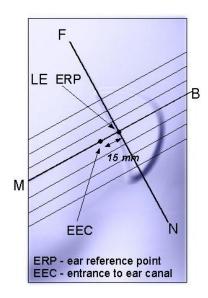

## Key

- B Direction of B-M line back endpoint
- F Direction of N-F line front endpoint
- N Direction of N-F line neck endpoint
- M Mouth reference point
- LE Left ear reference point (ERP)

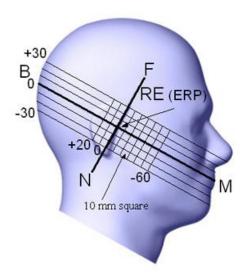


## Key

- B Line B-M back endpoint
- M Line B-M front endpoint
- N Line N-F neck endpoint
- F Line N-F front endpoint
- RE Right ear reference point (ERP)

## **Cheek Position**

The cheek position has the following characteristics, based on the geometrical lines described above:

- The N-F line (see above) is in the plane defined by the handset vertical centerlineand horizontal line
- Handset touches the pinna
- The handset vertical centerline is aligned with the Reference Plane.

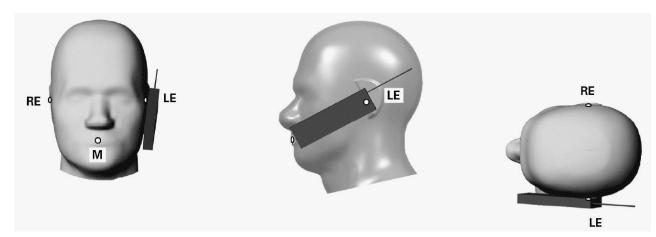

## Key

- M Mouth reference point
- LE Left ear reference point
- RE Right ear reference point



### Tilt Position


The tilt position is established as follows:

-Repeat the steps to place the device in the cheek position.

-While maintaining the orientation of the handset, move the handset away from the pinna along the line passing through RE and LE far enough to allow a rotation of the handset away from the cheek by 15°.

-Rotate the handset around the horizontal line by 15°.

-While maintaining the orientation of the handset, move the handset towards the phantom on the line passing through RE and LE until any part of the handset touches the ear. The tilt position is obtainedwhen the contact point is on the pinna. If contact occurs at any location other than thepinna, e.g., the antenna at the back of the phantom head, the angle of the handset shall be reduced. In this case, the tilt position is obtained if any point on the handset is in contact with the pinna and asecond point on the handset is in contact with the phantom, e.g., the antenna with the back of the phantom, e.g., the antenna with the back of thehead.

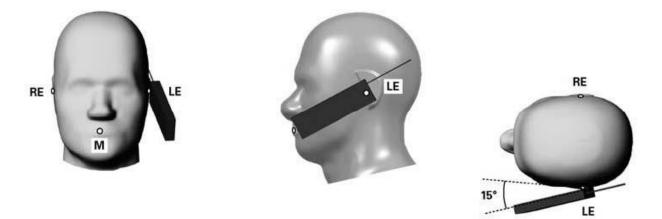

### Key

- M Mouth reference point
- LE Left ear reference point
- RE Right ear reference point

Body SAR Test Position

For body-worn accessory, hotspot mode and other exposure conditions to human body should be conducted pursuant to the test position requirements of SAR KDBs for certain product.



## 5.3. TestProcedure

### Step 1 Setup a Connection

First, engineer should record the conducted power before the test. Then establish a call in handset at the maximum power level with a base station simulator via air interface, or make the EUT establish transmission by itself in testing band. Place the EUT to certain test position.

## Step 2 Power Reference Measurements

To measure the local E-field value at a fixed location which value will be taken as a referencevalue for calculating a possible power drift.

### Step 3 Area Scan

The Area Scan is used as a fast scan in two dimensions to find the area of high field values, before doing a finemeasurement around the hot spot. The sophisticated interpolation routines implemented in DASY software can find the maximum locations even in relatively coarse grids. When an Area Scan has measured all reachable points, itcomputes the field maximal found in the scanned area, within a range of the global maximum. The range (in dB) isspecified in the standards for compliance testing. For example, a 2 dB range is required in IEEE Standard 1528and IEC 62209 standards, whereby 3 dB is a requirement when compliance is assessed in accordance with theARIB standard (Japan). If only one Zoom Scan follows the Area Scan, then only the absolute maximum will betaken as reference. For cases where multiple maximums are detected, the number of Zoom Scans has to beincreased accordingly.

	≤ 3 GHz	> 3 GHz		
Maximum distance from closest measurement				
point(geometric center of probe sensors) to	5 mm±1 mm	½·δ·ln(2) mm ±0.5 mm		
phantom surface				
Maximum probe angle from probe axis to				
phantomsurface normal at the measurement	30°±1°	20°±1°		
location				
	≤ 2 GHz: ≤ 15 mm	3 - 4 GHz: ≤ 12 mm		
	2 - 3 GHz: ≤ 12 mm	4-6 GHz: ≤ 10 mm		
Maximum area coop anotial recolution:	When the x or y dimension of the test device, in the			
Maximum area scan spatial resolution:	measurement plane orientation, is smaller than the			
$\Delta \mathbf{x}_{Area}, \Delta \mathbf{y}_{Area}$	above, the measurement resolution must be $\leq$ the			
	corresponding x or y dimension of the test device withat			
	least one measurement point on the test device.			
Note: $\delta$ is the penetration depth of a plane-wave at normal incidence to the tissue medium; see IEEE Std				

## Area Scan Parameters extracted from KDB 865664 D01v01r04

Note:  $\delta$  is the penetration depth of a plane-wave at normal incidence to the tissue medium; see IEEE Std 1528-2013 for details.



## Step 4 Zoom Scan

Zoom Scans are used to assess the peak spatial SAR values within a cubic averaging volume containing 1 g and 10 g of simulated tissue. The Zoom Scan measures points (refer to table below) within a cube whose base faces are centered on the maxima found in a preceding area scan job within the same procedure. When the measurement is done, the Zoom Scan evaluates the averaged SAR for 1 g and 10 g and displays these values next to the job's label.

Zoom ocan raiameters extracted nom RDD 000004 Dor Vorrot						
			≤ 3 GHz	> 3 GHz		
Maximum zoom scan spatial resolution: $\Delta x_{\text{Zoom}}$ ,			≤ 2 GHz: ≤ 8 mm	3 - 4 GHz: ≤ 5 mm*		
$\Delta y_{Zoom}$			2 - 3 GHz: ≤ 5 mm* 4 - 6 GHz: ≤ 4 mm*			
				3 - 4 GHz: ≤ 4 mm		
	uniform g	grid: Δz <sub>zoom</sub> (n)	≤ 5 mm	4 - 5 GHz: ≤ 3 mm		
Maximum zoom				5 - 6 GHz: ≤ 2 mm		
scan spatial		$\Delta z_{Zoom}(1)$ : between		3 - 4 GHz: ≤ 3 mm		
resolution, normal		1 <sup>st</sup> two points closest	≤ 4 mm	4 - 5 GHz: ≤ 2.5 mm		
to phantom	graded	to phantom surface		5 - 6 GHz: ≤ 2 mm		
surface	grid	$\Delta z_{Zoom}(n>1)$ :				
		between subsequent	≤ 1.5·Δz	<sub>zoom</sub> (n-1) mm		
		points				
Minimum zoom				3-4 GHz: ≥ 28 mm		
Minimum zoom		x, y, z	≥ 30 mm	4-5 GHz: ≥ 25 mm		
scan volume				5-6 GHz: ≥ 22 mm		
Note: * When zoom scan is required and the reported SAR from the area scan based 1-g SAR estimation						
procedures ofKDB Publication 447498 is ≤ 1.4 W/kg, ≤ 8 mm, ≤ 7 mm and ≤ 5 mm zoom scan resolution						
may be applied, respectively, for 2 GHz to 3 GHz, 3 GHz to 4 GHz and 4 GHz to 6 GHz.						

## Zoom Scan Parameters extracted from KDB 865664 D01 v01r04

## Step 5 Power Drift Measurements

Repetition of the E-field measurement at the fixed location mentioned in Step 1 to make sure thetwo results differ by less than  $\pm 0.2$  dB.

## Step6 Test Data


After the test,SAR test data should be exported by SEMCAD.



# 6. System Verificaiton

## 6.1. Tissue Check

■ Refer to KDB 865664 D01 v01r04, the depth of tissue-equivalent liquid in a phantom must be ≥ 15.0 cm with ≤ ± 0.5 cm variation for SAR measurements ≤ 3 GHz and ≥ 10.0 cm with ≤ ± 0.5 cm variation for measurements > 3 GHz.

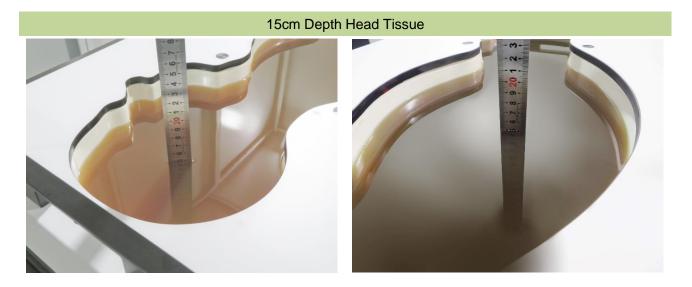



#### Dielectric properties of the head tissue-equivalent liquid

Frequency	Relative Permittivity	Conductivity (σ)		
MHz	٤r	S/m		
300	45.3	0.87		
450	43.5	0.87		
750	41.9	0.89		
835	41.5	0.90		
900	41.5	0.97		
1 450	40.5	1.20		
1 500	40.4	1.23		
1 640	40.2	1.31		
1 750	40.1	1.37		
1 800	40.0	1.40		
1 900	40.0	1.40		
2 000	40.0	1.40		
2 100	39.8	1.49		
2 300	39.5	1.67		
2 450	39.2	1.80		
2 600	39.0	1.96		
3 000	38.5	2.40		
3 500	37.9	2.91		
4 000	37.4	3.43		
4 500	36.8	3.94		
5 000	36.2	4.45		
5 200	36.0	4.66		
5 400	35.8	4.86		
5 600	35.5	5.07		
5 800	35.3	5.27		
6 000	35.1	5.48		

original data provided by Drossos et al. [33] or the extension to 5800MHz are provided (i.e. the values shown in italics). These values were linearly interpolated between the values in this table that are immediately above and below these values, except the values at 6000MHz that were linearlyextrapolated from the values at 3000MHz and 5800MHz.



## Tissue Calibration Result

The dielectric parameters of the liquids were verified prior to the SAR evaluation using DASY6Dielectric Assessment Kit and keysight PNA-L Network AnalyzerN5234B.

Tissue parameter for Head								
Freq.	Derm	Cond	Target	Target	Deviation	Deviation	Tissue	Toot Data
(MHz)	Peim.	Perm. Cond.	Perm.	Cond.	Perm.%	Cond.%	Temperature	Test Date
2450	38.08	1.86	39.20	1.80	-2.86	3.33	22.5°C	2022.01.06
5750	34.24	5.14	35.36	5.22	-3.17	-1.53	22.5°C	2022.01.06


Note: The ±5% deviation of tissue parameter is recommended.



## 6.2. System Check

## Purpose

The purpose of the system check is to verify that the system operates within its specifications the device test frequencies. System check verifies the measurement repeatability of a SARsystem before compliance testing and is not a validation of all system specifications. The latter is not required for testing a device but is mandatory before the system is deployed.

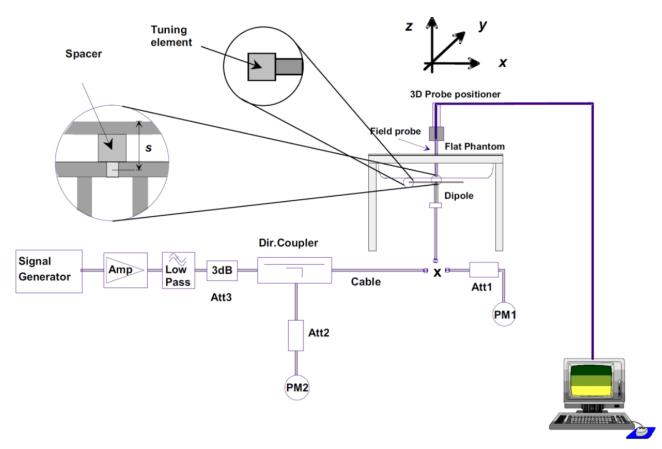

System Performance Check Setup Diagram

## System Check Procedure

The system check procedure is a complete 1g and 10g peak spatial-average SAR measurement using a source having a previously determined system check target value. The measured 1g and 10g SAR are normalized to the target input power of the specific source and compared to their respective target values. A description of the different measurement tasks to be performed is given below, together with the information that can be deduced from their results:

a. The Power Reference Measurement and Power Drift Measurement are located at the beginning and end of the batch process. They measure the field drift at one single point in the liquid over the complete procedure. The indicated drift is mainly the variation of the amplifier output power. If it too high (above  $\pm 0.1$  dB), the system check should be repeated; some amplifiers have very highdrift during warm-up. A stable amplifier gives drift results in the DASY6 system below  $\pm 0.02$  dB.



b. The second step is optional. For probes with integrated optical surface detection sensor this step must be conducted, otherwise the step can be skipped. The Surface Check tests the optical surface detection system of the DASY6 system by repeatedly detecting the surface with the optical and mechanical surface detector and comparing the results. The output gives the detecting heights of both systems, the difference between the two systems and the standard deviation of the detection repeatability. Air bubbles or refraction in the liquid due to separation of the sugar-water mixture gives poor repeatability (above  $\pm 0.1$  mm). In that case it is better to abort the system check and stir the liquid.

c. The Area Scan measures the SAR above the dipole on a plane parallel to the surface. It is used to locate the approximate location of the peak SAR. The proposed scan uses large grid spacing for faster measurement; due to the symmetric field, the peak detection is reliable. If a finer graphic is desired, the grid spacing can be reduced. Grid spacing and orientation have no influence on the SAR result.

d. The Zoom Scan measures the field in a volume around the peak SAR value assessed in the previous Area Scan.

If the system check gives reasonable results, the SAR peak, 1 g and 10 g spatial average SAR values normalized to 1 W dipole input power give reference data for comparisons. The next sections analyze the expected uncertainties of these values, as well as additional checks for further information or troubleshooting.

System	check for	Head						
Freq. (MHz)	1g SAR (W/kg)	10g SAR (W/kg)	Target 1g SAR (W/kg)	Target 10g SAR (W/kg)	Deviation 1g SAR (%)	Deviation 10g SAR (%)	Tissue Temp.	Test Date
2450	52.40	24.60	53.40	24.20	-1.87	1.65	22.5°C	2022.01.06
5750	79.00	22.40	79.10	22.50	-0.13	-0.44	22.5°C	2022.01.06

## Result of System Performance Check

Note:

1. The  $\pm 10\%$  deviation of system check result is required.

2. System check value listed above has been harmonized to 1W.



## 7. SAR Test Results

## Head

U-NII-3												
Test		Freq.		Dist.	Cond.	Max. Tune-up	Scaling	Duty	Duty	Meas.	Reported	SAR
Mode	CH.	(MHz)	Test Position		Power	Power (dBm)	Factor	Cycle	Cycle	SAR-1g	SAR-1g	Plot
Mode				(mm)	(dBm)		Factor	(%)	Factor	(W/kg)	(W/kg)	#
а	149	5745	Right Cheek	0	14.27	15.0	1.18	86.69	1.15	0.33	0.45	1

## Body

DTS												
Test Mode	СН.	Freq. (MHz)	Test Position	Dist. (mm)	Cond. Power (dBm)	Max. Tune-up Power (dBm)	Scaling Factor	Duty Cycle (%)	Duty Cycle Factor	Meas. SAR-1g (W/kg)	Reported SAR-1g (W/kg)	SAR Plot #
b	11	2462	Back	10	15.86	17.0	1.30	97.51	1.03	0.12	0.16	2

## Extremity

DTS												
Test		Freg.		Diat	Cond.	Max Tuna un	Secling	Duty	Duty	Meas.	Reported	SAR
Mode	CH.		Test Position	Dist.	Power	Max. Tune-up	Scaling	Cycle	Cycle	SAR-1g	SAR-1g	Plot
wode		(MHz)		(mm)	(dBm)	Power (dBm)	Factor	(%)	Factor	(W/kg)	(W/kg)	#
b	11	2462	Left	0	15.86	17.0	1.30	97.51	1.03	0.45	0.60	3



# 8. Test Equipment Used

SR3 - SAR					
Instrument	Manufacturer	Type No.	Asset No.	Cali. Interval	Cali. Due Date
Stäubli Robot TX60L	Stäubli	TX60L	MRTSUE06412	only once	only once
Robot Controller	Stäubli	CS8C	MRTSUE06412	only once	only once
SAM Twin Phantom	Speag	QD 000 P41 AA	MRTSUE06419	N/A	N/A
DAK	Speag	DAK-3.5	MRTSUE06435	N/A	N/A
Dipole Validation Kits	Speag	D2450V2	MRTSUE06430	3 year	2024/05/18
DAE4	Speag	SD 000 D04 BN	MRTSUE06414	1 year	2022/05/16
E-Field Probe	Speag	EX3DV4	MRTSUE06438	1 year	2022/06/23
Network Analyzer	Keysight	N5234B	MRTSUE06454	1 year	2022/06/24
Directional Coupler	Agilent	778D	MRTSUE06083	1 year	2022/03/24
Directional Coupler	Agilent	87301D OPT 292	MRTSUE06082	1 year	2022/03/08
Signal Generator	Keysight	N5183B	MRTSUE06197	1 year	2022/04/14
Power Sensor	Keysight	U2021XA	MRTSUE06447	1 year	2022/06/08
Thermohygrometer	Testo	622	MRTSUE06361	1 year	2022/05/18

Software	Version	Function
DASY NEO	52.10.4.1527	SAR Test Software



# 9. Measurement Uncertainty

\_\_\_\_

DASY5 Uncertainty Budge	et, according	g to IEEE	1528 (0	).3 - 3 G	Hz ranç	ge)		
Error Description	Uncert.	Prob.	Div.	(ci)	(ci)	Std. Unc.	Std. Unc.	(vi)
Error Description	value	Dist.	Div.	1g	10g	(1g)	(10g)	veff
Measurement System								
Probe Calibration	±6.0 %	N	1	1	1	±6.0 %	±6.0 %	∞
Axial Isotropy	±4.7 %	R	₂√3,	0.7	0.7	±1.9 %	±1.9 %	∞
Hemispherical Isotropy	±9.6 %	R	:√3:	0.7	0.7	±3.9 %	±3.9 %	∞
Boundary Effects	±1.0 %	R	:√3:	1	1	±0.6 %	±0.6 %	∞
Linearity	±4.7 %	R	:√3	1	1	±2.7 %	±2.7 %	∞
System Detection Limits	±1.0 %	R	:√3	1	1	±0.6 %	±0.6 %	∞
Modulation Response	±2.4 %	R	:√3	1	1	±1.4 %	±1.4 %	∞
Readout Electronics	±0.3 %	N	1	1	1	±0.3 %	±0.3 %	∞
Response Time	±0.8 %	R	:√3	1	1	±0.5 %	±0.5 %	∞
Integration Time	±2.6 %	R	:√3	1	1	±1.5 %	±1.5 %	∞
RF Ambient Noise	±3.0 %	R	.√3,	1	1	±1.7 %	±1.7 %	∞
RF Ambient Reflections	±3.0 %	R	.√3,	1	1	±1.7 %	±1.7 %	∞
Probe Positioner	±0.02 %	R	.√3,	1	1	±0.0 %	±0.0 %	∞
Probe Positioning	±0.4 %	R	.√3,	1	1	±0.2 %	±0.2 %	∞
Max. SAR Eval.	±2.0 %	R	.√3.	1	1	±1.2 %	±1.2 %	∞
Test Sample Related		•		1	1		1	
Device Positioning	±2.9%	N	1	1	1	±2.9 %	±2.9 %	145
Device Holder	±3.6%	N	1	1	1	±3.6 %	±3.6 %	5
Power Drift	±5.0%	R	:√3	1	1	±2.9 %	±2.9 %	∞
Power Scaling	±0%	R	.√3,	1	1	±0.0 %	±0.0 %	∞
Phantom and Setup								•
Phantom Uncertainty	±6.1%	R	:√3	1	1	±3.5 %	±3.5 %	∞
SAR correction	±1.9%	N	1	1	0.84	±1.9 %	±1.6 %	∞
Liquid Cond. (mea.) <sup>DAK</sup>	±2.5%	N	1	0.78	0.71	±2.0 %	±1.8 %	∞
Liquid Perm. (mea.) <sup>DAK</sup>	±2.5%	N	1	0.23	0.26	±0.6 %	±0.7 %	∞
Temp. unc. –Conductivity	±3.4%	R	.√3.	0.78	0.71	±1.5 %	±1.4 %	∞
Temp. unc. – Permittivity	±0.4%	R	:√3:	0.23	0.26	±0.1 %	±0.1 %	×
Combined Std. Uncertainty						±11.3%	±11.2%	459
Expanded STD Uncertainty	,					±22.6%	±22.4%	



	Uncert.	Prob.		(ci)	(ci)	Std. Unc.	Std. Unc.	(vi)
Error Description	value	Dist.	Div.	1g	10g	(10g)	(10g)	veff
Measurement System								
Probe Calibration	±6.55 %	N	1	1	1	±6.55 %	±6.55 %	∞
Axial Isotropy	±4.7 %	R	.√3.	0.7	0.7	±1.9 %	±1.9 %	∞
Hemispherical Isotropy	±9.6 %	R	:√3	0.7	0.7	±3.9 %	±3.9 %	∞
Boundary Effects	±2.0 %	R	.√3	1	1	±1.2 %	±1.2 %	∞
Linearity	±4.7 %	R	.√3.	1	1	±2.7 %	±2.7 %	∞
System Detection Limits	±1.0 %	R	.√3	1	1	±0.6 %	±0.6 %	∞
Modulation Response	±2.4 %	R	.√3	1	1	±1.4 %	±1.4 %	∞
Readout Electronics	±0.3 %	N	1	1	1	±0.3 %	±0.3 %	∞
Response Time	±0.8 %	R	.√3	1	1	±0.5 %	±0.5 %	∞
Integration Time	±2.6 %	R	.√3.	1	1	±1.5 %	±1.5 %	∞
RF Ambient Noise	±3.0 %	R	.√3	1	1	±1.7 %	±1.7 %	∞
RF Ambient Reflections	±3.0 %	R	.√3	1	1	±1.7 %	±1.7 %	∞
Probe Positioner	±0.04 %	R	.√3	1	1	±0.0 %	±0.0 %	∞
Probe Positioning	±0.8 %	R	.√3	1	1	±0.5 %	±0.5 %	∞
Max. SAR Eval.	±4.0 %	R	.√3.	1	1	±2.3 %	±2.3 %	∞
Test Sample Related								•
Device Positioning	±2.9%	N	1	1	1	±2.9 %	±2.9 %	145
Device Holder	±3.6%	N	1	1	1	±3.6 %	±3.6 %	5
Power Drift	±5.0%	R	.√3	1	1	±2.9 %	±2.9 %	∞
Power Scaling	±0%	R	:√3	1	1	±0.0 %	±0.0 %	∞
Phantom and Setup		·					÷	•
Phantom Uncertainty	±6.6%	R	:√3	1	1	±3.8 %	±3.8 %	∞
SAR correction	±1.9%	N	1	1	0.84	±1.9 %	±1.6 %	∞
Liquid Cond. (mea.) <sup>DAK</sup>	±2.5%	N	1	0.78	0.71	±2.0 %	±1.8 %	∞
Liquid Perm. (mea.) <sup>DAK</sup>	±2.5%	N	1	0.23	0.26	±0.6 %	±0.7 %	∞
Temp. unc. – Conductivity	±3.4%	R	.√3	0.78	0.71	±1.5 %	±1.4 %	∞
Temp. unc. – Permittivity	±0.4%	R	.√3	0.23	0.26	±0.1 %	±0.1 %	∞
Combined Std. Uncertainty	y					±11.9%	±11.8%	569
Expanded STD Uncertainty	y					±23.8%	±23.6%	

## Annex A - System Check Result

Test Date: 01/06/2022

SystemPerformanceCheck-SAM1-D2450HSL DUT: Dipole 2450 MHz D2450V2; Type: D2450V2 Communication System: CW; Frequency: 2450 MHz; Duty Cycle: 1:1 Medium parameters used: f = 2450 MHz;  $\sigma$  = 1.86 S/m;  $\epsilon_r$  = 38.08;  $\rho$  = 1000 kg/m<sup>3</sup> Phantom section: Flat Section DASY5 Configuration:


- Probe: EX3DV4 SN7524; ConvF(7.65, 7.65, 7.65) @ 2450 MHz; Calibrated: 6/24/2021
- Sensor-Surface: 1.4mm (Mechanical Surface Detection)
- Electronics: DAE4 Sn1552; Calibrated: 5/17/2021
- Phantom: Twin-SAM V8.0 (30deg probe tilt); Type: QD 000 P41 AA; Serial: 1967
- Measurement SW: DASY52, Version 52.10 (4); SEMCAD X Version 14.6.14 (7483)

### configuration/d=10mm, Pin=250mW, dist=1.4mm (EX-Probe)/Area Scan (7x9x1): Measurement grid:

dx=12mm, dy=12mm; Maximum value of SAR (measured) = 21.8 W/kg configuration/d=10mm, Pin=250mW, dist=1.4mm (EX-Probe)/Zoom Scan (7x7x7)/Cube 0: Measurement grid: dx=5mm, dy=5mm, dz=5mm; Reference Value = 104.5 V/m; Power Drift = 0.06 dB Peak SAR (extrapolated) = 27.0 W/kg SAR(1 g) = 13.1 W/kg; SAR(10 g) = 6.15 W/kg Smallest distance from peaks to all points 3 dB below = 9 mm

Ratio of SAR at M2 to SAR at M1 = 48.8%

Maximum value of SAR (measured) = 21.8 W/kg

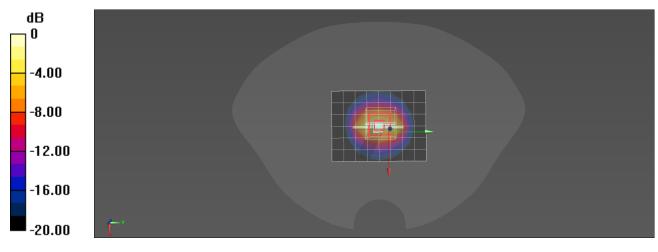

0 dB = 21.8 W/kg = 13.38 dBW/kg



Test Date: 01/06/2022

#### SystemPerformanceCheck-SAM1-D5750HSL

### DUT: Dipole D5GHzV2; Type: D5GHzV2

Communication System: CW; Frequency: 5750 MHz; Duty Cycle: 1:1 Medium parameters used: f = 5750 MHz;  $\sigma$  = 5.14 S/m;  $\epsilon_r$  = 34.24;  $\rho$  = 1000 kg/m<sup>3</sup> Phantom section: Flat Section DASY5 Configuration:

- Probe: EX3DV4 SN7524; ConvF(4.85, 4.85, 4.85) @ 5750 MHz; Calibrated: 6/24/2021
- Sensor-Surface: 1.4mm (Mechanical Surface Detection)
- Electronics: DAE4 Sn1552; Calibrated: 5/17/2021
- Phantom: Twin-SAM V8.0 (20deg probe tilt); Type: QD 000 P41 AA; Serial: 1967
- Measurement SW: DASY52, Version 52.10 (4); SEMCAD X Version 14.6.14 (7483)

Configuration/d=10mm, Pin=100 mW, dist=1.4mm (EX-Probe)/Area Scan (7x9x1): Measurement grid:

dx=10mm, dy=10mm; Maximum value of SAR (measured) = 20.5 W/kg


**Configuration/d=10mm, Pin=100 mW, dist=1.4mm (EX-Probe)/Zoom Scan (8x8x8) (7x7x7)/Cube 0:** Measurement grid: dx=4mm, dy=4mm, dz=1.4mm; Reference Value = 61.01 V/m; Power Drift = -0.02 dB Peak SAR (extrapolated) = 36.2 W/kg

#### SAR(1 g) = 7.9 W/kg; SAR(10 g) = 2.24 W/kg

Smallest distance from peaks to all points 3 dB below = 7.2 mm

Ratio of SAR at M2 to SAR at M1 = 60.6%

Maximum value of SAR (measured) = 21.0 W/kg

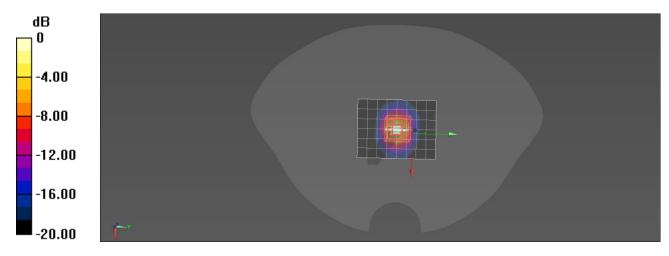

0 dB = 21.0 W/kg = 13.22 dBW/kg



## Annex B - Test Data Plots

Plot 1#

Test Date: 01/06/2022

DUT: Mobile Computer; Type: EDA51-0

## Procedure Name: 802.11a 5745MHz Right Cheek

Communication System: 802.11a; Frequency: 5745 MHz; Duty Cycle: 1:1

Medium parameters used: f = 5745 MHz;  $\sigma = 5.14 \text{ S/m}$ ;  $\varepsilon_r = 34.25$ ;  $\rho = 1000 \text{ kg/m}^3$ ; Tissue Temp (celsius)-22.5°C; Phantom section: Right Section

DASY5 Configuration:

- Probe: EX3DV4 SN7524; ConvF(4.85, 4.85, 4.85) @ 5745 MHz; Calibrated: 6/24/2021
- Sensor-Surface: 1.4mm (Mechanical Surface Detection)
- Electronics: DAE4 Sn1552; Calibrated: 5/17/2021
- Phantom: Twin-SAM V8.0 (20deg probe tilt); Type: QD 000 P41 AA; Serial: 1967
- Measurement SW: DASY52, Version 52.10 (4); SEMCAD X Version 14.6.14 (7483)

Configuration/802.11a 5745MHz Right Cheek/Area Scan (11x20x1): Measurement grid: dx=10mm,

dy=10mm; Maximum value of SAR (measured) = 0.857 W/kg

Configuration/802.11a 5745MHz Right Cheek/Zoom Scan (9x9x7)/Cube 0: Measurement grid: dx=4mm,

dy=4mm, dz=1.4mm; Reference Value = 3.453 V/m; Power Drift = 0.16 dB


Peak SAR (extrapolated) = 1.41 W/kg

## SAR(1 g) = 0.330 W/kg; SAR(10 g) = 0.096 W/kg

Smallest distance from peaks to all points 3 dB below = 6.8 mm

Ratio of SAR at M2 to SAR at M1 = 60.1%

Maximum value of SAR (measured) = 0.827 W/kg

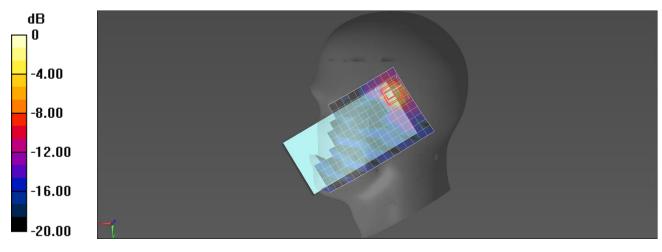

0 dB = 0.827 W/kg = -0.82 dBW/kg



Plot 2#

Test Date: 01/06/2022

### DUT: Mobile Computer; Type: EDA51-0

## Procedure Name: 802.11b 2462MHz Body Back

Communication System: 802.11b; Frequency: 2462 MHz; Duty Cycle: 1:1

Medium parameters used: f = 2462 MHz;  $\sigma$  = 1.86 S/m;  $\epsilon_r$  = 38.06;  $\rho$  = 1000 kg/m<sup>3</sup>; Tissue Temp (celsius)-22.5°C; Phantom section: Flat Section

DASY5 Configuration:

- Probe: EX3DV4 SN7524; ConvF(7.65, 7.65, 7.65) @ 2462 MHz; Calibrated: 6/24/2021
- Sensor-Surface: 1.4mm (Mechanical Surface Detection)
- Electronics: DAE4 Sn1552; Calibrated: 5/17/2021
- Phantom: Twin-SAM V8.0 (30deg probe tilt); Type: QD 000 P41 AA; Serial: 1967
- Measurement SW: DASY52, Version 52.10 (4); SEMCAD X Version 14.6.14 (7483)

Configuration/802.11b 2462MHz Body Back/Area Scan (10x17x1): Measurement grid: dx=12mm, dy=12mm;

Maximum value of SAR (measured) = 0.742 W/kg

Configuration/802.11b 2462MHz Body Back/Zoom Scan (7x7x7)/Cube 0: Measurement grid: dx=5mm,

dy=5mm, dz=5mm; Reference Value = 8.797 V/m; Power Drift = -0.15 dB


Peak SAR (extrapolated) = 0.253 W/kg

## SAR(1 g) = 0.124 W/kg; SAR(10 g) = 0.065 W/kg

Smallest distance from peaks to all points 3 dB below = 13.5 mm

Ratio of SAR at M2 to SAR at M1 = 47.6%

Maximum value of SAR (measured) = 0.198 W/kg

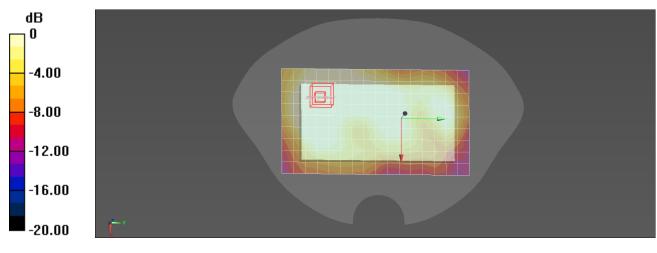

0 dB = 0.198 W/kg = -7.03 dBW/kg



Plot 3#

Test Date: 01/06/2022

### DUT: Mobile Computer; Type: EDA51-0

#### Procedure Name: 802.11b 2462MHz Extremity Left

Communication System: 802.11b; Frequency: 2462 MHz; Duty Cycle: 1:1 Medium parameters used: f = 2462 MHz;  $\sigma$  = 1.86 S/m;  $\epsilon_r$  = 38.06;  $\rho$  = 1000 kg/m<sup>3</sup>; Tissue Temp (celsius)-22.5°C; Phantom section: Flat Section DASY5 Configuration:

- Probe: EX3DV4 SN7524; ConvF(7.65, 7.65, 7.65) @ 2462 MHz; Calibrated: 6/24/2021
- Sensor-Surface: 1.4mm (Mechanical Surface Detection)
- Electronics: DAE4 Sn1552; Calibrated: 5/17/2021
- Phantom: Twin-SAM V8.0 (30deg probe tilt); Type: QD 000 P41 AA; Serial: 1967
- Measurement SW: DASY52, Version 52.10 (4); SEMCAD X Version 14.6.14 (7483)

#### Configuration/802.11b 2462MHz Extremity Left/Area Scan (6x17x1): Measurement grid: dx=12mm,

dy=12mm; Maximum value of SAR (measured) = 1.44 W/kg

Configuration/802.11b 2462MHz Extremity Left/Zoom Scan (7x7x7)/Cube 0: Measurement grid: dx=5mm,

dy=5mm, dz=5mm; Reference Value = 12.47 V/m; Power Drift = 0.17 dB


Peak SAR (extrapolated) = 2.50 W/kg

### SAR(1 g) = 1.08 W/kg; SAR(10 g) = 0.452 W/kg

Smallest distance from peaks to all points 3 dB below = 8 mm

Ratio of SAR at M2 to SAR at M1 = 45%

Maximum value of SAR (measured) = 1.88 W/kg

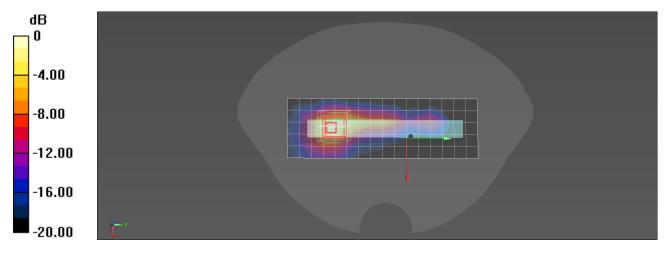

0 dB = 1.88 W/kg = 2.74 dBW/kg



# Annex C - SAR Test Setup Photos

Please refer to document "2111RSU038-UT".



# Annex D - EUT External Photos

Please refer to document "2111RSU038-UE".



# Annex E - Equipment Calibration Report

Please refer to document "Annex E - Equipment Calibration Report.pdf".

The End