




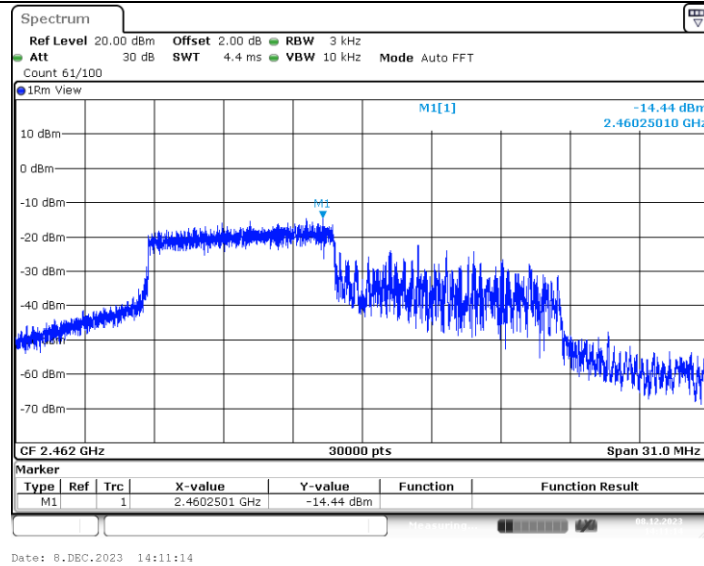


11AX20MIMO_Ant3_2462_106Tone_RU53

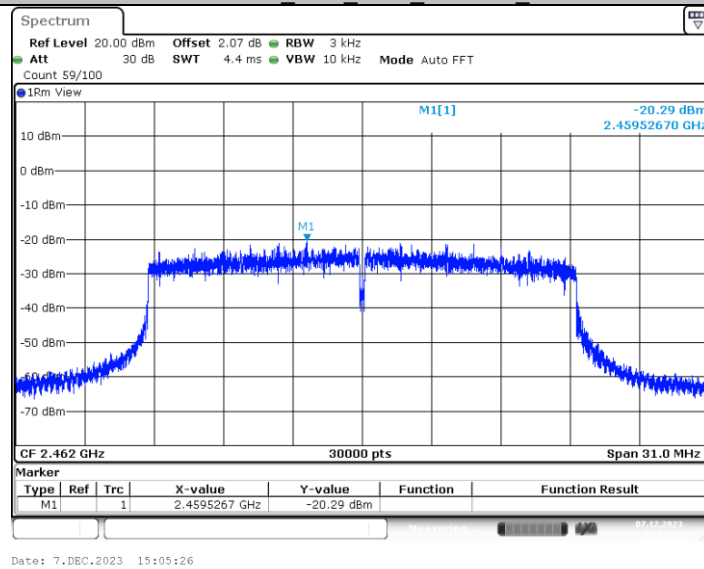


11AX20MIMO_Ant3_2462_242Tone_RU61

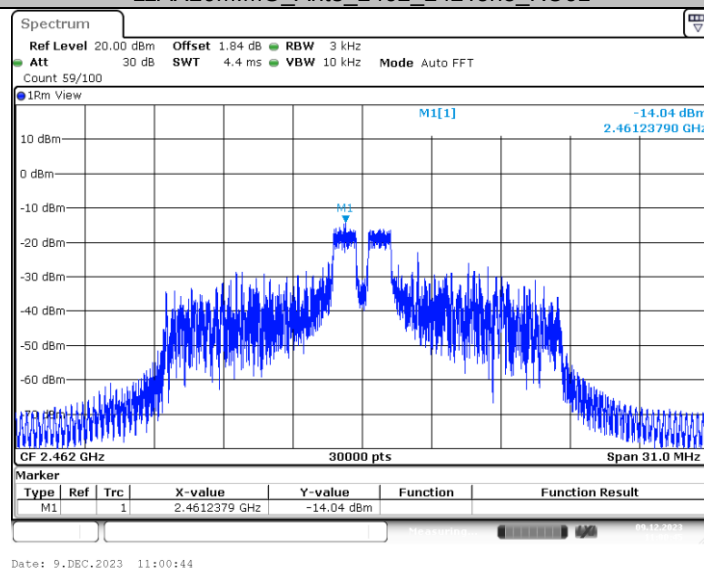


11AX20MIMO_Ant4_2462_26Tone_RU4

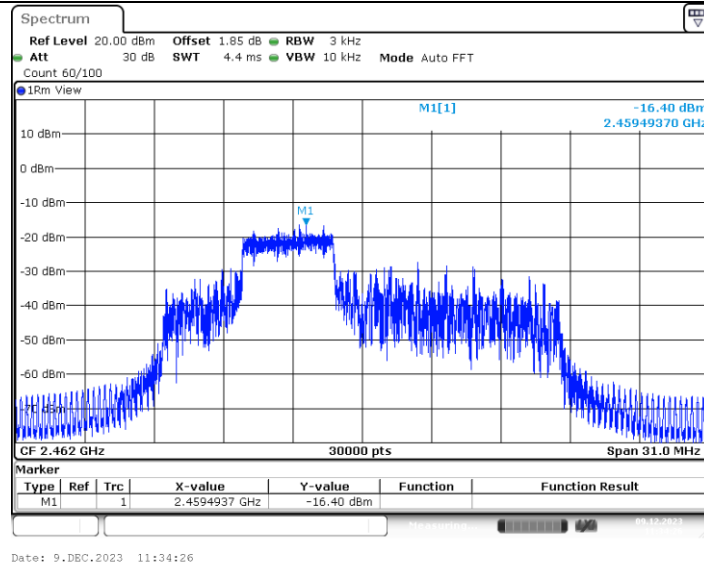

11AX20MIMO_Ant4_2462_52Tone_RU38

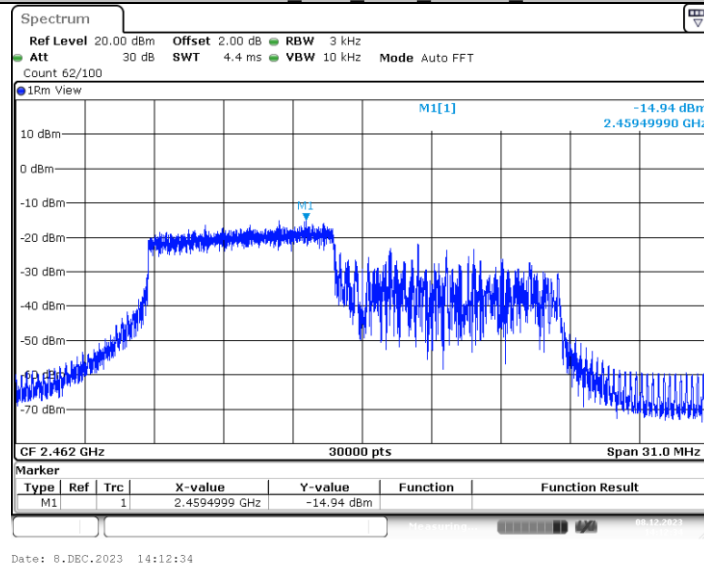

11AX20MIMO_Ant4_2462_106Tone_RU53

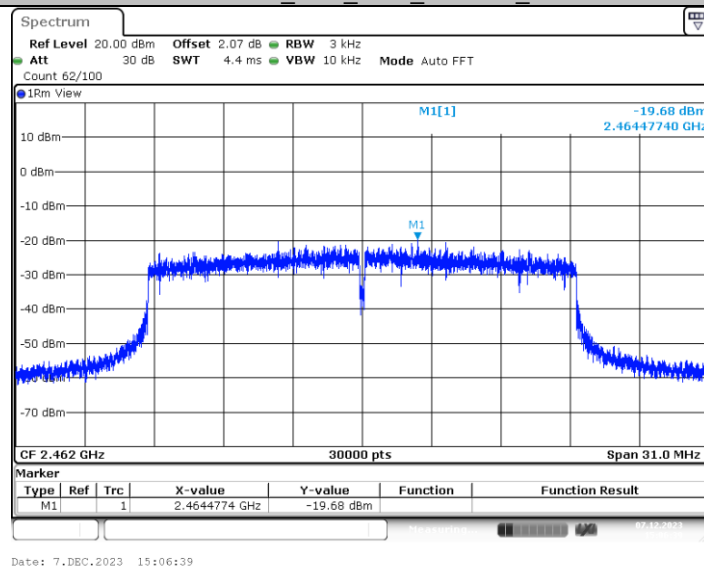

11AX20MIMO_Ant4_2462_242Tone_RU61

CTC Laboratories, Inc.


2/F., Building 1 and 1-2/F., Building 2, Jiaquan Building, Guanlan High-Tech Park, Longhua District, Shenzhen, Guangdong, China

Tel.: (86)755-27521059


Fax: (86)755-27521011

Http://www.sz-ctc.org.cn


For anti-fake verification, please visit the official website of Certification and Accreditation Administration of the People's Republic of China : <http://yz.cnca.cn>

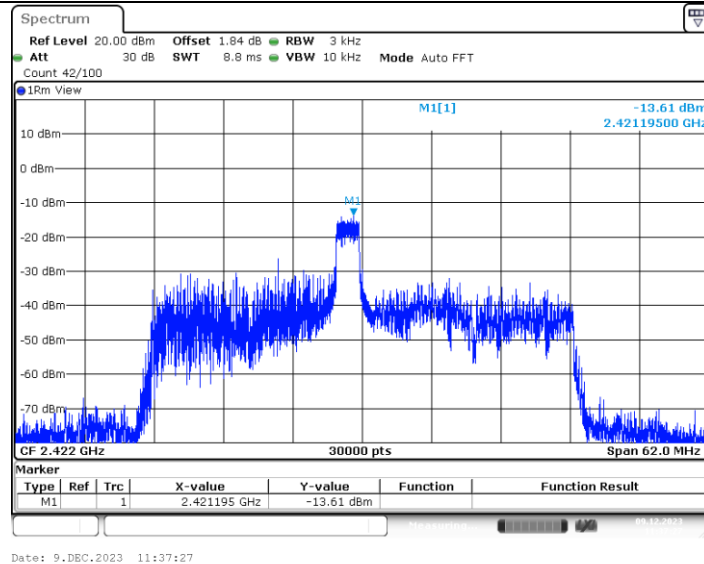


11AX40MIMO_Ant1_2422_26Tone_RU8

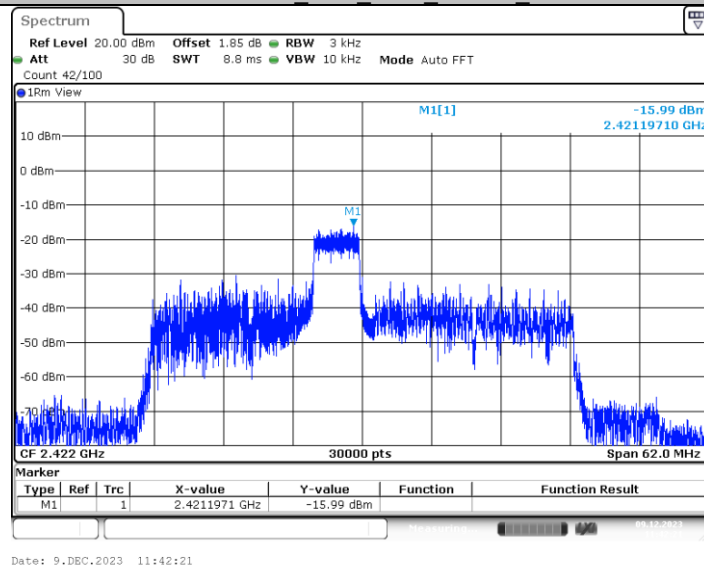


11AX40MIMO_Ant1_2422_52Tone_RU40

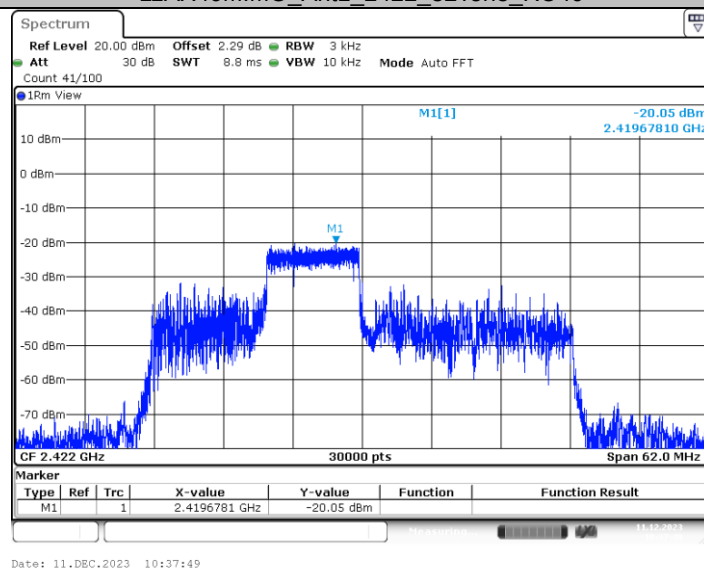


11AX40MIMO_Ant1_2422_106Tone_RU54

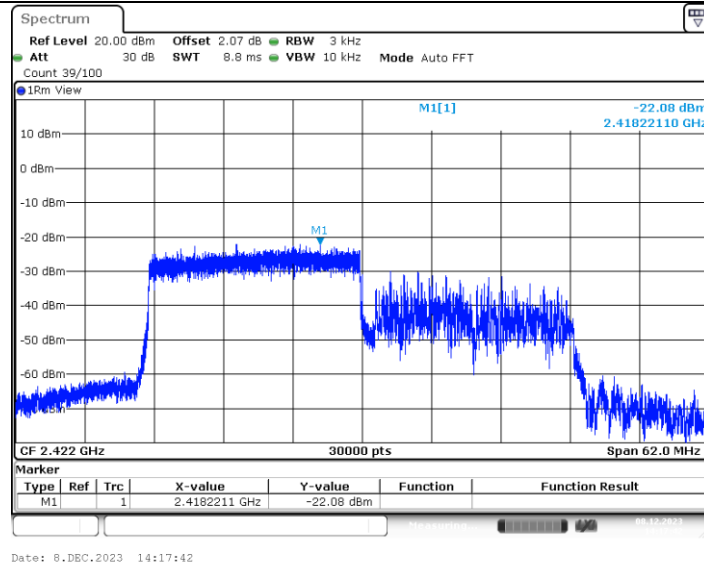


11AX40MIMO_Ant1_2422_242Tone_RU61

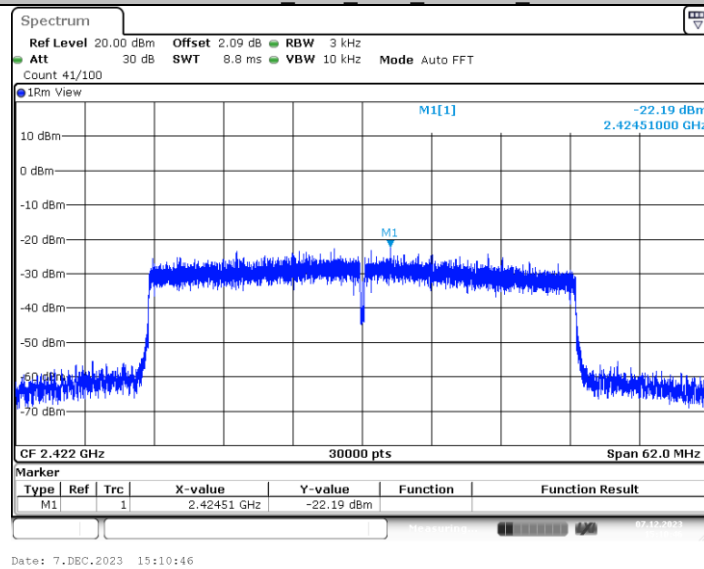


11AX40MIMO_Ant1_2422_484Tone_RU65

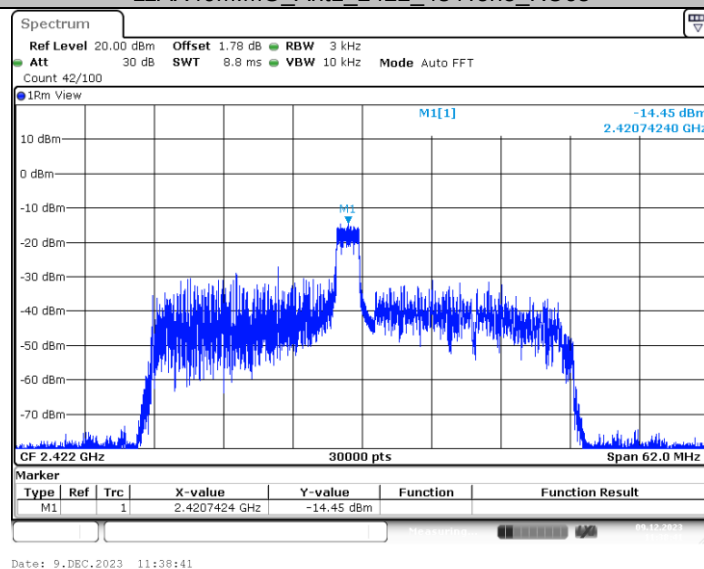


11AX40MIMO_Ant2_2422_26Tone_RU8

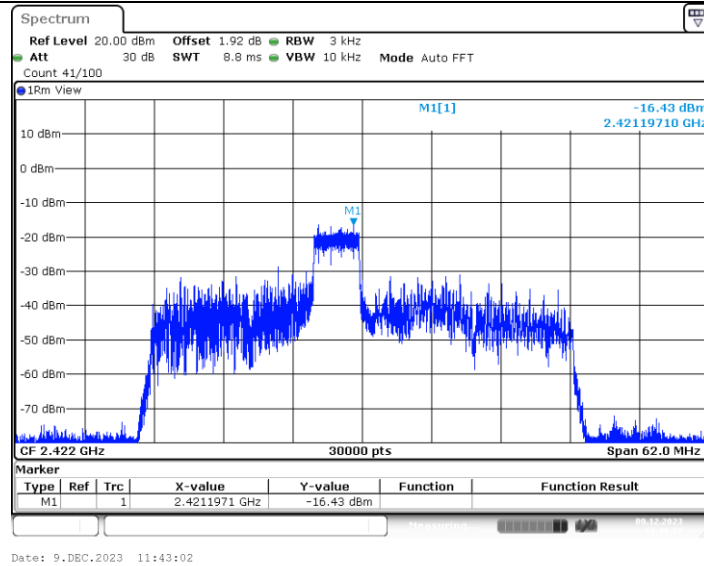

11AX40MIMO_Ant2_2422_52Tone_RU40

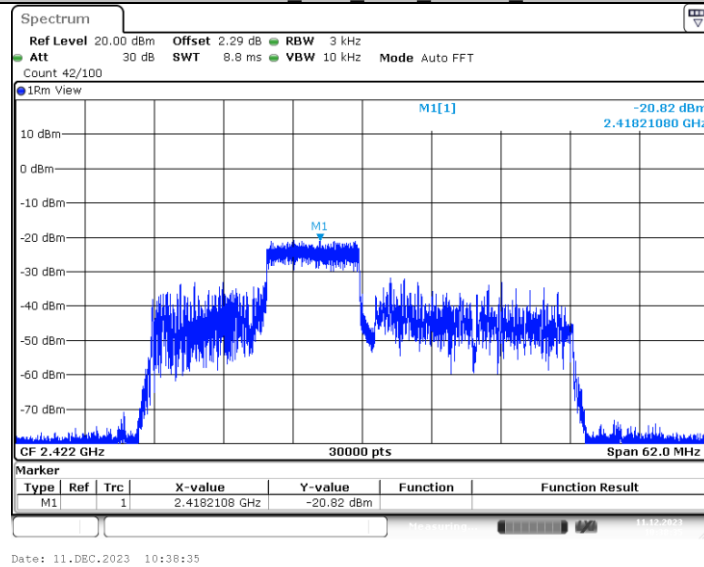

11AX40MIMO_Ant2_2422_106Tone_RU54

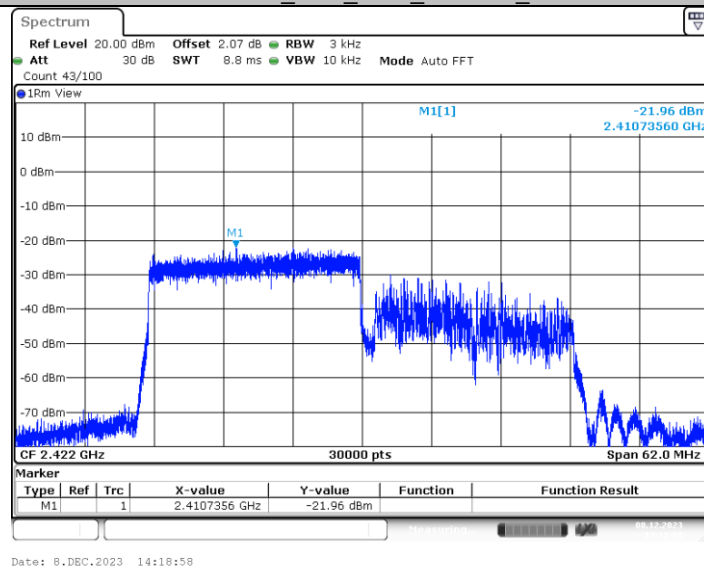

11AX40MIMO_Ant2_2422_242Tone_RU61

CTC Laboratories, Inc.


2/F., Building 1 and 1-2/F., Building 2, Jiaquan Building, Guanlan High-Tech Park, Longhua District, Shenzhen, Guangdong, China

Tel.: (86)755-27521059


Fax: (86)755-27521011

Http://www.sz-ctc.org.cn


For anti-fake verification, please visit the official website of Certification and Accreditation Administration of the People's Republic of China : <http://yz.cnca.cn>

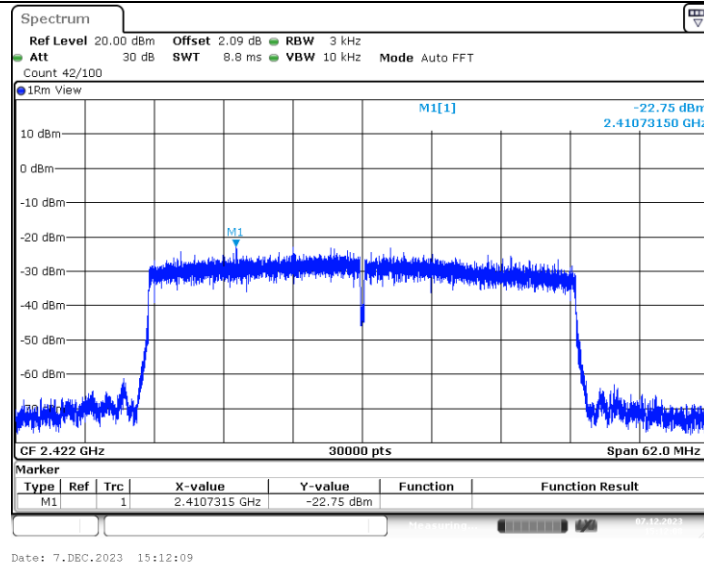


11AX40MIMO_Ant2_2422_484Tone_RU65

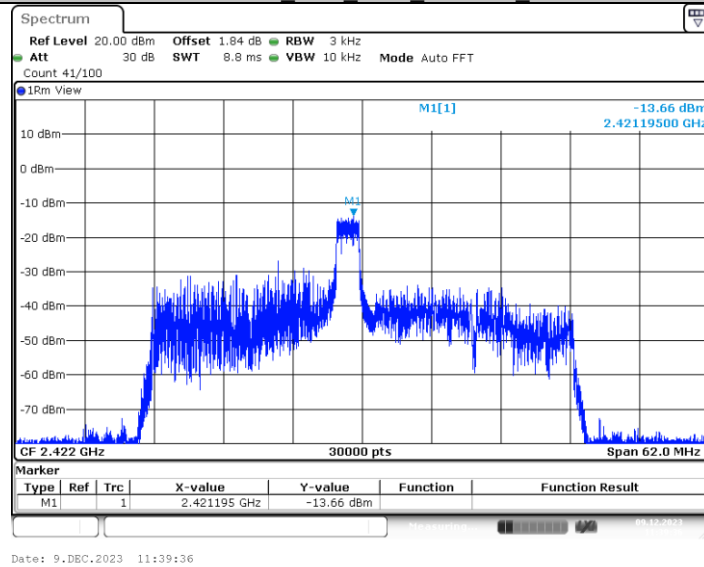


11AX40MIMO_Ant3_2422_26Tone_RU8

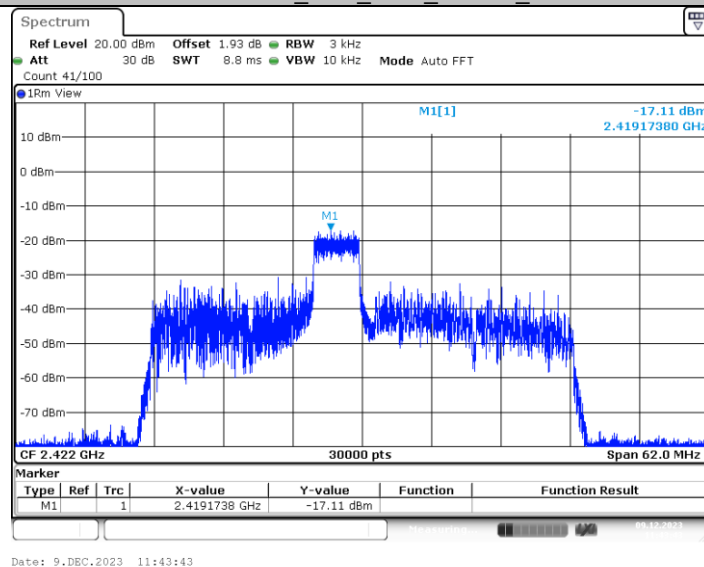


11AX40MIMO_Ant3_2422_52Tone_RU40

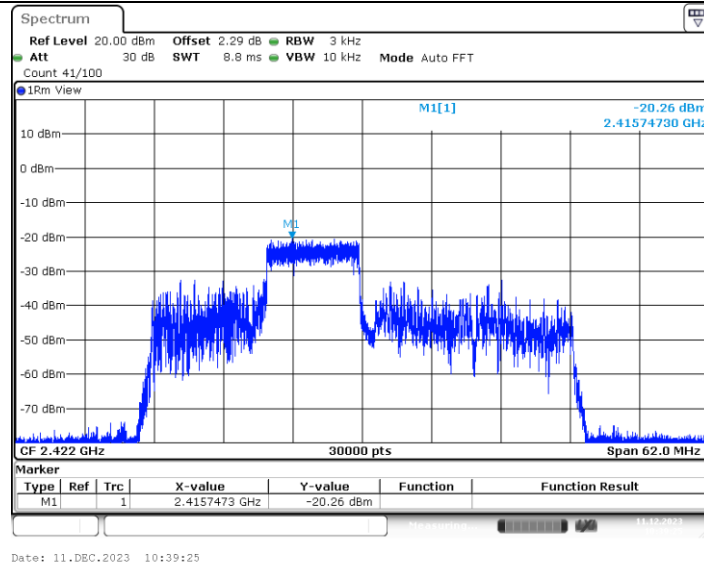

11AX40MIMO Ant3 2422 106Tone RU54

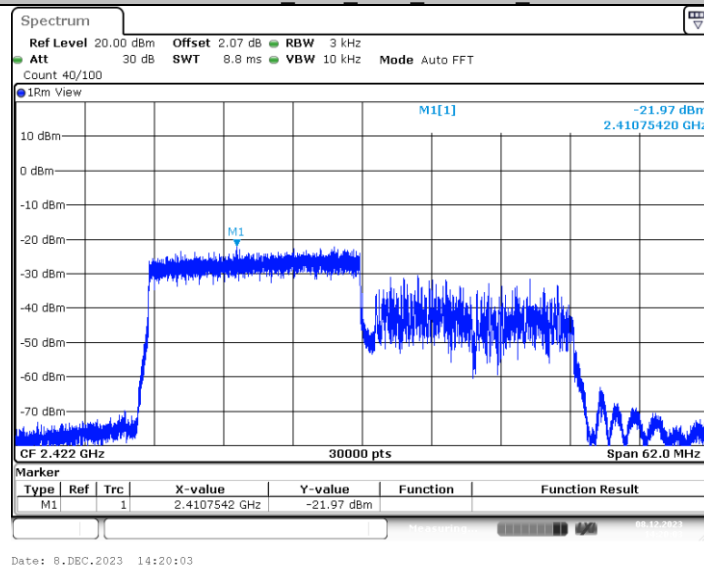

11AX40MIMO Ant3 2422 242Tone RU61

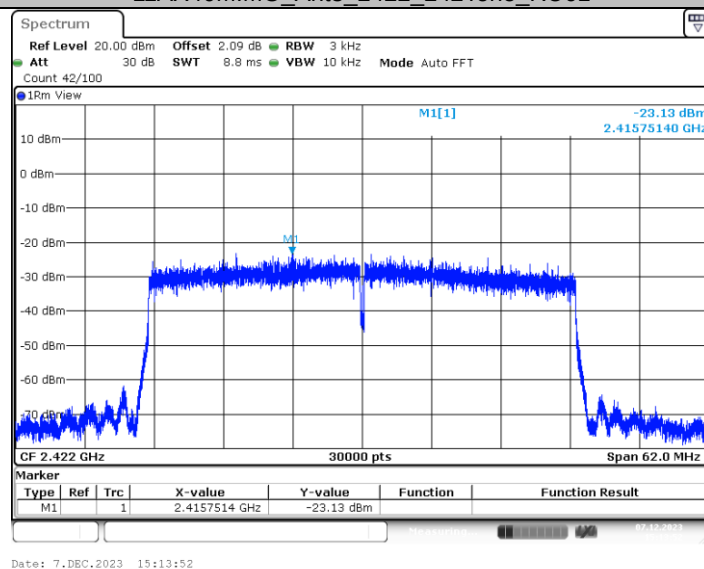


11AX40MIMO Ant3 2422 484Tone RU65

CTC Laboratories, Inc.


2/F., Building 1 and 1-2/F., Building 2, Jiaquan Building, Guanlan High-Tech Park, Longhua District, Shenzhen, Guangdong, China
Tel.: (86)755-27521059 Fax: (86)755-27521011 Http://www.sz-ctc.org.cn




For anti-fake verification, please visit the official website of Certification and Accreditation Administration of the People's Republic of China : <http://yz.cnca.cn>

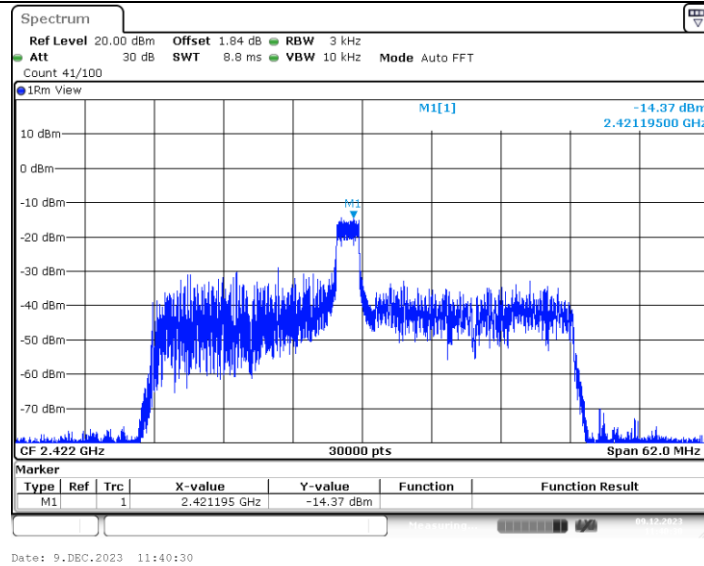


11AX40MIMO_Ant4_2422_26Tone_RU8

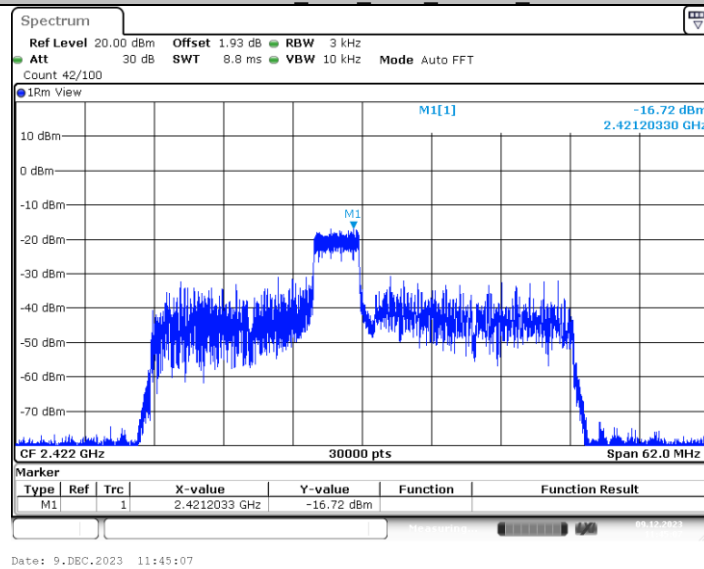


11AX40MIMO_Ant4_2422_52Tone_RU40

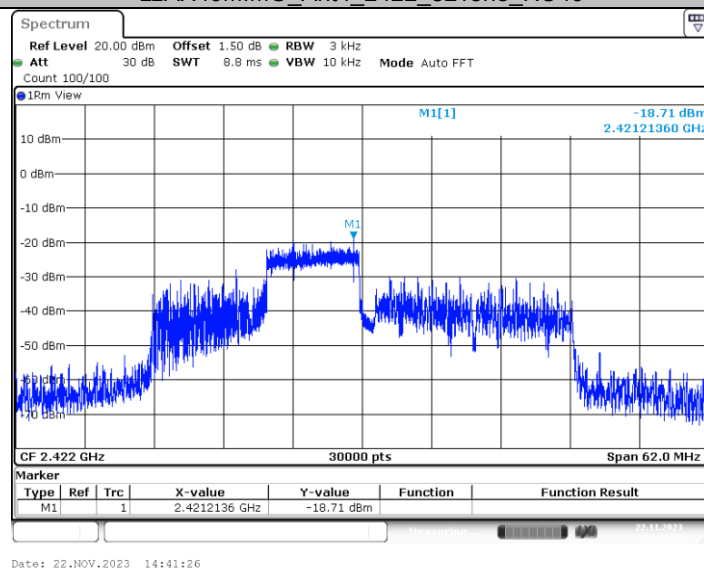


11AX40MIMO_Ant4_2422_106Tone_RU53

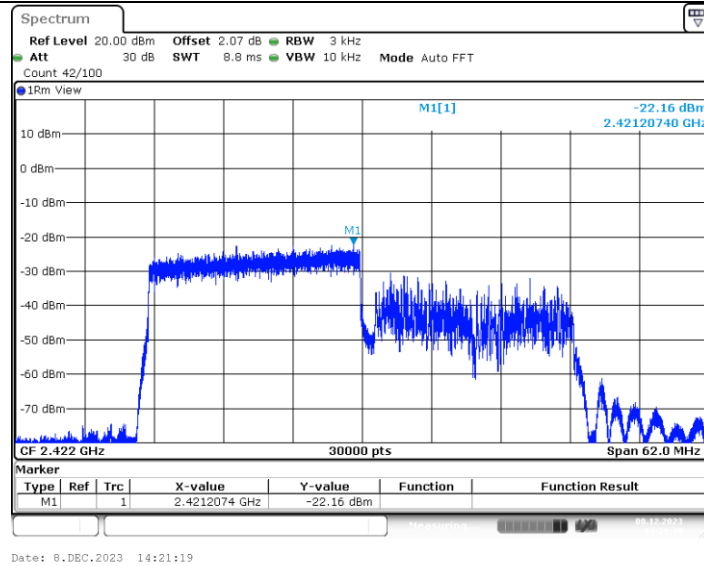


11AX40MIMO_Ant4_2422_242Tone_RU61

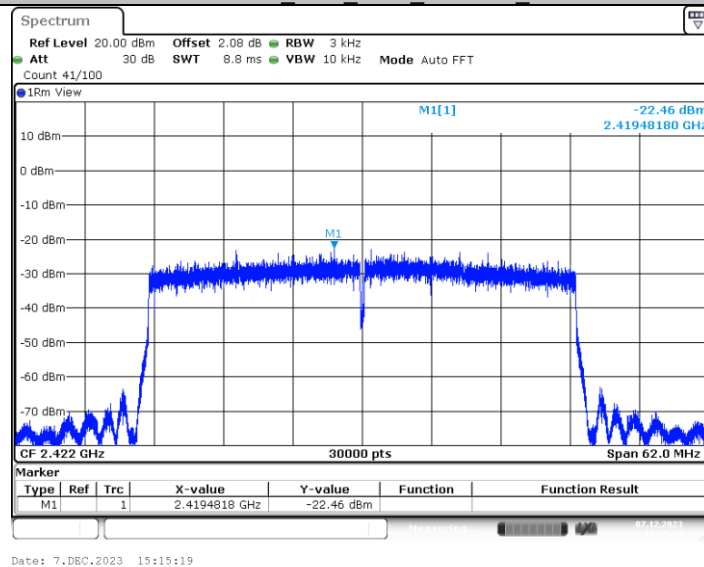


11AX40MIMO_Ant4_2422_484Tone_RU65

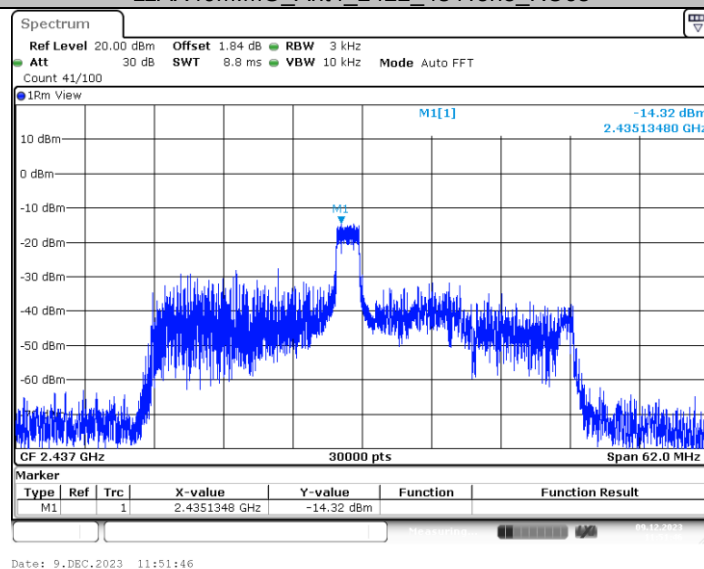


11AX40MIMO_Ant1_2437_26Tone_RU8

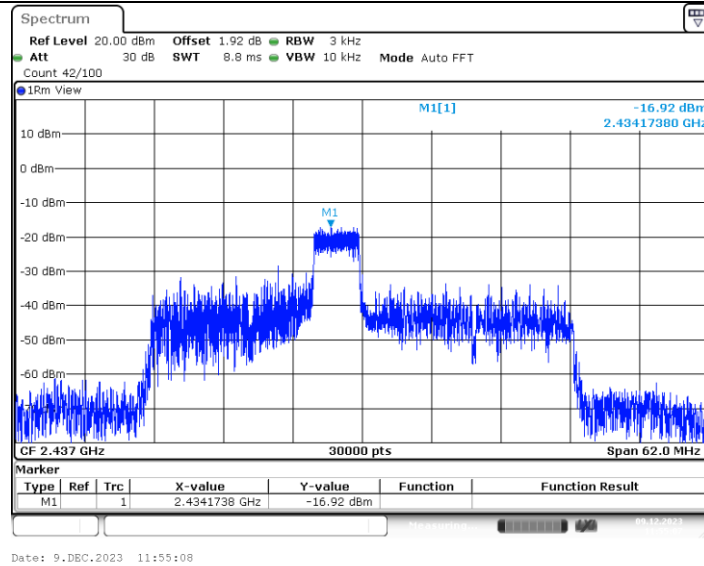

11AX40MIMO_Ant1_2437_52Tone_RU40

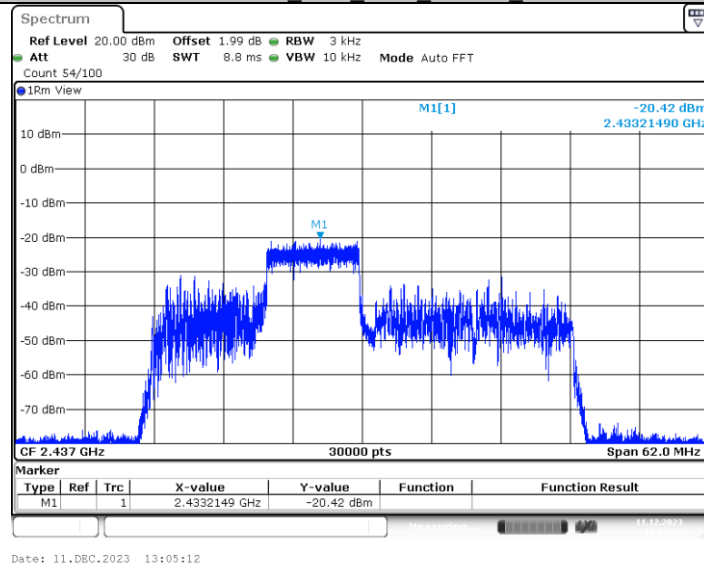

11AX40MIMO_Ant1_2437_106Tone_RU54

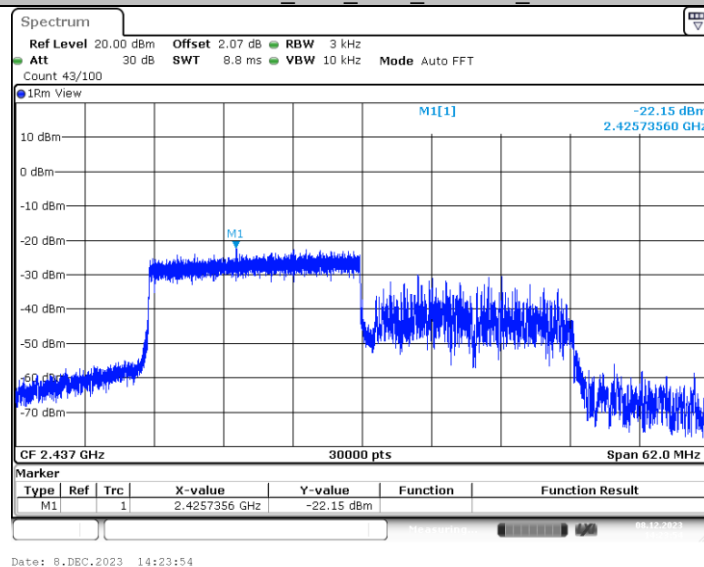

11AX40MIMO_Ant1_2437_242Tone_RU61

CTC Laboratories, Inc.


2/F., Building 1 and 1-2/F., Building 2, Jiaquan Building, Guanlan High-Tech Park, Longhua District, Shenzhen, Guangdong, China

Tel.: (86)755-27521059


Fax: (86)755-27521011

Http://www.sz-ctc.org.cn


For anti-fake verification, please visit the official website of Certification and Accreditation Administration of the People's Republic of China : <http://yz.cnca.cn>

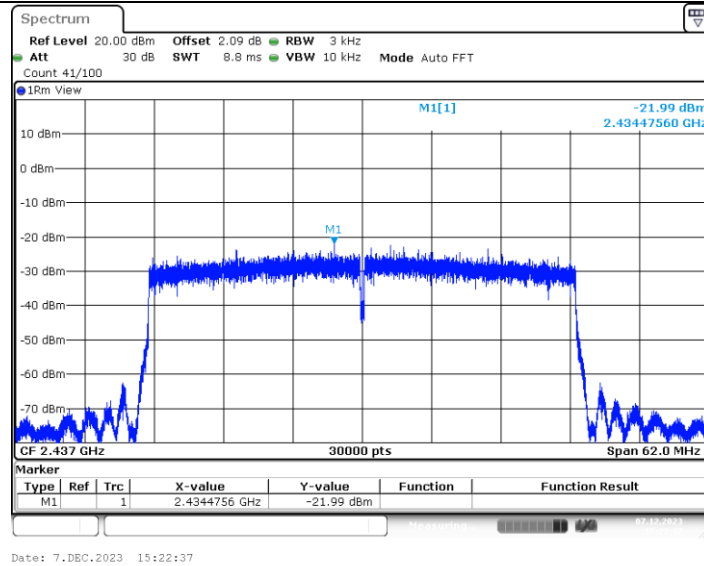


11AX40MIMO_Ant1_2437_484Tone_RU65

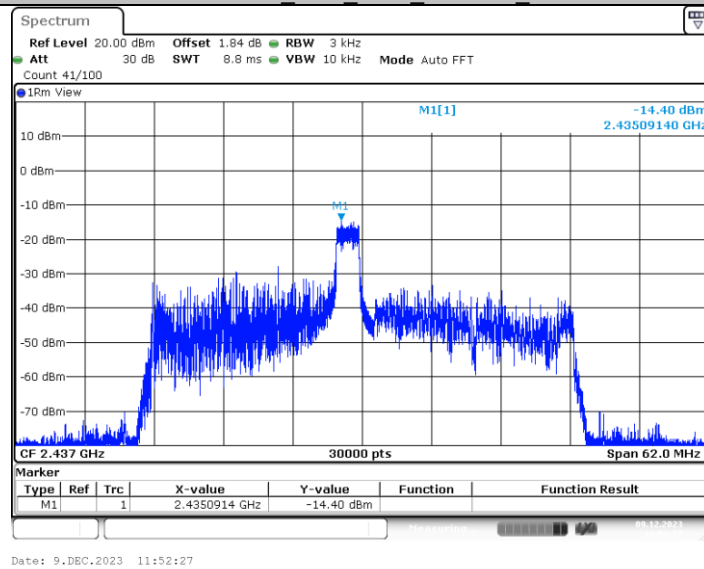


11AX40MIMO_Ant2_2437_26Tone_RU8

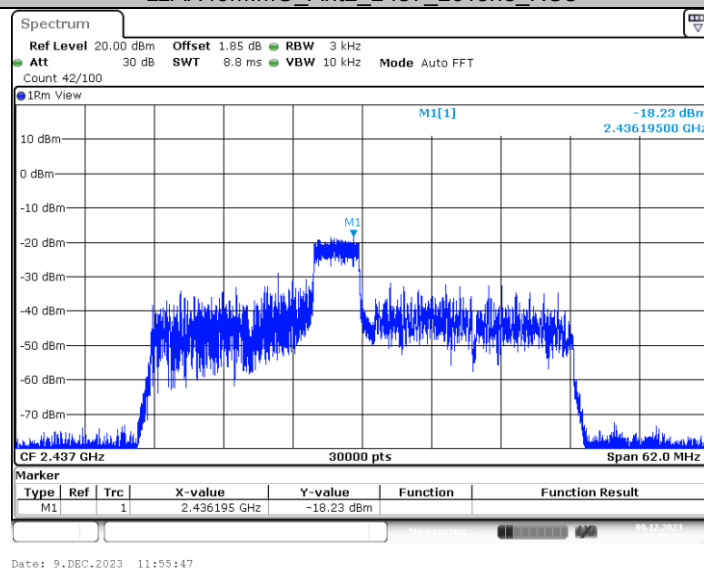


11AX40MIMO_Ant2_2437_52Tone_RU40

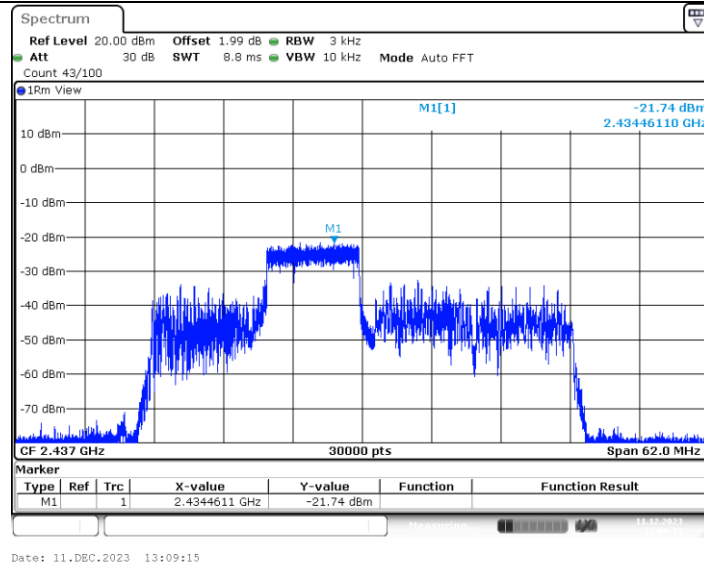


11AX40MIMO_Ant2_2437_106Tone_RU54

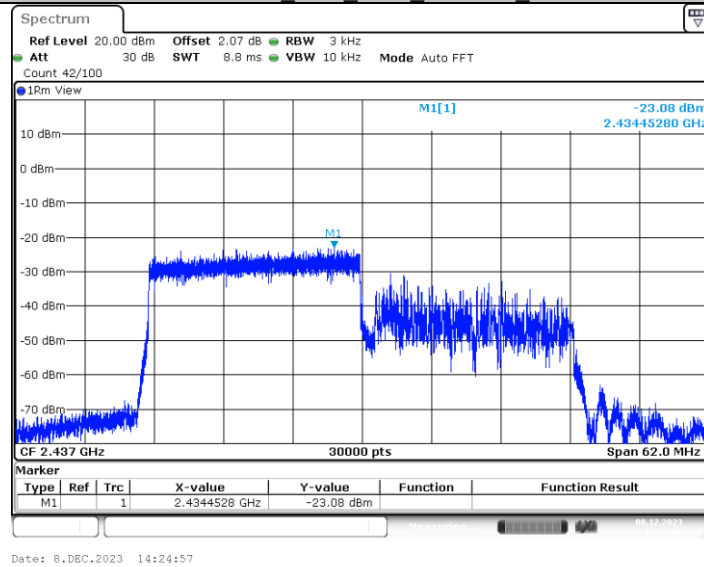


11AX40MIMO_Ant2_2437_242Tone_RU61

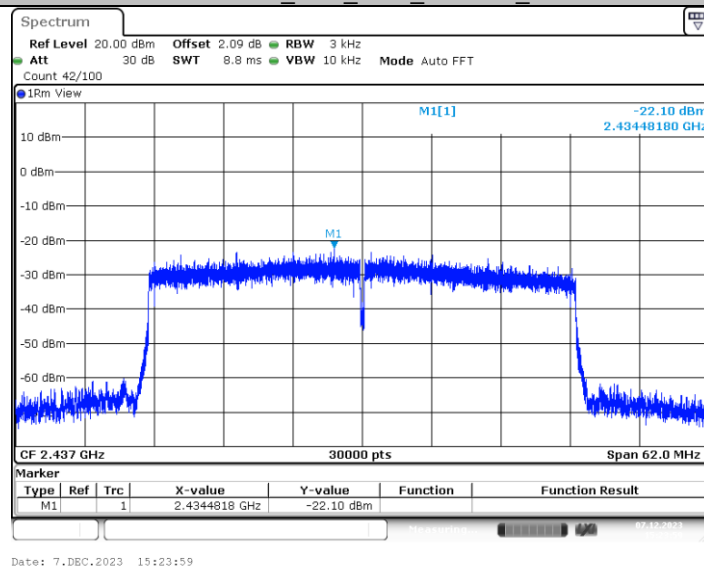


11AX40MIMO_Ant2_2437_484Tone_RU65

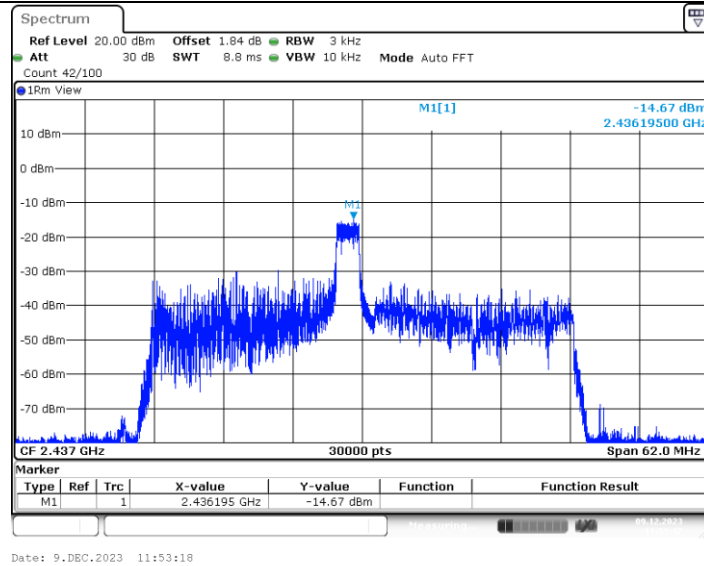

11AX40MIMO_Ant3_2437_26Tone_RU8

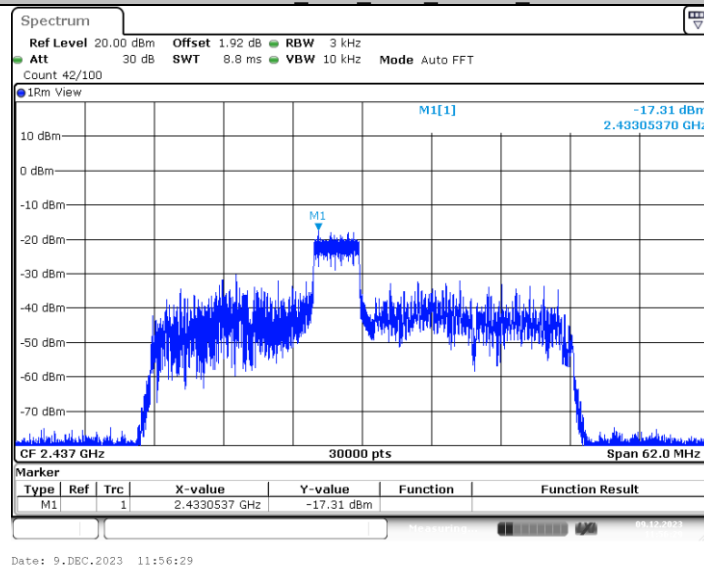

11AX40MIMO_Ant3_2437_52Tone_RU40

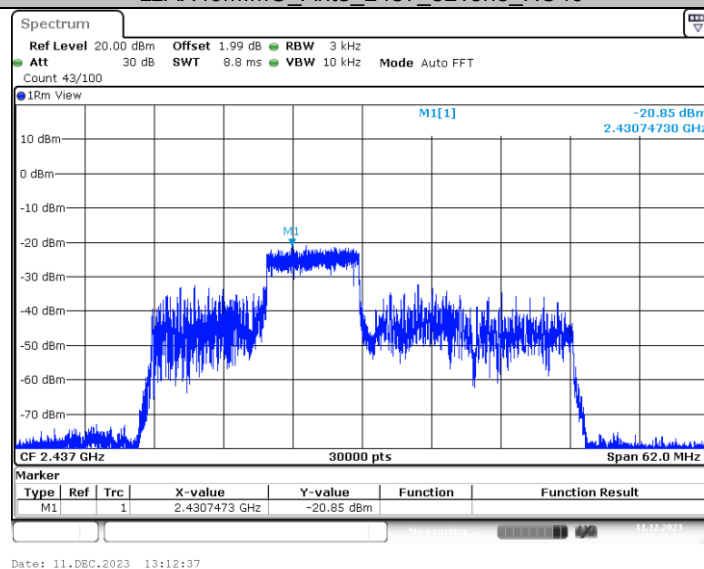


11AX40MIMO_Ant3_2437_106Tone_RU54

CTC Laboratories, Inc.


2/F., Building 1 and 1-2/F., Building 2, Jiaquan Building, Guanlan High-Tech Park, Longhua District, Shenzhen, Guangdong, China
Tel.: (86)755-27521059 Fax: (86)755-27521011 Http://www.sz-ctc.org.cn




For anti-fake verification, please visit the official website of Certification and Accreditation Administration of the People's Republic of China : <http://yz.cnca.cn>

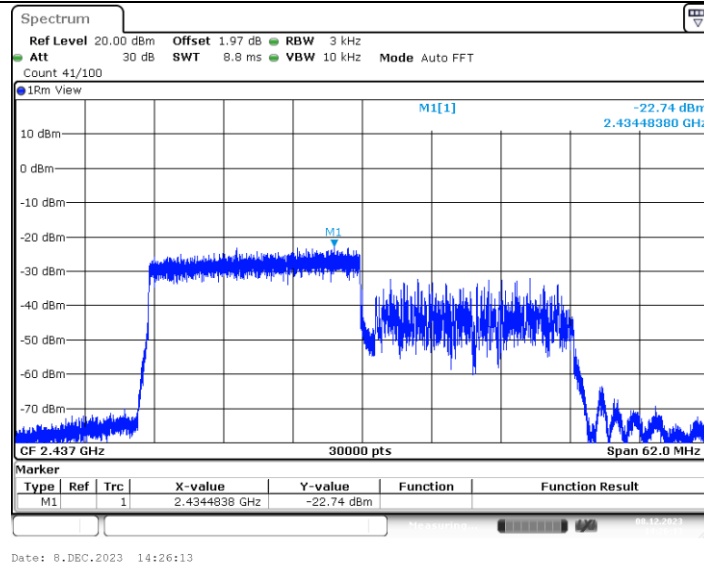


11AX40MIMO Ant3 2437 242Tone_RU61

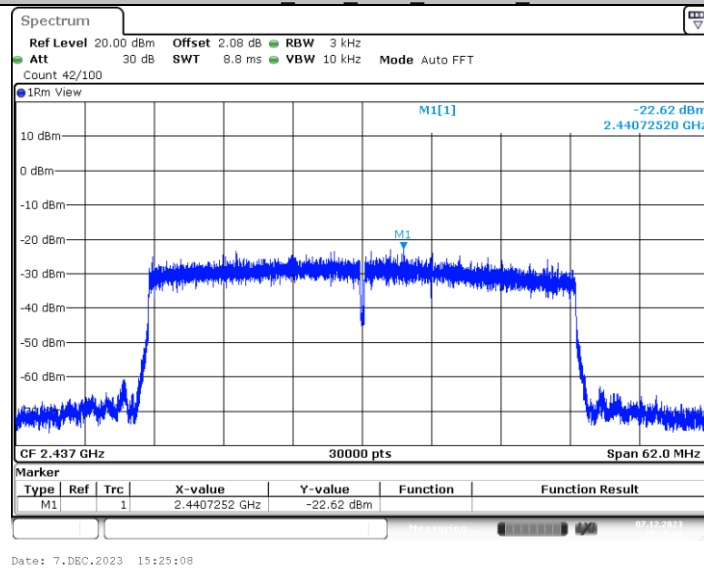


11AX40MIMO Ant3 2437 484Tone_RU65

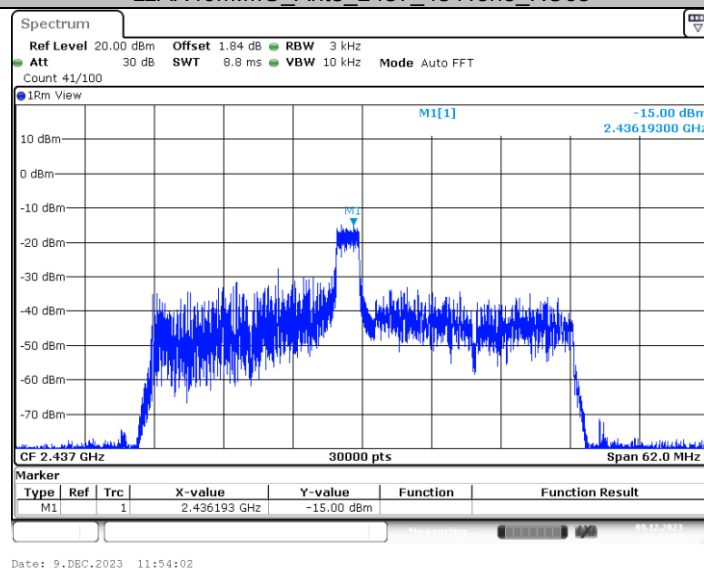


11AX40MIMO Ant4 2437 26Tone_RU8

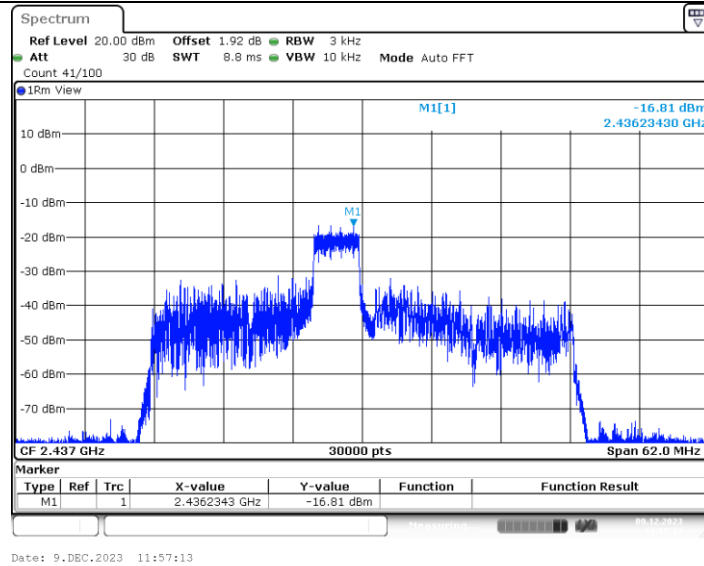

11AX40MIMO_Ant4_2437_52Tone_RU40

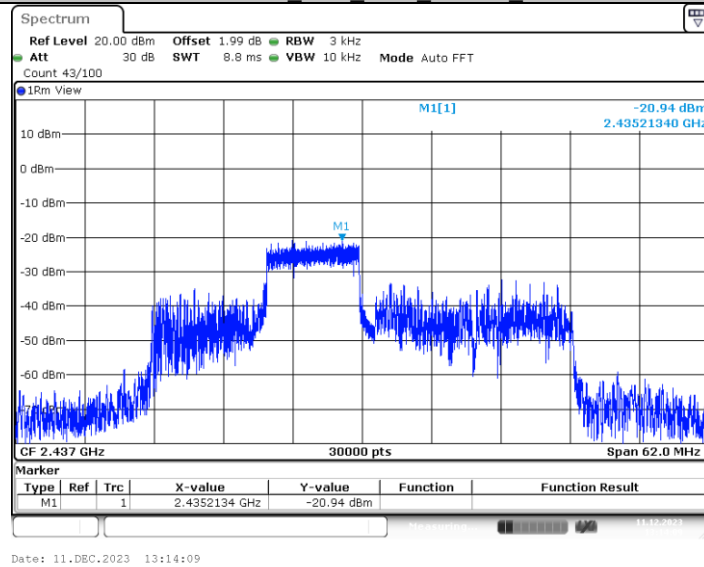

11AX40MIMO_Ant4_2437_106Tone_RU54

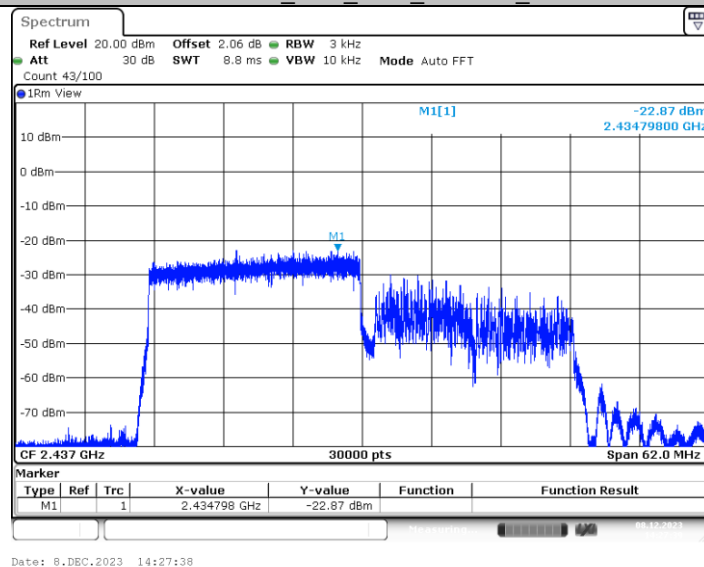

11AX40MIMO_Ant4_2437_242Tone_RU61

CTC Laboratories, Inc.


2/F., Building 1 and 1-2/F., Building 2, Jiaquan Building, Guanlan High-Tech Park, Longhua District, Shenzhen, Guangdong, China

Tel.: (86)755-27521059


Fax: (86)755-27521011

Http://www.sz-ctc.org.cn


For anti-fake verification, please visit the official website of Certification and Accreditation Administration of the People's Republic of China : <http://yz.cnca.cn>

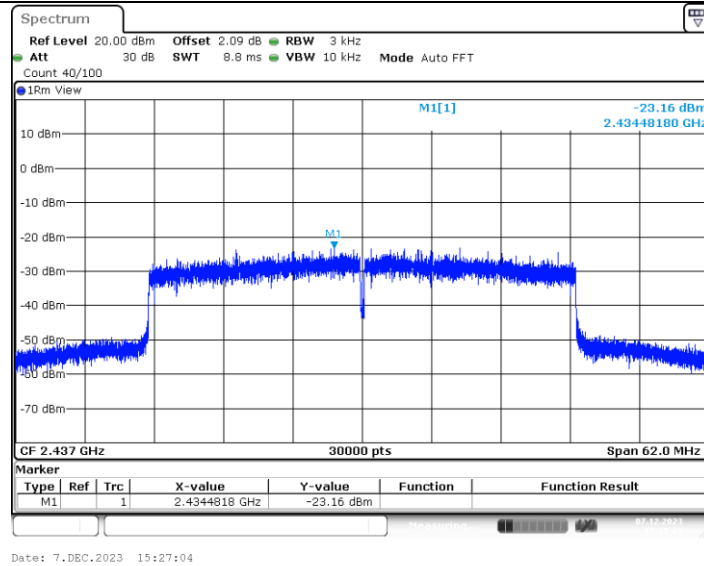


11AX40MIMO_Ant4_2437_484Tone_RU65

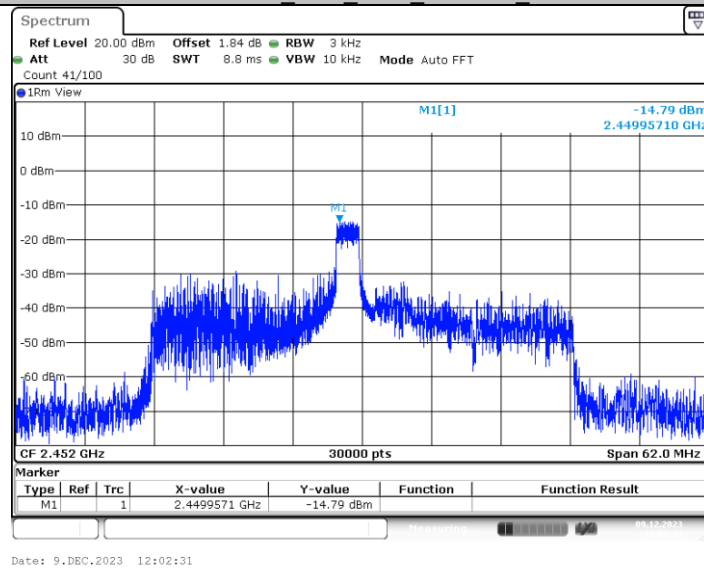


11AX40MIMO_Ant1_2452_26Tone_RU8

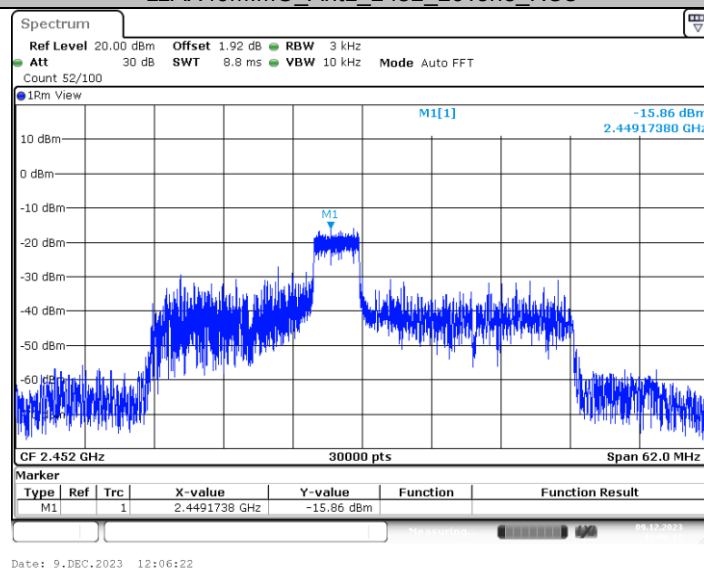


11AX40MIMO_Ant1_2452_52Tone_RU40

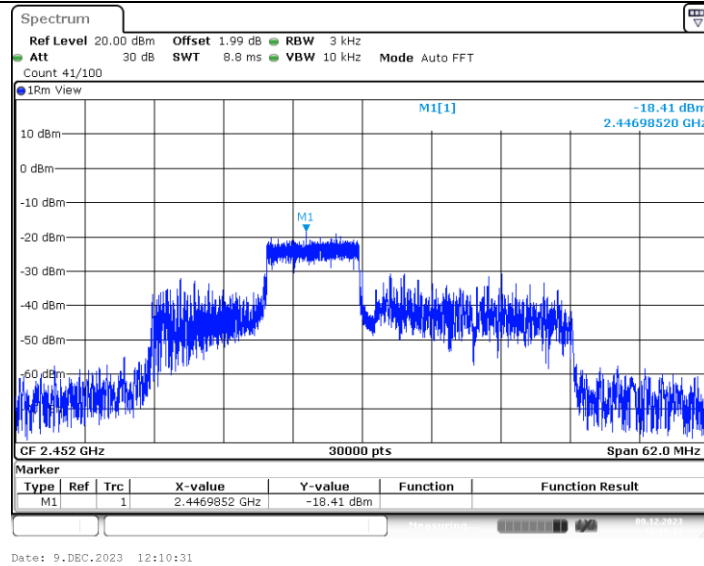

11AX40MIMO_Ant1_2452_106Tone_RU54

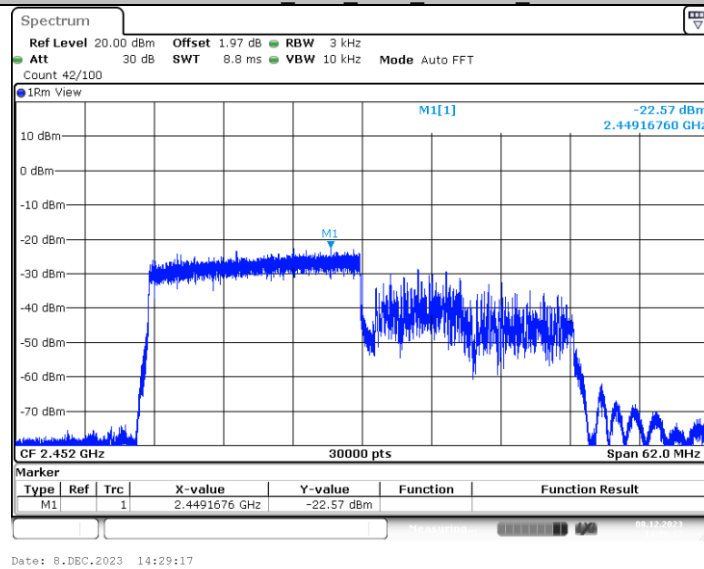

11AX40MIMO_Ant1_2452_242Tone_RU61

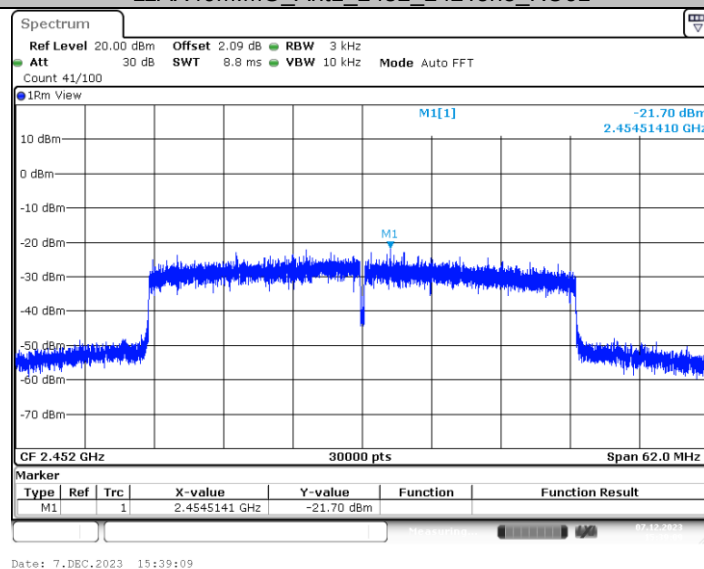

11AX40MIMO_Ant1_2452_484Tone_RU65

CTC Laboratories, Inc.


2/F., Building 1 and 1-2/F., Building 2, Jiaquan Building, Guanlan High-Tech Park, Longhua District, Shenzhen, Guangdong, China

Tel.: (86)755-27521059


Fax: (86)755-27521011

Http://www.sz-ctc.org.cn


For anti-fake verification, please visit the official website of Certification and Accreditation Administration of the People's Republic of China : <http://yz.cnca.cn>

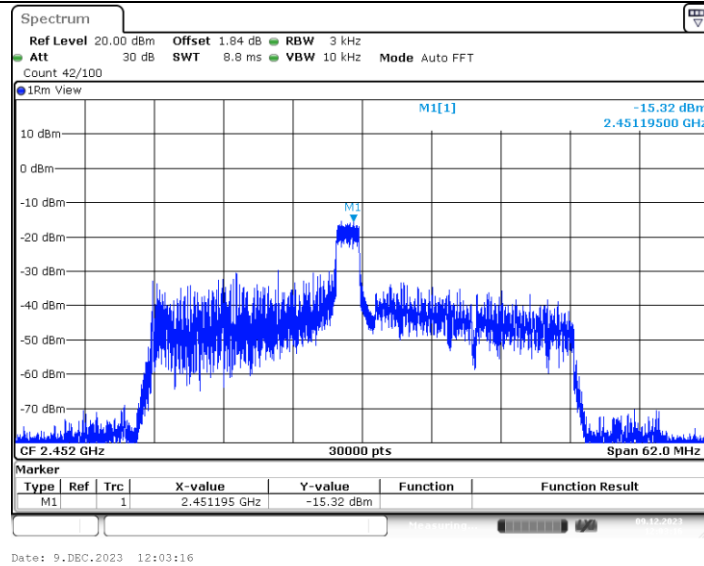


11AX40MIMO_Ant2_2452_26Tone_RU8

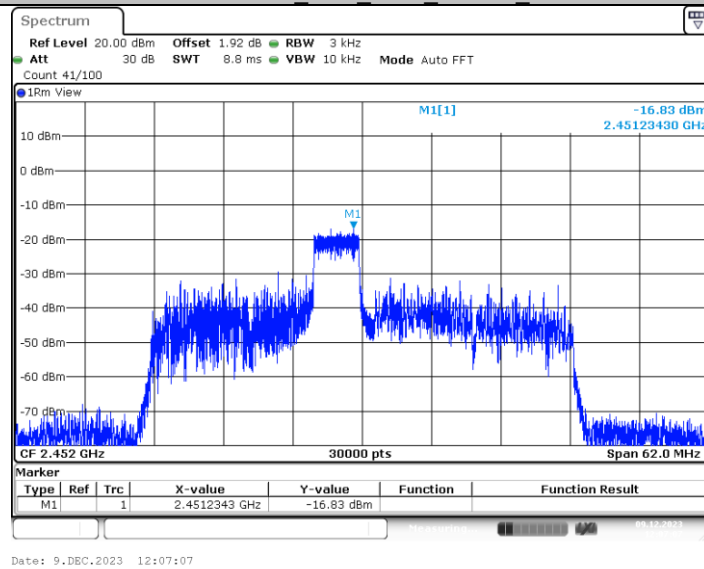


11AX40MIMO_Ant2_2452_52Tone_RU40

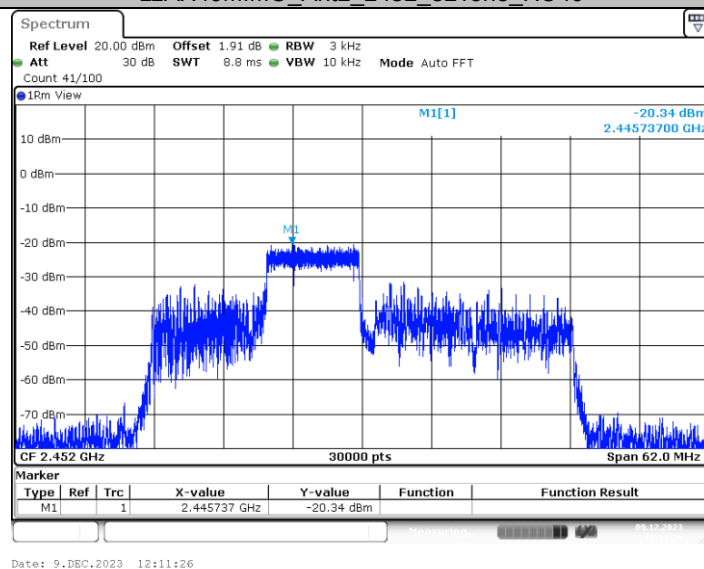


11AX40MIMO_Ant2_2452_106Tone_RU54

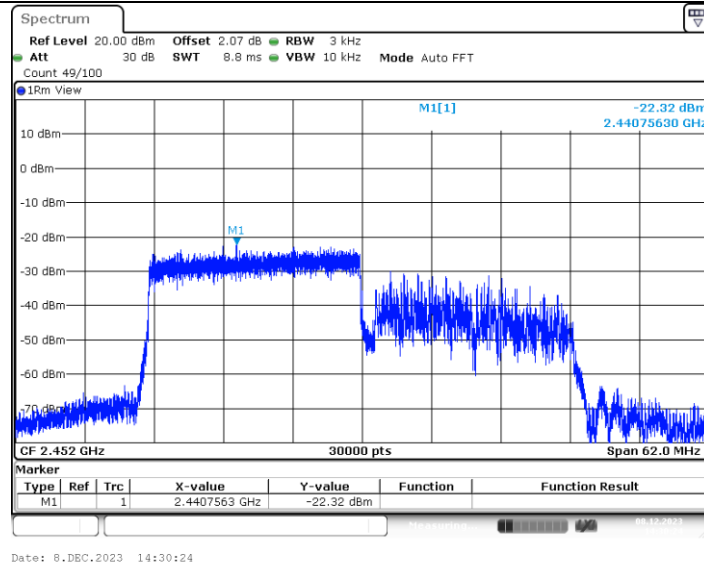


11AX40MIMO_Ant2_2452_242Tone_RU61

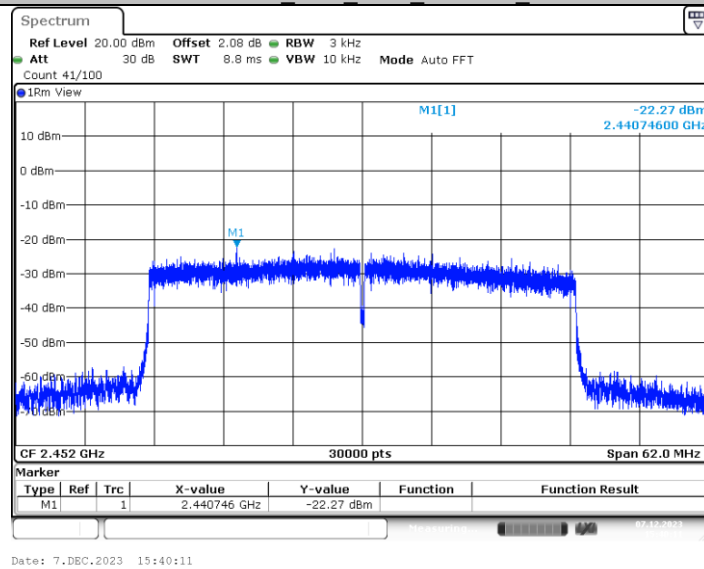


11AX40MIMO_Ant2_2452_484Tone_RU65

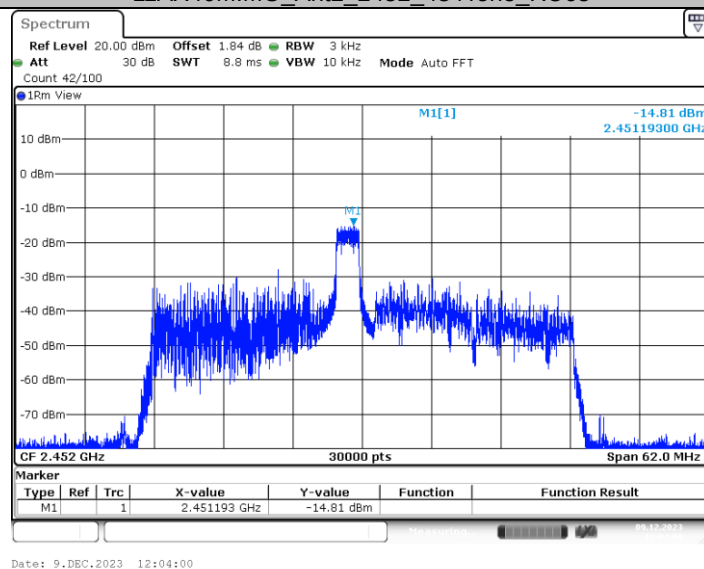


11AX40MIMO_Ant3_2452_26Tone_RU8

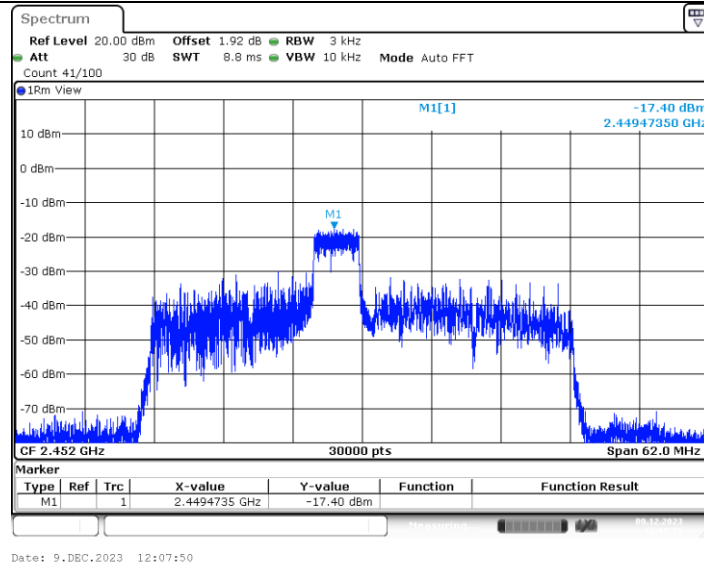

11AX40MIMO_Ant3_2452_52Tone_RU40

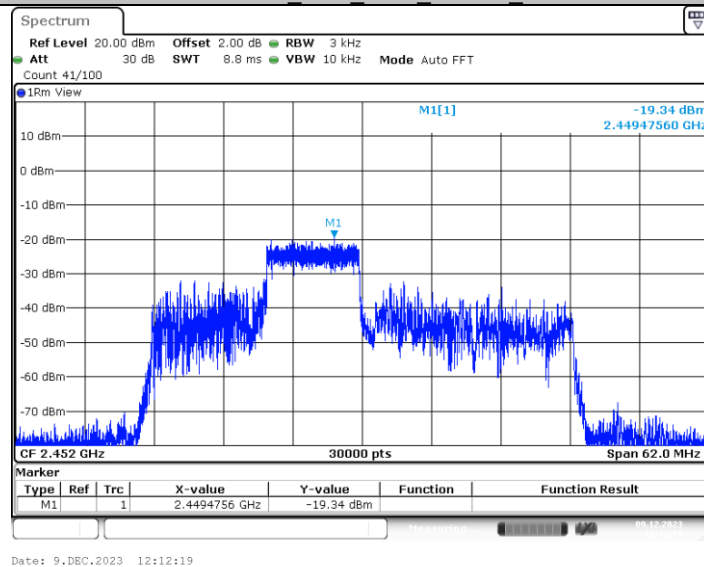

11AX40MIMO_Ant3_2452_106Tone_RU54

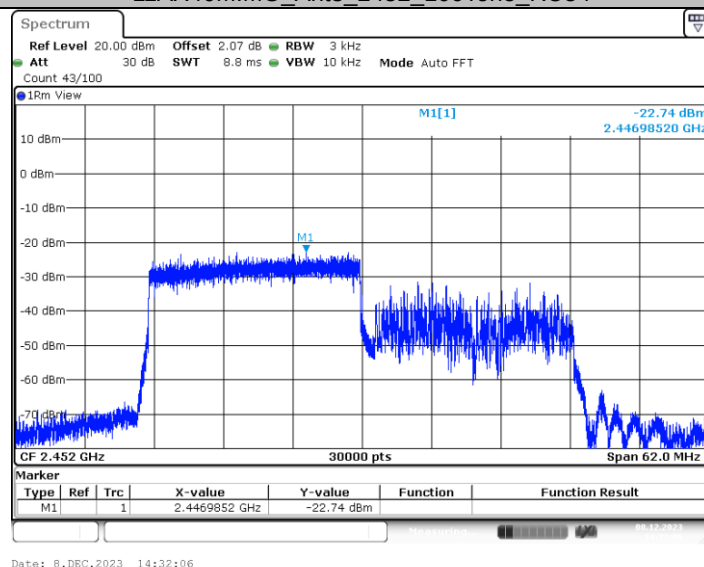


11AX40MIMO_Ant3_2452_242Tone_RU61

CTC Laboratories, Inc.


2/F., Building 1 and 1-2/F., Building 2, Jiaquan Building, Guanlan High-Tech Park, Longhua District, Shenzhen, Guangdong, China
Tel.: (86)755-27521059 Fax: (86)755-27521011 Http://www.sz-ctc.org.cn




For anti-fake verification, please visit the official website of Certification and Accreditation Administration of the People's Republic of China : <http://yz.cnca.cn>

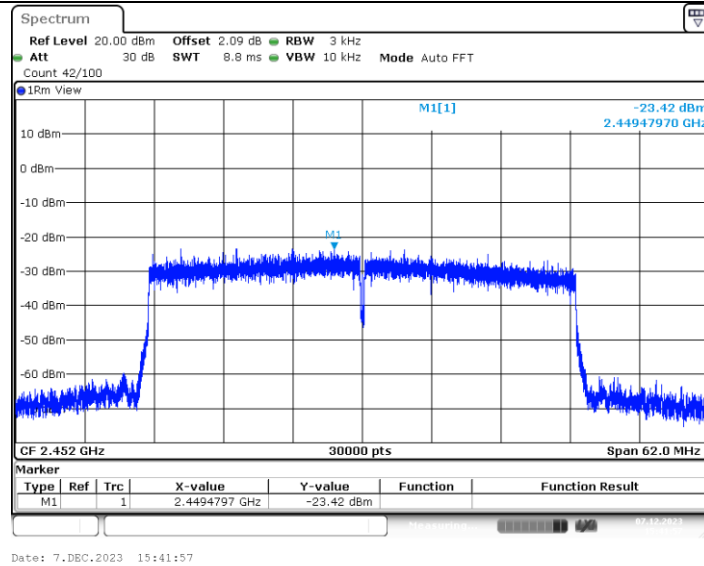

11AX40MIMO_Ant3_2452_484Tone_RU65

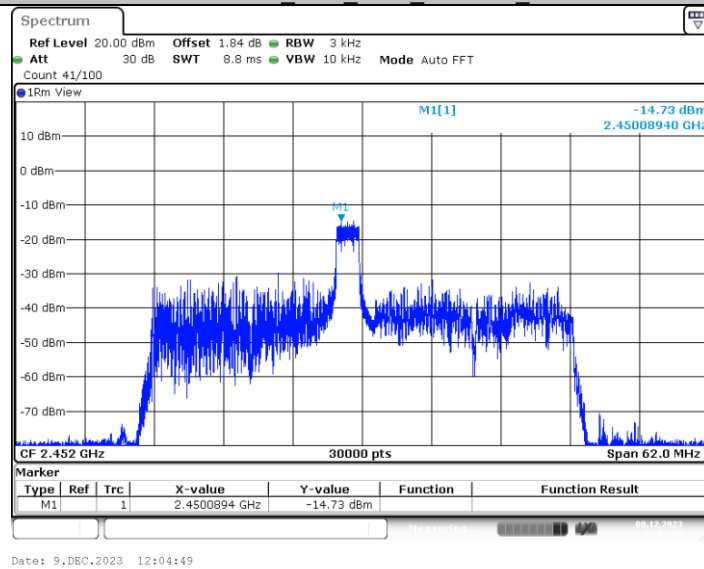

11AX40MIMO_Ant4_2452_26Tone_RU8

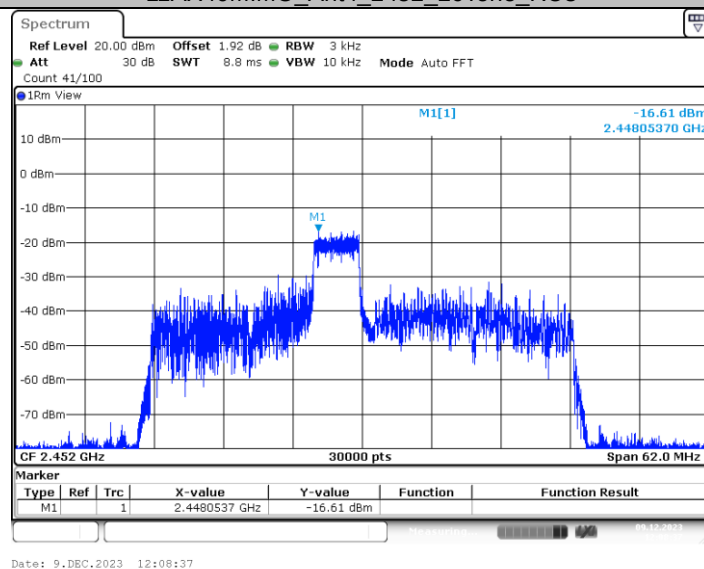

11AX40MIMO_Ant4_2452_52Tone_RU40

CTC Laboratories, Inc.

2/F., Building 1 and 1-2/F., Building 2, Jiaquan Building, Guanlan High-Tech Park, Longhua District, Shenzhen, Guangdong, China


Tel.: (86)755-27521059

Fax: (86)755-27521011


Http://www.sz-ctc.org.cn

For anti-fake verification, please visit the official website of Certification and


Accreditation Administration of the People's Republic of China : <http://yz.cnca.cn>

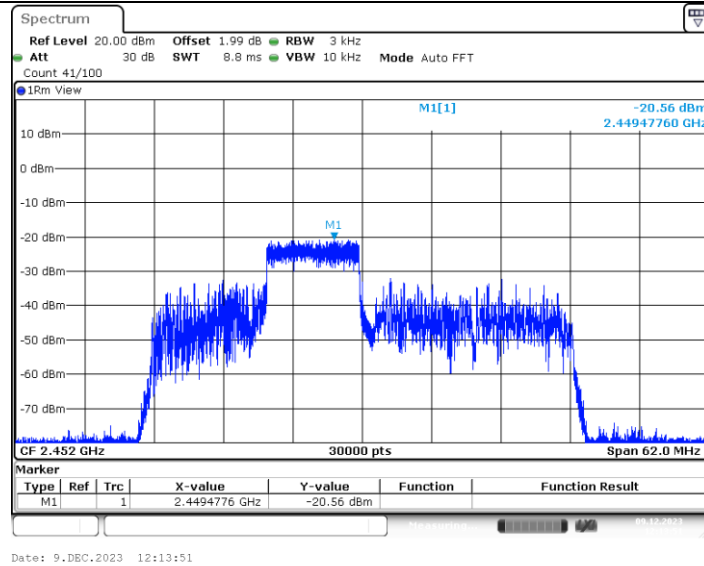

11AX40MIMO_Ant4_2452_106Tone_RU54

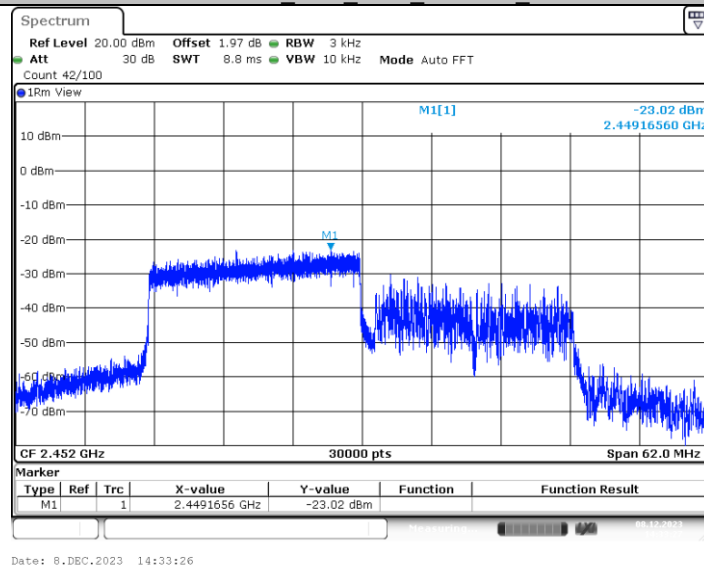

11AX40MIMO_Ant4_2452_242Tone_RU61

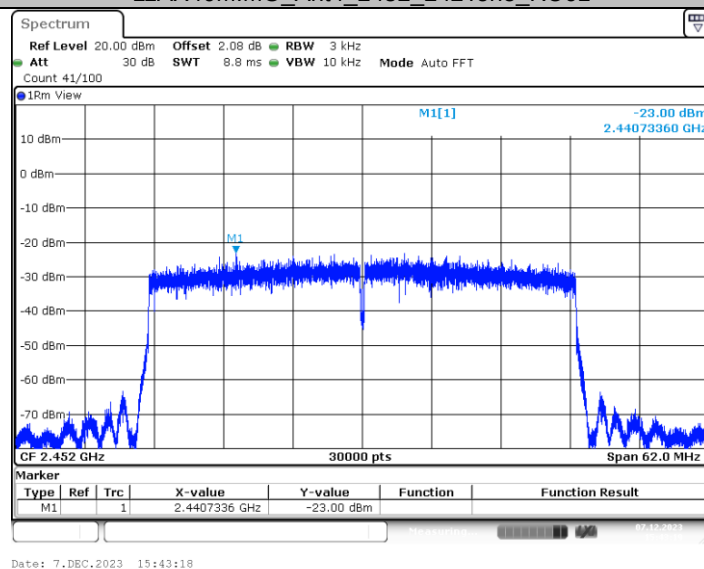


11AX40MIMO_Ant4_2452_484Tone_RU65

3.8. Duty Cycle

Limit

None, for report purposes only.

Test Configuration

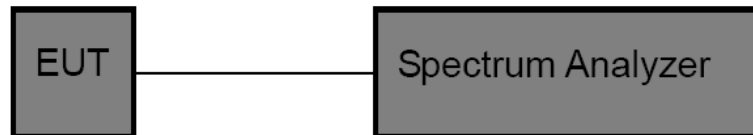

Test Procedure

1. The EUT was directly connected to the spectrum analyzer and antenna output port as show in the block diagram above.
2. The EUT was directly connected to the Spectrum Analyzer and antenna output port as show in the block diagram above. The measurement according to section 10.2 of KDB 558074 D01 DTS Meas Guidance v05r02.
3. Spectrum Setting:
Set analyzer center frequency to test channel center frequency.
Set the span to 0Hz.
Set the RBW to 10MHz.
Set the VBW to 10MHz.
Detector: Peak.
Sweep time: Auto.
Allow trace to fully stabilize. Then use the peak marker function to determine the maximum amplitude level.

Test Mode

Please refer to the clause 2.4.

**Test Result**

TestMode	Antenna	Frequency[MHz]	Transmission Duration [ms]	Transmission Period [ms]	Duty Cycle [%]	1/T Minimum VBW (kHz)	Final Setting for VBW (kHz)
11B	Ant1	2412	8.41	8.62	97.56	0.12	1
	Ant2	2412	8.42	8.62	97.68	0.12	1
	Ant3	2412	8.43	9.48	88.92	0.12	1
	Ant4	2412	8.43	8.63	97.68	0.12	1
	Ant1	2437	8.43	8.67	97.23	0.12	1
	Ant2	2437	8.43	8.64	97.57	0.12	1
	Ant3	2437	8.42	8.63	97.57	0.12	1
	Ant4	2437	8.43	8.62	97.80	0.12	1
	Ant1	2462	8.41	8.81	95.46	0.12	1
	Ant2	2462	8.42	8.87	94.93	0.12	1
	Ant3	2462	8.43	8.63	97.68	0.12	1
	Ant4	2462	8.42	8.63	97.57	0.12	1
11G	Ant1	2412	1.40	1.60	87.50	0.71	1
	Ant2	2412	1.39	1.60	86.88	0.72	1
	Ant3	2412	1.40	1.60	87.50	0.71	1
	Ant4	2412	1.39	1.60	86.88	0.72	1
	Ant1	2437	1.40	1.60	87.50	0.71	1
	Ant2	2437	1.40	1.60	87.50	0.71	1
	Ant3	2437	1.40	1.60	87.50	0.71	1
	Ant4	2437	1.40	1.60	87.50	0.71	1
	Ant1	2462	1.40	1.60	87.50	0.71	1
	Ant2	2462	1.39	1.60	86.88	0.72	1
	Ant3	2462	1.40	1.60	87.50	0.71	1
	Ant4	2462	1.39	1.60	86.88	0.72	1
11N20MIMO	Ant1	2412	0.37	0.57	64.91	2.70	3
	Ant2	2412	0.37	0.57	64.91	2.70	3
	Ant3	2412	0.36	0.58	62.07	2.78	3
	Ant4	2412	0.37	0.58	63.79	2.70	3
	Ant1	2437	0.37	0.57	64.91	2.70	3
	Ant2	2437	0.36	0.59	61.02	2.78	3
	Ant3	2437	0.37	0.57	64.91	2.70	3
	Ant4	2437	0.37	0.60	61.67	2.70	3
	Ant1	2462	0.37	0.57	64.91	2.70	3
	Ant2	2462	0.37	0.61	60.66	2.70	3
	Ant3	2462	0.36	0.59	61.02	2.78	3
	Ant4	2462	0.37	0.57	64.91	2.70	3
11N40MIMO	Ant1	2422	0.20	0.44	45.45	5.00	5
	Ant2	2422	0.20	0.40	50.00	5.00	5
	Ant3	2422	0.20	0.43	46.51	5.00	5
	Ant4	2422	0.21	0.41	51.22	4.76	5
	Ant1	2437	0.21	0.45	46.67	4.76	5
	Ant2	2437	0.21	0.43	48.84	4.76	5
	Ant3	2437	0.20	0.40	50.00	5.00	5
	Ant4	2437	0.20	0.42	47.62	5.00	5
	Ant1	2452	0.20	0.43	46.51	5.00	5
	Ant2	2452	0.21	0.44	47.73	4.76	5
	Ant3	2452	0.21	0.45	46.67	4.76	5
	Ant4	2452	0.20	0.43	46.51	5.00	5



TestMode	Antenna	Freq(MHz)	RuSize	RuIndex	Transmission Duration [ms]	Transmission Period [ms]	Duty Cycle [%]	1/T Minimum VBW (kHz)	Final Setting for VBW (kHz)
11AX20MIMO	Ant1	2412	26Tone	RU0	0.73	0.79	92.41	1.37	3
				RU4	0.74	0.80	92.50	1.35	3
				RU8	0.73	0.79	92.41	1.37	3
			52Tone	RU37	0.59	0.65	90.77	1.69	3
				RU38	0.58	0.64	90.63	1.72	3
				RU40	0.59	0.65	90.77	1.69	3
			106Tone	RU53	0.50	0.56	89.29	2.00	3
				RU54	0.50	0.56	89.29	2.00	3
			242Tone	RU61	0.27	0.32	84.38	3.70	3
	Ant2	2412	26Tone	RU0	0.74	0.80	92.50	1.35	3
				RU4	0.73	0.79	92.41	1.37	3
				RU8	0.74	0.79	93.67	1.35	3
			52Tone	RU37	0.59	0.65	90.77	1.69	3
				RU38	0.59	0.65	90.77	1.69	3
				RU40	0.58	0.64	90.63	1.72	3
			106Tone	RU53	0.49	0.55	89.09	2.04	3
				RU54	0.50	0.55	90.91	2.00	3
			242Tone	RU61	0.27	0.32	84.38	3.70	4
	Ant3	2412	26Tone	RU0	0.73	0.79	92.41	1.37	3
				RU4	0.74	0.79	93.67	1.35	3
				RU8	0.74	0.80	92.50	1.35	3
			52Tone	RU37	0.58	0.64	90.63	1.72	3
				RU38	0.58	0.64	90.63	1.72	3
				RU40	0.58	0.64	90.63	1.72	3
			106Tone	RU53	0.50	0.56	89.29	2.00	3
				RU54	0.50	0.56	89.29	2.00	3
			242Tone	RU61	0.26	0.32	81.25	3.85	4
	Ant4	2412	26Tone	RU0	0.74	0.80	92.50	1.35	3
				RU4	0.74	0.79	93.67	1.35	3
				RU8	0.73	0.79	92.41	1.37	3
			52Tone	RU37	0.59	0.65	90.77	1.69	3
				RU38	0.59	0.65	90.77	1.69	3
				RU40	0.58	0.64	90.63	1.72	3
			106Tone	RU53	0.49	0.55	89.09	2.04	3
				RU54	0.50	0.56	89.29	2.00	3
			242Tone	RU61	0.35	0.41	85.37	2.86	3
	Ant1	2437	26Tone	RU0	0.74	0.80	92.50	1.35	3
				RU4	0.73	0.79	92.41	1.37	3
				RU8	0.35	0.41	85.37	2.86	3
			52Tone	RU37	0.59	0.65	90.77	1.69	3
				RU38	0.59	0.64	92.19	1.69	3
				RU40	0.59	0.65	90.77	1.69	3
			106Tone	RU53	0.50	0.56	89.29	2.00	3
				RU54	0.50	0.56	89.29	2.00	3
			242Tone	RU61	0.43	0.49	87.76	2.33	3
	Ant2	2437	26Tone	RU0	0.73	0.79	92.41	1.37	3
				RU4	0.74	0.80	92.50	1.35	3
				RU8	0.74	0.80	92.50	1.35	3
			52Tone	RU37	0.59	0.64	92.19	1.69	3
				RU38	0.59	0.65	90.77	1.69	3
				RU40	0.58	0.64	90.63	1.72	3
			106Tone	RU53	0.50	0.55	90.91	2.00	3
				RU54	0.49	0.55	89.09	2.04	3
			242Tone	RU61	0.43	0.49	87.76	2.33	3
	Ant3	2437	26Tone	RU0	0.74	0.80	92.50	1.35	3
				RU4	0.73	0.79	92.41	1.37	3
				RU8	0.73	0.79	92.41	1.37	3
			52Tone	RU37	0.58	0.64	90.63	1.72	3
				RU38	0.58	0.64	90.63	1.72	3
				RU40	0.59	0.65	90.77	1.69	3

CTC Laboratories, Inc.

2/F., Building 1 and 1-2/F., Building 2, Jiaquan Building, Guanlan High-Tech Park, Longhua District, Shenzhen, Guangdong, China

Tel.: (86)755-27521059

Fax: (86)755-27521011

Http://www.sz-ctc.org.cn



For anti-fake verification, please visit the official website of Certification and

Accreditation Administration of the People's Republic of China : <http://yz.cnca.cn>



11AX40MIMO	Ant4	2437	106Tone	RU53	0.50	0.56	89.29	2.00	3
				RU54	0.49	0.55	89.09	2.04	3
			242Tone	RU61	0.43	0.49	87.76	2.33	3
			26Tone	RU0	0.74	0.80	92.50	1.35	3
				RU4	0.74	0.80	92.50	1.35	3
				RU8	0.73	0.79	92.41	1.37	3
			52Tone	RU37	0.58	0.64	90.63	1.72	3
				RU38	0.58	0.64	90.63	1.72	3
				RU40	0.58	0.64	90.63	1.72	3
			106Tone	RU53	0.49	0.55	89.09	2.04	3
				RU54	0.50	0.56	89.29	2.00	3
			242Tone	RU61	0.44	0.50	88.00	2.27	3
	Ant1	2462	26Tone	RU0	0.74	0.79	93.67	1.35	3
				RU4	0.74	0.80	92.50	1.35	3
				RU8	0.74	0.80	92.50	1.35	3
			52Tone	RU37	0.59	0.65	90.77	1.69	3
				RU38	0.59	0.64	92.19	1.69	3
				RU40	0.58	0.64	90.63	1.72	3
			106Tone	RU53	0.50	0.56	89.29	2.00	3
				RU54	0.49	0.55	89.09	2.04	3
			242Tone	RU61	0.43	0.49	87.76	2.33	3
	Ant2	2462	26Tone	RU0	0.74	0.80	92.50	1.35	3
				RU4	0.74	0.80	92.50	1.35	3
				RU8	0.73	0.79	92.41	1.37	3
			52Tone	RU37	0.59	0.65	90.77	1.69	3
				RU38	0.58	0.64	90.63	1.72	3
				RU40	0.58	0.64	90.63	1.72	3
			106Tone	RU53	0.50	0.56	89.29	2.00	3
				RU54	0.50	0.56	89.29	2.00	3
			242Tone	RU61	0.44	0.49	89.80	2.27	3
	Ant3	2462	26Tone	RU0	0.74	0.80	92.50	1.35	3
				RU4	0.74	0.80	92.50	1.35	3
				RU8	0.73	0.79	92.41	1.37	3
			52Tone	RU37	0.59	0.64	92.19	1.69	3
				RU38	0.59	0.65	90.77	1.69	3
				RU40	0.58	0.64	90.63	1.72	3
			106Tone	RU53	0.49	0.55	89.09	2.04	3
				RU54	0.49	0.55	89.09	2.04	3
			242Tone	RU61	0.43	0.49	87.76	2.33	3
	Ant4	2462	26Tone	RU0	0.73	0.79	92.41	1.37	3
				RU4	0.74	0.80	92.50	1.35	3
				RU8	0.73	0.79	92.41	1.37	3
			52Tone	RU37	0.58	0.64	90.63	1.72	3
				RU38	0.59	0.64	92.19	1.69	3
				RU40	0.58	0.64	90.63	1.72	3
			106Tone	RU53	0.49	0.55	89.09	2.04	3
				RU54	0.49	0.55	89.09	2.04	3
			242Tone	RU61	0.43	0.49	87.76	2.33	3
11AX40MIMO	Ant1	2422	26Tone	RU0	0.74	0.80	92.50	1.35	4
				RU8	0.74	0.80	92.50	1.35	4
				RU17	0.74	0.80	92.50	1.35	4
			52Tone	RU37	0.58	0.64	90.63	1.72	4
				RU40	0.59	0.64	92.19	1.69	4
				RU44	0.58	0.64	90.63	1.72	4
			106Tone	RU53	0.30	0.36	83.33	3.33	4
				RU54	0.30	0.36	83.33	3.33	4
				RU56	0.50	0.56	89.29	2.00	4
			242Tone	RU61	0.43	0.49	87.76	2.33	4
				RU62	0.43	0.49	87.76	2.33	4
			484Tone	RU65	0.41	0.47	87.23	2.44	4
	Ant2	2422	26Tone	RU0	0.74	0.79	93.67	1.35	4
				RU8	0.74	0.79	93.67	1.35	4
				RU17	0.74	0.79	93.67	1.35	4
			52Tone	RU37	0.58	0.64	90.63	1.72	4
				RU40	0.59	0.65	90.77	1.69	4
				RU44	0.58	0.64	90.63	1.72	4

CTC Laboratories, Inc.

2/F., Building 1 and 1-2/F., Building 2, Jiaquan Building, Guanlan High-Tech Park, Longhua District, Shenzhen, Guangdong, China

Tel.: (86)755-27521059

Fax: (86)755-27521011

Http://www.sz-ctc.org.cn

For anti-fake verification, please visit the official website of Certification and Accreditation Administration of the People's Republic of China : <http://yz.cnca.cn>



			106Tone	RU53	0.30	0.36	83.33	3.33	4
				RU54	0.30	0.36	83.33	3.33	4
				RU56	0.49	0.55	89.09	2.04	4
			242Tone	RU61	0.43	0.49	87.76	2.33	4
				RU62	0.43	0.49	87.76	2.33	4
			484Tone	RU65	0.41	0.47	87.23	2.44	4
	Ant3	2422	26Tone	RU0	0.74	0.80	92.50	1.35	4
				RU8	0.74	0.80	92.50	1.35	4
				RU17	0.73	0.79	92.41	1.37	4
			52Tone	RU37	0.58	0.64	90.63	1.72	4
				RU40	0.58	0.64	90.63	1.72	4
				RU44	0.59	0.64	92.19	1.69	4
			106Tone	RU53	0.30	0.36	83.33	3.33	4
				RU54	0.30	0.36	83.33	3.33	4
				RU56	0.50	0.56	89.29	2.00	4
			242Tone	RU61	0.43	0.49	87.76	2.33	4
				RU62	0.43	0.49	87.76	2.33	4
			484Tone	RU65	0.41	0.47	87.23	2.44	4
	Ant4	2422	26Tone	RU0	0.74	0.80	92.50	1.35	4
				RU8	0.74	0.80	92.50	1.35	4
				RU17	0.74	0.80	92.50	1.35	4
			52Tone	RU37	0.58	0.64	90.63	1.72	4
				RU40	0.58	0.64	90.63	1.72	4
				RU44	0.59	0.65	90.77	1.69	4
			106Tone	RU53	0.30	0.36	83.33	3.33	4
				RU54	0.50	0.56	89.29	2.00	4
				RU56	0.36	0.42	85.71	2.78	4
			242Tone	RU61	0.43	0.49	87.76	2.33	4
				RU62	0.44	0.50	88.00	2.27	4
			484Tone	RU65	0.42	0.48	87.50	2.38	4
	Ant1	2437	26Tone	RU0	0.74	0.80	92.50	1.35	4
				RU8	0.74	0.80	92.50	1.35	4
				RU17	0.74	0.80	92.50	1.35	4
			52Tone	RU37	0.58	0.64	90.63	1.72	4
				RU40	0.59	0.65	90.77	1.69	4
				RU44	0.59	0.64	92.19	1.69	4
			106Tone	RU53	0.50	0.56	89.29	2.00	4
				RU54	0.50	0.56	89.29	2.00	4
				RU56	0.49	0.55	89.09	2.04	4
			242Tone	RU61	0.43	0.49	87.76	2.33	4
				RU62	0.43	0.49	87.76	2.33	4
			484Tone	RU65	0.41	0.47	87.23	2.44	4
	Ant2	2437	26Tone	RU0	0.74	0.80	92.50	1.35	4
				RU8	0.74	0.80	92.50	1.35	4
				RU17	0.73	0.79	92.41	1.37	4
			52Tone	RU37	0.59	0.65	90.77	1.69	4
				RU40	0.59	0.64	92.19	1.69	4
				RU44	0.59	0.65	90.77	1.69	4
			106Tone	RU53	0.50	0.56	89.29	2.00	4
				RU54	0.50	0.55	90.91	2.00	4
				RU56	0.49	0.55	89.09	2.04	4
			242Tone	RU61	0.43	0.49	87.76	2.33	4
				RU62	0.44	0.49	89.80	2.27	4
			484Tone	RU65	0.41	0.47	87.23	2.44	4
	Ant3	2437	26Tone	RU0	0.74	0.80	92.50	1.35	4
				RU8	0.74	0.80	92.50	1.35	4
				RU17	0.74	0.80	92.50	1.35	4
			52Tone	RU37	0.59	0.65	90.77	1.69	4
				RU40	0.59	0.65	90.77	1.69	4
				RU44	0.59	0.64	92.19	1.69	4
			106Tone	RU53	0.49	0.55	89.09	2.04	4
				RU54	0.50	0.56	89.29	2.00	4
				RU56	0.50	0.56	89.29	2.00	4
			242Tone	RU61	0.44	0.49	89.80	2.27	4
				RU62	0.43	0.49	87.76	2.33	4
			484Tone	RU65	0.42	0.48	87.50	2.38	4

CTC Laboratories, Inc.

2/F., Building 1 and 1-2/F., Building 2, Jiaquan Building, Guanlan High-Tech Park, Longhua District, Shenzhen, Guangdong, China

Tel.: (86)755-27521059

Fax: (86)755-27521011

Http://www.sz-ctc.org.cn

For anti-fake verification, please visit the official website of Certification and Accreditation Administration of the People's Republic of China : <http://yz.cnca.cn>



	Ant4	2437	26Tone	RU0	0.74	0.80	92.50	1.35	4
				RU8	0.74	0.80	92.50	1.35	4
				RU17	0.74	0.79	93.67	1.35	4
			52Tone	RU37	0.59	0.65	90.77	1.69	4
				RU40	0.59	0.65	90.77	1.69	4
				RU44	0.59	0.64	92.19	1.69	4
			106Tone	RU53	0.50	0.55	90.91	2.00	4
				RU54	0.50	0.56	89.29	2.00	4
				RU56	0.50	0.56	89.29	2.00	4
			242Tone	RU61	0.44	0.50	88.00	2.27	4
				RU62	0.43	0.49	87.76	2.33	4
			484Tone	RU65	0.41	0.47	87.23	2.44	4
	Ant1	2452	26Tone	RU0	0.74	0.80	92.50	1.35	4
				RU8	0.74	0.80	92.50	1.35	4
				RU17	0.74	0.80	92.50	1.35	4
			52Tone	RU37	0.58	0.64	90.63	1.72	4
				RU40	0.59	0.65	90.77	1.69	4
				RU44	0.58	0.64	90.63	1.72	4
			106Tone	RU53	0.50	0.56	89.29	2.00	4
				RU54	0.50	0.56	89.29	2.00	4
				RU56	0.50	0.56	89.29	2.00	4
			242Tone	RU61	0.44	0.49	89.80	2.27	4
				RU62	0.44	0.49	89.80	2.27	4
			484Tone	RU65	0.41	0.47	87.23	2.44	4
	Ant2	2452	26Tone	RU0	0.74	0.80	92.50	1.35	4
				RU8	0.74	0.80	92.50	1.35	4
				RU17	0.73	0.79	92.41	1.37	4
			52Tone	RU37	0.59	0.65	90.77	1.69	4
				RU40	0.59	0.65	90.77	1.69	4
				RU44	0.58	0.64	90.63	1.72	4
			106Tone	RU53	0.49	0.55	89.09	2.04	4
				RU54	0.50	0.55	90.91	2.00	4
				RU56	0.50	0.56	89.29	2.00	4
			242Tone	RU61	0.43	0.49	87.76	2.33	4
				RU62	0.44	0.50	88.00	2.27	4
			484Tone	RU65	0.42	0.48	87.50	2.38	4
	Ant3	2452	26Tone	RU0	0.74	0.79	93.67	1.35	4
				RU8	0.74	0.80	92.50	1.35	4
				RU17	0.73	0.79	92.41	1.37	4
			52Tone	RU37	0.59	0.65	90.77	1.69	4
				RU40	0.59	0.65	90.77	1.69	4
				RU44	0.58	0.64	90.63	1.72	4
			106Tone	RU53	0.50	0.56	89.29	2.00	4
				RU54	0.49	0.55	89.09	2.04	4
				RU56	0.50	0.56	89.29	2.00	4
			242Tone	RU61	0.43	0.49	87.76	2.33	4
				RU62	0.43	0.49	87.76	2.33	4
			484Tone	RU65	0.41	0.47	87.23	2.44	4
	Ant4	2452	26Tone	RU0	0.74	0.80	92.50	1.35	4
				RU8	0.74	0.80	92.50	1.35	4
				RU17	0.74	0.80	92.50	1.35	4
			52Tone	RU37	0.58	0.64	90.63	1.72	4
				RU40	0.59	0.65	90.77	1.69	4
				RU44	0.59	0.64	92.19	1.69	4
			106Tone	RU53	0.50	0.56	89.29	2.00	4
				RU54	0.50	0.56	89.29	2.00	4
				RU56	0.49	0.55	89.09	2.04	4
			242Tone	RU61	0.44	0.49	89.80	2.27	4
				RU62	0.43	0.49	87.76	2.33	4
			484Tone	RU65	0.42	0.48	87.50	2.38	4



3.9. Antenna Requirement

Requirement

FCC CFR Title 47 Part 15 Subpart C Section 15.203

An intentional radiator shall be designed to ensure that no antenna other than that furnished by the responsible party shall be used with the device. The use of a permanently attached antenna or of antenna that uses a unique coupling to the intentional radiator, the manufacturer may design the unit so that a broken antenna can be replaced by the user, but the use of a standard antenna jack or electrical connector is prohibited.

FCC CFR Title 47 Part 15 Subpart C Section 15.247(c) (1)(i)

(i) Systems operating in the 2400~2483.5 MHz band that is used exclusively for fixed. Point-to-point operations may employ transmitting antennas with directional gain greater than 6dBi provided the maximum conducted output power of the intentional radiator is reduced by 1 dB for every 3 dB that the directional gain of the antenna exceeds 6dBi.

Test Result

Complies

*****THE END*****