


## Appendix A3: Min emission bandwidth

### Test Result B4

| TestMode   | Antenna | Frequency[MHz] | 6db EBW<br>[MHz] | FL[MHz] | FH[MHz] | Limit[MHz] | Verdict |
|------------|---------|----------------|------------------|---------|---------|------------|---------|
| 11A        | Ant1    | 5745           | 15.92            | 5737.16 | 5753.08 | 0.5        | PASS    |
| 11A        | Ant1    | 5785           | 16.04            | 5777.04 | 5793.08 | 0.5        | PASS    |
| 11A        | Ant1    | 5825           | 16.32            | 5816.76 | 5833.08 | 0.5        | PASS    |
| 11N20SISO  | Ant1    | 5745           | 16.16            | 5737.16 | 5753.32 | 0.5        | PASS    |
| 11N20SISO  | Ant1    | 5785           | 16.28            | 5777.16 | 5793.44 | 0.5        | PASS    |
| 11N20SISO  | Ant1    | 5825           | 17.28            | 5816.40 | 5833.68 | 0.5        | PASS    |
| 11N40SISO  | Ant1    | 5755           | 35.52            | 5737.32 | 5772.84 | 0.5        | PASS    |
| 11N40SISO  | Ant1    | 5795           | 34.48            | 5778.04 | 5812.52 | 0.5        | PASS    |
| 11AC20SISO | Ant1    | 5745           | 15.28            | 5737.40 | 5752.68 | 0.5        | PASS    |
| 11AC20SISO | Ant1    | 5785           | 13.84            | 5777.40 | 5791.24 | 0.5        | PASS    |
| 11AC20SISO | Ant1    | 5825           | 13.88            | 5818.60 | 5832.48 | 0.5        | PASS    |
| 11AC40SISO | Ant1    | 5755           | 34.96            | 5737.48 | 5772.44 | 0.5        | PASS    |
| 11AC40SISO | Ant1    | 5795           | 35.20            | 5777.32 | 5812.52 | 0.5        | PASS    |
| 11AC80SISO | Ant1    | 5775           | 76.00            | 5736.76 | 5812.76 | 0.5        | PASS    |
| 11AX20SISO | Ant1    | 5745           | 18.08            | 5736.16 | 5754.24 | 0.5        | PASS    |
| 11AX20SISO | Ant1    | 5785           | 14.56            | 5778.60 | 5793.16 | 0.5        | PASS    |
| 11AX20SISO | Ant1    | 5825           | 12.64            | 5818.60 | 5831.24 | 0.5        | PASS    |
| 11AX40SISO | Ant1    | 5755           | 35.44            | 5737.88 | 5773.32 | 0.5        | PASS    |
| 11AX40SISO | Ant1    | 5795           | 37.36            | 5776.20 | 5813.56 | 0.5        | PASS    |
| 11AX80SISO | Ant1    | 5775           | 76.80            | 5736.12 | 5812.92 | 0.5        | PASS    |



## Test Graphs B4

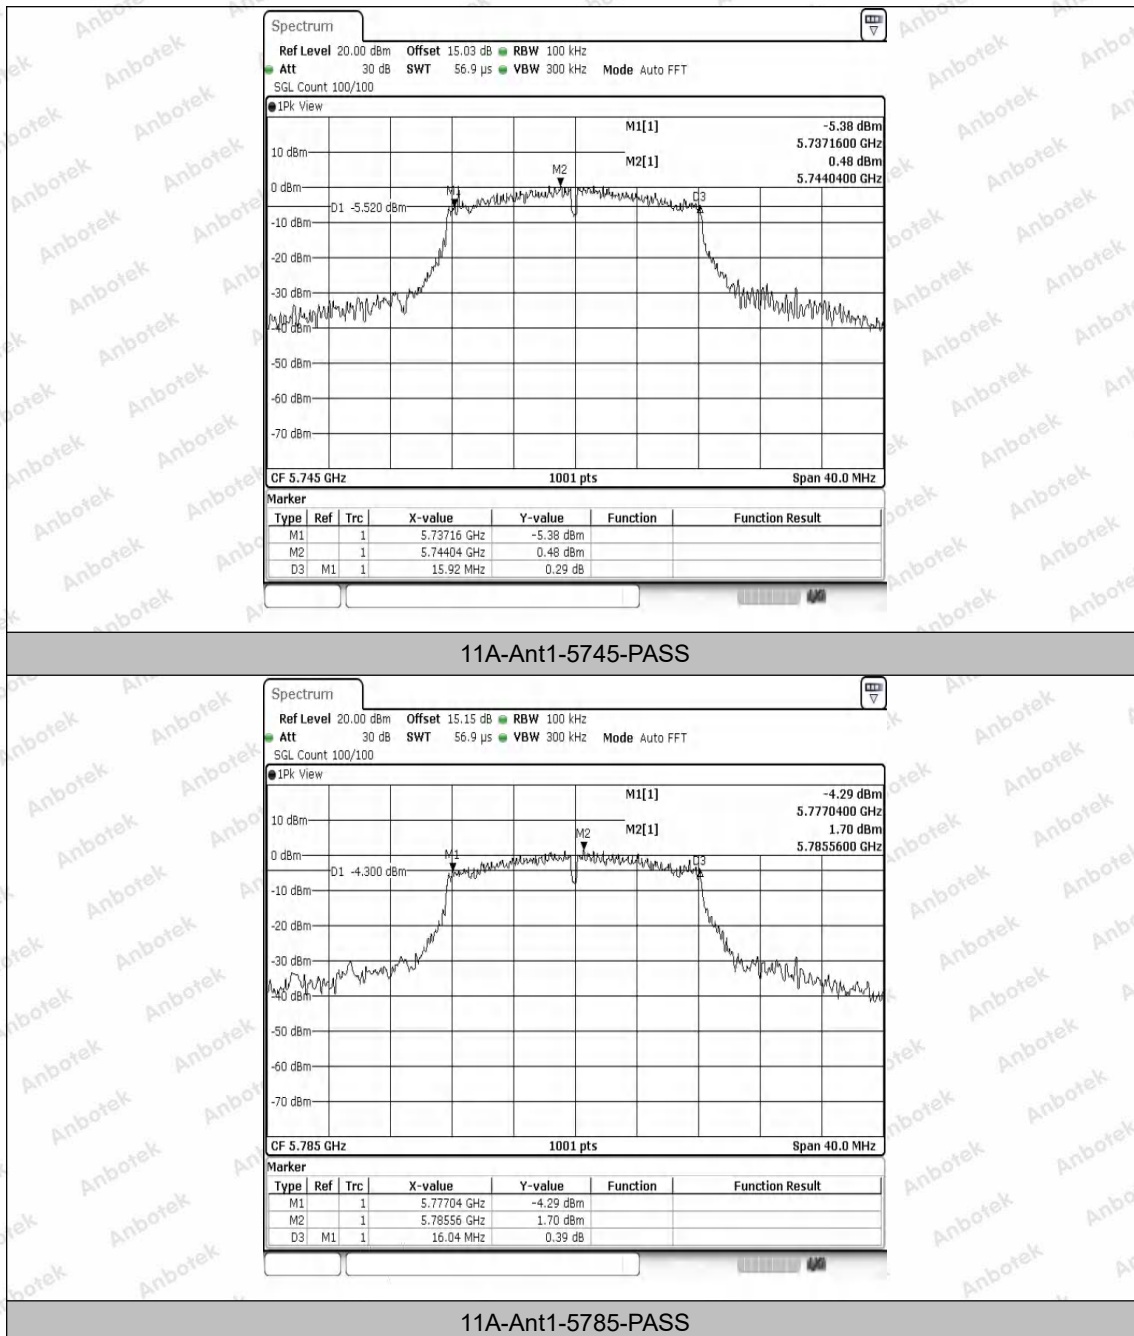


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn

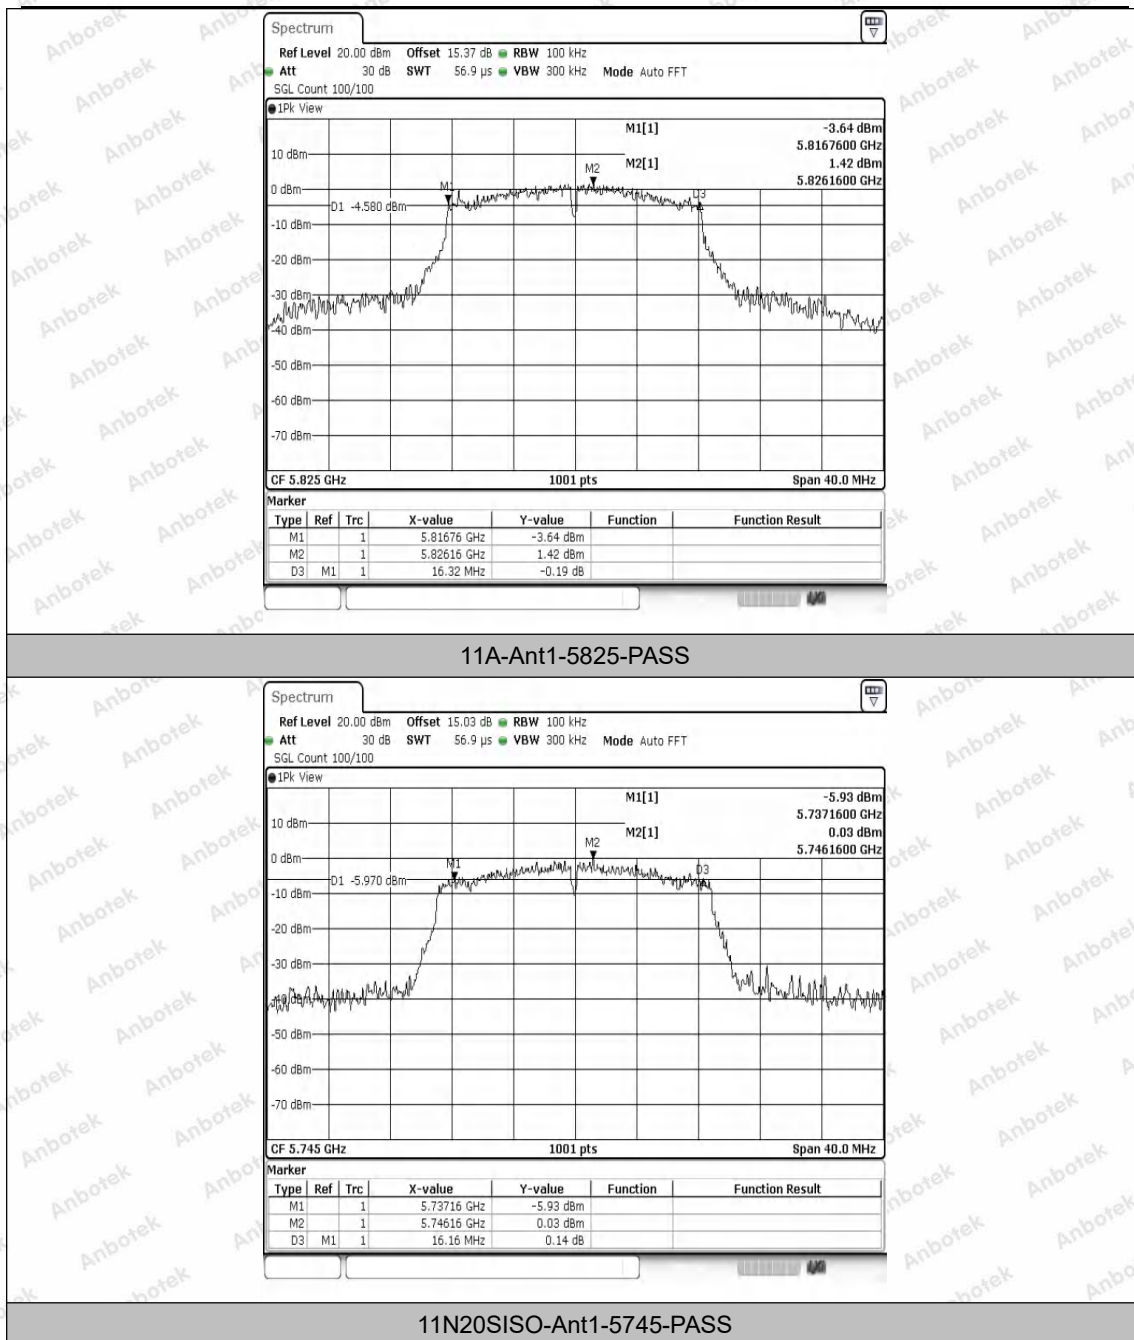


**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn

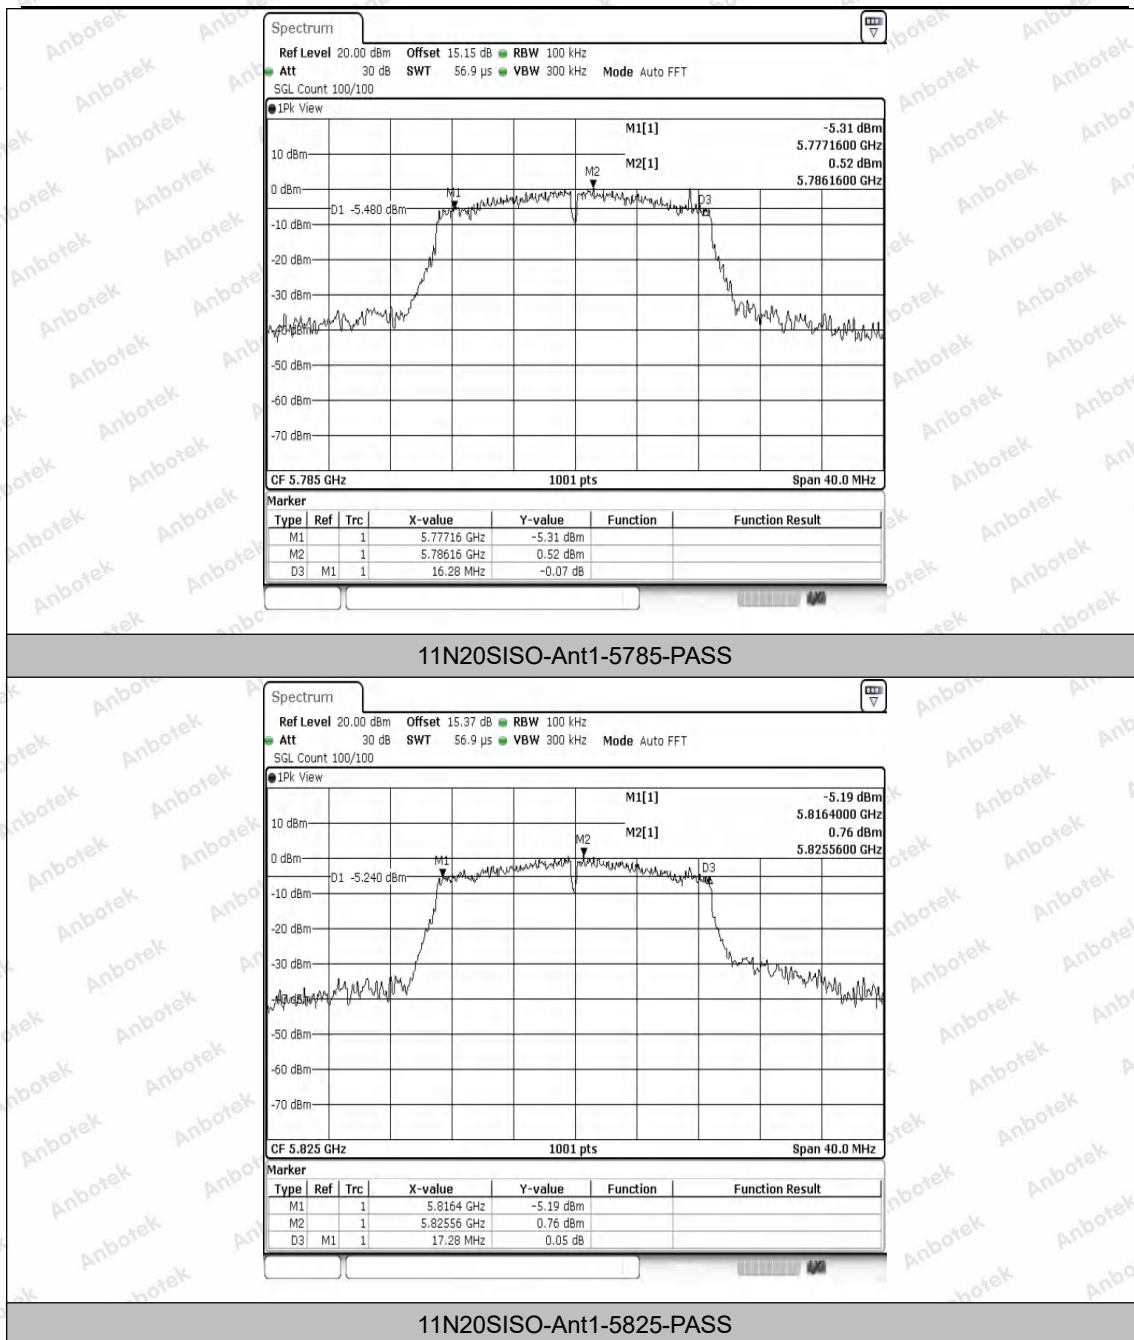


**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn

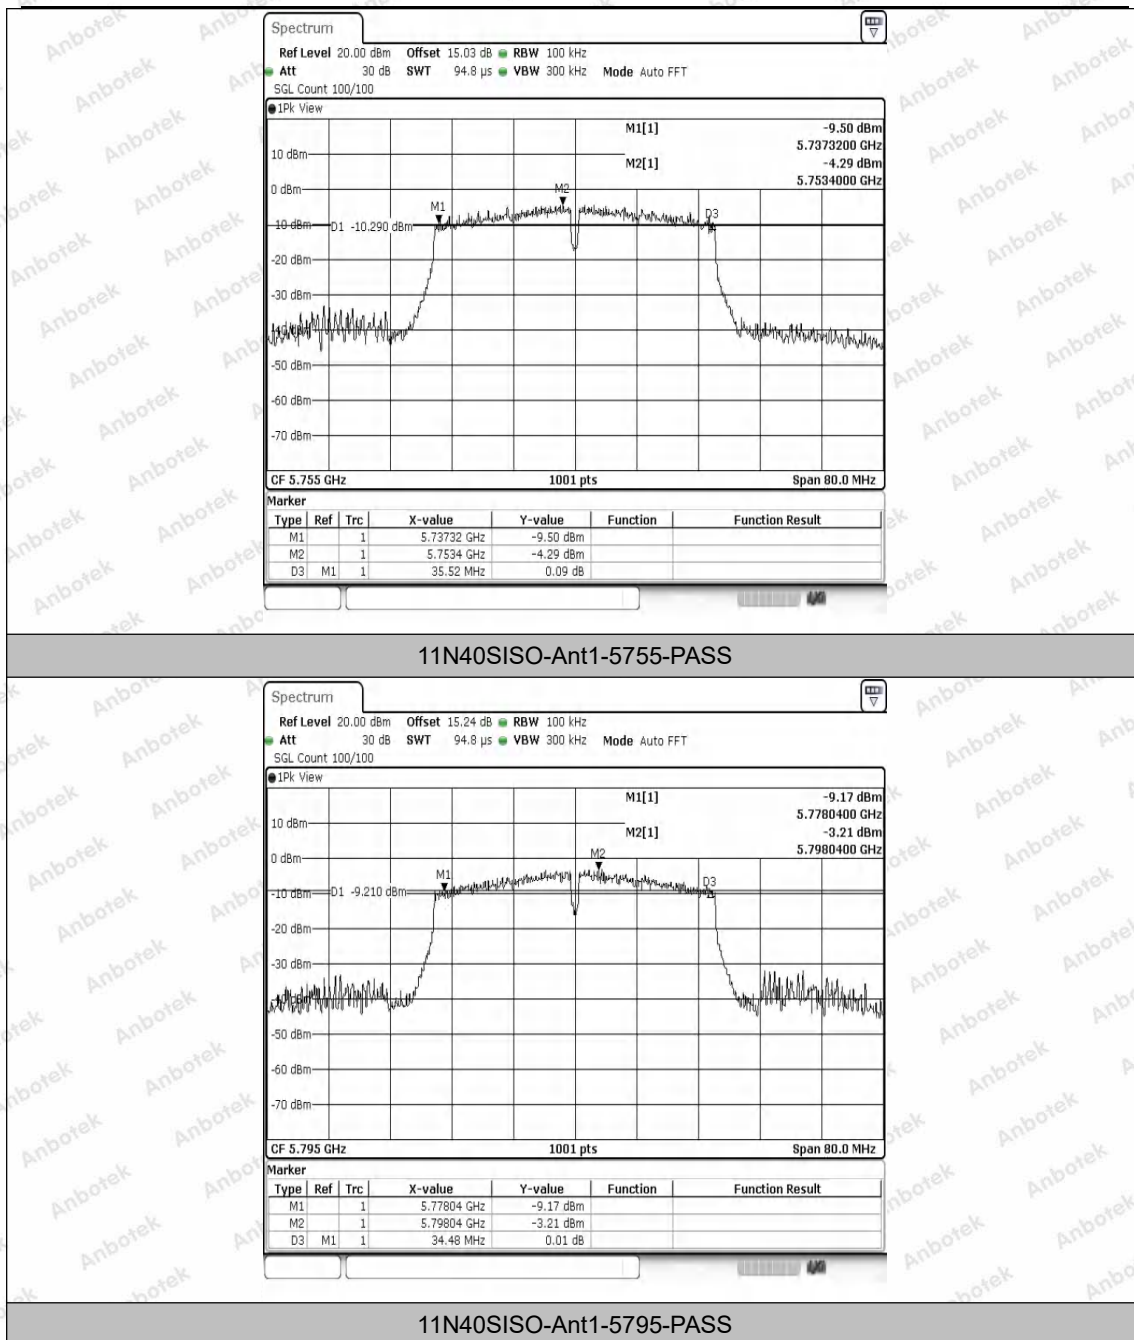


**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn

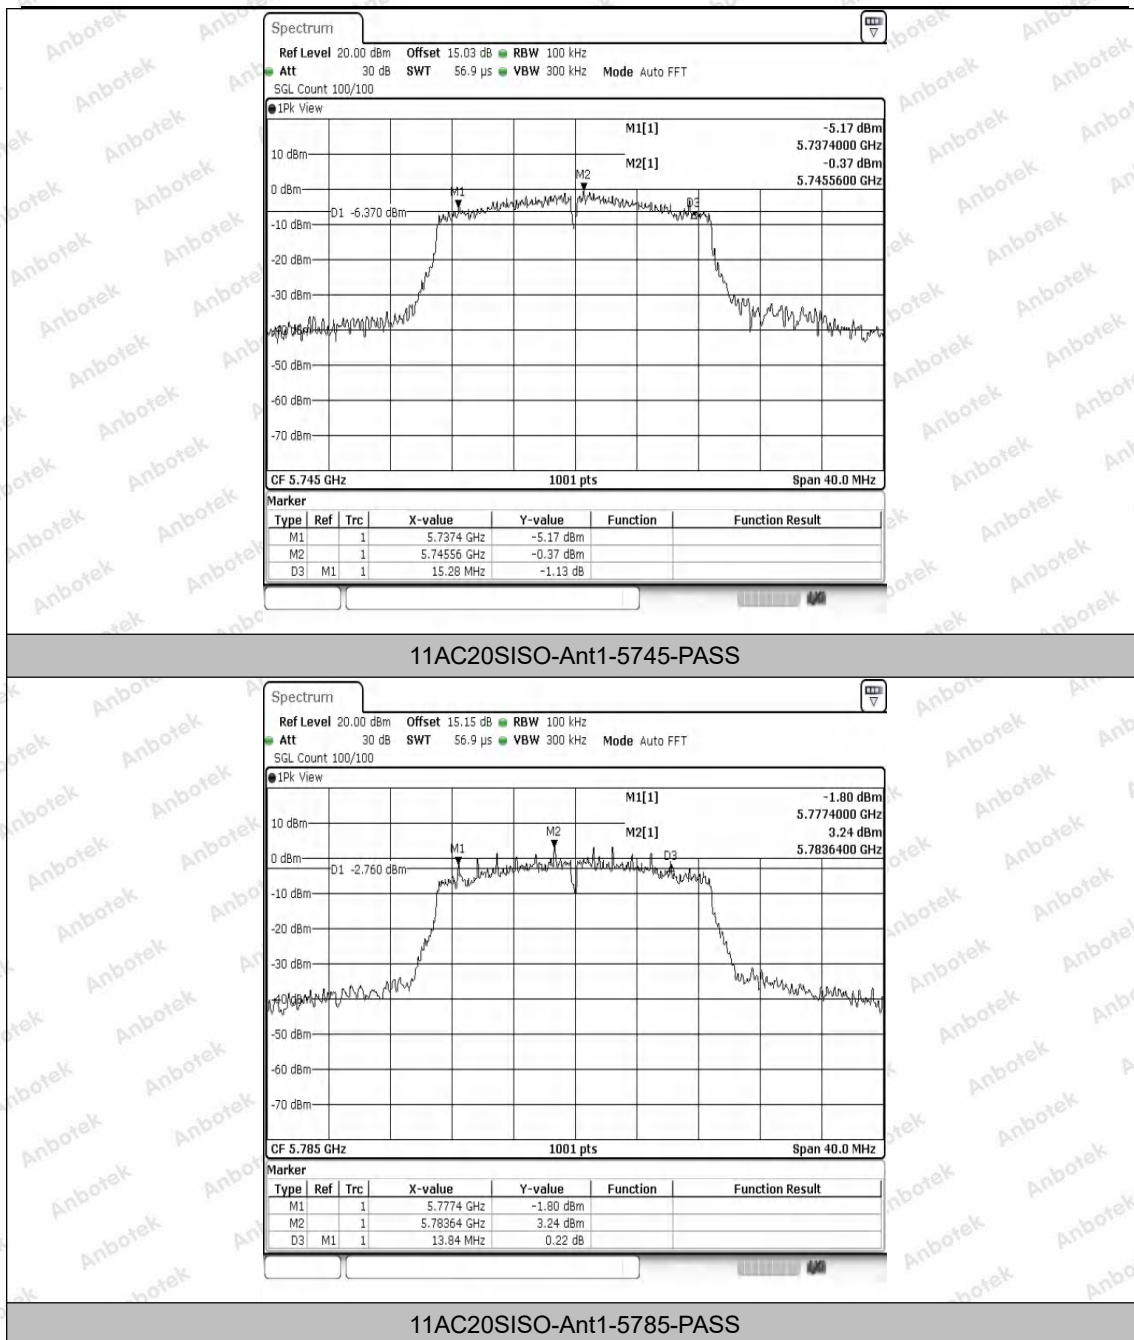


**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn

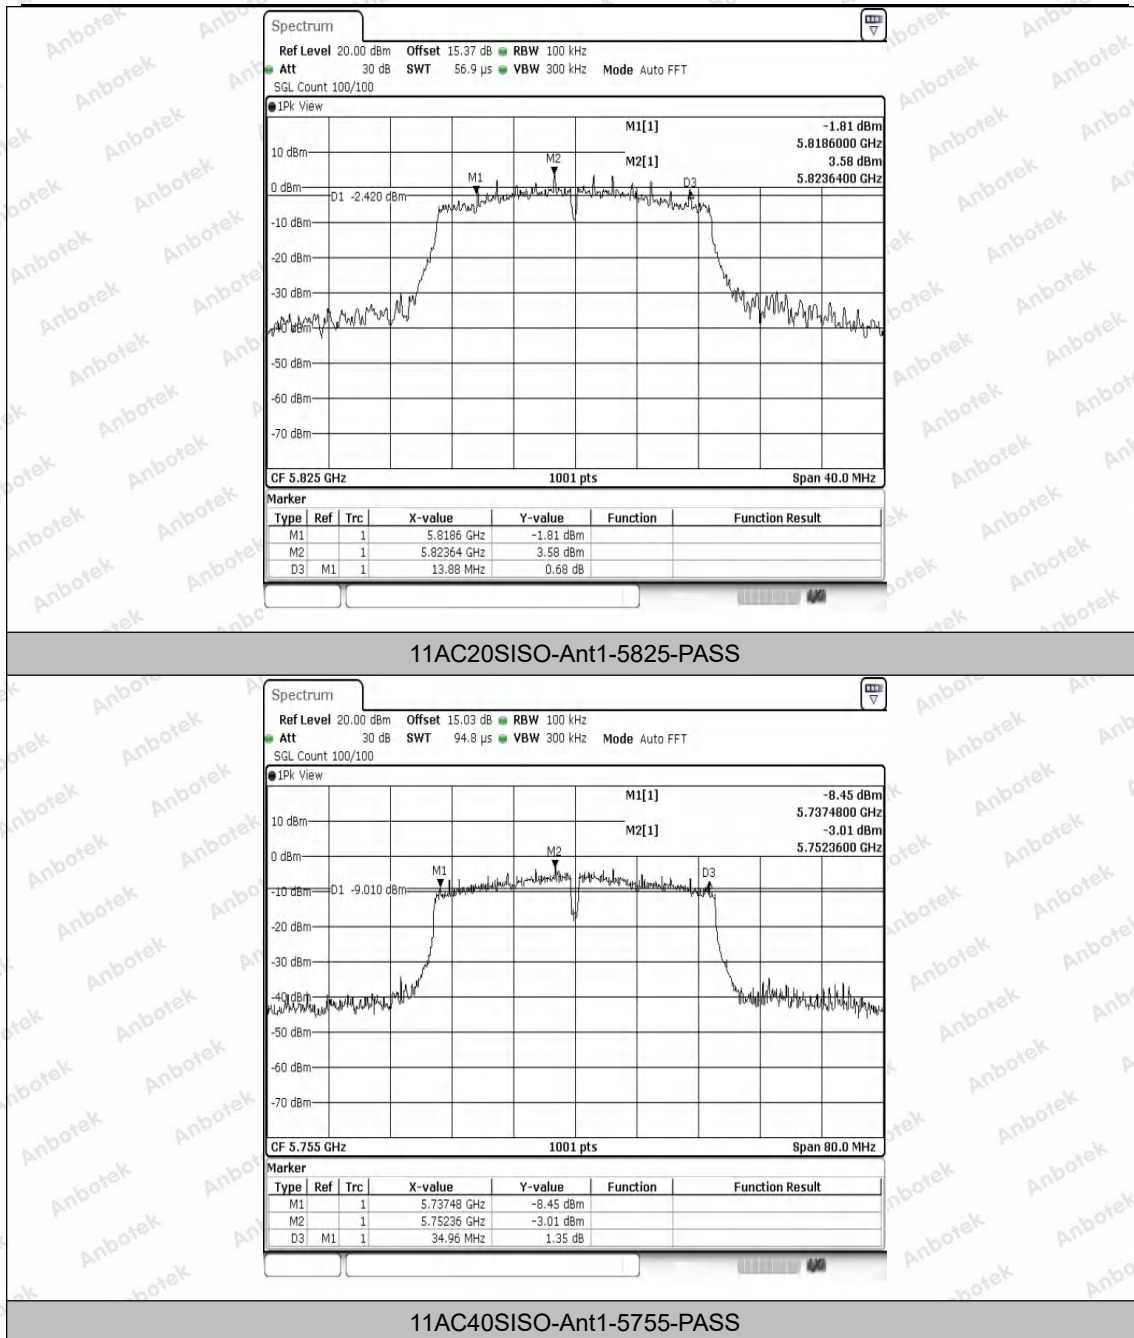


**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn

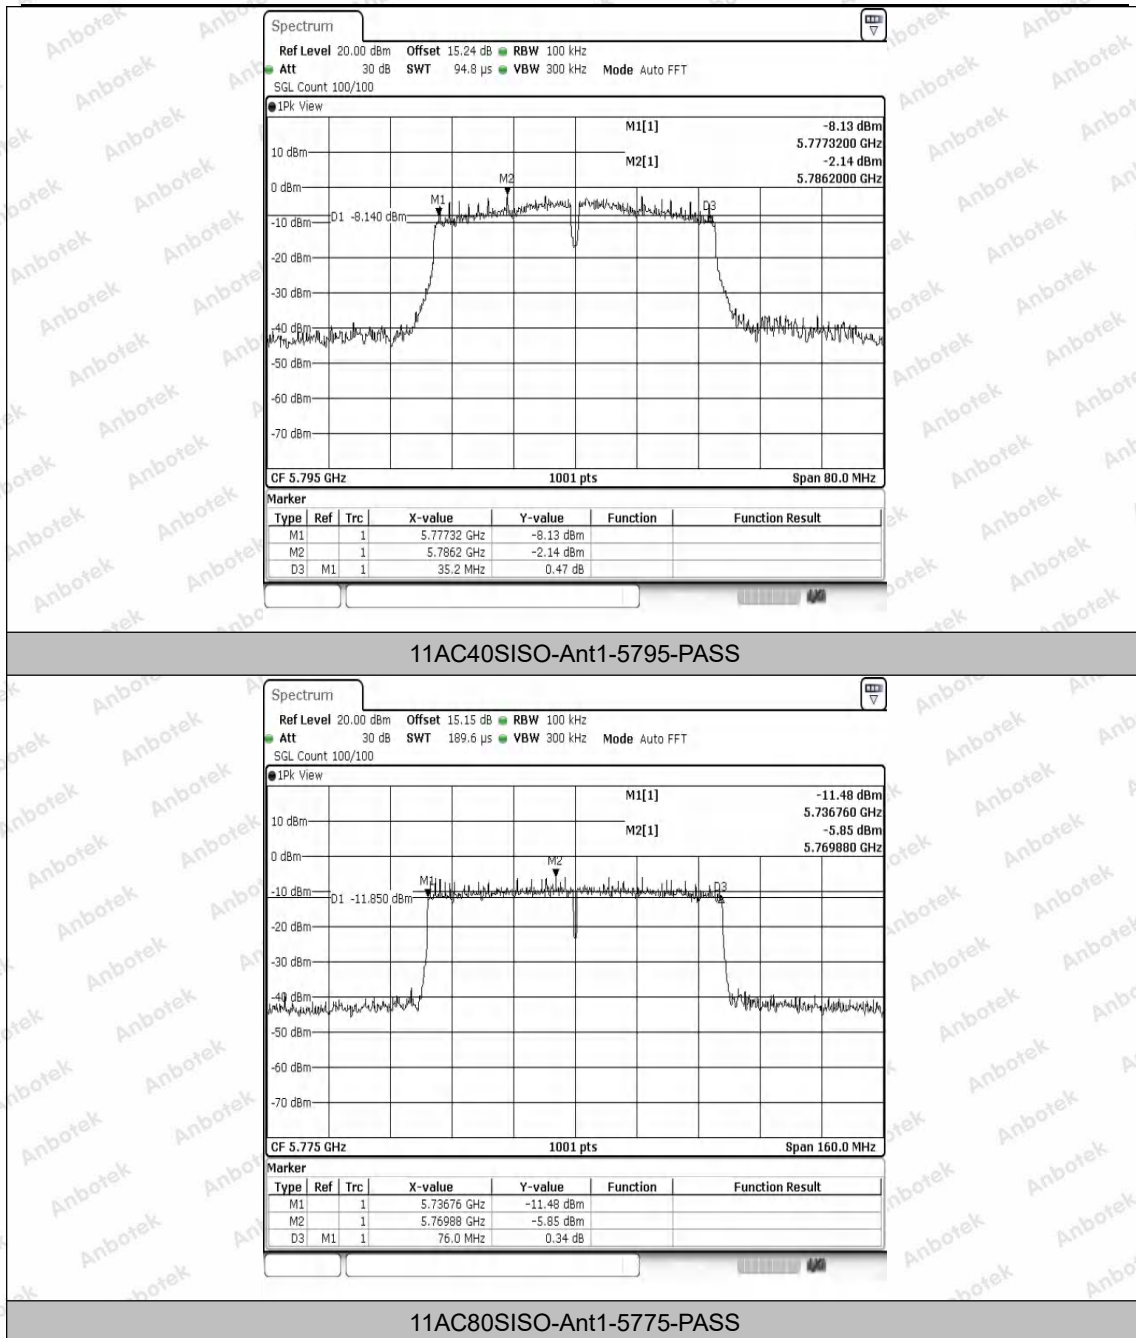


**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn

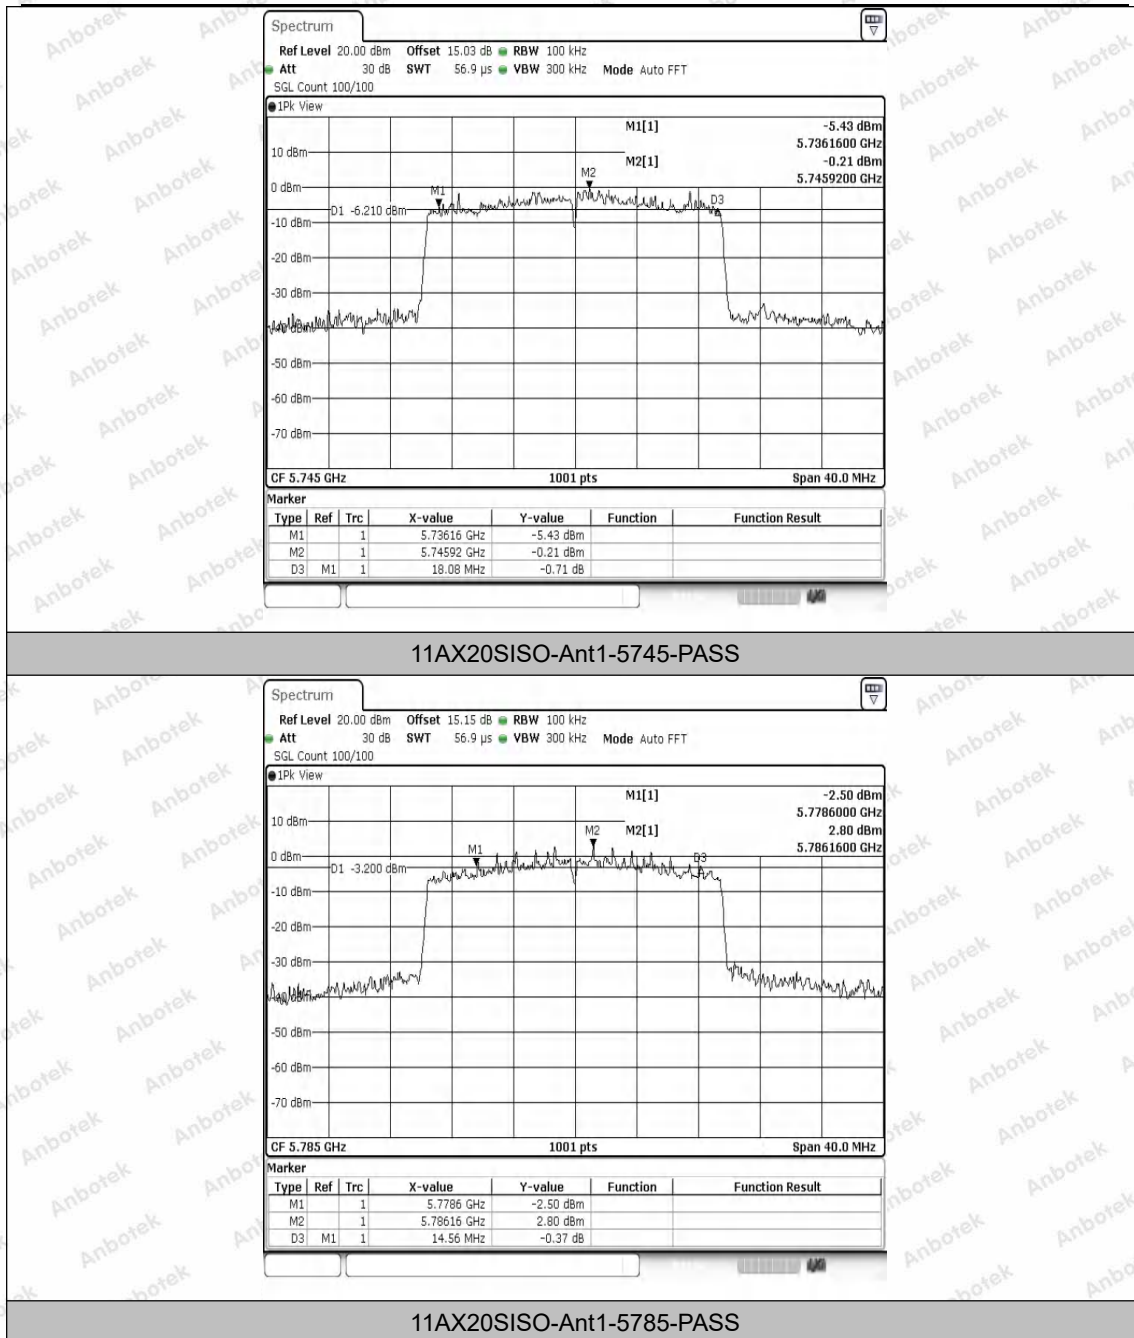


**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn

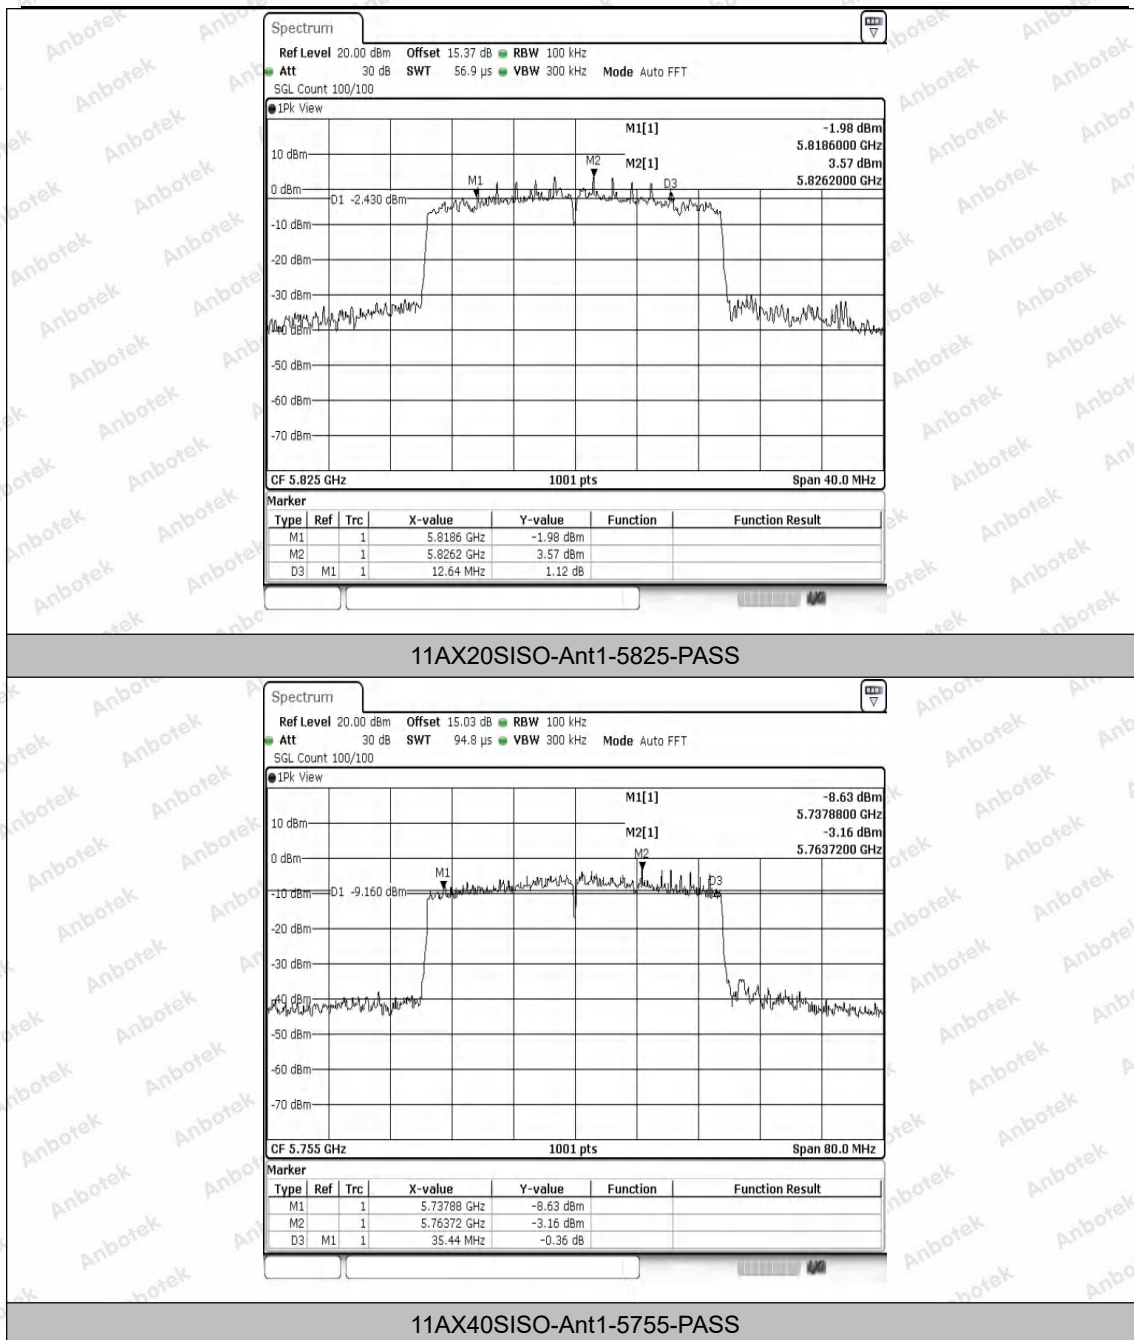


**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn



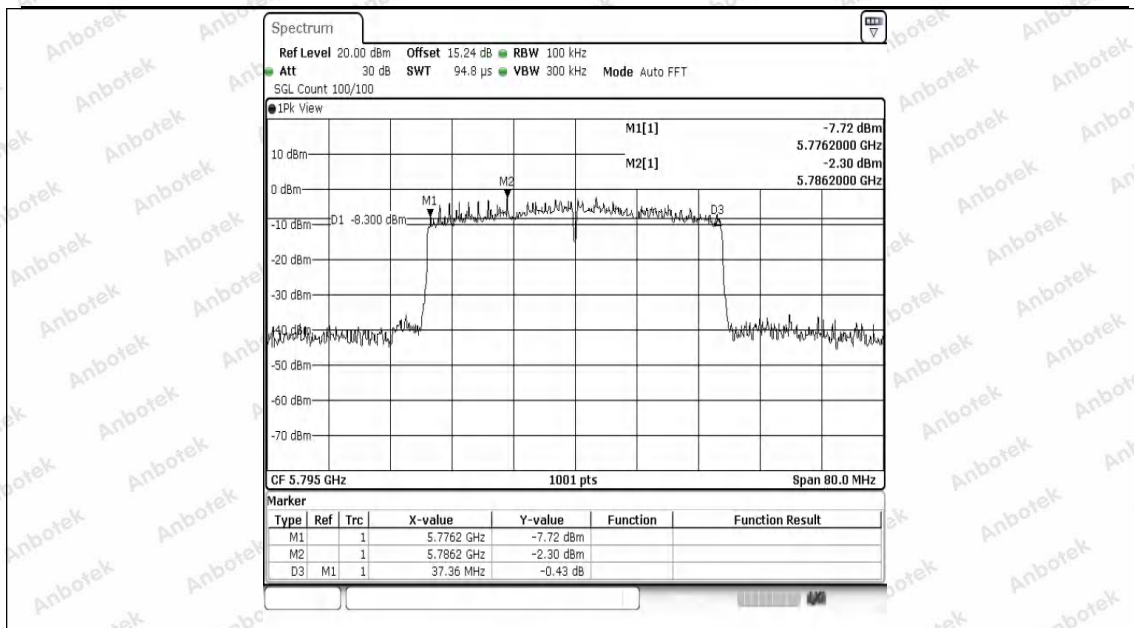

## 11AX40SISO-Ant1-5795-PASS

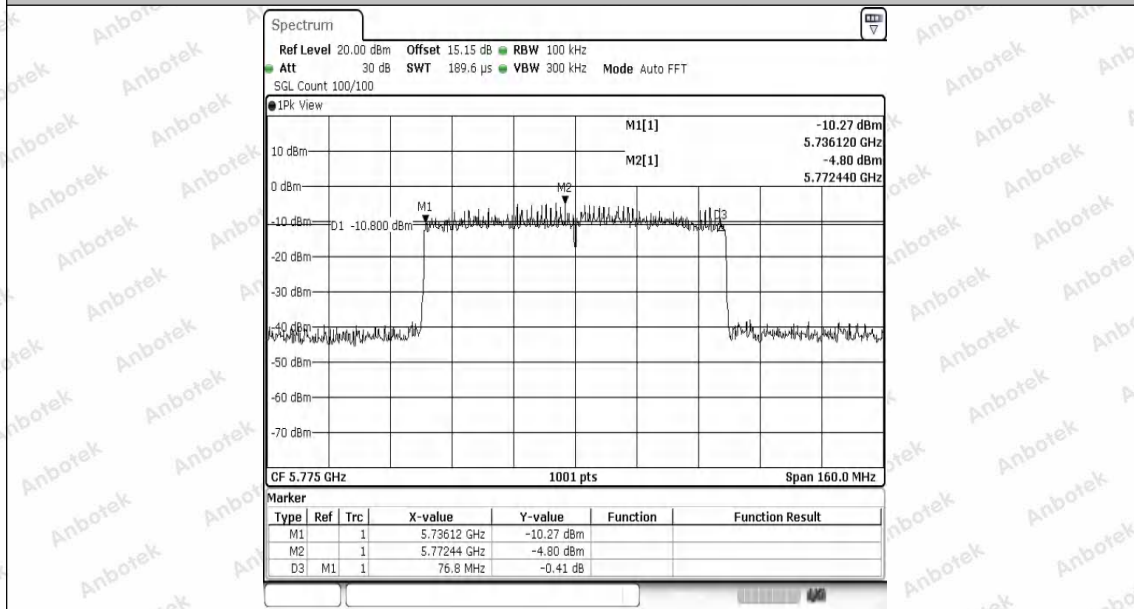

## 11AX80SISO-Ant1-5775-PASS

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



## Appendix B: Duty Cycle

### Test Result

| TestMode   | Antenna | Frequency<br>[MHz] | Transmission<br>Duration [ms] | Transmission<br>Period [ms] | Duty<br>Cycle [%] | Dc Factor<br>[%] | 1/T  |
|------------|---------|--------------------|-------------------------------|-----------------------------|-------------------|------------------|------|
| 11A        | Ant1    | 5180               | 1.39                          | 1.91                        | 72.77             | 1.38             | 0.72 |
| 11A        | Ant1    | 5200               | 1.39                          | 1.91                        | 72.77             | 1.38             | 0.72 |
| 11A        | Ant1    | 5240               | 1.39                          | 1.91                        | 72.77             | 1.38             | 0.72 |
| 11A        | Ant1    | 5260               | 1.39                          | 1.92                        | 72.40             | 1.40             | 0.72 |
| 11A        | Ant1    | 5280               | 1.39                          | 1.91                        | 72.77             | 1.38             | 0.72 |
| 11A        | Ant1    | 5320               | 1.39                          | 1.92                        | 72.40             | 1.40             | 0.72 |
| 11A        | Ant1    | 5500               | 1.40                          | 1.92                        | 72.92             | 1.37             | 0.71 |
| 11A        | Ant1    | 5580               | 1.40                          | 1.92                        | 72.92             | 1.37             | 0.71 |
| 11A        | Ant1    | 5700               | 1.39                          | 1.92                        | 72.40             | 1.40             | 0.72 |
| 11A        | Ant1    | 5745               | 1.39                          | 1.92                        | 72.40             | 1.40             | 0.72 |
| 11A        | Ant1    | 5785               | 1.39                          | 1.91                        | 72.77             | 1.38             | 0.72 |
| 11A        | Ant1    | 5825               | 1.39                          | 1.92                        | 72.40             | 1.40             | 0.72 |
| 11N20SISO  | Ant1    | 5180               | 1.30                          | 1.86                        | 69.89             | 1.56             | 0.77 |
| 11N20SISO  | Ant1    | 5200               | 1.30                          | 1.82                        | 71.43             | 1.46             | 0.77 |
| 11N20SISO  | Ant1    | 5240               | 1.30                          | 1.87                        | 69.52             | 1.58             | 0.77 |
| 11N20SISO  | Ant1    | 5260               | 1.30                          | 1.82                        | 71.43             | 1.46             | 0.77 |
| 11N20SISO  | Ant1    | 5280               | 1.30                          | 1.83                        | 71.04             | 1.48             | 0.77 |
| 11N20SISO  | Ant1    | 5320               | 1.30                          | 1.82                        | 71.43             | 1.46             | 0.77 |
| 11N20SISO  | Ant1    | 5500               | 1.30                          | 1.82                        | 71.43             | 1.46             | 0.77 |
| 11N20SISO  | Ant1    | 5580               | 1.30                          | 1.83                        | 71.04             | 1.48             | 0.77 |
| 11N20SISO  | Ant1    | 5700               | 1.30                          | 1.82                        | 71.43             | 1.46             | 0.77 |
| 11N20SISO  | Ant1    | 5745               | 1.30                          | 1.82                        | 71.43             | 1.46             | 0.77 |
| 11N20SISO  | Ant1    | 5785               | 1.30                          | 1.82                        | 71.43             | 1.46             | 0.77 |
| 11N20SISO  | Ant1    | 5825               | 1.30                          | 1.85                        | 70.27             | 1.53             | 0.77 |
| 11N40SISO  | Ant1    | 5190               | 0.65                          | 1.17                        | 55.56             | 2.55             | 1.54 |
| 11N40SISO  | Ant1    | 5230               | 0.65                          | 1.15                        | 56.52             | 2.48             | 1.54 |
| 11N40SISO  | Ant1    | 5270               | 0.64                          | 1.17                        | 54.70             | 2.62             | 1.56 |
| 11N40SISO  | Ant1    | 5310               | 0.64                          | 1.17                        | 54.70             | 2.62             | 1.56 |
| 11N40SISO  | Ant1    | 5510               | 0.65                          | 1.20                        | 54.17             | 2.66             | 1.54 |
| 11N40SISO  | Ant1    | 5550               | 0.65                          | 1.15                        | 56.52             | 2.48             | 1.54 |
| 11N40SISO  | Ant1    | 5670               | 0.64                          | 1.13                        | 56.64             | 2.47             | 1.56 |
| 11N40SISO  | Ant1    | 5755               | 0.64                          | 1.17                        | 54.70             | 2.62             | 1.56 |
| 11N40SISO  | Ant1    | 5795               | 0.64                          | 1.16                        | 55.17             | 2.58             | 1.56 |
| 11AC20SISO | Ant1    | 5180               | 1.31                          | 1.89                        | 69.31             | 1.59             | 0.76 |
| 11AC20SISO | Ant1    | 5200               | 1.31                          | 1.83                        | 71.58             | 1.45             | 0.76 |
| 11AC20SISO | Ant1    | 5240               | 1.31                          | 1.82                        | 71.98             | 1.43             | 0.76 |
| 11AC20SISO | Ant1    | 5260               | 1.31                          | 1.83                        | 71.58             | 1.45             | 0.76 |

### Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
 400-003-0500  
 www.anbotek.com.cn



|            |      |      |      |      |       |      |      |
|------------|------|------|------|------|-------|------|------|
| 11AC20SISO | Ant1 | 5280 | 1.31 | 1.84 | 71.20 | 1.48 | 0.76 |
| 11AC20SISO | Ant1 | 5320 | 1.31 | 1.83 | 71.58 | 1.45 | 0.76 |
| 11AC20SISO | Ant1 | 5500 | 1.31 | 1.85 | 70.81 | 1.50 | 0.76 |
| 11AC20SISO | Ant1 | 5580 | 1.31 | 1.82 | 71.98 | 1.43 | 0.76 |
| 11AC20SISO | Ant1 | 5700 | 1.31 | 1.85 | 70.81 | 1.50 | 0.76 |
| 11AC20SISO | Ant1 | 5745 | 1.31 | 1.87 | 70.05 | 1.55 | 0.76 |
| 11AC20SISO | Ant1 | 5785 | 1.31 | 1.82 | 71.98 | 1.43 | 0.76 |
| 11AC20SISO | Ant1 | 5825 | 1.31 | 1.83 | 71.58 | 1.45 | 0.76 |
| 11AC40SISO | Ant1 | 5190 | 0.65 | 1.17 | 55.56 | 2.55 | 1.54 |
| 11AC40SISO | Ant1 | 5230 | 0.65 | 1.17 | 55.56 | 2.55 | 1.54 |
| 11AC40SISO | Ant1 | 5270 | 0.65 | 1.16 | 56.03 | 2.52 | 1.54 |
| 11AC40SISO | Ant1 | 5310 | 0.65 | 1.19 | 54.62 | 2.63 | 1.54 |
| 11AC40SISO | Ant1 | 5510 | 0.66 | 1.20 | 55.00 | 2.60 | 1.52 |
| 11AC40SISO | Ant1 | 5550 | 0.66 | 1.20 | 55.00 | 2.60 | 1.52 |
| 11AC40SISO | Ant1 | 5670 | 0.65 | 1.18 | 55.08 | 2.59 | 1.54 |
| 11AC40SISO | Ant1 | 5755 | 0.65 | 1.18 | 55.08 | 2.59 | 1.54 |
| 11AC40SISO | Ant1 | 5795 | 0.65 | 1.18 | 55.08 | 2.59 | 1.54 |
| 11AC80SISO | Ant1 | 5210 | 0.32 | 0.71 | 45.07 | 3.46 | 3.13 |
| 11AC80SISO | Ant1 | 5290 | 0.33 | 0.70 | 47.14 | 3.27 | 3.03 |
| 11AC80SISO | Ant1 | 5530 | 0.33 | 0.73 | 45.21 | 3.45 | 3.03 |
| 11AC80SISO | Ant1 | 5610 | 0.33 | 0.75 | 44.00 | 3.57 | 3.03 |
| 11AC80SISO | Ant1 | 5775 | 0.32 | 0.68 | 47.06 | 3.27 | 3.13 |
| 11AX20SISO | Ant1 | 5180 | 1.02 | 1.58 | 64.56 | 1.90 | 0.98 |
| 11AX20SISO | Ant1 | 5200 | 1.01 | 1.54 | 65.58 | 1.83 | 0.99 |
| 11AX20SISO | Ant1 | 5240 | 1.02 | 1.52 | 67.11 | 1.73 | 0.98 |
| 11AX20SISO | Ant1 | 5260 | 1.01 | 1.53 | 66.01 | 1.80 | 0.99 |
| 11AX20SISO | Ant1 | 5280 | 1.02 | 1.35 | 75.56 | 1.22 | 0.98 |
| 11AX20SISO | Ant1 | 5320 | 1.02 | 1.54 | 66.23 | 1.79 | 0.98 |
| 11AX20SISO | Ant1 | 5500 | 1.02 | 1.41 | 72.34 | 1.41 | 0.98 |
| 11AX20SISO | Ant1 | 5580 | 1.01 | 1.53 | 66.01 | 1.80 | 0.99 |
| 11AX20SISO | Ant1 | 5700 | 1.01 | 1.53 | 66.01 | 1.80 | 0.99 |
| 11AX20SISO | Ant1 | 5745 | 1.01 | 1.52 | 66.45 | 1.78 | 0.99 |
| 11AX20SISO | Ant1 | 5785 | 1.02 | 1.52 | 67.11 | 1.73 | 0.98 |
| 11AX20SISO | Ant1 | 5825 | 1.01 | 1.53 | 66.01 | 1.80 | 0.99 |
| 11AX40SISO | Ant1 | 5190 | 0.54 | 1.04 | 51.92 | 2.85 | 1.85 |
| 11AX40SISO | Ant1 | 5230 | 0.54 | 1.04 | 51.92 | 2.85 | 1.85 |
| 11AX40SISO | Ant1 | 5270 | 0.54 | 1.06 | 50.94 | 2.93 | 1.85 |
| 11AX40SISO | Ant1 | 5310 | 0.54 | 1.06 | 50.94 | 2.93 | 1.85 |
| 11AX40SISO | Ant1 | 5510 | 0.53 | 1.05 | 50.48 | 2.97 | 1.89 |
| 11AX40SISO | Ant1 | 5550 | 0.54 | 0.94 | 57.45 | 2.41 | 1.85 |
| 11AX40SISO | Ant1 | 5670 | 0.53 | 1.06 | 50.00 | 3.01 | 1.89 |
| 11AX40SISO | Ant1 | 5755 | 0.53 | 1.04 | 50.96 | 2.93 | 1.89 |

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
 400-003-0500  
 www.anbotek.com.cn



|            |      |      |      |      |       |      |      |
|------------|------|------|------|------|-------|------|------|
| 11AX40SISO | Ant1 | 5795 | 0.53 | 1.05 | 50.48 | 2.97 | 1.89 |
| 11AX80SISO | Ant1 | 5210 | 0.29 | 0.73 | 39.73 | 4.01 | 3.45 |
| 11AX80SISO | Ant1 | 5290 | 0.29 | 0.81 | 35.80 | 4.46 | 3.45 |
| 11AX80SISO | Ant1 | 5530 | 0.29 | 0.81 | 35.80 | 4.46 | 3.45 |
| 11AX80SISO | Ant1 | 5610 | 0.29 | 1.56 | 18.59 | 7.31 | 3.45 |
| 11AX80SISO | Ant1 | 5775 | 0.29 | 0.81 | 35.80 | 4.46 | 3.45 |

**Shenzhen Anbotek Compliance Laboratory Limited**


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



## Test Graphs

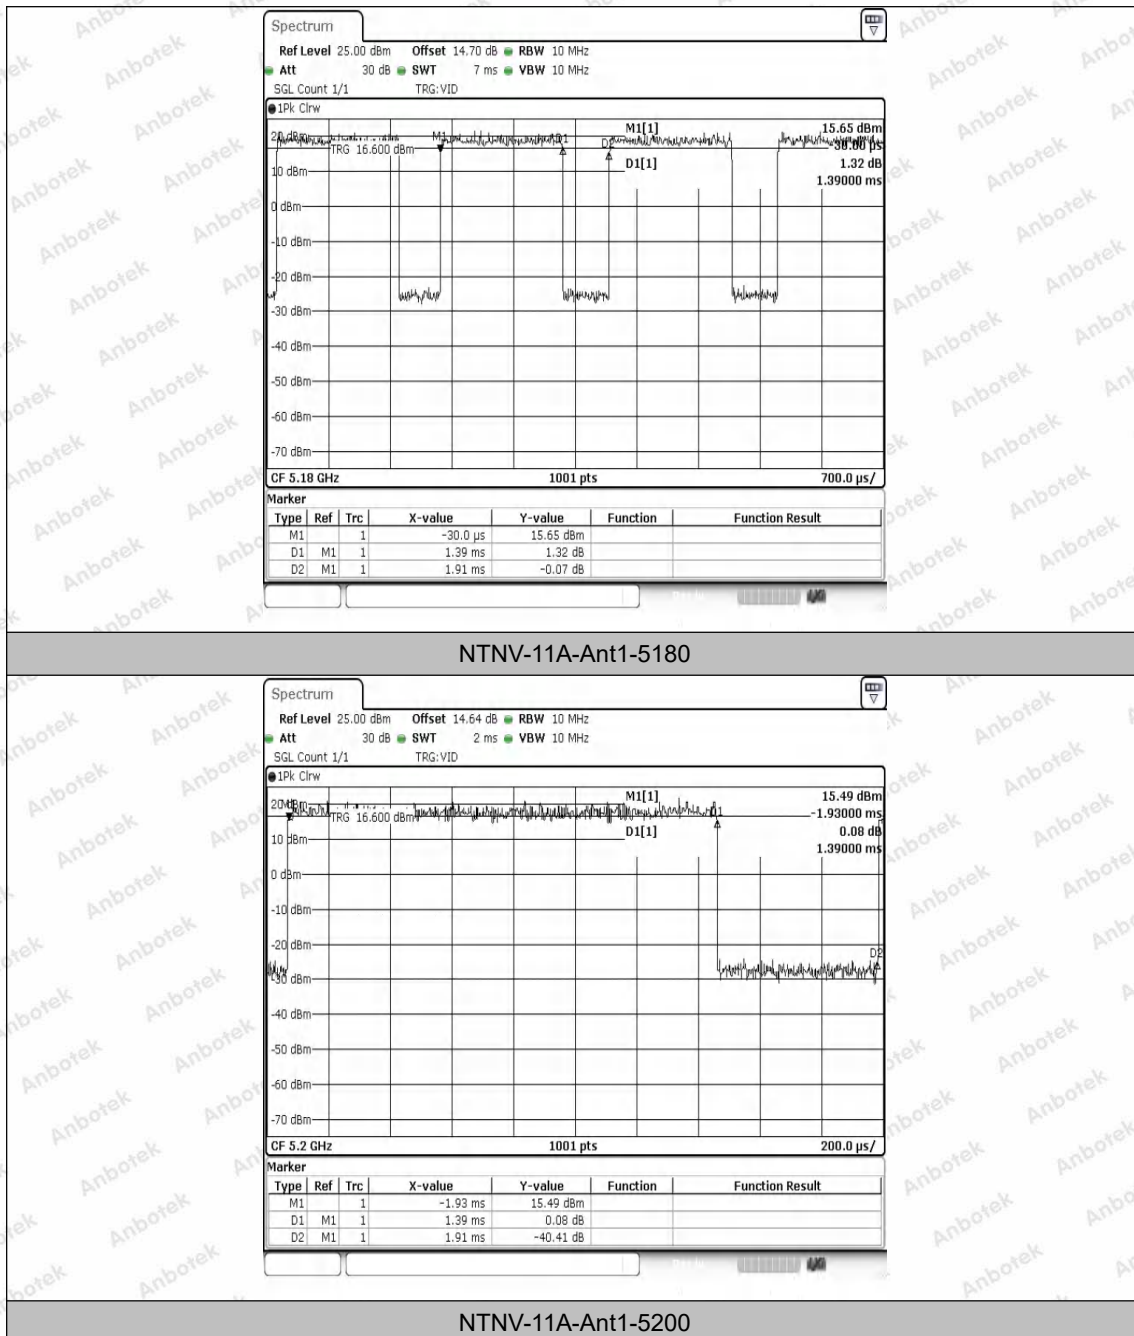


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



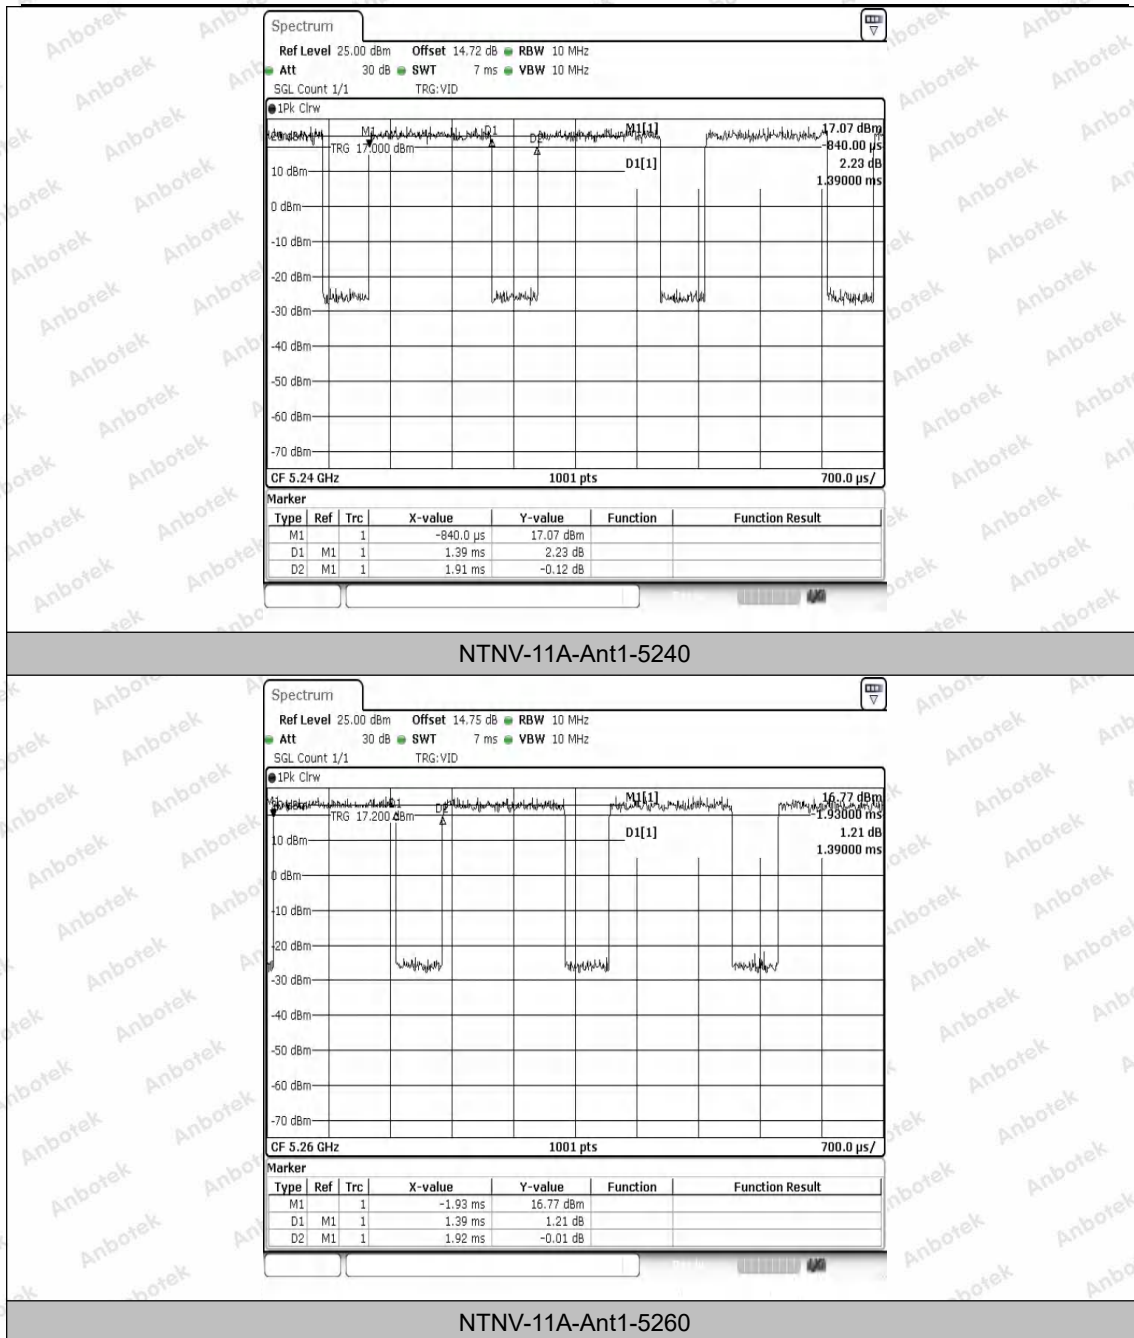


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn



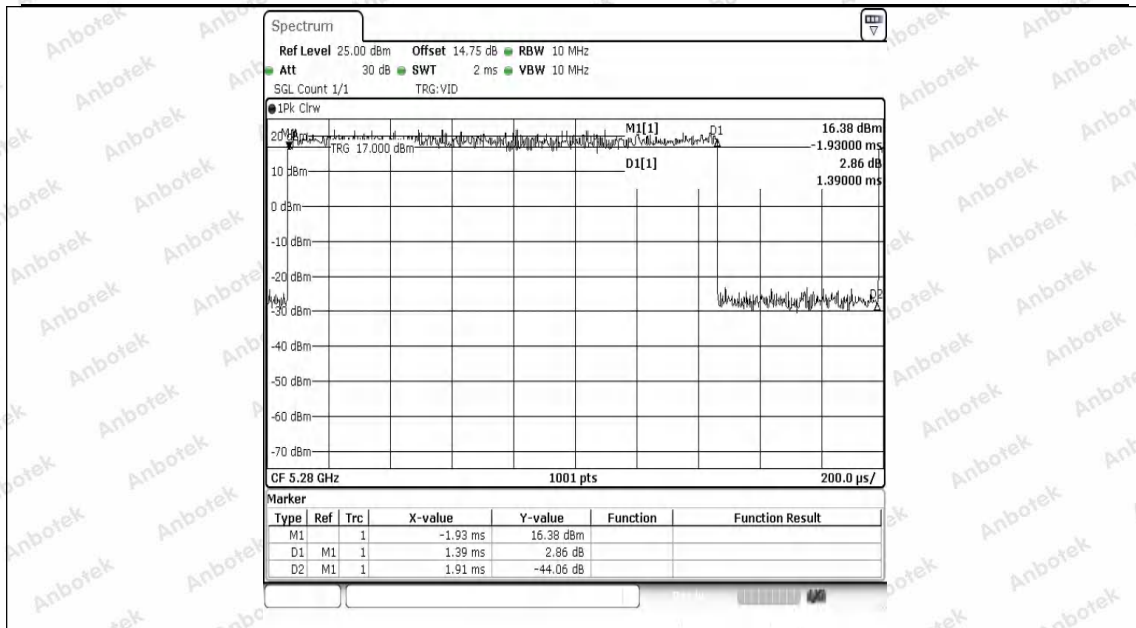

NTNV-11A-Ant1-5280

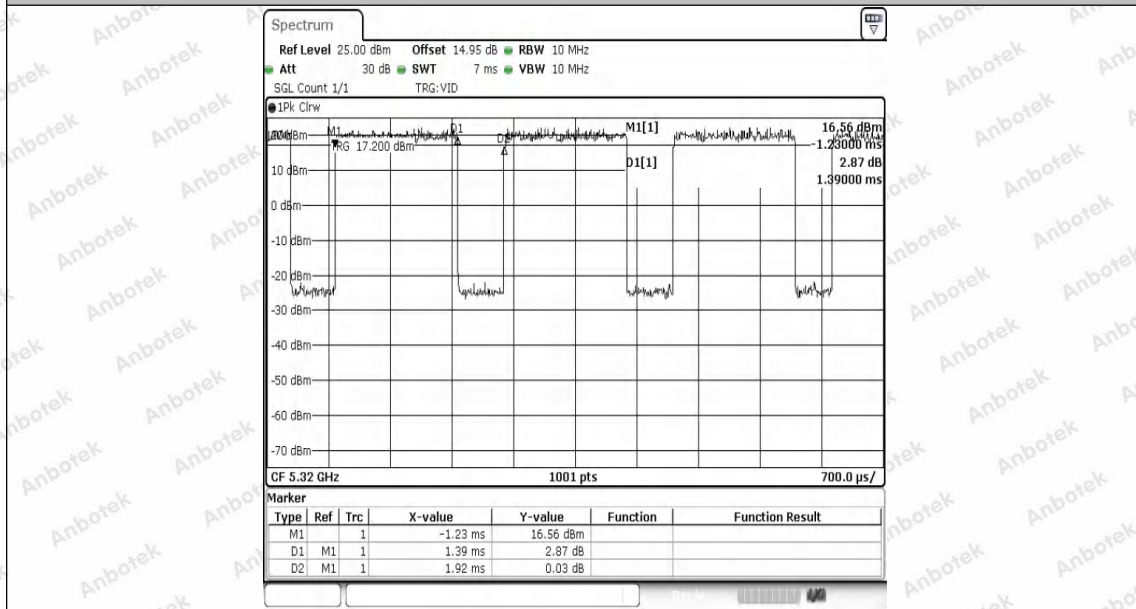

NTNV-11A-Ant1-5320


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn



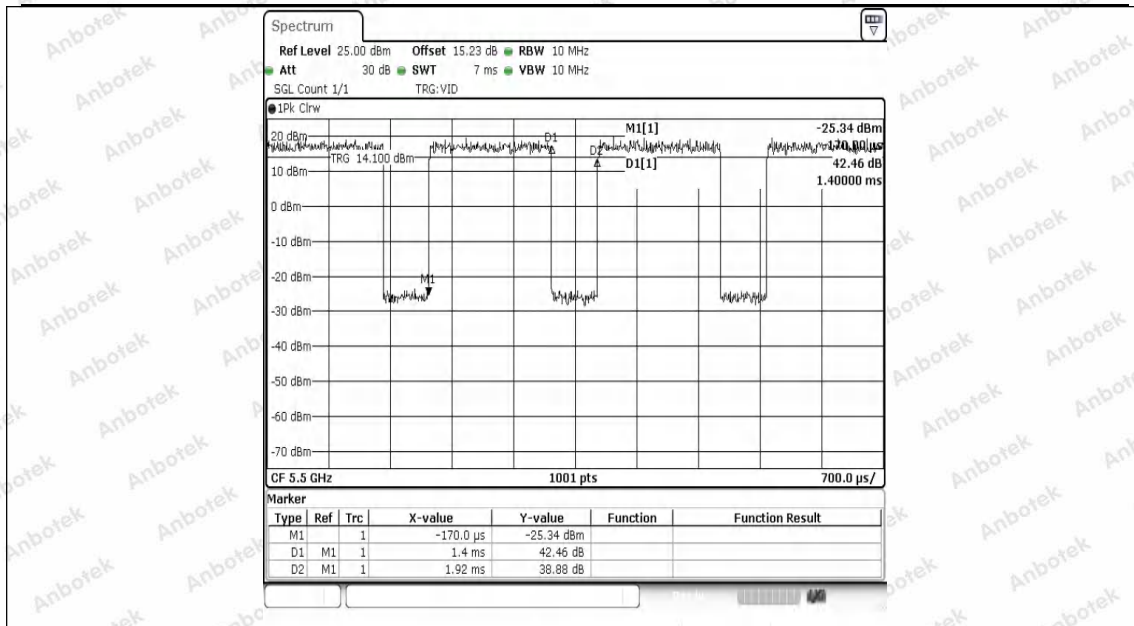

NTNV-11A-Ant1-5500

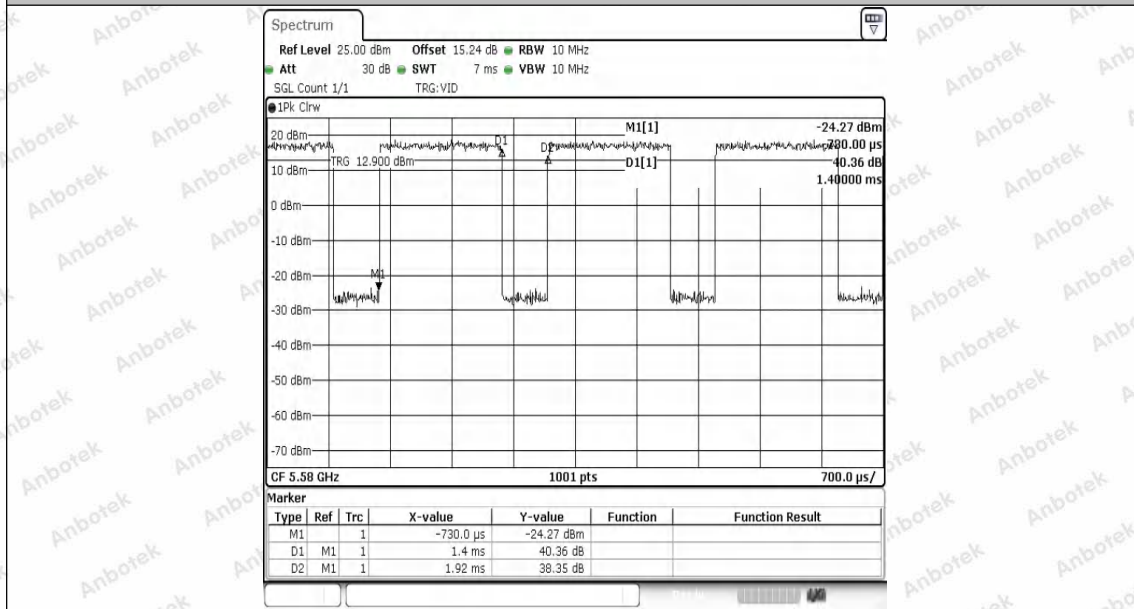

NTNV-11A-Ant1-5580


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



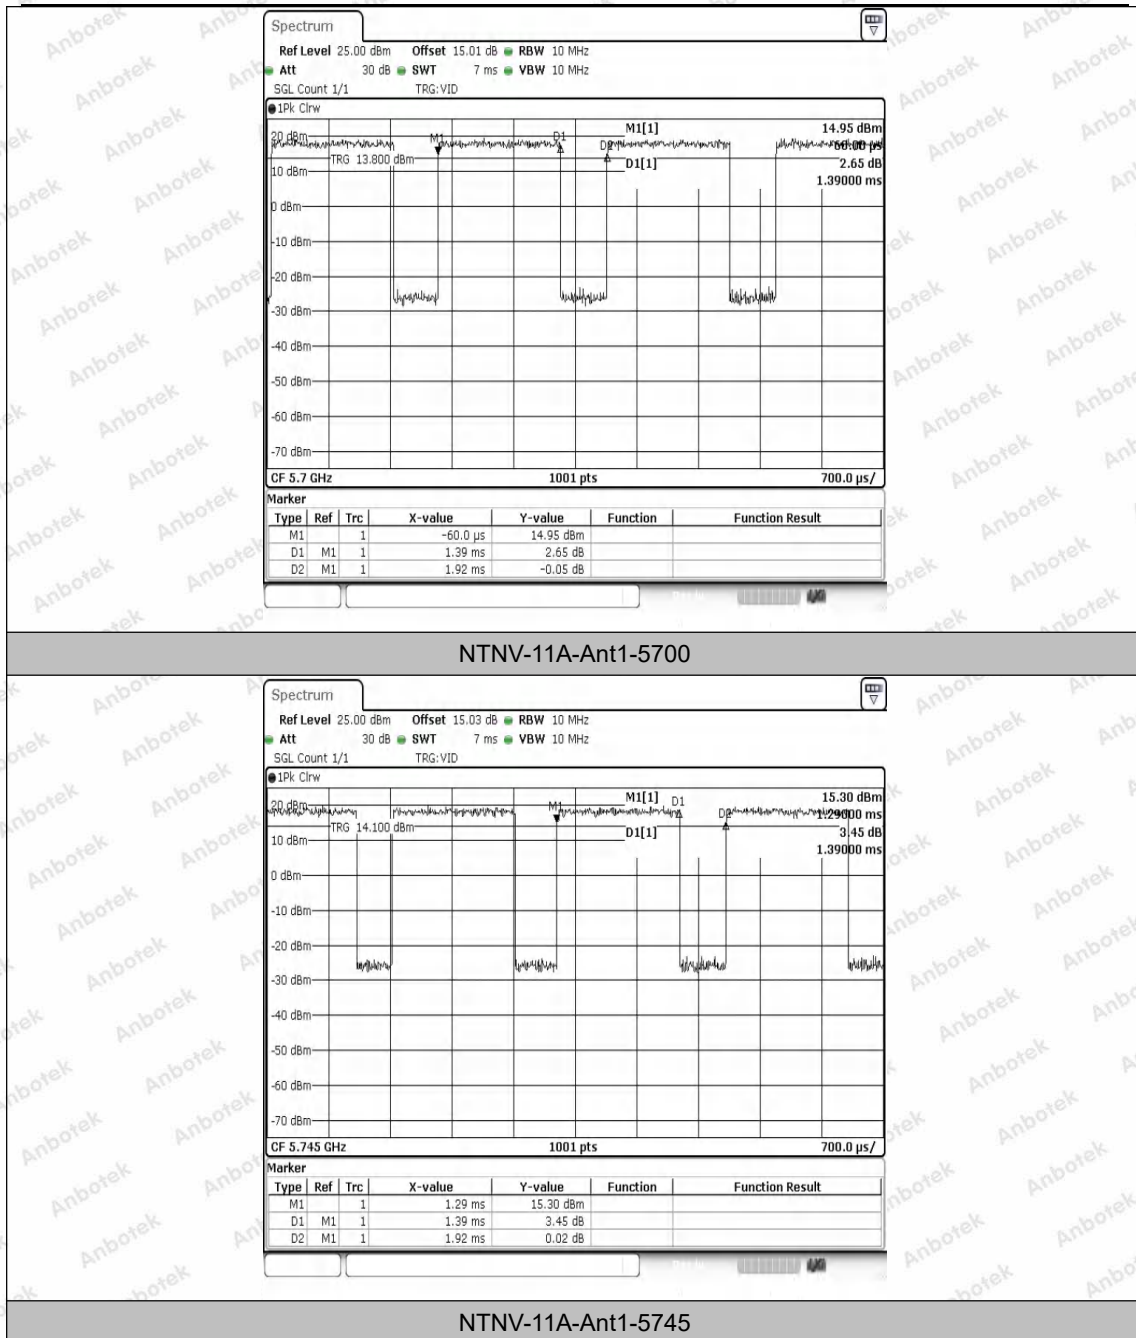


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn



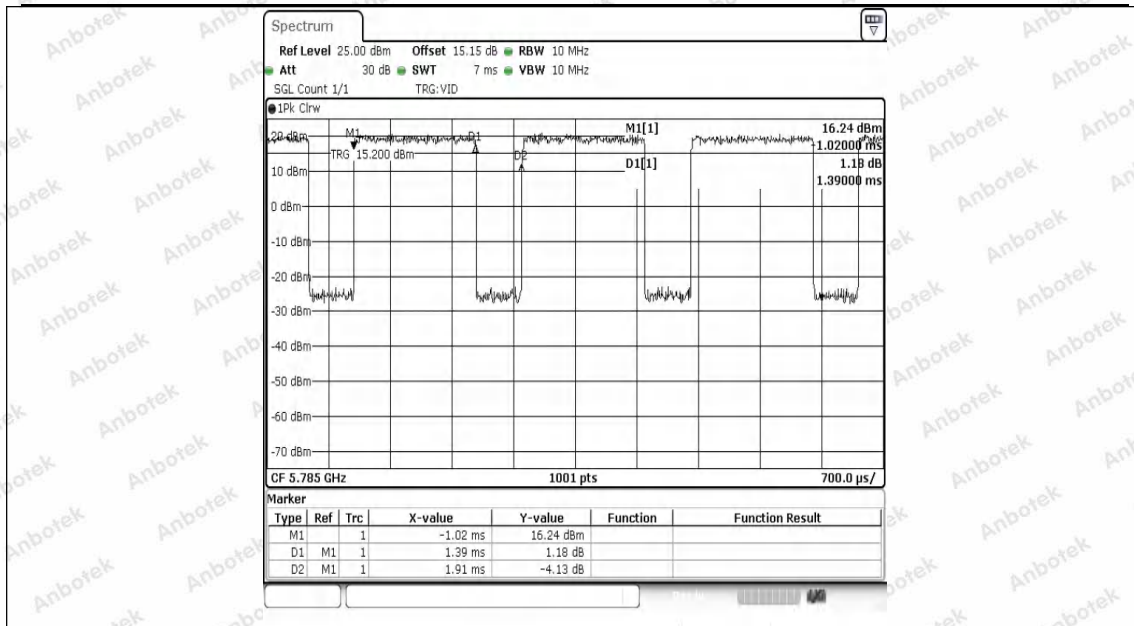

NTNV-11A-Ant1-5785

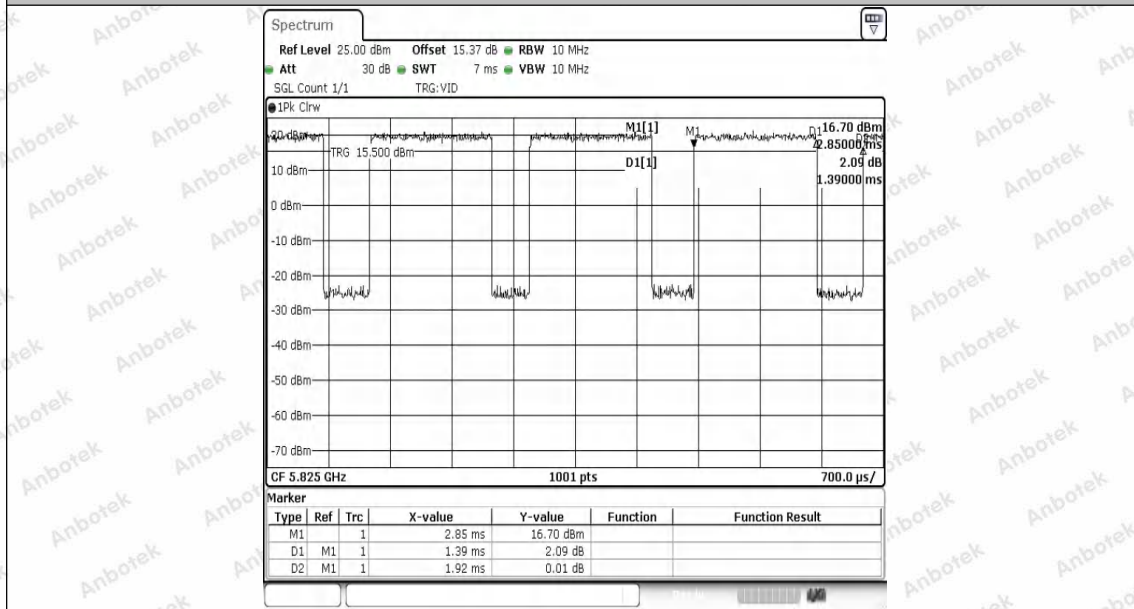

NTNV-11A-Ant1-5825


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



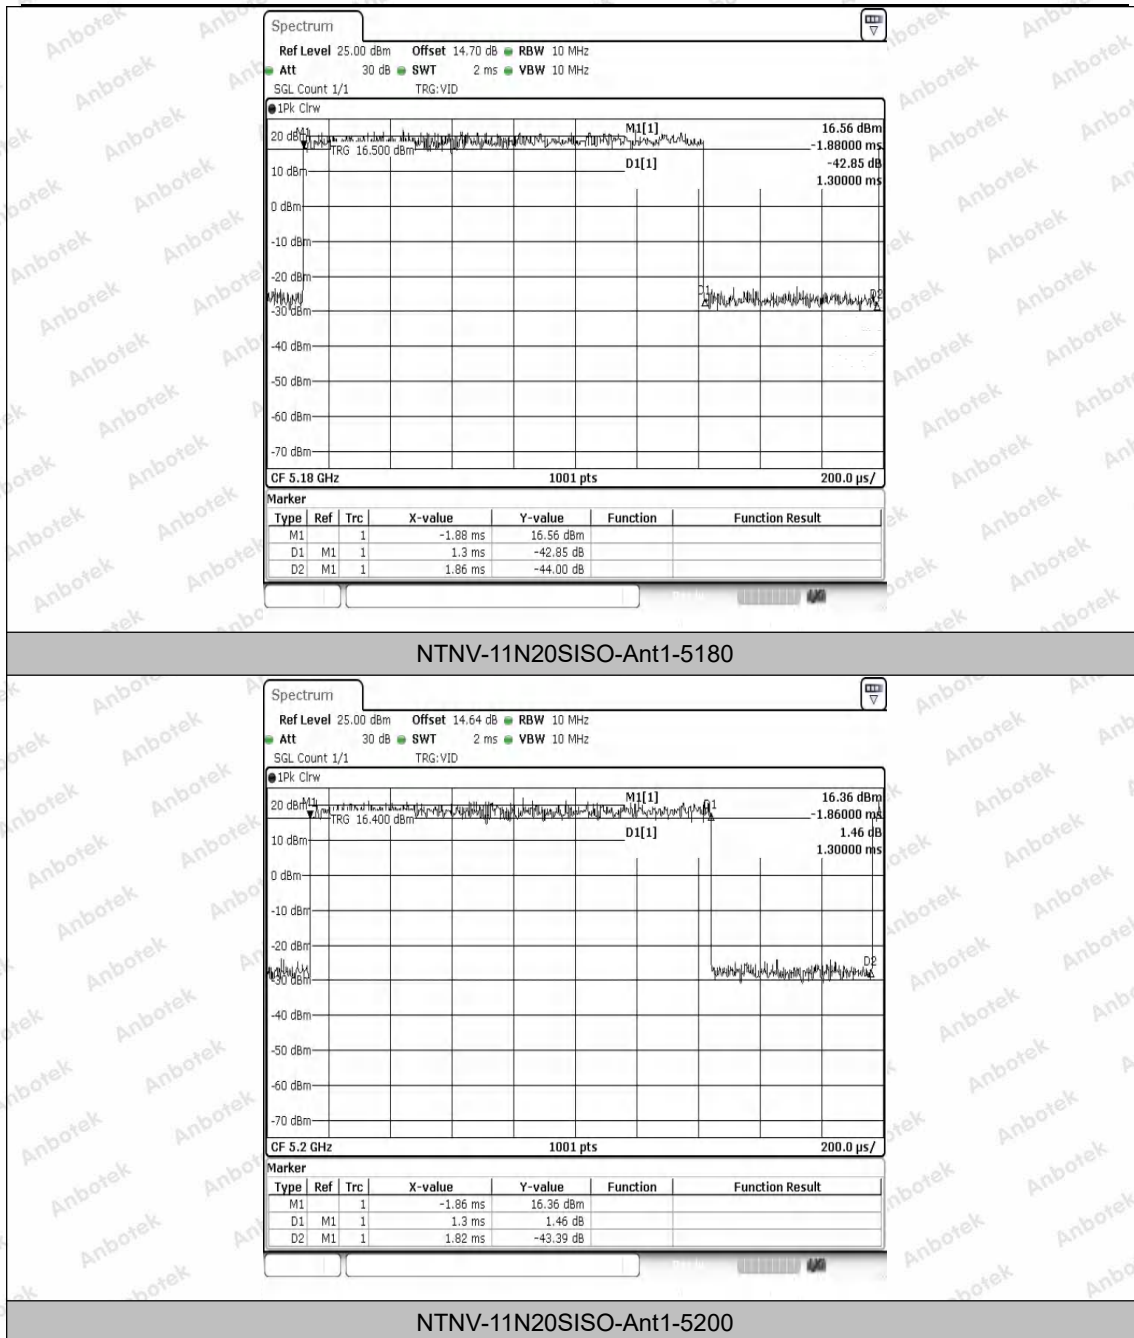


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn



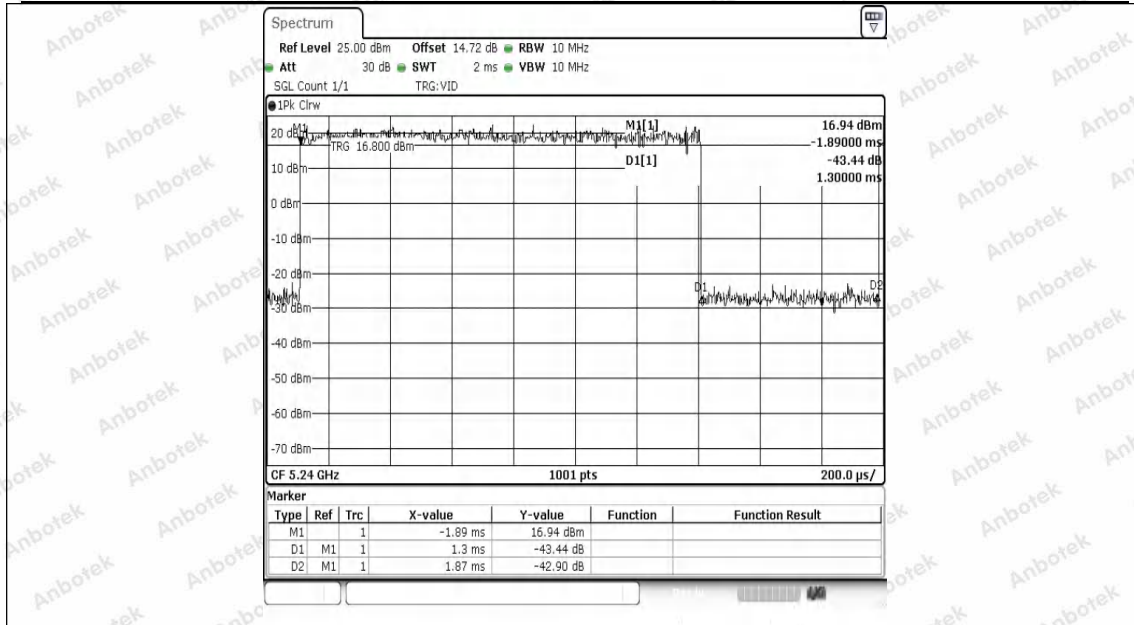

NTNV-11N20SISO-Ant1-5240

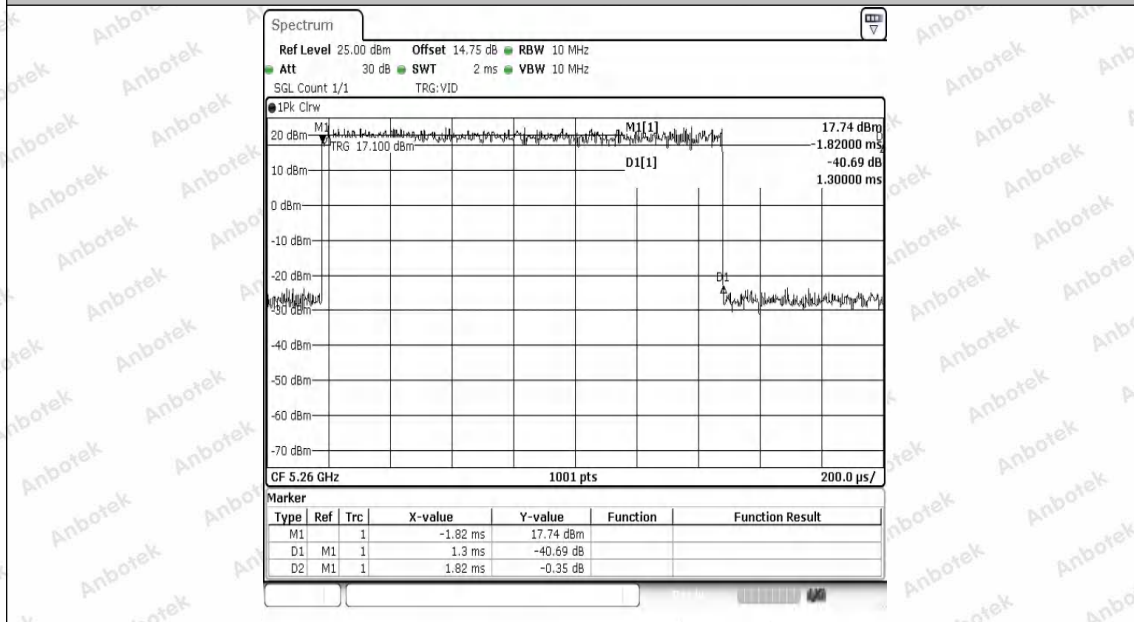

NTNV-11N20SISO-Ant1-5260


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn

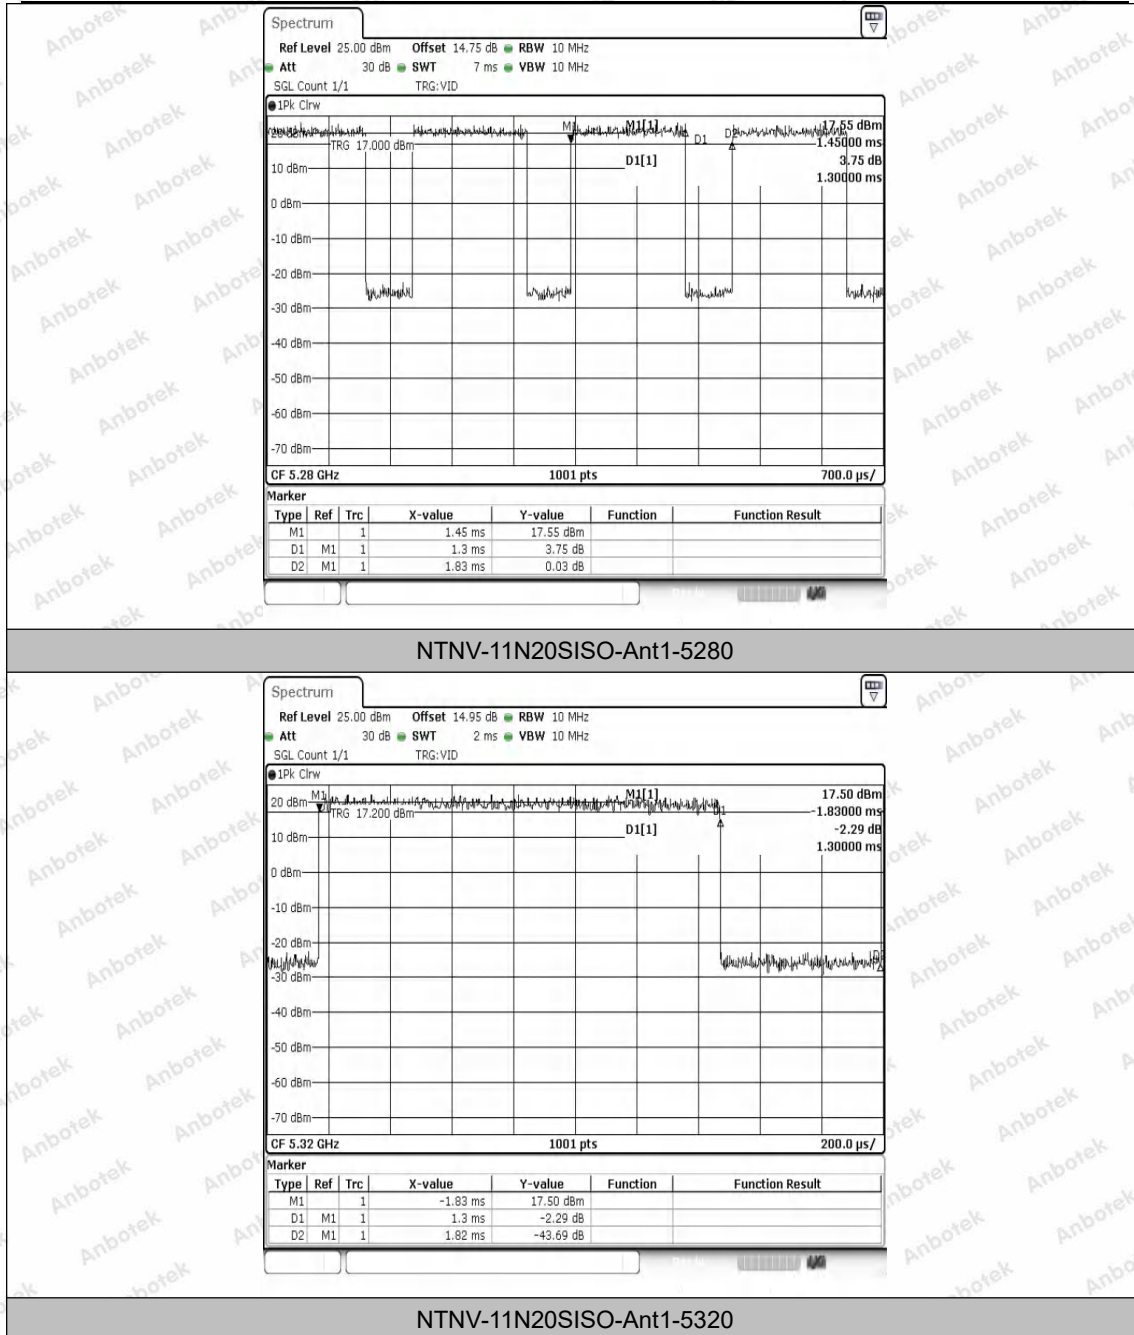


**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



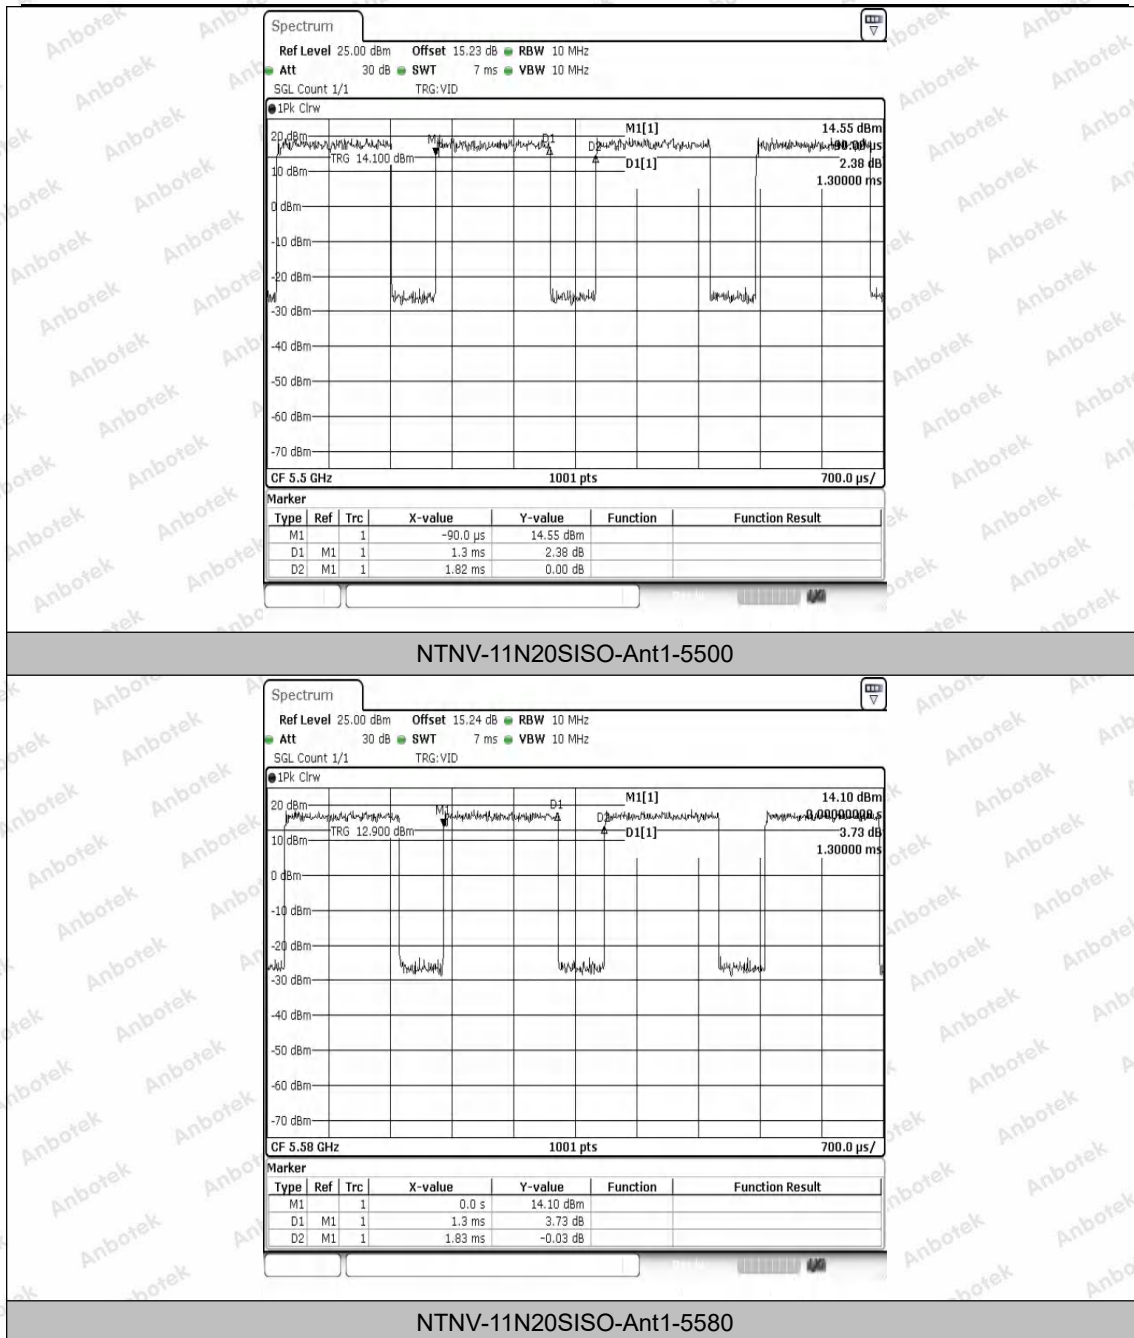


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



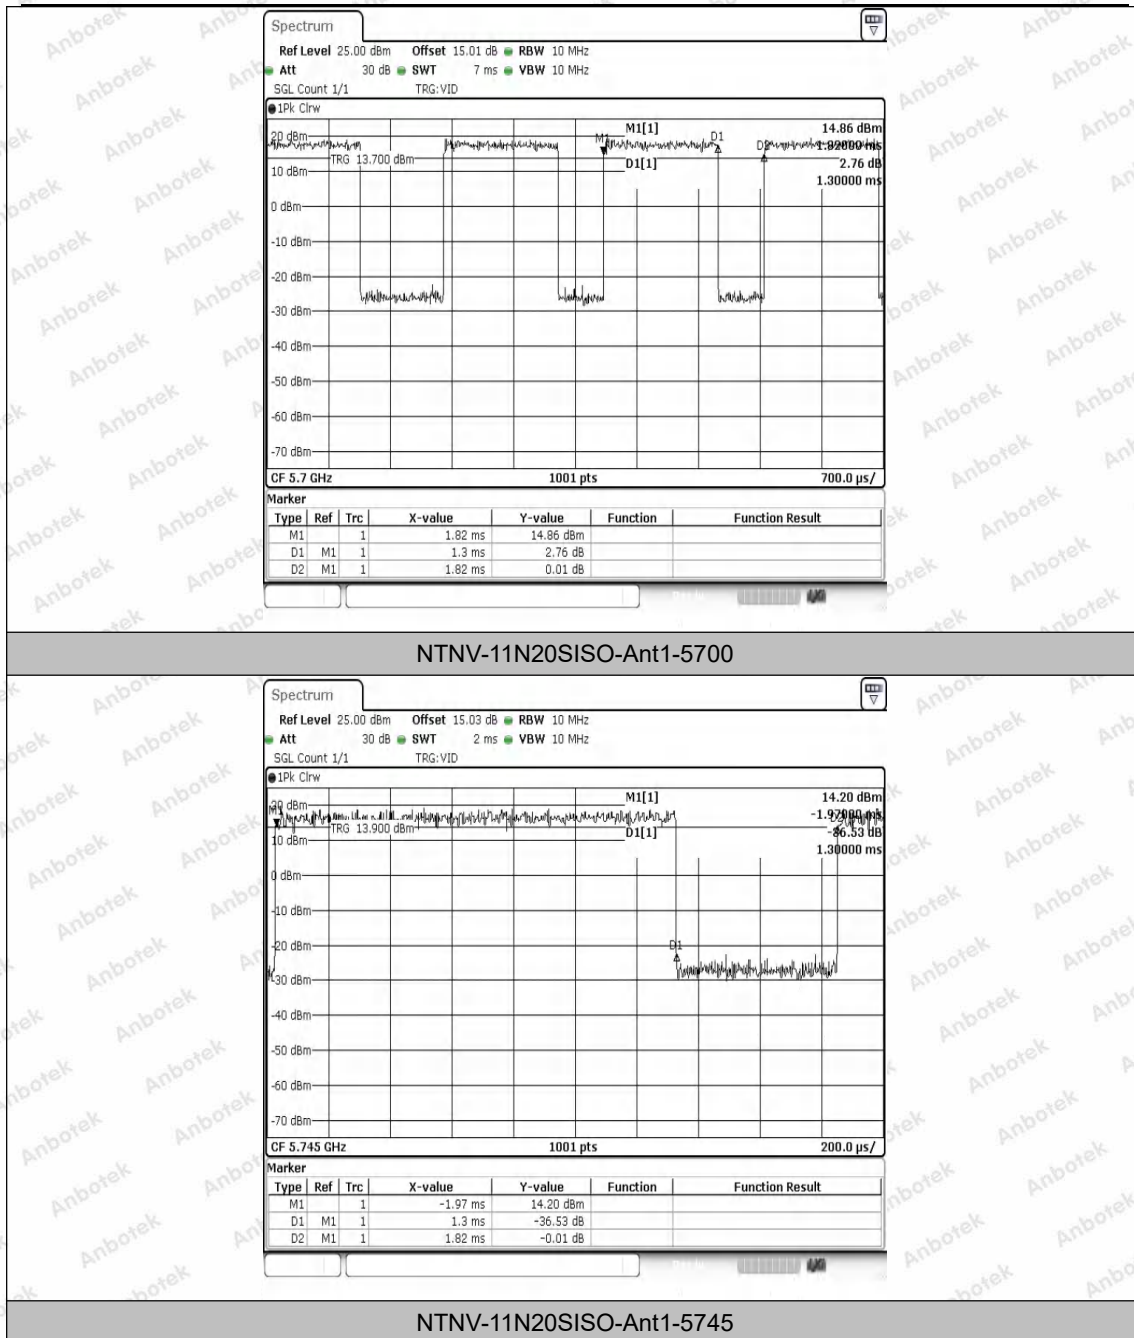


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



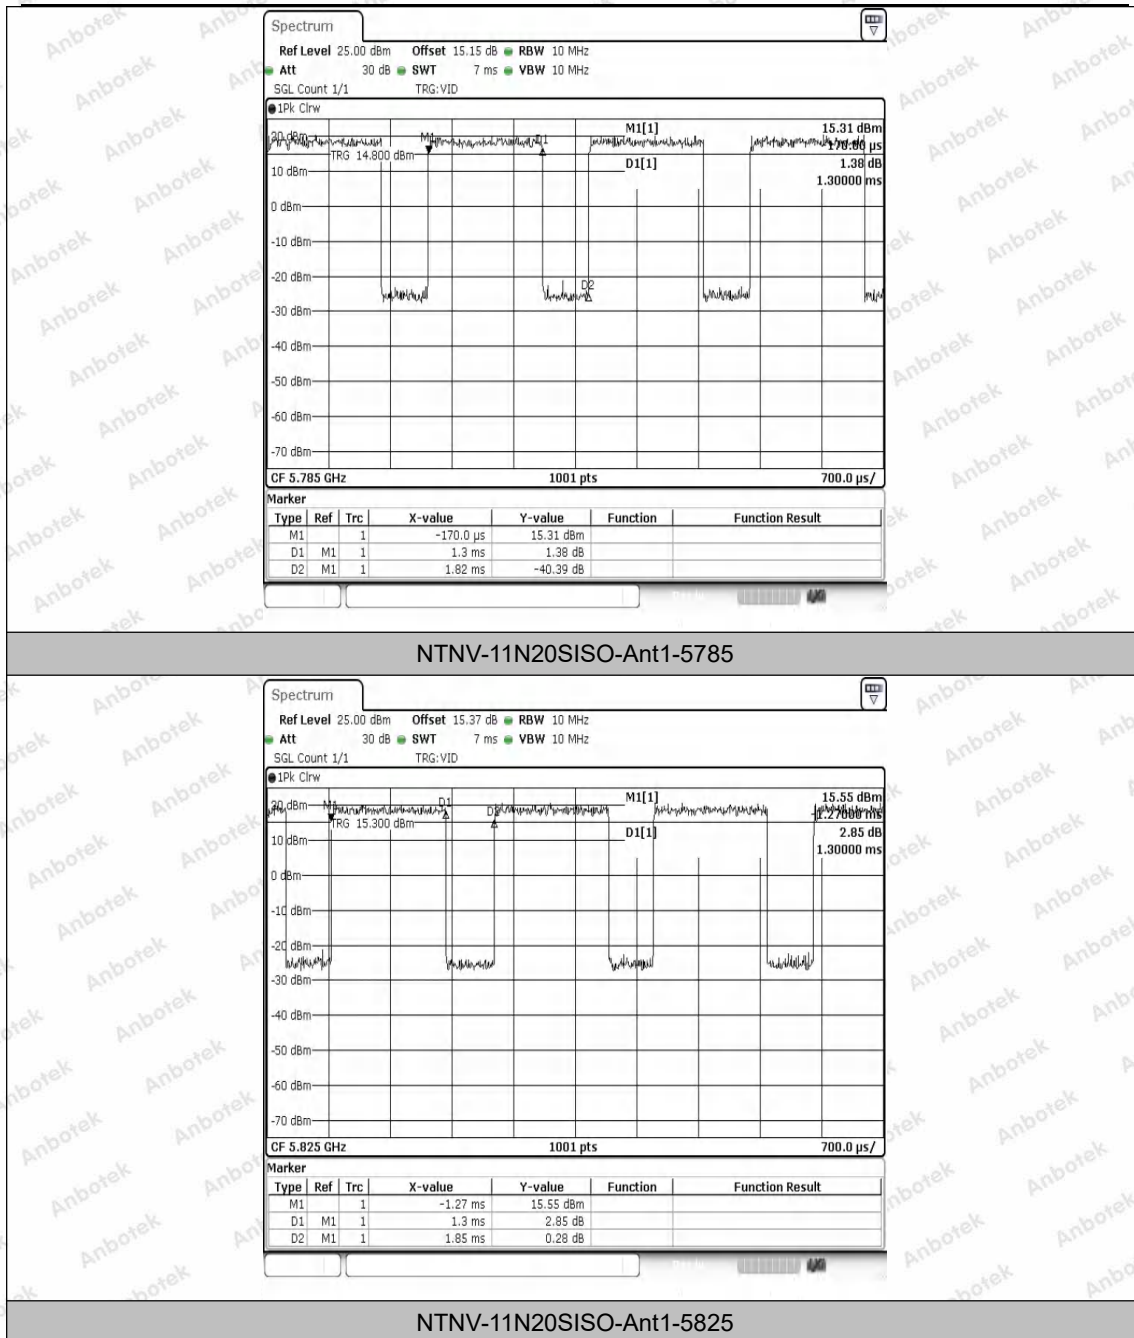


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



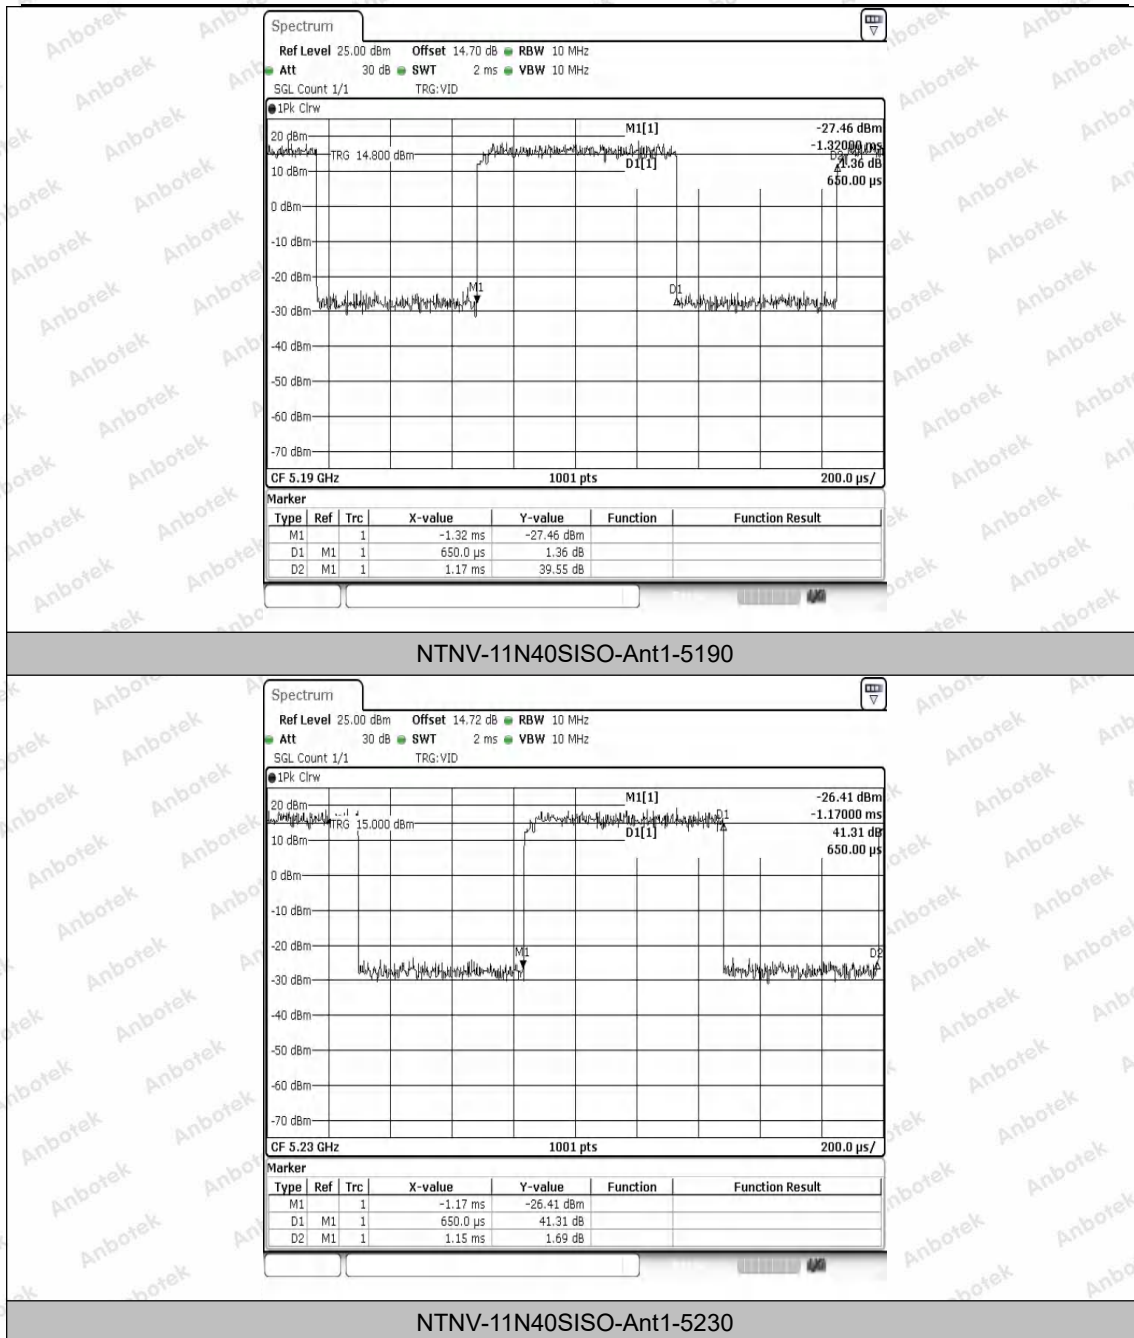


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



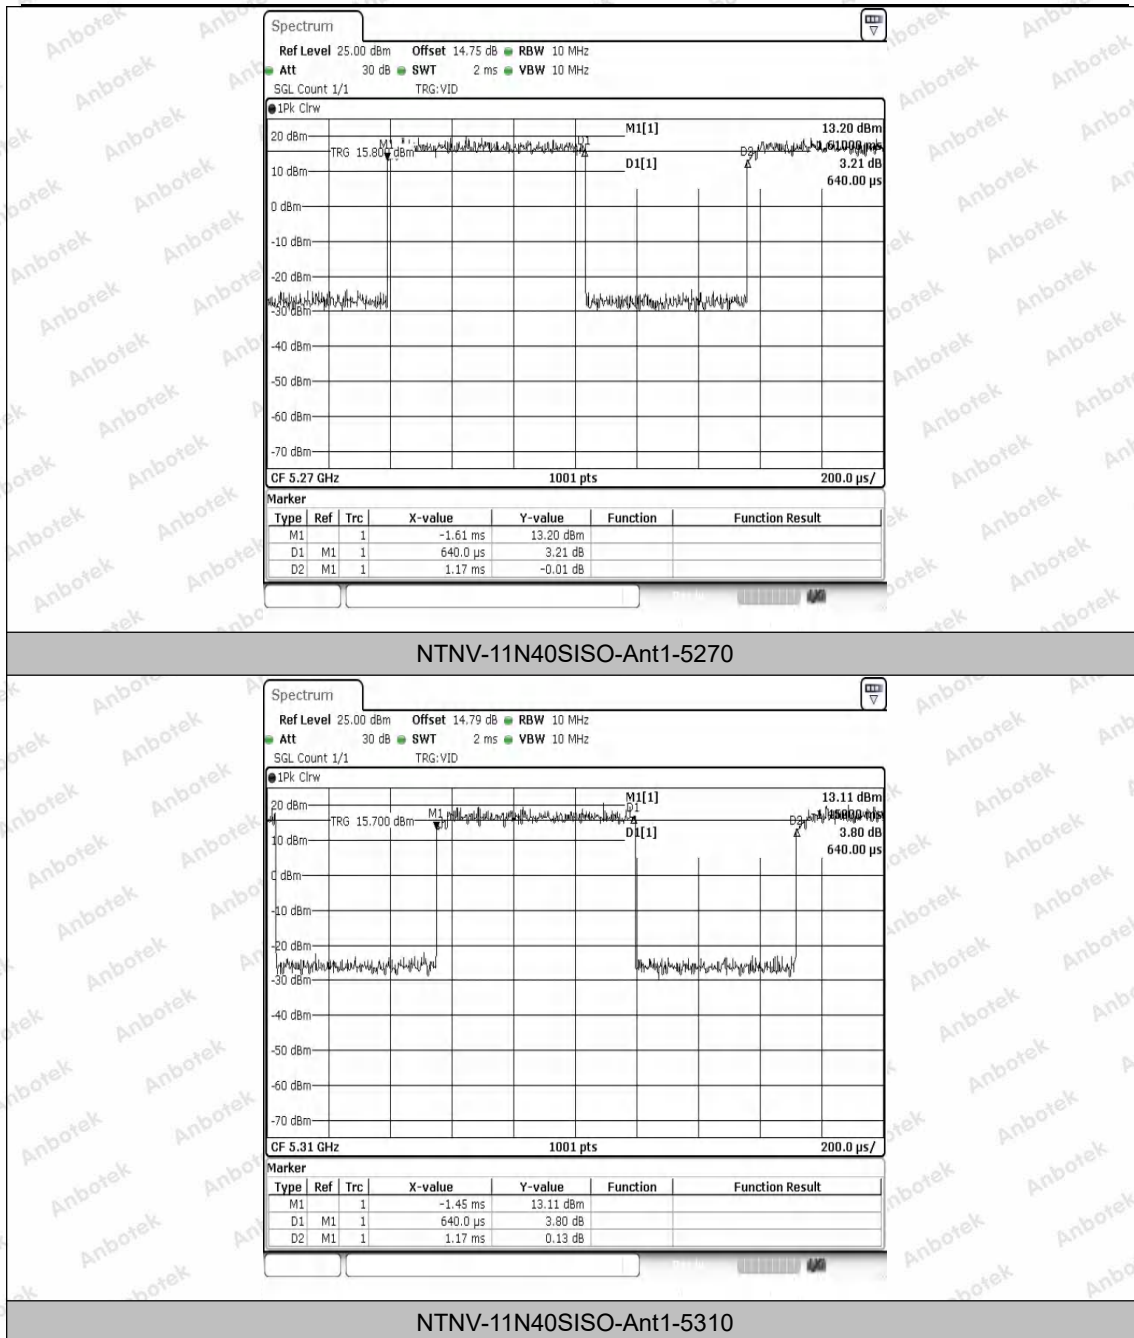



## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn

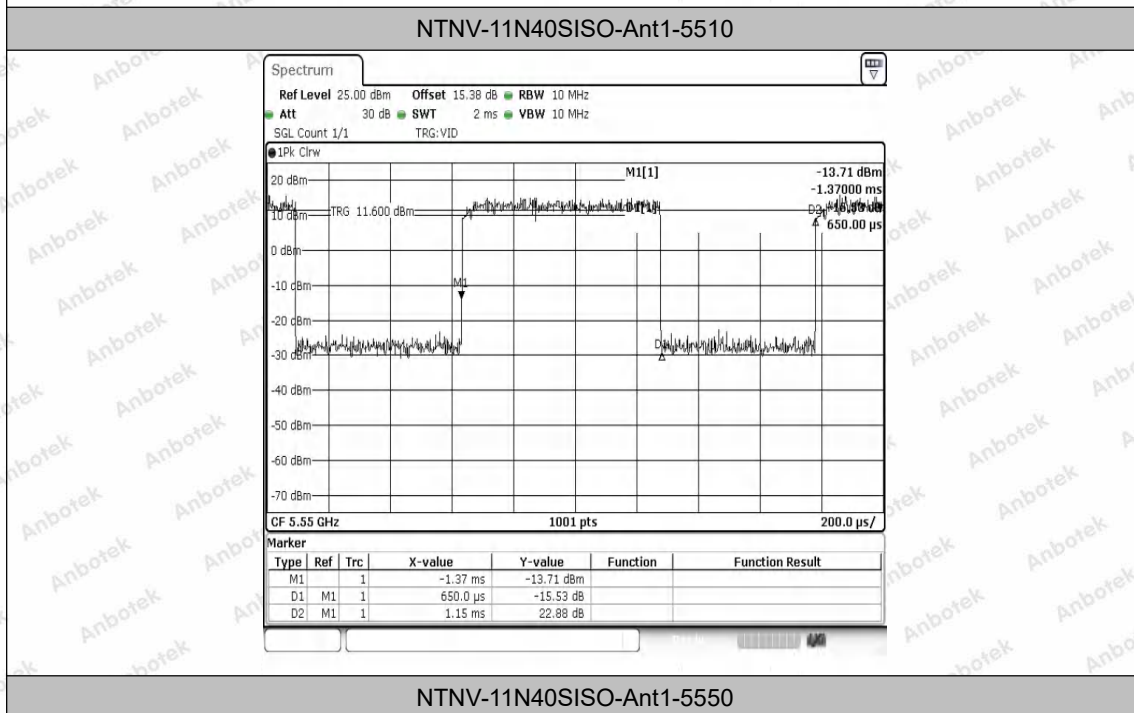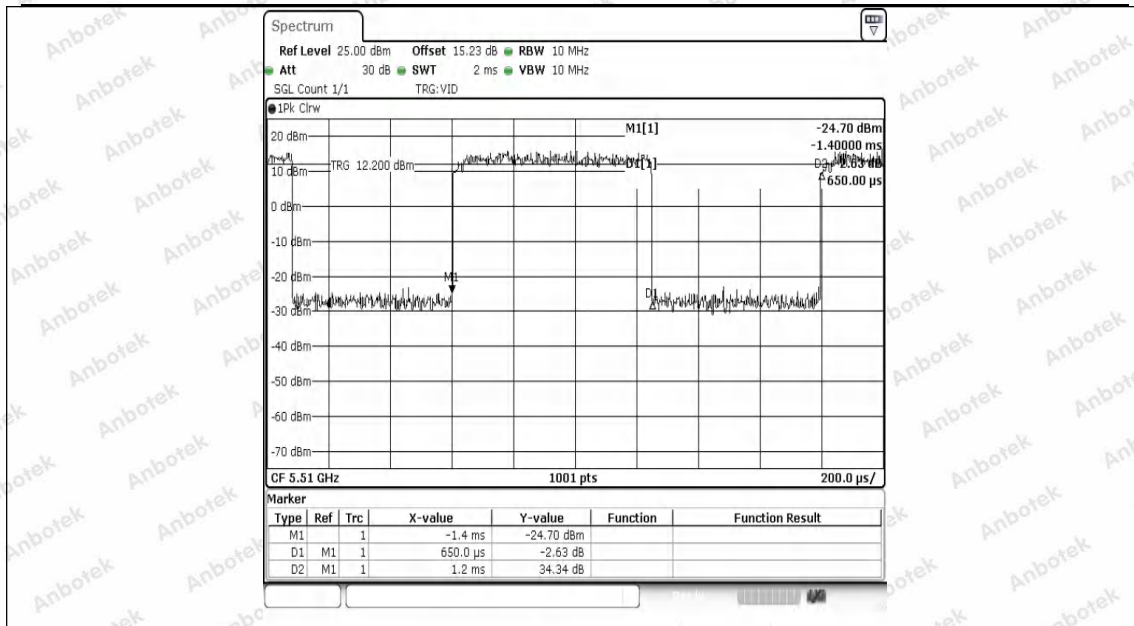


**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



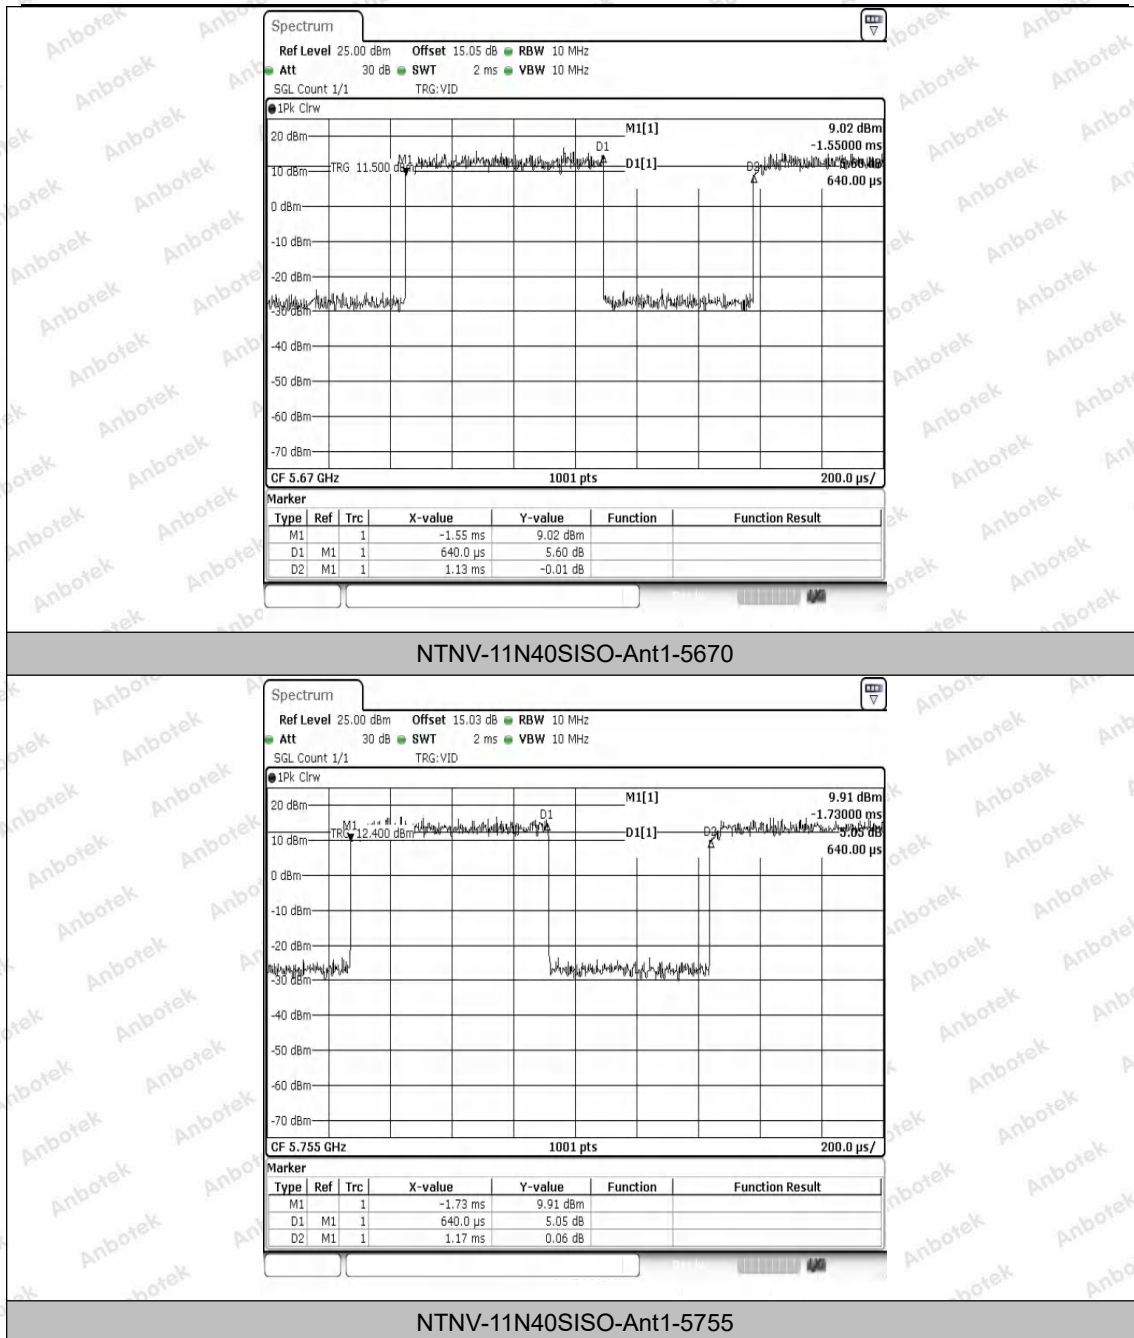


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn

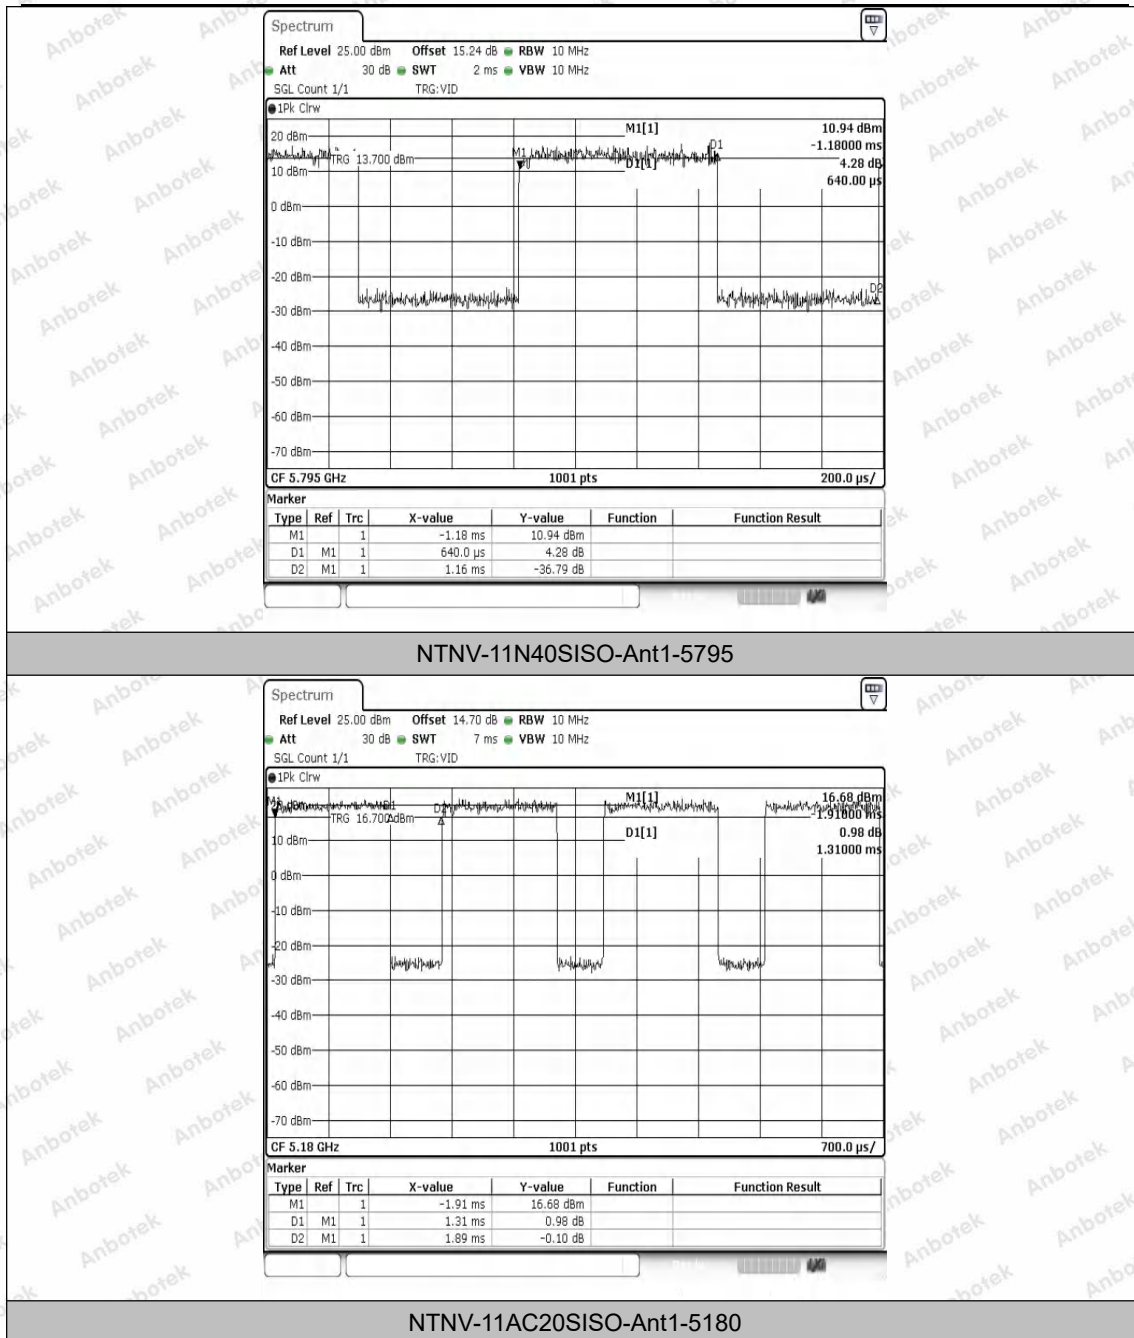


**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn



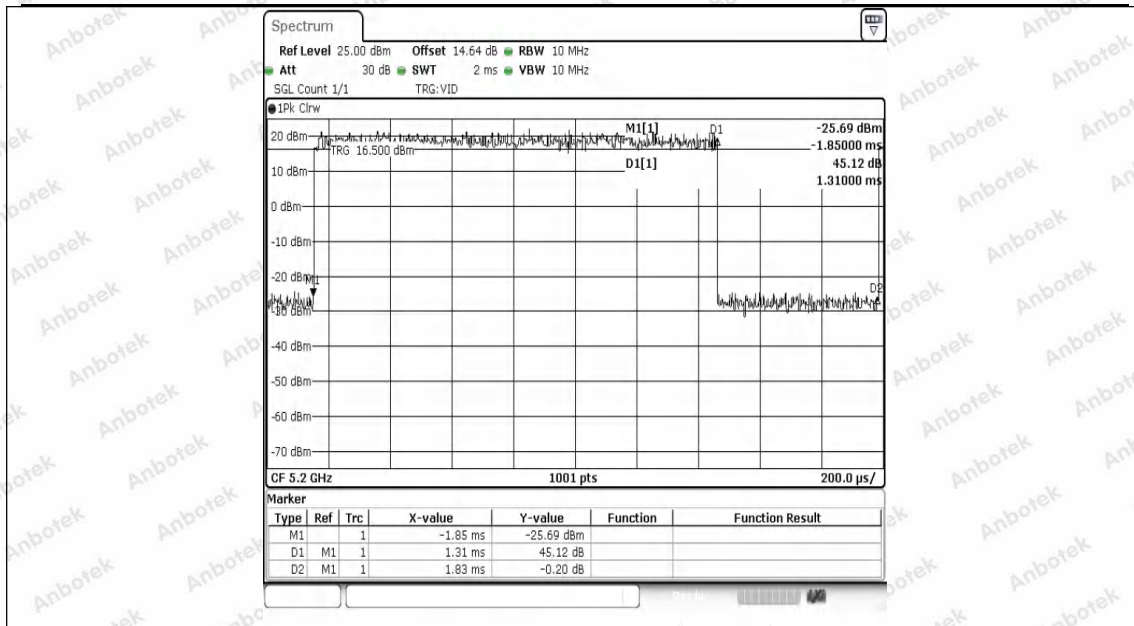


NTNV-11AC20SISO-Ant1-5200

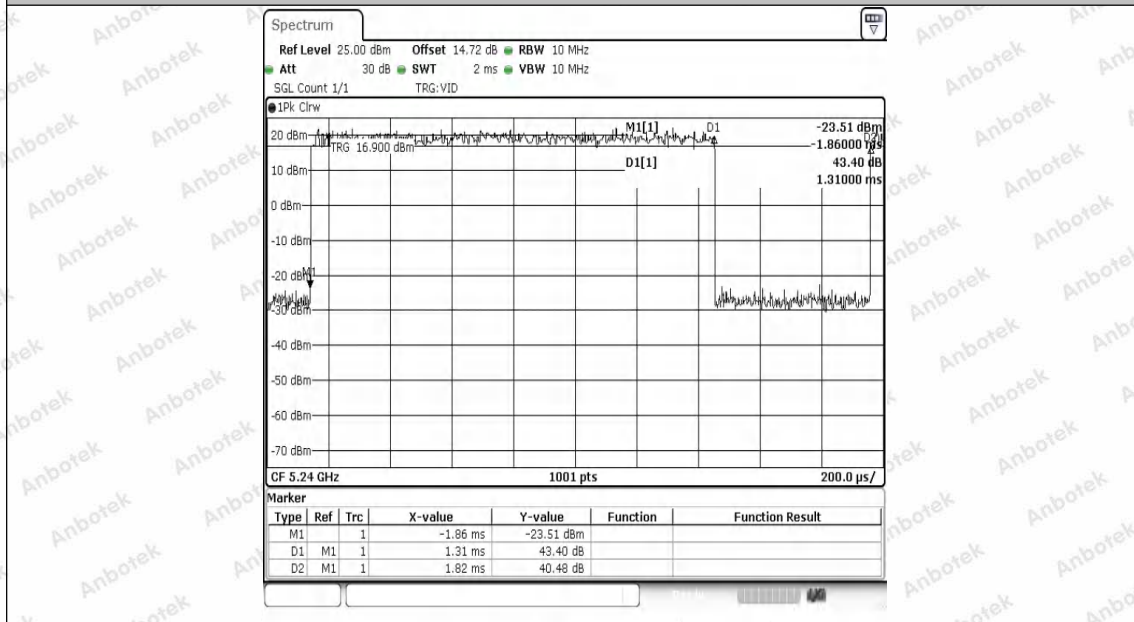


NTNV-11AC20SISO-Ant1-5240



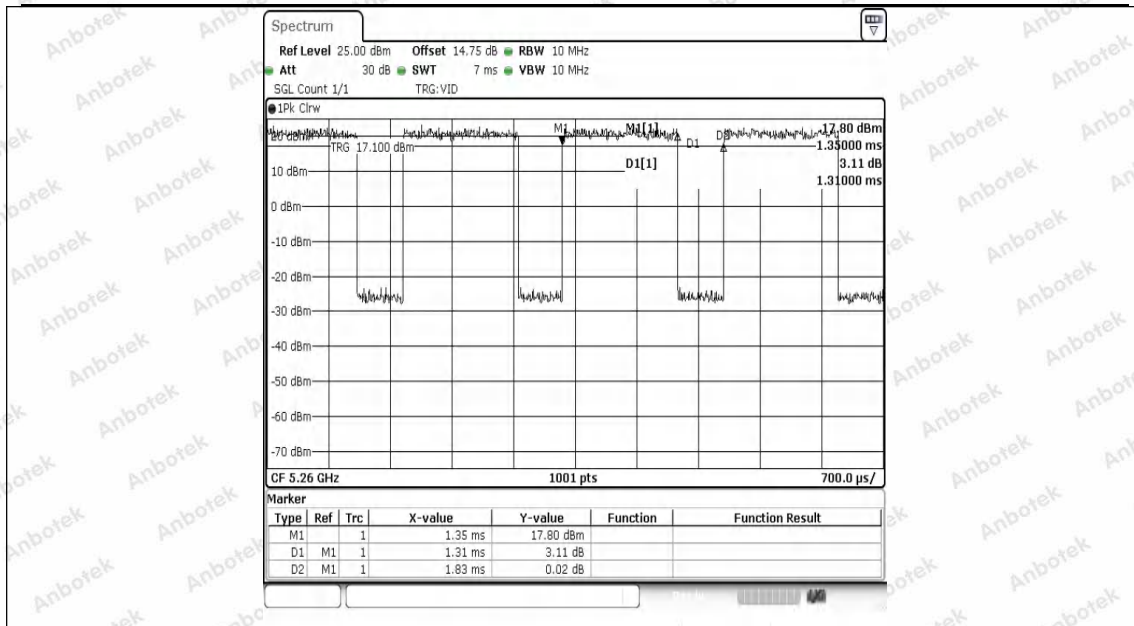

NTNV-11AC20SISO-Ant1-5260

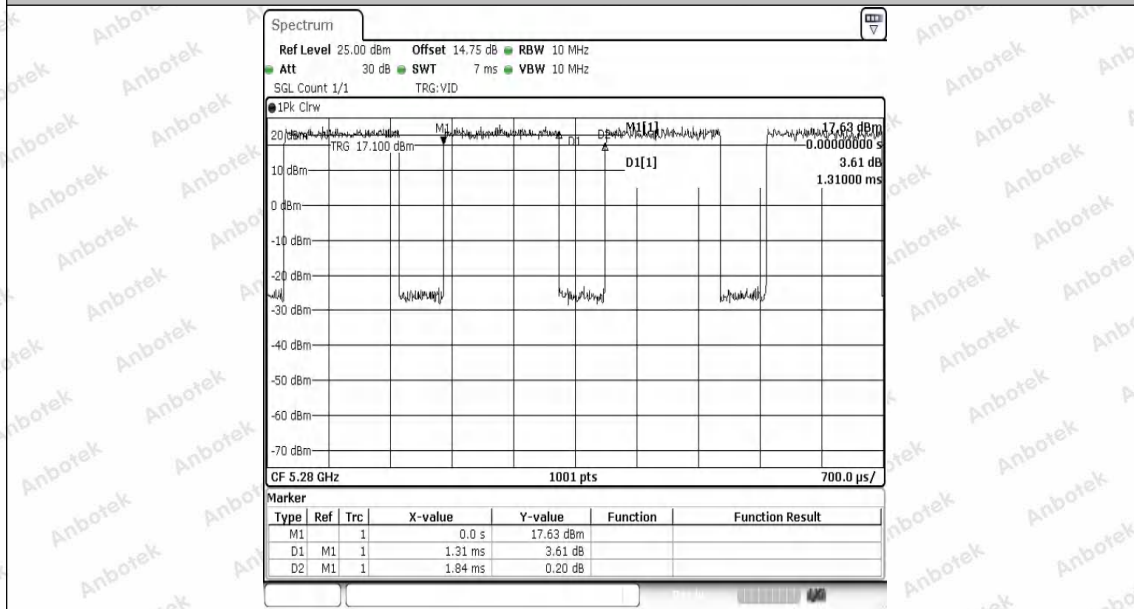

NTNV-11AC20SISO-Ant1-5280


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



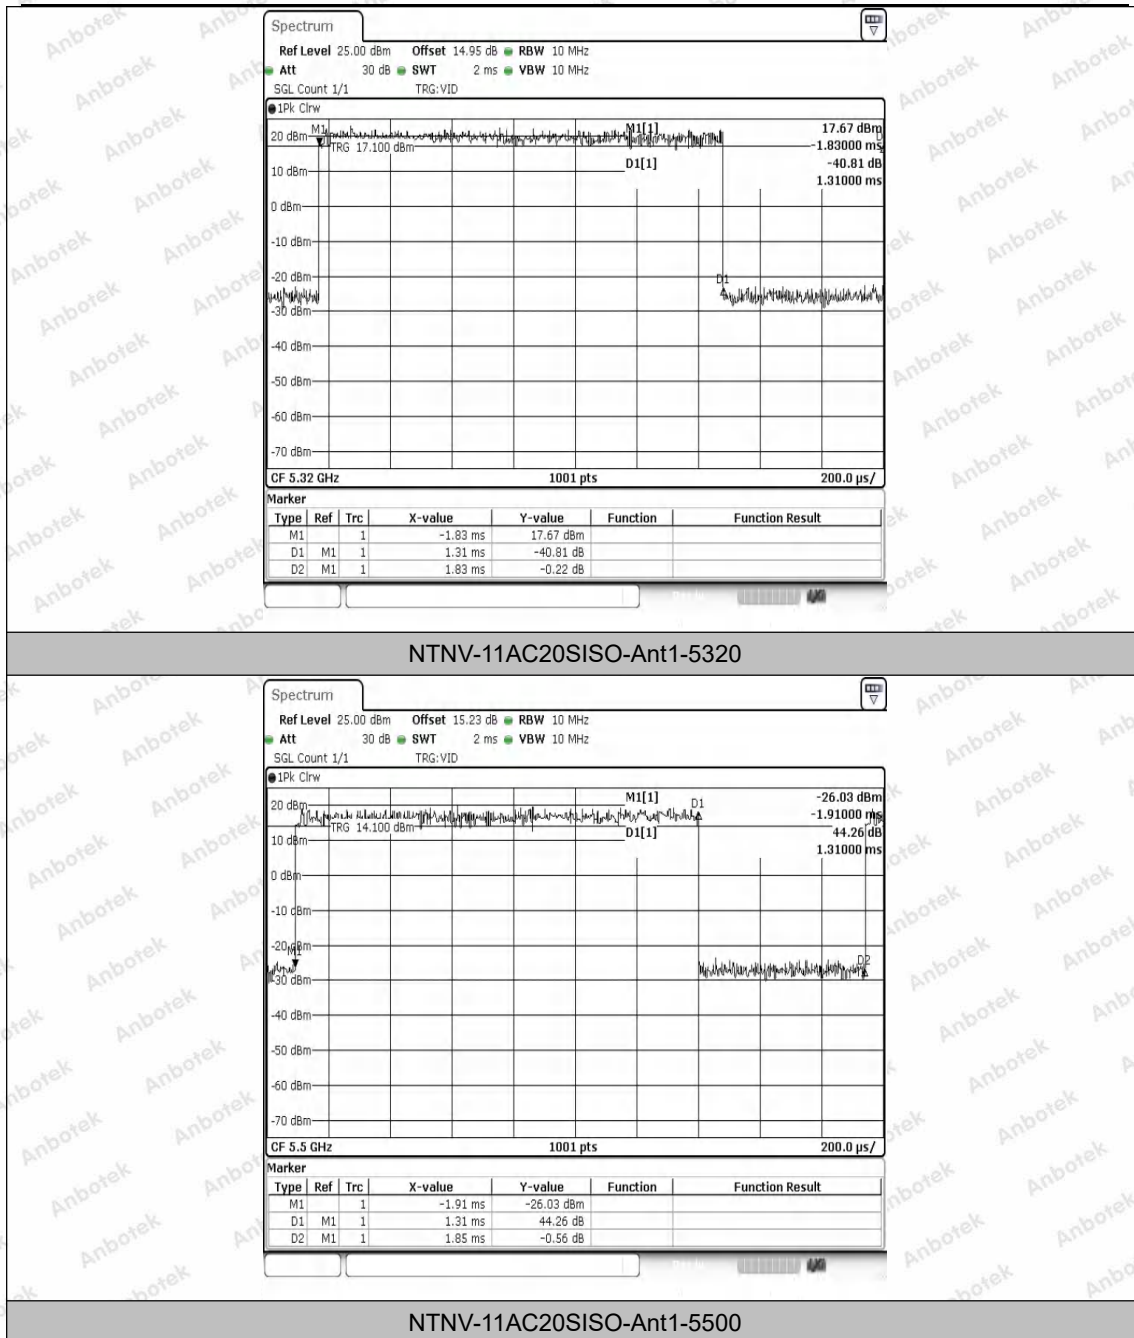


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn



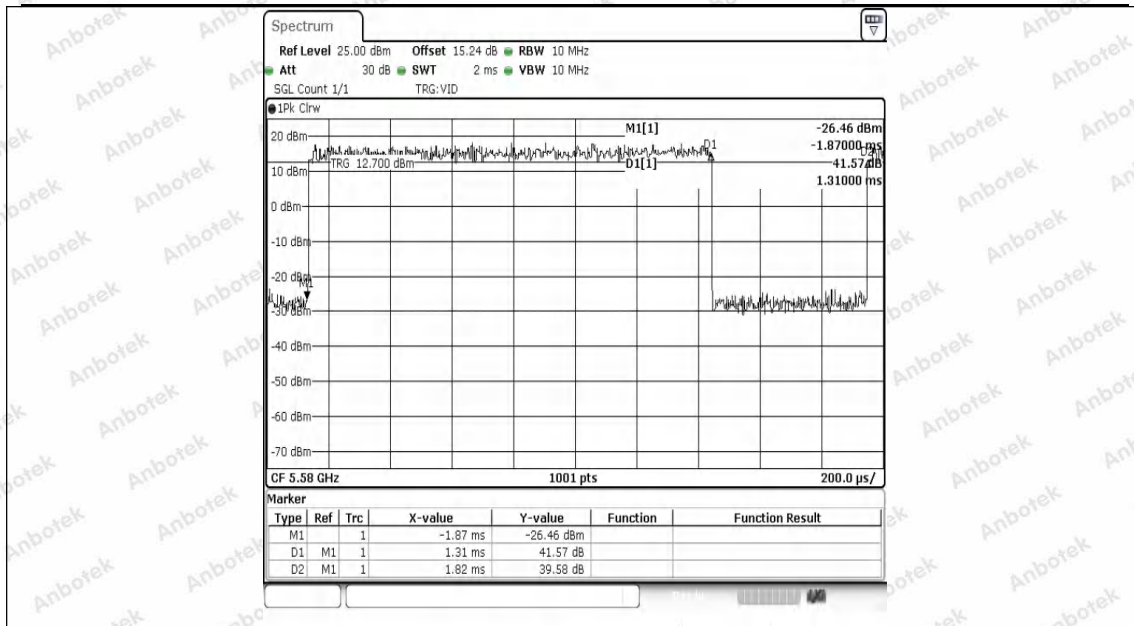

NTNV-11AC20SISO-Ant1-5580

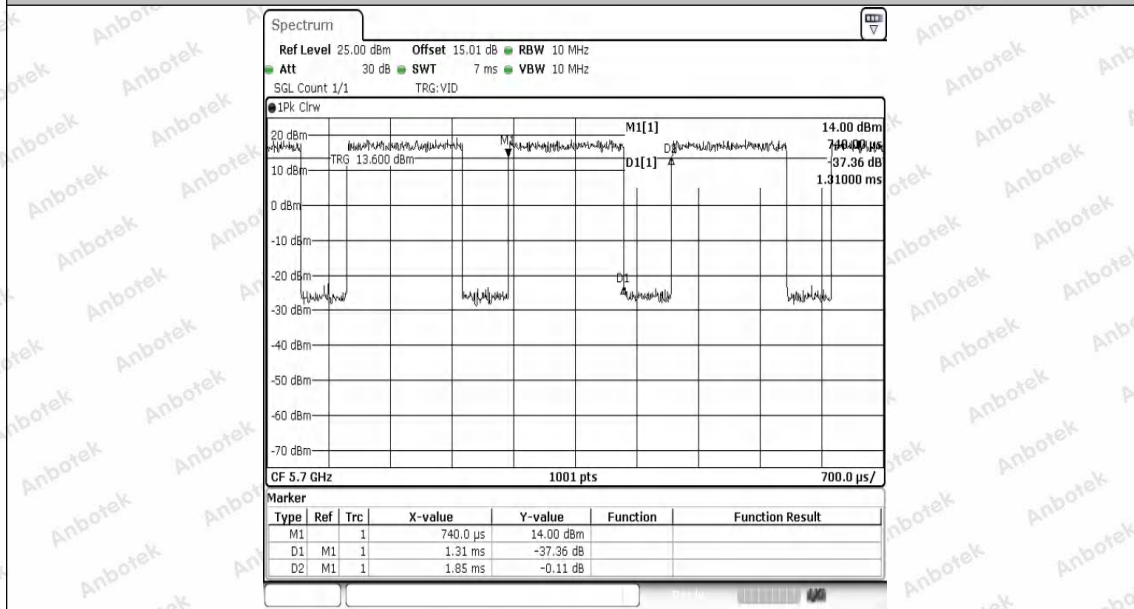

NTNV-11AC20SISO-Ant1-5700


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn



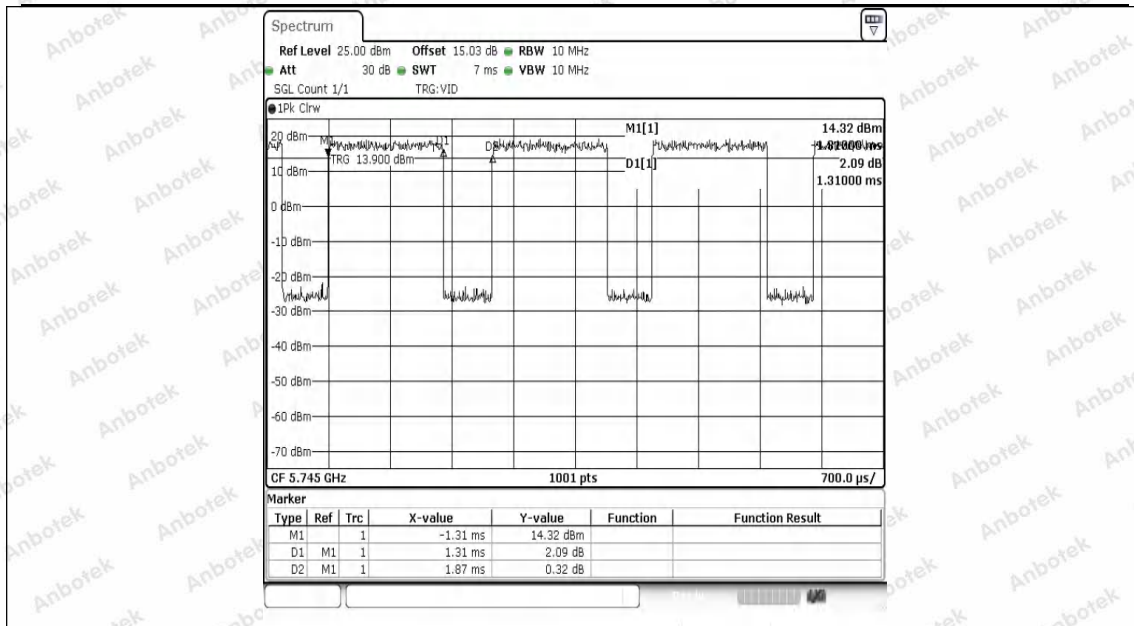


NTNV-11AC20SISO-Ant1-5745

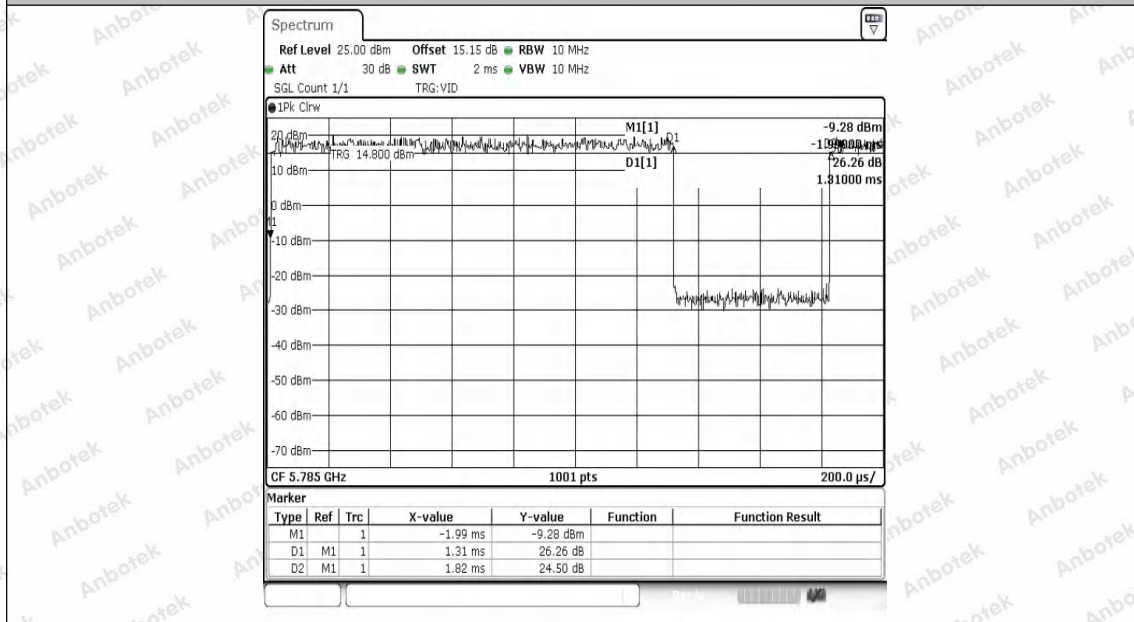


NTNV-11AC20SISO-Ant1-5785



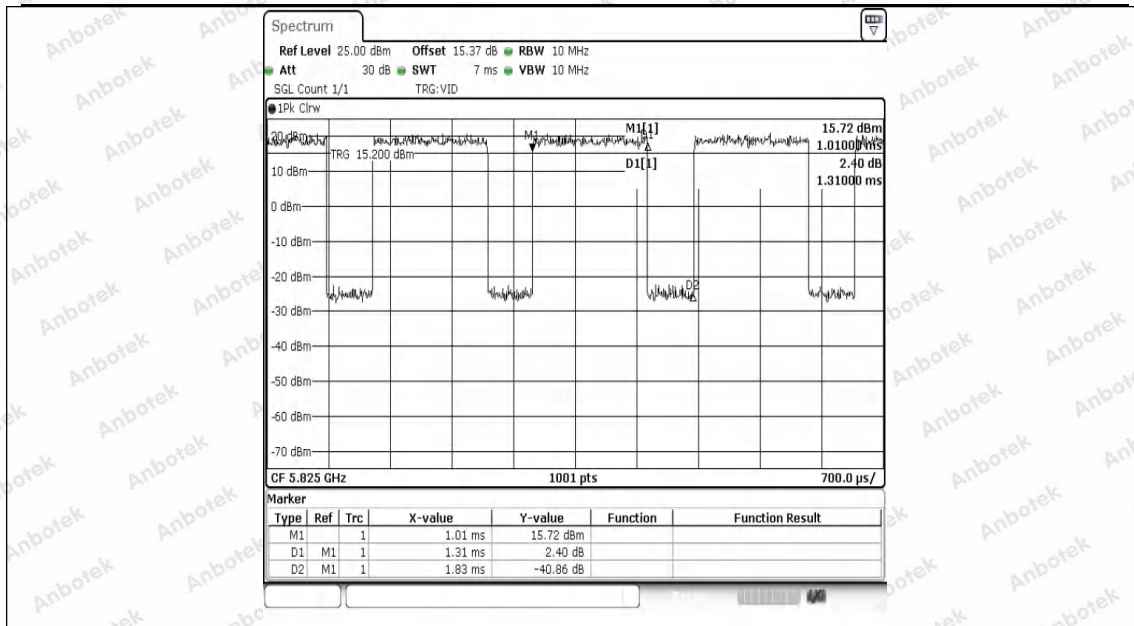

NTNV-11AC20SISO-Ant1-5825

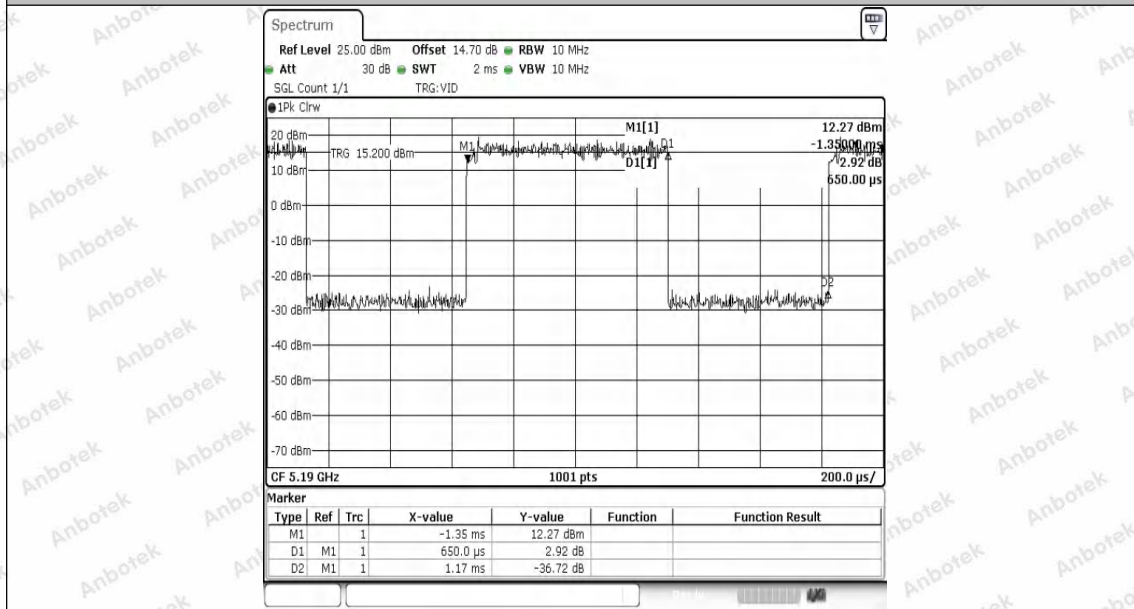

NTNV-11AC40SISO-Ant1-5190


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn



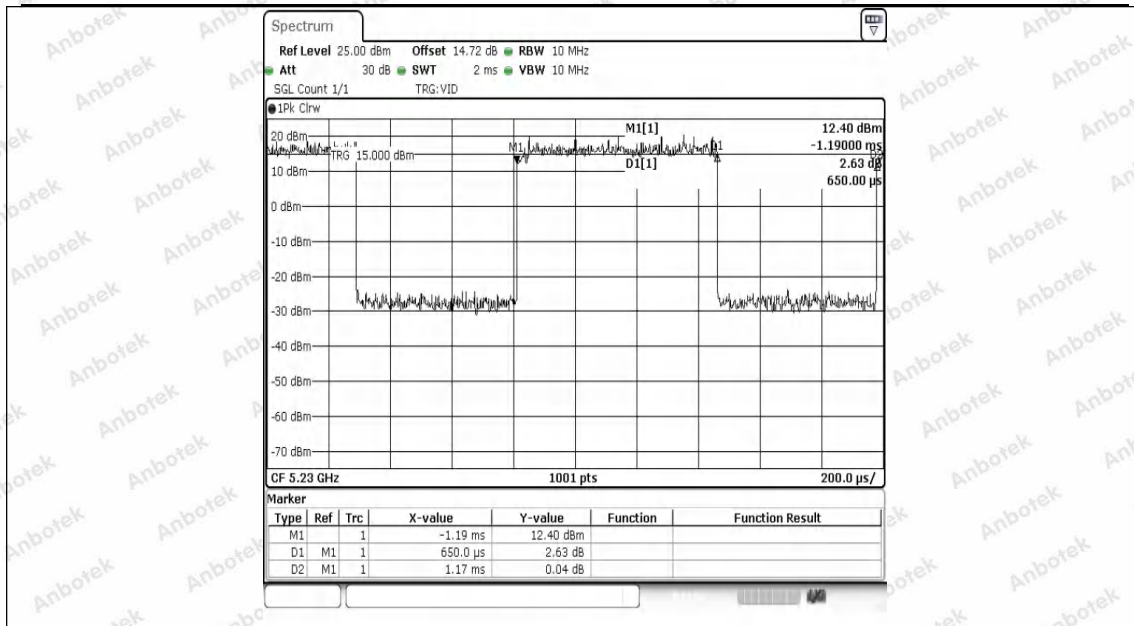


NTNV-11AC40SISO-Ant1-5230

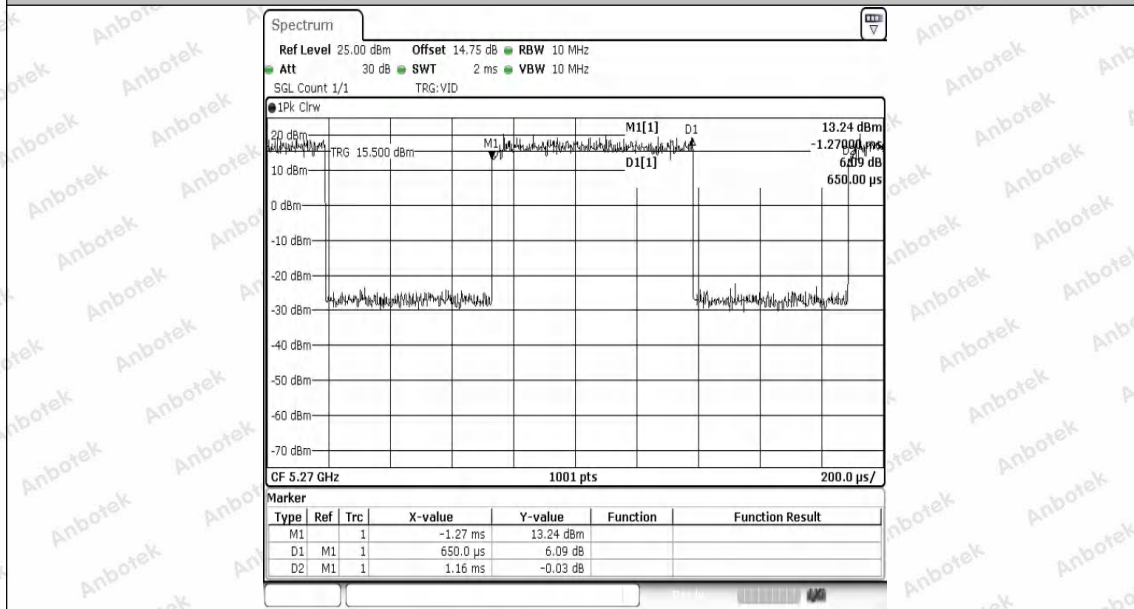


NTNV-11AC40SISO-Ant1-5270



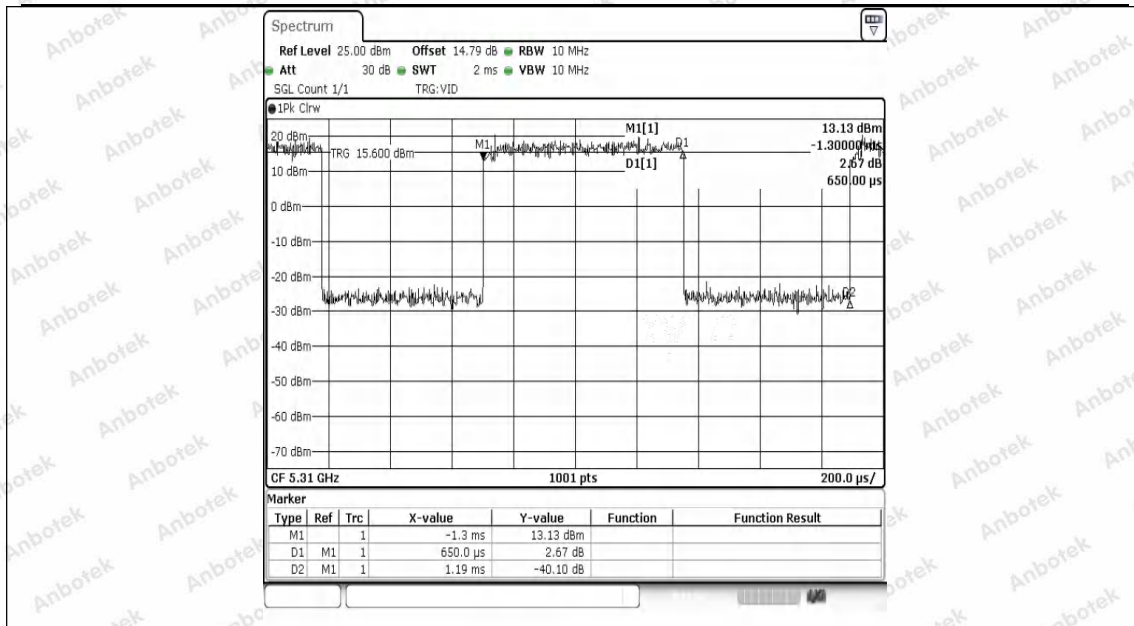


NTNV-11AC40SISO-Ant1-5310

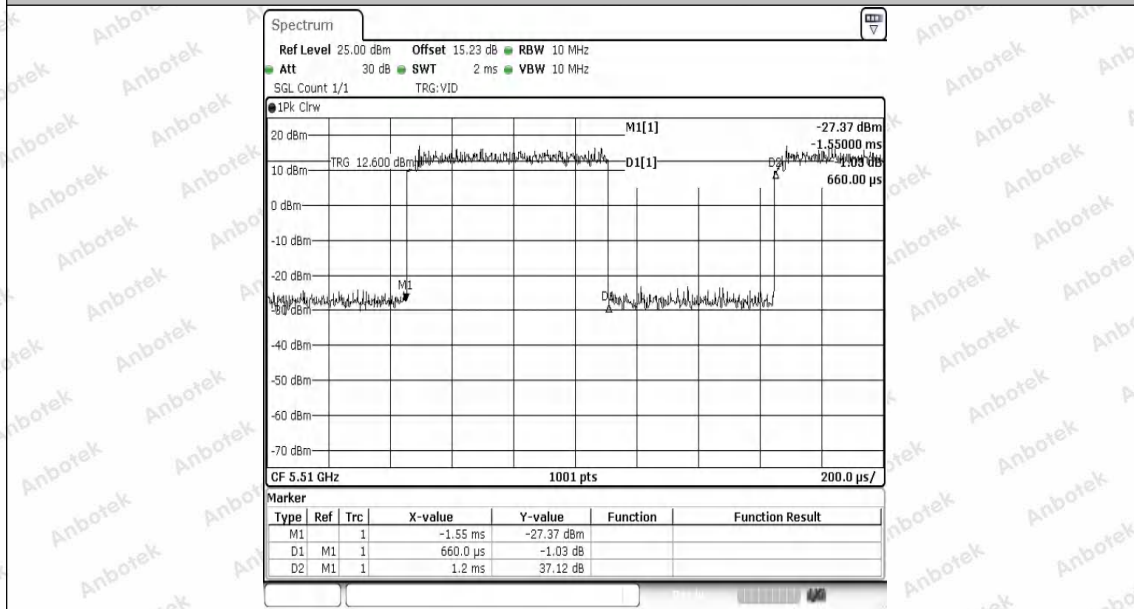


NTNV-11AC40SISO-Ant1-5510



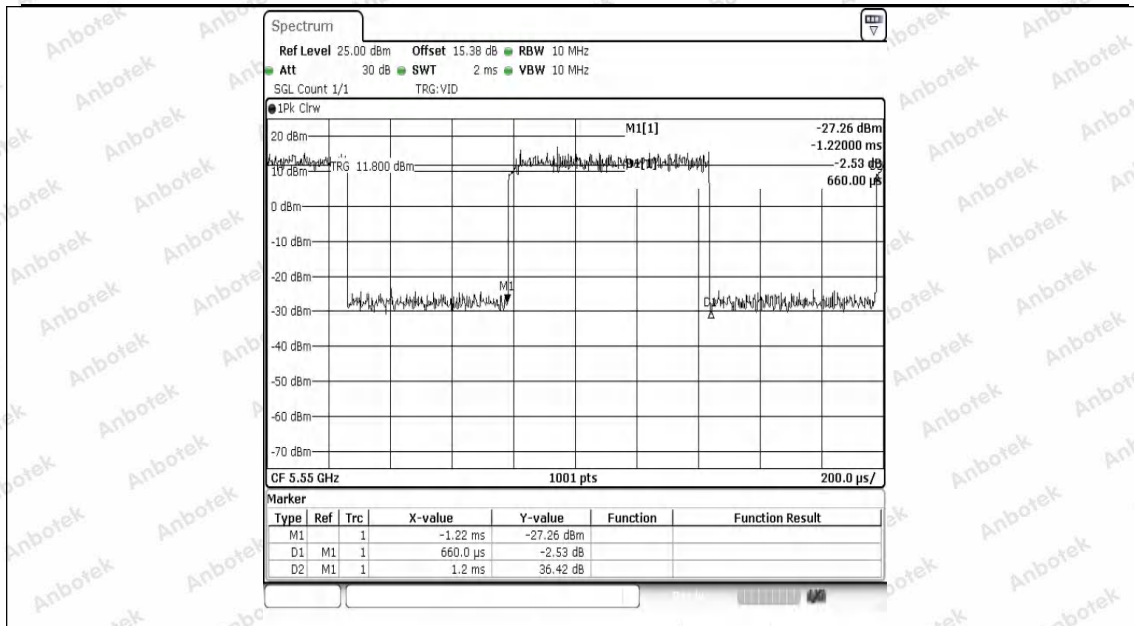

NTNV-11AC40SISO-Ant1-5550

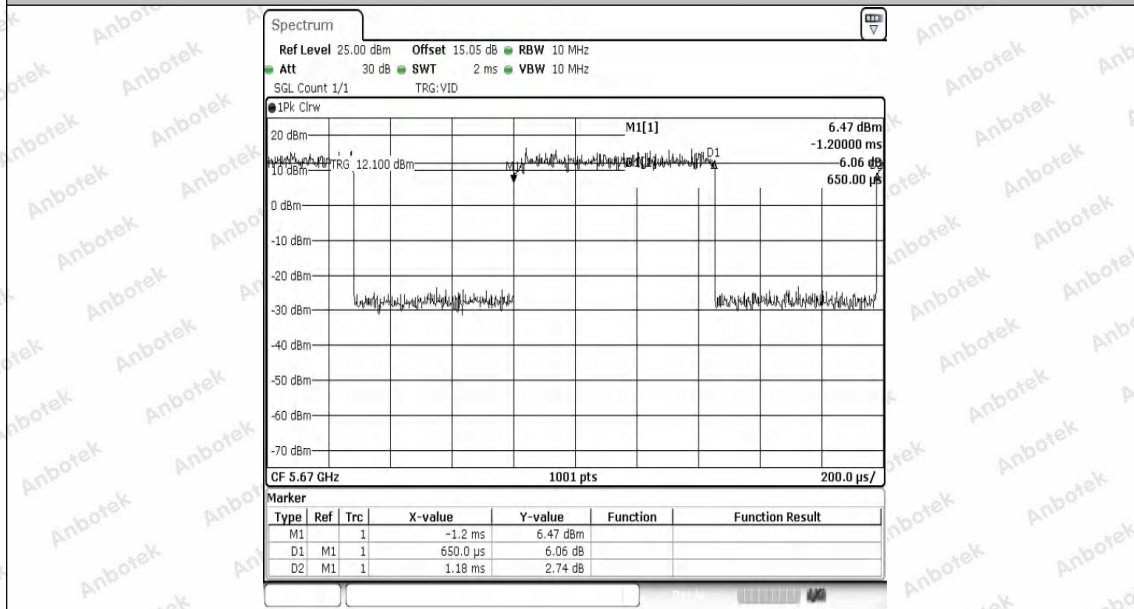

NTNV-11AC40SISO-Ant1-5670


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn




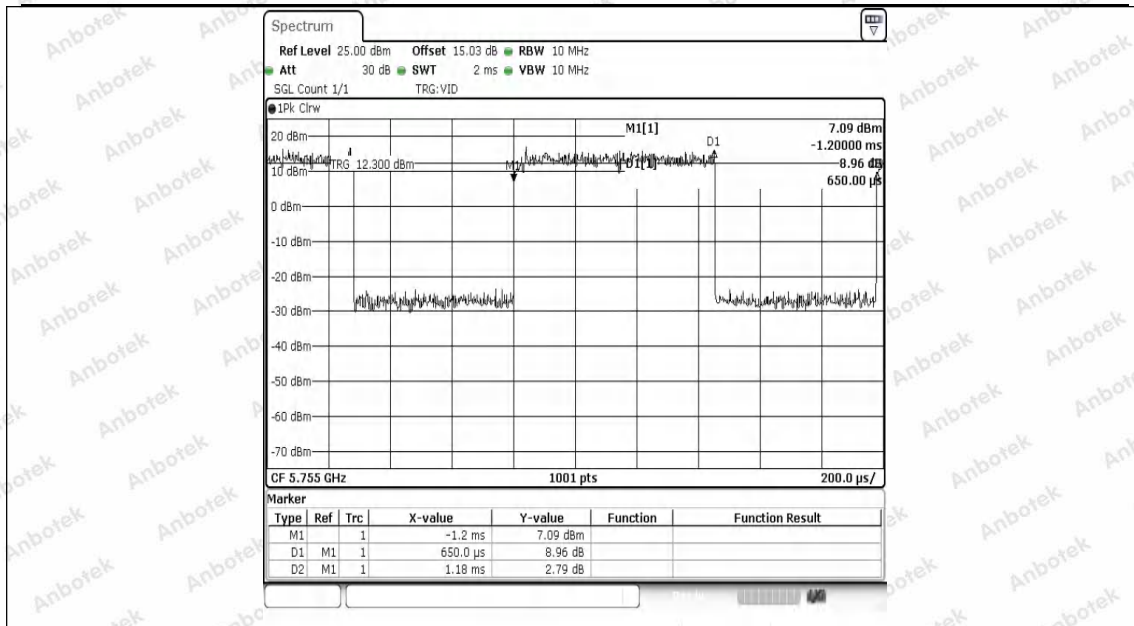




NTNV-11AC40SISO-Ant1-5755

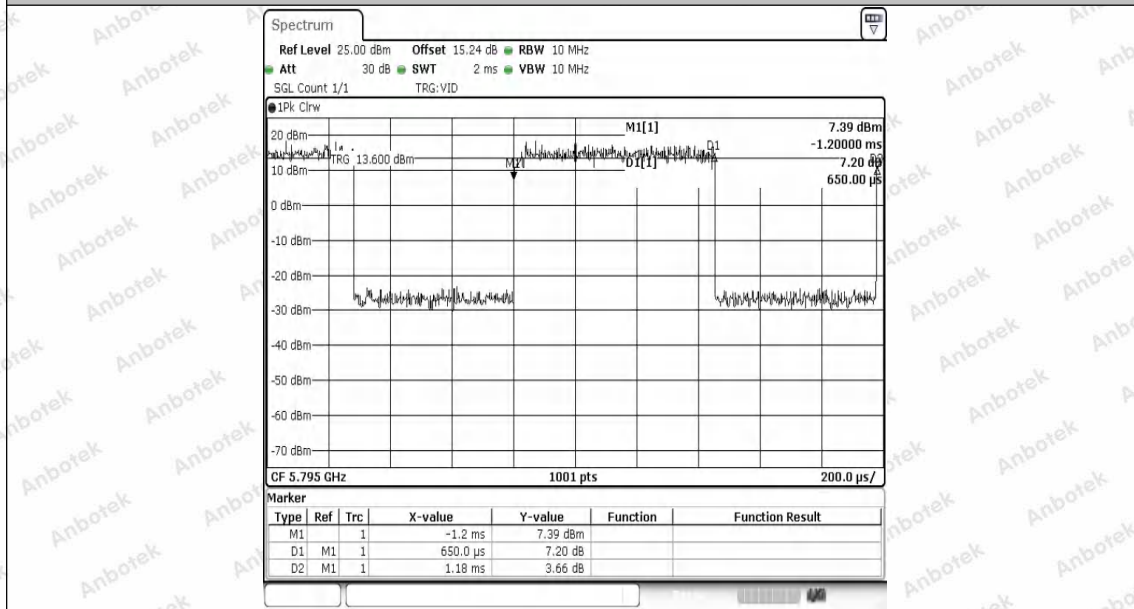

NTNV-11AC40SISO-Ant1-5795



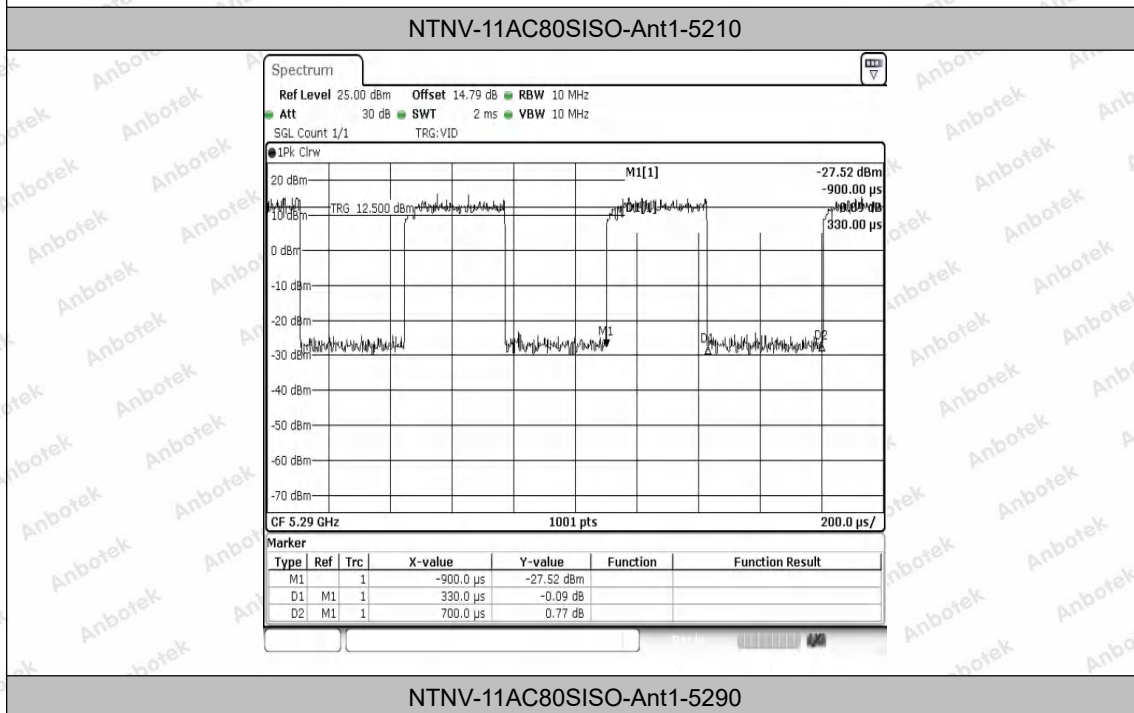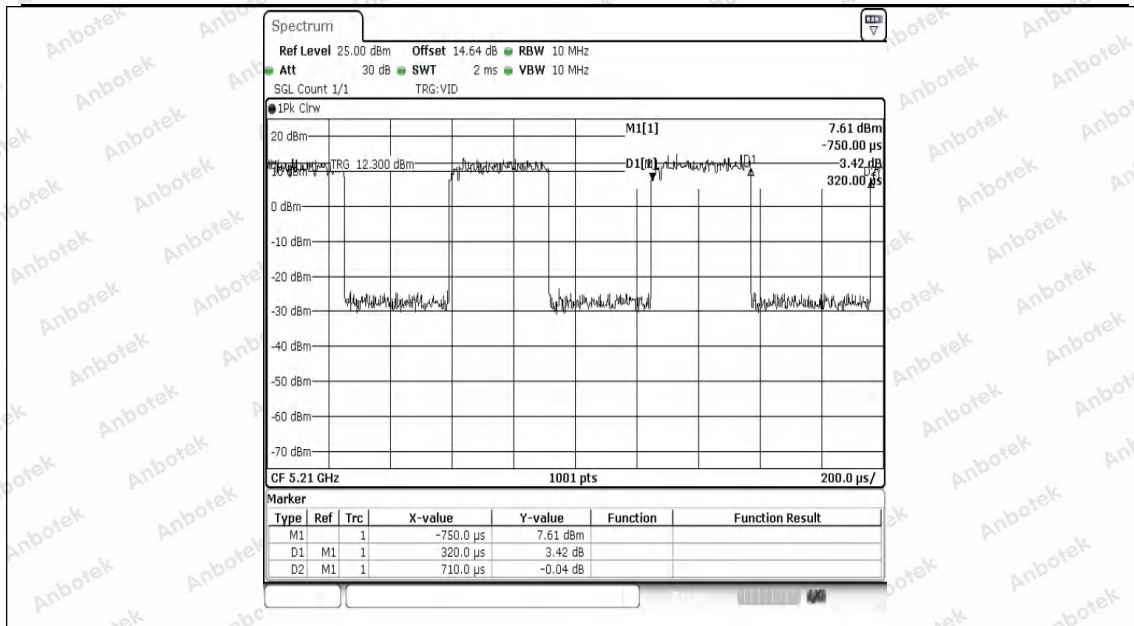

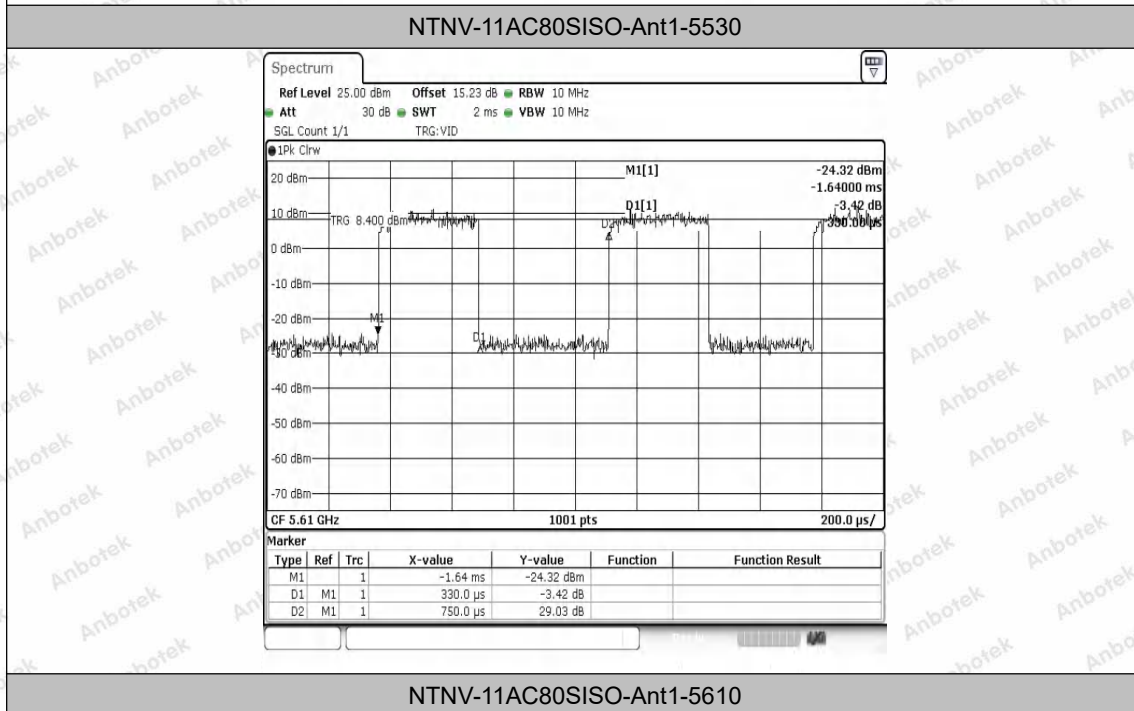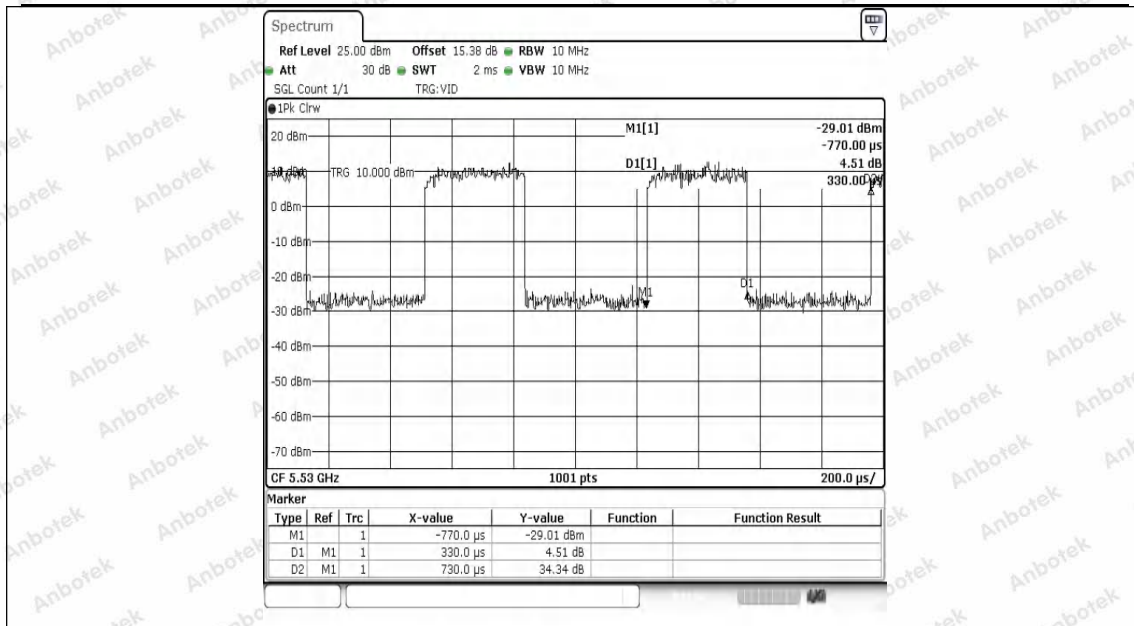
**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



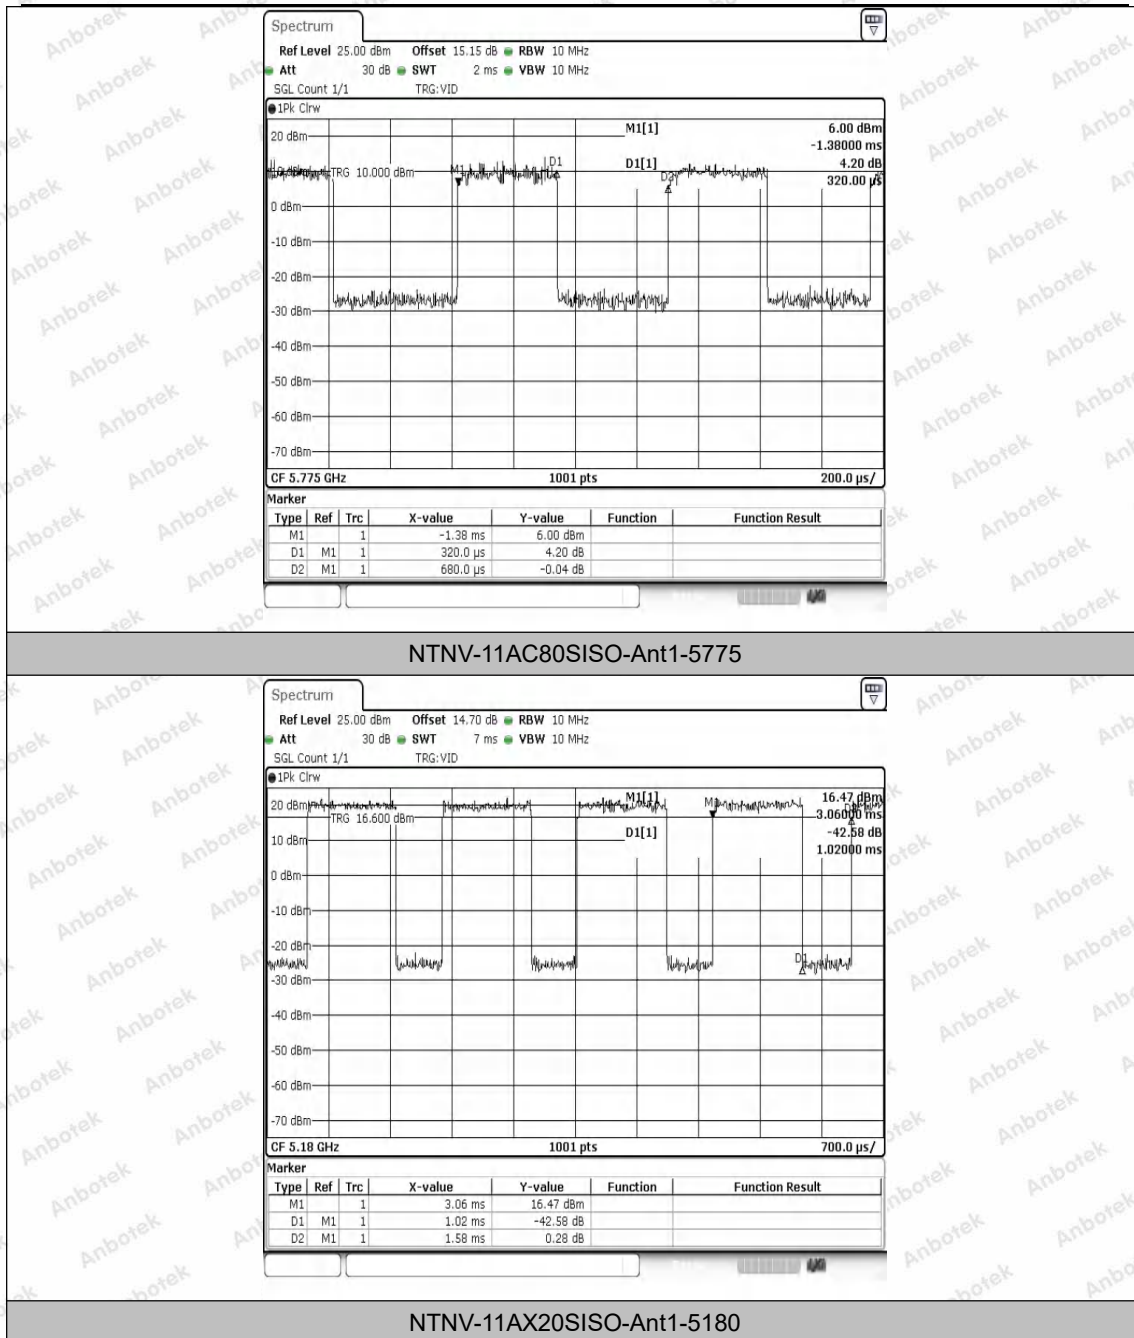


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn



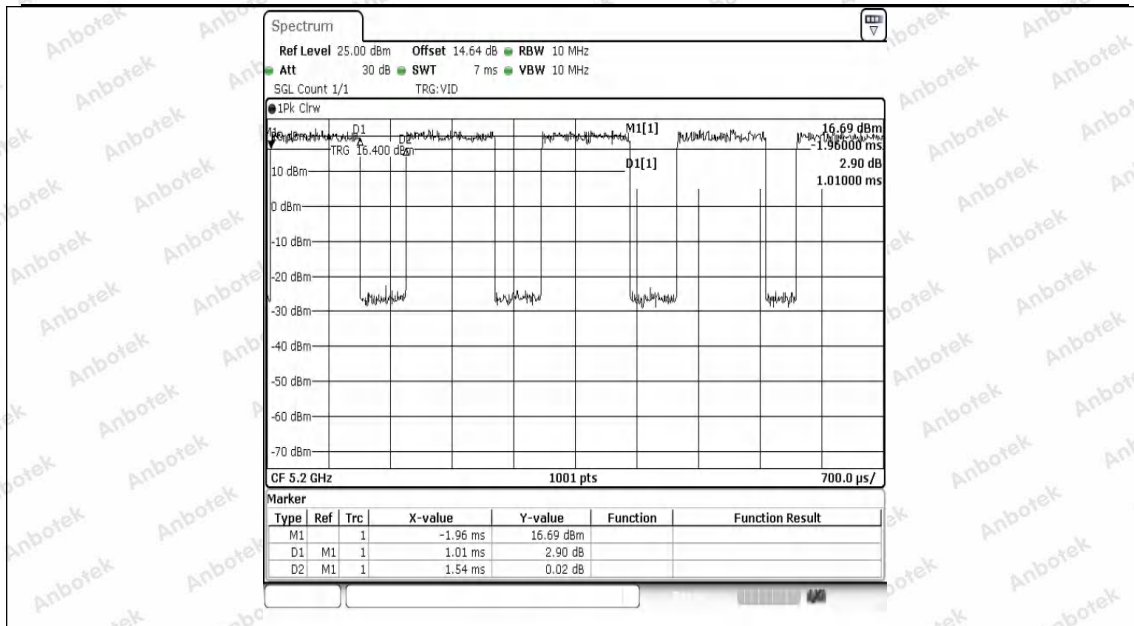


NTNV-11AX20SISO-Ant1-5200

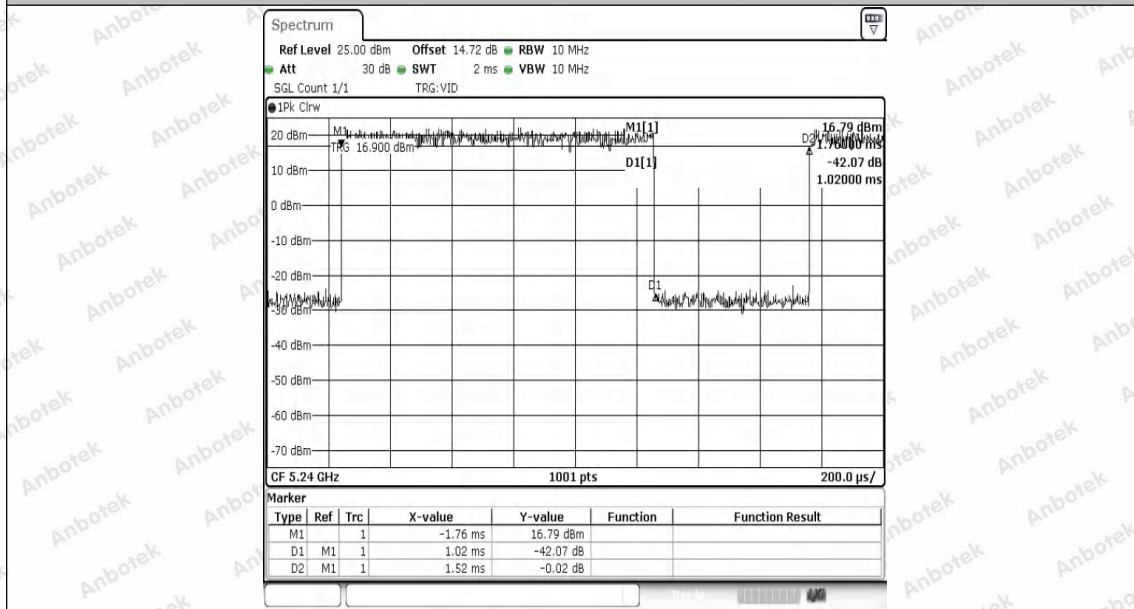


NTNV-11AX20SISO-Ant1-5240



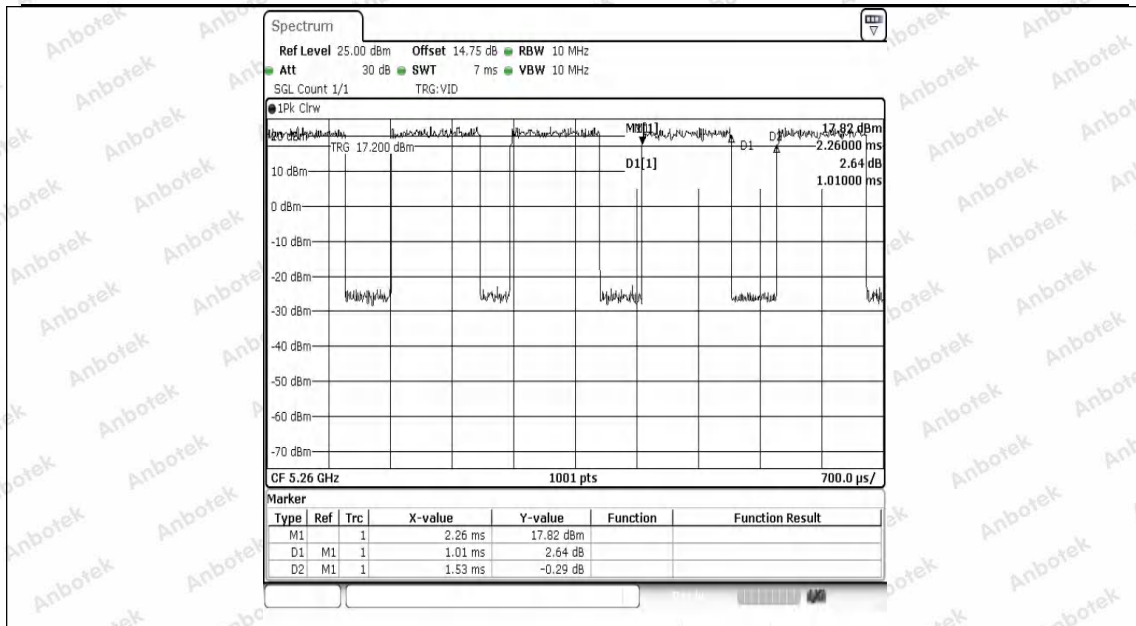

NTNV-11AX20SISO-Ant1-5260

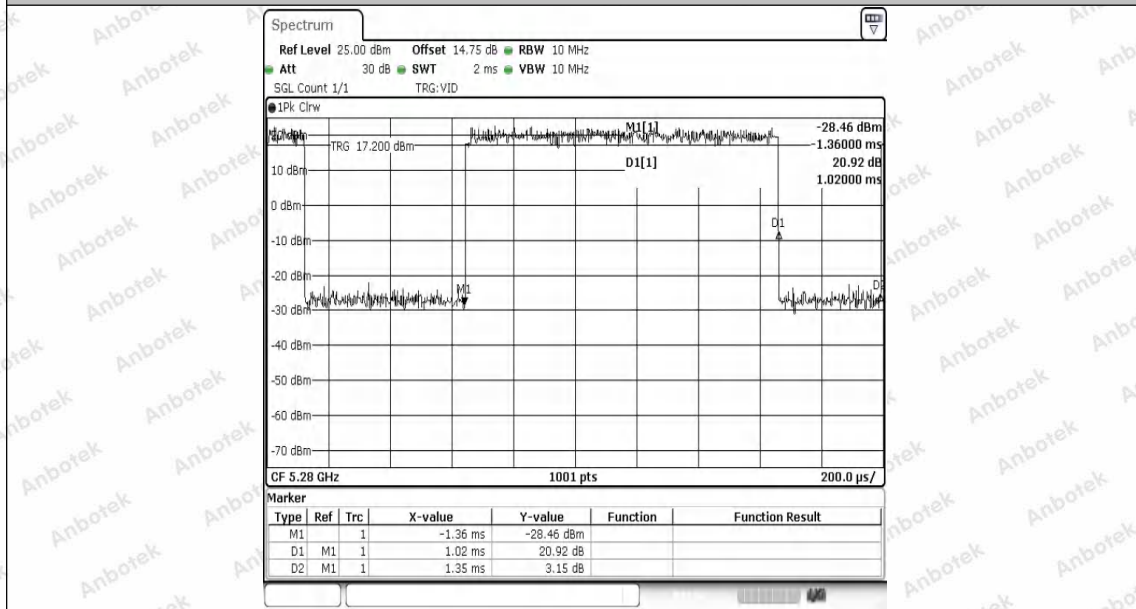

NTNV-11AX20SISO-Ant1-5280


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



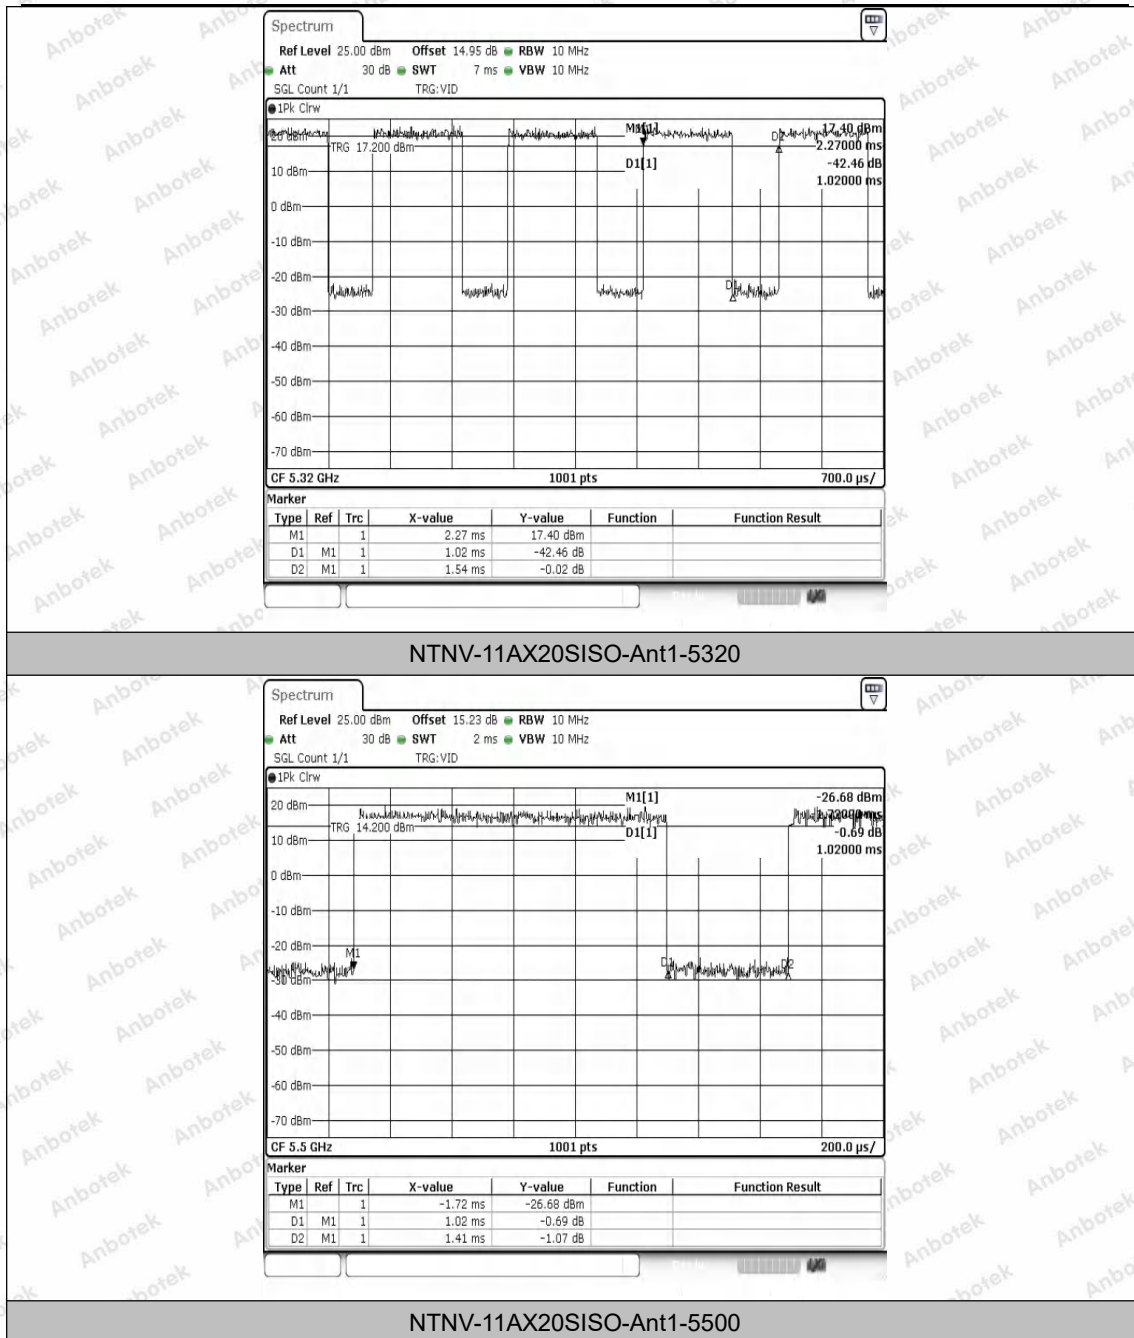



## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn

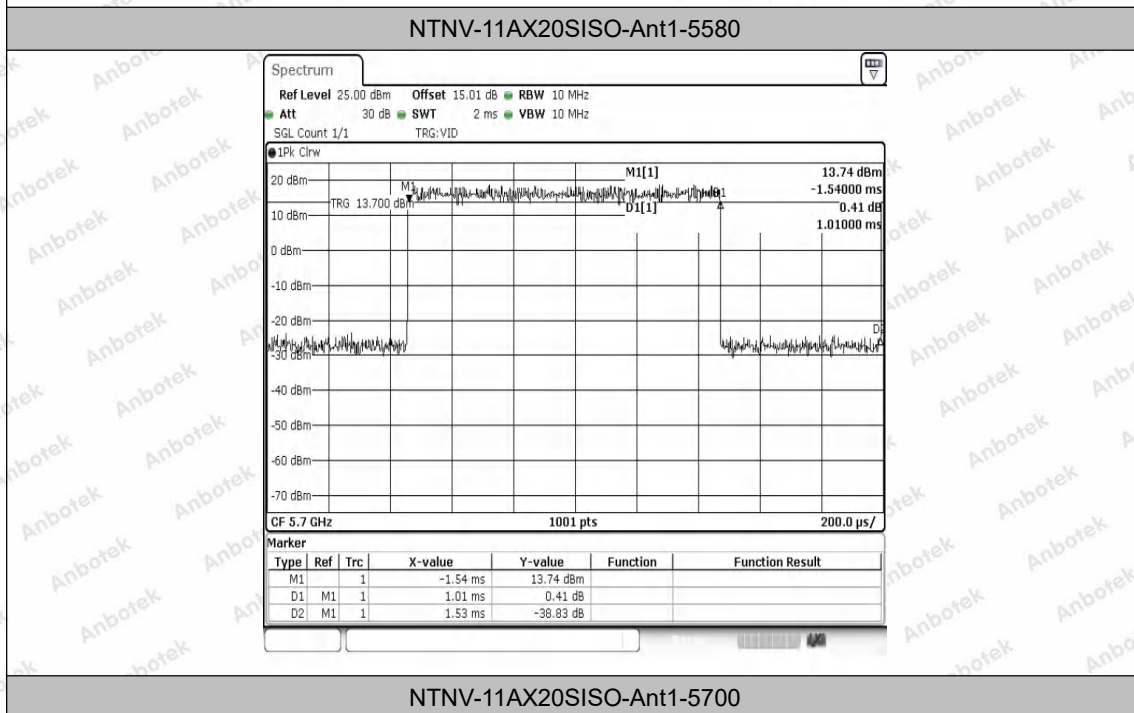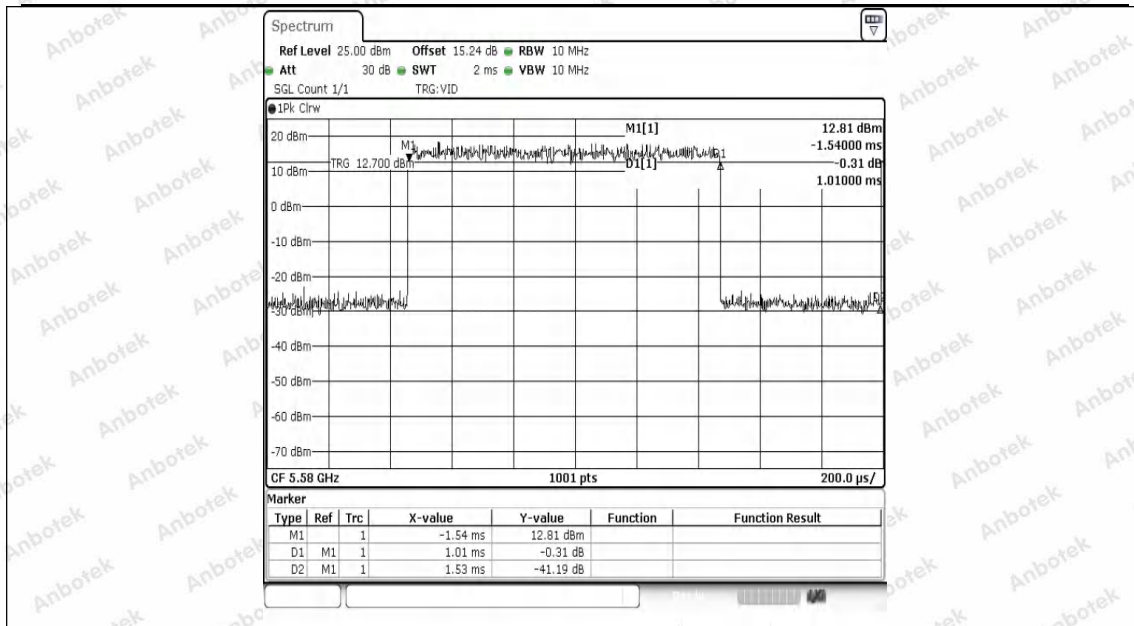


**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn



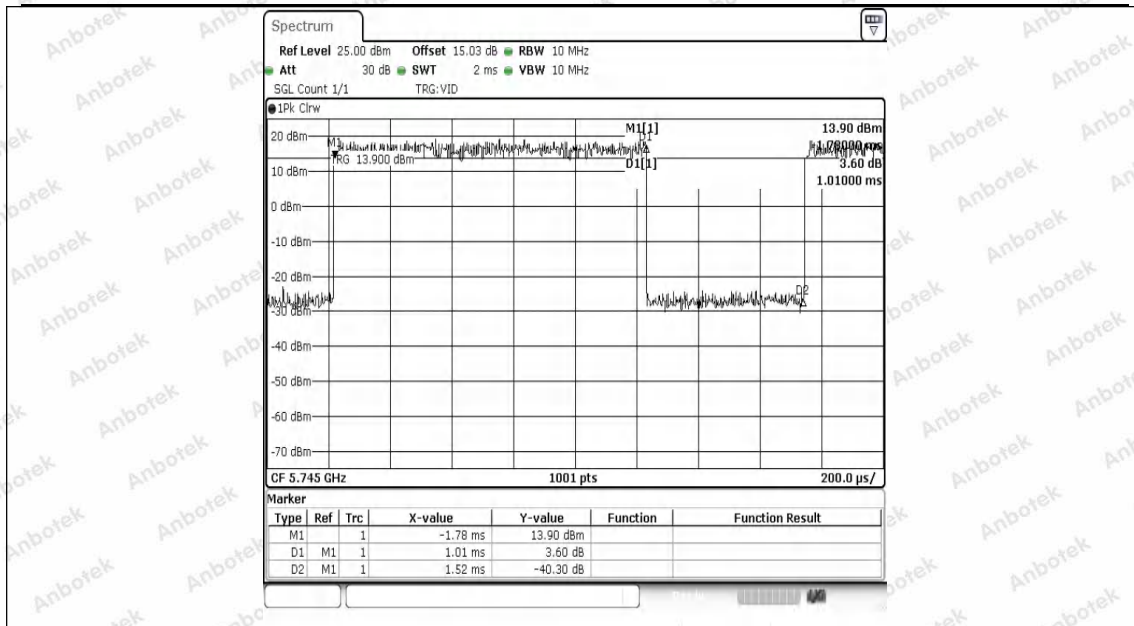


NTNV-11AX20SISO-Ant1-5745

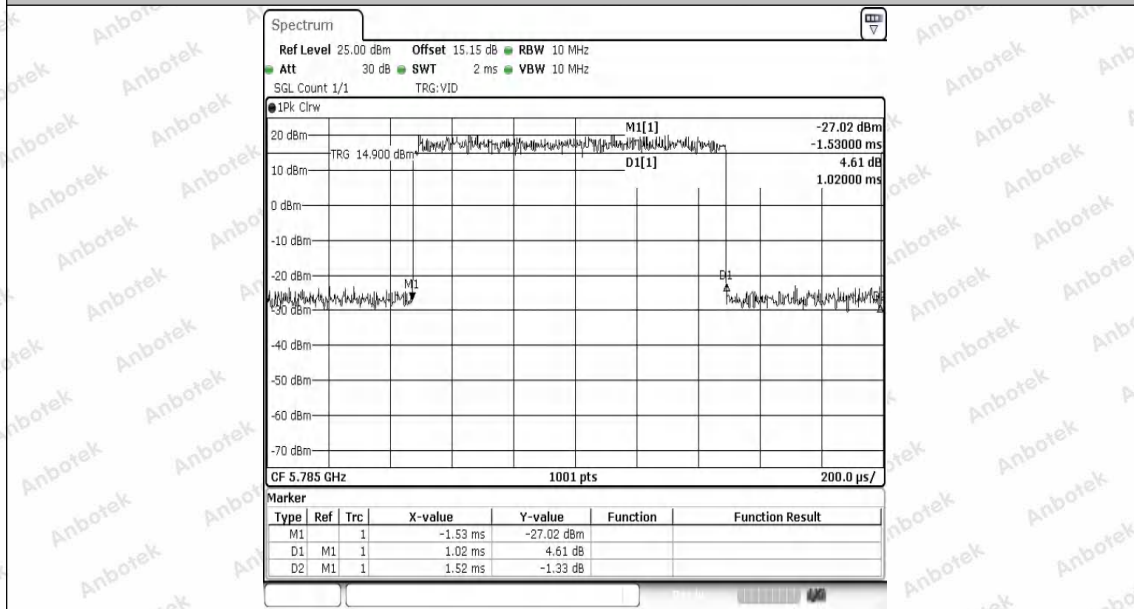

NTNV-11AX20SISO-Ant1-5785



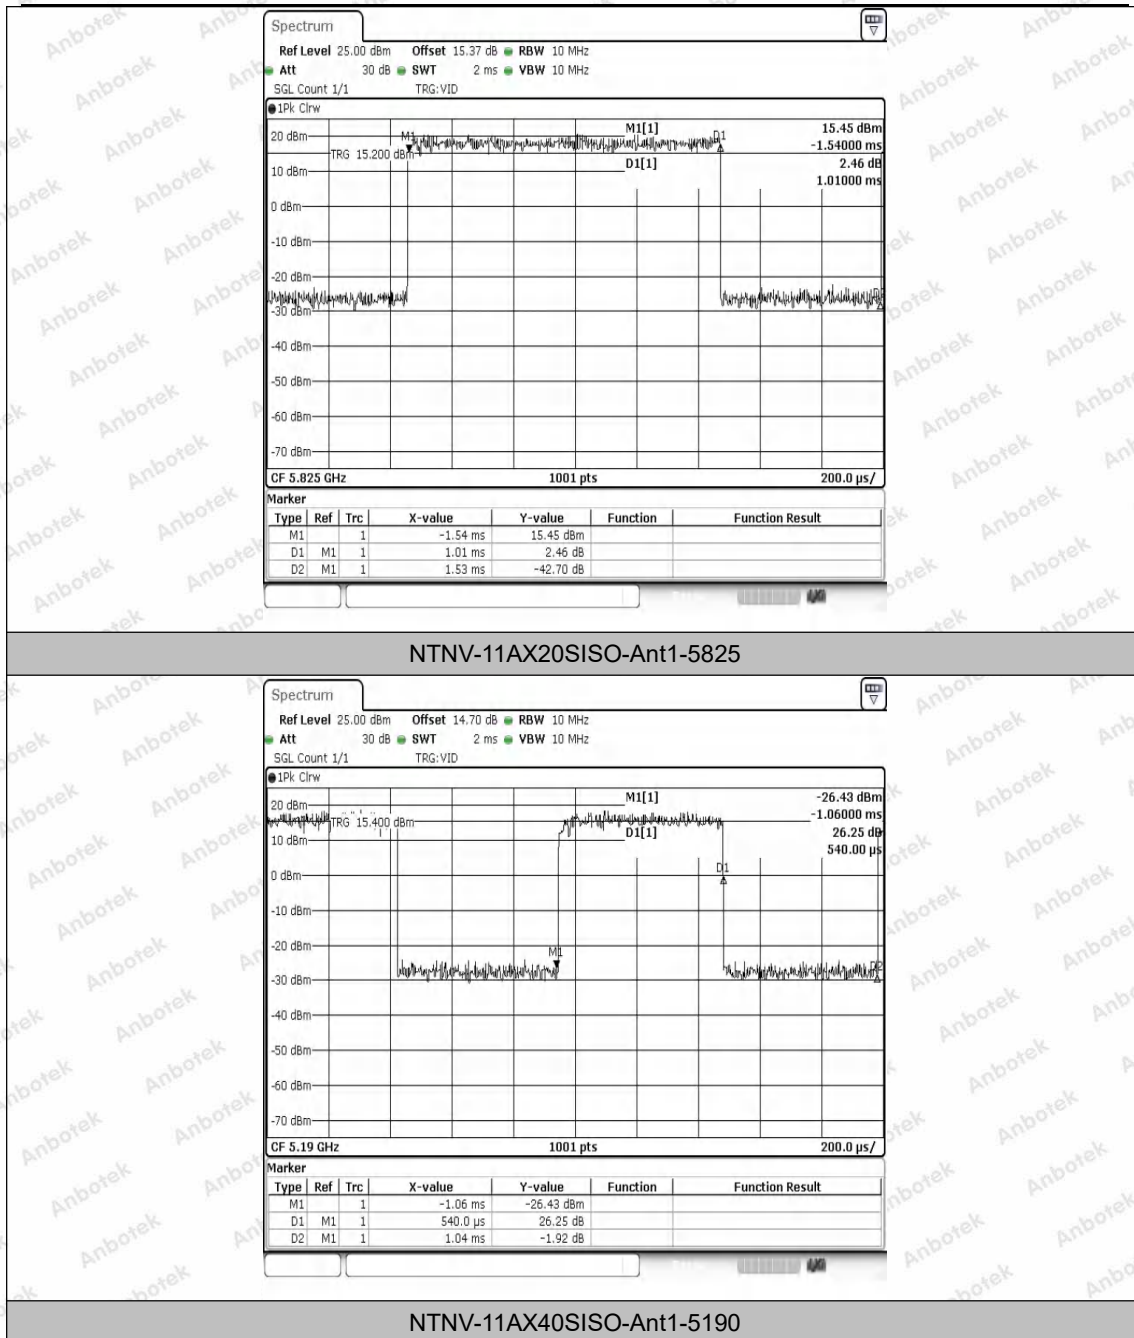


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn



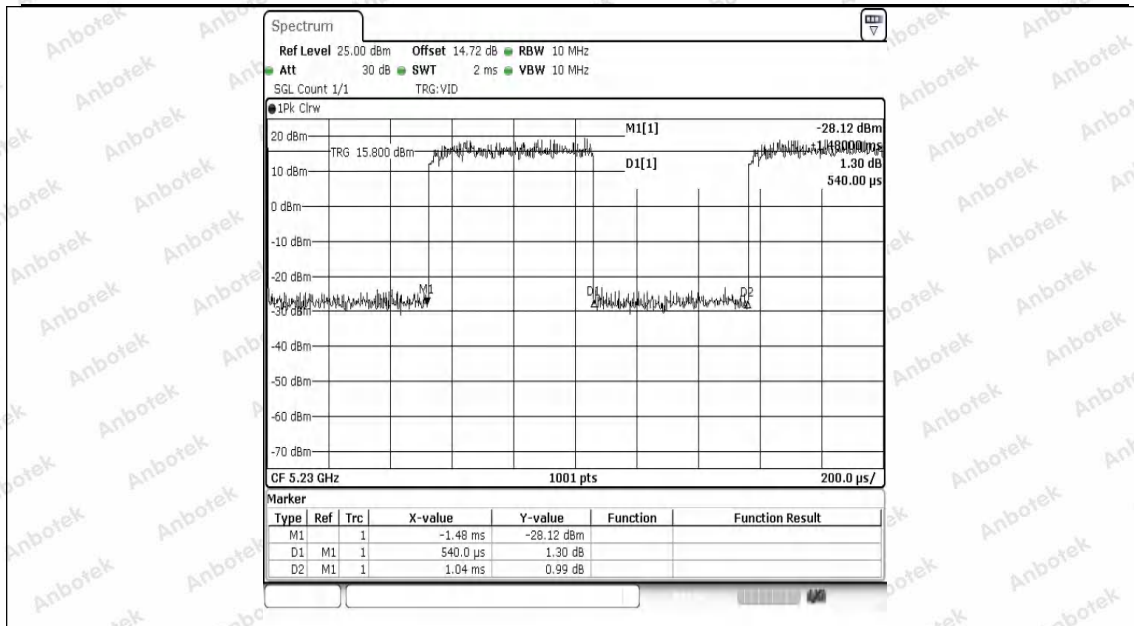

NTNV-11AX40SISO-Ant1-5230

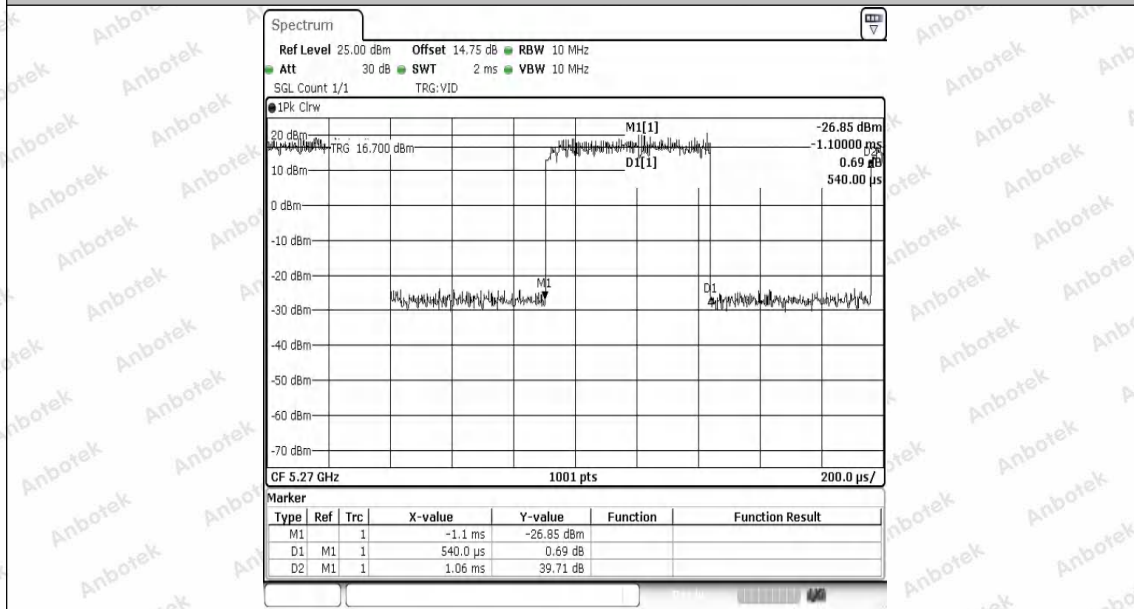

NTNV-11AX40SISO-Ant1-5270


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn



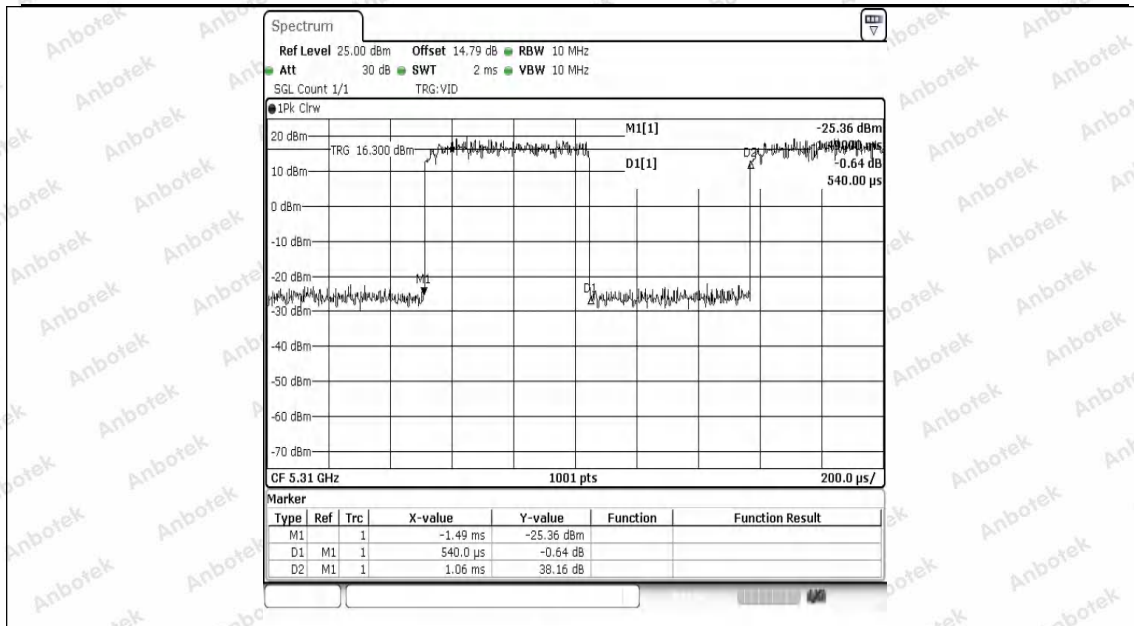


NTNV-11AX40SISO-Ant1-5310

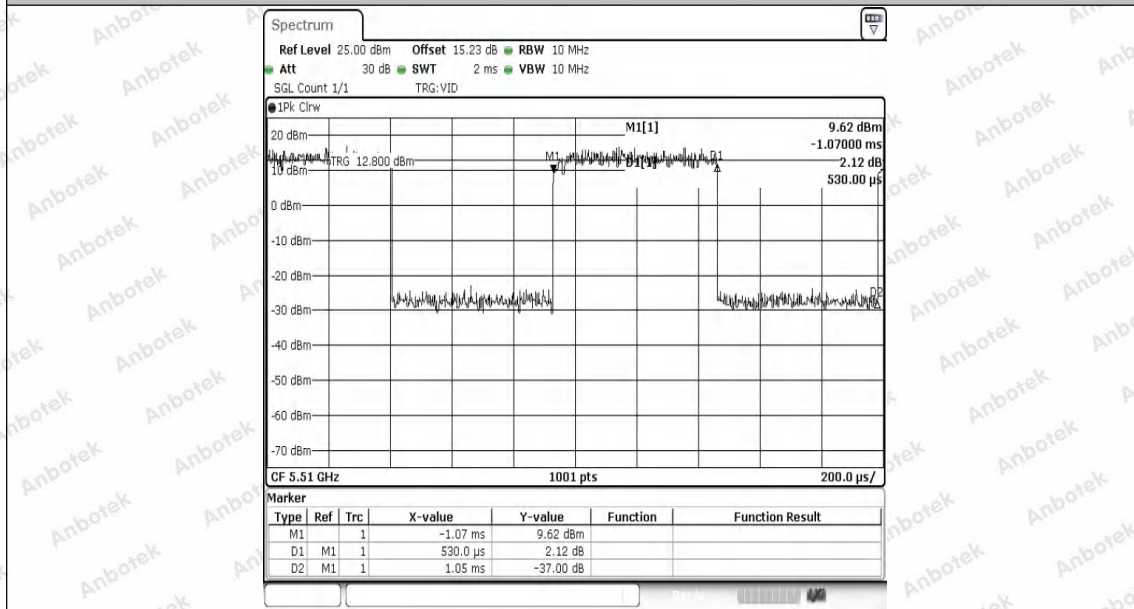


NTNV-11AX40SISO-Ant1-5510



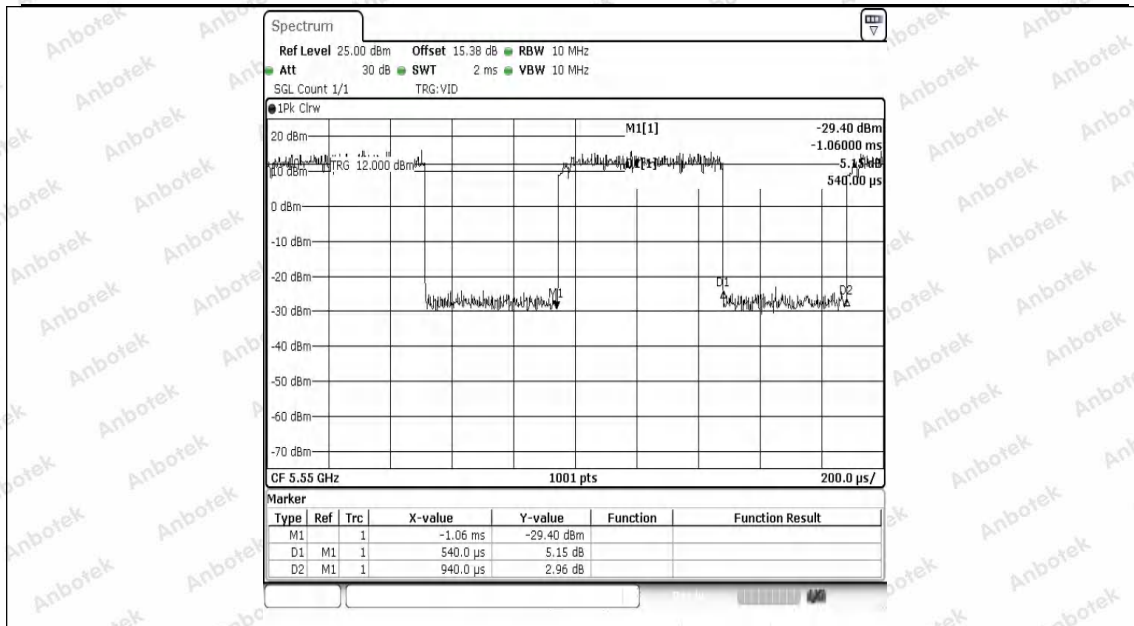

NTNV-11AX40SISO-Ant1-5550

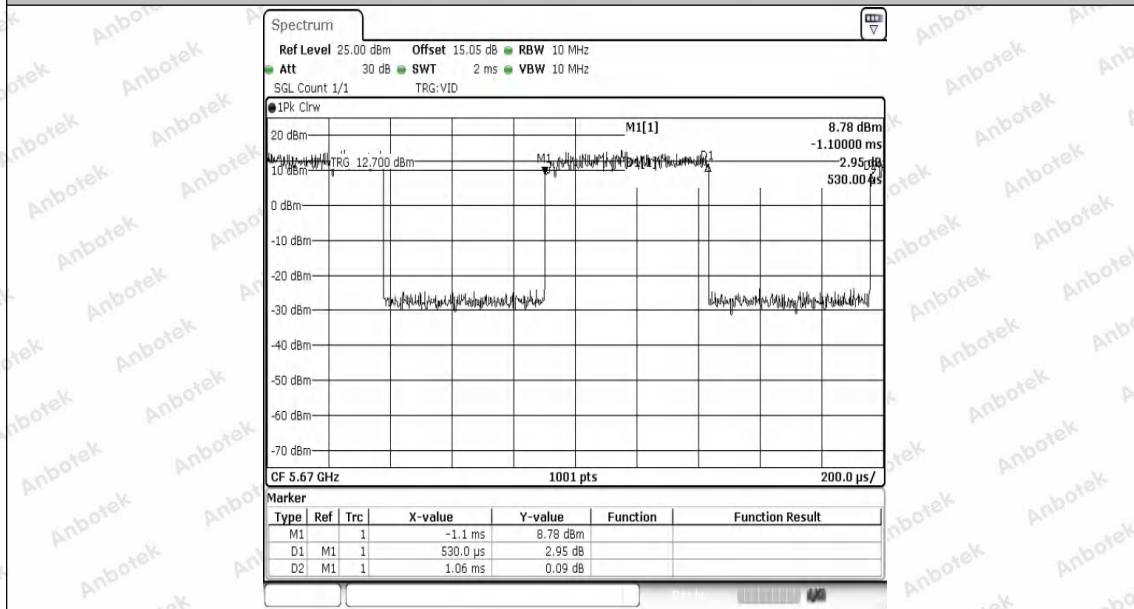

NTNV-11AX40SISO-Ant1-5670


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn



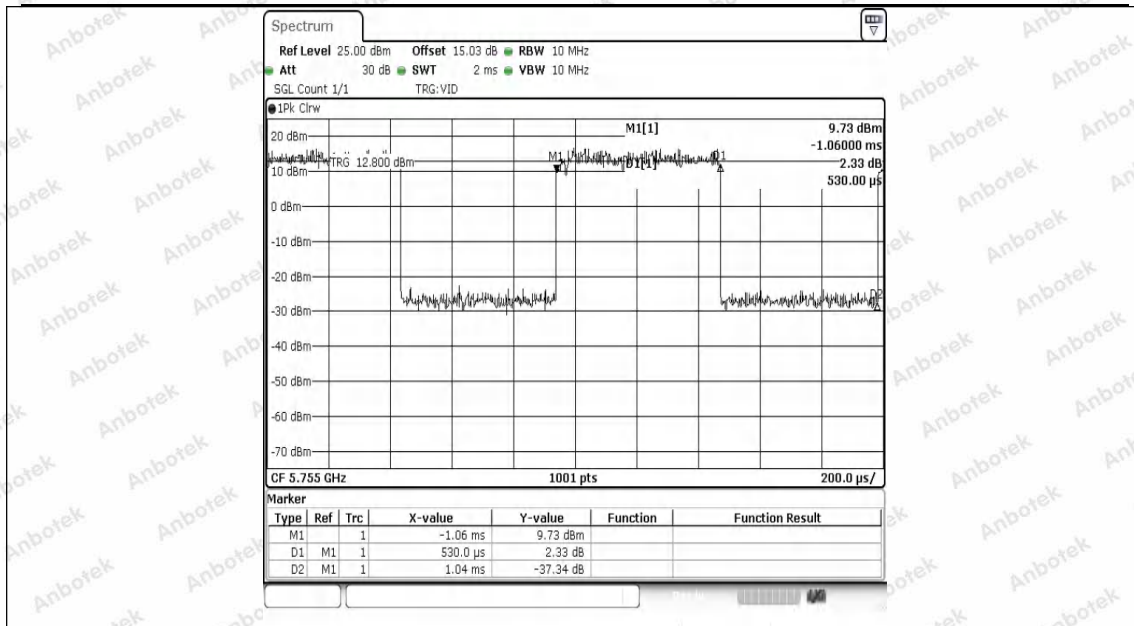


NTNV-11AX40SISO-Ant1-5755

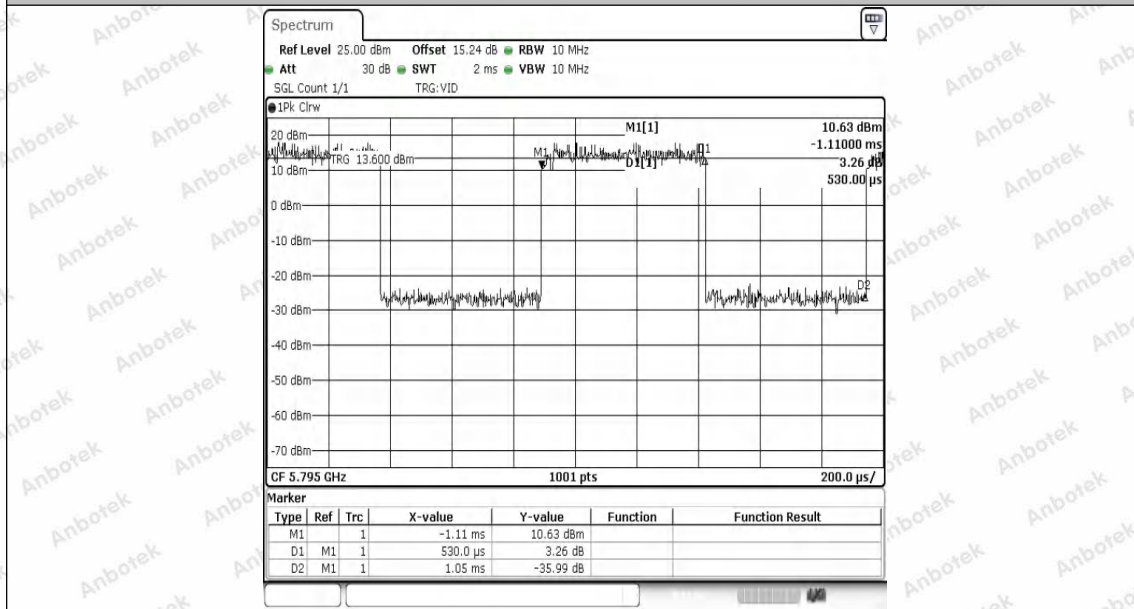


NTNV-11AX40SISO-Ant1-5795



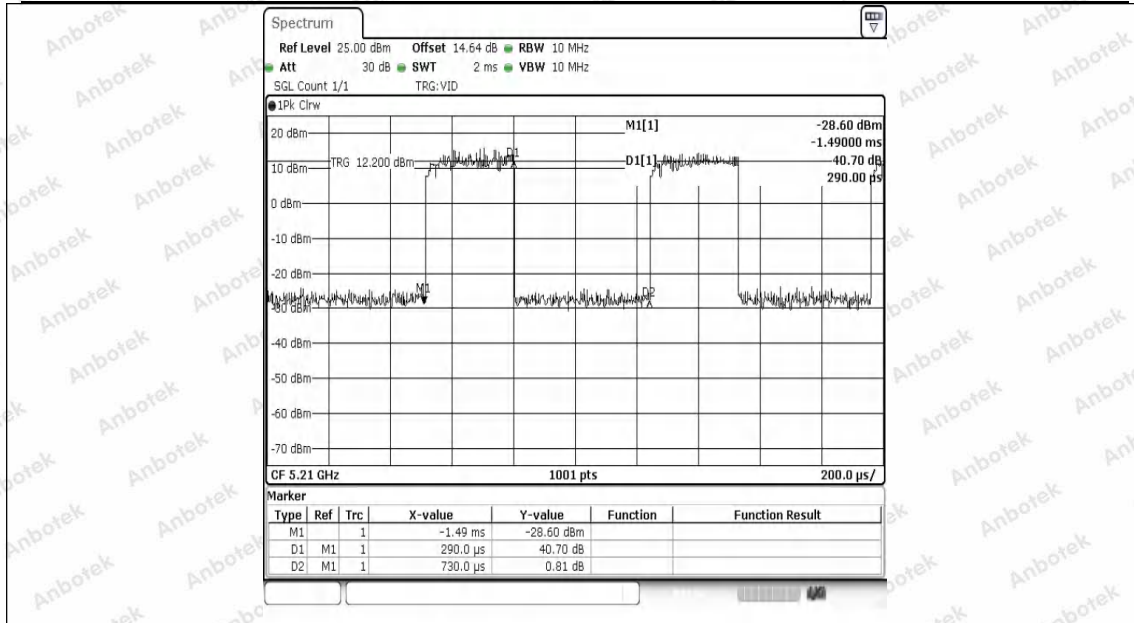


NTNV-11AX80SISO-Ant1-5210

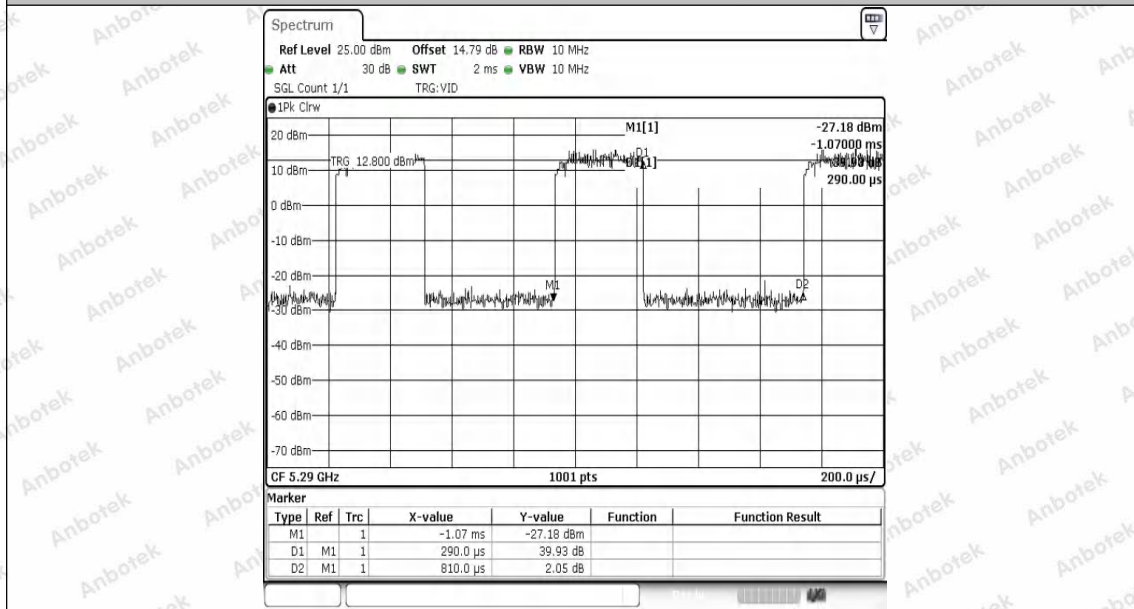


NTNV-11AX80SISO-Ant1-5290



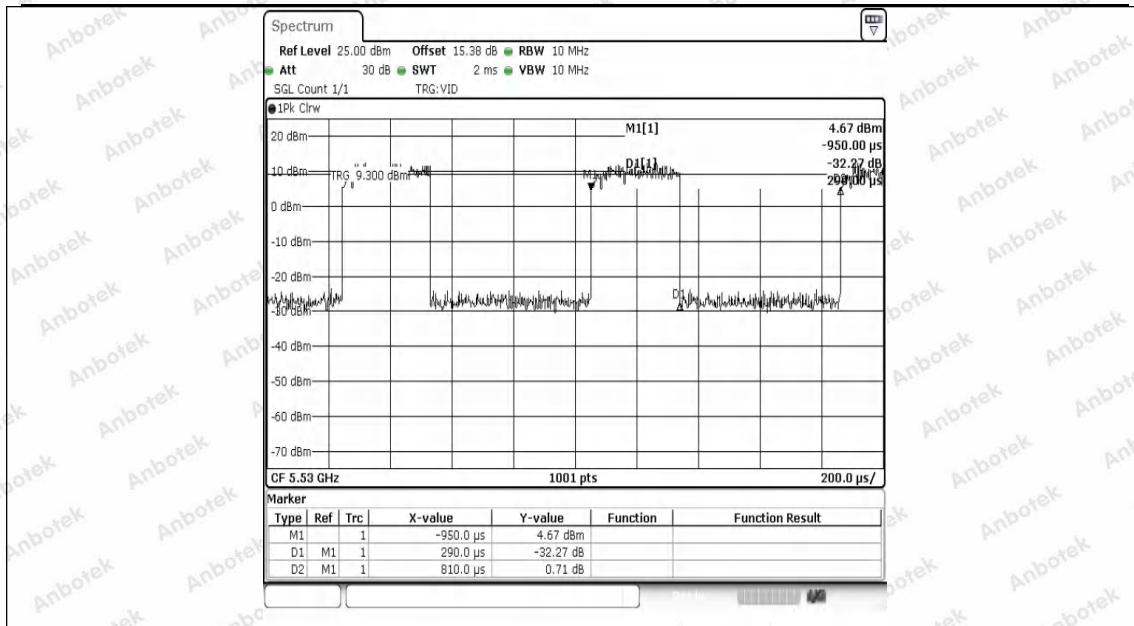


NTNV-11AX80SISO-Ant1-5530

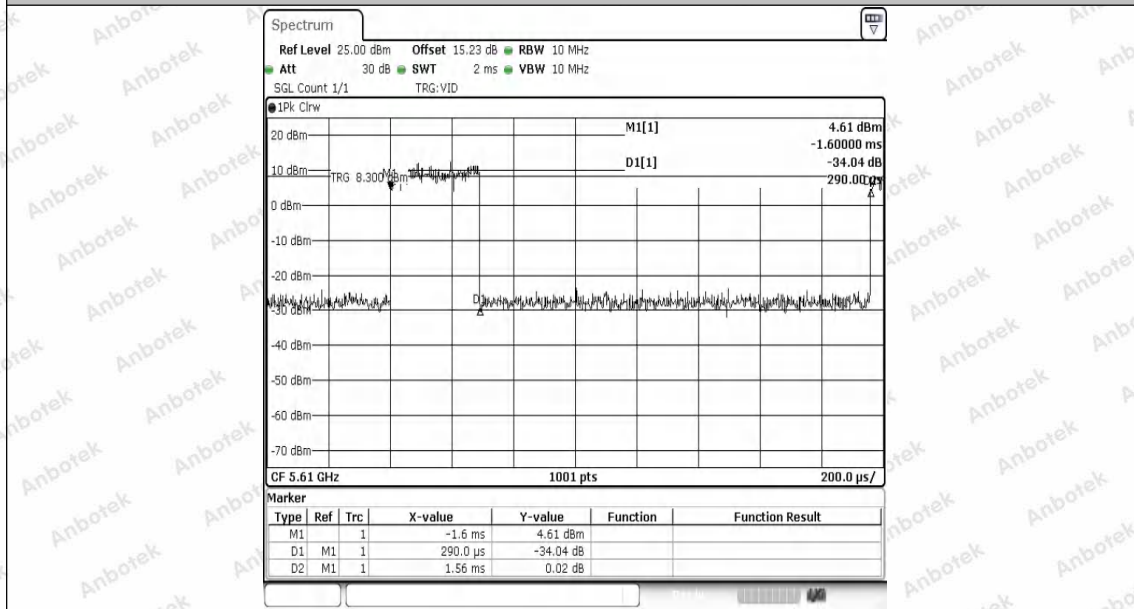

NTNV-11AX80SISO-Ant1-5610

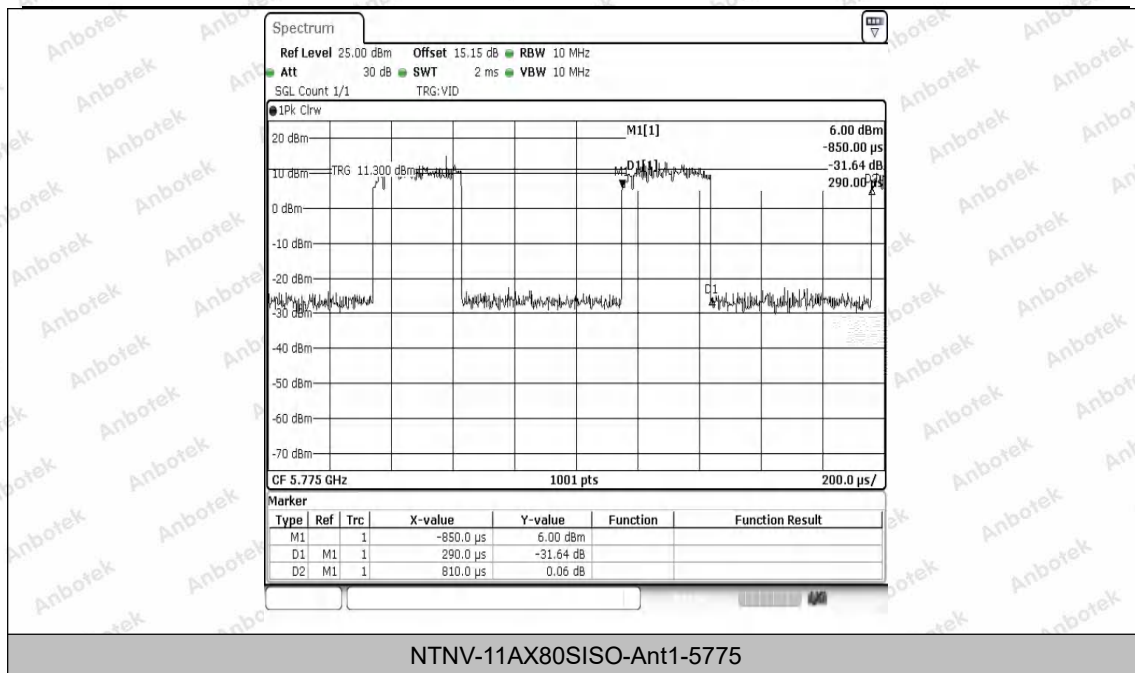

**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



## Appendix C: Maximum conducted output power

### Test Result Channel Power

| Test Mode  | Antenna | Frequency [MHz] | Set Power | Channel Power [dBm] | Duty Cycle [%] | DC Factor [dBm] | Result [dBm] | Limit [dBm] | Verdict |
|------------|---------|-----------------|-----------|---------------------|----------------|-----------------|--------------|-------------|---------|
| 11A        | Ant1    | 5180            | ---       | 11.08               | 72.77          | 1.38            | 12.46        | ≤23.98      | PASS    |
| 11A        | Ant1    | 5200            | ---       | 10.99               | 72.77          | 1.38            | 12.37        | ≤23.98      | PASS    |
| 11A        | Ant1    | 5240            | ---       | 11.35               | 72.77          | 1.38            | 12.73        | ≤23.98      | PASS    |
| 11A        | Ant1    | 5260            | ---       | 12.04               | 72.40          | 1.40            | 13.44        | ≤23.88      | PASS    |
| 11A        | Ant1    | 5280            | ---       | 11.93               | 72.77          | 1.38            | 13.31        | ≤23.97      | PASS    |
| 11A        | Ant1    | 5320            | ---       | 12.14               | 72.40          | 1.40            | 13.54        | ≤23.96      | PASS    |
| 11A        | Ant1    | 5500            | ---       | 11.01               | 72.92          | 1.37            | 12.38        | ≤23.91      | PASS    |
| 11A        | Ant1    | 5580            | ---       | 9.55                | 72.92          | 1.37            | 10.92        | ≤23.90      | PASS    |
| 11A        | Ant1    | 5700            | ---       | 10.38               | 72.40          | 1.40            | 11.78        | ≤23.93      | PASS    |
| 11A        | Ant1    | 5745            | ---       | 10.70               | 72.40          | 1.40            | 12.10        | ≤30.00      | PASS    |
| 11A        | Ant1    | 5785            | ---       | 11.69               | 72.77          | 1.38            | 13.07        | ≤30.00      | PASS    |
| 11A        | Ant1    | 5825            | ---       | 12.16               | 72.40          | 1.40            | 13.56        | ≤30.00      | PASS    |
| 11N20SISO  | Ant1    | 5180            | ---       | 10.96               | 69.89          | 1.56            | 12.52        | ≤23.98      | PASS    |
| 11N20SISO  | Ant1    | 5200            | ---       | 11.60               | 71.43          | 1.46            | 13.06        | ≤23.98      | PASS    |
| 11N20SISO  | Ant1    | 5240            | ---       | 12.02               | 69.52          | 1.58            | 13.60        | ≤23.98      | PASS    |
| 11N20SISO  | Ant1    | 5260            | ---       | 12.81               | 71.43          | 1.46            | 14.27        | ≤23.98      | PASS    |
| 11N20SISO  | Ant1    | 5280            | ---       | 12.68               | 71.04          | 1.48            | 14.16        | ≤23.98      | PASS    |
| 11N20SISO  | Ant1    | 5320            | ---       | 12.69               | 71.43          | 1.46            | 14.15        | ≤23.91      | PASS    |
| 11N20SISO  | Ant1    | 5500            | ---       | 10.57               | 71.43          | 1.46            | 12.03        | ≤23.98      | PASS    |
| 11N20SISO  | Ant1    | 5580            | ---       | 9.22                | 71.04          | 1.48            | 10.70        | ≤23.98      | PASS    |
| 11N20SISO  | Ant1    | 5700            | ---       | 10.04               | 71.43          | 1.46            | 11.50        | ≤23.98      | PASS    |
| 11N20SISO  | Ant1    | 5745            | ---       | 9.45                | 71.43          | 1.46            | 10.91        | ≤30.00      | PASS    |
| 11N20SISO  | Ant1    | 5785            | ---       | 10.58               | 71.43          | 1.46            | 12.04        | ≤30.00      | PASS    |
| 11N20SISO  | Ant1    | 5825            | ---       | 10.76               | 70.27          | 1.53            | 12.29        | ≤30.00      | PASS    |
| 11N40SISO  | Ant1    | 5190            | ---       | 8.97                | 55.56          | 2.55            | 11.52        | ≤23.98      | PASS    |
| 11N40SISO  | Ant1    | 5230            | ---       | 9.15                | 56.52          | 2.48            | 11.63        | ≤23.98      | PASS    |
| 11N40SISO  | Ant1    | 5270            | ---       | 9.83                | 54.70          | 2.62            | 12.45        | ≤23.98      | PASS    |
| 11N40SISO  | Ant1    | 5310            | ---       | 9.75                | 54.70          | 2.62            | 12.37        | ≤23.98      | PASS    |
| 11N40SISO  | Ant1    | 5510            | ---       | 6.40                | 54.17          | 2.66            | 9.06         | ≤23.98      | PASS    |
| 11N40SISO  | Ant1    | 5550            | ---       | 6.02                | 56.52          | 2.48            | 8.50         | ≤23.98      | PASS    |
| 11N40SISO  | Ant1    | 5670            | ---       | 5.84                | 56.64          | 2.47            | 8.31         | ≤23.98      | PASS    |
| 11N40SISO  | Ant1    | 5755            | ---       | 6.67                | 54.70          | 2.62            | 9.29         | ≤30.00      | PASS    |
| 11N40SISO  | Ant1    | 5795            | ---       | 7.66                | 55.17          | 2.58            | 10.24        | ≤30.00      | PASS    |
| 11AC20SISO | Ant1    | 5180            | ---       | 11.69               | 69.31          | 1.59            | 13.28        | ≤23.98      | PASS    |
| 11AC20SISO | Ant1    | 5200            | ---       | 11.80               | 71.58          | 1.45            | 13.25        | ≤23.98      | PASS    |
| 11AC20SISO | Ant1    | 5240            | ---       | 12.15               | 71.98          | 1.43            | 13.58        | ≤23.98      | PASS    |

#### Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



|            |      |      |     |       |       |      |       |        |      |
|------------|------|------|-----|-------|-------|------|-------|--------|------|
| 11AC20SISO | Ant1 | 5260 | --- | 12.92 | 71.58 | 1.45 | 14.37 | ≤23.98 | PASS |
| 11AC20SISO | Ant1 | 5280 | --- | 12.70 | 71.20 | 1.48 | 14.18 | ≤23.98 | PASS |
| 11AC20SISO | Ant1 | 5320 | --- | 12.80 | 71.58 | 1.45 | 14.25 | ≤23.94 | PASS |
| 11AC20SISO | Ant1 | 5500 | --- | 9.70  | 70.81 | 1.50 | 11.20 | ≤23.98 | PASS |
| 11AC20SISO | Ant1 | 5580 | --- | 8.35  | 71.98 | 1.43 | 9.78  | ≤23.91 | PASS |
| 11AC20SISO | Ant1 | 5700 | --- | 9.06  | 70.81 | 1.50 | 10.56 | ≤23.98 | PASS |
| 11AC20SISO | Ant1 | 5745 | --- | 9.42  | 70.05 | 1.55 | 10.97 | ≤30.00 | PASS |
| 11AC20SISO | Ant1 | 5785 | --- | 10.45 | 71.98 | 1.43 | 11.88 | ≤30.00 | PASS |
| 11AC20SISO | Ant1 | 5825 | --- | 10.94 | 71.58 | 1.45 | 12.39 | ≤30.00 | PASS |
| 11AC40SISO | Ant1 | 5190 | --- | 8.95  | 55.56 | 2.55 | 11.50 | ≤23.98 | PASS |
| 11AC40SISO | Ant1 | 5230 | --- | 9.16  | 55.56 | 2.55 | 11.71 | ≤23.98 | PASS |
| 11AC40SISO | Ant1 | 5270 | --- | 9.96  | 56.03 | 2.52 | 12.48 | ≤23.98 | PASS |
| 11AC40SISO | Ant1 | 5310 | --- | 9.79  | 54.62 | 2.63 | 12.42 | ≤23.98 | PASS |
| 11AC40SISO | Ant1 | 5510 | --- | 6.59  | 55.00 | 2.60 | 9.19  | ≤23.98 | PASS |
| 11AC40SISO | Ant1 | 5550 | --- | 5.88  | 55.00 | 2.60 | 8.48  | ≤23.98 | PASS |
| 11AC40SISO | Ant1 | 5670 | --- | 5.90  | 55.08 | 2.59 | 8.49  | ≤23.98 | PASS |
| 11AC40SISO | Ant1 | 5755 | --- | 6.60  | 55.08 | 2.59 | 9.19  | ≤30.00 | PASS |
| 11AC40SISO | Ant1 | 5795 | --- | 7.77  | 55.08 | 2.59 | 10.36 | ≤30.00 | PASS |
| 11AC80SISO | Ant1 | 5210 | --- | 6.89  | 45.07 | 3.46 | 10.35 | ≤23.98 | PASS |
| 11AC80SISO | Ant1 | 5290 | --- | 8.08  | 47.14 | 3.27 | 11.35 | ≤23.98 | PASS |
| 11AC80SISO | Ant1 | 5530 | --- | 4.51  | 45.21 | 3.45 | 7.96  | ≤23.98 | PASS |
| 11AC80SISO | Ant1 | 5610 | --- | 5.45  | 44.00 | 3.57 | 8.72  | ≤23.98 | PASS |
| 11AC80SISO | Ant1 | 5775 | --- | 11.24 | 47.06 | 3.27 | 13.14 | ≤30.00 | PASS |
| 11AX20SISO | Ant1 | 5180 | --- | 11.27 | 64.56 | 1.90 | 13.10 | ≤23.98 | PASS |
| 11AX20SISO | Ant1 | 5200 | --- | 11.72 | 65.58 | 1.83 | 13.45 | ≤23.98 | PASS |
| 11AX20SISO | Ant1 | 5240 | --- | 12.41 | 67.11 | 1.73 | 14.21 | ≤23.98 | PASS |
| 11AX20SISO | Ant1 | 5260 | --- | 12.90 | 66.01 | 1.80 | 14.12 | ≤23.98 | PASS |
| 11AX20SISO | Ant1 | 5280 | --- | 12.31 | 75.56 | 1.22 | 14.10 | ≤23.96 | PASS |
| 11AX20SISO | Ant1 | 5320 | --- | 9.60  | 66.23 | 1.79 | 11.01 | ≤23.98 | PASS |
| 11AX20SISO | Ant1 | 5500 | --- | 7.78  | 72.34 | 1.41 | 9.58  | ≤23.97 | PASS |
| 11AX20SISO | Ant1 | 5580 | --- | 8.62  | 66.01 | 1.80 | 10.42 | ≤23.98 | PASS |
| 11AX20SISO | Ant1 | 5700 | --- | 8.96  | 66.01 | 1.80 | 10.74 | ≤23.98 | PASS |
| 11AX20SISO | Ant1 | 5745 | --- | 10.07 | 66.45 | 1.78 | 11.80 | ≤30.00 | PASS |
| 11AX20SISO | Ant1 | 5785 | --- | 10.40 | 67.11 | 1.73 | 12.20 | ≤30.00 | PASS |
| 11AX20SISO | Ant1 | 5825 | --- | 8.50  | 66.01 | 1.80 | 11.35 | ≤30.00 | PASS |
| 11AX40SISO | Ant1 | 5190 | --- | 8.67  | 51.92 | 2.85 | 11.52 | ≤23.98 | PASS |
| 11AX40SISO | Ant1 | 5230 | --- | 9.42  | 51.92 | 2.85 | 12.35 | ≤23.98 | PASS |
| 11AX40SISO | Ant1 | 5270 | --- | 9.20  | 50.94 | 2.93 | 12.13 | ≤23.98 | PASS |
| 11AX40SISO | Ant1 | 5310 | --- | 6.13  | 50.94 | 2.93 | 9.10  | ≤23.98 | PASS |
| 11AX40SISO | Ant1 | 5510 | --- | 5.83  | 50.48 | 2.97 | 8.24  | ≤23.98 | PASS |
| 11AX40SISO | Ant1 | 5550 | --- | 5.15  | 57.45 | 2.41 | 8.16  | ≤23.98 | PASS |
| 11AX40SISO | Ant1 | 5670 | --- | 6.05  | 50.00 | 3.01 | 8.98  | ≤23.98 | PASS |

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
 400-003-0500  
 www.anbotek.com.cn



|            |      |      |     |       |       |      |       |        |      |
|------------|------|------|-----|-------|-------|------|-------|--------|------|
| 11AX40SISO | Ant1 | 5755 | --- | 7.13  | 50.96 | 2.93 | 10.10 | ≤30.00 | PASS |
| 11AX40SISO | Ant1 | 5795 | --- | 5.84  | 50.48 | 2.97 | 9.85  | ≤30.00 | PASS |
| 11AX80SISO | Ant1 | 5210 | --- | 6.37  | 39.73 | 4.01 | 10.83 | ≤23.98 | PASS |
| 11AX80SISO | Ant1 | 5290 | --- | 2.86  | 35.80 | 4.46 | 7.32  | ≤23.98 | PASS |
| 11AX80SISO | Ant1 | 5530 | --- | 3.67  | 35.80 | 4.46 | 8.13  | ≤23.98 | PASS |
| 11AX80SISO | Ant1 | 5610 | --- | 11.08 | 18.59 | 7.31 | 12.46 | ≤23.98 | PASS |
| 11AX80SISO | Ant1 | 5775 | --- | 10.99 | 35.80 | 4.46 | 12.37 | ≤30.00 | PASS |

Note: The Duty Cycle Factor is compensated in the graph.

#### Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



## Test Graphs Channel Power



## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn




**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn

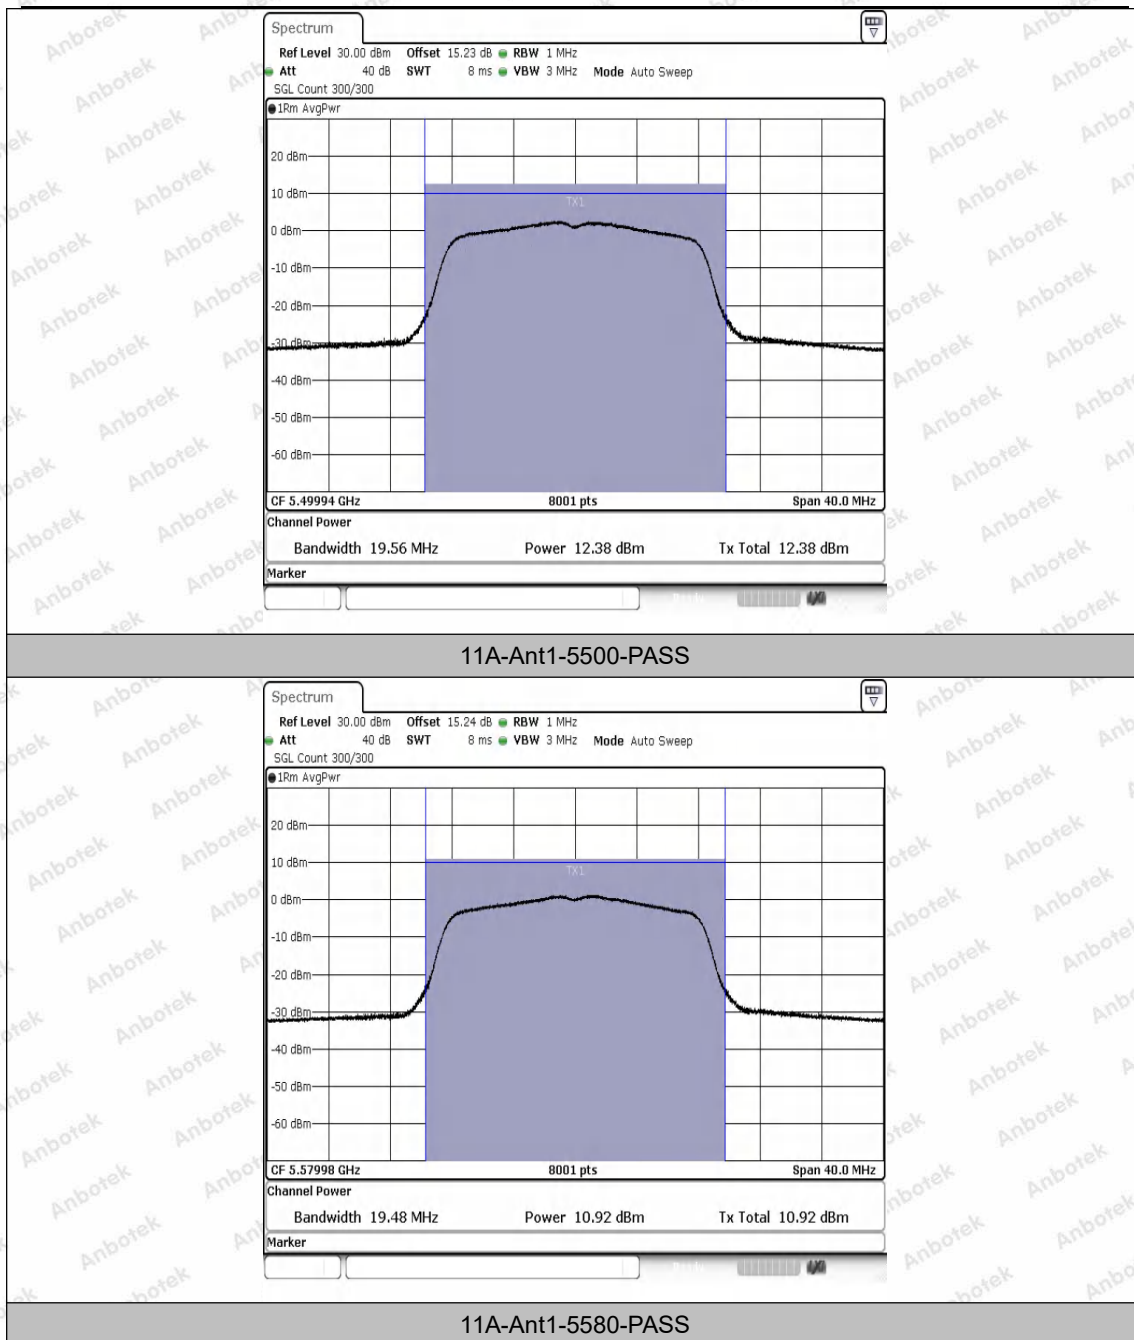


**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn

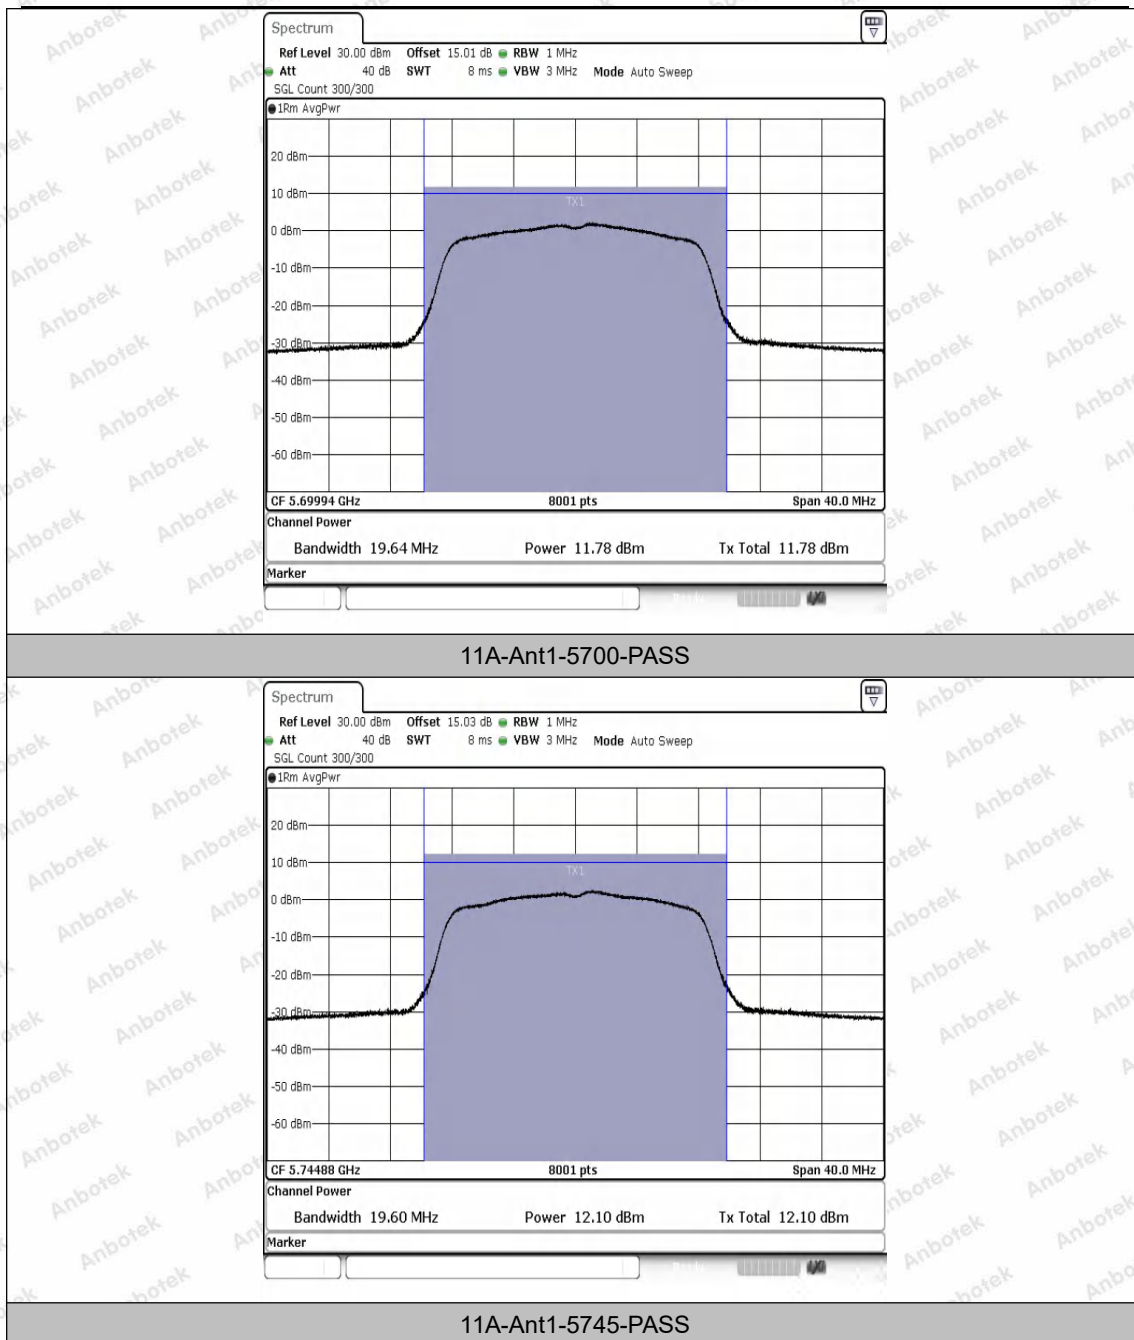


**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn

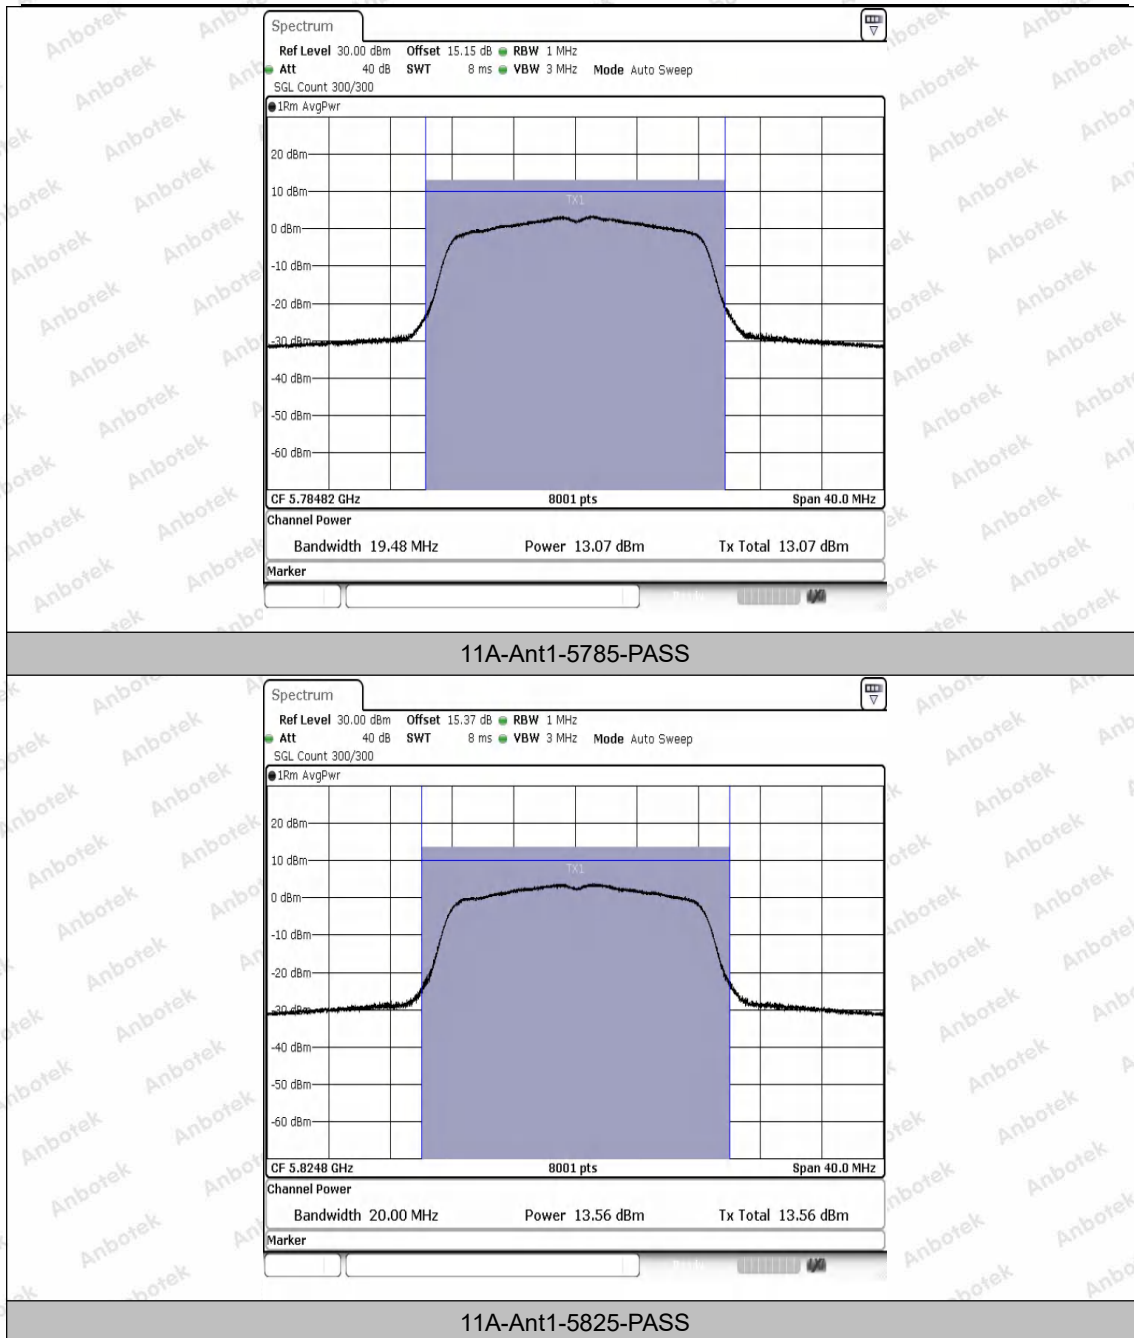

**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn




**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn

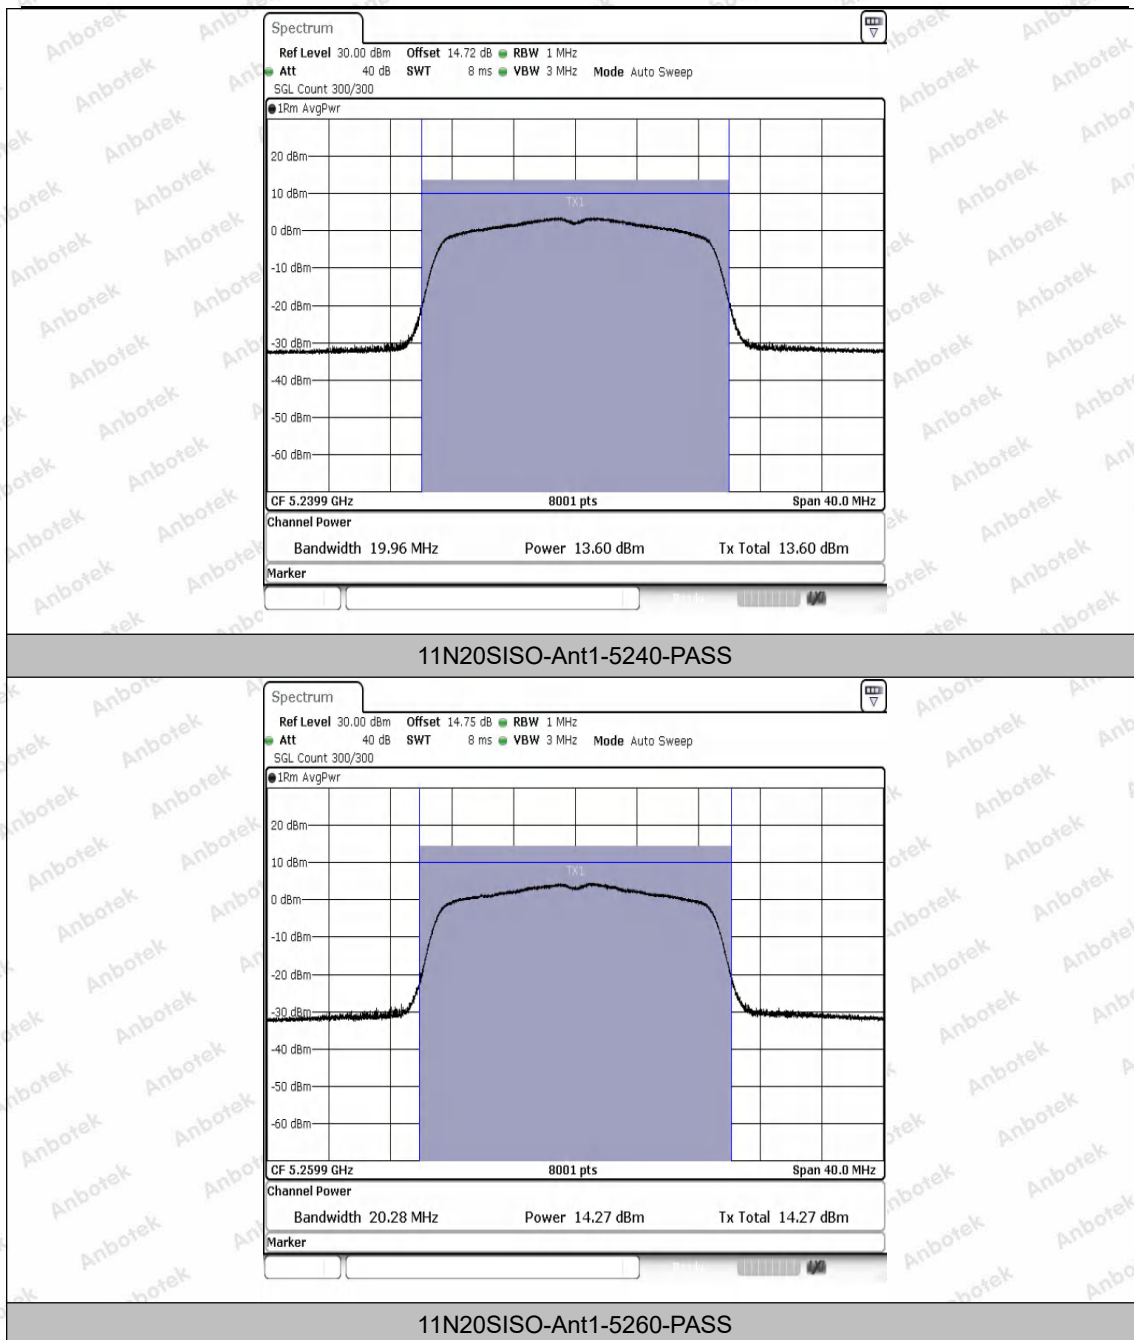


**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn

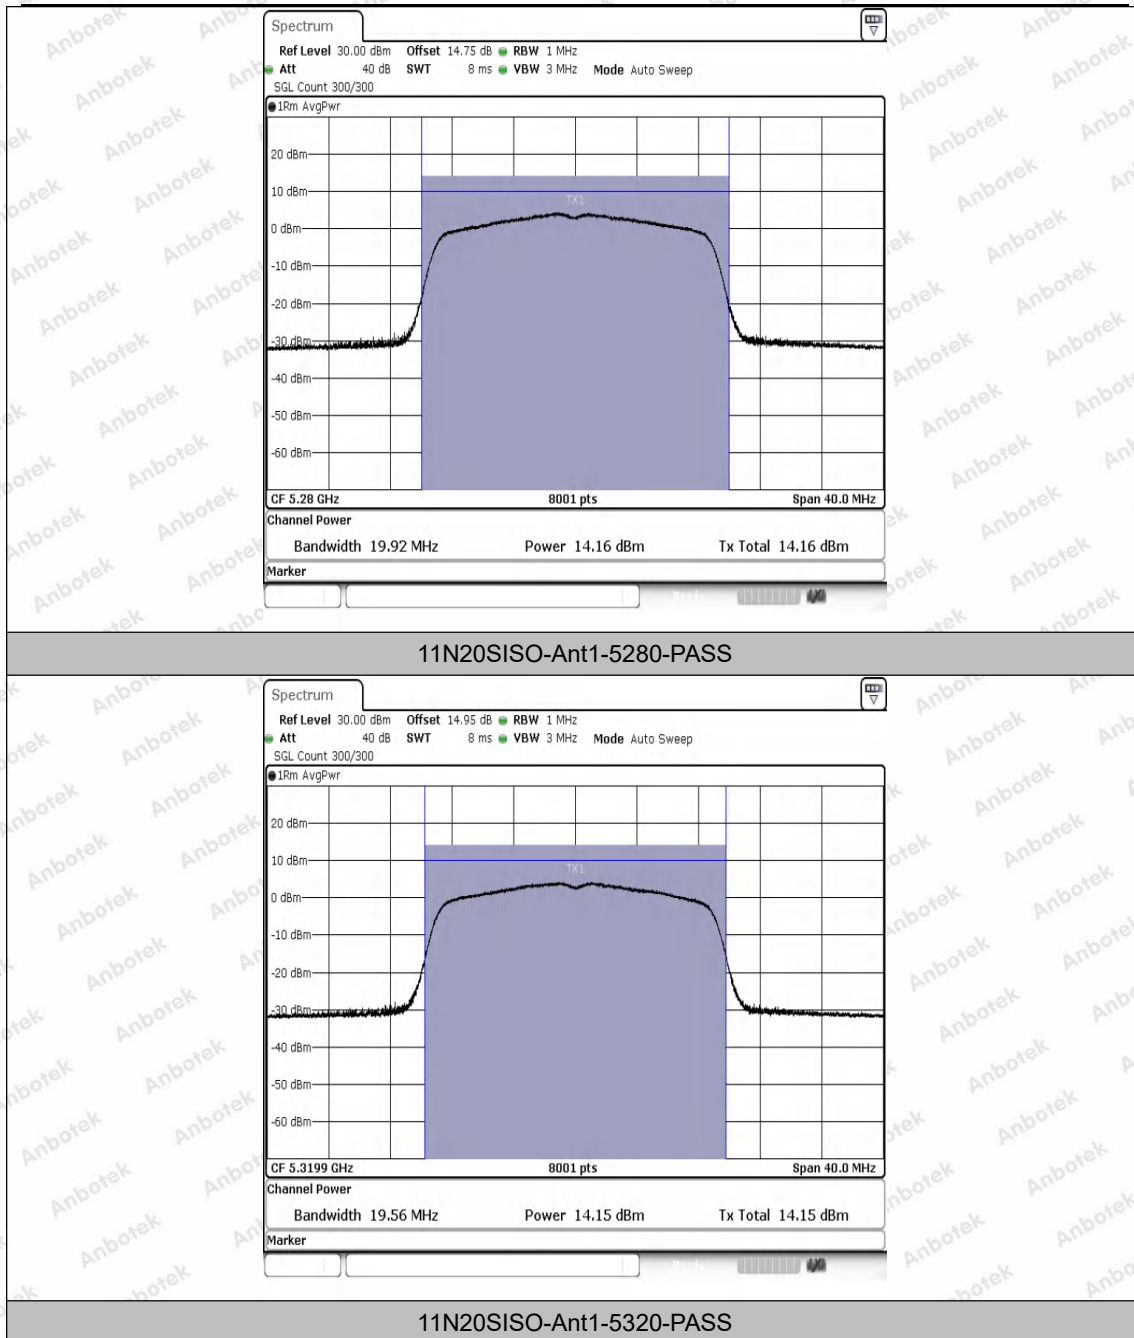


**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn

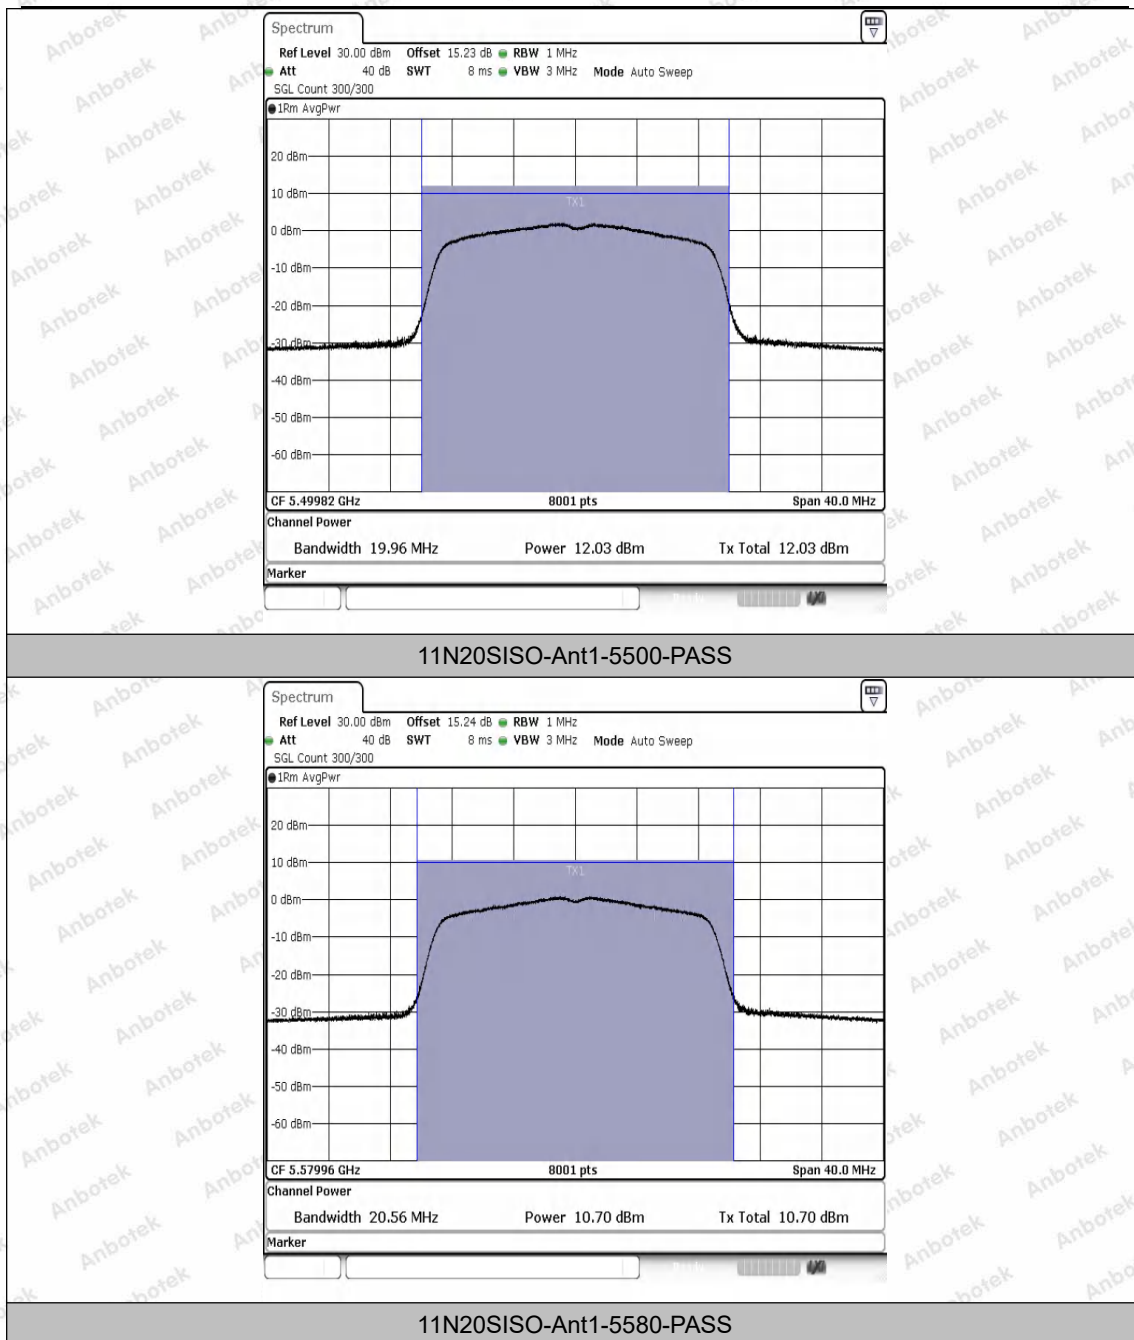

**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn




**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn

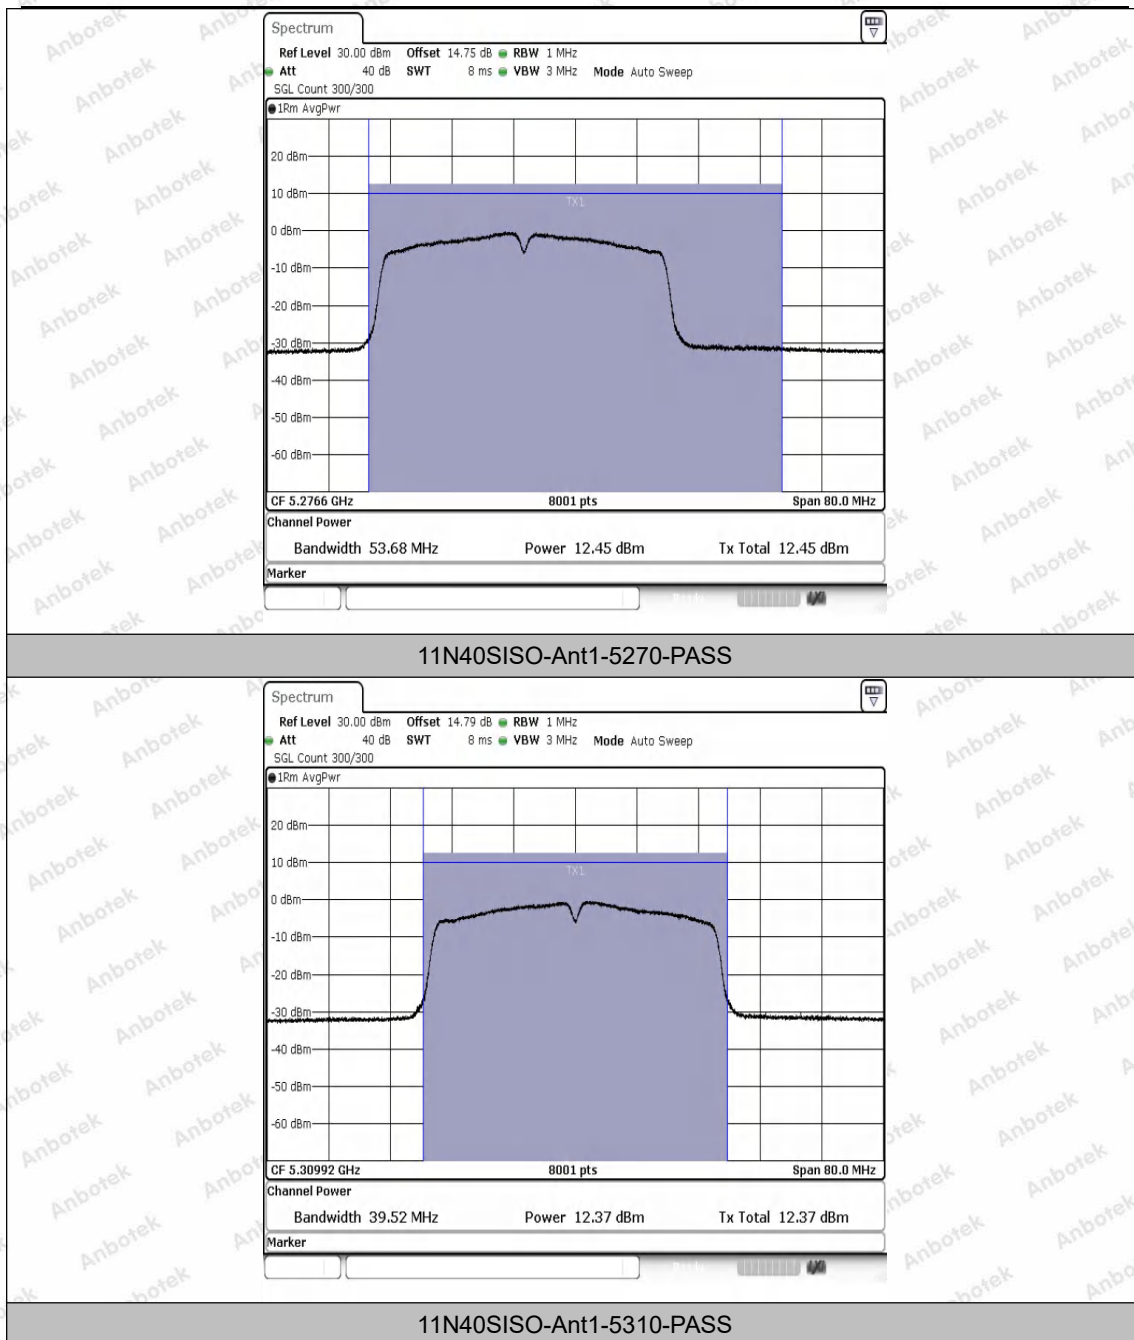


**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn

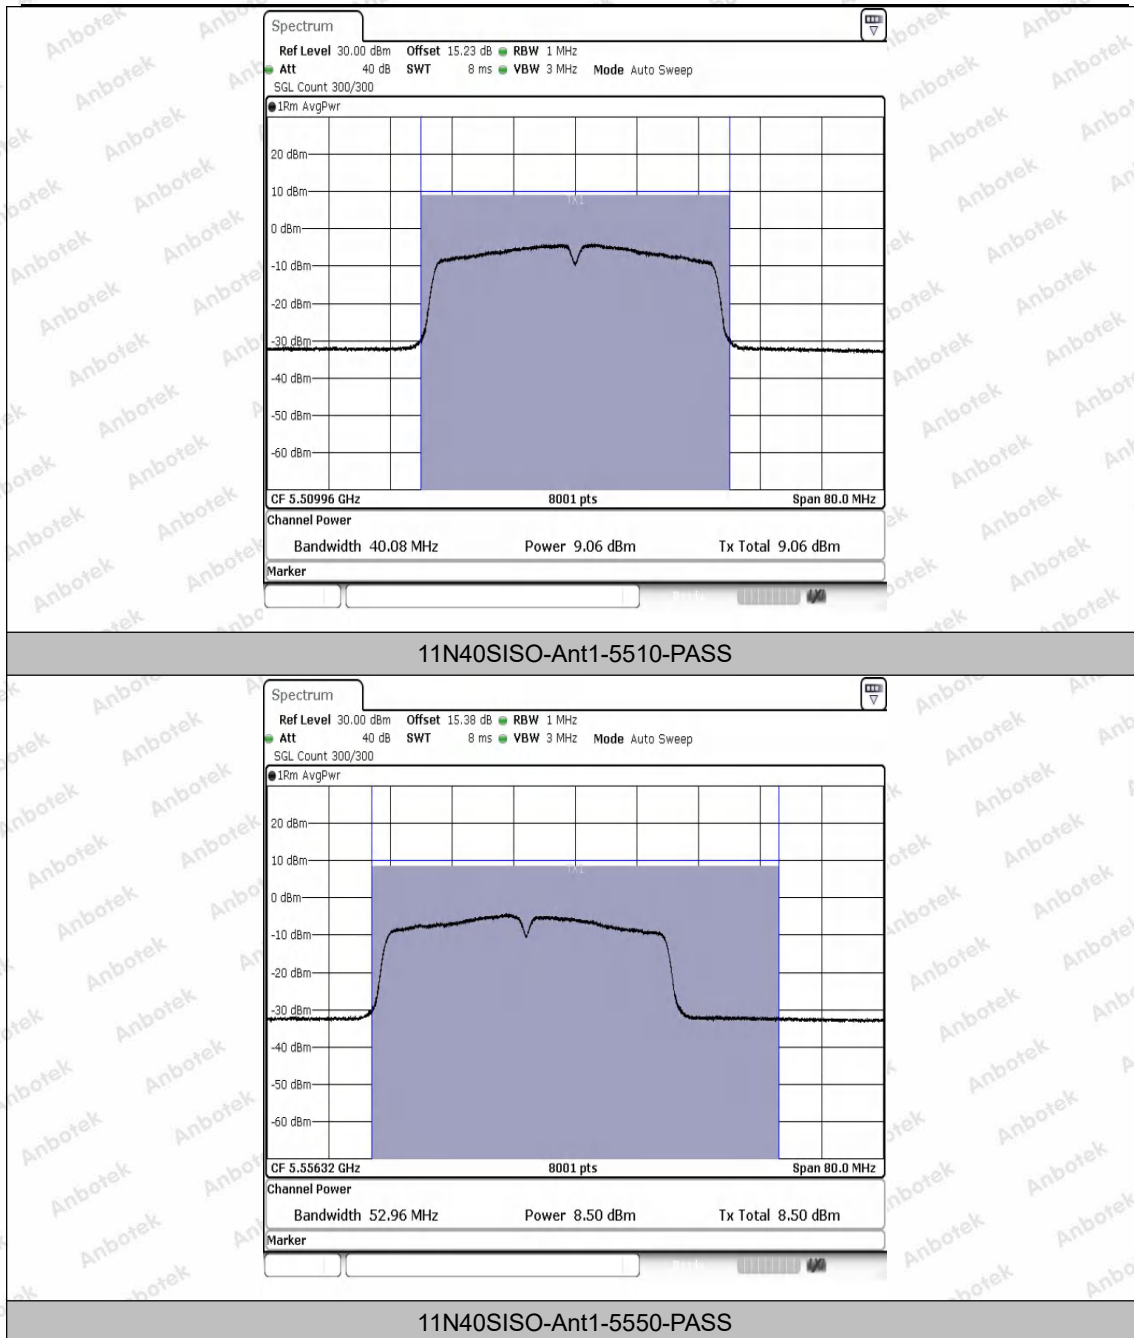


**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn

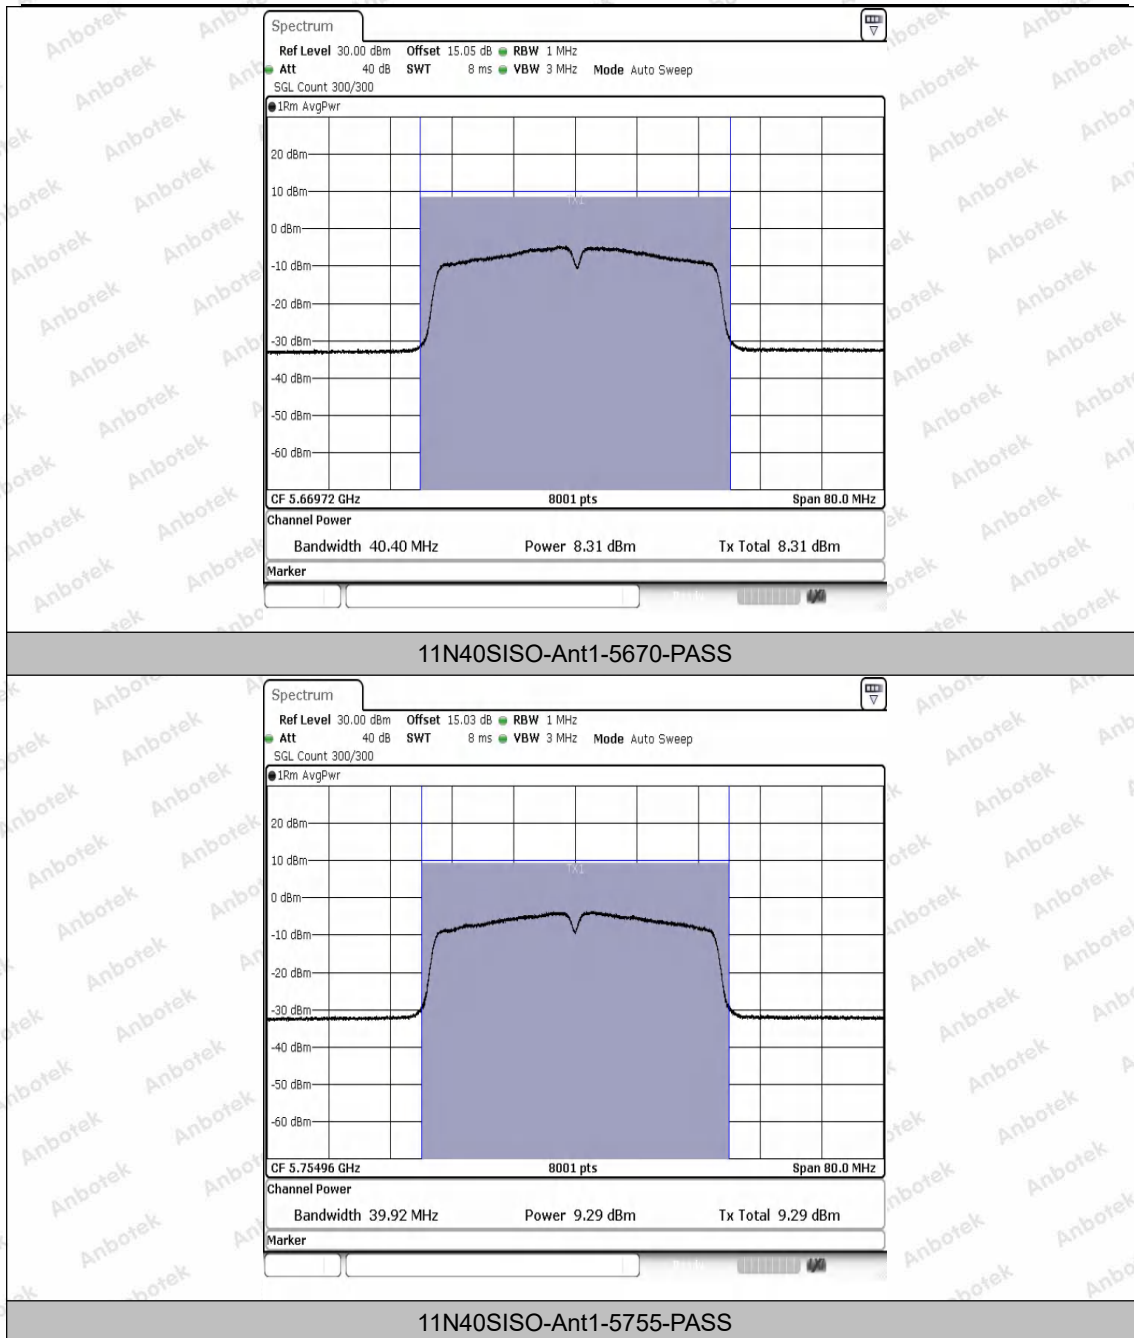

**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn




**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn



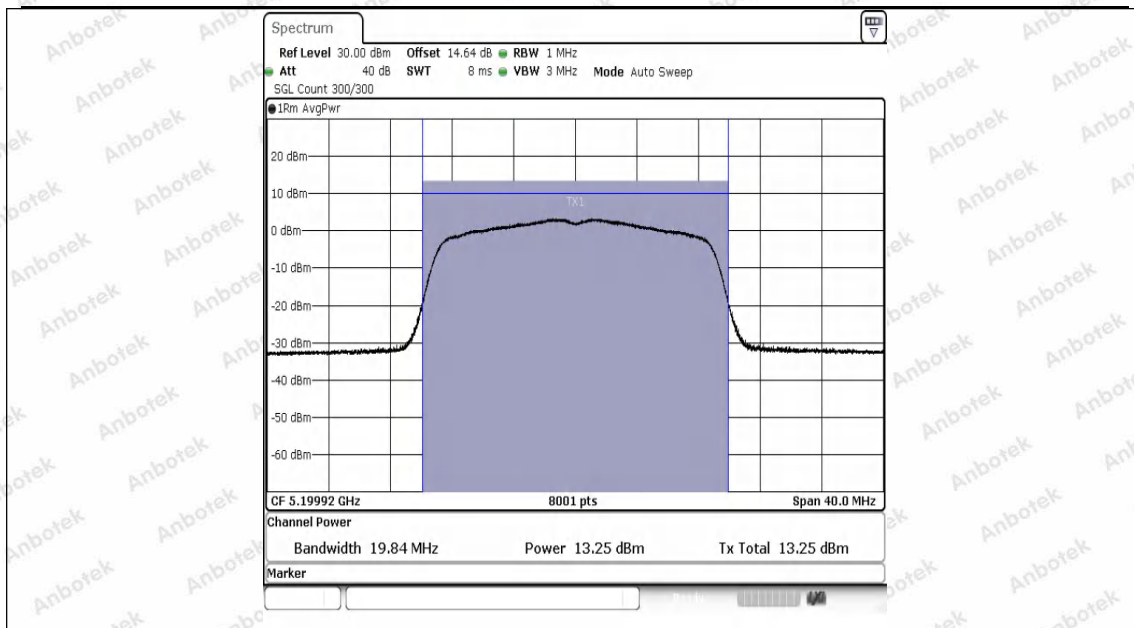

11AC20SISO-Ant1-5200-PASS

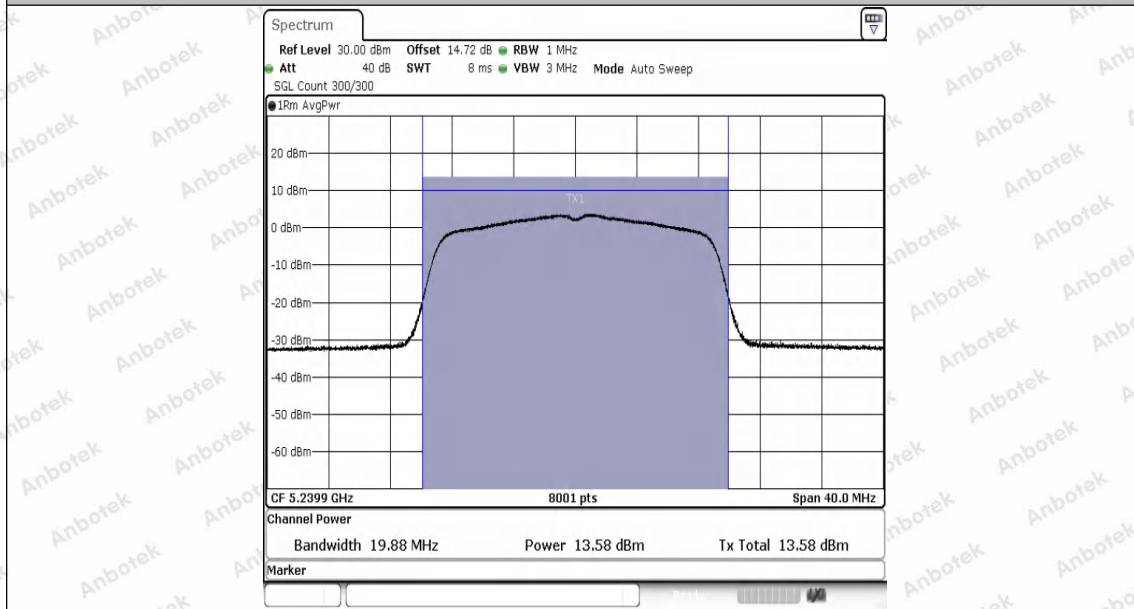

11AC20SISO-Ant1-5240-PASS


**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn




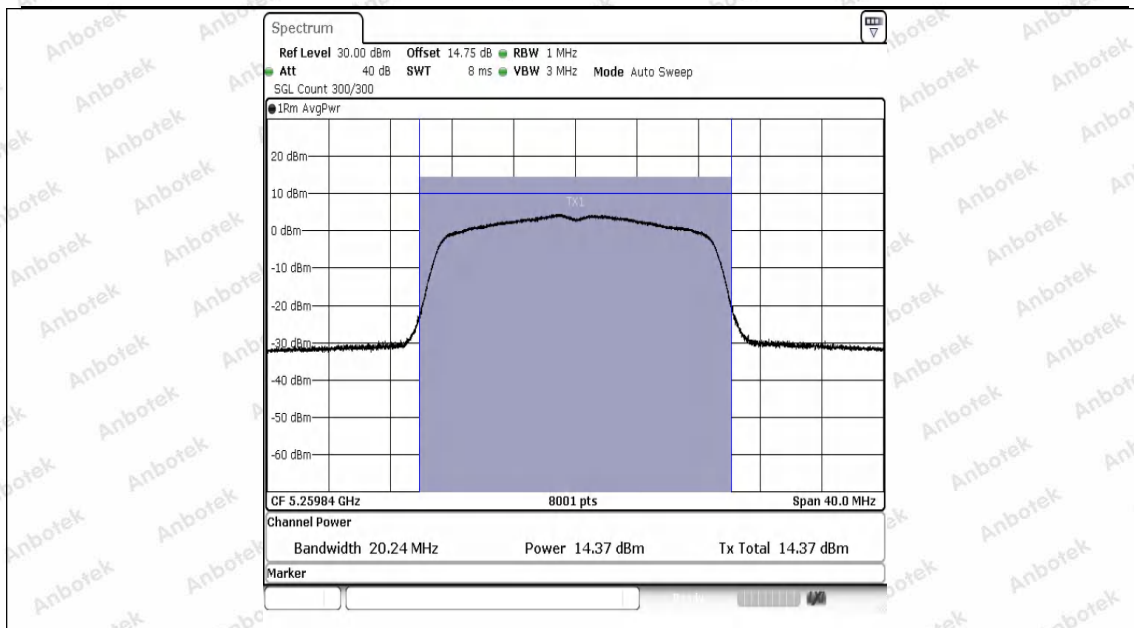


11AC20SISO-Ant1-5260-PASS

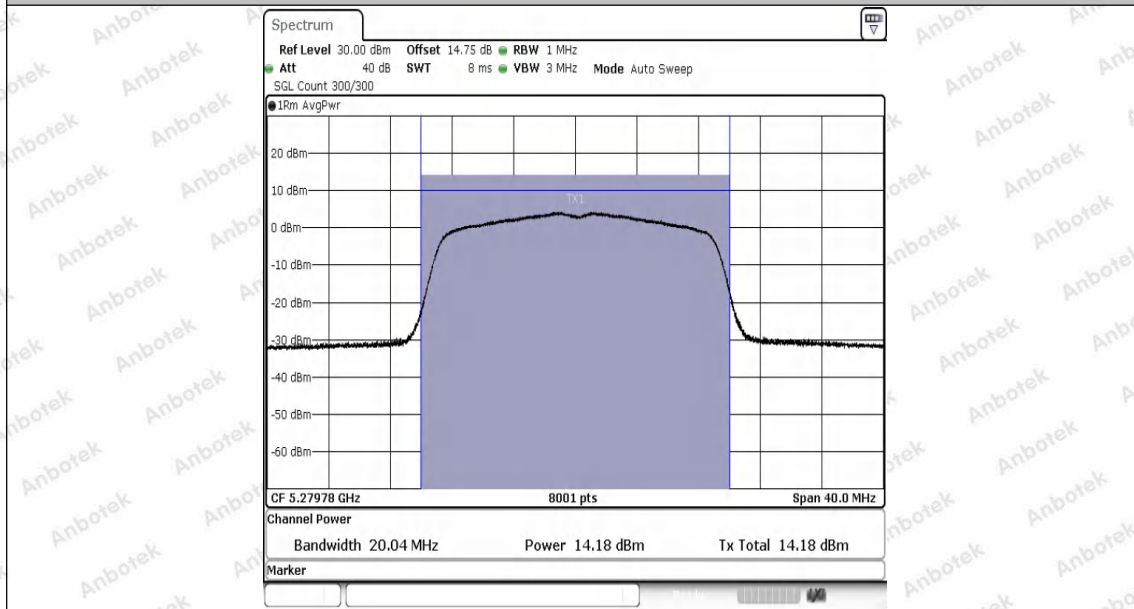

11AC20SISO-Ant1-5280-PASS

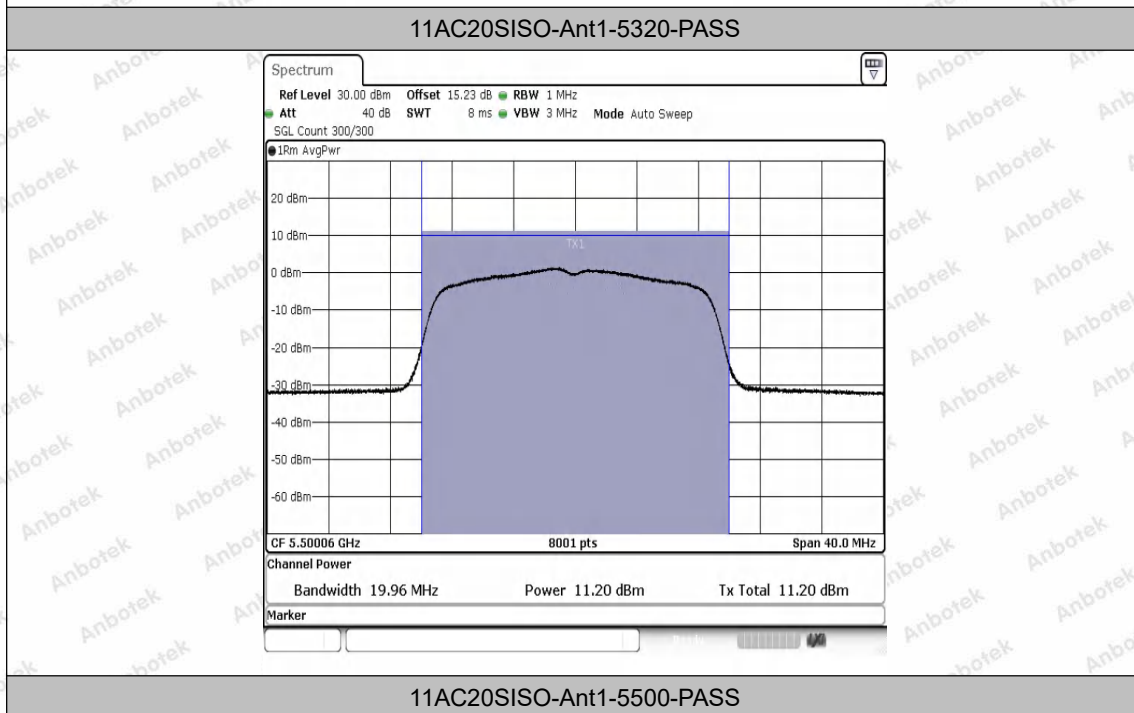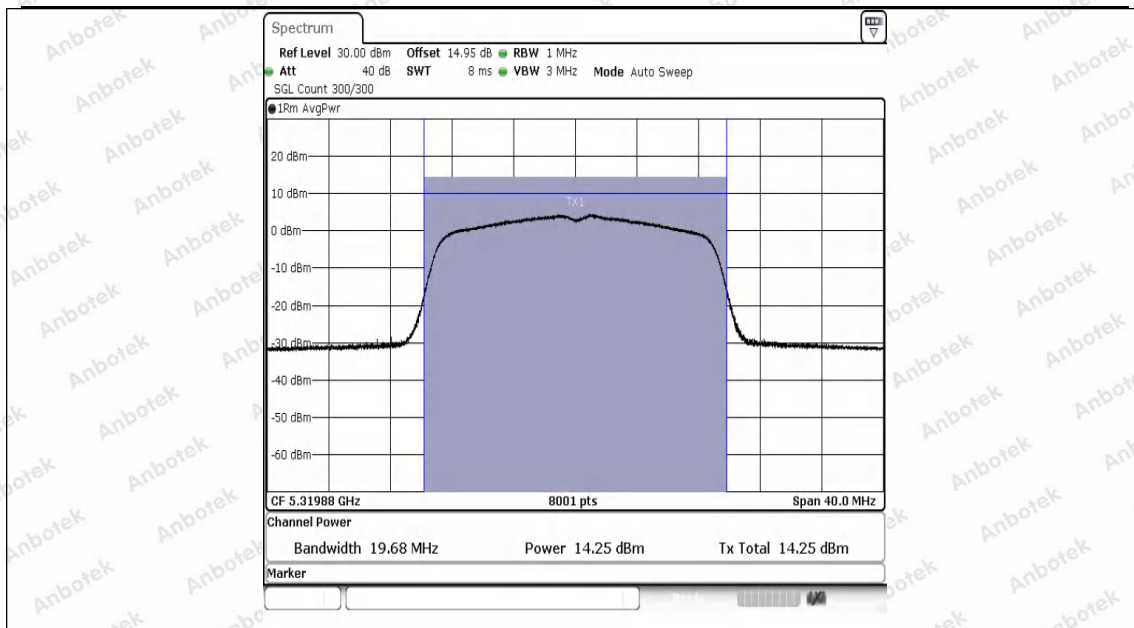


**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn



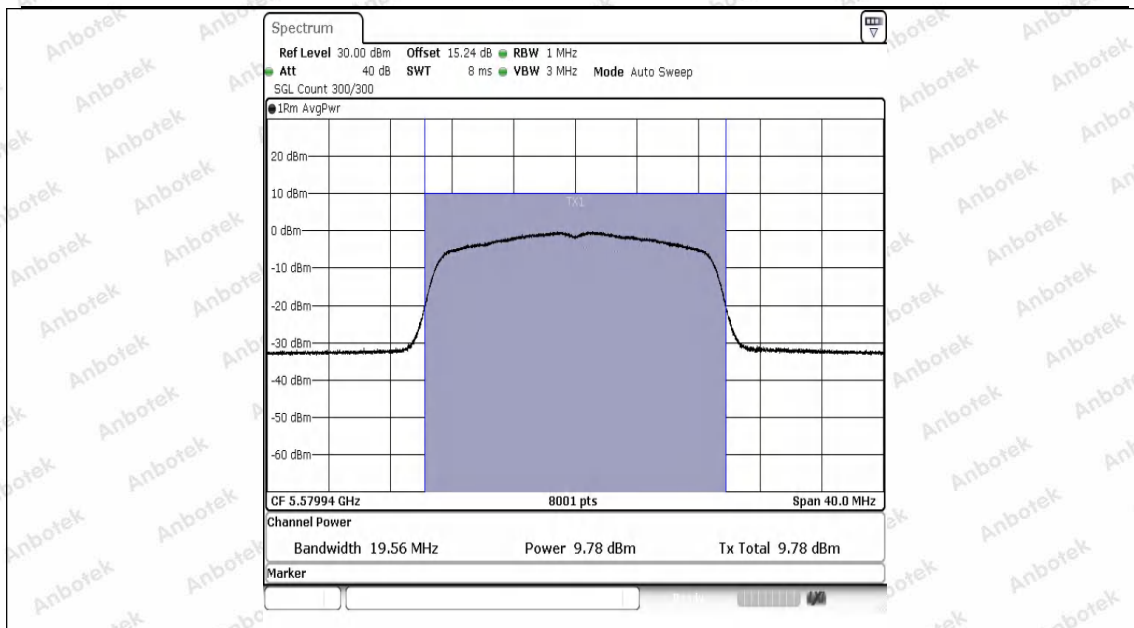

11AC20SISO-Ant1-5580-PASS

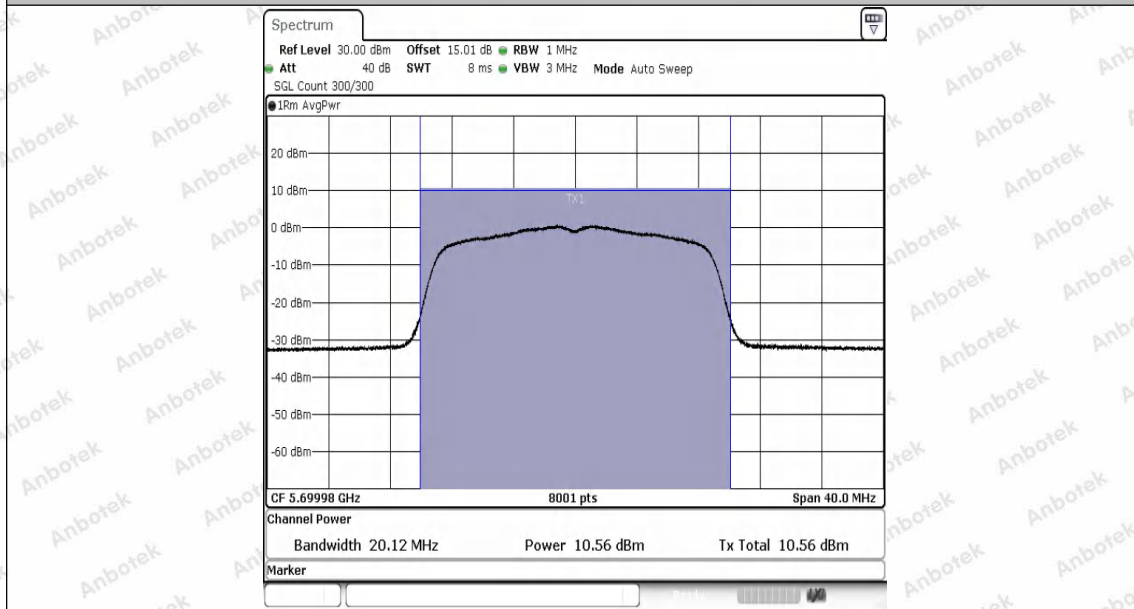

11AC20SISO-Ant1-5700-PASS


**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn



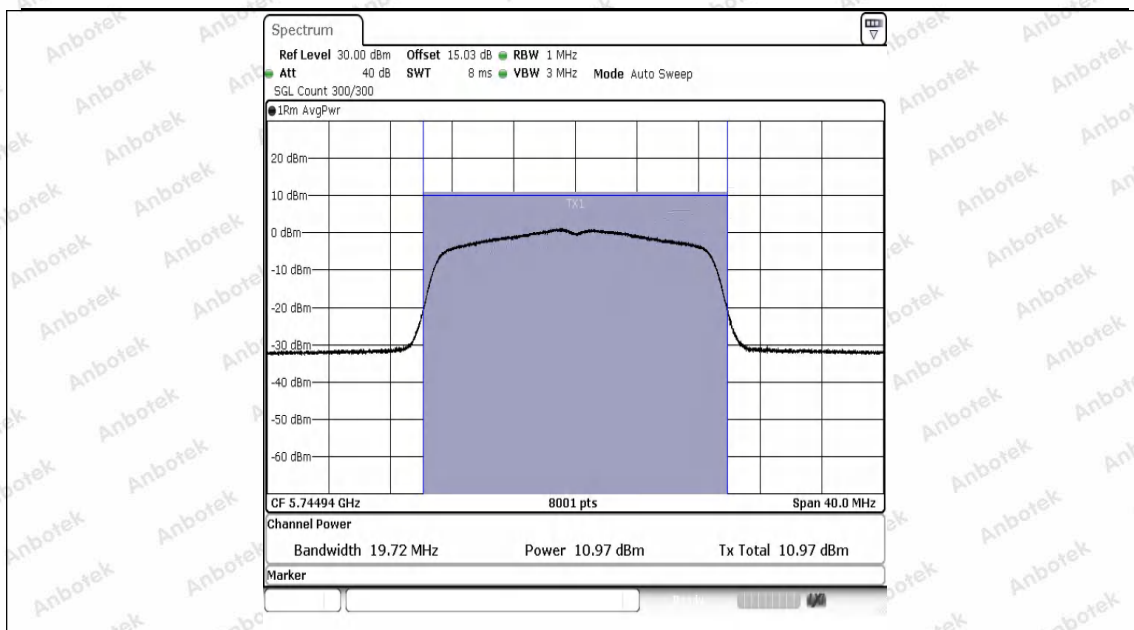

11AC20SISO-Ant1-5745-PASS

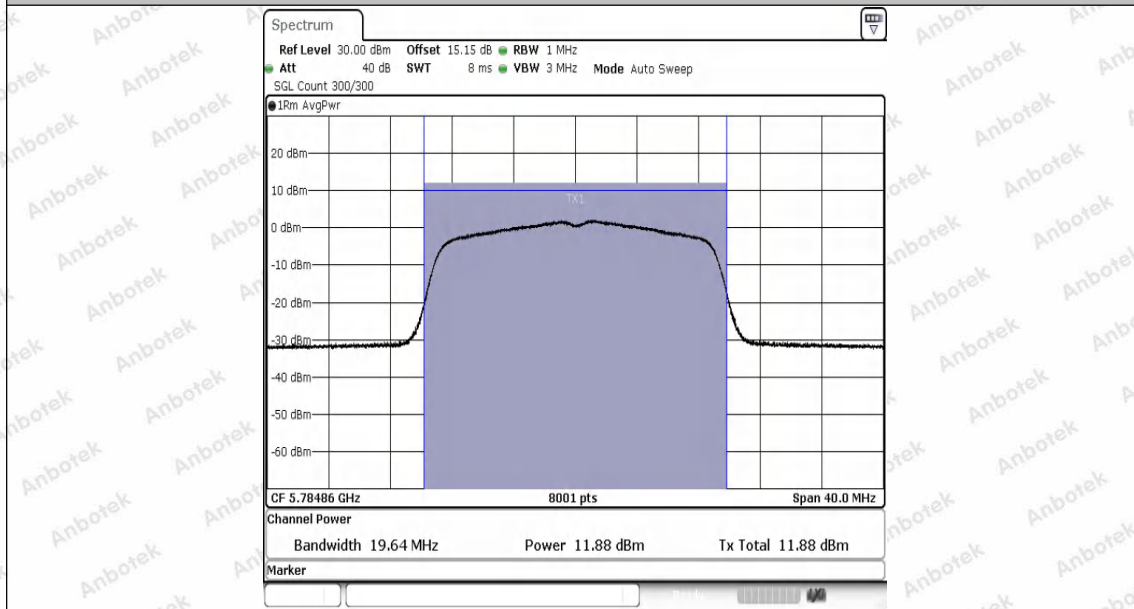

11AC20SISO-Ant1-5785-PASS




**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn

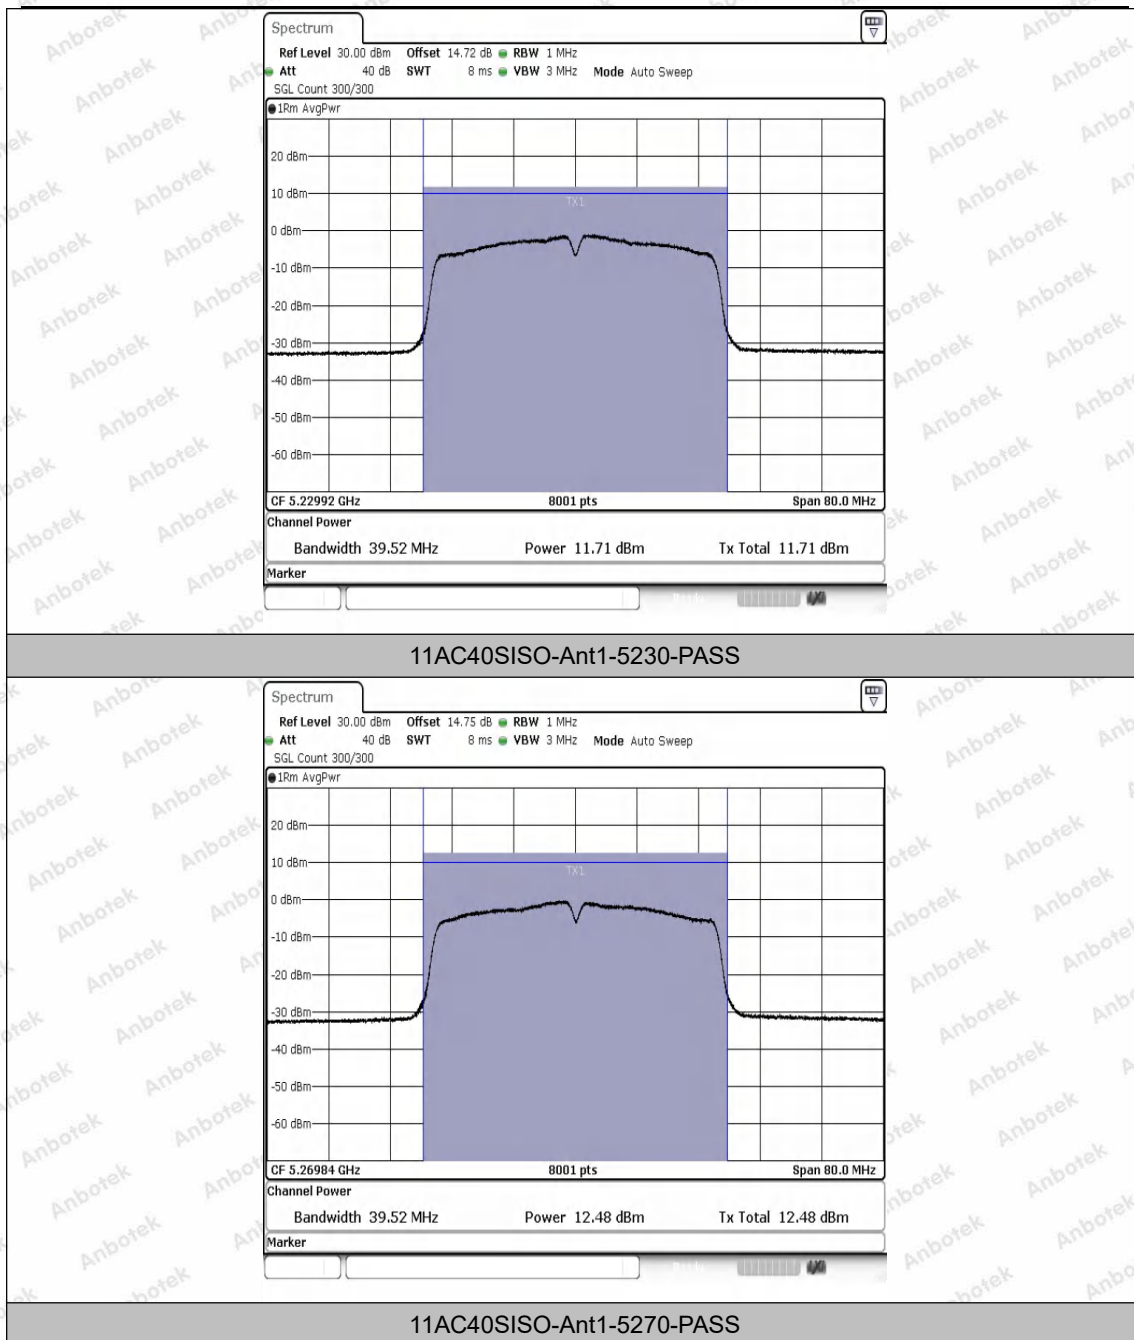


**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn

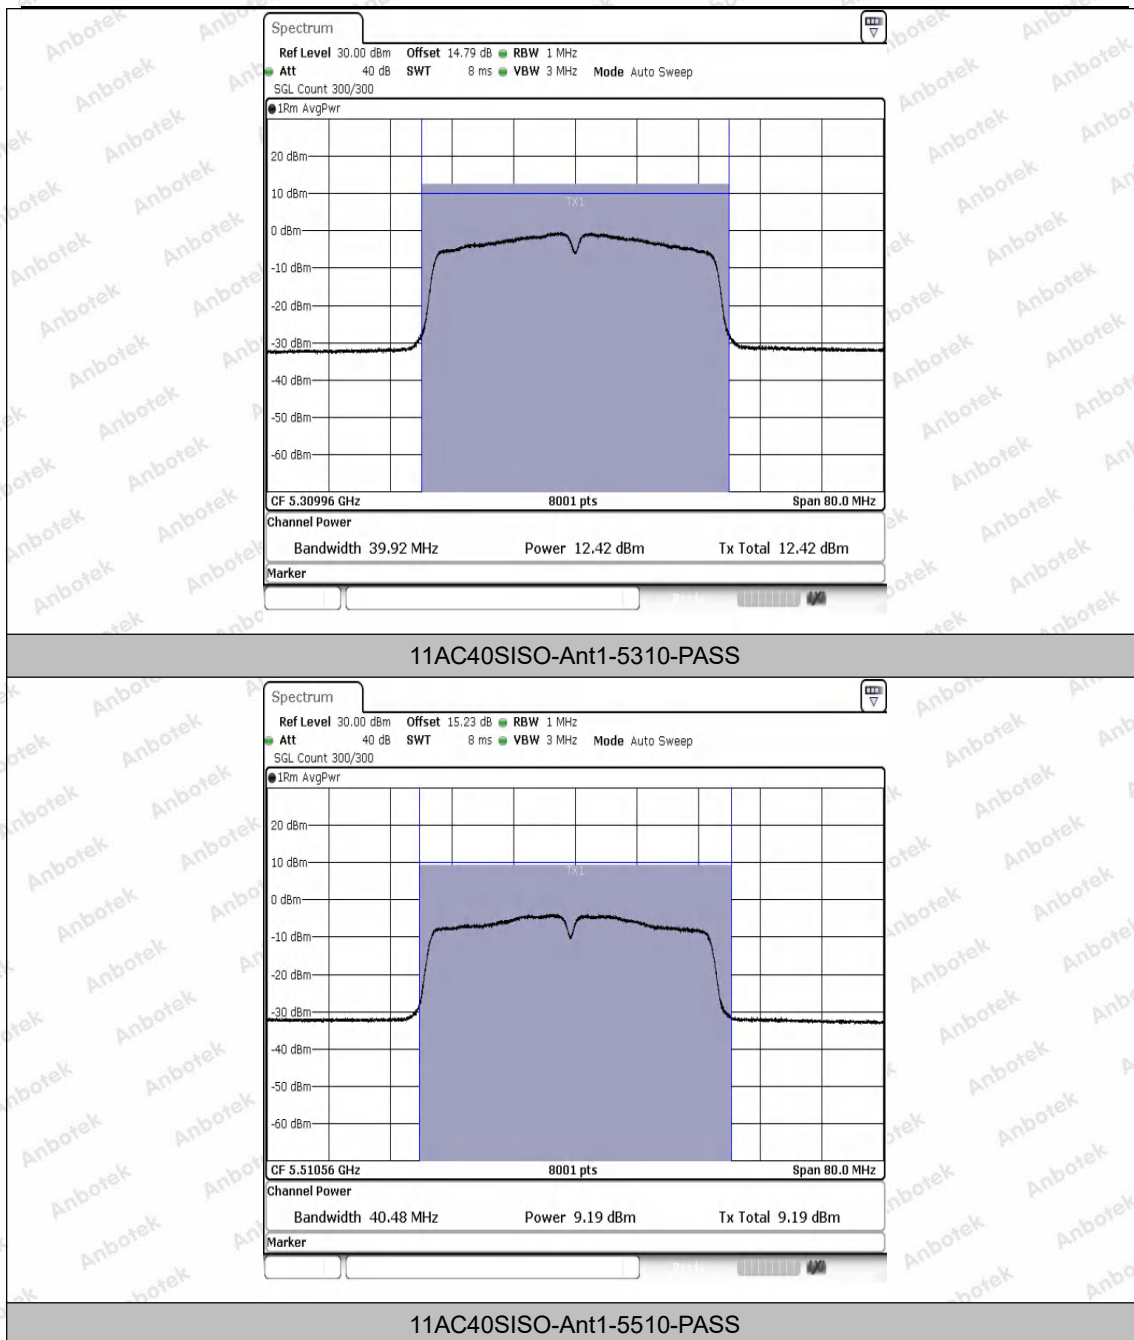


**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn

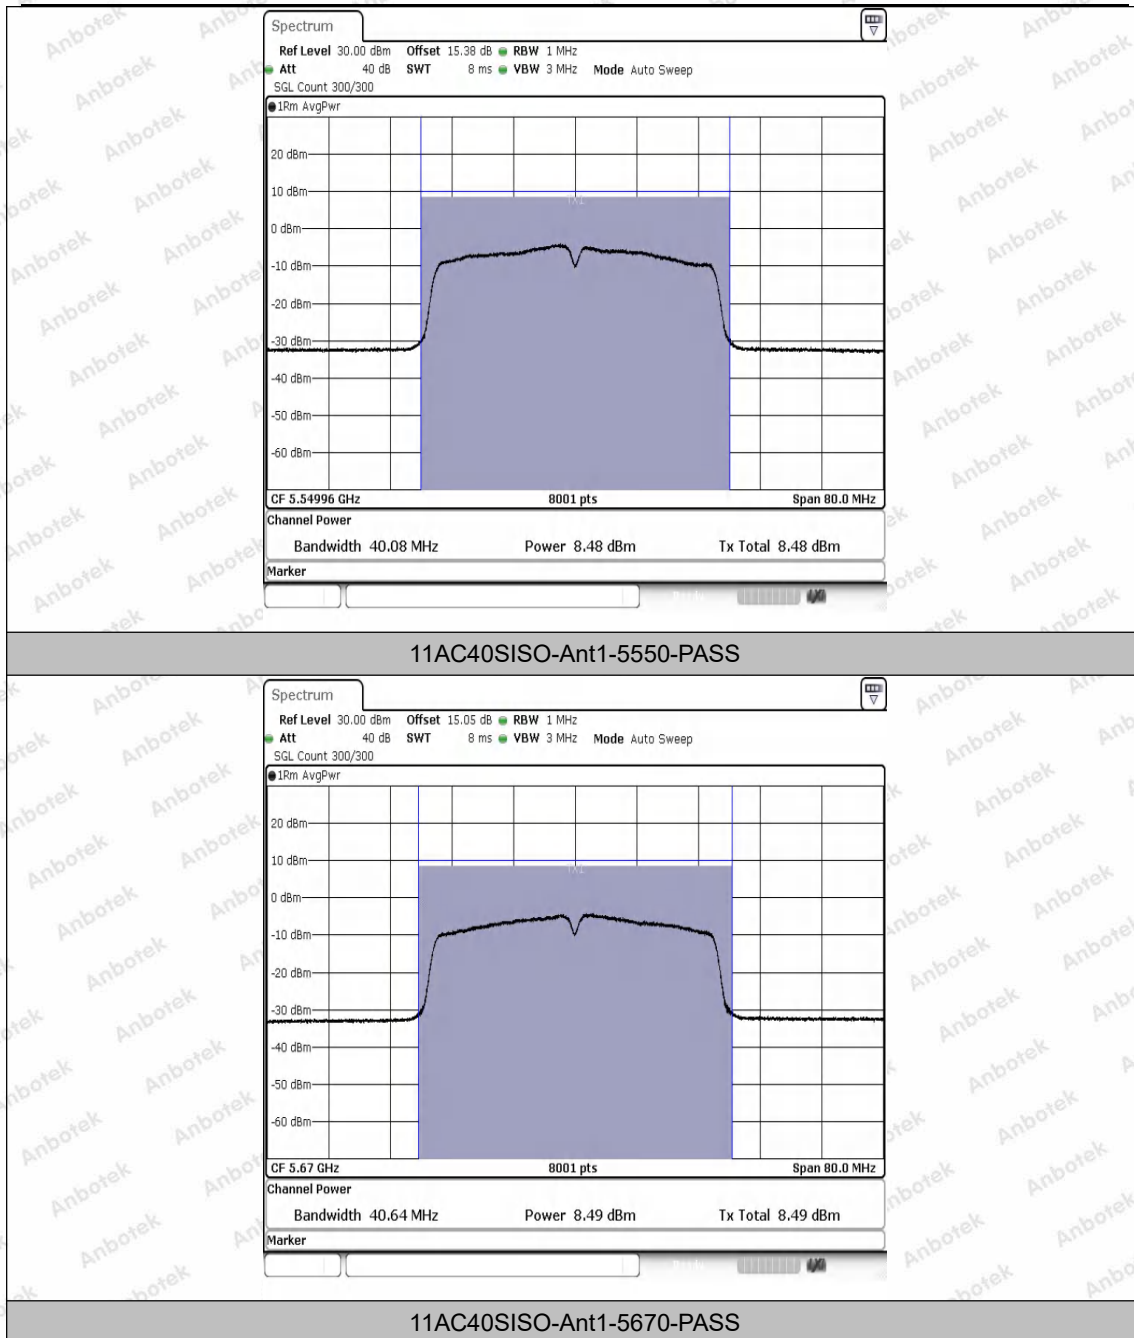


**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn

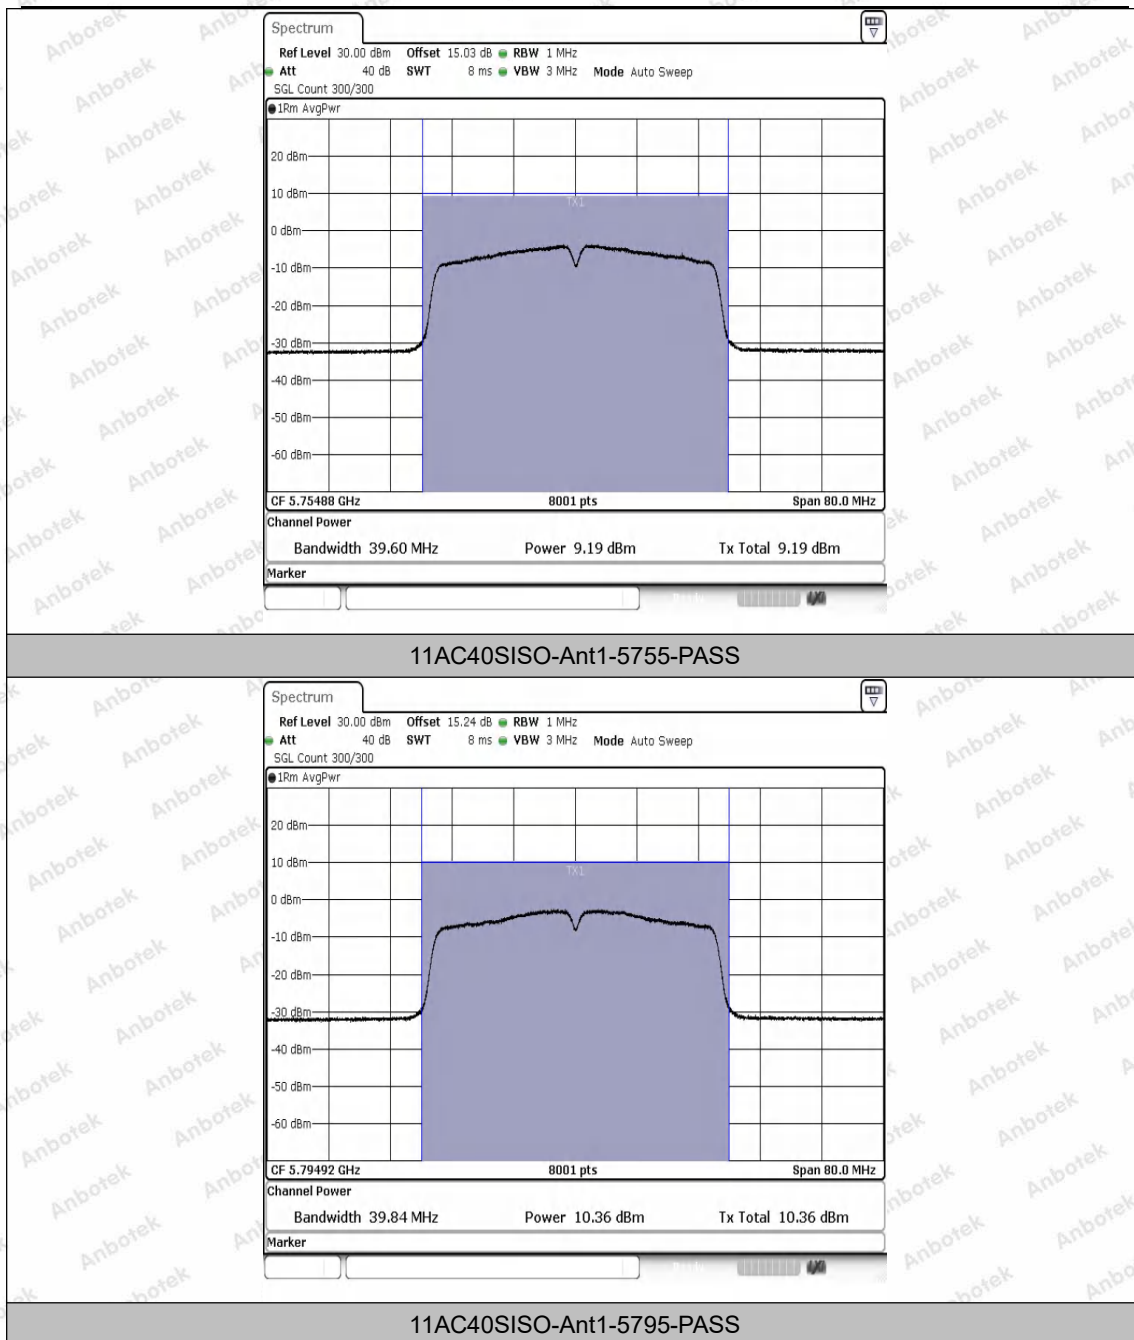


**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn

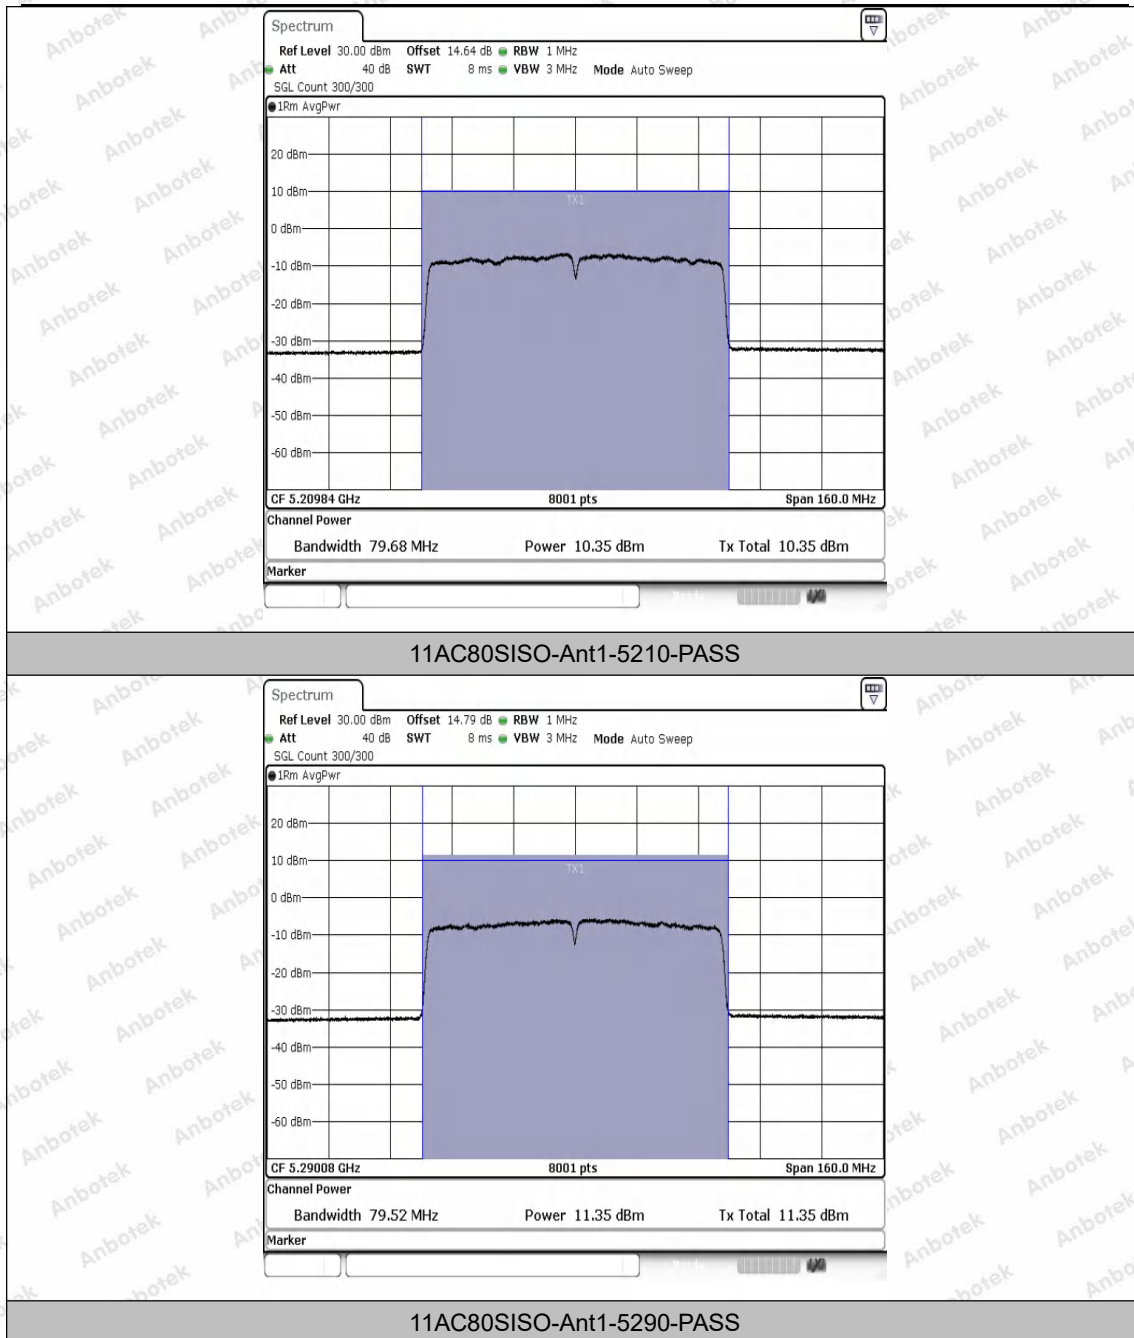


**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn

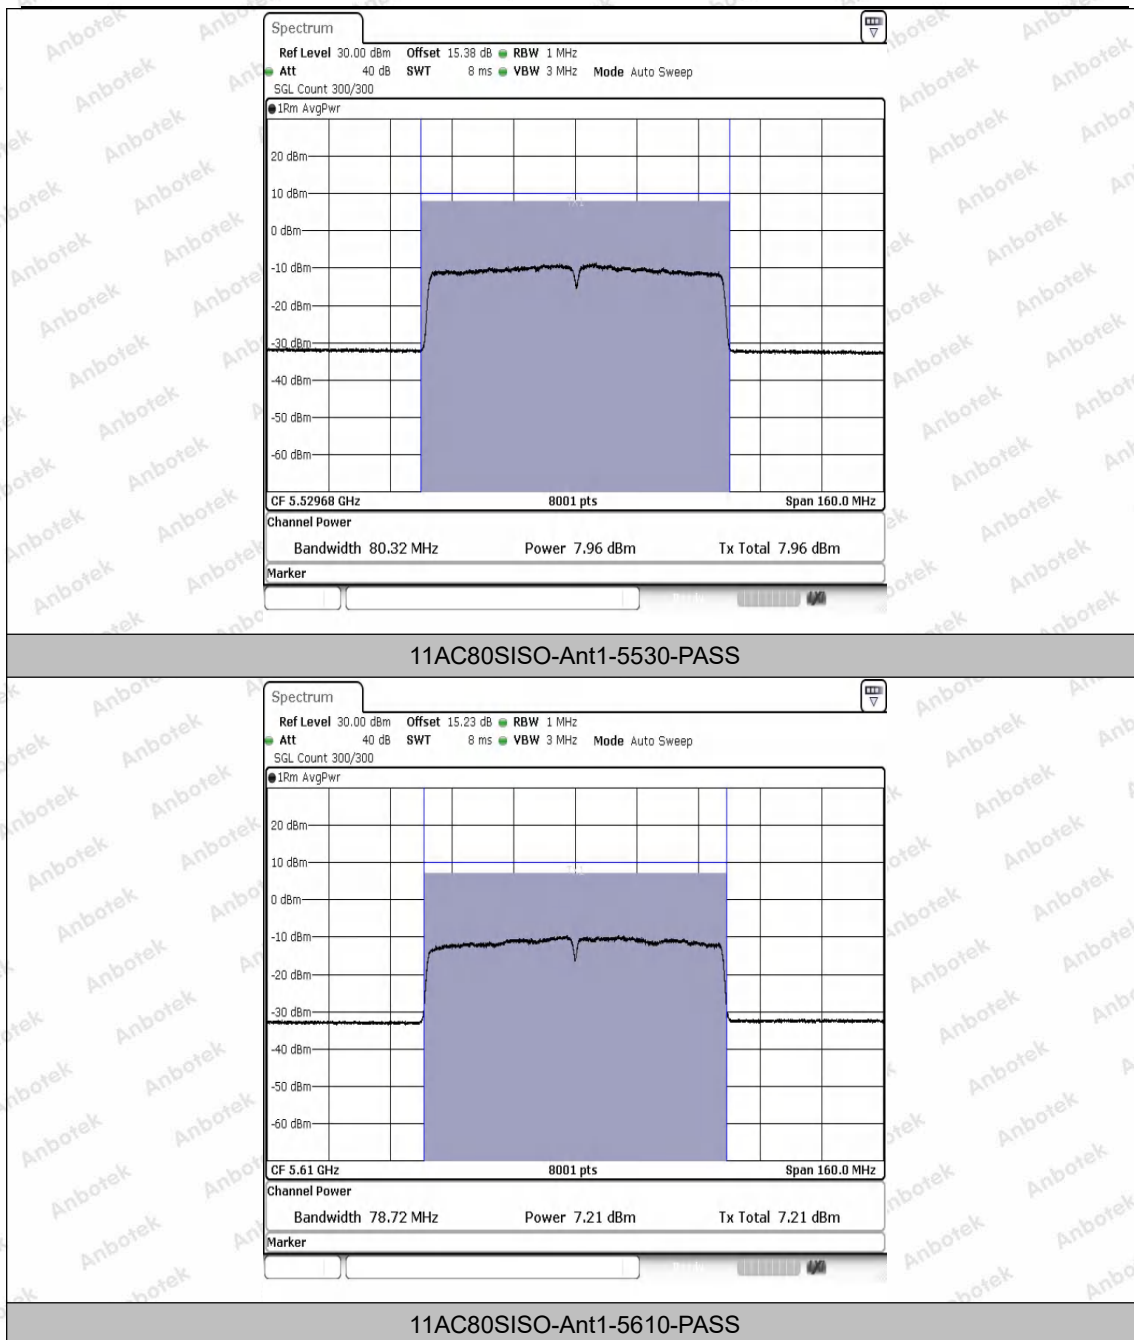


**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn



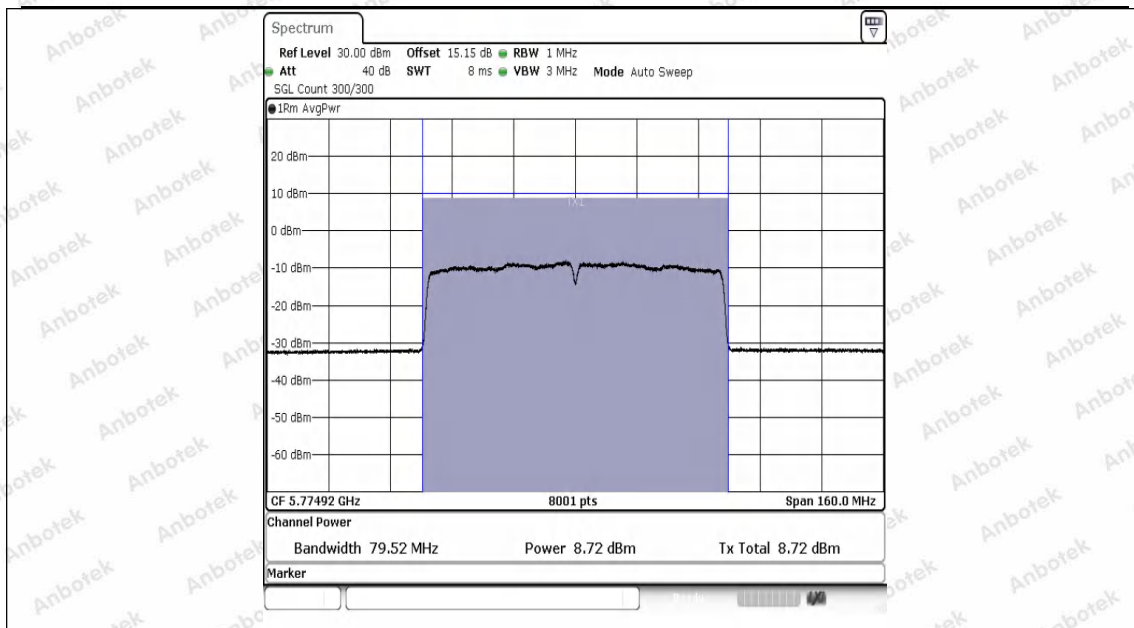

11AC80SISO-Ant1-5775-PASS

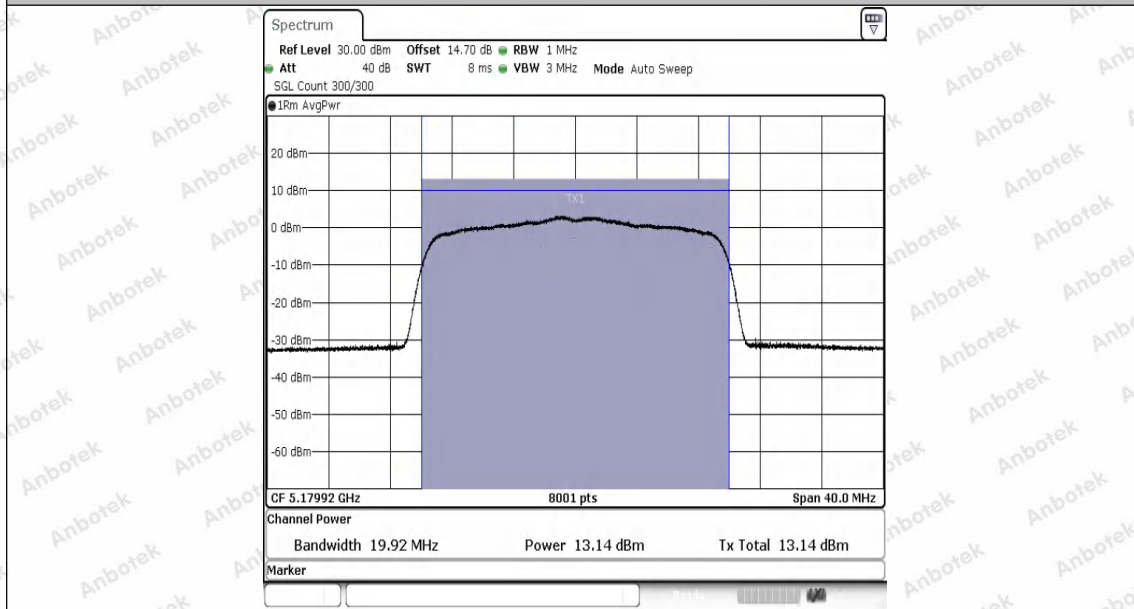

11AX20SISO-Ant1-5180-PASS


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn

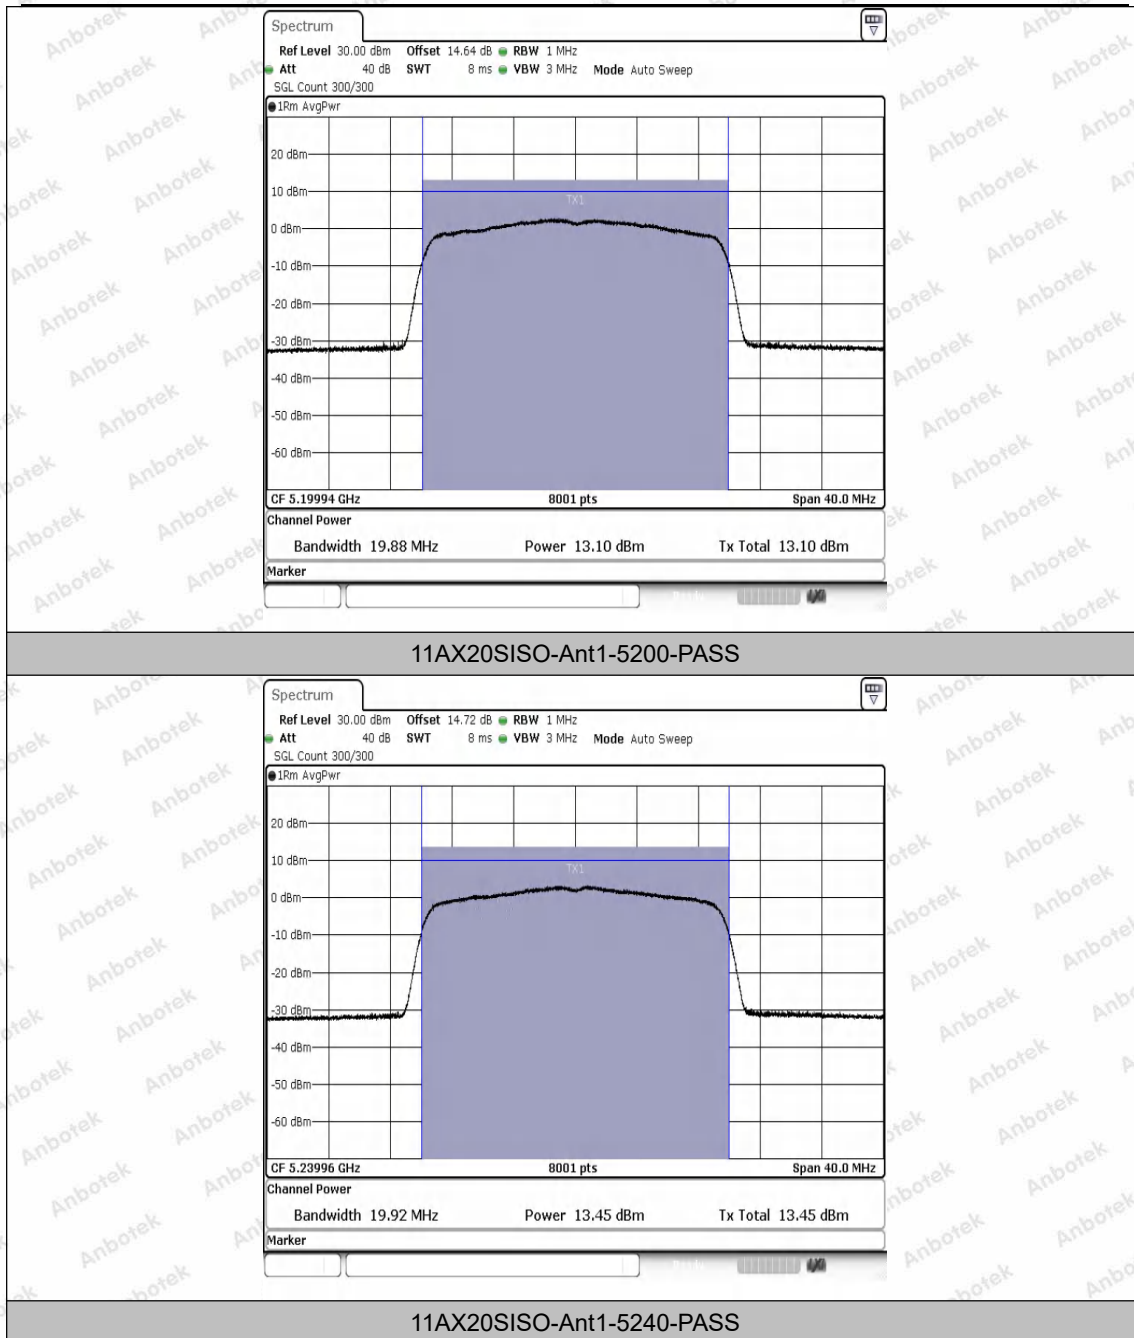


**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn

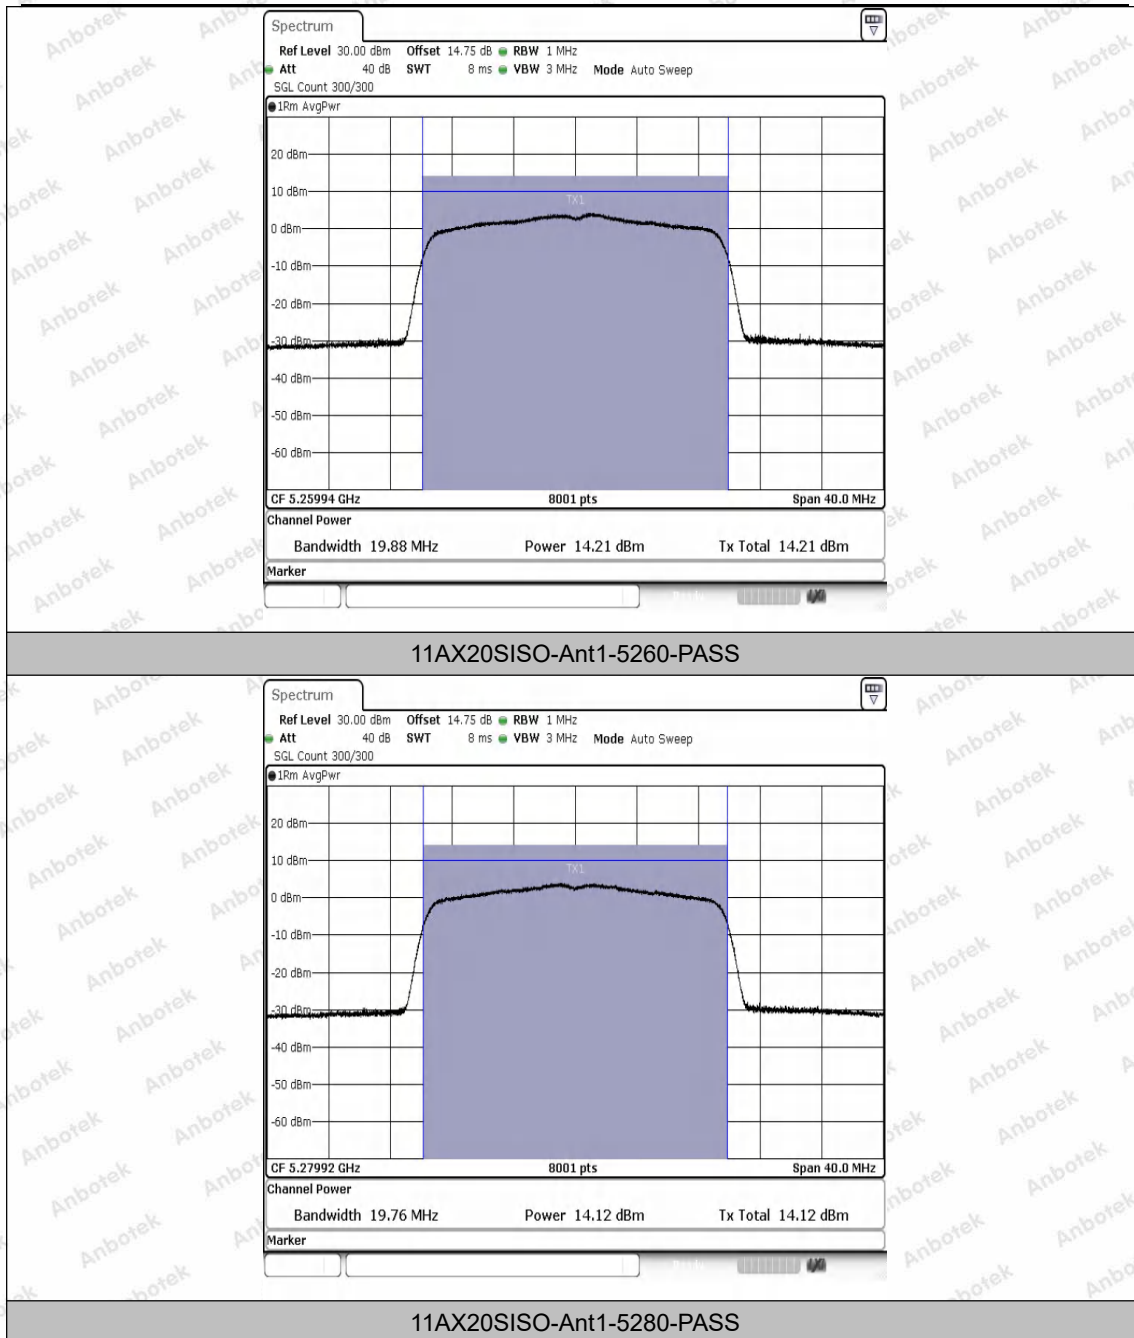

**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn

