Antenna Gain test report

FCC ID: R9C-OP24222

Equipment: Mobile Phone

Brand Name: OPPO

Model Name: CPH2689

Software: ColorOS 15.0

Manufacturer:

Guangdong OPPO Mobile Telecommunications Corp., Ltd.

NO.18 Haibin Road, Wusha Village, Chang'an Town, Dongguan

City, Guangdong, China

Issue Date: November 12, 2024

Project Engineer: Daoyu Ren Date: November 12, 2024

Checked by: Jiawei Huang Date:November 12, 2024

Approved by:Wei Li Date:November 12, 2024

Rendonyn Jiawei Huang

Fig 1 Antenna location & dimension


Antenna Gain and Antenna Type specification:


Antenna Gain (dBi)		Ant7	Ant 8	Ant 9	Ant 12	Antenna Type	Antenna model name	Manufacture r
2.4G WiFi	2400~2483.5MH z	1.5	/	/	0.5	IFA(Inverted F Antenna)	AC232	ОРРО
5G Wifi	5150~5250 MHz	/	0.5	-1	/	IFA(Inverted F Antenna)	AC232	ОРРО
	5250~5350 MHz	/	1.3	-0.5	/	IFA(Inverted F Antenna)	AC232	ОРРО
	5470~5725 MHz	/	1.3	1	/	IFA(Inverted F Antenna)	AC232	OPPO
	5725~5850 MHz	/	2	1	/	IFA(Inverted F Antenna)	AC232	ОРРО
ВТ	2400~2483.5MH z	1.5	/	/	/	IFA(Inverted F Antenna)	AC232	ОРРО
NFC	13.56MHz	Demisi	on: 56	.9mm	*36.1mm	FPC(Flexible Printed Circuit)	AC232	ОРРО

Note: Antenna gain was measured in the anechoic chamber, 3D scan was exercised, and the highest numbers are reported in this document.

According to Test standard: IEEE Std 149-2021, we measure antenna gain.

3D Pattern

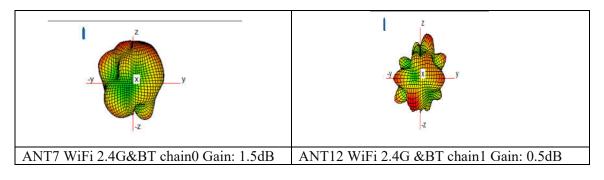

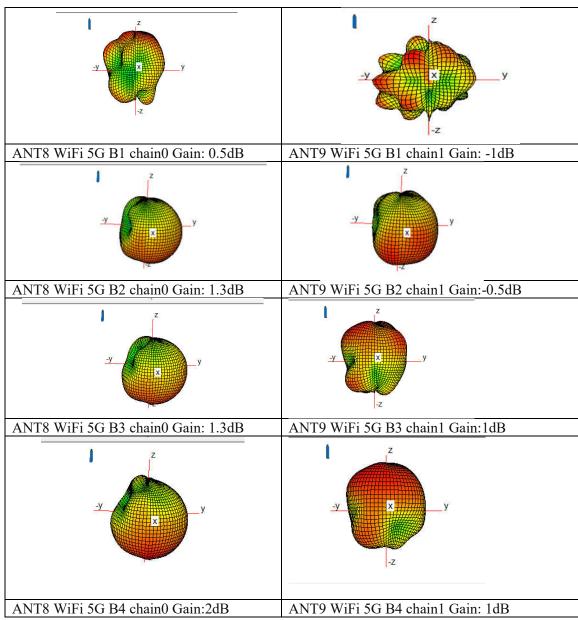

List of Test and Measurement Instruments

TEST EQUIPMENT

NO.	Equipment	Manufacturer	Model No.	Cal.date	Cal.due
1	GTS RayZone-2800	General Test	SN636692864	2024/06/14	2025/06/14
2	Network Analyzer E5071C	Keysight	MY4690575	2024/06/14	2025/06/14
3.	MaxSign Libra Test softwave	General Test	Version-1.1.16	NA	NA

I. Measurement Setup:

A. Reflection Coefficient Measurement:

Instrument: Network Analyzer (Kesight E5071C).

Setup:

- 1. Calibrate the Network Analyzer by one port calibration using Kesight 85093C Electronic calibration module .
- 2. Connect the antenna under test to the Network Analyzer.
- 3. Measure the S11(reflection coefficient), Return Loss....

B. Pattern Measurement:

A Fully Anechoic Chamber is used to simulate free-space conditions.

A Fully Anechoic Chamber is a shielded room lined with RF/microwave absorber on all walls, ceiling, and floor.

RF/microwave absorber reduces reflections from the inner walls of the shield.

Absorber performance depends on the depth and design of the absorber and the angle of incidence of the field.

Normal incidence is best, shallower angles are worse.

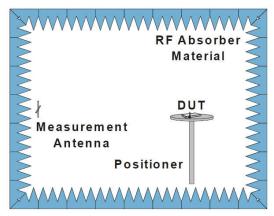


Fig. 4. The fully anechoic chamber