


SHENZHEN

12. Hopping Channel Separation

12.1 Block Diagram Of Test Setup

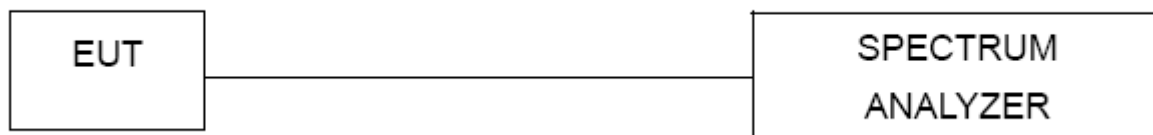

12.2 Limit

Frequency hopping systems shall have hopping channel carrier frequencies separated by a minimum of 25 kHz or the 20 dB bandwidth of the hopping channel, whichever is greater. Alternatively, frequency hopping systems operating in the 2400-2483.5 MHz band may have hopping channel carrier frequencies that are separated by 25 kHz or two-thirds of the 20 dB bandwidth of the hopping channel, whichever is greater, provided the systems operate with an output power no greater than 0.125W.

12.3 Test procedure


1. Remove the antenna from the EUT and then connect a low RF cable from the antenna port to the spectrum.
2. Set the spectrum analyzer: RBW = 30kHz. VBW = 100kHz , Span = 2.0MHz. Sweep = auto; Detector Function = Peak. Trace = Max hold.
3. Allow the trace to stabilize. Use the marker-delta function to determine the separation between the peaks of the adjacent channels. The limit is specified in one of the subparagraphs of this Section Submit this plot.

12.4 Test Result


Mode	Test Channel	Separation (MHz)	Limit(MHz)	Result
1-DH1	Low	1.000	0.574	PASS
1-DH1	Middle	1.000	0.581	PASS
1-DH1	High	0.998	0.570	PASS
2-DH1	Low	1.002	0.848	PASS
2-DH1	Middle	1.000	0.817	PASS
2-DH1	High	0.998	0.815	PASS
3-DH1	Low	0.998	0.821	PASS
3-DH1	Middle	1.002	0.813	PASS
3-DH1	High	1.000	0.810	PASS

Test Graphs



CFS NVNT 1-DH1 2402MHz


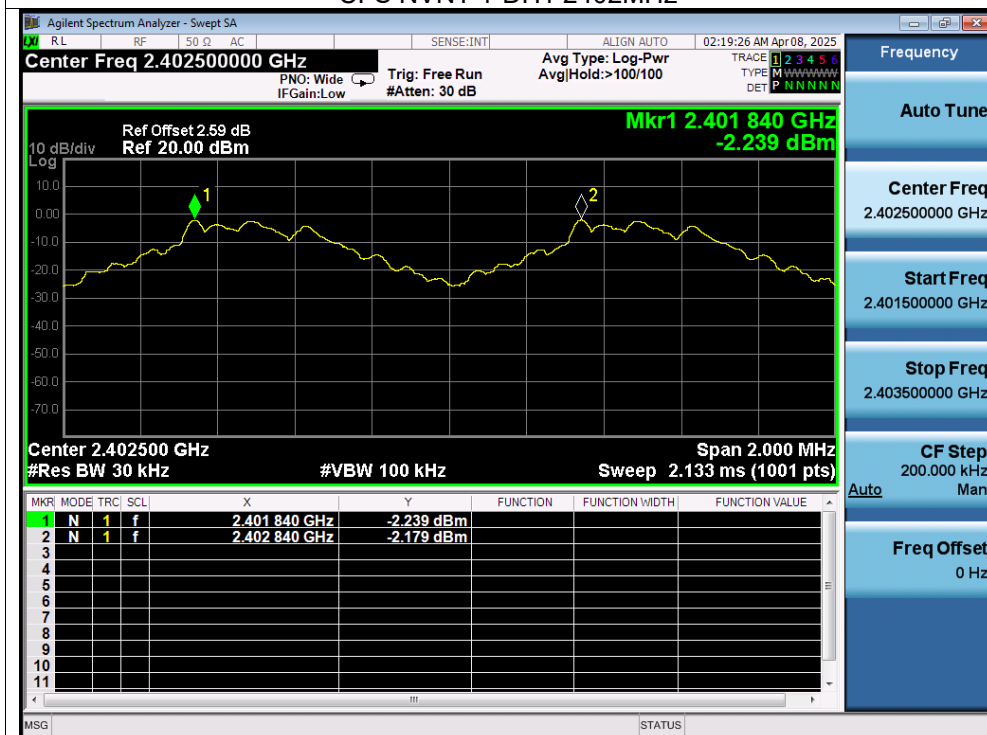


CFS NVNT 1-DH1 2441MHz


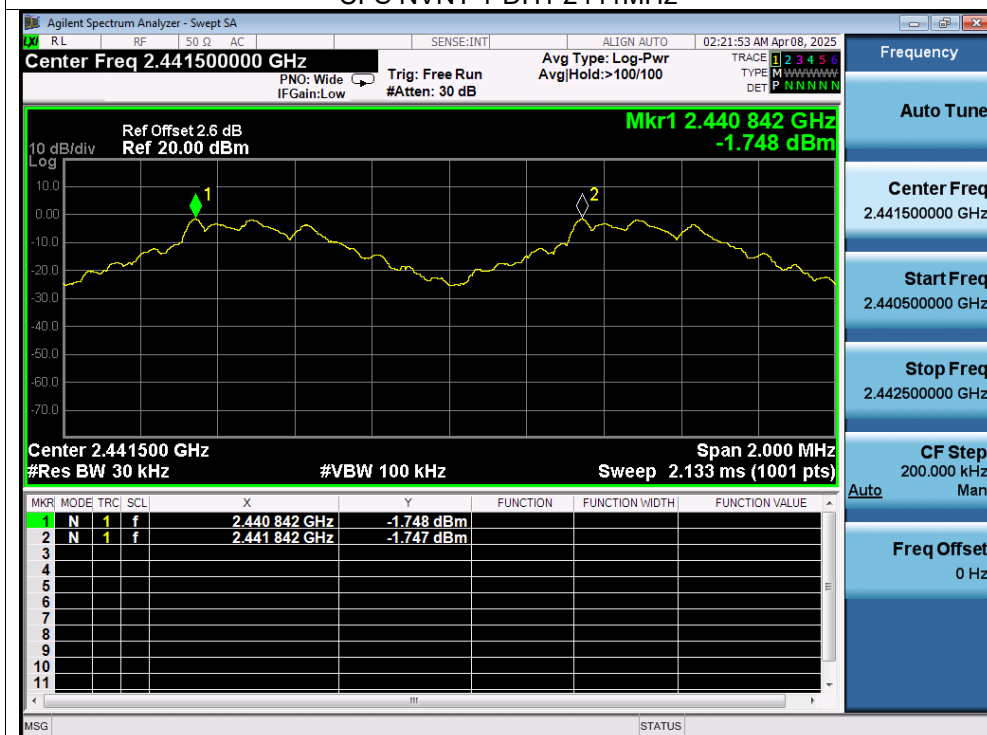


TC
BC
PPR
Report

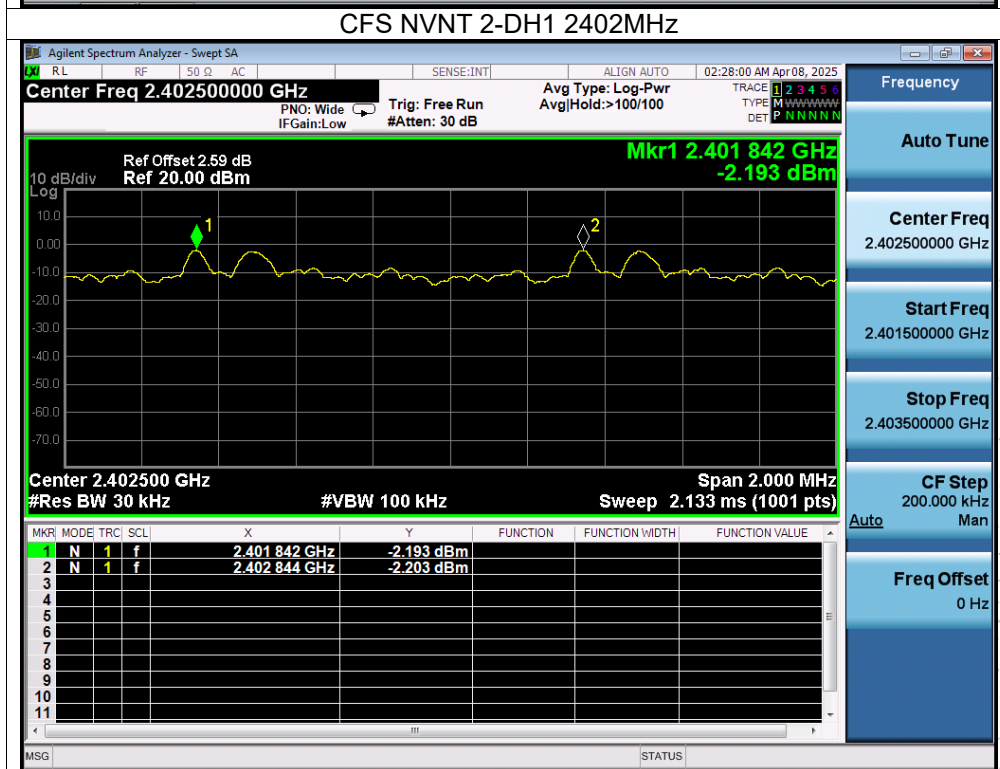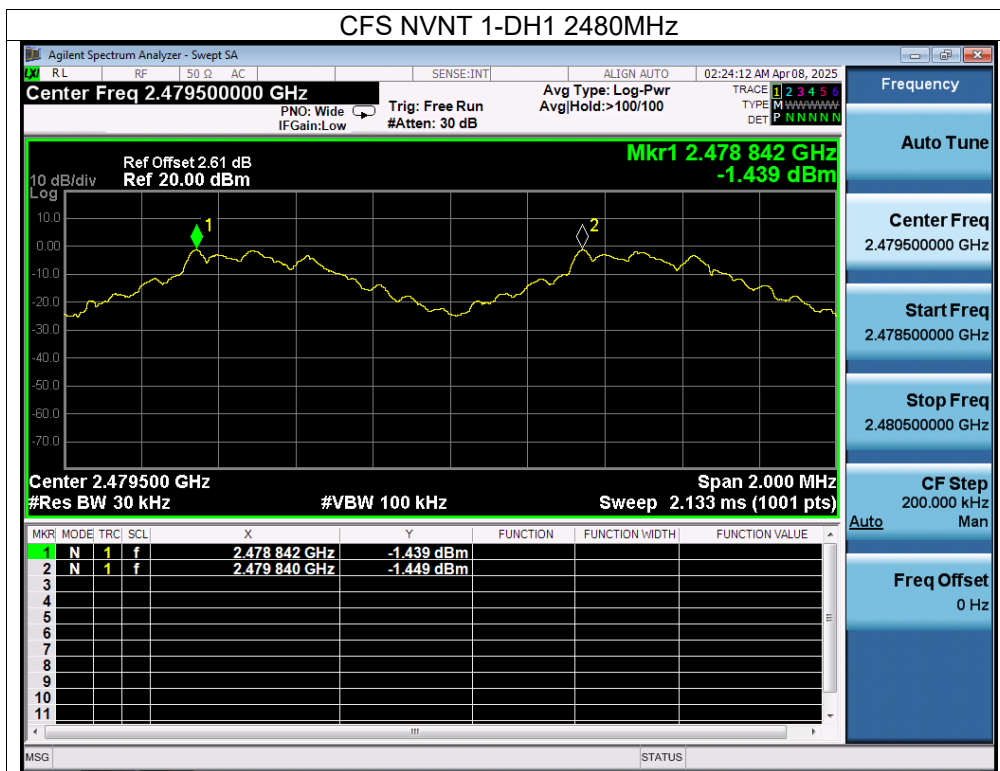


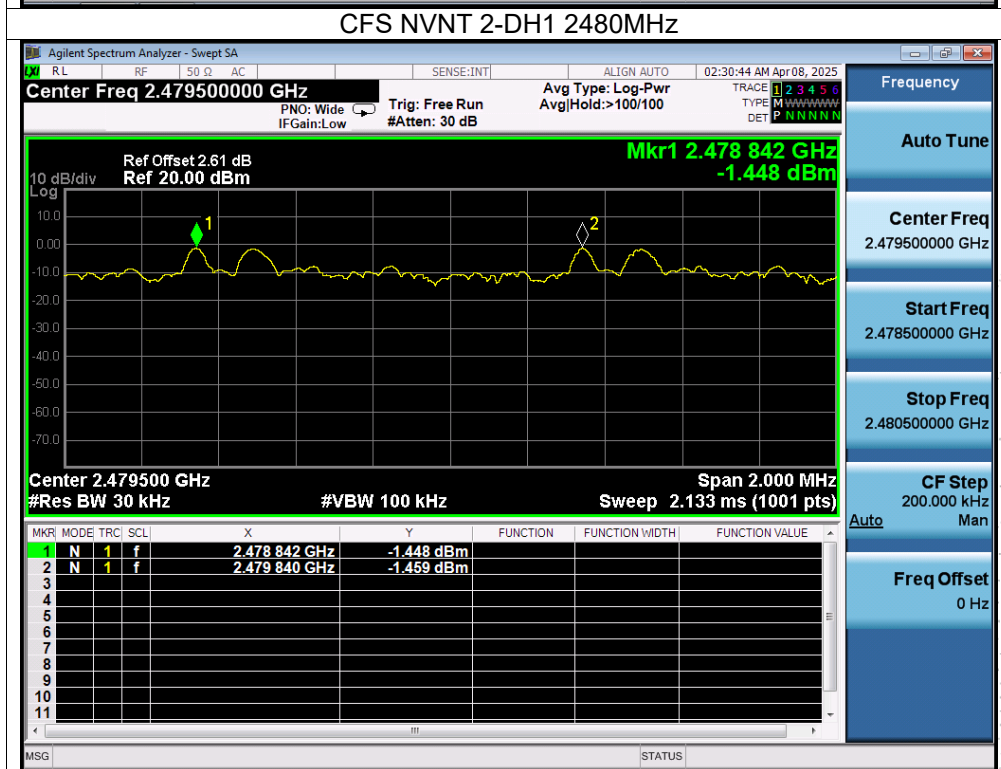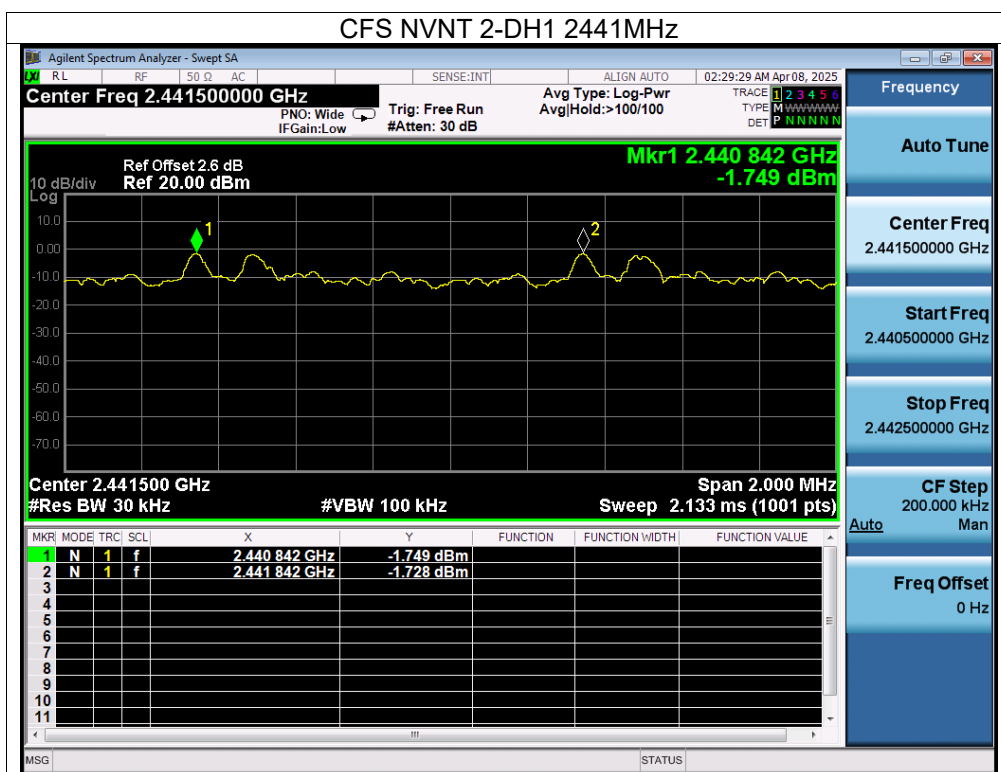

STING
C
ED
A

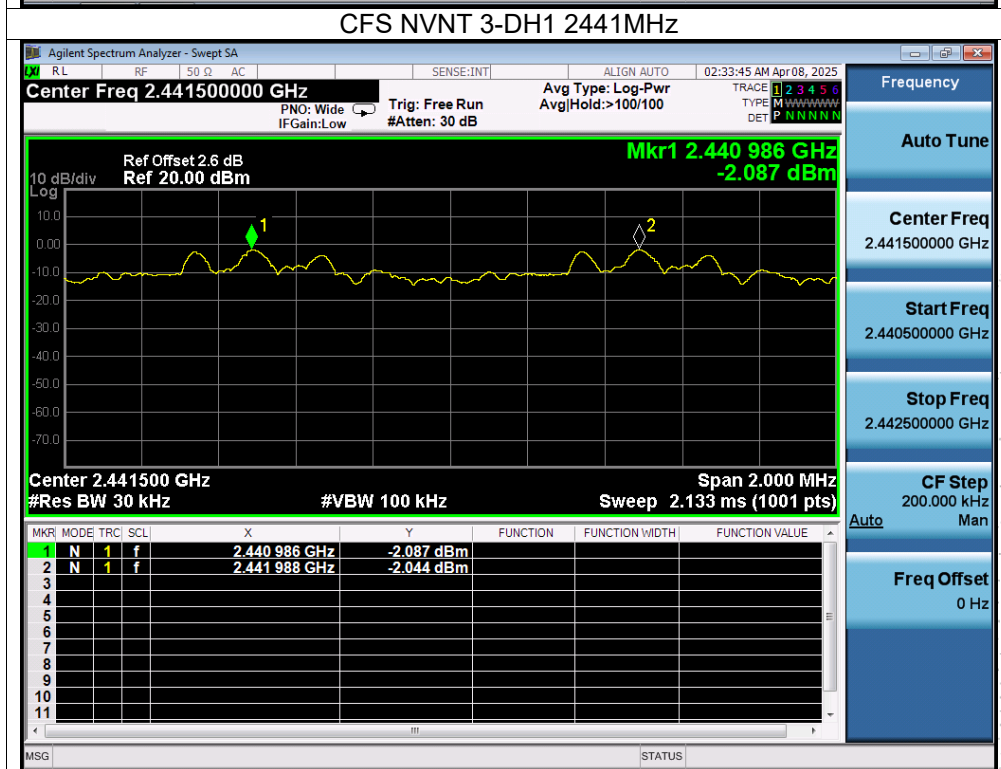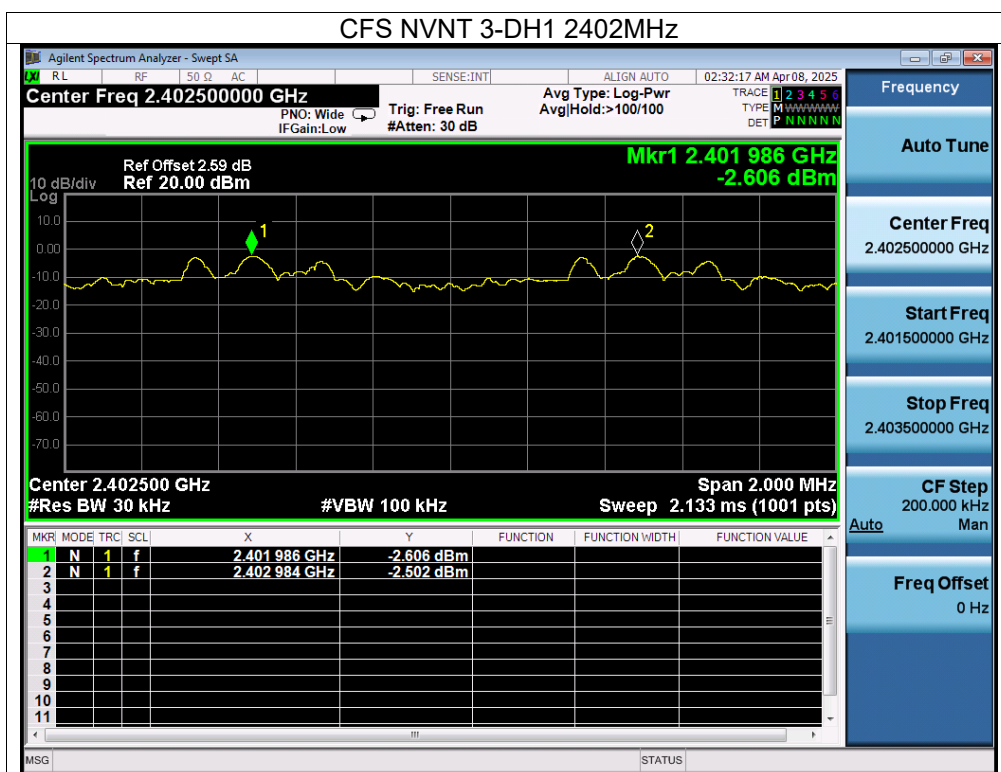

CO., LTD.

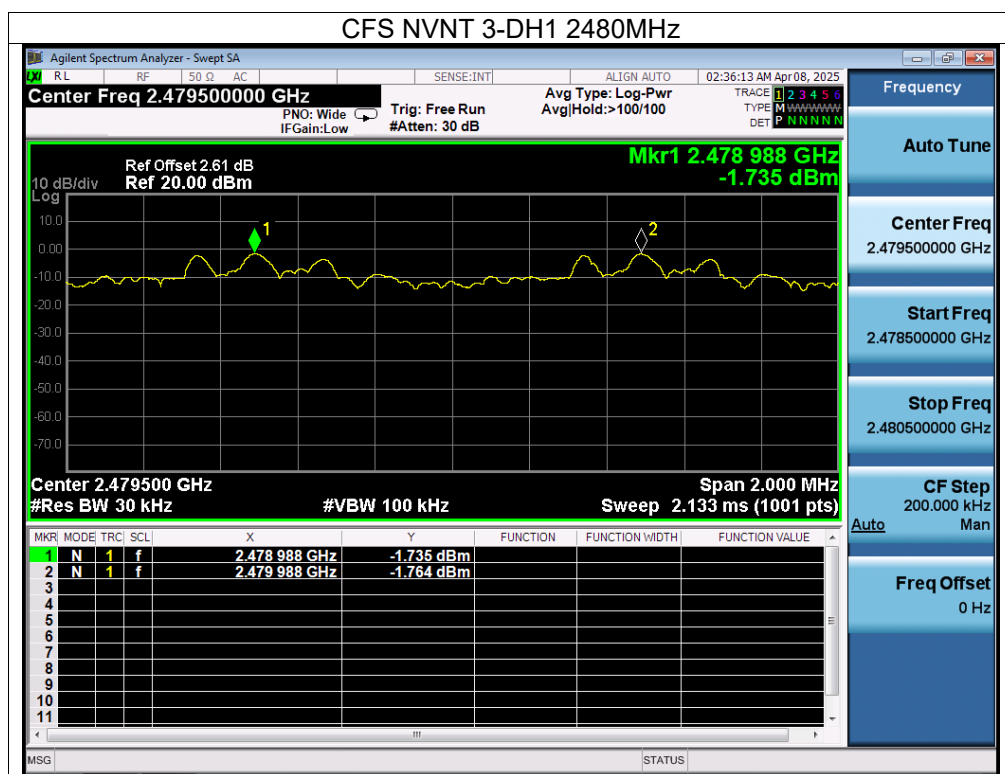

SHENZHEN

13. Number Of Hopping Frequency

13.1 Block Diagram Of Test Setup



13.2 Limit


Frequency hopping systems in the 2400-2483.5 MHz band shall use at least 15 channels.


13.3 Test procedure

1. Remove the antenna from the EUT and then connect a low RF cable from the antenna port to the spectrum.
2. Set the spectrum analyzer: RBW = 100kHz. VBW = 300kHz. Sweep = auto; Detector Function = Peak. Trace = Max hold.
3. Allow the trace to stabilize. It may prove necessary to break the span up to sections. in order to clearly show all of the hopping frequencies. The limit is specified in one of the subparagraphs of this Section.
4. Set the spectrum analyzer: Start Frequency = 2.4GHz, Stop Frequency = 2.4835GHz. Sweep=auto;

13.4 Test Result

Condition	Mode	Hopping Number	Limit	Verdict
NVNT	1-DH1	79	15	Pass
NVNT	2-DH1	79	15	Pass
NVNT	3-DH1	79	15	Pass

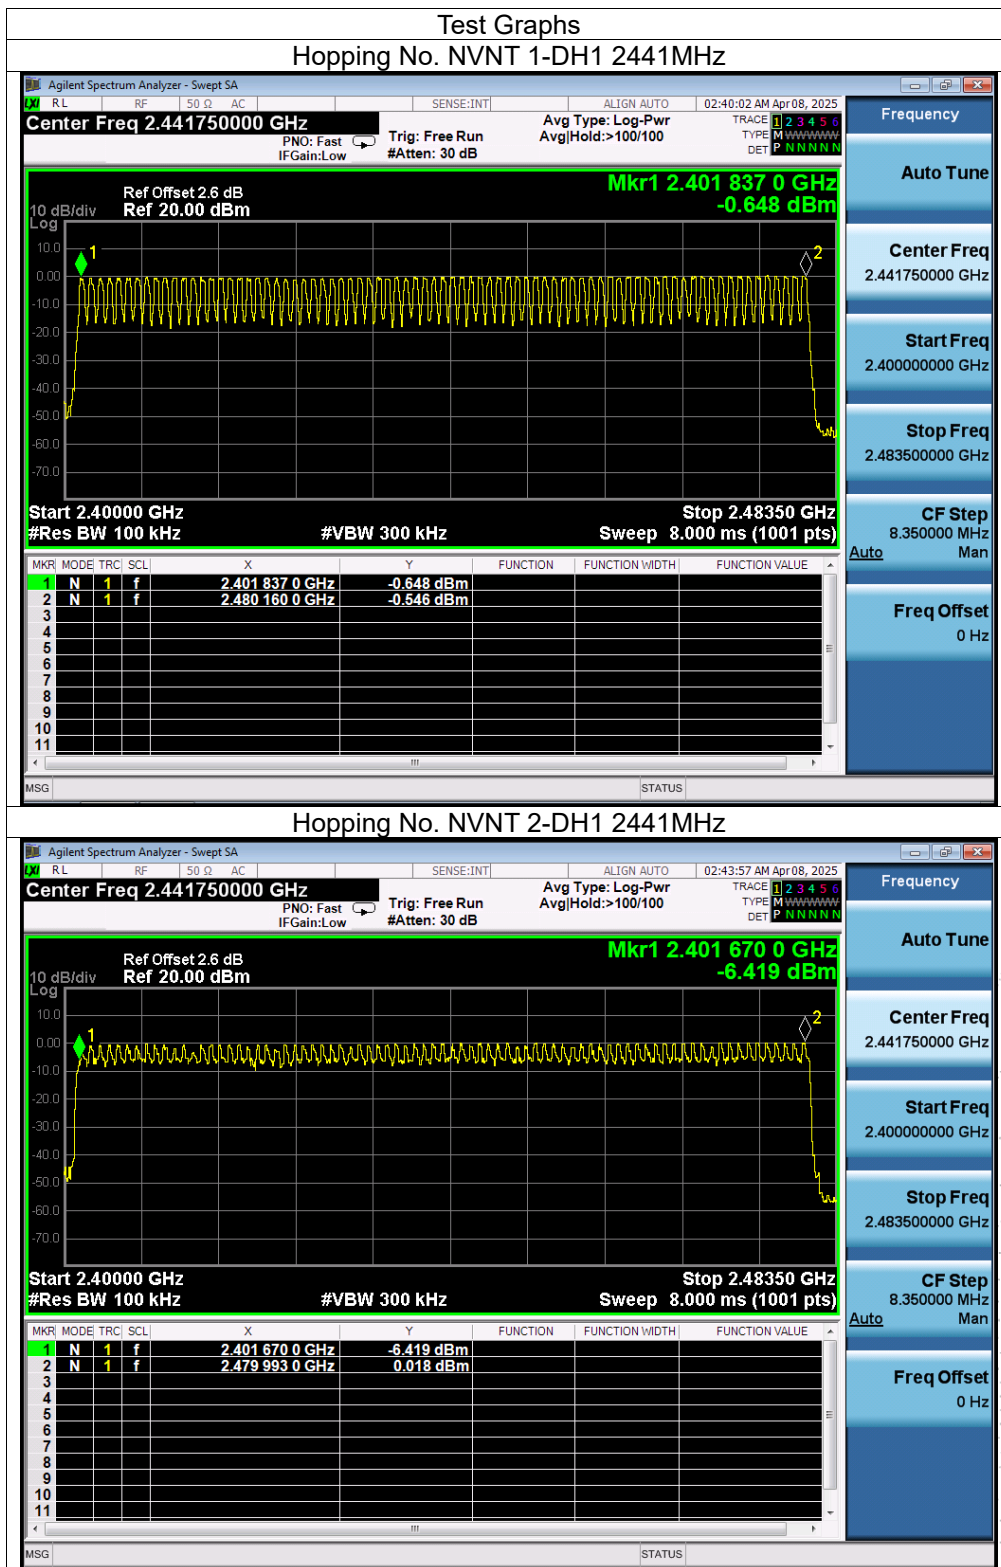

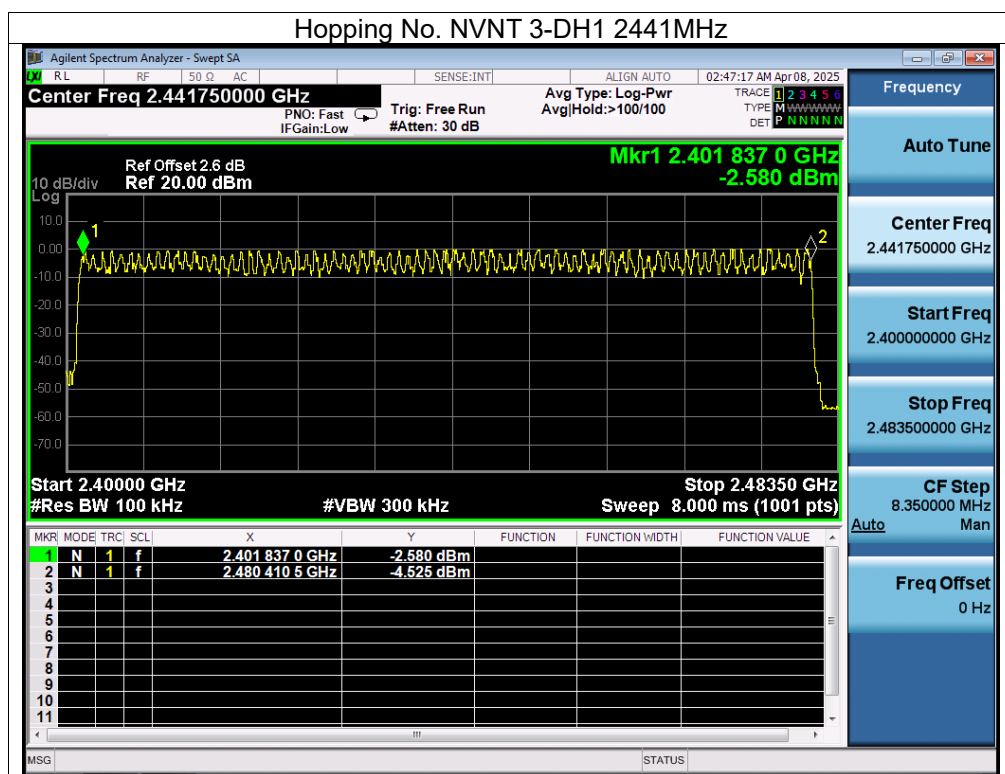

14. Dwell Time

14.1 Block Diagram Of Test Setup



14.2 Limit

Frequency hopping systems in the 2400-2483.5 MHz band shall use at least 15 channels. The average time of occupancy on any channel shall not be greater than 0.4 seconds within a period of 0.4 seconds multiplied by the number of hopping channels employed. Frequency hopping systems may avoid or suppress transmissions on a particular hopping frequency provided that a minimum of 15 channels are used.


14.3 Test procedure

1. Remove the antenna from the EUT and then connect a low RF cable from the antenna port to the spectrum.
2. Set spectrum analyzer span = 0. Centred on a hopping channel;
3. Set RBW = 1MHz and VBW = 3MHz. Sweep = as necessary to capture the entire dwell time per hopping channel. Set the EUT for DH5, DH3 and DH1 packet transmitting.
4. Use the marker-delta function to determine the dwell time. If this value varies with different modes of operation (e.g.. data rate. modulation format. etc.). repeat this test for each variation. The limit is specified in one of the subparagraphs of this Section. Submit this plot(s).



14.4 Test Result



Mode	Frequency (MHz)	Pulse Time (ms)	Total Dwell Time (ms)	Burst Count	Period Time (ms)	Limit (ms)	Verdict
1-DH1	2441	0.381	120.015	315	31600	400	Pass
1-DH3	2441	1.638	270.27	165	31600	400	Pass
1-DH5	2441	2.886	294.372	102	31600	400	Pass
2-DH1	2441	0.392	125.048	319	31600	400	Pass
2-DH3	2441	1.637	271.742	166	31600	400	Pass
2-DH5	2441	2.892	289.2	100	31600	400	Pass
3-DH1	2441	0.392	124.264	317	31600	400	Pass
3-DH3	2441	1.643	264.523	161	31600	400	Pass
3-DH5	2441	2.894	327.022	113	31600	400	Pass



Note: Total Dwell Time (ms) = Pulse Time (ms)*Burst Count


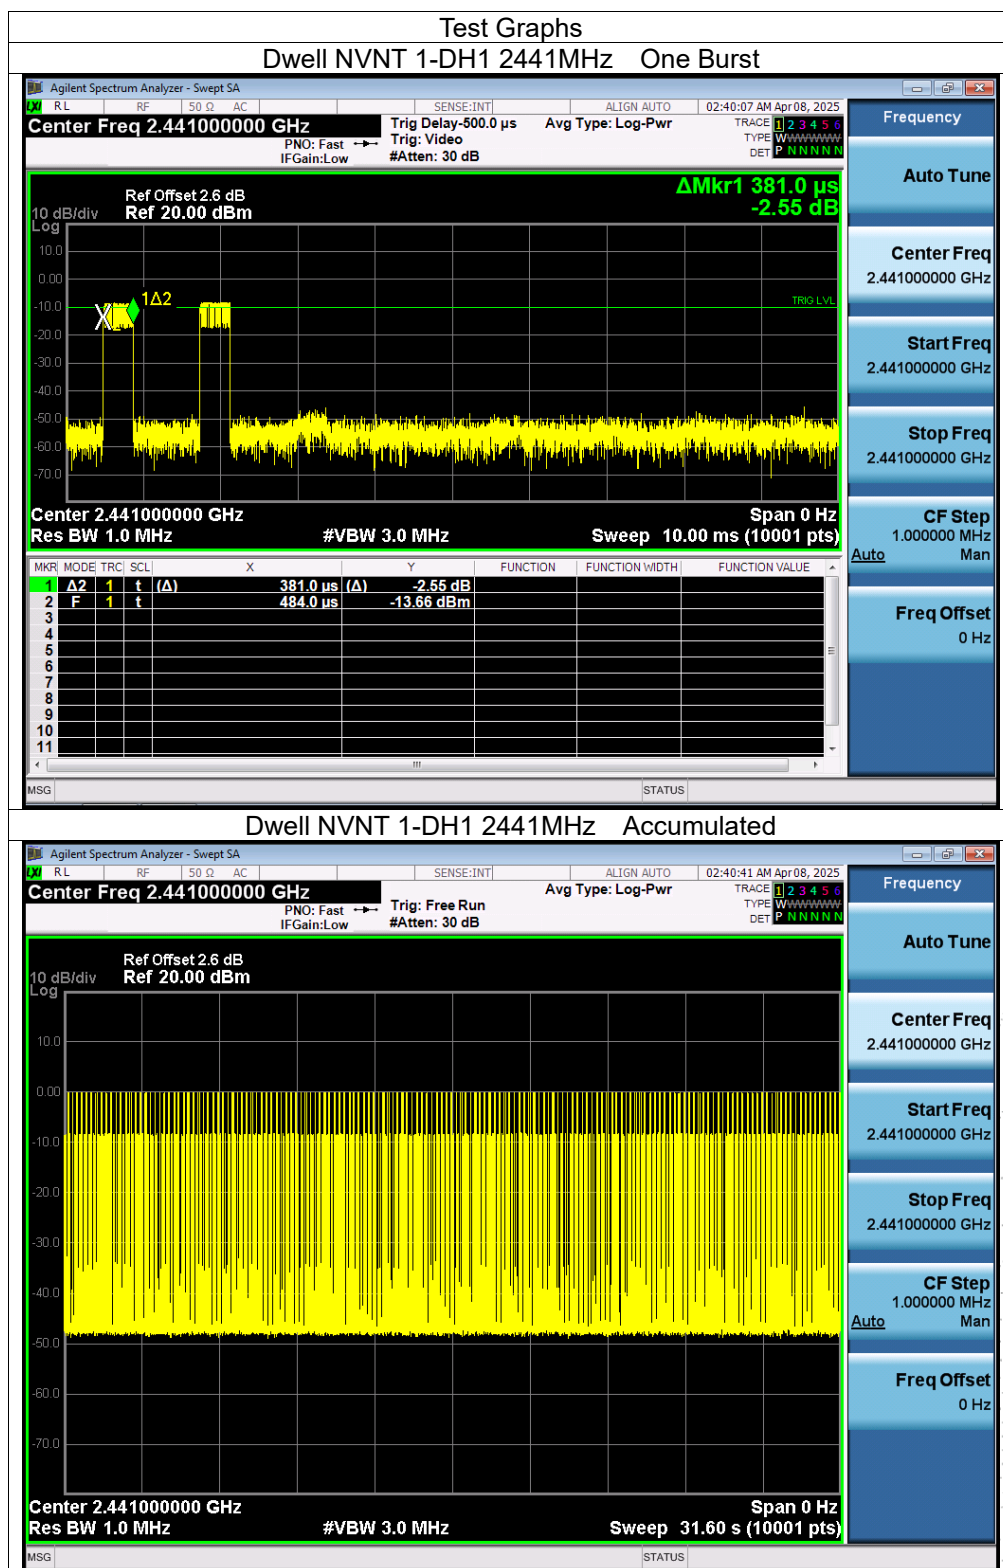




CO. LTD

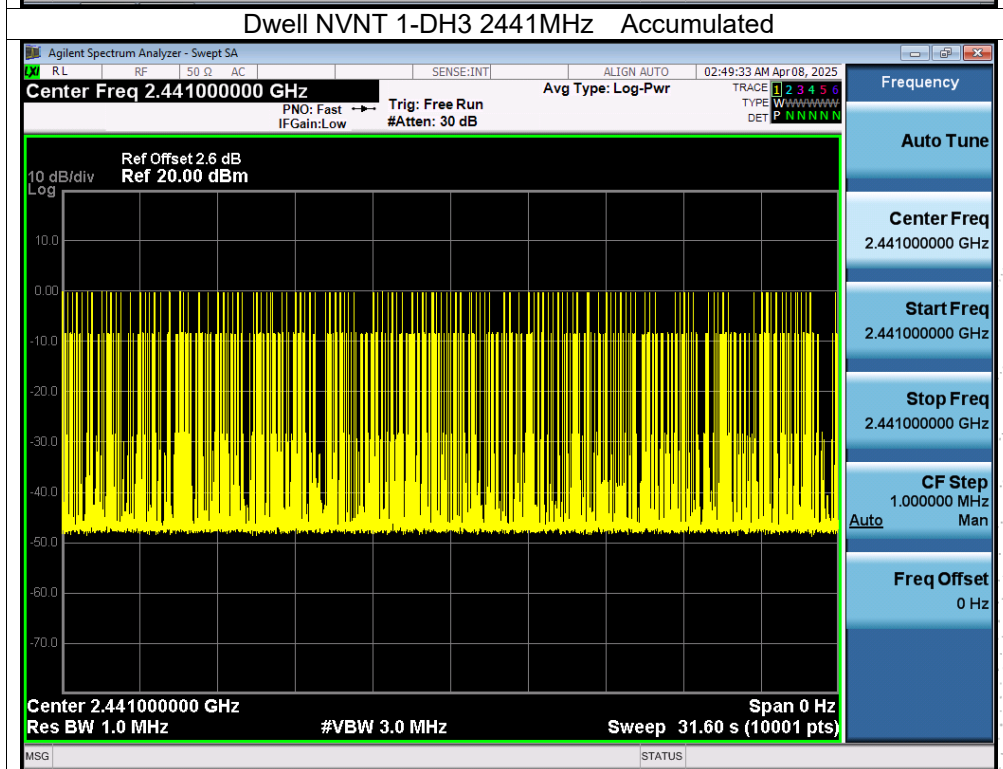
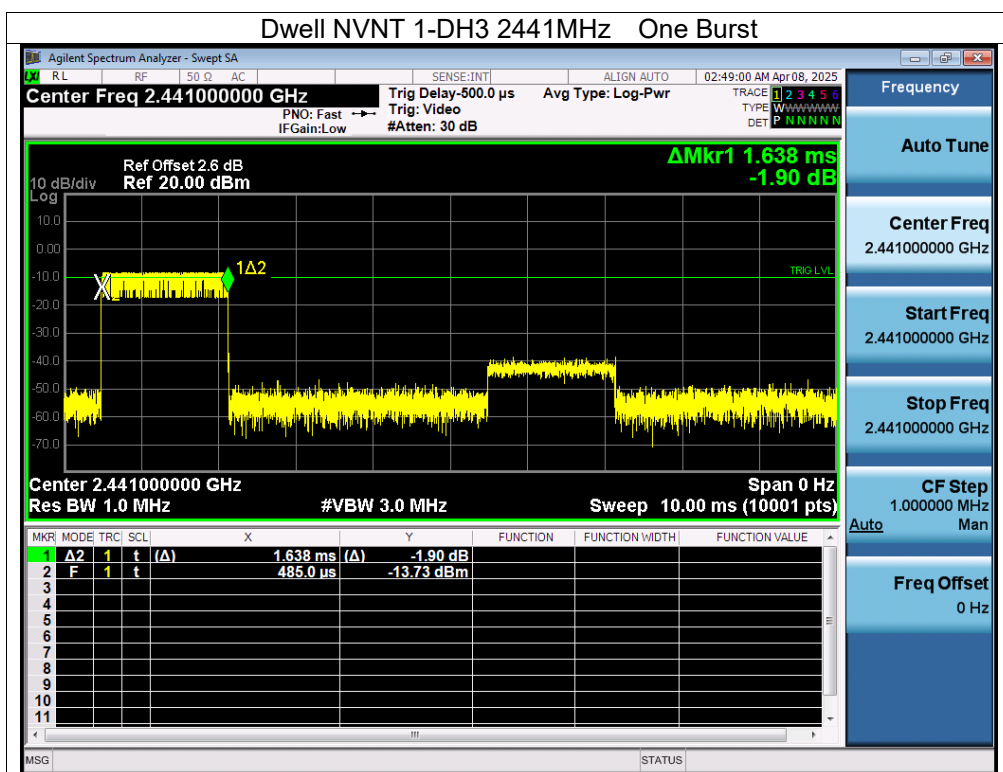


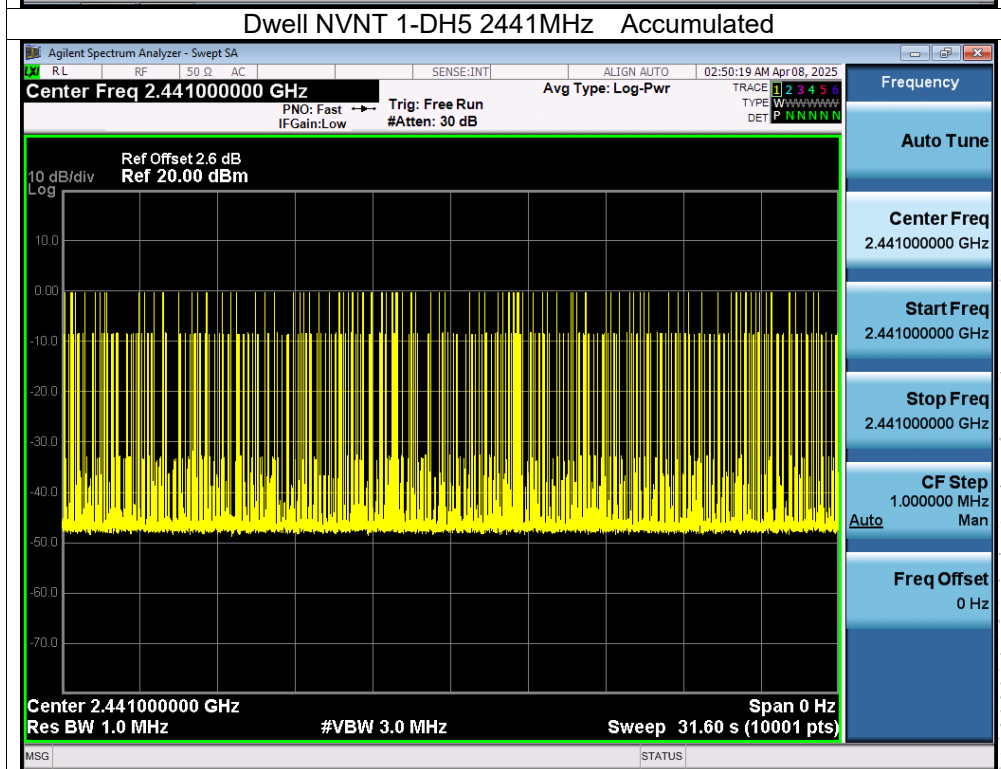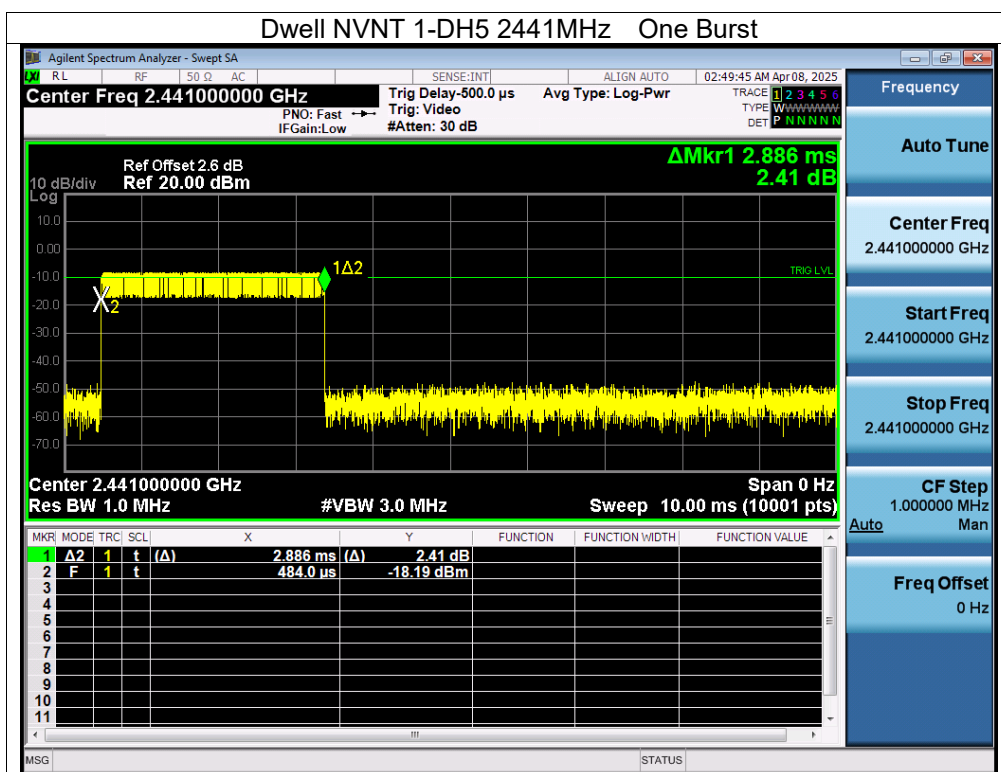

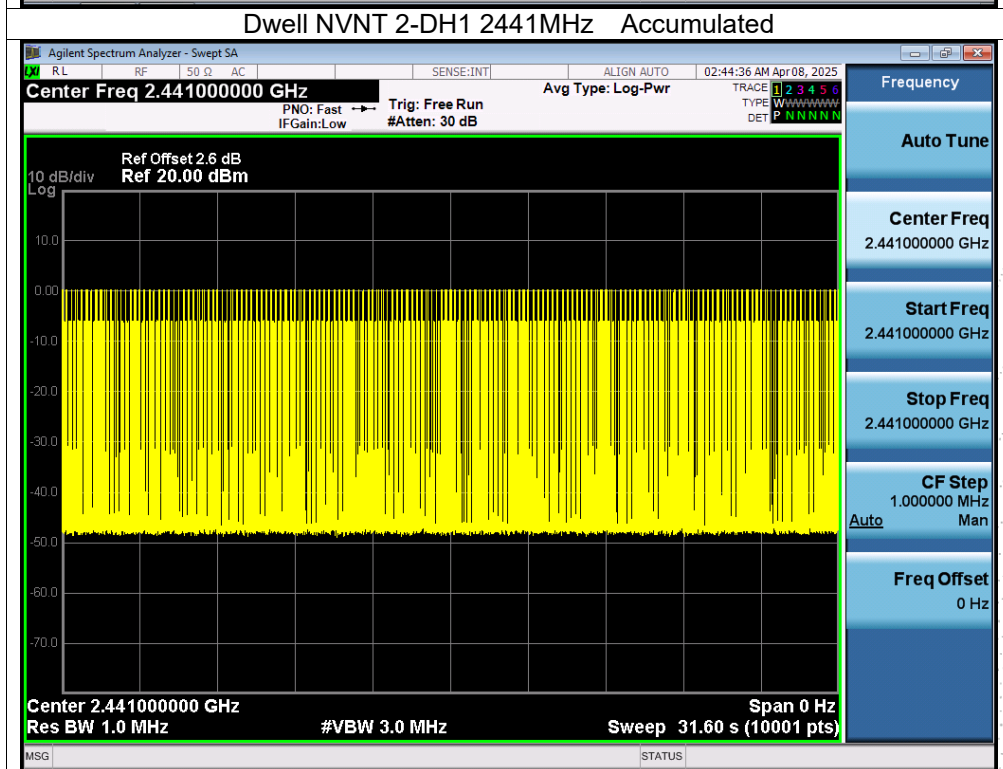
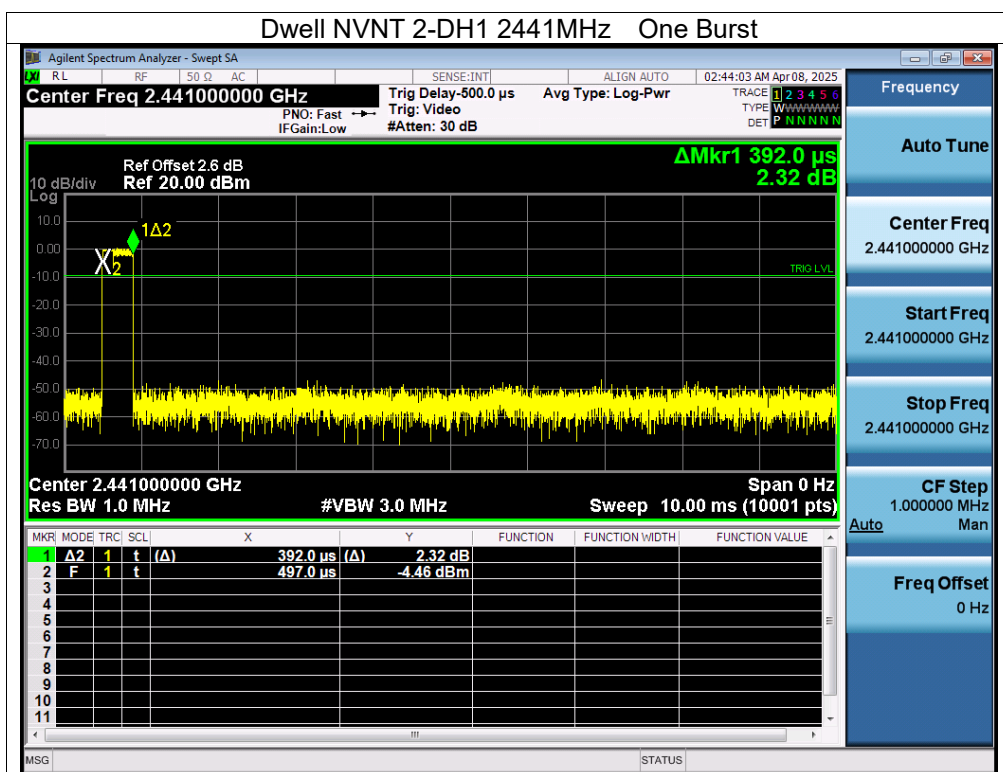


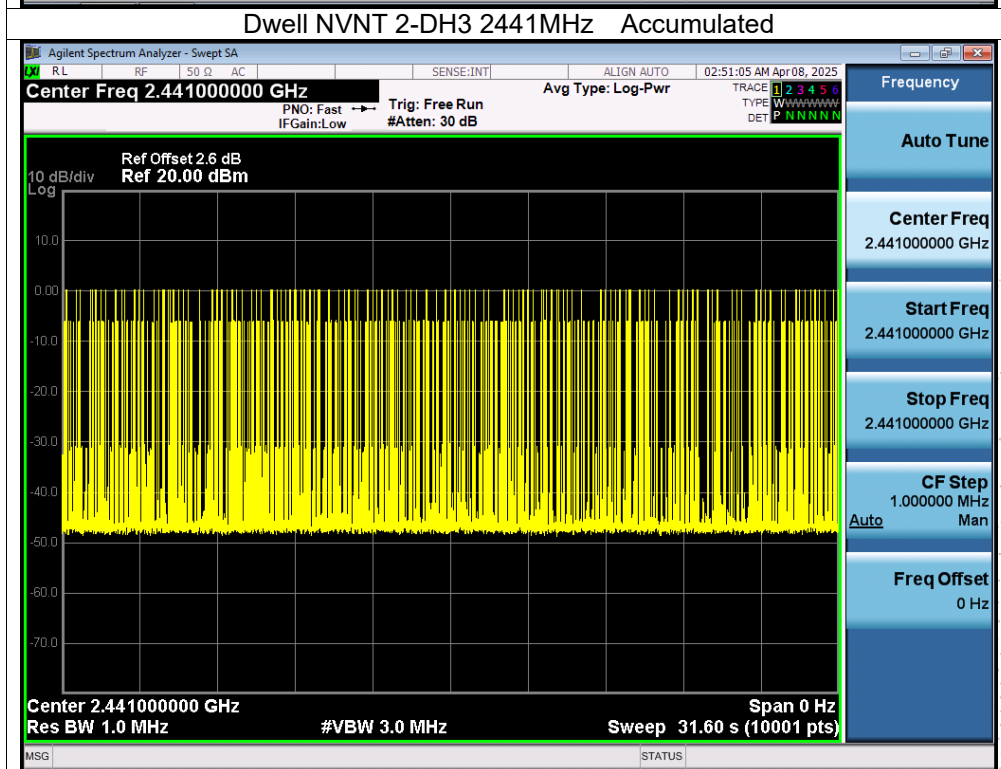
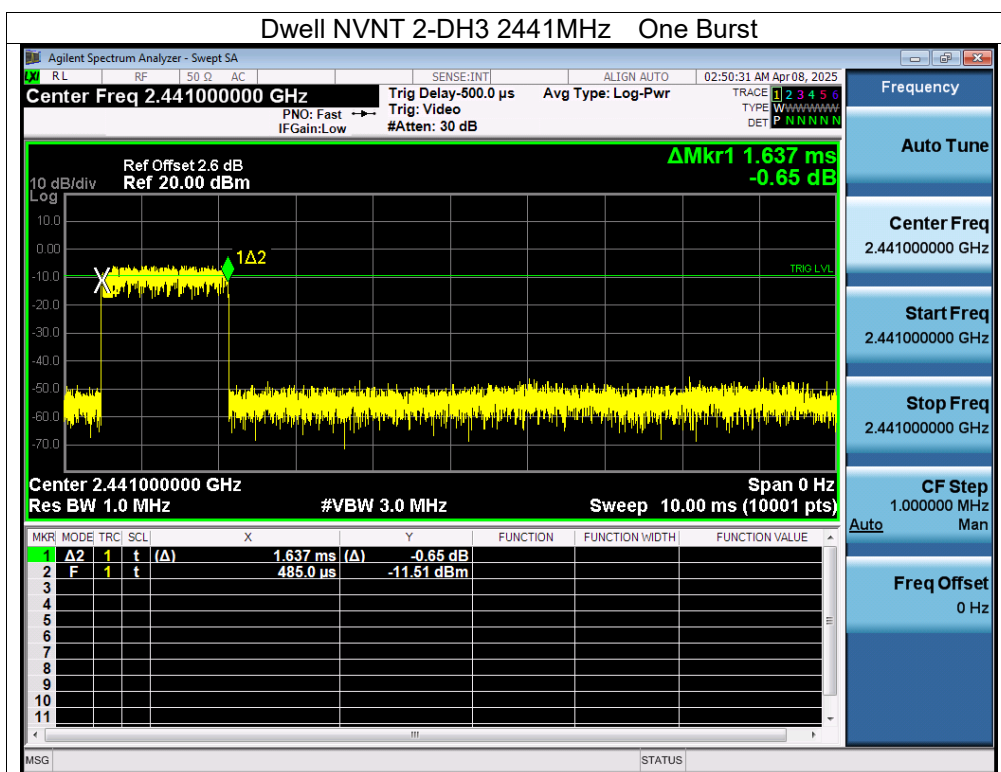


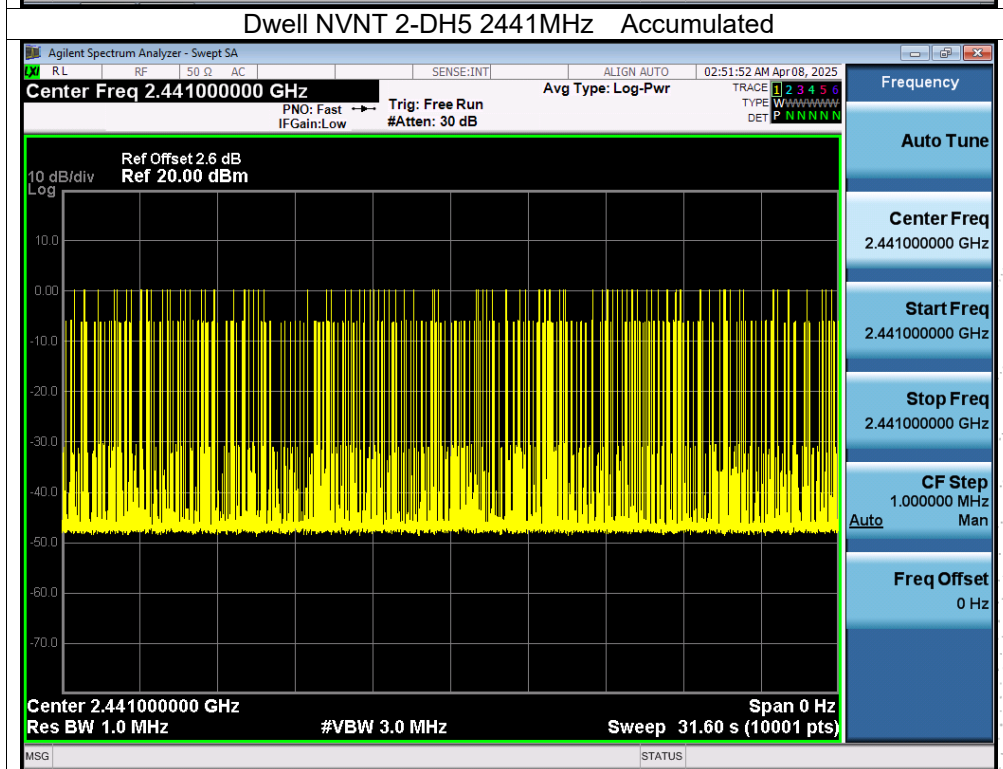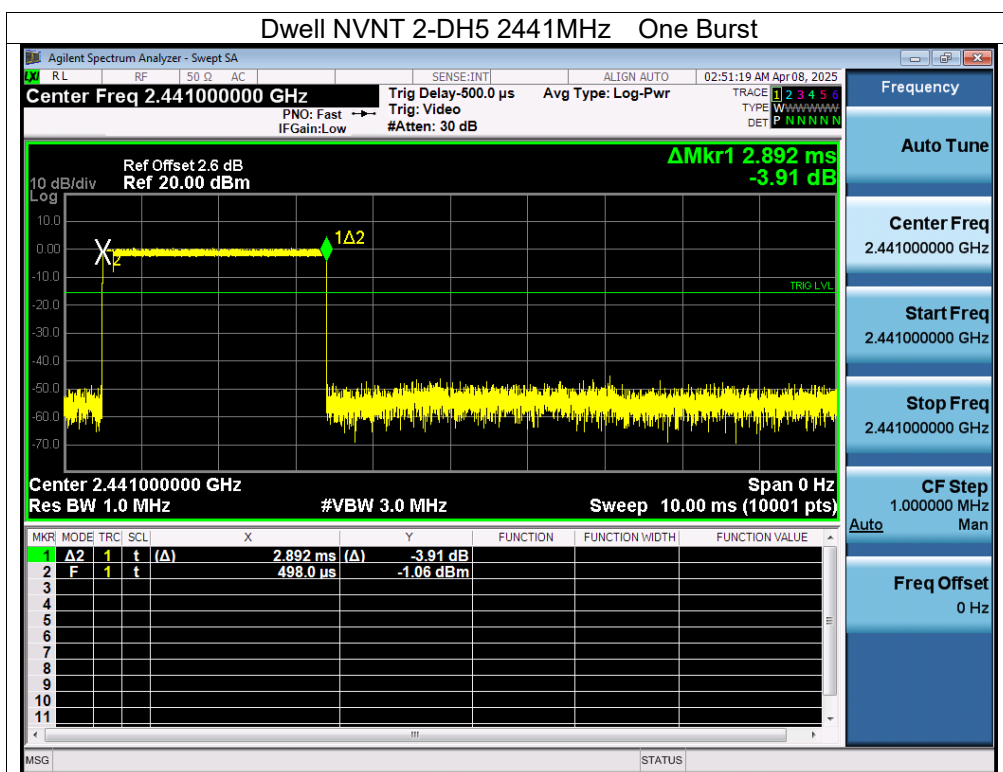

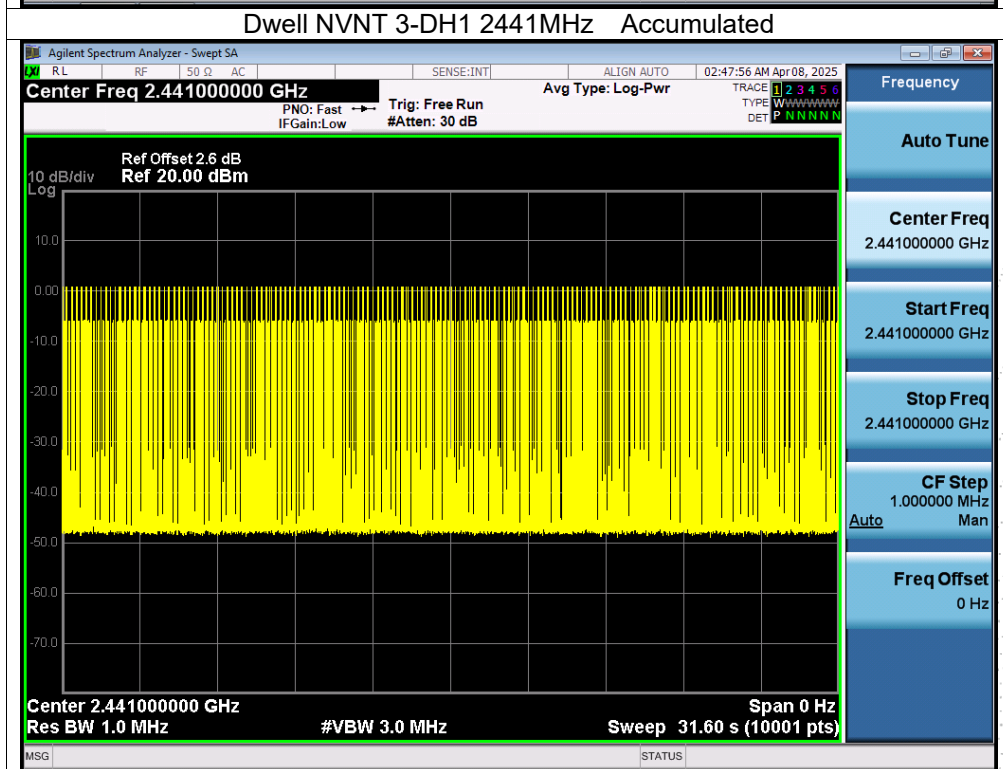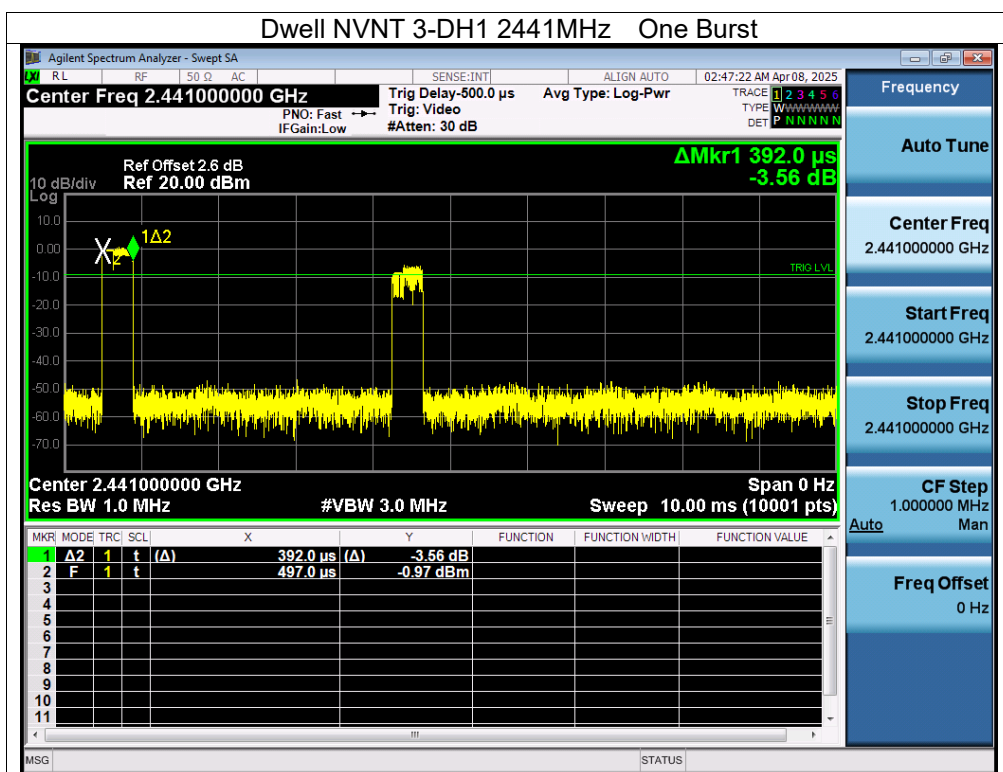

CO., LTD.

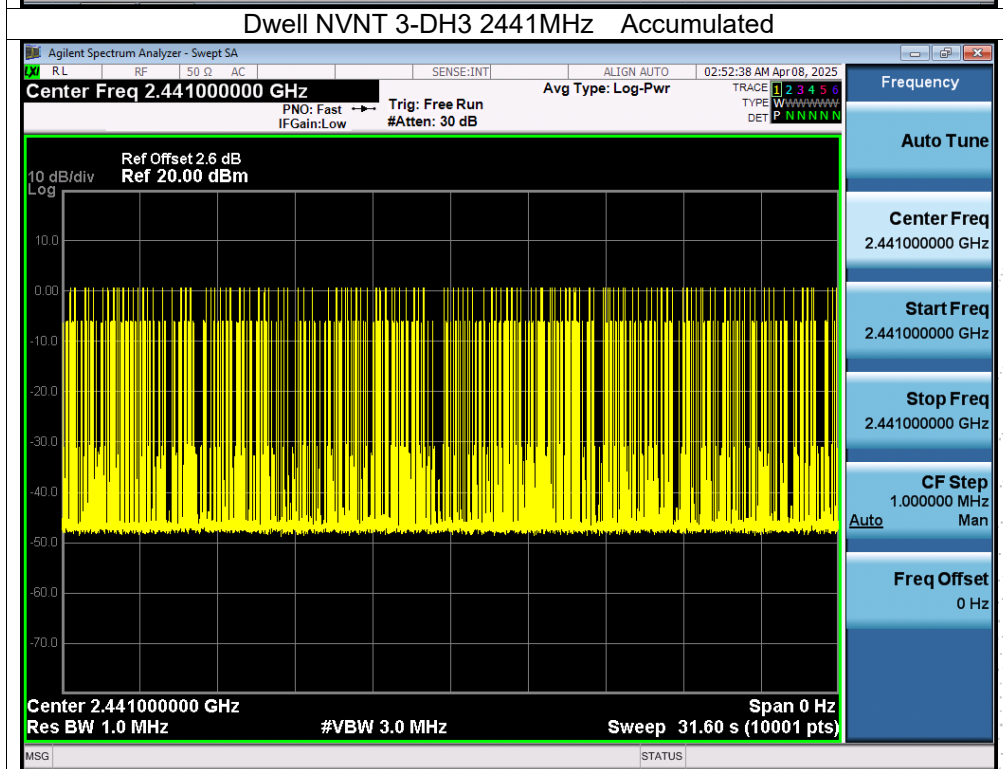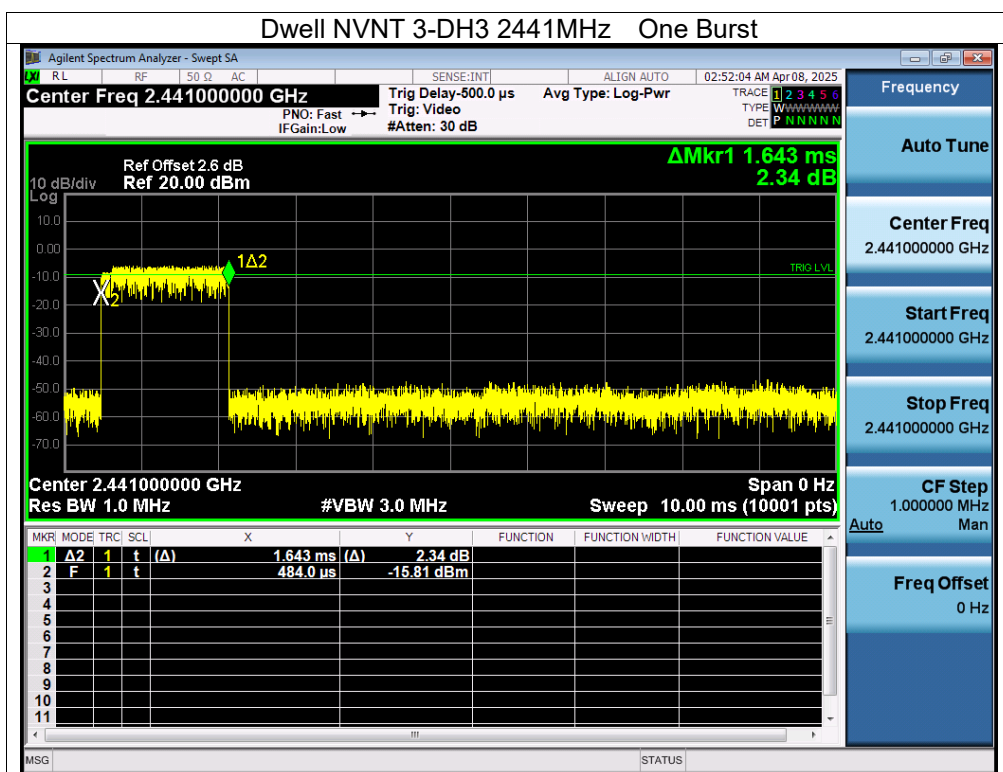

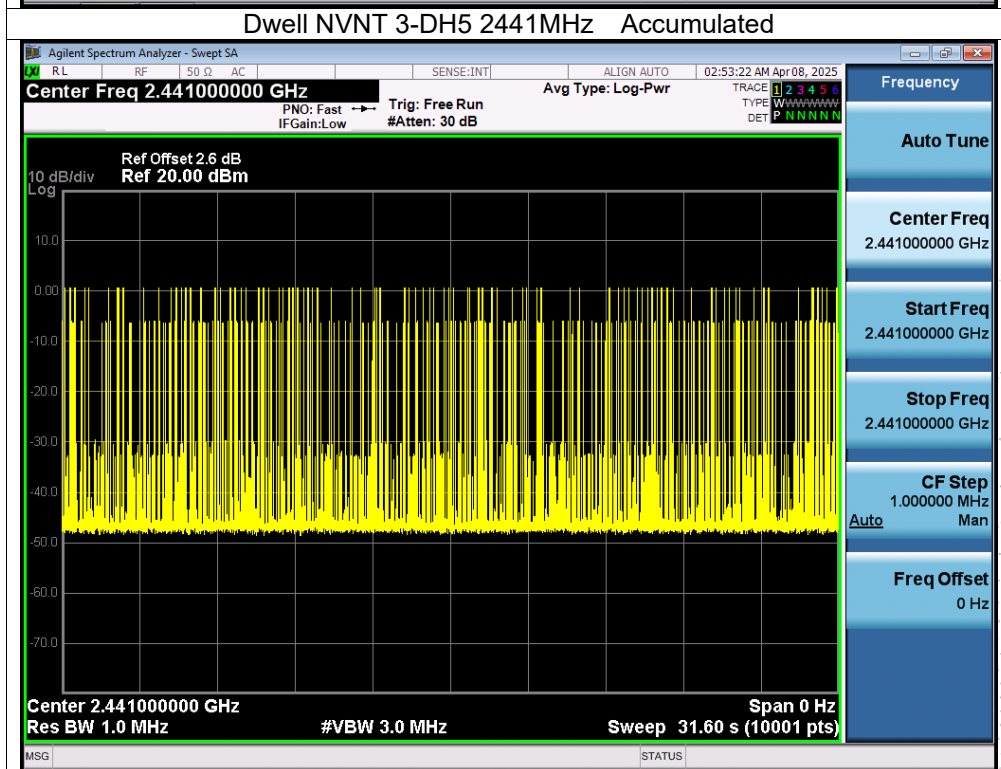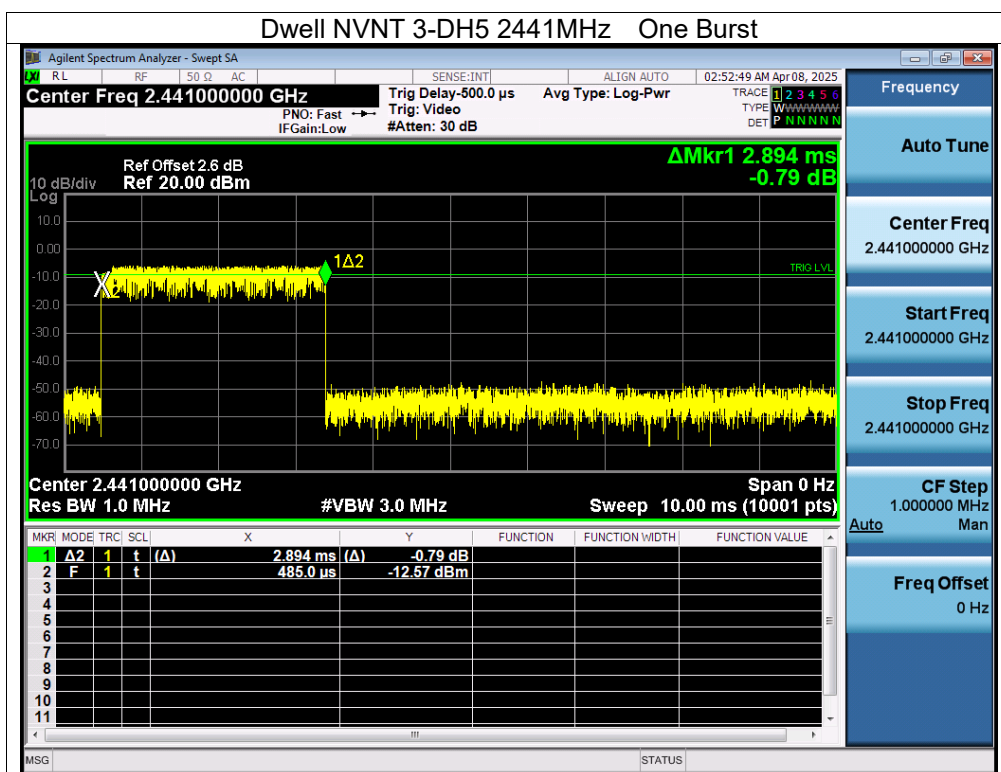

15. Antenna Requirement

15.1 Limit

15.203 requirement: For intentional device, according to 15.203: an intentional radiator shall be designed to ensure that no antenna other than that furnished by the responsible party shall be used with the device.

15.2 Test Result

The EUT antenna is Internal antenna, fulfill the requirement of this section.

16. EUT Photographs


EUT Photo



NOTE: Appendix-Photographs Of EUT Constructional Details


17. EUT Test Setup Photographs

Conducted emissions

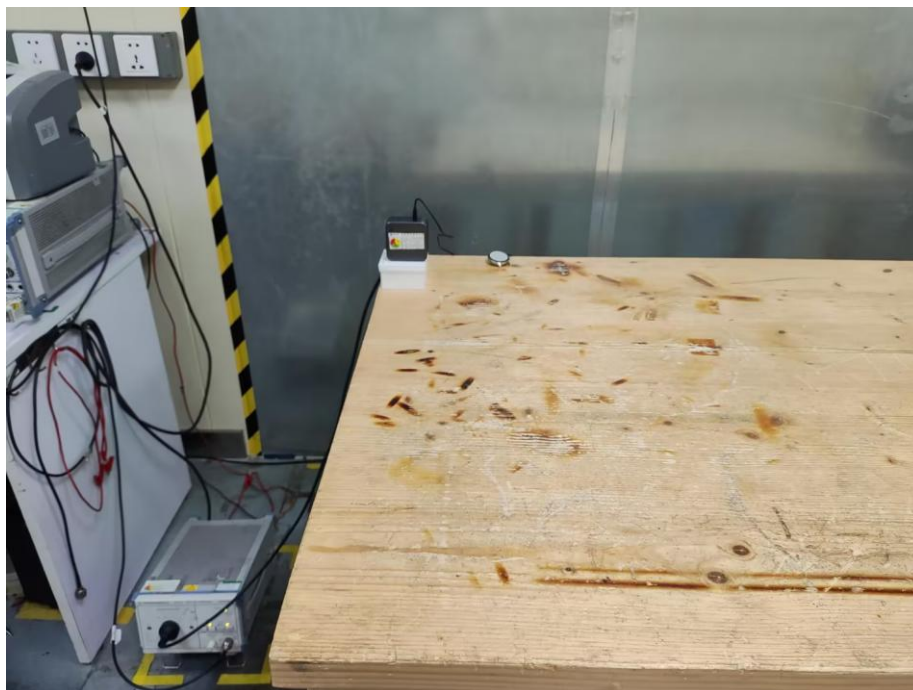

TEST
FOR
OVER
seal

Radiated Measurement Photos

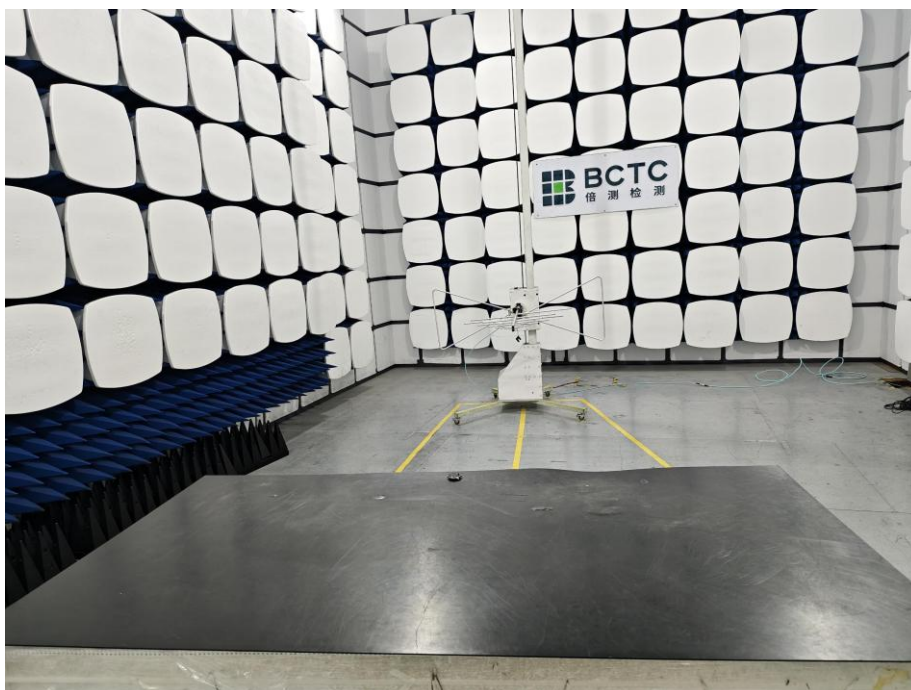

STATEMENT

1. The equipment lists are traceable to the national reference standards.
2. The test report can not be partially copied unless prior written approval is issued from our lab.
3. The test report is invalid without the "special seal for inspection and testing".
4. The test report is invalid without the signature of the approver.
5. The test process and test result is only related to the Unit Under Test.
6. Sample information is provided by the client and the laboratory is not responsible for its authenticity.
7. The quality system of our laboratory is in accordance with ISO/IEC17025.
8. If there is any objection to this test report, the client should inform issuing laboratory within 15 days from the date of receiving test report.

Address:

1-2/F., Building B, Pengzhou Industrial Park, No.158, Fuyuan 1st Road, Zhancheng, Fuhai Subdistrict, Bao'an District, Shenzhen, Guangdong, China

TEL: 400-788-9558

P.C.: 518103

FAX: 0755-33229357

Website: <http://www.chnbctc.com>

Consultation E-mail: bctc@bctc-lab.com.cn

Complaint/Advice E-mail: advice@bctc-lab.com.cn

***** END *****