




Rechargeable and Waterproof Remote Training Collar

Please read this entire guide before beginning

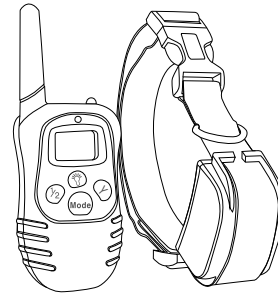

Model Number:
PET998DRU

General Training Tips

Training Manual

Important Safety Information

WARNING

Not for aggressive dogs. Do not use this product if your dog is aggressive, or if your dog is prone to aggressive behavior. Aggressive dogs can cause severe injury and even death to their owner and others. If you are unsure whether this product is appropriate for your dog, please consult your veterinarian or certified trainer.

CAUTION

Risk of skin damage. Please read and follow the instructions in this manual. Proper fit of the collar is important. A collar worn for too long or made too tight on the pet's neck may cause skin damage. Ranging from redness to pressure ulcers; this condition is commonly known as bed sores. These collars can cause pressure necrosis if used incorrectly and is often misidentified as burns.

- Avoid leaving the collar on the dog for more than 12 hours per day.
- If possible, reposition the collar on the pet's neck every 1 to 2 hours.
- Check the fit of the collar to prevent excessive pressure; follow the instructions in this manual.
- Never connect a lead to the electronic collar; it will cause excessive pressure on the contacts.
- When using a separate collar for a lead, don't put pressure on the electronic collar.
- Wash the dog's neck area and the contacts of the collar weekly with a damp cloth.
- Examine the contact area daily for signs of a rash or a sore.
- If a rash or sore is found, discontinue use of the collar until the skin has healed.
- If the condition persists beyond 48 hours, see your veterinarian.

These steps will help keep your pet safe and comfortable. Millions of pets are comfortable while they wear stainless steel contacts. Some pets are sensitive to contact pressure. You may find after some time that your pet is very tolerant of the collar. If so, you may relax some of these precautions. It is important to continue daily checks of the contact area. If redness or sores are found, discontinue use until the skin has fully healed.

Table of Contents

Table of Contents.....	2
Complements.....	3
How the Pettrainer Rechargeable and Waterproof LCD Remote Pet Training System Works.....	4
MAIN FEATURES.....	4
Key Definitions.....	5
HOW TO USE.....	6
1. Charge the remote transmitter:.....	7
2. Charge the collar receiver:.....	7
3. Pairing the Remote Transmitter and Receiver Collar:.....	7
4. Test static shock function:.....	7
Static Shock Stimulation Tester.....	7
Test Vibration Function.....	8
Test Beep Function.....	9
Test LED light Function:.....	10
Fit the Receiver Collar with your dogs:.....	11
5. Regular Maintenance.....	12
Frequently Asked Questions.....	13
Troubleshooting.....	15
FCC Notice.....	16
Common Size of Different Dogs.....	17
LIMITED ONE-YEAR WARRANTY.....	17
Pettrainer CUSTOMER SERVICE.....	17



Warning

Please charge before using the product!

If putting the transmitter and receiver collar in storage for a long time, please charge both fully before leaving them idle and continue charging once every month.

Components

IS-PET998DRU 1 for 1



IS-PET998DRU 1 for 2



How the Petainer Rechargeable and Waterproof LCD Remote Pet Training System Works


Petrainer Rechargeable and Waterproof LCD Remote Pet Training System has been proven safe, comfortable, and effective for all pets over 8 pounds. This system assists you in controlling your pet without a leash in a range up to 328 yards (300m). At the push of a button, the Remote Transmitter sends a signal, activating the Receiver Collar. Using the Remote Trainer consistently and correctly, misbehaviors that your pet exhibits will be corrected or any basic obedience commands can be taught.

Important: The Remote Trainer has a range up to 328 yards. Depending on the way you hold the Remote Transmitter, the range may vary. Hold the Remote Transmitter in a horizontal position away from your body to achieve optimum range. Terrain, weather, vegetation, transmission from other radio devices, and other factors will affect the range of your Remote Trainer.

MAIN FEATURES

1. Easy-to-use, ergonomic transmitter.
2. Waterproof receiver for wet conditions, only waterproof after the rubber cover is placed over charging jack.
3. Rechargeable collar and transmitter can be charged at the same time.
4. Rheostat dial that allows for gradual increases in stimulation intensity between 0-100 levels.
5. 4 training modes: static shock/ vibration/ beep/ light.
6. The Petainer Element 998DRU has a 300 meters range.
7. Two-dog model allows the trainer to control two dogs from one transmitter.
8. Power saving design with automatic standby and memory function.
9. No external antenna on the collar receiver.
10. Small receiver/collar is ideal for small and medium size dogs.

Key Definitions

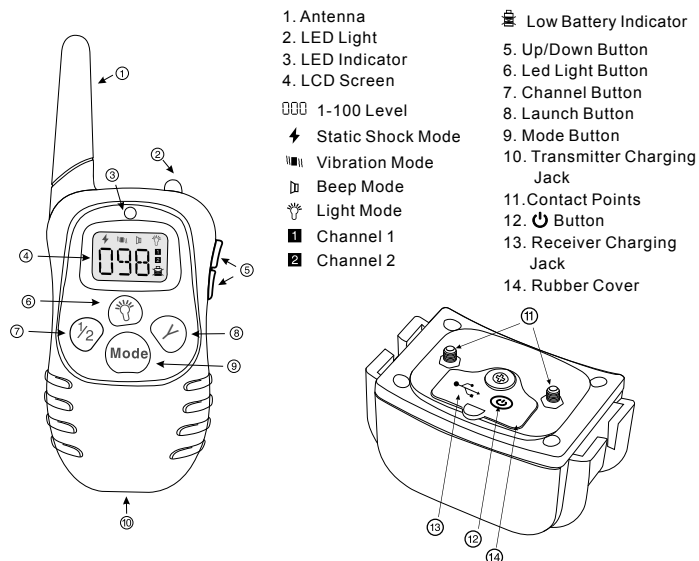

- 1. Antenna:** Transmits the signal from the Transmitter to the Receiver Collar.
- 2. Led light:** This light will be on when pressing the LED light button.
- 3. LED Indicator:** This light will flash when the “Y” button is pressed. The light will be activate when charging as well.
- 4. LCD Screen:**
 - Static mode:** With this mode selected, pressing the “Y” button will cause the receiver to emit shock.
 - Vibration mode:** With this mode selected, pressing the “Y” button will cause the receiver to vibrate.
 - Beep Mode:** With this mode selected, pressing the “Y” button will cause the receiver to emit a beep sound.
 - Light Mode:** With this mode selected, pressing the “Y” button will cause the LED light on the receiver to flash red once every second. Its primary purpose is to help locate your pet.

Channel 1: Indicates the selection of the first collar receiver.

Channel 2: Indicates the selection of the second collar receiver.

- 5. Up/down buttons:** Selects intensity level for Vibration and Static Shock.
- 6. Led light button:** When pressing the LED light button, the LED light on the transmitter will be on.
- 7. Channel button:** Pressing this button will swap between the first and second collar receiver.
- 8. Launch button:** Sends the signal from transmitter to receiver, resulting in stimulation, beep or light, depending on your mode selection.
- 9. Mode button:** Press this button to switch between modes. There are 4 modes: Static, Vibration, Beep and light mode.
- 10. Transmitter Charging Jack:** Insert charging connector into charging hole to charge the Transmitter.
- 11. Contact Points:** Helps deliver safe static correction.
- 12. Power button:** 1) Turn ON/OFF the receiver collar.
2) Pair the transmitter and receiver.
- 13. Receiver Charging Jack:** Insert charging connector into charging jack to charge the receiver.
- 14. Rubber Cover:** Seals charging jack to keep dust and water from entering. If not sealed, then the item will not be waterproof.

HOW TO USE

Note: Please charge before using the product! Please ensure you're putting the correct side of the cable into the USB charger port as the connector is not the same size on both ends.



1. Charge the remote transmitter:

- 1) Connect the charger connector to the charging jack.
- 2) Plug the charger into a standard outlet.
- 3) The red light on the transmitter will light up.
- 4) Charge the transmitter for 2 hours.
- 5) After charging is complete, the red light will turn off automatically.

2. Charge the collar receiver:

- 1) Connect the charger connector to the charging jack.
- 2) Plug the charger into a standard outlet.
- 3) The red light will appear on the receiver.
- 4) Charge the receiver for 2 hours.
- 5) After charging is complete, the red light will turn off automatically.

3. Pairing the Remote Transmitter and Receiver Collar:

- 1) Power on the Collar Receiver by pressing the PAIR button on the Collar Receiver. A beep will sound, and the indicating light will turn on.
- 2) Press and hold the PAIR button for 3 seconds until beep sounds, the indicating light will begin to flash quickly.
- 3) Press the Y button on the Remote Transmitter once the Receiver Collar beeps. When the Remote Transmitter and Collar Receiver are paired successfully, the Collar Receiver will beep again, and the indicating light will turn off.
- 4) If needing to pair a second Collar Receiver, follow the same steps but first press 1/2 button to different channel.

Note: Pairing has to be finished within 10 seconds after the 1st beep from the Receiver Collar. Meaning, you have to press the Y button within 10 seconds of the 1st beep for pairing to be completed.

4. Test static shock function:

Static Shock Stimulation Tester

In your package that you received, you will find a clear almost translucent plastic piece that has a light bulb/fuse in the middle of it. This is your Static Shock Stimulation tester. This component DOES NOT attach to the Collar Receiver by any means and is only for testing the static shock mode. To test static shock function, follow these steps:

- 1) Place the test light to the metal screws (ensure contact points are not attached when attempting to test the shock function).
- 2) Select Static Mode by pressing the "Mode" button.
- 3) Select static stimulation level by pressing UP/DOWN button and choose between 1-100 stimulation levels.
- 4) Press "Y" button, and the LED will flash on.

Important: Please see diagram below on how to attach the test light:



Important Notice: If wishing to test the static function on yourself, remember to place your finger or hand against both contact points. Otherwise, the connection won't be completed and no stimulation will be felt.

Test Vibration Function

Press Mode button on the Remote Transmitter, switch to Vibrate mode, confirm using the LCD display that the stimulation level is not at 0, you can press UP/ DOWN button on the right side to adjust.

Press Y button, Remote Collar will vibrate, that means Vibration Function works.



Test Beep Function

Press Mode button of Remote Transmitter, switch to Beep Mode.

Press Y button, Receiver Collar will beep, that means Beep Mode works.

Important: If the transmitter is in sleep mode (the LCD display is turned off) you must press the “Y” button once to wake up the unit, then press the “Y” button again to send the signal from the remote to the collar receiver. This applies to all functions.



Test LED light Function

Press LED light Button, LED light will turn on, means LED light button works.



Note:

I: If LCD of Remote Transmitter does not display, there is probably two reasons:

1. Light Standby: In order to save power, the Remote Transmitter will go into Standby Mode if there is no operation after 20 seconds, press any button except LED Light Button to activate Remoter Transmitter, LCD will display.
2. Deep Sleep: In order to save power, the Remote Transmitter will go into Deep Sleep Mode if there is no operation after 1 minutes, press the Mode button to activate the Remote Transmitter, LCD will display.

II: The receiver collar will go into deep sleep if no operation for 4 minutes. And any movement by the dog will activate the receiver.

If the Receiver Collar has no response when you press the Y button, and the Indication light of the Receiver Collar is not on either, you can shake Receiver Collar or force the dog to move, and the indication light of the Receiver Collar will show green, which means the Receiver Collar is active and will work.

III: When testing, choose any mode except LED light. When you are under Vibration or Static Shock mode, Intensity Level cannot be at a stimulation level of 0, press UP/DOWN to adjust.

Fit the Receiver Collar with your dogs:


Attaching the Contact Points

In your package that you received, you will find 3 sets of contact points.

These contact points are screwed onto the receiver so that the points can effectively contact the dogs skin without hair/fur interfering with the connection.

Important: The proper fit and placement of your collar is important for effective training. The Contact Points must have direct contact with your pet's skin on the underside of the dog's neck.

To assure a proper fit, please follow these steps:

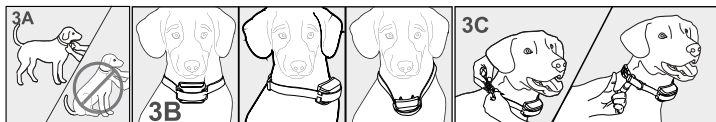

1. Have your pet standing comfortably (3A).
2. Centre the Contact Points underneath your pet's neck, touching the skin (3B).
If your pet has a long or thick coat, please use longer Contact Points, we enclosed 3 sets Contact Points, short ones and longer ones.

CAUTION: There are 100 levels for Vibration and Stimulation. The strong Stimulation can penetrate the hair of the pet and fabric within 6mm thick. **Do not shave the pet's neck as this may increase the risk of skin irritation.**

3. The Collar should fit snugly, yet loose enough to allow one finger to fit between the strap and your pet's neck(3C).
4. Allow your pet to wear the collar for several minutes then recheck the fit. Check the fit again as your pet becomes more comfortable with the Collar. If your pet's neck is less than 12"around, you will need to thread the part of the collar through the buckle. It will be a tight fit.

CAUTION: Risk of skin damage.

- For comfort, safety and effectiveness of this product. Please ensure that you check the fit of your pet's collar frequently. If any skin irritation is observed, discontinue the use of the collar for a few days. If the condition persists beyond 48 hours, see your veterinarian.
- Do not attach a leash to the Collar. This can result in pulling the Contact Points too tightly against your pet's neck. You may put a separate nonmetallic collar on your dog's neck and attach a leash.

- The Receiver Collar is not designed to be worn constantly. We recommend the Collar not be worn for more than 12 hours out of every 24-hour period.
- Most pets feel uncomfortable at first wearing the collar. Don't use any functions until the pet has gotten used to the collar.
- We suggest you give the dog Vibration before starting the Static Shock. After a time of training, the dog will learn that Static Shock Stimulation will come after Vibration. In this way, the vibration alone can effectively curb the improper deeds of the pet. The Stimulation only acts as a menace that might be unnecessary most of the time.

5. Regular Maintenance

- Check Contact Points for tightness weekly.
- Clean Contact Points with alcohol weekly.
Note: remove the battery and discharge Regular the Bark Automatic Control Collar before touching the Contact Points.
- Check your dog's neck for irritation and wash neck weekly.

Frequently Asked Questions

How old does my pet have to be before using Pettrainer Rechargeable and Waterproof LCD Remote Pet Training System?

Your pet should be able to recognize basic obedience commands such as "Sit" or "Stay." Pettrainer Rechargeable and Waterproof LCD Remote Pet Training System may be too large for pets under 8 pounds.

Once my pet is trained and has been obeying my commands, will my pet have to continue to wear the Receiver Collar?

Probably not. You may need to reinforce training with the Receive Collar from time to time.

Can I use Pettrainer Rechargeable and Waterproof LCD Remote Pet Training System with more than one pet?

Yes, there is 2 series with our Pettrainer Rechargeable and Waterproof LCD Remote Pet Training System, one kind is 1V1 (1 Transmitter to 1 Receive Collar) TT-PT05; the other one kind is 1V2 (1 Transmitter to 2 Receive Collar) TT-PT06

Will I get exactly 328 yards of range with the Remote Trainer?

The effective range of the Remote Trainer means the straight-line distance between Remote Transmitter and Receiver Collar without obstacles in between. Range may vary according to terrain, weather, vegetation, battery capability as well as transmission from other radio devices.

How long can I continuously deliver vibration or Static Shock to my pet?

The maximum amount of time you can press the Vibration or Static Shock to your pet continuously is 10 seconds. After this, the Remote Transmitter will time-out, and the Vibration or Static Shock must be released and pressed again.

Is the Receiver Collar waterproof?

Yes, your pet can swim in the water.

What do I do if my pet's neck becomes red and irritated?

Discontinue use of the Pettrainer Rechargeable and Waterproof LCD Remote Pet Training System for a few days. If the condition persists beyond 48 hours, see your veterinarian. Once the skin returns to normal, monitor your pet's skin condition closely.

Can I attach a leash to the Receiver Collar?

NO. This can result in pulling the Contact Points too tightly against your pet's neck. Use a separate collar placed above the Receiver Collar.

How will I know when to charge the batteries?

For Remote Transmitter: the symbol will show up on the right side of LCD screen. For Receiver Collar: You will hear a beep for 20 seconds, indicating the device needs to be charged.

How long is your lithium battery lifetime?

Our Lithium battery can charge 400 times for remote Control and Receiver Collar.

How long can I leave Receiver Collar on my dog?

The Collar is not designed to be worn constantly. We recommend the Collar not be worn for more than 12 hour out of every 24-hour period.

How long should my training sessions be for my pet?

Training sessions should be kept positive and short, it is better for about 10-15 minutes long each session.

What kind of dogs are your Pettrainer Rechargeable and Waterproof LCD Remote Pet Training System suitable for?

The collar is adjustable from length 5.9"(15cm) to 19.6"(50cm), if your pet's neck is smaller than 5.9", you have to rethread it, if your pet's neck is larger than 22", please don't buy it: and this Collar is not suitable for the dogs less than 8 pounds either.

Troubleshooting

My pet does not respond after correct installation Pettrainer Rechargeable and Waterproof Training Collar.

- You need to charge the Remote Transmitter and Receiver Collar for 2 hours individually first.
- You need to turn on the Remote Transmitter by holding the mode button for 5 seconds.
- Check the levels of vibration or static shock.
- Make sure the Receiver has enough power to operate.
- Restart the Receiver collar by pressing the on/off button.
- Test 4 functions (Beep, Light, Vibration and Shock) first before using. See part "Test" of Operation Guide.
- Intensity level has to be more than "0" when pairing. Test launch for vibration and Static Shock Function.
- The Receiver Collar will go into deep sleep if no operation for 5 minutes and any dog movement will activate the device.
- Make sure the Contact Points are placed snugly against your pet's skin.
- Trim your pet's fur where the Contact Points touch the neck or switch to the longer Contact Points.
- If none of the above works, you can try repairing between the Remote Transmitter and Receiver Collar. (See part "Pairing" of Operation Guide)

Remote Transmitter does not work.

- You need to charge the Remote Transmitter for 2 hours when you get product for the first time.
- Check if the Remote Transmitter is on low battery status, the symbol will show up on the right side of the LCD screen.
- You need to hold the Mode button on the Remote Transmitter for 5 seconds to power it the device on.
- Remote Transmitter automatically goes into standby mode if no action is detected within 20 seconds, at this time there will be no LCD display. Press any button to re-activate the Remote Transmitter.
- Remote Transmitter will automatically goes into deep sleep status if no action is detected within 2 minutes. At this time, there will be no LCD display. You have to press "Mode" button for 5 seconds until the LCD display reappears.

My Receiver Collar works great for some time, but it does not work anymore after I charged the device.

- First, check if charging is successful, when you are charging, red LED light will be on, after fully charged, the red led light will turn off automatically.
- You have to turn on Receiver Collar again after you're finished charging.

We turned on the receiver collar and it starts to beep for 20 seconds.

- Receiver Collar will beep for 20 seconds in low battery status unless it gets charged. Charge it for 2 hours and the other functions will work after charging is finished.
- Our Receiver Collar is designed to not be knocked down, please don't knock down the device, to avoid breaking structure and circuits.

I want to test Receiver Collar myself, but it does not work.

- If you test Receiver Collar by your hand or leg, please touch the 2 electrodes at the same time, only touching one electrode will not work.

FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Common size of different dogs

Size	Neck (cm)	Chest Measurement (cm)	Back Length (cm)	Type
Mini	20-22	25-30	19	Chihuahua, Yorkshire Temier
Small	20-24	29-36	23	Chihuahua, Yorkshire Temier, Poodle, Pomeranian
Medium	23-28	35-42	28	Maltese Dog, Shih Tzu
Large	27-31	41-47	31	Miniature Schnauzer, Pekingese
Large	30-34	46-53	35	Schnauzer, English Cocker Spaniel
Large	33-37	52-59	40	Beagle
Huge	43-48	76-84	60	Husky
	47-52	88-97	65	Labrador Retriever
	52-62	92-100	70	Golden Retriever, Old English Sheepdog

LIMITED ONE-YEAR WARRANTY

Petrainer warrants this product to be free of defects in parts, materials and workmanship for a period of one year, from date of purchase.

Should any repairs or servicing under this warranty be required, contact Customer Service by phone or email for instructions on how to pack and ship the product to Petrainer.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Petrainer CUSTOMER SERVICE

Telephone: 1-866-877-7949 (US&CA only)
Email: service@ipets-mall.com
Hours: Weekdays 8:00 AM- 6:00 PM EST

- (5) You will have more success by teaching the dog a command first before trying to reinforce to command with the remote trainer.
- (6) For basic obedience training, VIBRATION and AUDIO modes are more useful.
- (7) Issue an obedience command at a time, which will focus your dog's attention and reduce confusion. Do not use the remote collar to correct commands that have not already been covered.
- (8) During training, look for all the positive changes in your dog's behavior and remember to reinforce them promptly with ample praise and reward.
- (9) Avoid over-correcting your dog. Use as few remote corrections as possible during the training process.
- (10) When your dog has become apparently perplexed, shift the focus of the training session by drawing his/her attention to a command they are familiar with, e.g. sit. Give your dog praise and encouragement gaitore on successful completion of the command. Repeat this several times before returning to training with remote corrections
- (11) If you know a particular misbehavior your dog does, then reinvent this situation during a training session. You will have far more success if you deal with one misbehavior at a time in a controlled situation.
- (12) Be consistent: give your dog a tone, vibration or static-timulation correction for each misbehavior. When reinforcing a command with a correction, it is critical that you do so without emotion then immediately praise and reward your dog for marking the right decision
- (13) When your dog seems to react in a timid and frightened fashion to either the tone, vibration or static-stimulation, particularly in early training sessions, do not be flabbergasted. Shift the focus of the training session by drawing his/her attention to a command they are familiar with. E.g. sit and give your dog abundant praise and encouragement on successful completion of the command.
- (14) Do not use Petrainer Remote Pet Training Collar to correct or eliminate form of aggression or biting behavior. When your dog is showing signs of aggressive behavior then contact a professional dog trainer in your vicinity
- (15) Please be reminded that you should keep training sessions short and end every session on a high note. Stop training and play with your dog as soon as he/she has accomplished a new level of proficiency.
- If needing more training tips, please visit us at www.ipets-mall.com or www.facebook.com/itronicsmall for plenty of resources.

Digging

It is important to first understand why your pet is digging. Many dogs, such as terriers, were bred to flush out prey, and digging is very innate to them. Other dogs may no longer have the desire to dig if he is provided with the following: A cool, shaded area in which to lie down, and plenty of water. An alternate activity, such as a favorite toy. Plenty of play, exercise, and attention. A yard free from rodents or prey that he may be trying to flush out.

1. Place the Receiver Collar on your pet and wait at least 10 minutes before placing him in the yard. No other people or pets should be in the yard, as you do not want your pet to associate the stimulation with anything other than his digging. Your pet must be securely fenced in or contained during training.

2. From a window or area where your pet cannot see you, wait until your pet begins to dig.

3. While your pet digs, press the Stimulation Button and release it when he stops digging. Only press the button while your pet is in the act of digging, and do not say anything to him.

4. If your pet ignores the stimulation, increase the Intensity Level.

5. Continue to watch your pet, as he may choose another area to dig.

6. Do not allow your pet in the yard unsupervised until he has completely stopped digging.

Chasing

Chasing is an instinctive behavior stimulated by moving objects. Some dogs have a particularly strong desire to chase that can put them in harm's way and leave you helpless. Never allow your dog off the leash or out of a contained area until he has learned the "Come" command, regardless of the distraction. Be consistent and correct your dog every time he chases something. It is vitally important that you and your dog remain safe while learning during on-leash training. Your dog should be on a strong leash, long enough for him to attempt to chase an object, but short enough for him not to reach a road or other unsafe area. You must also be physically strong enough to restrain your dog when he tries to chase.

1. If your dog has not learned the "Come" command, keep a leash on him so you can physically stop him before he reaches the object he is chasing.

2. Set up a scenario where your dog is enticed to chase an object. Common items could be cars, motorcycles, bicycles, etc. (do not use toys).

-3-

Trash Raiding

The easiest way to prevent trash raiding is to remove garbage and tempting food from your pet's environment. You can use the Remote Trainer to teach your pet to stay away from these items; however, you must be prepared to correct your pet every time he approaches them.

1. Pick a temptation for your pet and position yourself where he cannot see you.

2. While your pet's mouth is touching the temptation, press and hold the Stimulation Button. Immediately release the button when your pet leaves the temptation.

3. Do not say anything, as you want your pet to associate the stimulation with his behavior, not you.

4. If your pet does not respond to the stimulation, increase the Intensity Level and repeat the process.

5. Repeat this process in several different locations with different temptations.

General Training Tips

The following are tips on how to get the best out of your Petainer Remote Pet Training Collar:

(1) Make the training sessions short and positive (between 10-15 minutes long for each time), which will enable your dog to keep its attention focused on you.

(2) Train one dog at a time.

(3) During initial training sessions, keep your dog in a familiar outdoor environment e.g. an enclosed area of the garden and away from other dogs/animals and people. Training in new locations may cause your dog to become distracted causing you to reinforce your commands with the remote collar-receiver more often collar-receiver more than accordingly.

(4) Use a long leash fastened to a non-metallic collar to help his/her learning. Ensure the additional collar and leash does not interfere with the skin contact of the metal probes on the collar-receiver. Do not use the remote training collar without a long leash until your dog is fully trained.

-4-

Perfecting Basic Obedience

Note: When we refer to stimulation button this will change depending on your model, for models PET998DR, PET998DB, this will be your "Y" button. For any other models, there should be a stimulation button for each type of stimulation (static shock, vibration and beep).

The "Sit" Command

1. Put a separate, non metallic collar on your pet's neck above the Receiver collar and attach at least a 10-foot leash.

Note: Be sure the extra collar does not put pressure on the Contact Points.

2. Hold the leash and the Remote Transmitter in one hand, keep your other hand free to guide your pet into a "Sit" position.

3. Press and hold your stimulation button, be it shock, vibration or beep.

4. Immediately give the "Sit" command while holding down your desired stimulation button.

5. Release the stimulation as soon as your dog sits and then give him praise.

6. Release your dog from the "Sit" command and play.

7. Repeat Steps 2 through 6.

The "Come" Command

1. Put a separate, non-metallic collar on your pet's neck ABOVE the Receiver Collar, and attach a 10-foot leash. **Note:** Be sure the extra collar does not put pressure on the Contact Points.

2. Hold your leash in one hand and the Remote Transmitter in the other.

3. Wait for your pet to walk away from you. Once he's far enough away, press and hold the Stimulation Button (shock, vibration or beep) on your Remote Transmitter.

4. Immediately give the command "Come" while continuing to hold your Stimulation Button.

5. Using the leash, gently guide your pet toward you until he begins to come in your direction.

6. Immediately release the Stimulation Button as soon as your pet steps towards you, and praise him enthusiastically.

7. Quickly move backwards as your pet begins to come back to you, praising him the entire time.

8. Praise your pet when he returns to you.

9. Repeat Steps 3 through 8.

-1-

The "Stay" Command

10. Once your pet responds readily to the "Come" command several times, back away from him without giving a command. When your pet turns toward you, give the command "Come" (WITHOUT STIMULATION) and praise him while you continue to back up. Praise your pet when he returns to you.
11. Use your leash to prevent your pet from running past you. If your pet manages to run past you, repeat Steps 3 through 8.

Eliminating Unwanted Behavior

Jumping Up

Pets typically jump up to get attention. If you do not want your pet to jump on you, then friends or members of the family should not encourage this behavior. That means every time your pet jumps on someone, he should be reprimanded or redirected to an alternate and acceptable behavior, for which he can receive praise.

Note: It is best if your pet first understands the "Sit" command.

1. As soon as your pet lifts his paws off the ground to jump on you, press the Stimulation Button and give the command "Sit."

2. Release the Stimulation Button immediately once your pet is sitting, and verbally praise him.

3. If your pet ignores the stimulation, increase the Intensity Level until he/she responds.

4. Practice this exercise in several different areas and use different people for distractions.

-2-