
Baby 6T&1M



ORIGINALITY DESIGN SMART - AND BEAUTIFUL

QUICK GUIDE



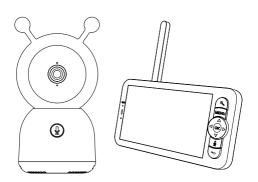


What's in the box

Please consult this checklist for all parts.



^{*} The number of camera depends on actual products.

Description

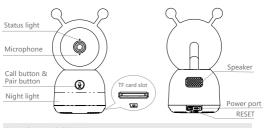

Power input DC 5V/1A

Microphone Capture sound for your video

TF card slot Support local TF Card storage (Max.128G)

Status light • Blinking red light: wait for network connection (slow)

Solid blue light on: camera is working correctly

connecting the network (fast)


Sond Dide fight on camera is working correct

Solid red light on: camera is malfunctional

Call/Pairing Press to make a call; long press to pair

Press and hold for 5 seconds with pin to reset the camera (if you have modified settings, they will return to factory defaults)



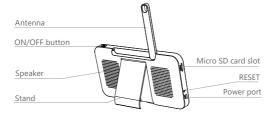

Power input DC 5V/1A

Status light of charging Orange light: Charging

Green light: Fully charged

Status light of using

· Yellow light: The monitor is on

· No light: The monitor is off Capture sound for your video

Microphone Antenna

Adjust the angle to get better signals

ON/OFF button Long press 5 seconds to turn on and turn off the monitor

Zoom in/out

Zoom the image in 1X, 2X or 4X

Menu

On homepage, press to enter the menu interface;

On homepage, long press to enter the setting interface Control the rotation directions: select the menu items

Direction OK

Confirm or awake the screen

Call

Make a call after pressing the button

Micro SD card slot

Support local Micro SD Card storage (Max.128G)

RESET

Press with pin to reset the monitor

Back


Press to back up;

On homepage, long press to stop playing music

Installatio


Method 1:

Install the camera on a flat surface.

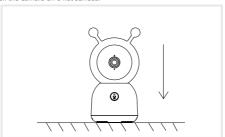

Method 2:

Use the included mounting bracket to fix the camera to a clean surface.

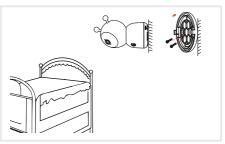

Specification

Product name	Baby 6T
Lens&FOV(H/V/D)	3.6mm@F2.0, 85°/50°/100°
Working temp	0°C~40°C
Local storage	TF card (up to 256GB)
Resolution	2304x1296
Size	φ80 x 153mm
Power input	DC 5V, 1A
Consumption	Up to 4.5W
Supported phone OS	iOS 9 / Android 5.0 or later
2.4GHz Wi-Fi	2412-2462MHz (Max. power < 30dBm)
Wi-Fi HaLow	905-925MHz (Max. power < 30dBm)
Product name	Baby 1M
Battery capacity	3000mAh
Working temp	0 °C to 40 °C
Local storage	TF card (up to 128GB)
Resolution	720P (1280 x 720)
Size	79 x 87 x 129 mm
Power input	DC 5V, 1A
Wi-Fi HaLow	905-925MHz (Max. power < 30dBm)

Connection

Connect the camera to the App

The camera can be connected both to the monitor and the App. Generally, it is connected to the monitor by default.

Follow the steps below to connect the camera to the App:

- Make sure the Wi-Fi network is a 2.4 GHz network, as the camera doesn't support 5 GHz Wi-Fi.
- Download the corresponding App on your phone. Register a new account to log in or use an exsiting account to log in directly.
- 3. Reset the camera until the status light is red in fast blinking.

(You have to connect the camera to the App within 2 minutes; otherwise, you have to reset the camera again.)

- (If you are using the monitor, the audio and video will be temporarily disconnected, and will automatically resume after the camera is successfully configured with the network. The maximum time is 2 minutes.)
- Follow the step instructions on your smart phone to add the monitor, and scan the QR code with your camera.

App Download

The App is available for both iOS and Android OS. Scan the QR code or search "CloudEdge" at App Store and Google Play. Download and install the App at your phone. You can select the App according to needs.











Set up router

The router supports the 2.4GHz Wi-Fi (doesn't support the 5GHz), and is connected to the Wi-Fi network. Please set the parameters of the router before connecting the Wi-Fi network, and record the SSID and password of your Wi-Fi.



Pairing of camera and monitor

Power on the camera and the monitor, and they will automatically connect. If the connection fails, please follow the steps below to pair. The pairing is distance limited, so make the distance between the camera and the monitor is no more than 200m

- Unbind the monitor and camera.
 - 1. Press Menu button on the monitor screen, and select : > Camera.
 - 2. Select Camera 1 or Camera 2 which you need to unbind.
 - 3. Long press OK button to release the binding.
- · Pair the monitor and camera:
 - Press Menu button on the monitor screen, and select is > Camera.
 - Select Camera 1 or Camera 2 which you need to pair. Long press the camera pairing button until you hear the prompt tone.
 - 4. Press OK button on the monitor screen to start pairing.
 - 5. (Optional) For camera 2, please repeat step 2 ~ step 4.





Usage

Note:

- * For different products, you may add 1 or 2 cameras. If you have added 2
- cameras, the monitor screen will display 2 live views at the same time.
- * If you want to set parameters or enable functions of one of the cameras, you need to select the camera first.

Camera selection method (2 cameras)

If you have added two cameras, select one camera you need and press **OK** button on monitor to enter full screen viewing mode. And then you can press [®] button again to zoom in and zoom out. ([®] button does not work when the screen is not in full screen.)



Rotate the camera

You can adjust the monitoring angle for a better vision.

The direction buttons on the monitor screen are available when the camera is powered on. Press direction buttons to rotate the camera horizontally and vertically, for a better vision.

資金にかき

Usage

Photo & video

Take a photo:

You can take a photo when you want to capture an interesting scene of baby. Press **Menu** button on the monitor screen, select and press **OK** to take a photo.

· Record a video:

You can record a video when you want to capture a meaningful time of baby. Press Menu button on the monitor screen, select = and press OK to record.

- · View the taken photos and recorded videos:
 - Press Menu button on the monitor screen, select and press OK to enter the interface.
 - Select the camera and date, select the photo or video you want to view, and press OK to enter preview mode.
 - * For a video, press OK to play or pause in the preview mode.
 - * Press backup button to guit preview or return to main menu.



Play music

You can play music to sooth your baby when baby is crying or sleeping. There are various soft music to select. Press Menu on monitor, select press OK to enter. You can select different music, change music cycle mode, S adjust the music volume.



Feeding reminder

Remind you to feed your baby, when you are too busy, or when you want to give your baby a regular diet.

- Press Menu button on the monitor screen, and select Feeding Reminder.
- Select on or off to open or close feeding reminders. You can set up to 10 feeding times one day. And when the set time is up, a feeding alarm will appear on the monitor screen.
- Press UP and DOWN direction buttons to select between 10 time options, and press OK to start the time setting.



Safety Protection

Wi-Fi network channel

If you turn off the Wi-Fi network channel, the App will not be able to view the camera. Visited records

You can also view the visited records as all visits through the App will be recorded.

Night light

You can turn on night light if needed, and you can set lighting mode and light color.

Press Menu button on the monitor screen, and select \$\displays \bigcup \frac{1}{2} \displays \left[\frac{1}{2} \displays \left] \displays \left[\frac{1}{2} \displays \dinploys \dinploys \displays \displays \dinploys \displays \dinploys \displays \display



Usage

Temperature and humidity detection

You can real-time monitor the temperature and humidity of your baby room. When the temperature and humidity are out of range, you can get the alarms immediately, and then take measures.

- Press Menu button on the monitor screen, and select > Temperature and humidity.
- Press UP and DOWN direction buttons to select options between temperature range, humidity range and out of range reminder, and press OK to start setting.
- Press LEFT and RIGHT direction buttons to change options, and press UP and DOWN direction buttons to change values and units.
- In Out of range reminder option, select to turn on or off the alarm when the temperature and humidity are out of range.



Smart care

You can turn on functions of motion detection, noise detection and cry detection, so that you can know the baby status immediately, no matter you are sleeping, working, cooking and so on.

- 1. Press Menu button on the monitor screen, and select is Smart Care.
- Press UP and DOWN direction buttons to select options between motion detection, noise detection, cry detection and alarm volume, and press OK to save.
- 3. When start to set up one detection mode, press LEFT and RIGHT direction buttons to change options, and press UP and DOWN direction buttons to adjust sensitivity. * You can select different sensitivity according to needs. Low is low sensitivity, and high is high sensitivity.



General setting

- Set up brightness:
 - 1. Press **Menu** button on the monitor screen, select in and press **OK** to enter the interface
 - 2. Press UP and DOWN direction buttons to adjust brightness.
- · Set up time:
 - Press Menu button on the monitor screen, and select ** Time setting.
 - 2. Press direction buttons to change date, time and time displaying mode.
- Set up language:
 - Press Menu button on the monitor screen, and select is Language.
 - 2. Select the language you need.
- · Set up sleep mode:

You can set up sleep mode to increase standby time.

Press Menu button on the monitor screen, and select -> Sleep mode.

- 2. The default mode is Audio off, which means that the audio from the camera can not be heard after the display is off and the standby time is long. In Audio on mode, the audio from camera can still be heard even after the screen is turned off, and you can choose the time(1,5,10,30 or 60min), but the standby time is shorter. In Always on mode, the monitor remains on unless the power button is pressed, short standby time.
- · Turn on and off status indicator:

If you turn on the status indicator, you can get the working status of the camera. You can also turn off the status indicator, if you think it will affect your baby's sleep.

Press Menu button on the monitor screen, and select * (Or Press Menu button, select * Light > Status light)

Usage

SD card:

- Press Menu button on the monitor screen, and select is SD card management. Then you can view the total capacity and remaining capacity of your SD card.
- (Optional) You can format the SD card as you needed, but make sure that the important data is backed up.
- · Low battery alarm:

When the camera is low on battery, the low battery alarm will appear on the monitor screen. Please charge the monitor as soon as possible.

Upgrade:

You can upgrade your camera when the upgrade alarm appears. Or press Menu on the monitor and select > Device information to check whether there is an upgrade.

FAO-Camera

- How to disable the LED indicator/blue light with my camera?
 CloudEdge App >> Device (tap device to live video page) >> Settings >> Network Indicator. Disable it.
- How to turn off the camera real-time monitor, and stop recording?
 CloudEdge App >> Device (tap device to live video page) >> Settings >> Basic Function >> Privacy Protection >> Lens OFF.
- How to change the Wi-Fi or update the Wi-Fi password for the device?
 Please delete the camera on App, tap "Add" and follow the steps to use the new Wi-Fi network to add the camera again.
- How to share devices with friends and family?
 CloudEdge App >> Device (Tap device to live video page) >> Settings >> Device Share >> Add, follow the guide to share your device.
- · Failed to access the Live video, prompts offline?
- Please ensure the camera is in the power-on state: the camera network indicator will be on.
- 2. Check the Wi-Fi network is in good condition and restart the router.
- 3. Try to move the camera near the router, and check again.
- Delete the camera from CloudEdge App and add it again. Confirm the App and camera firmware are the latest versions.
- Why I can't get the notifications with my cell phone App when I connect the camera to the monitor?

Please confirm that the App has been running on the phone, and the relevant reminder function has been opened; Message notification and authority confirmation in the mobile phone system have been opened.

FAQ-Screen

Q: The monitor cannot be previewed properly?

A: Check whether the monitor has connected to the camera. If not, pair the camera and the monitor firstly.

Q: Cannot find the pairing button?

A: The pairing button is the call button of the camera. Long press the button for 3 seconds, and follow the step instructions of the monitor.

(To enter the pairing interface of the monitor, press Menu button on the monitor screen, and select \Longrightarrow > Camera Management.)

Q: What if the monitor screen is stuck and it doesn't work while pressing any buttons?

A: Press the reset button of your monitor with the pin, or long press the power button of your monitor to restart it.

Q: Why the camera or the monitor cannot identify the TF card? A: Confirm whether the TF card is normally available and the format is FAT32.

Q: Why the monitor can't view video after the camera is connected to the App?

A: The monitor has a 2 minute interruption time when the camera is reset, and it will automatically resume after 2 minutes. If it doesn't recover, try to pair the monitor and camera again.

Functions

Pan/Tilt

Rotate your camera by sliding on your smartphone, providing you with a good vision.

Video flip

Flip your video stream up or down for maximum flexibility.

Motion detection

The camera can detect movement, and then the camera will send you push notifications and app alerts.

Crying detection

The camera can detect the crying of your baby, and the camera will send you push notifications and app alerts.

Temperature & humidity detection

The camera can detect the temperature and humidity of the environment, and the camera will send you push notifications and app alerts.

Record

Support 24H continuous recording with high capacity SD storage or Cloud storage.

Day & Night

Never miss a moment, even in complete darkness, with powerful night-vision technology.



Daytime



Night

Legal Notice

Symbols:

Direct current (DC)



Don't throw batteries or out of order products with household waste (garbage). The dangerous substances that they are likely to include may harm health or the environment. Make your retailer take back these products or use the selective collection of garbage proposed by your city.



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- —Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provide with antenna installation instructions and consider removing the no-collocation statement.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution! Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Safety Information Power Adapter Safety:

- 1.The power plug is intended to serve as a disconnect device.Do not drop or cause an impact to the power adapter.
- 2.If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using it at once. Continued use may lead to electric shocks, short circuits, or fire.
- 3.Do not touch the device or the power adapter with wet hands. Doing so may lead to short circuits. malfunctions. or electric shocks.

Child's safety

- Comply with all precautions with regard to child's safety. Letting children play with the device or its accessories may be dangerous.
- The device and its accessories are not intended for use by children. Children should only use the device with adult supervision.

Operation safety

- Use the device under allowed humidity and temperature conditions.
- Do not aim the device at strong light sources (such as lamplight, and sunlight) when focusing it to avoid reducing the lifespan of the CMOS sensor, and causing overbrightness and flickering.
- Observe local laws and regulations, and respect the privacy and legal rights of others.

Industry Canada (ISED) Compliance Statement

This device complies with Industry Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage;
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptibled'en compromettre le fonctionnement.

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la section 2.5 de RSS 102 et la conformité à l'exposition de RSS-102 rf, utilisateurs peut obtenir l'information canadienne sur l'exposition et la conformité de rf.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed a nd operated with a minimum distance of 20 centimeters between the radiator and your body.

Cet émetteur ne doit pas être Co-placé ou ne fonctionnant en même temps qu'aucune autre antenne ou émetteur. Cet équipement devrait être ins tallé et actionné avec une distance minimum de 20 centimètres entre le radiateur et votre corps.

Battery Safety

- 1. Your device contains a rechargeable lithium-ion battery and should be replaced only by a qualified service provider. Do not disassemble, open, crush, bend, deform, puncture, shred or attempt toaccess the battery in your device
- 2.Do not modify or remanufacture the battery, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids, expose to fire, explosion or other hazard.
- 3.Do not use a battery if its case appears damaged, swollen, or compromised. Examples include, but are not limited to, leaking, odors, dents, corrosion, rust, cracks, swelling, melting, and scratches.
- 4..Do not put the battery in trash that is disposed of in landfills. When disposing of the battery, complywith local ordinances or regulations.

© 2024. All rights reserved. All trade names are registered trademarks of respective companies Apple, the Apple logo, iPhone are trademarks of Apple nc. registered in the U.S. and other countries. Google, the Google logo, Android are trademarks of Google Inc. App Store is a service mark of Apple Inc. Google Play is a service mark of Google Inc.

V1.0 202404



