



# **SAR Evaluation Report**

in accordance with the requirements of  
FCC Report and Order: ET Docket 93-62, and OET Bulletin 65 Supplement C

for

**Tri-Bands (GSM/DCS/PCS) Cellular Phone**

**MODEL: MX-5020**

**FCC ID: AWWMX5020**

**July 23 2003**

**REPORT NO: 03U2120-2**

*Prepared for*  
**Maxon Telecom Co., Ltd.**  
**Sewon Venture Town Bldg., 705-18**  
**Yeuksam-dong, Kangnam-gu**  
**Seoul 135-080, Korea**

*Prepared by*  
**COMPLIANCE CERTIFICATION SERVICES**  
**561F MONTEREY ROAD,**  
**MORGAN HILL, CA 95037, USA**  
**TEL: (408) 463-0885**



## **CERTIFICATE OF COMPLIANCE (SAR EVALUATION)**

**DATES OF TEST:** July 18, 21 & 23 2003

<b>APPLICANT:</b>	Maxon Telecom Co., Ltd Sewon Venture Town Bldg., 705-18 Yeuksam-dong, Kangnam-gu Seoul 135-080, Korea
<b>MODEL:</b>	MX-5020
<b>FCC ID:</b>	AWWMX5020
<b>DEVICE CATEGORY:</b>	PORTABLE DEVICES
<b>EXPOSURE CATEGORY:</b>	GENERAL POPULATION/UNCONTROLLED EXPOSURE

**Test Sample is a:** Production unit

**Modulation type:** GSM+GPRS

**Operating Mode:** Maximum continuous output

**Tx Frequency:** 1850.2 MHz to 1909.8 MHz

**Max. O/P Power:** GSM - 29.68 dBm  
(Conducted) GPRS - 29.67 dBm

**Max. SAR (1g):** GSM -  
**0.594 W/Kg (Right head - touched position)**  
**0.260 W/Kg (Body worn)**  
GPRS -  
**0.301 W/Kg (Body worn)**

**Application Type:** Certification

**FCC Rule Part(s):** § 24 (E)

Note: This device contains GSM900 and GSM1800 functions not operational in US territories. This report is only applicable for GSM1900 PCS band.

This wireless portable device has been shown to be capable of compliance for localized specific absorption rate (SAR) for uncontrolled environment/general population exposure limits specified in ANSI/IEEE Std. C95.1-1992 and had been tested in accordance with the measurement procedures specified in FCC OET 65 Supplement C (released on 6/29/2001 see Test Report).

I attest to the accuracy of data. All measurements reported herein were performed by me or were made under my supervision and are correct to the best of my knowledge and belief. I assume full responsibility for the completeness of these measurements and vouch for the qualifications of all persons taking them.



**Steve Cheng**

**EMC Engineering Manager**



## **TABLE OF CONTENTS**

<b>1. EUT DESCRIPTIONS .....</b>	<b>4</b>
<b>2. REQUIREMENTS FOR COMPLIANCE TESTING DEFINED BY THE FCC .....</b>	<b>5</b>
<b>3. DOSIMETRIC ASSESSMENT SETUP .....</b>	<b>5</b>
3.1. MEASUREMENT SYSTEM DIAGRAM .....	6
3.2. SYSTEM COMPONENTS .....	7
<b>4. EVALUATION PROCEDURES .....</b>	<b>9</b>
<b>5. MEASUREMENT UNCERTAINTY .....</b>	<b>11</b>
<b>6. EXPOSURE LIMIT.....</b>	<b>12</b>
<b>7. EUT ARRANGEMENT .....</b>	<b>13</b>
<b>8. MEASUREMENT RESULTS.....</b>	<b>14</b>
8.1. SYSTEM PERFORMANCE CHECK.....	14
8.2. TEST LIQUIDS CONFIRMATION .....	15
8.3. EUT TUNE-UP PROCEDURES .....	16
8.4. EUT SETUP PHOTOS.....	17
8.5. SAR MEASUREMENT RESULTS .....	18
<b>9. EUT PHOTOS .....</b>	<b>19</b>
<b>10. EQUIPMENT LIST &amp; CALIBRATION STATUS .....</b>	<b>20</b>
<b>11. REFERENCES.....</b>	<b>21</b>
<b>12. ATTACHMENTS .....</b>	<b>22</b>

**1. EUT DESCRIPTIONS**

<b>APPLICANT:</b>	Maxon Telecom Co., Ltd Sewon Venture Town Bldg., 705-18 Yeuksam-dong, Kangnam-gu Seoul 135-080, Korea
<b>MODEL:</b>	MX-5020
<b>FCC ID:</b>	AWWMX5020
<b>DEVICE CATEGORY:</b>	PORTABLE DEVICES
<b>EXPOSURE CATEGORY:</b>	GENERAL POPULATION/UNCONTROLLED EXPOSURE

**Test Sample is a:** Production unit

**Modulation type:** GSM+GPRS

**Operating Mode:** Maximum continuous output

**Tx Frequency:** 1850.2 MHz to 1909.8 MHz

**Max. O/P Power:** GSM - 29.68 dBm  
(Conducted) GPRS - 29.67 dBm

**Max. SAR (1g):** GSM -  
**0.594 W/Kg (Right head - touched position)**  
**0.260 W/Kg (Body worn)**  
GPRS -  
**0.301 W/Kg (Body worn)**

**Application Type:** Certification

**FCC Rule Part(s):** § 24 (E)

**Antenna Type:** Monopole, Measured 18.5 mm x 8.5 mm diameter

**Battery option:** Only one type/model with EUT



## 2. REQUIREMENTS FOR COMPLIANCE TESTING DEFINED BY THE FCC

The US Federal Communications Commission has released the report and order "Guidelines for Evaluating the Environmental Effects of RF Radiation", ET Docket No. 93-62 in August 1996. The order requires routine SAR evaluation prior to equipment authorization of portable transmitter devices, including portable telephones. For consumer products, the applicable limit is 1.6 mW/g for an uncontrolled environment and 8.0 mW/g for an occupational/controlled environment as recommended by the ANSI/IEEE standard C95.1-1992. According to the Supplement C of OET Bulletin 65 "Evaluating Compliance with FCC Guide-lines for Human Exposure to Radio frequency Electromagnetic Fields", released on Jun 29, 2001 by the FCC, the device should be evaluated at maximum output power (radiated from the antenna) under "worst-case" conditions for normal or intended use, incorporating normal antenna operating positions, device peak performance frequencies and positions for maximum RF energy coupling.


## 3. DOSIMETRIC ASSESSMENT SETUP

These measurements were performed with the automated near-field scanning system DASY3 from Schmid & Partner Engineering AG (SPEAG). The system is based on a high precision robot (working range greater than 0.9 m), which positions the probes with a positional repeatability of better than  $\pm 0.02$  mm. Special E- and H-field probes have been developed for measurements close to material discontinuity, the sensors of which are directly loaded with a Schottky diode and connected via highly resistive lines to the data acquisition unit. The SAR measurements were conducted with the dosimetric probe ET3DV6, SN: 1577 (manufactured by SPEAG), designed in the classical triangular configuration and optimized for dosimetric evaluation. The probe has been calibrated according to the procedure described in [7] with accuracy of better than  $\pm 10\%$ . The spherical isotropy was evaluated with the procedure described in [8] and found to be better than  $\pm 0.25$  dB. The phantom used was the SAM Twin Phantom as described in FCC supplement C, IEE P1528 and CENELEC EN50361.

The Tissue simulation liquid used for each test is in according with the FCC OET65 supplement C as listed below.

Ingredients (% by weight)	Frequency (MHz)									
	450		835		915		1900		2450	
Tissue Type	Head	Body	Head	Body	Head	Body	Head	Body	Head	Body
Water	38.56	51.16	41.45	52.4	41.05	56.0	54.9	40.4	62.7	73.2
Salt (NaCl)	3.95	1.49	1.45	1.4	1.35	0.76	0.18	0.5	0.5	0.04
Sugar	56.32	46.78	56.0	45.0	56.5	41.76	0.0	58.0	0.0	0.0
HEC	0.98	0.52	1.0	1.0	1.0	1.21	0.0	1.0	0.0	0.0
Bactericide	0.19	0.05	0.1	0.1	0.1	0.27	0.0	0.1	0.0	0.0
Triton X-100	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	36.8	0.0
DGBE	0.0	0.0	0.0	0.0	0.0	0.0	44.92	0.0	0.0	26.7
Dielectric Constant	43.42	58.0	42.54	56.1	42.0	56.8	39.9	54.0	39.8	52.5
Conductivity (S/m)	0.85	0.83	0.91	0.95	1.0	1.07	1.42	1.45	1.88	1.78

### 3.1. MEASUREMENT SYSTEM DIAGRAM

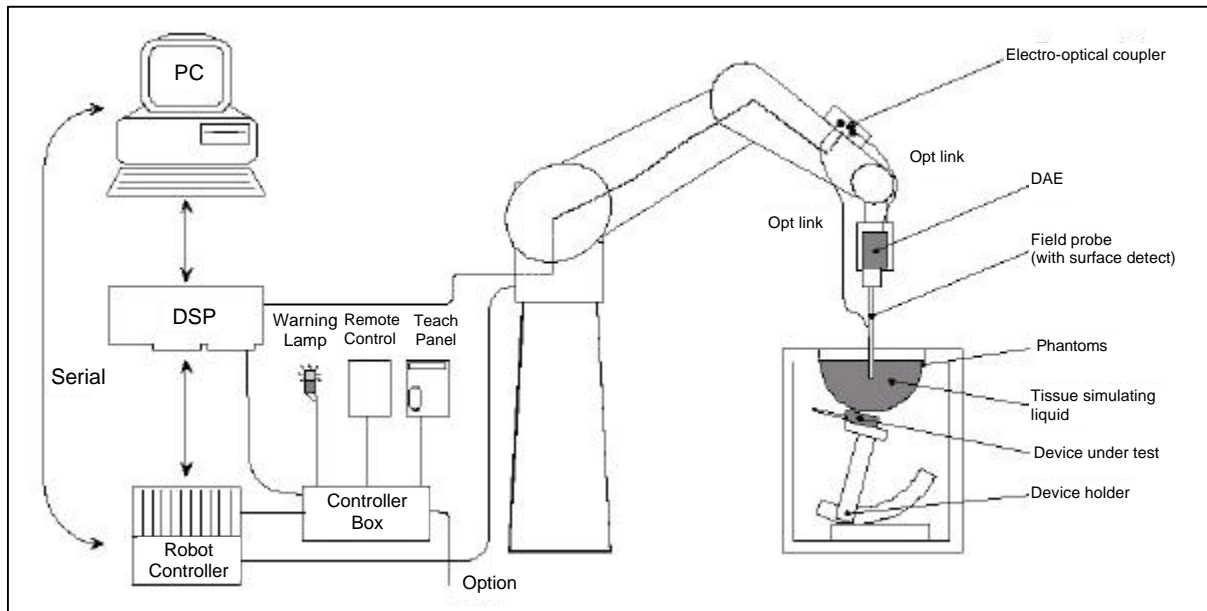

**The DASY4 system for performing compliance tests consist of the following items:**


1. A standard high precision 6-axis robot (Stäubli RX family) with controller and software.
2. An arm extension for accommodating the data acquisition electronics (DAE).
3. A dosimetric probe, i.e., an isotropic E-field probe optimized and calibrated for usage in tissue simulating liquid. The probe is equipped with an optical surface detector system.
4. A data acquisition electronic (DAE), which performs the signal amplification, signal multiplexing, AD-conversion, offset measurements, mechanical surface detection, collision detection, etc. The unit is battery powered with standard or rechargeable batteries. The signal is optically transmitted to the EOC.
5. A unit to operate the optical surface detector, which is connected to the EOC.
6. The Electro-optical coupler (EOC) performs the conversion from the optical into a digital electric signal of the DAE. The EOC is connected to the PC plug-in card.
7. The functions of the PC plug-in card based on a DSP is to perform the time critical task such as signal filtering, surveillance of the robot operation fast movement interrupts.
8. A computer operating Windows 95 or larger
9. DASY4 software
10. Remote control with teaches pendant and additional circuitry for robot safety such as warning lamps, etc.
11. The SAM phantom enabling testing left-hand and right-hand usage.
12. The device holder for handheld EUT.
13. Tissue simulating liquid mixed according to the given recipes (see Application Note).
14. System validation dipoles to validate the proper functioning of the system.

### 3.2. SYSTEM COMPONENTS

#### ET3DV6 Probe Specification

Construction Symmetrical design with triangular core  
Built-in optical fiber for surface detection System  
Built-in shielding against static charges  
Calibration In air from 10 MHz to 2.5 GHz  
In brain and muscle simulating tissue at  
Frequencies of 450 MHz, 900 MHz and  
1.8 GHz (accuracy  $\pm 8\%$ )  
Frequency 10 MHz to  $> 6$  GHz; Linearity:  $\pm 0.2$  dB  
(30 MHz to 3 GHz)  
Directivity  $\pm 0.2$  dB in brain tissue (rotation around probe axis)  
 $\pm 0.4$  dB in brain tissue (rotation normal probe axis)  
Dynamic 5 mW/g to  $> 100$  mW/g;  
Range Linearity:  $\pm 0.2$  dB  
Surface  $\pm 0.2$  mm repeatability in air and clear liquids  
Detection over diffuse reflecting surfaces.  
Dimensions Overall length: 330 mm  
Tip length: 16 mm  
Body diameter: 12 mm  
Tip diameter: 6.8 mm  
Distance from probe tip to dipole centers: 2.7 mm  
Application General dosimetric up to 3 GHz  
Compliance tests of mobile phones  
Fast automatic scanning in arbitrary phantoms

The SAR measurements were conducted with the dosimetric probe ET3DV6 designed in the classical triangular configuration and optimized for dosimetric evaluation. The probe is constructed using the thick film technique; with printed resistive lines on ceramic substrates. The probe is equipped with an optical multi-fiber line ending at the front of the probe tip. It is connected to the EOC box on the robot arm and provides an automatic detection of the phantom surface. Half of the fibers are connected to a pulsed infrared transmitter, the other half to a synchronized receiver. As the probe approaches the surface, the reflection from the surface produces a coupling from the transmitting to the receiving fibers. This reflection increases first during the approach, reaches maximum and then decreases. If the probe is flatly touching the surface, the coupling is zero. The distance of the coupling maximum to the surface is independent of the surface reflectivity and largely independent of the surface to probe angle. The DASY3 software reads the reflection during a software approach and looks for the maximum using a 2nd order fitting. The approach is stopped when reaching the maximum.

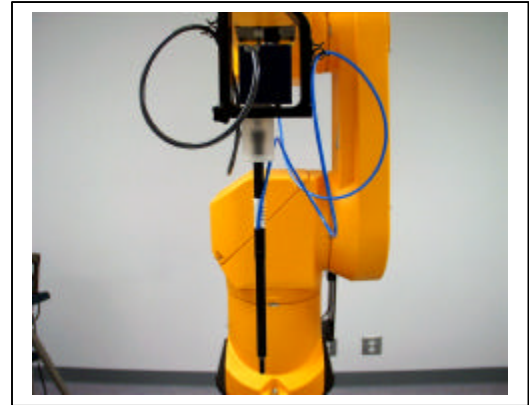

Photograph of the probe



Inside view of  
ET3DV6 E-field Probe



## E-Field Probe Calibration Process

Each probe is calibrated according to a dosimetric assessment procedure described in [6] with accuracy better than  $\pm 10\%$ . The spherical isotropy was evaluated with the procedure described in [7] and found to be better than  $\pm 0.25\text{dB}$ . The sensitivity parameters (NormX, NormY, NormZ), the diode compression parameter (DCP) and the conversion factor (ConvF) of the probe are tested.

The free space E-field from amplified probe outputs is determined in a test chamber. This is performed in a TEM cell for frequencies below 1 GHz, and in a waveguide above 1 GHz for free space. For the free space calibration, the probe is placed in the volumetric center of the cavity and at the proper orientation with the field. The probe is then rotated 360 degrees.

E-field temperature correlation calibration is performed in a flat phantom filled with the appropriate simulated brain tissue. The measured free space E-field in the medium correlates to temperature rise in dielectric medium. For temperature correlation calibration a RF transparent thermistor-based temperature probe is used in conjunction with the E-field probe.


## SAM Phantom

The SAM Phantom V4.0 is constructed of a fiberglass shell integrated in a wooden table. The shape of the shell is in compliance with the specification set in IEE P1528 and CENELEC EN50361. The phantom enables the dosimetric evaluation of left and right hand phone usage as well as body mounted usage at the flat phantom region. A cover prevents the evaporation of the liquid. Reference markings on the Phantom allows the complete setup of all predefined phantom positions and measurement grids by manually teaching three points in the robot.

Shell Thickness:  $2 \pm 0.2 \text{ mm}$

Filling Volume: Approx. 25 liters

Dimensions (H x L x W): 810 x 1000 x 500 mm

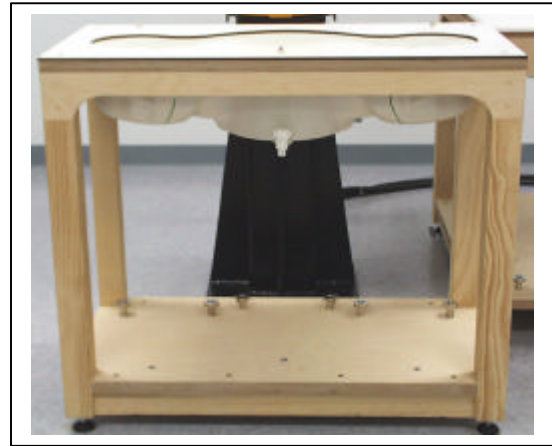


**SAM Phantom**

## Device Holder for Transmitters

In combination with the SAM Twin Phantom V4.0, the Mounting Device enables the rotation of the mounted transmitter in spherical coordinates whereby the rotation points is the ear opening. The devices can be easily, accurately, and repeatedly positioned according to the FCC and CENELEC specifications. The device holder can be locked at different phantom locations (left head, right head, flat phantom).

\* Note: A simulating human hand is not used due to the complex anatomical and geometrical structure of the hand that may produced infinite number of configurations [10]. To produce the worst-case condition (the hand absorbs antenna output power), the hand is omitted during the tests.

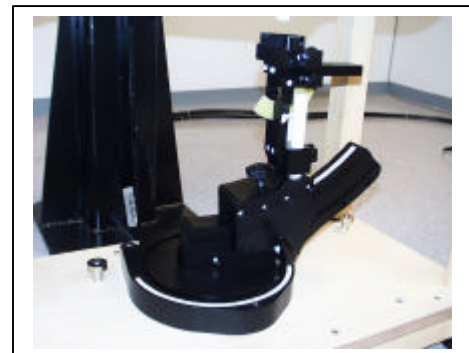

**Device Holder**



#### 4. EVALUATION PROCEDURES

##### DATA EVALUATION

The DASY4 post processing software (SEMCAD) automatically executes the following procedures to calculate the field units from the microvolt readings at the probe connector. The parameters used in the evaluation are stored in the configuration modules of the software:

Probe parameters:	- Sensitivity	$Norm_i, a_{i0}, a_{i1}, a_{i2}$
	- Conversion factor	$ConvF_i$
	- Diode compression point	$dcp_i$
Device parameters:	- Frequency	$f$
	- Crest factor	$cf$
Media parameters:	- Conductivity	$\sigma$
	- Density	$\rho$

These parameters must be set correctly in the software. They can be found in the component documents or be imported into the software from the configuration files issued for the DASY components. In the direct measuring mode of the multi-meter option, the parameters of the actual system setup are used. In the scan visualization and export modes, the parameters stored in the corresponding document files are used.

The first step of the evaluation is a linearization of the filtered input signal to account for the compression characteristics of the detector diode. The compensation depends on the input signal, the diode type and the DC-transmission factor from the diode to the evaluation electronics. If the exciting field is pulsed, the crest factor of the signal must be known to correctly compensate for peak power. The formula for each channel can be given as:

$$V_i = U_i + U_i^2 \cdot \frac{cf}{dcp_i}$$

with	$V_i$	= Compensated signal of channel i	(i = x, y, z)
	$U_i$	= Input signal of channel i	(i = x, y, z)
	$cf$	= Crest factor of exciting field	(DASY parameter)
	$dcp_i$	= Diode compression point	(DASY parameter)

From the compensated input signals the primary field data for each channel can be evaluated:

E-field probes: 
$$E_i = \sqrt{\frac{V_i}{Norm_i \cdot ConvF}}$$

H-field probes: 
$$H_i = \sqrt{V_i} \cdot \frac{a_{i10} + a_{i11}f + a_{i12}f^2}{f}$$

with	$V_i$	= Compensated signal of channel i	(i = x, y, z)
	$Norm_i$	= Sensor sensitivity of channel i	(i = x, y, z)
		$\mu V/(V/m)^2$ for E0field Probes	
	$ConvF$	= Sensitivity enhancement in solution	
	$a_{ij}$	= Sensor sensitivity factors for H-field probes	
	$f$	= Carrier frequency (GHz)	
	$E_i$	= Electric field strength of channel i in V/m	
	$H_i$	= Magnetic field strength of channel i in A/m	

The RSS value of the field components gives the total field strength (Hermitian magnitude):

$$E_{tot} = \sqrt{E_x^2 + E_y^2 + E_z^2}$$

The primary field data are used to calculate the derived field units.

$$SAR = E_{tot}^2 \cdot \frac{\sigma}{\rho \cdot 1000}$$

with  $SAR$  = local specific absorption rate in mW/g

$E_{tot}$  = total field strength in V/m

$\sigma$  = conductivity in [mho/m] or [Siemens/m]

$\rho$  = equivalent tissue density in g/cm<sup>3</sup>

Note that the density is normally set to 1 (or 1.06), to account for actual brain density rather than the density of the simulation liquid.

The power flow density is calculated assuming the excitation field as a free space field.

$$P_{pwe} = \frac{E_{tot}^2}{3770} \quad \text{or} \quad P_{pwe} = H_{tot}^2 \cdot 37.7$$

with  $P_{pwe}$  = Equivalent power density of a plane wave in mW/cm<sup>2</sup>

$E_{tot}$  = total electric field strength in V/m

$H_{tot}$  = total magnetic field strength in A/m

## **SAR EVALUATION PROCEDURES**

**The evaluation was performed with the following procedure:**

**Step 1:** Measurement of the SAR value at a fixed location above the central position was used as a reference value for assessing the power drop.

**Step 2:** The SAR distribution at the exposed side of the body was measured at a distance of 4 mm from the inner surface of the shell. The area covered the entire dimension of the EUT and the horizontal grid spacing was 15 mm x 15 mm. Based on the data, the area of the maximum absorption was determined by spline interpolation.

**Step 3:** Around this point, a volume of 32 mm x 32 mm x 34 mm was assessed by measuring 5 x 5 x 7 points. On the basis of this data set, the spatial peak SAR value was evaluated under the following procedure:

1. The data at the surface were extrapolated, since the center of the dipoles is 2.7 mm away from the tip of the probe and the distance between the surface and the lowest measuring point is 1.2 mm. The extrapolation was based on a least square algorithm [11]. A polynomial of the fourth order was calculated through the points in z-axes. This polynomial was then used to evaluate the points between the surface and the probe tip.
2. The maximum interpolated value was searched with a straightforward algorithm. Around this maximum the SAR values averaged over the spatial volumes (1 g or 10 g) were computed by the 3D-Spline interpolation algorithm. The 3D-Spline is composed of three one-dimensional splines with the "Not a knot"-condition (in x, y and z-directions) [11], [12]. The volume was integrated with the trapezoidal-algorithm. One thousand points (10 x 10 x 10) were interpolated to calculate the average.
3. All neighboring volumes were evaluated until no neighboring volume with a higher average value was found.

**Step 4:** Re-measurement of the SAR value at the same location as in Step 1. If the value changed by more than 5%, the evaluation was repeated.

## 5. MEASUREMENT UNCERTAINTY

UNCERTAINTY BUDGE ACCORDING TO IEEE P1528								
Error Description	Uncertainty Value [%]	Prob. Dist.	Div.	( $c_i$ ) 1g	( $c_i$ ) 10g	Std. Unc.(1g)	Std. Unc. (10g)	( $v_i$ ) $v_{eff}$
<b>Measurement System</b>								
Probe Calibration	±4.8	N	1	1	1	±4.8%	±4.8%	
Axial Isotropy	±4.7	R	3	0.7	0.7	±1.9%	±1.9%	
Hemispherical Isotropy	±9.6	R	3	0.7	0.7	±3.9%	±3.9%	
Boundary Effects	±1.0	R	3	1	1	±0.6%	±0.6%	
Linearity	±4.7	R	3	1	1	±2.7%	±2.7%	
System Detection Limits	±1.0	R	3	1	1	±0.6%	±0.6%	
Readout Electronics	±1.0	N	1	1	1	±1.0%	±1.0%	
Response Time	±0.8	R	3	1	1	±0.5%	±0.5%	
Integration Time	±2.6	R	3	1	1	±1.5%	±1.5%	
RF Ambient Condition	±1.59	R	3	1	1	±0.9%	±0.9%	
Probe Positioner	±1.6	R	3	1	1	±0.2%	±0.2%	
Probe Positioning	±2.9	R	3	1	1	±1.7%	±1.7%	
Max. SAR Eval.	±1.0	R	3	1	1	±0.6%	±0.6%	
<b>Test sample Related</b>								
Device Positioning	±1.1	N	1	1	1	±1.1%	±1.1%	145
Device Holder	±3.6	N	1	1	1	±3.6%	±3.6%	5
Power Drift	±5.0	R	3	1	1	±2.9%	±2.9%	
<b>Phantom and Setup</b>								
Phantom Uncertainty	±4.0	R	3	1	1	±2.3%	±2.3%	
Liquid Conductivity (target)	±5.0	R	3	0.64	0.43	±1.8%	±1.2%	
Liquid Conductivity (meas.)	±2.5	N	1	0.64	0.43	±1.6%	±1.1%	
Liquid Permittivity (target)	±5.0	R	3	0.6	0.49	±1.7%	±1.4%	
Liquid Permittivity (meas.)	±2.5	N	1	0.6	0.49	±1.5%	±1.2%	
Combined Std. Uncertainty						±9.8%	±9.6%	330
<b>Expanded STD Uncertainty</b>						<b>±19.6%</b>	<b>±19.2%</b>	

Table: Worst-case uncertainty for DASY4 assessed according to IEEE P1528.

The budge is valid for the frequency range 300 MHz – 3G Hz and represents a worst-case analysis.

**6. EXPOSURE LIMIT**

(A). Limits for Occupational/Controlled Exposure (W/kg)

Whole-Body	Partial-Body	Hands, Wrists, Feet and Ankles
0.4	8.0	20.0

(B). Limits for General Population/Uncontrolled Exposure (W/kg)

Whole-Body	Partial-Body	Hands, Wrists, Feet and Ankles
0.08	1.6	4.0

NOTE: **Whole-Body SAR** is averaged over the entire body, **partial-body SAR** is averaged over any 1 gram of tissue defined as a tissue volume in the shape of a cube. **SAR for hands, wrists, feet and ankles** is averaged over any 10 grams of tissue defined as a tissue volume in the shape of a cube.


**Population/Uncontrolled Environments:** are defined as locations where there is the exposure of individuals who have no knowledge or control of their exposure.

**Occupational/Controlled Environments:** are defined as locations where there is exposure that may be incurred by people who are aware of the potential for exposure, (i.e. as a result of employment or occupation).





**NOTE**  
**GENERAL POPULATION/UNCONTROLLED EXPOSURE**  
**PARTIAL BODY LIMIT**  
**1.6 mW/g**

## 7. EUT ARRANGEMENT

### Handset test position – Head position

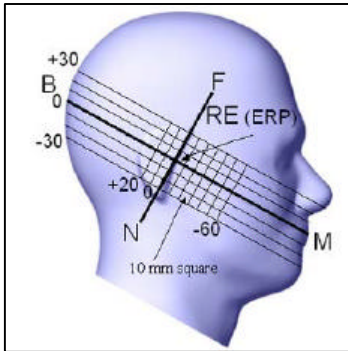

The device was placed in a normal operating position with the Point A on the device, as illustrated in following drawing, aligned with the location of the RE (ERP) on the phantom. With the ear-piece pressed against the head, the vertical center line of the body of the handset was aligned with an imaginary plane consisting of the RE, LE and M. While maintaining these alignments, the body of the handset was gradually moved towards the cheek until any point on the mouth-piece or keypad contacted the cheek. This is a cheek/touch position. For ear/tilt position, while maintain the device aligned with the BM and FN lines, the device was pivot against ERP back for  $15^\circ$  or until the device antenna touch the phantom. Please refer to IEEE SC-2 P1528 illustration below.

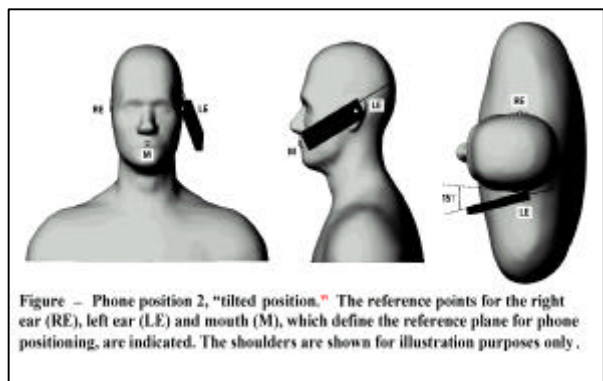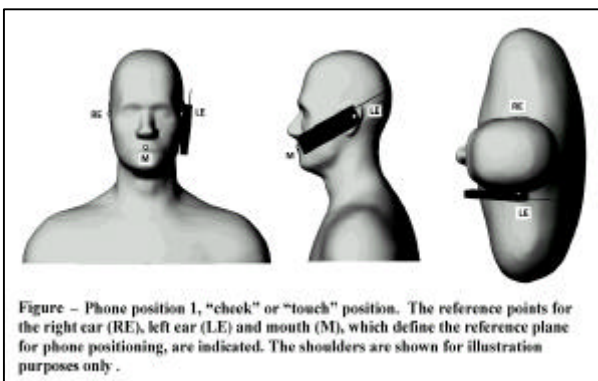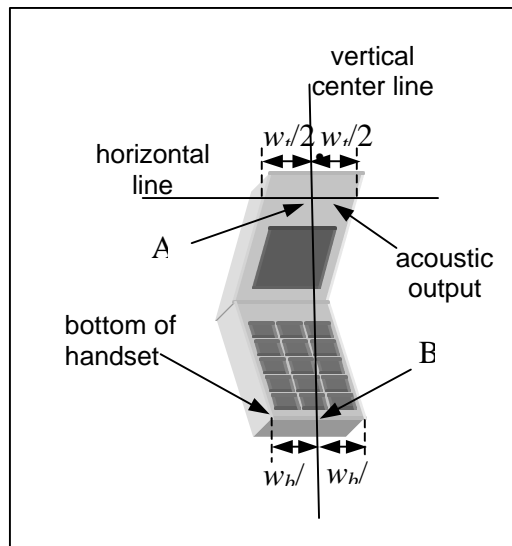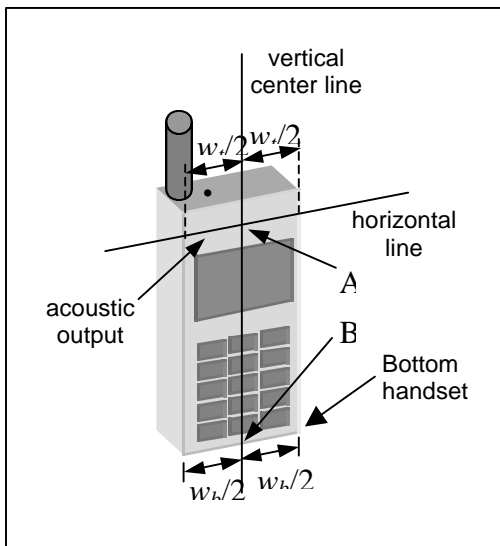

## 8. MEASUREMENT RESULTS

### 8.1. SYSTEM PERFORMANCE CHECK

Prior to the assessment, the system validation kit was used to test whether the system was operating within its specifications of  $\pm 10\%$ . The validation results are tabulated below. And also the corresponding SAR plot is attached as well in the SAR plots files.

IEEE P1528 Recommended Reference Value

Frequency (MHz)	1 g SAR	10 g SAR	Local SAR at surface (Above feed point)	Local SAR at surface (y=2cm offset from feed point)
300	3.0	2.0	4.4	2.1
450	4.9	3.3	7.2	3.2
835	9.5	6.2	14.1	4.9
900	10.8	6.9	16.4	5.4
1450	29.0	16.0	50.2	6.5
1800	38.1	19.8	69.5	6.8
1900	39.7	20.5	72.1	6.6
2000	41.1	21.1	74.6	6.5
2450	52.4	24.0	104.2	7.7
3000	63.8	25.7	140.2	9.5

### SYSTEM PERFORMANCE CHECK RESULTS

Dipole: D2450V2 SN: 706

Date: July 18, 2003

Ambient condition: Temperature 24.5°C; Relative humidity 42%

Head Simulating Liquid			Parameters	Target	Measured	Deviation[%]	Limited[%]
Frequency	Temp. [°C]	Depth [cm]					
1800 MHz	23.00	15.00	Permittivity:	40	39.5717	-1.07	$\pm 10$
			Conductivity:	1.4	1.394	-0.43	$\pm 5$
			1g SAR:	38.1	36.76	-3.52	$\pm 10$

Date: July 21, 2003

Ambient condition: Temperature 24.5°C; Relative humidity 44%

Head Simulating Liquid			Parameters	Target	Measured	Deviation[%]	Limited[%]
Frequency	Temp. [°C]	Depth [cm]					
1800 MHz	23.00	15.00	Permittivity:	40	40.2604	0.65	$\pm 10$
			Conductivity:	1.4	1.3993	-0.05	$\pm 5$
			1g SAR:	38.1	37.16	-2.47	$\pm 10$

Date: July 23, 2003

Ambient condition: Temperature 24.5°C; Relative humidity 46%

Head Simulating Liquid			Parameters	Target	Measured	Deviation[%]	Limited[%]
Frequency	Temp. [°C]	Depth [cm]					
1800 MHz	23.00	15.00	Permittivity:	40	39.8991	-0.25	$\pm 10$
			Conductivity:	1.4	1.3947	-0.38	$\pm 5$
			1g SAR:	38.1	35.96	-5.62	$\pm 10$

## 8.2. TEST LIQUIDS CONFIRMATION

### Simulated Tissue Liquid Parameter confirmation

The dielectric parameters were checked prior to assessment using the HP85070C dielectric probe kit. The dielectric parameters measured are reported in each correspondent section.

### IEEE SCC-34/SC-2 P1528 recommended Tissue Dielectric Parameters

The head tissue dielectric parameters recommended by the IEEE SCC-34/SC-2 in P1528 have been incorporated in the following table. These head parameters are derived from planar layer models simulating the highest expected SAR for the dielectric properties and tissue thickness variations in a human head. Other head and body tissue parameters that have not been specified in P1528 are derived from the tissue dielectric parameters computed from the 4-Cole-Cole equations and extrapolated according to the head parameters specified in P1528

Target Frequency	Head		Body	
(MHz)	$\epsilon_r$	$\sigma$ (S/m)	$\epsilon_r$	$\sigma$ (S/m)
835	41.5	0.90	55.2	0.97
900	41.5	0.97	55.0	1.05
1800-2000	40.0	1.40	53.3	1.52
2450	39.2	1.80	52.7	1.95
5800	45.3	5.27	48.2	6.00

( $\epsilon_r$  = relative permittivity,  $\sigma$  = conductivity and  $\rho = 1000 \text{ kg/m}^3$ )

### LIQUID MEASUREMENT RESULTS

Date: July 18, 2003

Ambient condition – Temperature: 24.5°C; Relative humidity: 43%

Muscle Simulating Liquid			Parameters	Target	Measured	Deviation[%]	Limited[%]
Frequency	Temp. [°C]	Depth (cm)					
1900 MHz	23	15	Permittivity:	53.3	52.0754	-2.30	± 10
			Conductivity:	1.52	1.5034	-1.09	± 5

Date: July 21, 2003

Ambient condition – Temperature: 24.5°C; Relative humidity: 42%

Muscle Simulating Liquid			Parameters	Target	Measured	Deviation[%]	Limited[%]
Frequency	Temp. [°C]	Depth (cm)					
1900 MHz	23	15	Permittivity:	53.3	52.0703	-2.31	± 10
			Conductivity:	1.52	1.5213	0.09	± 5

Date: July 23, 2003

Ambient condition – Temperature: 24.5°C; Relative humidity: 43%

Head Simulating Liquid			Parameters	Target	Measured	Deviation[%]	Limited[%]
Frequency	Temp. [°C]	Depth (cm)					
1900 MHz	23	15	Permittivity:	40	39.9127	-0.22	± 10
			Conductivity:	1.4	1.4676	4.83	± 5



### 8.3. EUT TUNE-UP PROCEDURES

The following procedures had been used to prepare the EUT for the SAR test.

- To setup the desire channel frequency and the maximum output power. A Radio Communication Tester "R&S, model CMU 200" was used to program the EUT.

**GSM mode -**

Network Support: *GSM only*

Main Service: *Circuit Switched*

Power Setting: *PCL: 0 (30 dBm)*

**GPRS Mode -**

Service Selection: *Test Mode B*

Main Service: *Packet Data (Level 8; 1 slot)*

Network Support: *GSM+GPRS*

Power Setting: *0 (36 dBm)*

- Maximum conducted power was measured by replacing the antenna with an adapter for conductive measurements, before and after the SAR measurements was done.

#### 8.4. EUT SETUP PHOTOS

**Left hand - Touch position**




**Right hand - Touch position**




**Left hand - Tilt position**



**Right hand - Tilt position**

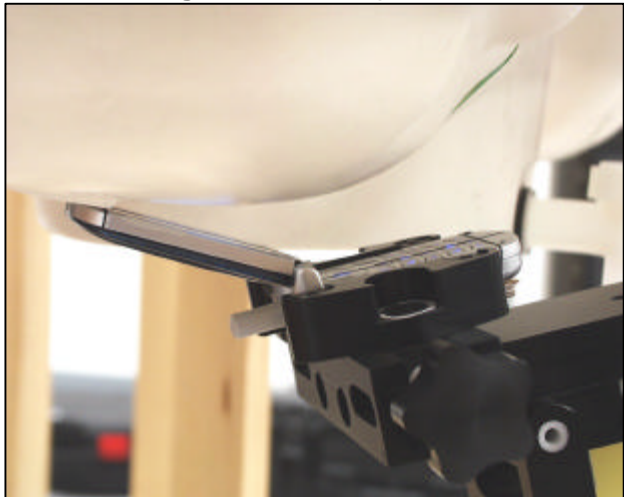

**Flat/Body-worn position**

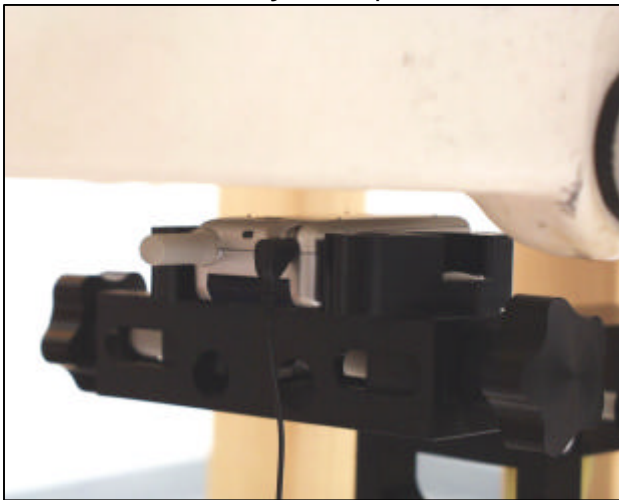

**Notes:**

1. Separation distance of 1.5 cm between the back of the EUT and flat phantom.
2. The Ear-microphone wire connected to the phone to simulate hands-free operation in a body-worn configuration.

**8.5. SAR MEASUREMENT RESULTS**

HEAD POSITION - GSM1900 (Duty Cycle = 12.5%, Crest Factor: 8)							Depth of liquid: 15.0 cm	
EUT Position	Antenna	Frequency		*Conducted Pwr_dBm		Liquid Temp_°C	SAR (W/kg)	Limit (W/kg)
		Channel	MHz	Before	After			
Left Touched	Fixed	512	1850.2	29.62	29.52	23.0	0.411	1.6
		661	1880.0	29.58	29.42	23.0	0.367	
		810	1909.8	29.68	29.53	23.0	0.327	
Left Tilted	Fixed	512	1850.2	29.62	29.52	23.0	0.0496	1.6
		661	1880.0	29.58	29.42	23.0	0.0713	
		810	1909.8	29.68	29.53	23.0	0.0574	
Right Touched	Fixed	512	1850.2	29.62	29.52	23.0	0.594	1.6
		661	1880.0	29.58	29.42	23.0	0.553	
		810	1909.8	29.68	29.53	23.0	0.497	
Right Tilted	Fixed	512	1850.2	29.62	29.52	23.0	0.0600	1.6
		661	1880.0	29.58	29.42	23.0	0.0539	
		810	1909.8	29.68	29.53	23.0	0.0459	

BODY POSITIONS - GSM mode							
Sep. dist._cm	Channel	Frequency_MHz	*Conducted Pwr_dBm		Liquid Temp_°C	SAR (W/kg)	Limit (W/kg)
			Before	After			
1.5	512	1850.2	29.62	29.52	23.0	Cube0: 0.245 Cube1: 0.226	1.5
	661	1880.0	29.58	29.42	23.0	Cube0: 0.251 Cube1: 0.260	
	810	1909.8	29.68	29.53	23.0	Cube0: 0.255 Cube1: 0.195	

BODY POSITIONS - GPRS mode (Class 8 - 1 slot)							Depth of liquid: 15.0 cm	
Sep. dist._cm	Channel	Frequency_MHz	*Conducted Pwr_dBm		Liquid Temp_°C	SAR (W/kg)	Limit (W/kg)	
			Before	After				
1.5	512	1850.2	29.63	29.57	23.0	Cube0: 0.301 Cube1: 0.241	1.5	
	661	1880.0	29.58	29.40	23.0	Cube0: 0.286 Cube1: 0.240		
	810	1909.8	29.67	29.54	23.0	Cube0: 0.249 Cube1: 0.245		

Notes: 1. \*: Average power

2. Please refer to attachment for the result presentation in plot format.

**9. EUT PHOTOS**

**10. EQUIPMENT LIST & CALIBRATION STATUS**

Name of Equipment	Manufacturer	Type/Model	Serial Number	Calibration	
				last cal.	due date
S-Parameter Network Analyzer	Agilent	8753ES	MY40001647	8/6/02	8/6/03
Electronic Probe kit	Hewlett Packard	85070C	N/A	N/A	N/A
3.5 mm Calibration Kit	Agilent	85033D	3423A07200	8/6/02	8/6/03
Power Meter	Agilent	E5516A	GB41291160	8/9/02	8/9/03
Power Sensor	Agilent	E9327A	US40440755	9/5/02	9/5/03
Power Meter	Giga-tronics	8651A	8651404	5/12/03	5/12/04
Power Sensor	Giga-tronics	80701A	1834588	2/18/03	2/18/04
Universal Radio Communication Tester	Rohde & Schwarz	CMU 200	838114/032	2/14/03	2/14/04
Amplifier	Mini-Circuit	ZHL-42W	D072701-5	N/A	N/A
DC Power generator	Kenwood	PA36-3A	7060074	N/A	N/A
Data Acquisition Electronics (DAE)	SPEAG	DAE3 V1	427	2/4/03	2/4/04
Dosimetric E-Field Probe	SPEAG	ET3DV6	1577	2/7/02	2/7/04
450 MHz System Validation Dipole	SPEAG	D450V2	1003	4/5/02	4/19/04
900 MHz System Validation Dipole	SPEAG	D900V2	108	4/10/03	4/10/05
1800 MHz System Validation Dipole	SPEAG	D1800V2	294	4/09/03	4/19/05
2450 MHz System Validation Dipole	SPEAG	D2450V2	706	6/4/02	6/4/04
Probe Alignment Unit	SPEAG	LB (V2)	261	N/A	N/A
Robot	Staubli	RX90B L	F00/5H31A1/A/01	N/A	N/A
Generic Twin Phantom	SPEAG	N/A	N/A	N/A	N/A
SAM Phantom	SPEAG	N/A	N/A	N/A	N/A
Devices Holder	SPEAG	N/A	N/A	N/A	N/A
Head 450 MHz	CCS	H450A	N/A	Daily	N/A
Muscle 450 MHz	CCS	M450A	N/A	Daily	N/A
Head 835 MHz	CCS	H835A	N/A	Daily	N/A
Muscle 835 MHz	CCS	M835A	N/A	Daily	N/A
Head 900 MHz	CCS	H900A	N/A	Daily	N/A
Muscle 900 MHz	CCS	M900A	N/A	Daily	N/A
Head 1800 MHz	CCS	H1800A	N/A	Daily	N/A
Muscle 1800 MHz	CCS	M1800A	N/A	Daily	N/A
Head 1900 MHz	CCS	H1900A	N/A	Daily	N/A
Muscle 1900 MHz	CCS	M1900A	N/A	Daily	N/A
Head 2450 MHz	CCS	H2450A	N/A	Daily	N/A
Muscle 2450 MHz	CCS	M2450A	N/A	Daily	N/A

## 11. REFERENCES

- [1] Federal Communications Commission, \Report and order: Guidelines for evaluating the environmental effects of radiofrequency radiation", Tech. Rep. FCC 96-326, FCC, Washington, D.C. 20554, 1996.
- [2] David L. Means Kwok Chan, Robert F. Cleveland, \Evaluating compliance with FCC guidelines for human exposure to radiofrequency electromagnetic fields", Tech. Rep., Federal Communication Commision, O\_cce of Engineering & Technology, Washington, DC, 1997.
- [3] Thomas Schmid, Oliver Egger, and Niels Kuster, \Automated E-\_eld scanning system for dosimetric assessments", IEEE Transactions on Microwave Theory and Techniques, vol. 44, pp. 105{113, Jan. 1996.
- [4] Niels Kuster, Ralph K.astle, and Thomas Schmid, \Dosimetric evaluation of mobile communications equipment with known precision", IEICE Transactions on Communications, vol. E80-B, no. 5, pp. 645{652, May 1997.
- [5] CENELEC, \Considerations for evaluating of human exposure to electromagnetic fields (EMFs) from mobile telecommunication equipment (MTE) in the frequency range 30MHz - 6GHz", Tech. Rep., CENELEC, European Committee for Electrotechnical Standardization, Brussels, 1997.
- [6] ANSI, ANSI/IEEE C95.1-1992: IEEE Standard for Safety Levels with Respect to Human Exposure to Radio Frequency Electromagnetic Fields, 3 kHz to 300 GHz, The Institute of Electrical and Electronics Engineers, Inc., New York, NY 10017, 1992.
- [7] Katja Pokovic, Thomas Schmid, and Niels Kuster, \Robust setup for precise calibration of E-\_eld probes in tissue simulating liquids at mobile communications frequencies", in ICECOM \_ 97, Dubrovnik, October 15{17, 1997, pp. 120{124.
- [8] Katja Pokovic, Thomas Schmid, and Niels Kuster, \E-\_eld probe with improved isotropy in brain simulating liquids", in Proceedings of the ELMAR, Zadar, Croatia, 23{25 June, 1996, pp. 172{175.
- [9] Volker Hombach, Klaus Meier, Michael Burkhardt, Eberhard K. uhn, and Niels Kuster, \The dependence of EM energy absorption upon human head modeling at 900 MHz", IEEE Transactions on Microwave Theory and Techniques, vol. 44, no. 10, pp. 1865{1873, Oct. 1996.
- [10] Klaus Meier, Ralf Kastle, Volker Hombach, Roger Tay, and Niels Kuster, \The dependence of EM energy absorption upon human head modeling at 1800 MHz", IEEE Transactions on Microwave Theory and Techniques, Oct. 1997, in press.
- [11] W. Gander, Computermathematik, Birkhaeuser, Basel, 1992.
- [12] W. H. Press, S. A. Teukolsky, W. T. Vetterling, and B. P. Flannery, Numerical Recepies in C, The Art of Scientific Computing, Second Edition, Cambridge University Press, 1992..Dosimetric Evaluation of Sample device, month 1998 9
- [13] NIS81 NAMAS, \The treatment of uncertainty in EMC measurement", Tech. Rep., NAMAS Executive, National Physical Laboratory, Teddington, Middlesex, England, 1994.
- [14] Barry N. Taylor and Christ E. Kuyatt, \Guidelines for evaluating and expressing the uncertainty of NIST measurement results", Tech. Rep., National Institute of Standards and Technology, 1994. Dosimetric Evaluation of Sample device, month 1998 10

**12. ATTACHMENTS**

<b>Exhibit</b>	<b>Contents</b>	<b>No. of page (s)</b>
1	System Performance Check Plots	6
2	SAR Test Plots - GSM1900_PCS Band	24
3	Dosimetric E-Field Probe - ET3DV6, S/N: 1577	14
4	System Validation Dipole - D1800V2 S/N: 294	7

**END OF REPORT**