

Appendix Test Data

Report No:	182512C400544104	Test Sample NO:	1-2-2
Start Test Date:	2024.8.7	Finish Test Date:	2024.8.9
Test Engineer:	Joker Huang	Auditor:	Justin Feng
Temperature:	26.3℃	Relative Humidity:	45%
Pressure:	101 kPa		

Appendix A1: Emission Bandwidth

Test Result

TestMode	Antenna	Frequency[MHz]	26db EBW [MHz]	FL[MHz]	FH[MHz]	Limit[MHz]	Verdict
11A	Ant1	5180	19.24	5170.40	5189.64	---	---
11A	Ant1	5200	19.68	5190.08	5209.76	---	---
11A	Ant1	5240	19.52	5230.24	5249.76	---	---
11A	Ant1	5260	19.12	5250.36	5269.48	---	---
11A	Ant1	5280	19.04	5270.44	5289.48	---	---
11A	Ant1	5320	19.08	5310.24	5329.32	---	---
11A	Ant1	5500	19.60	5490.12	5509.72	---	---
11A	Ant1	5580	19.40	5570.32	5589.72	---	---
11A	Ant1	5700	19.00	5690.44	5709.44	---	---
11A	Ant1	5745	19.44	5735.28	5754.72	---	---
11A	Ant1	5785	19.36	5775.44	5794.80	---	---
11A	Ant1	5825	19.44	5815.20	5834.64	---	---
11N20SISO	Ant1	5180	20.00	5170.20	5190.20	---	---
11N20SISO	Ant1	5200	19.96	5190.00	5209.96	---	---
11N20SISO	Ant1	5240	20.12	5229.92	5250.04	---	---
11N20SISO	Ant1	5260	19.92	5250.00	5269.92	---	---
11N20SISO	Ant1	5280	20.00	5269.96	5289.96	---	---
11N20SISO	Ant1	5320	19.88	5309.92	5329.80	---	---
11N20SISO	Ant1	5500	19.96	5490.00	5509.96	---	---
11N20SISO	Ant1	5580	19.72	5570.12	5589.84	---	---
11N20SISO	Ant1	5700	19.84	5689.96	5709.80	---	---
11N20SISO	Ant1	5745	20.20	5734.76	5754.96	---	---
11N20SISO	Ant1	5785	20.20	5774.80	5795.00	---	---
11N20SISO	Ant1	5825	20.00	5814.96	5834.96	---	---

Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park, Sanwei Community, Hahgcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China.
Tel:(86)0755-26066440 Email:service@anbotech.com

Hotline
400-003-0500
www.anbotech.com



11N40SISO	Ant1	5190	40.00	5170.32	5210.32	---	---
11N40SISO	Ant1	5230	39.76	5210.24	5250.00	---	---
11N40SISO	Ant1	5270	40.32	5249.68	5290.00	---	---
11N40SISO	Ant1	5310	39.68	5289.84	5329.52	---	---
11N40SISO	Ant1	5510	39.84	5490.00	5529.84	---	---
11N40SISO	Ant1	5550	40.48	5529.28	5569.76	---	---
11N40SISO	Ant1	5670	40.08	5650.00	5690.08	---	---
11N40SISO	Ant1	5755	41.04	5734.52	5775.56	---	---
11N40SISO	Ant1	5795	40.40	5774.92	5815.32	---	---
11AC20SISO	Ant1	5180	19.80	5170.08	5189.88	---	---
11AC20SISO	Ant1	5200	19.92	5190.08	5210.00	---	---
11AC20SISO	Ant1	5240	20.16	5229.96	5250.12	---	---
11AC20SISO	Ant1	5260	19.64	5250.12	5269.76	---	---
11AC20SISO	Ant1	5280	19.88	5270.04	5289.92	---	---
11AC20SISO	Ant1	5320	19.76	5310.12	5329.88	---	---
11AC20SISO	Ant1	5500	19.92	5489.80	5509.72	---	---
11AC20SISO	Ant1	5580	19.84	5570.08	5589.92	---	---
11AC20SISO	Ant1	5700	19.92	5689.92	5709.84	---	---
11AC20SISO	Ant1	5745	19.72	5735.12	5754.84	---	---
11AC20SISO	Ant1	5785	20.00	5775.00	5795.00	---	---
11AC20SISO	Ant1	5825	19.96	5814.96	5834.92	---	---
11AC40SISO	Ant1	5190	39.92	5170.08	5210.00	---	---
11AC40SISO	Ant1	5230	40.72	5209.60	5250.32	---	---
11AC40SISO	Ant1	5270	39.84	5250.16	5290.00	---	---
11AC40SISO	Ant1	5310	40.08	5290.08	5330.16	---	---
11AC40SISO	Ant1	5510	40.56	5489.76	5530.32	---	---
11AC40SISO	Ant1	5550	40.48	5529.76	5570.24	---	---
11AC40SISO	Ant1	5670	40.24	5649.76	5690.00	---	---
11AC40SISO	Ant1	5755	39.76	5735.16	5774.92	---	---
11AC40SISO	Ant1	5795	39.68	5775.16	5814.84	---	---
11AX20SISO	Ant1	5180	19.80	5170.04	5189.84	---	---
11AX20SISO	Ant1	5200	19.76	5190.12	5209.88	---	---
11AX20SISO	Ant1	5240	19.84	5230.00	5249.84	---	---
11AX20SISO	Ant1	5260	19.76	5250.08	5269.84	---	---
11AX20SISO	Ant1	5280	19.72	5270.08	5289.80	---	---
11AX20SISO	Ant1	5320	19.92	5309.92	5329.84	---	---
11AX20SISO	Ant1	5500	19.84	5489.96	5509.80	---	---
11AX20SISO	Ant1	5580	19.84	5570.00	5589.84	---	---
11AX20SISO	Ant1	5700	19.76	5690.04	5709.80	---	---
11AX20SISO	Ant1	5745	19.88	5735.00	5754.88	---	---
11AX20SISO	Ant1	5785	19.92	5774.96	5794.88	---	---
11AX20SISO	Ant1	5825	19.88	5815.00	5834.88	---	---

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
 Sanwei Community, Hahgcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86)0755-26066440 Email: service@anbotek.com



Hotline
400-003-0500


www.anbotek.com




11AX40SISO	Ant1	5190	39.68	5170.08	5209.76	---	---
11AX40SISO	Ant1	5230	39.52	5210.08	5249.60	---	---
11AX40SISO	Ant1	5270	39.76	5250.08	5289.84	---	---
11AX40SISO	Ant1	5310	39.68	5290.16	5329.84	---	---
11AX40SISO	Ant1	5510	39.60	5490.08	5529.68	---	---
11AX40SISO	Ant1	5550	39.60	5530.16	5569.76	---	---
11AX40SISO	Ant1	5670	39.60	5650.16	5689.76	---	---
11AX40SISO	Ant1	5755	39.68	5735.00	5774.68	---	---
11AX40SISO	Ant1	5795	39.60	5775.16	5814.76	---	---




Test Graphs

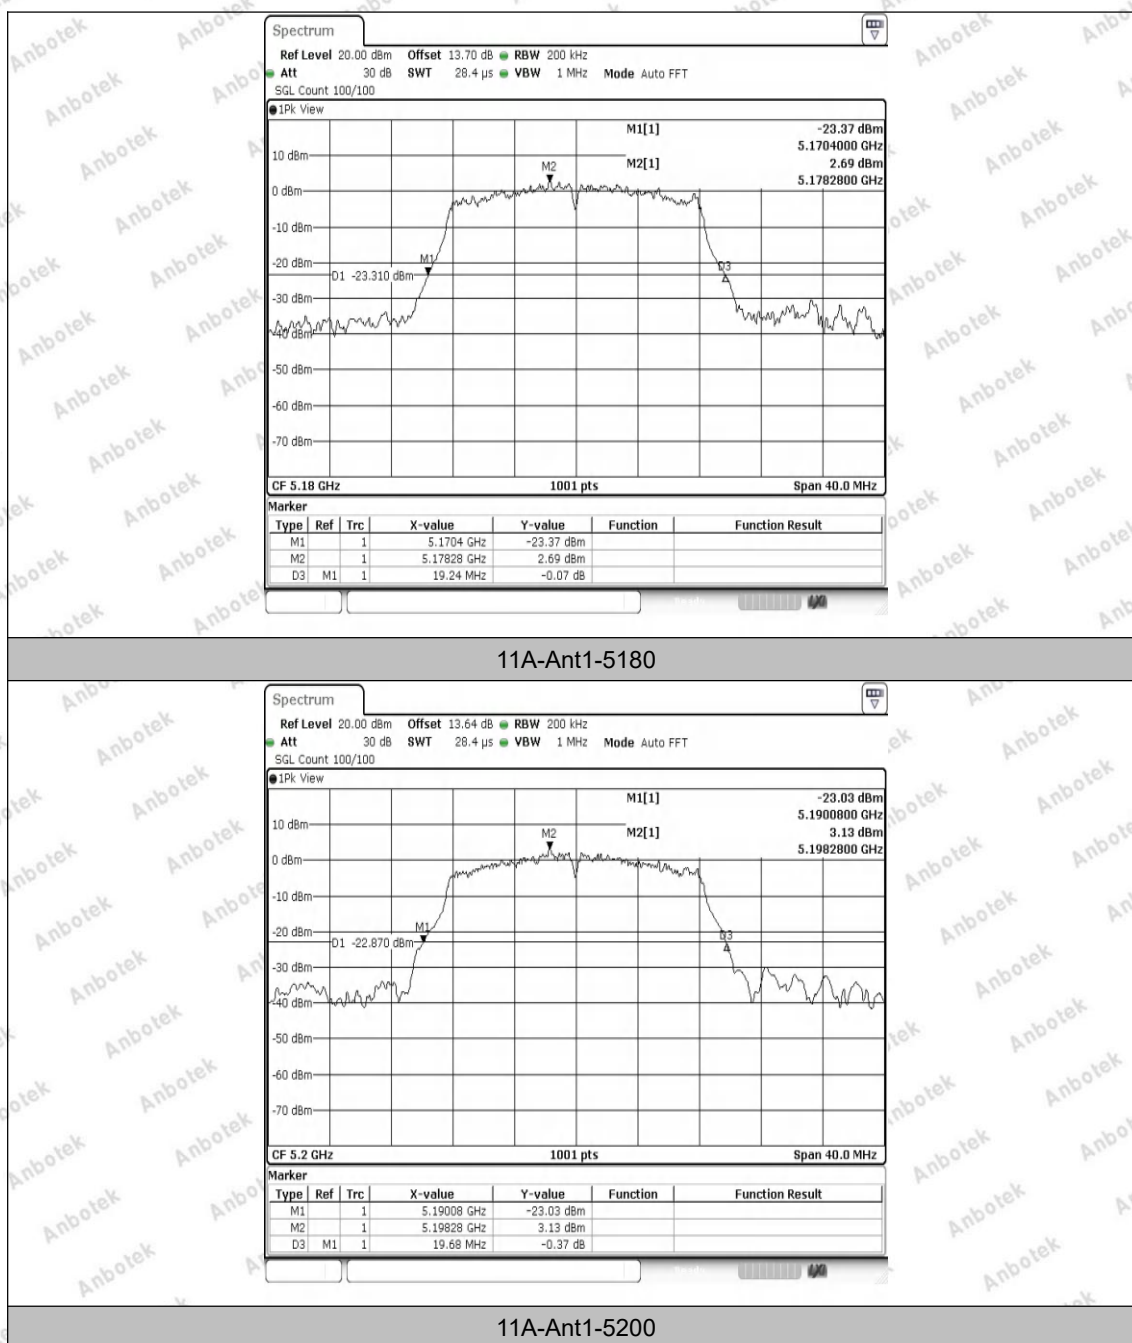

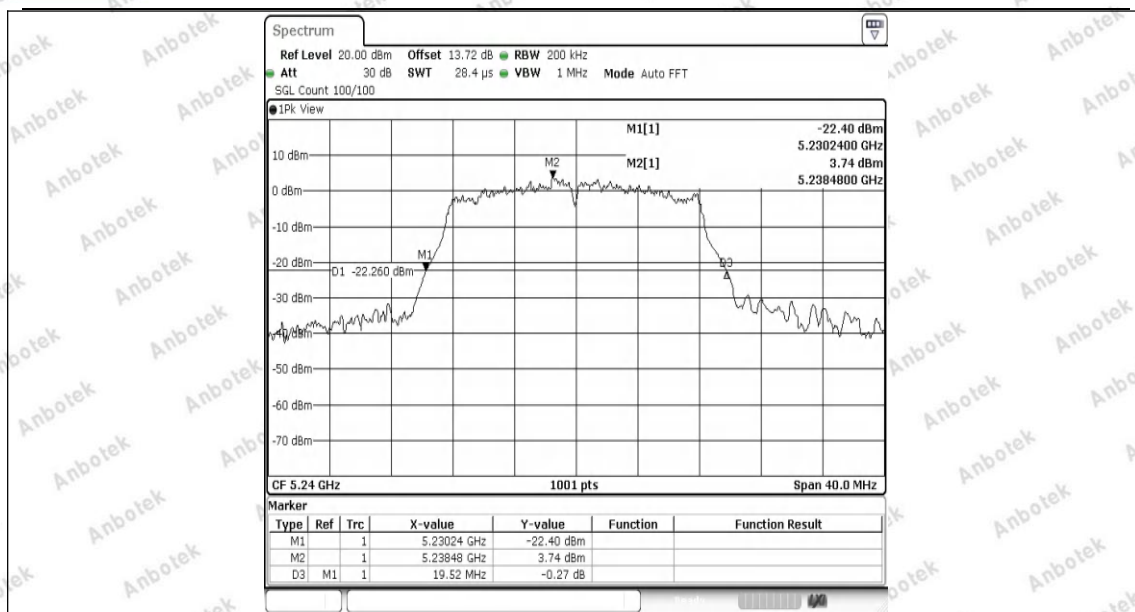


11A-Ant1-5240

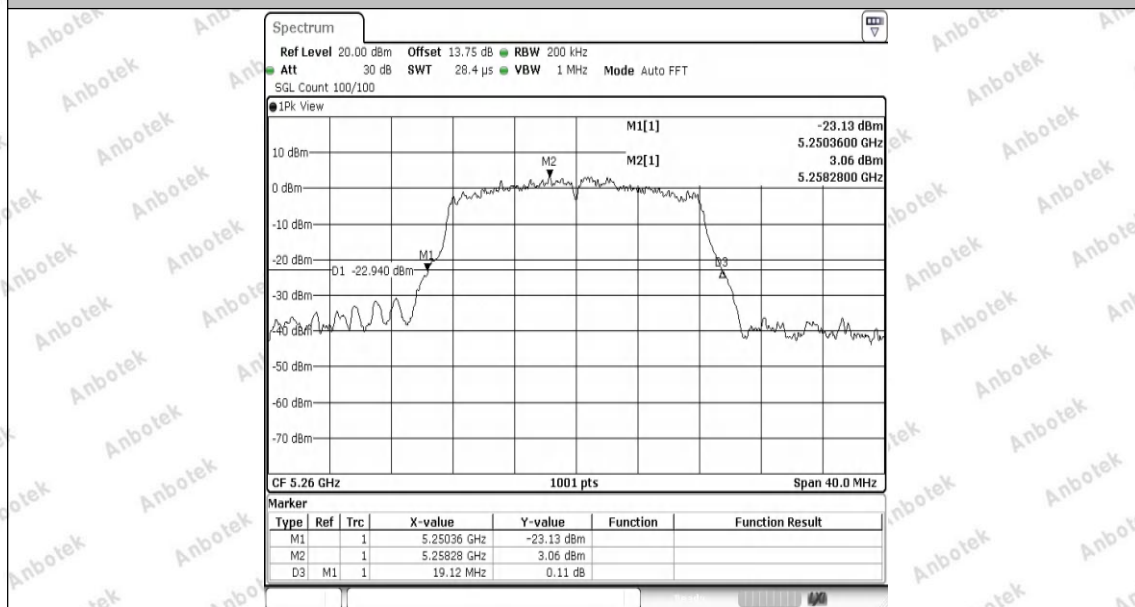


11A-Ant1-5260



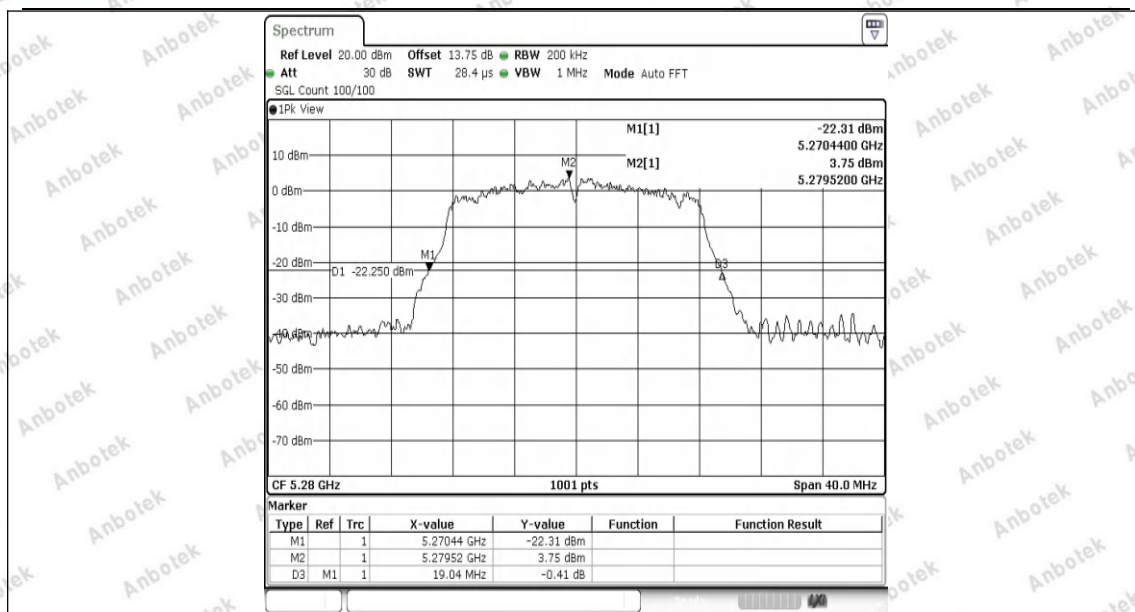


11A-Ant1-5280

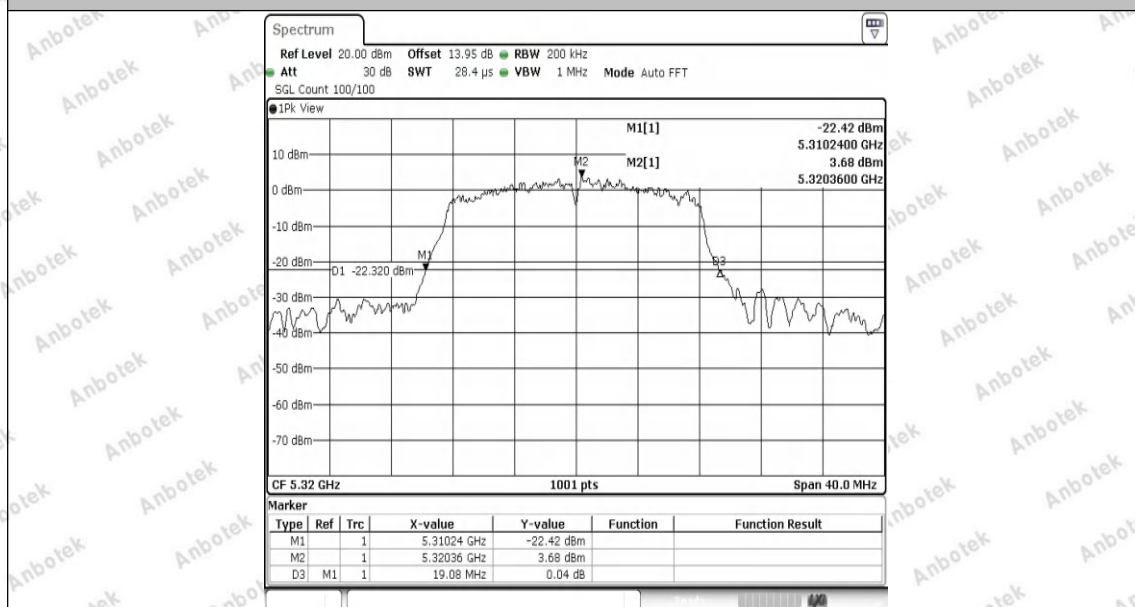


11A-Ant1-5320



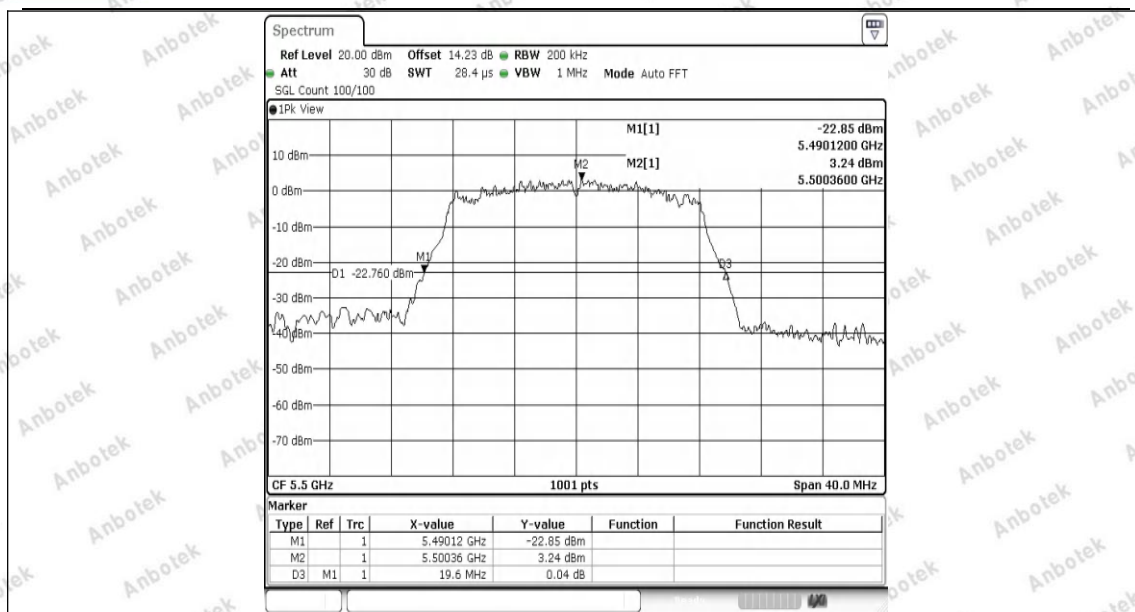


11A-Ant1-5500

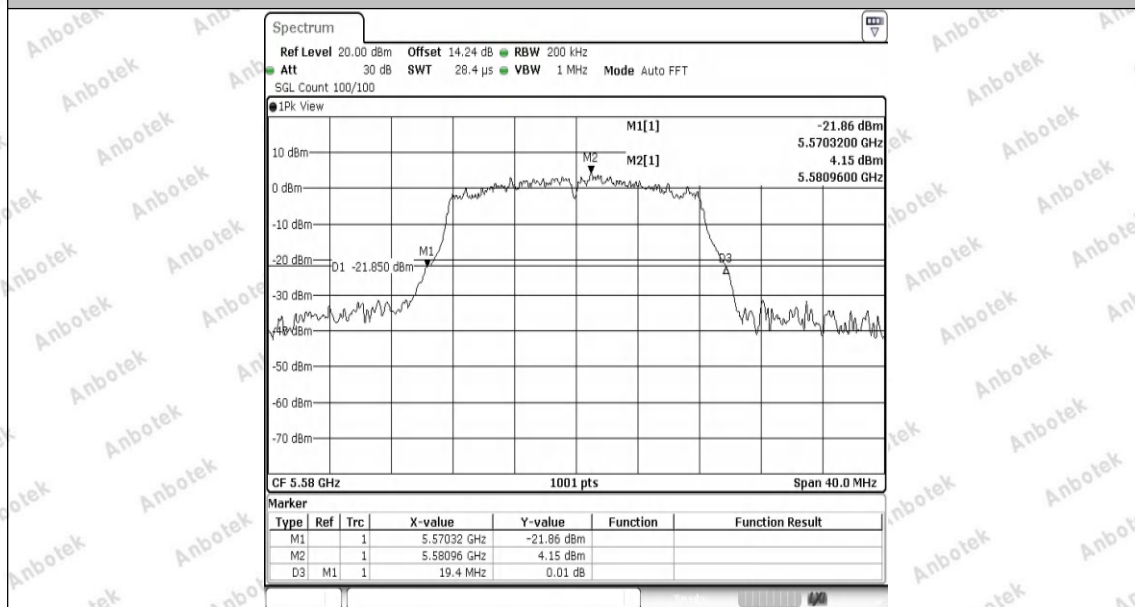


11A-Ant1-5580



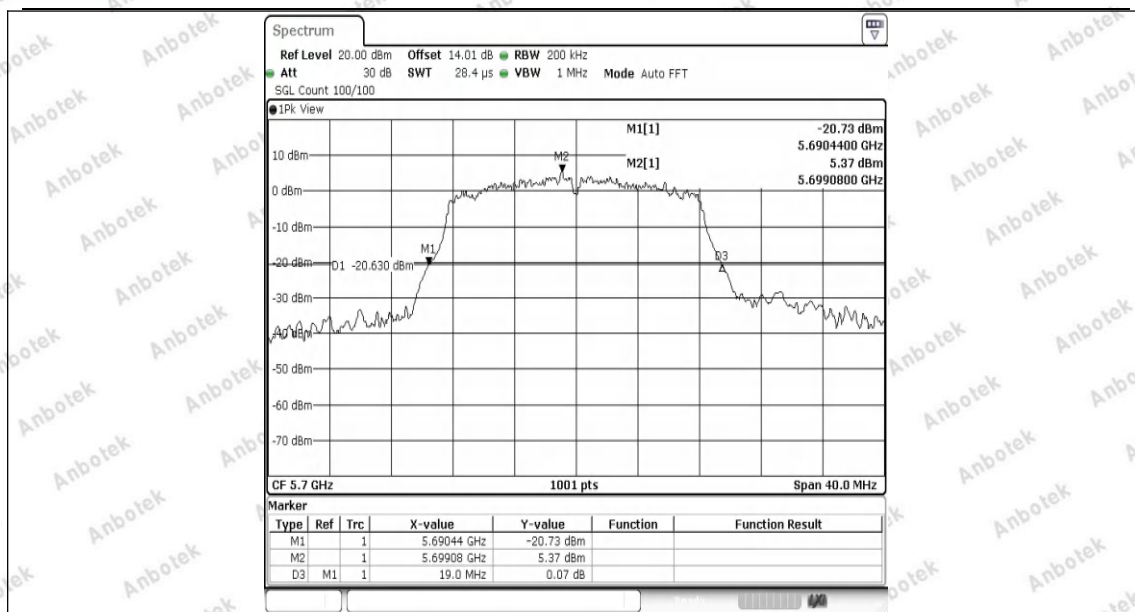


11A-Ant1-5700

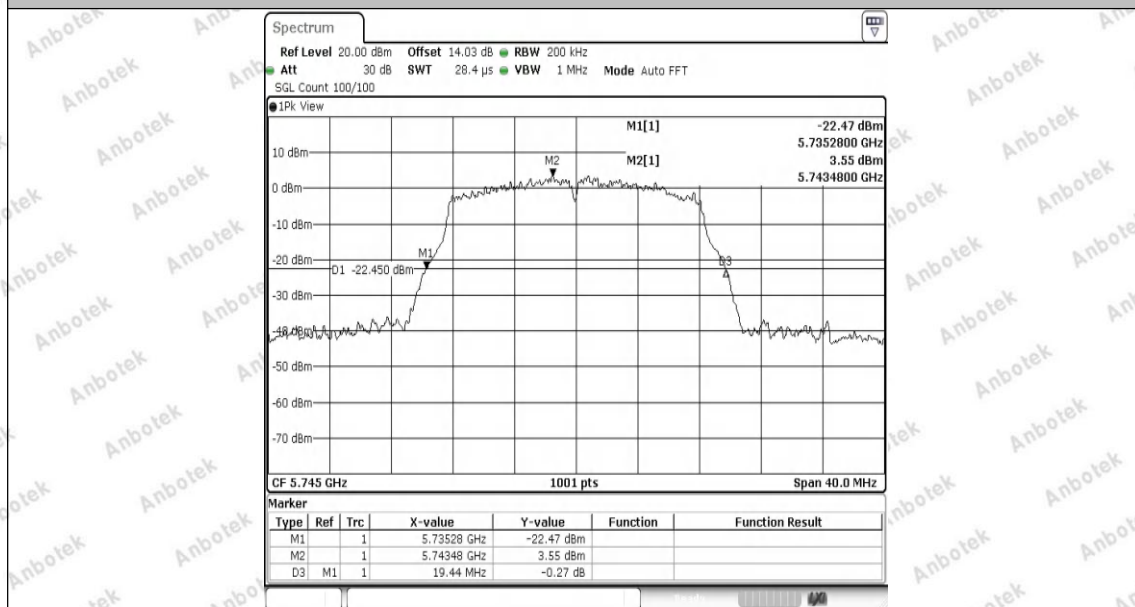


11A-Ant1-5745



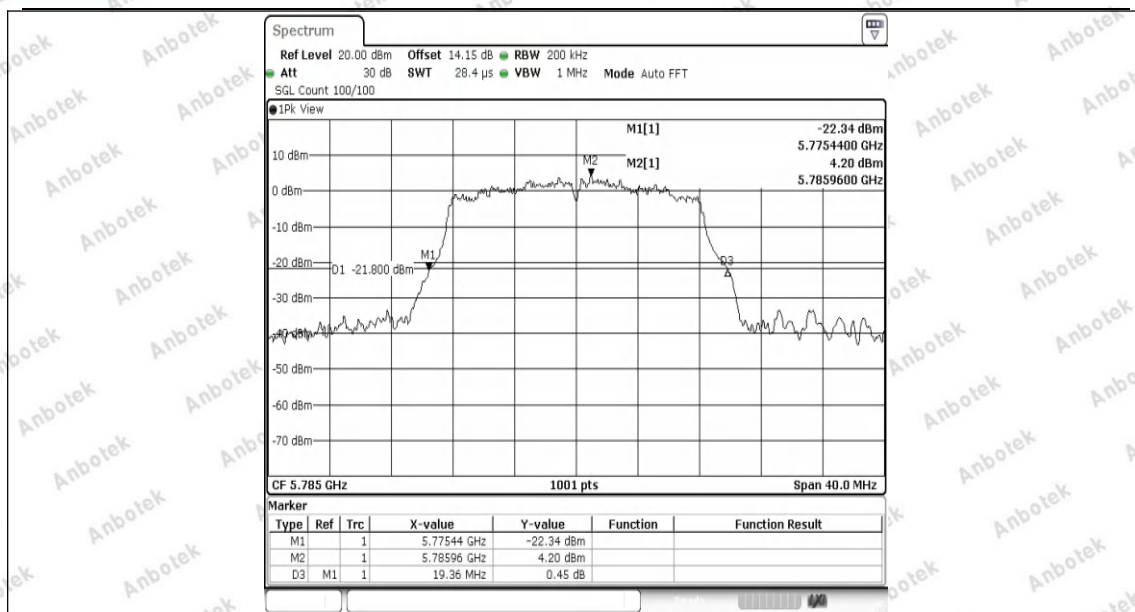



11A-Ant1-5785

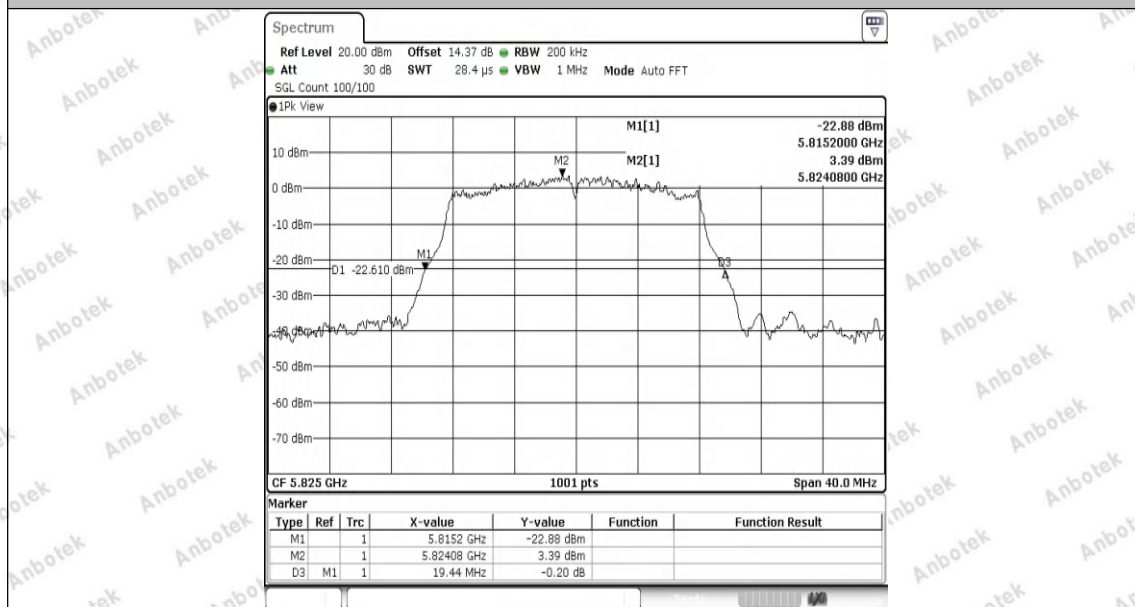


11A-Ant1-5825



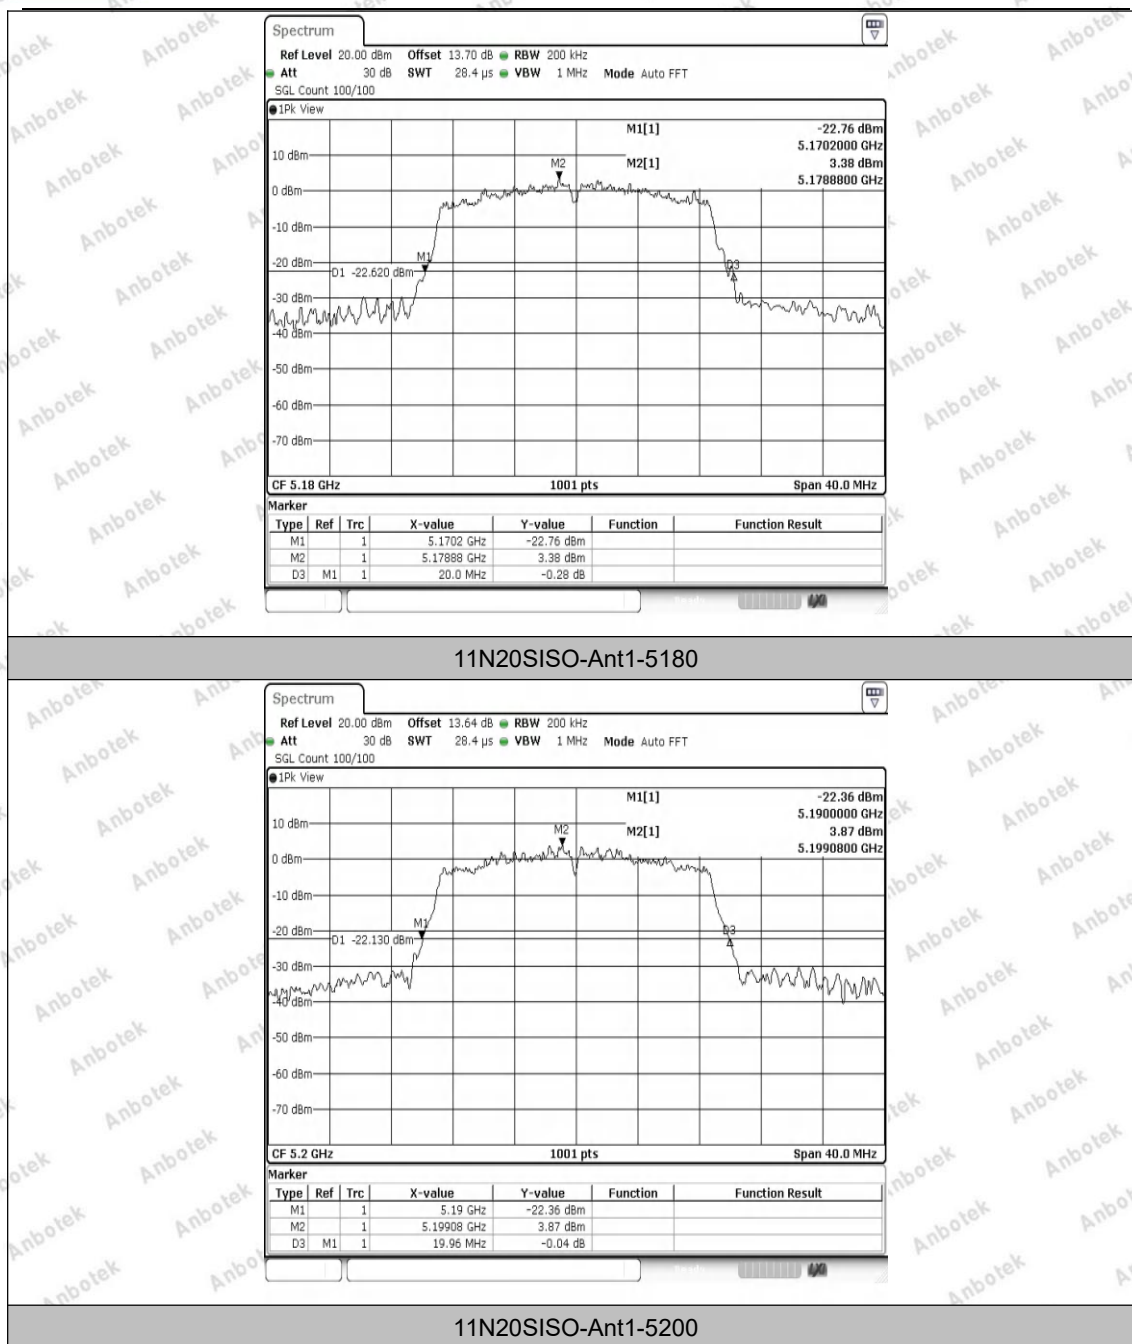

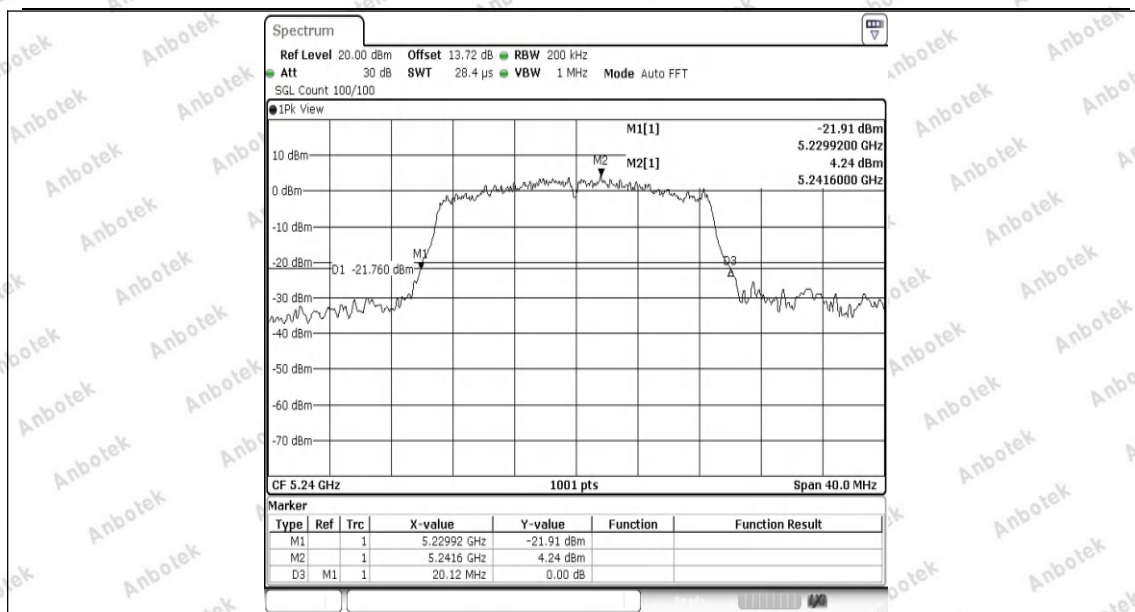



11N20SISO-Ant1-5240

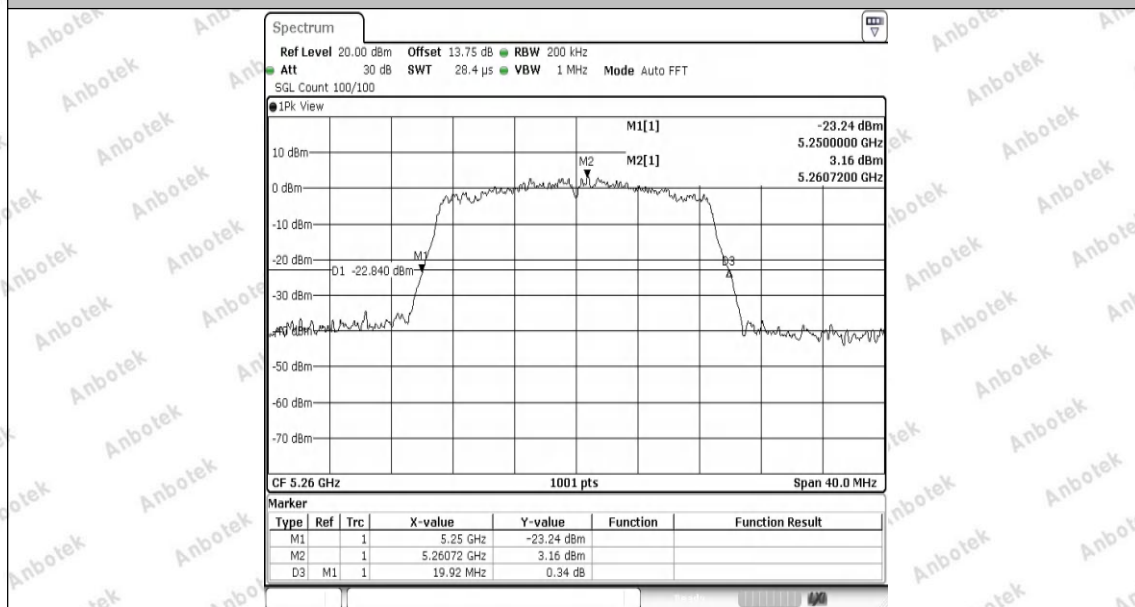


11N20SISO-Ant1-5260



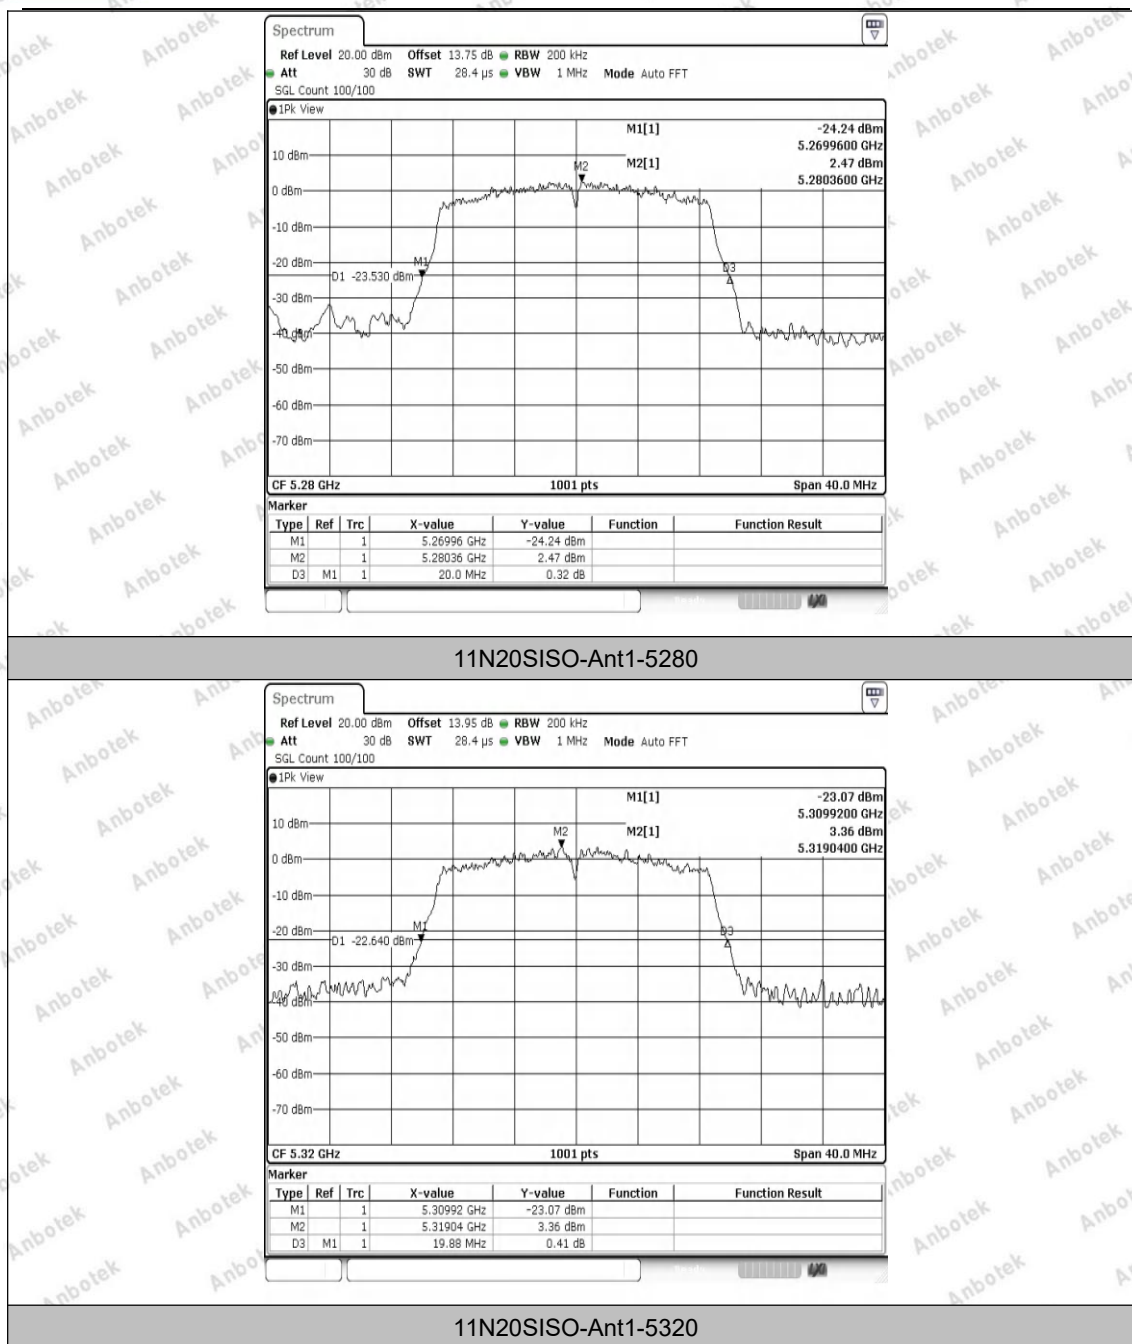

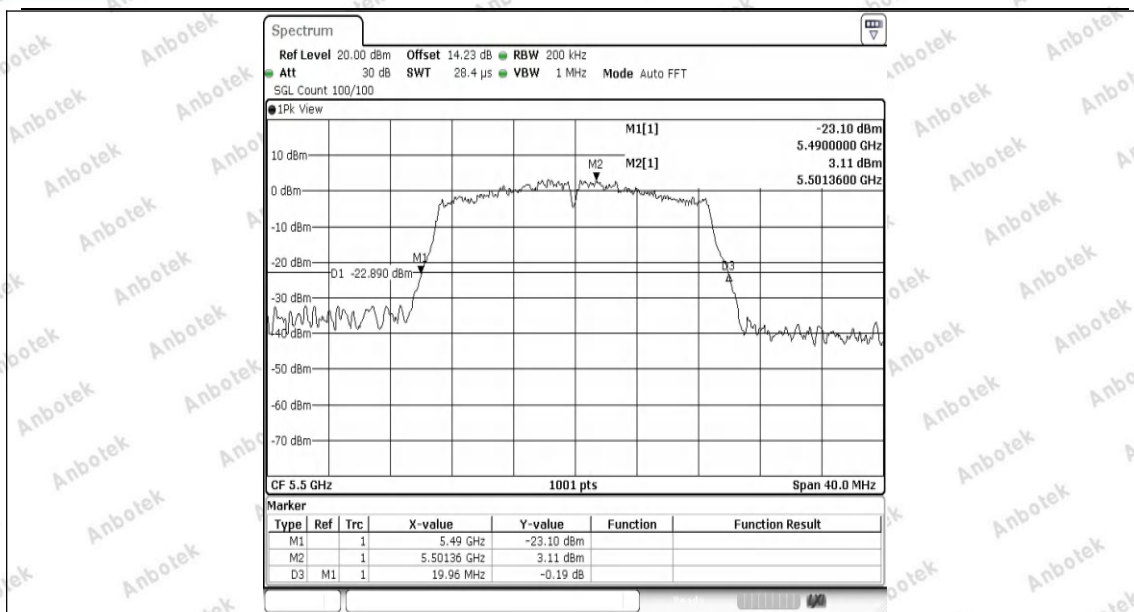



11N20SISO-Ant1-5500

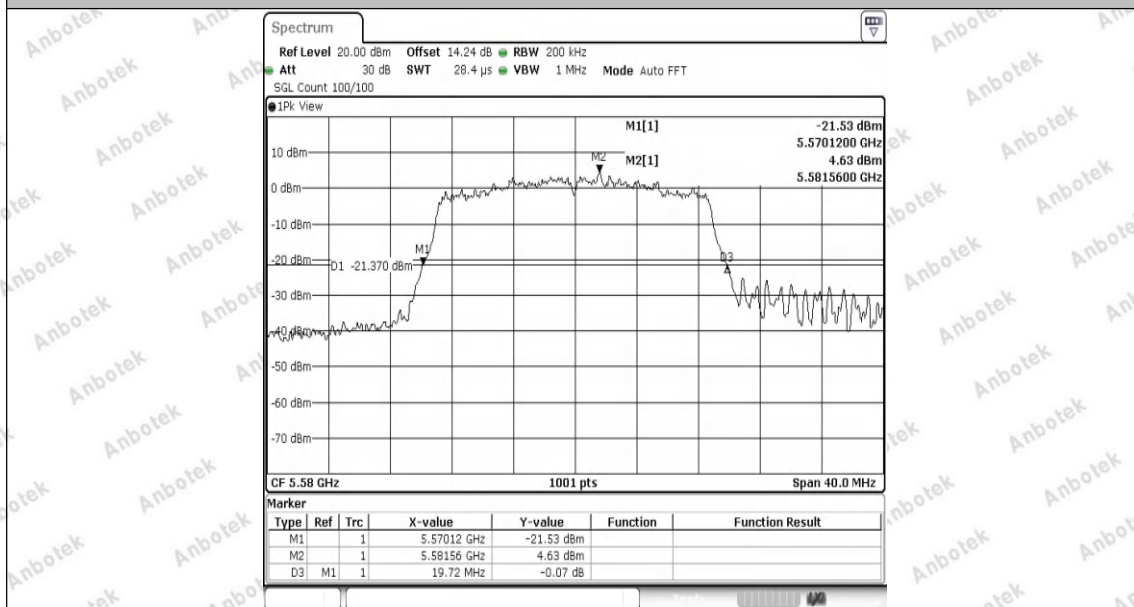


11N20SISO-Ant1-5580



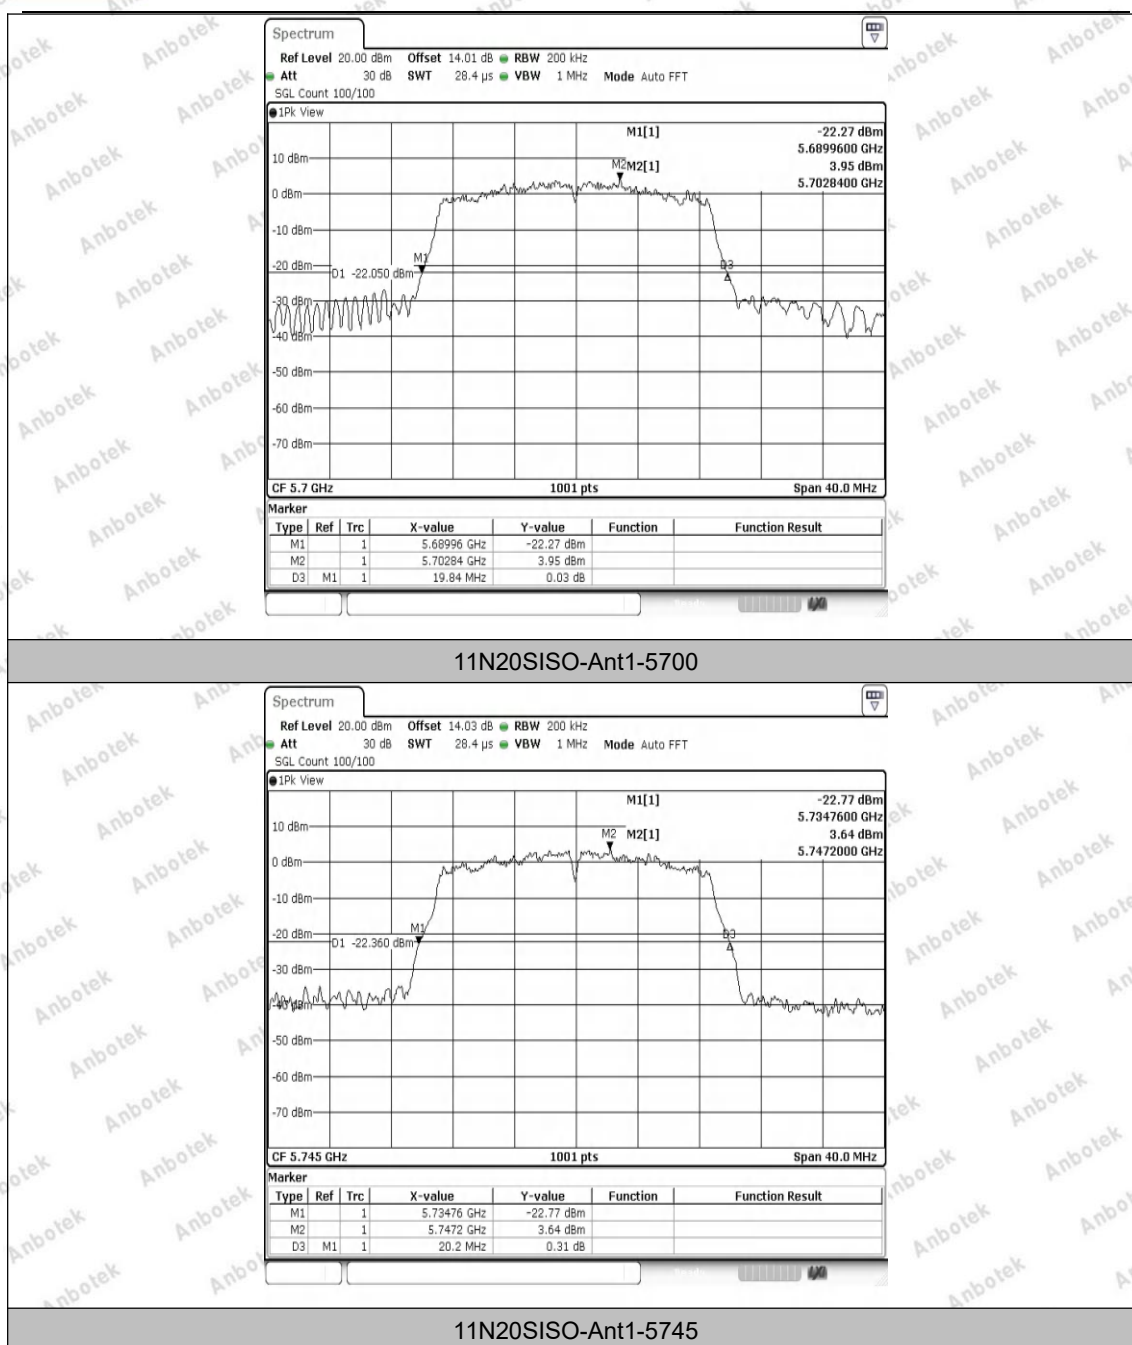

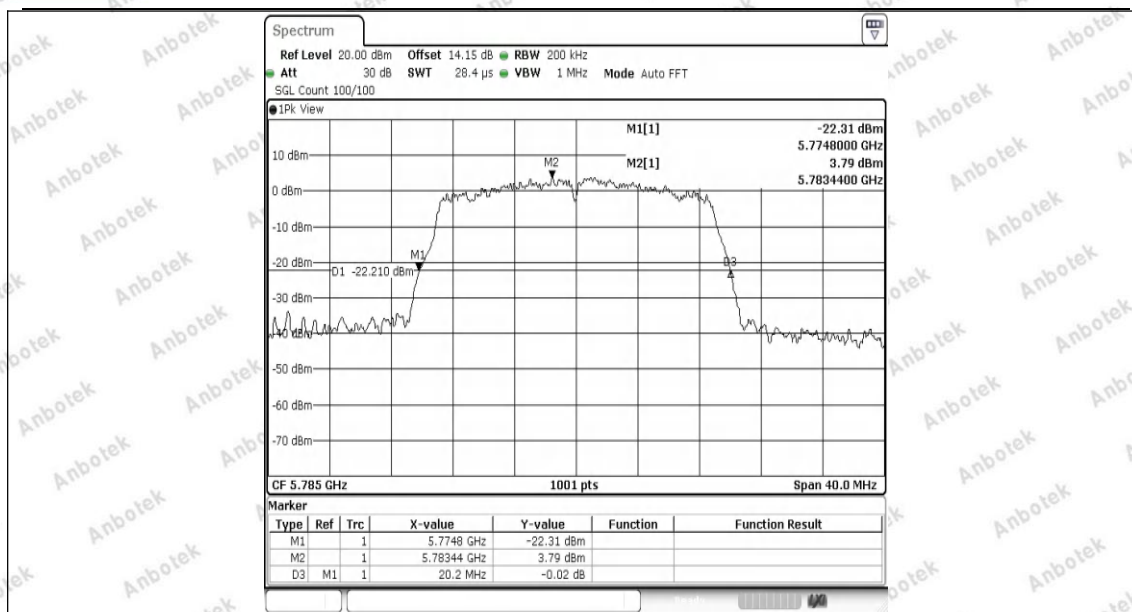


11N20SISO-Ant1-5785

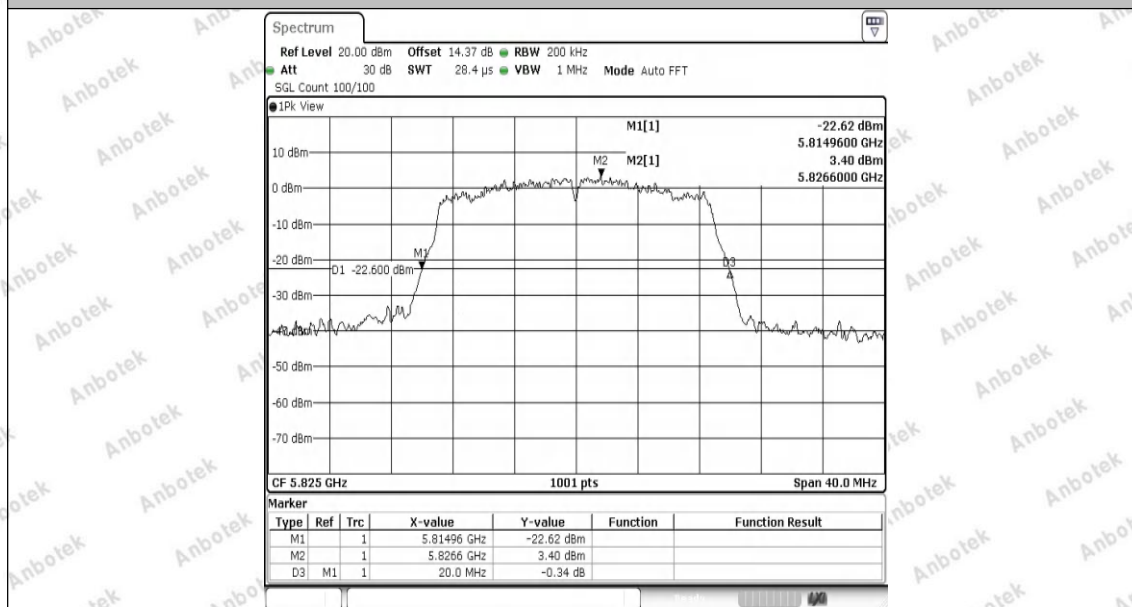


11N20SISO-Ant1-5825



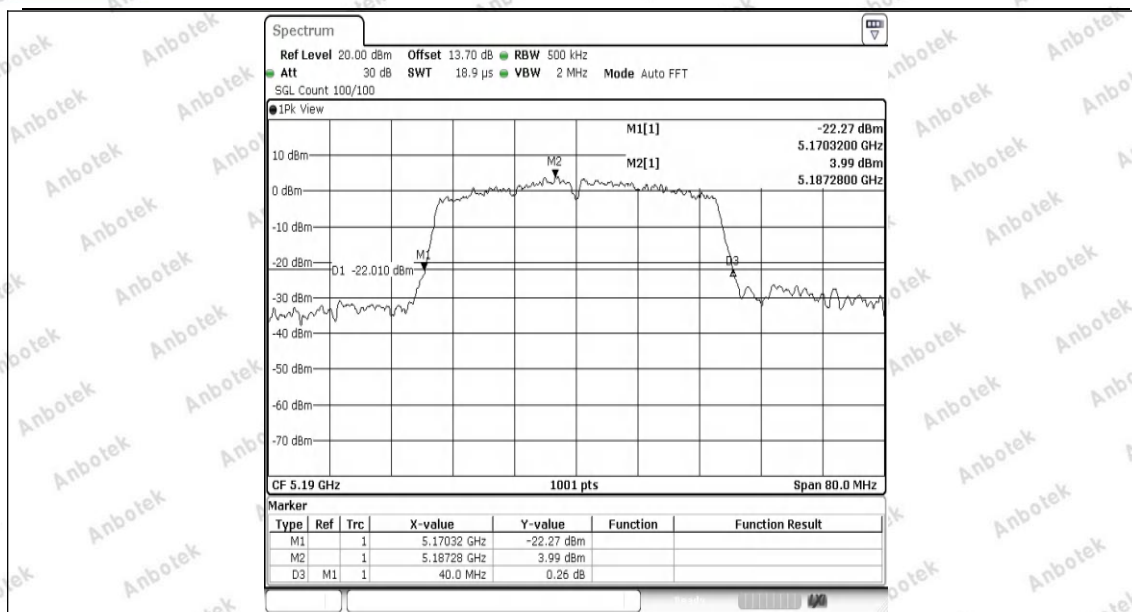


11N40SISO-Ant1-5190

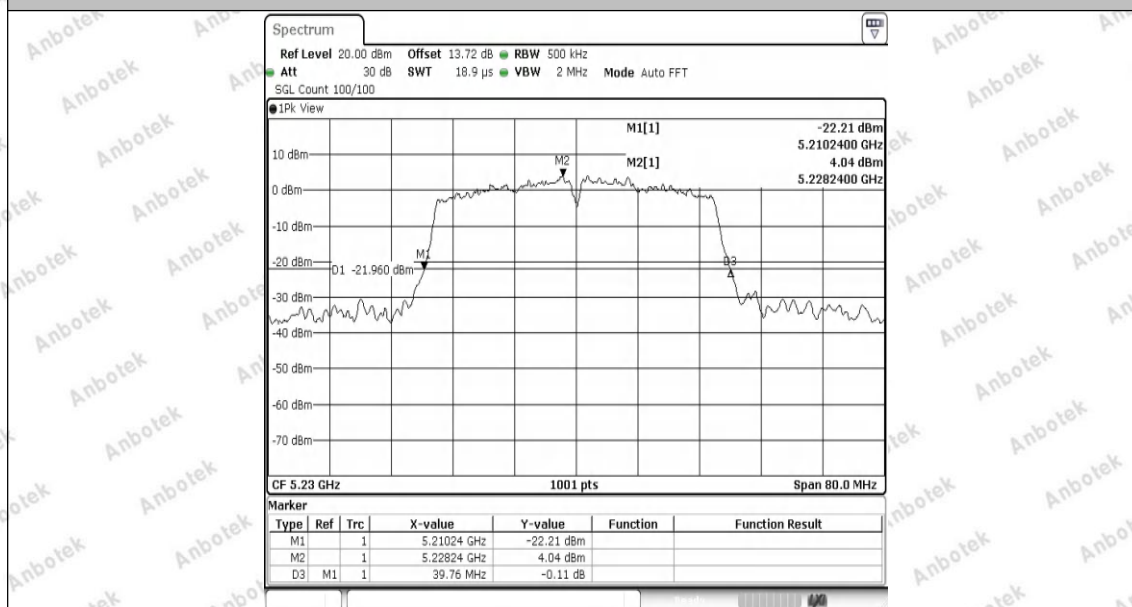


11N40SISO-Ant1-5230



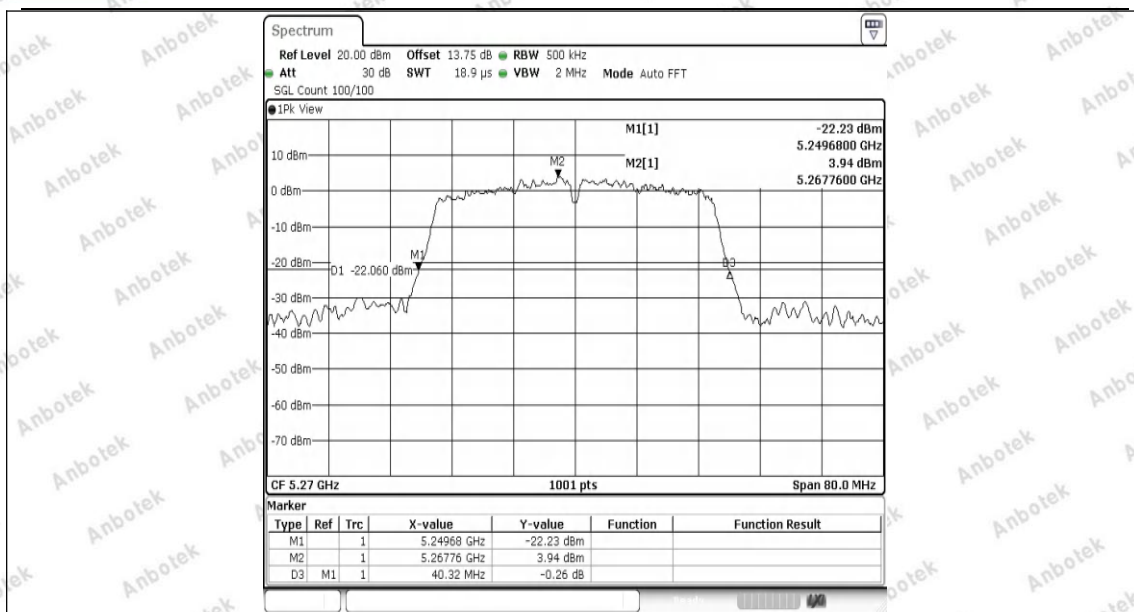


11N40SISO-Ant1-5270

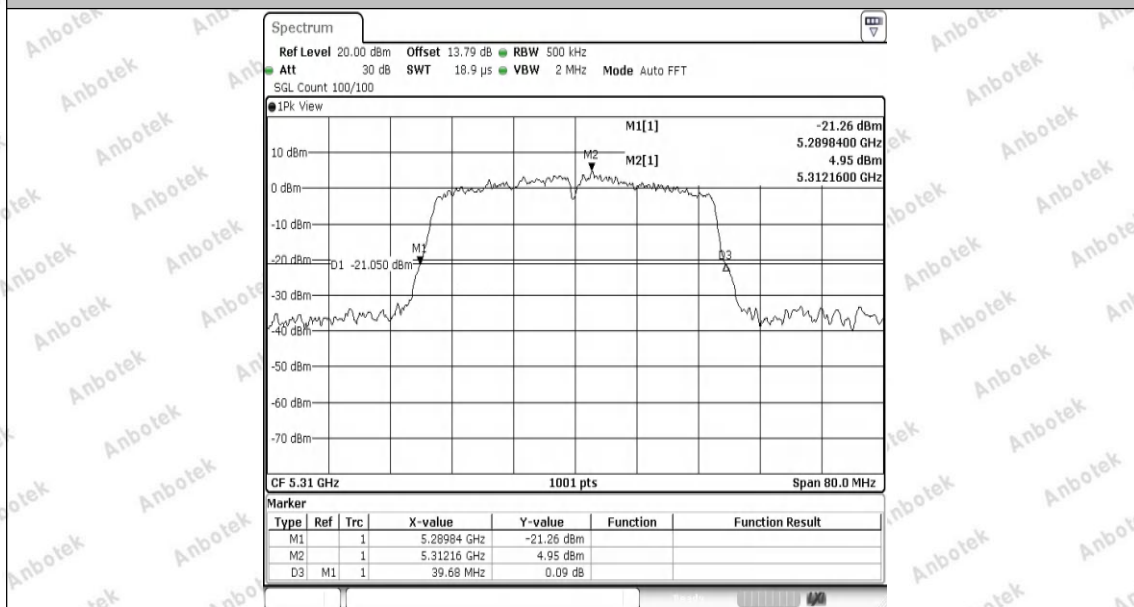

11N40SISO-Ant1-5310



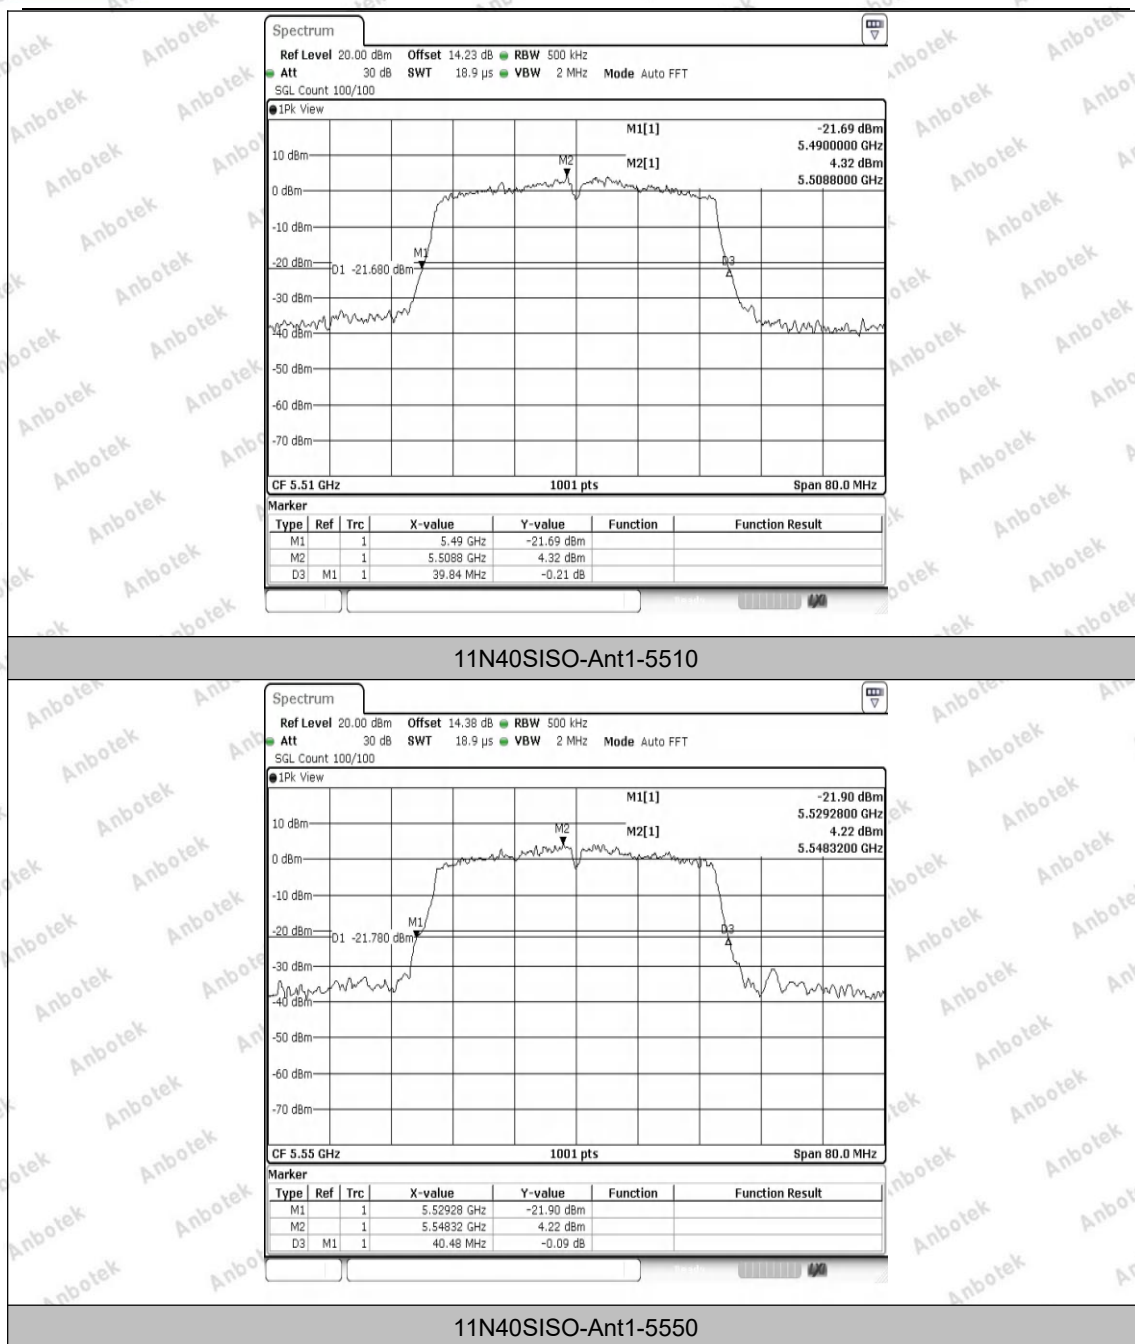


Shenzhen Anbotek Compliance Laboratory Limited


Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hahqcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China,
Tel: (86) 0755-26066440 Email: service@anbotek.com




Hotline
400-003-0500
www.anbotek.com




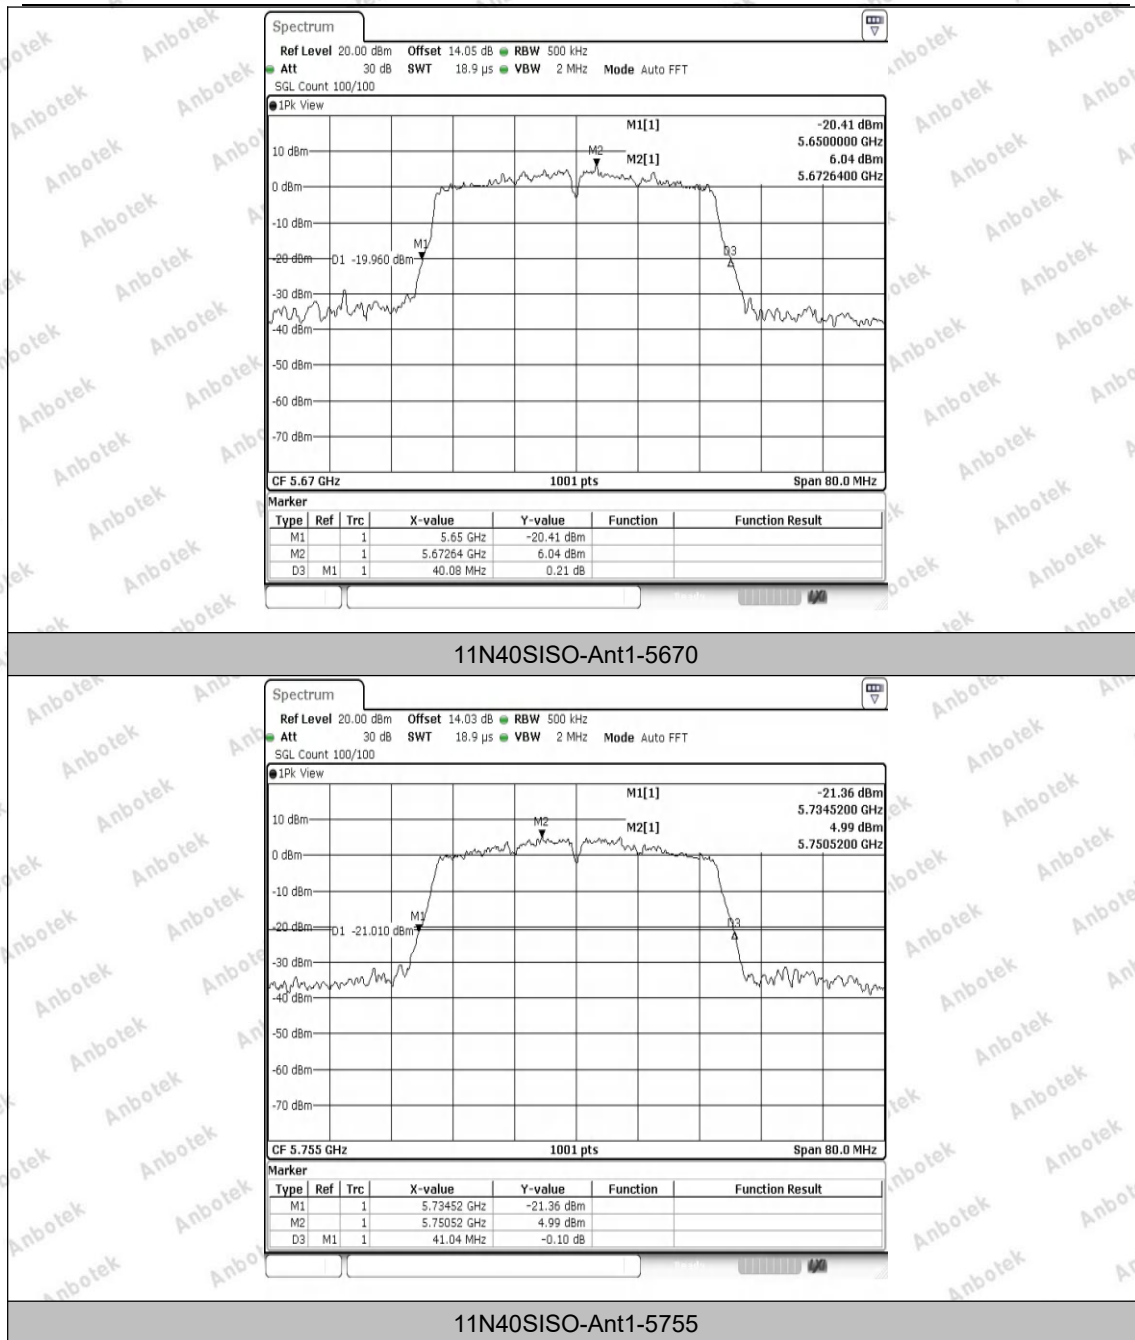

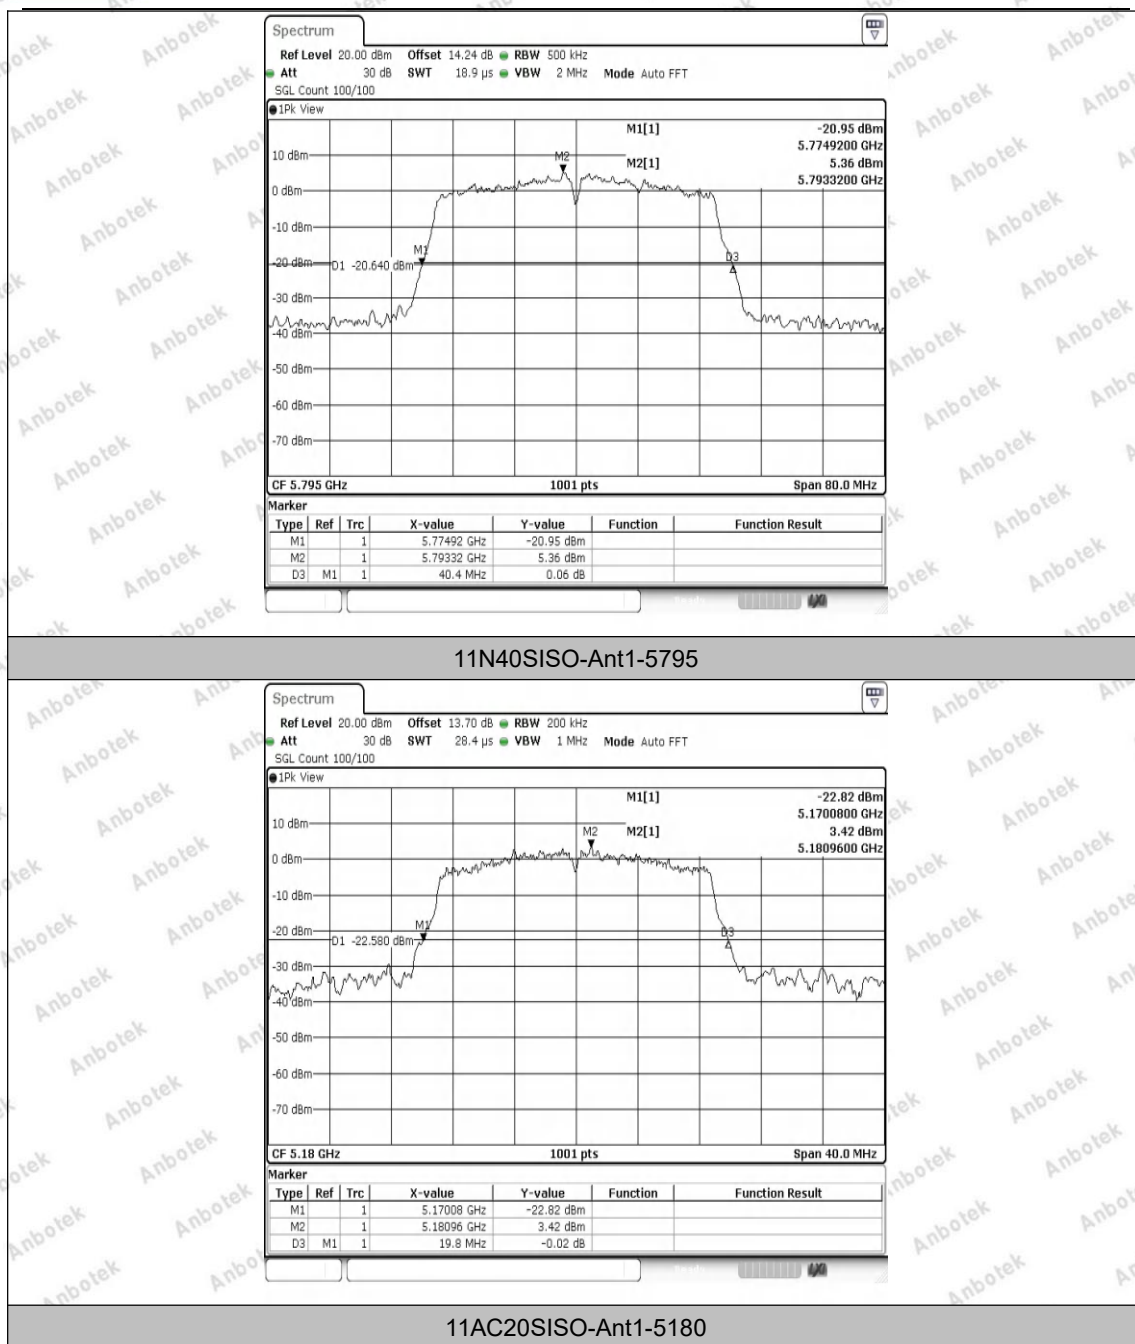

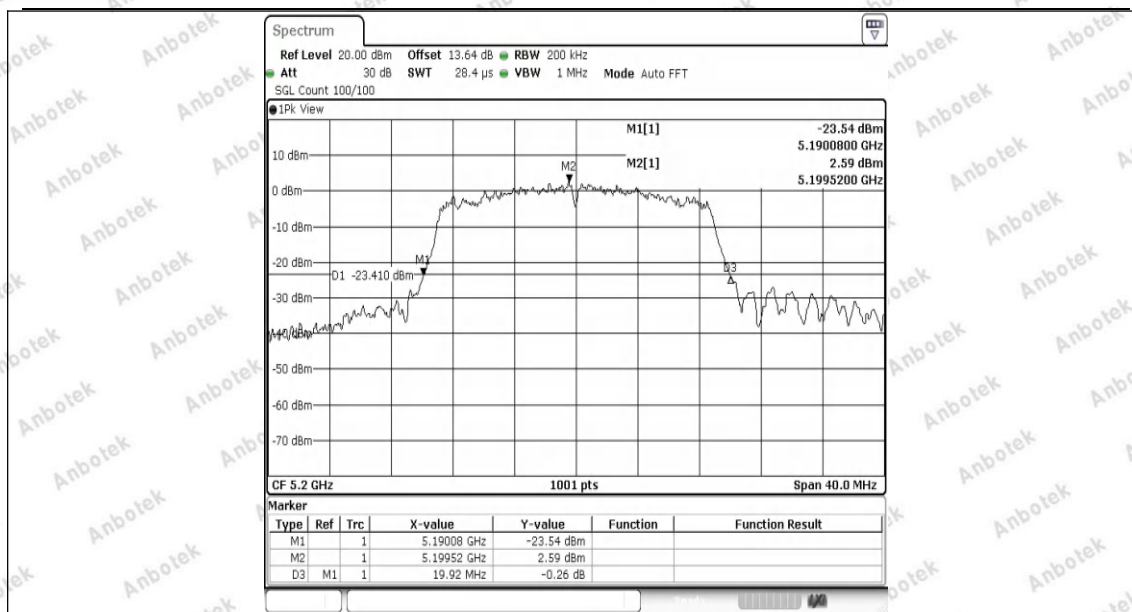



11AC20SISO-Ant1-5200

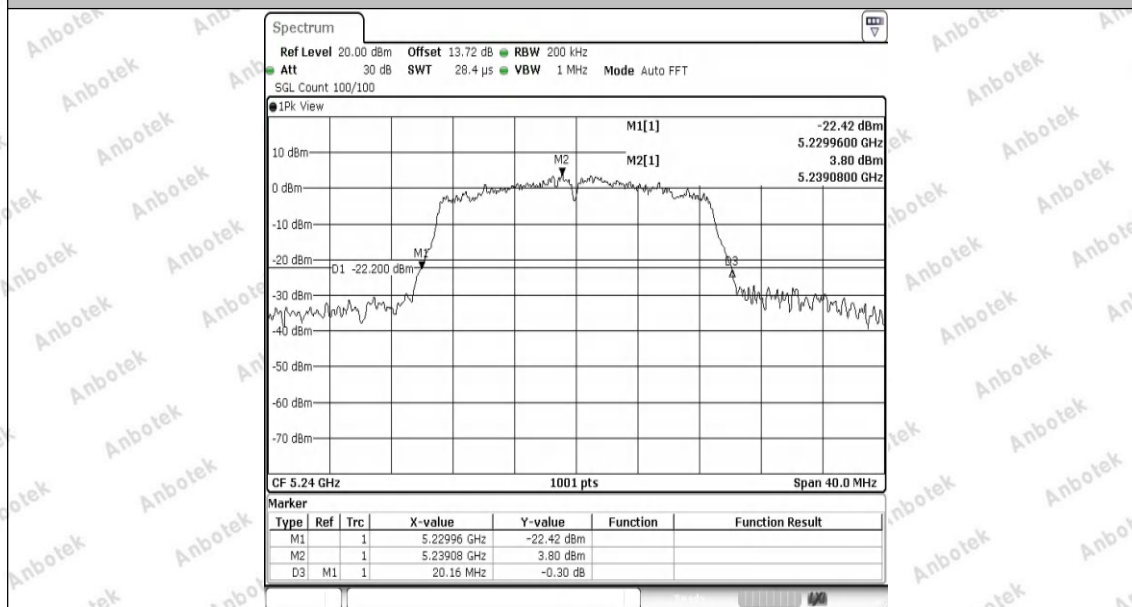


11AC20SISO-Ant1-5240



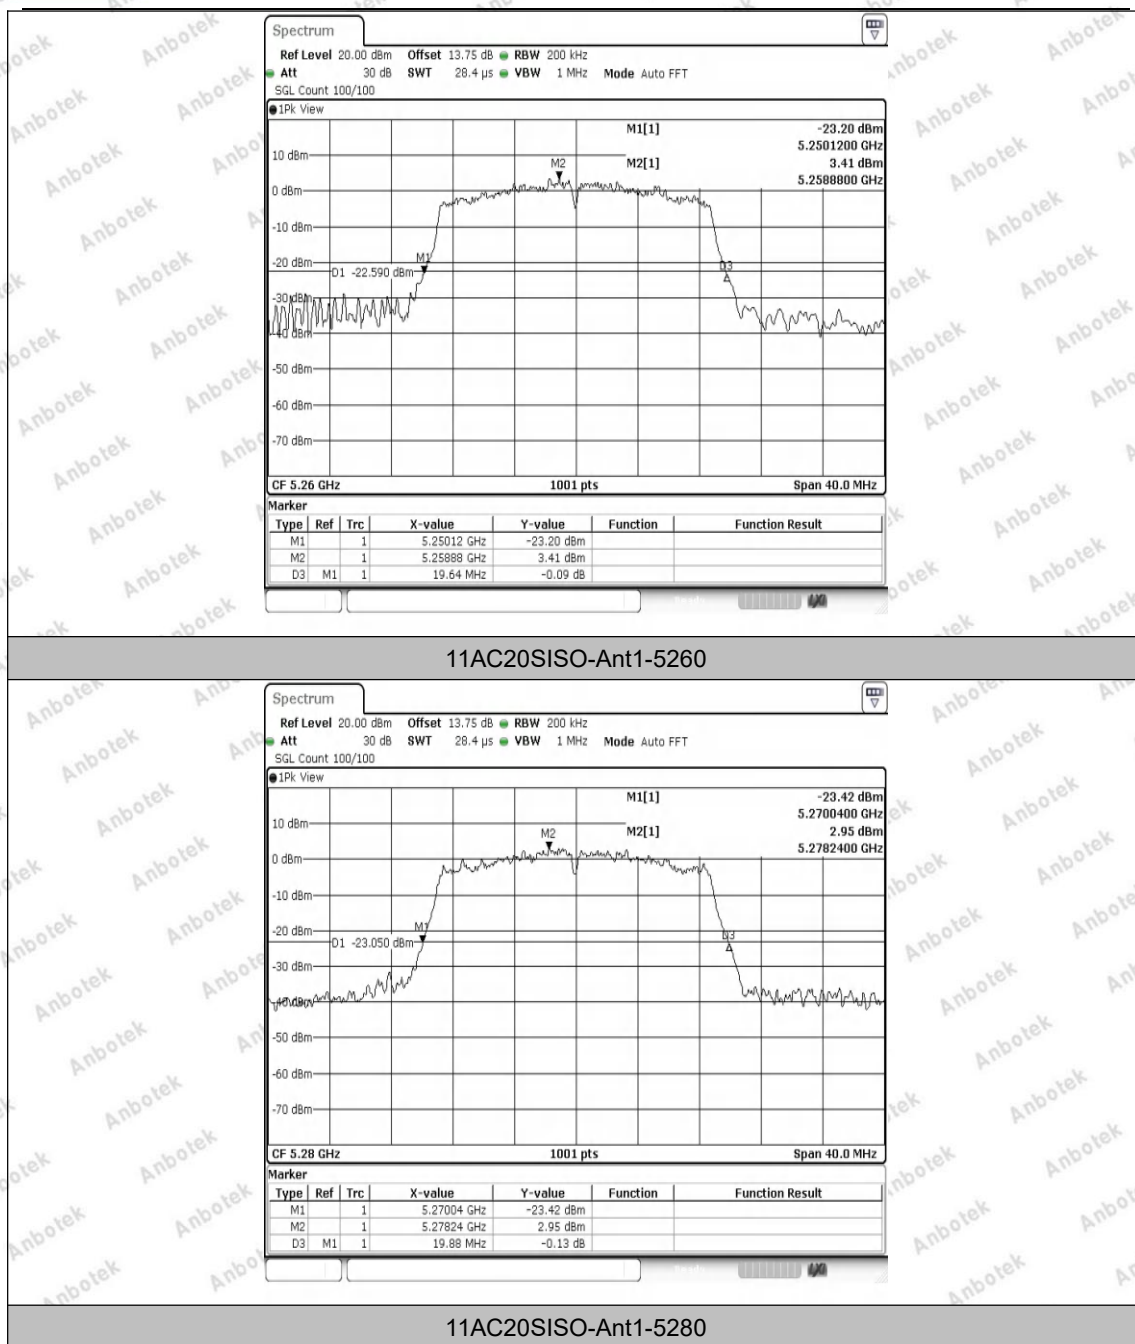

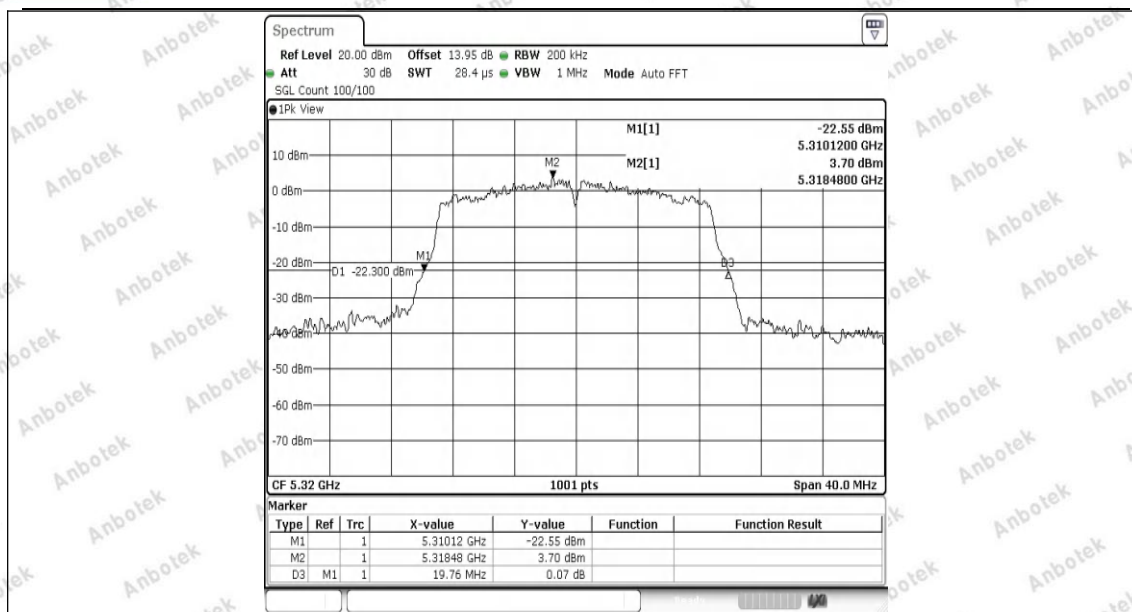


11AC20SISO-Ant1-5320

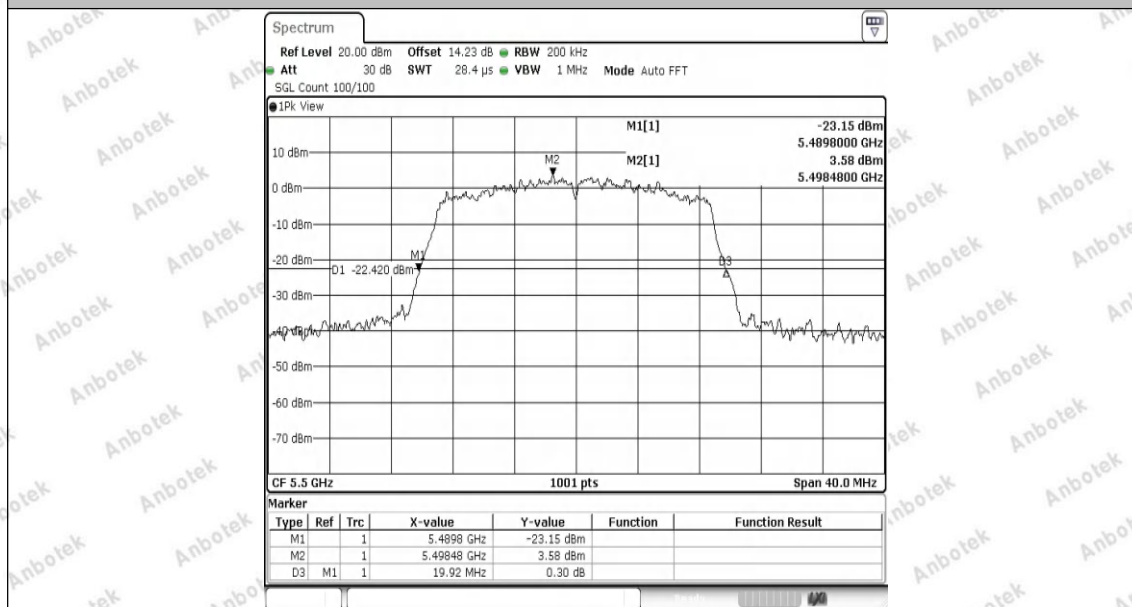


11AC20SISO-Ant1-5500



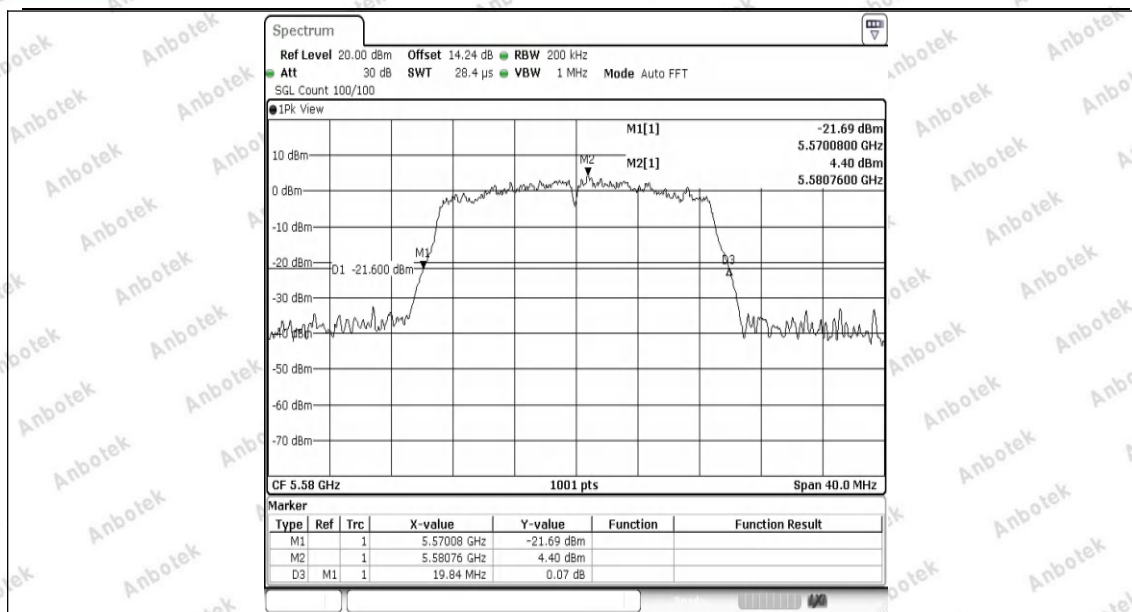


11AC20SISO-Ant1-5580

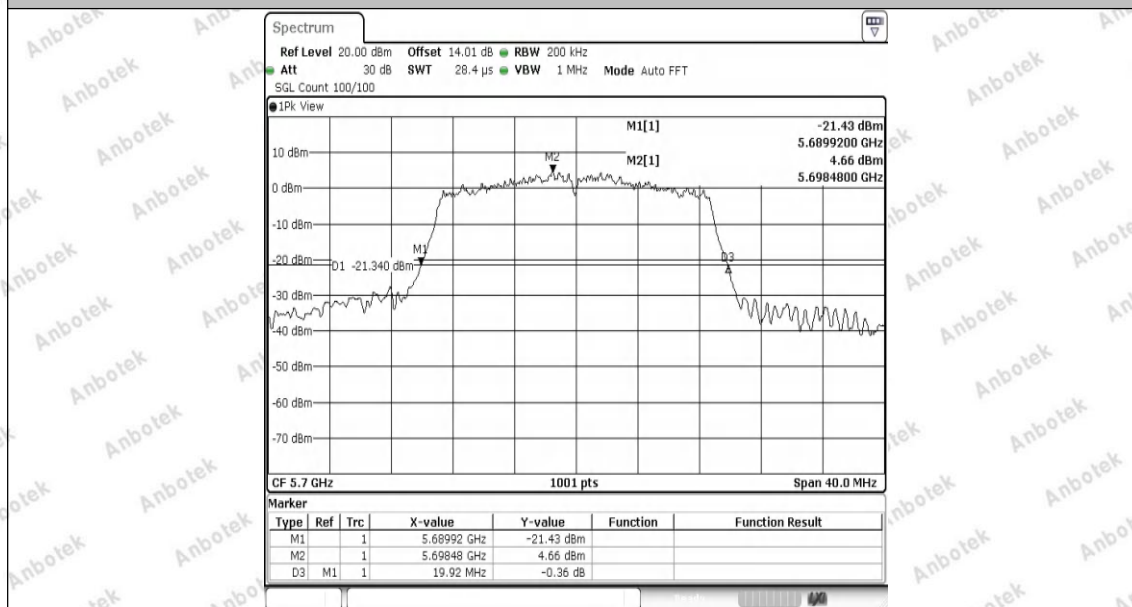


11AC20SISO-Ant1-5700



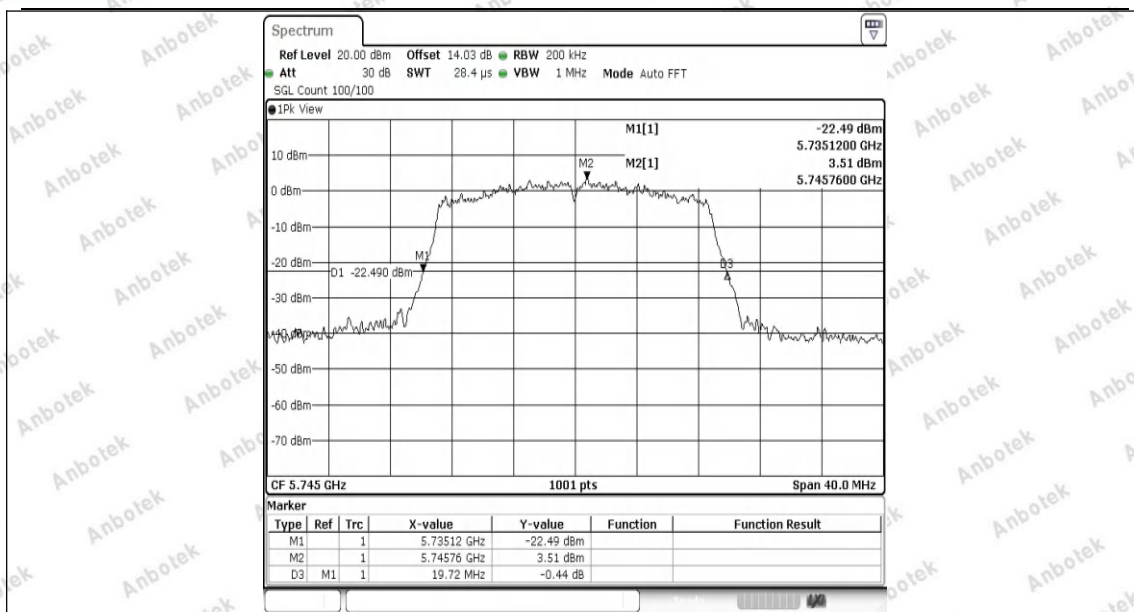


11AC20SISO-Ant1-5745

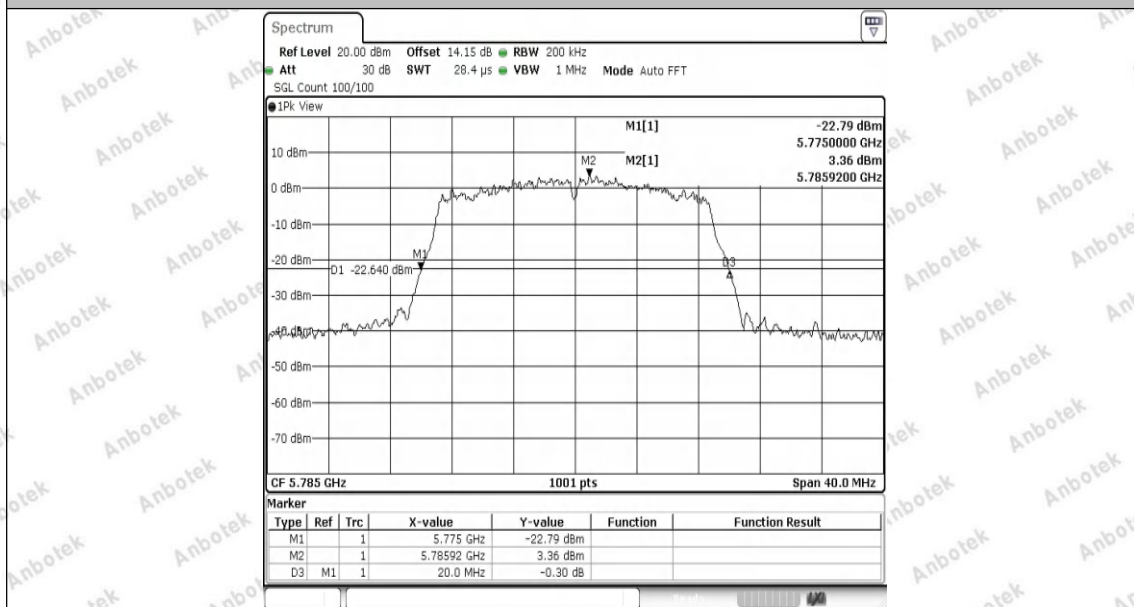


11AC20SISO-Ant1-5785



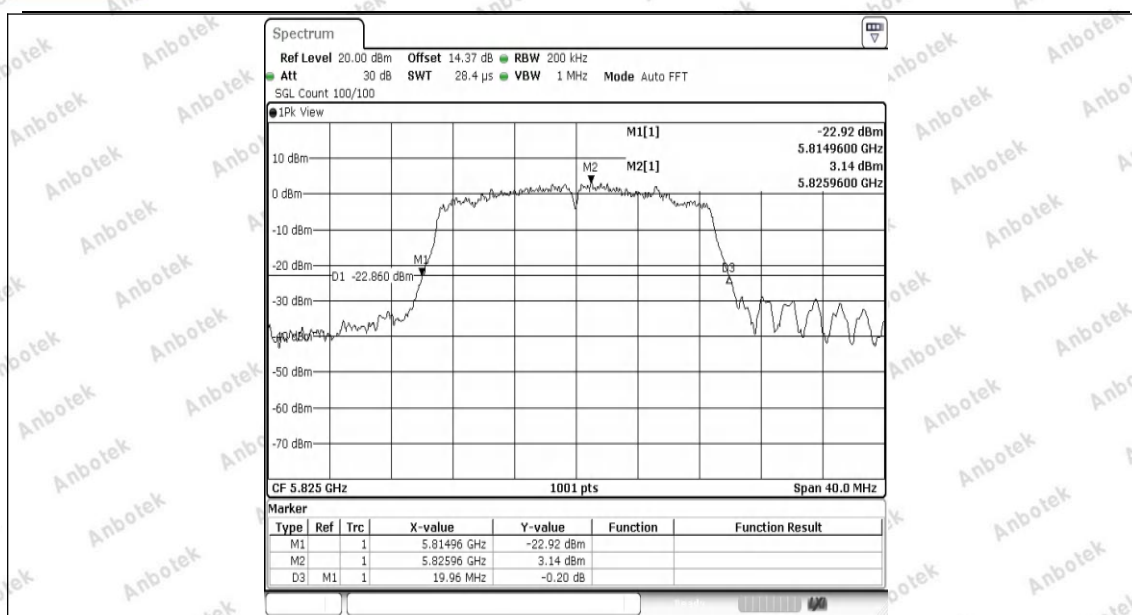


11AC20SISO-Ant1-5825

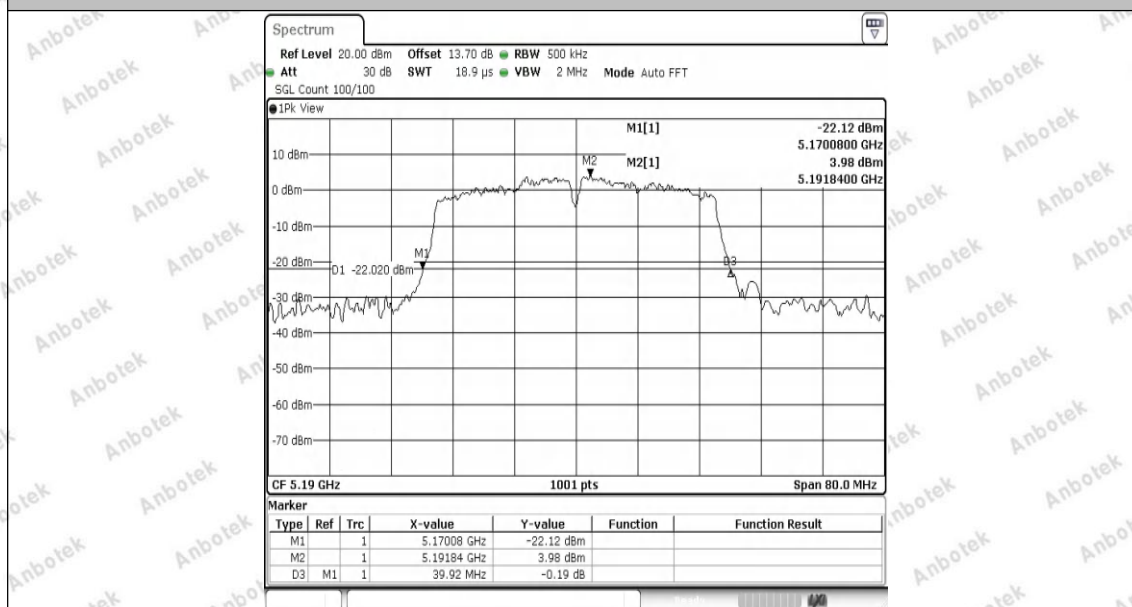


11AC40SISO-Ant1-5190



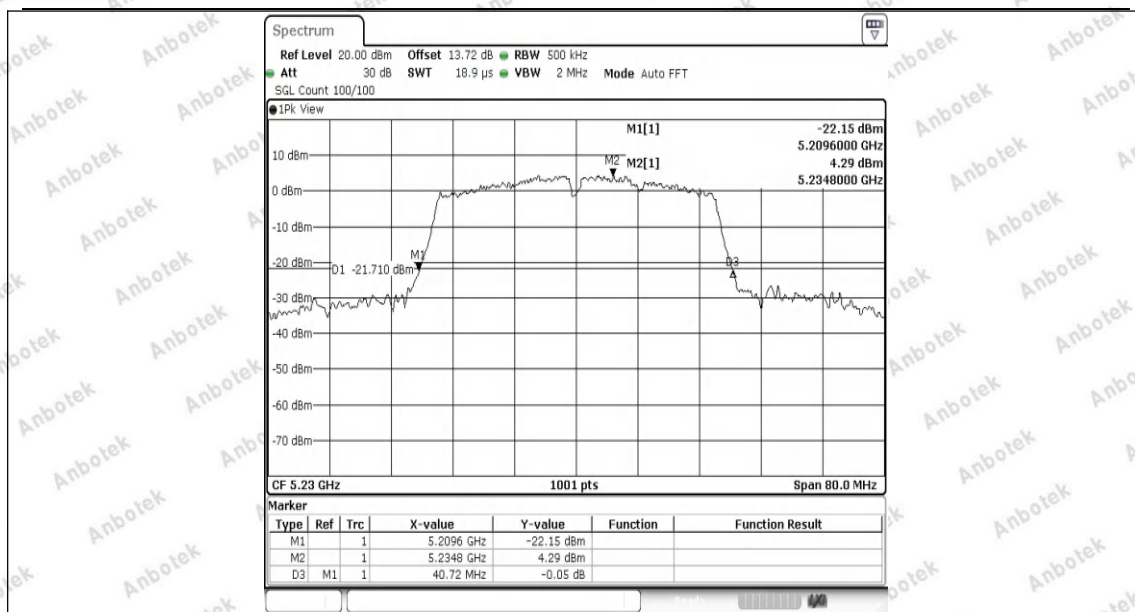


11AC40SISO-Ant1-5230

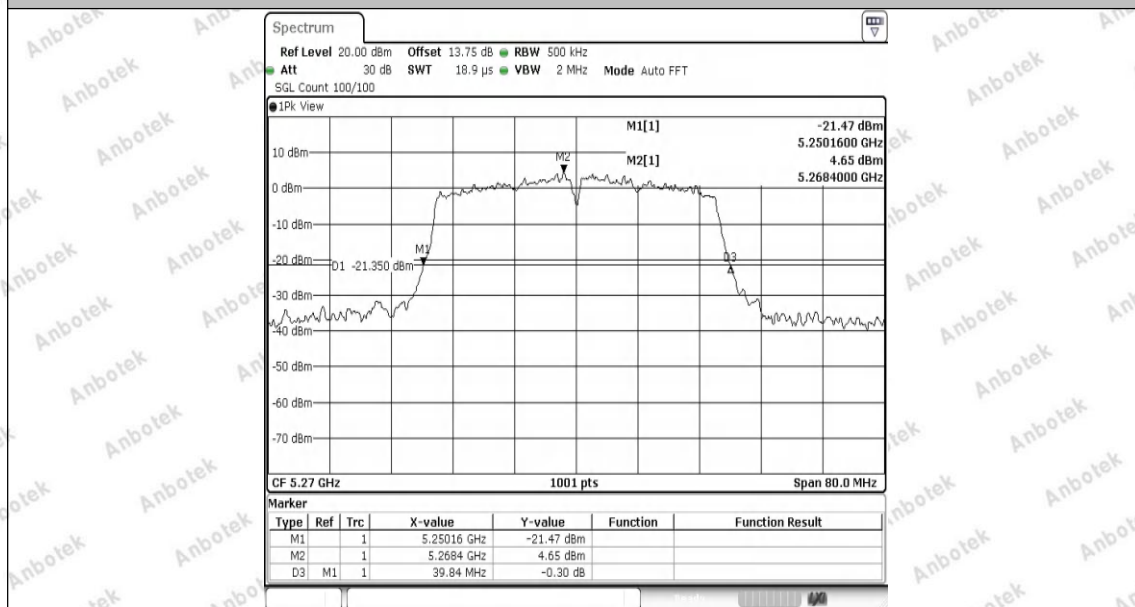


11AC40SISO-Ant1-5270



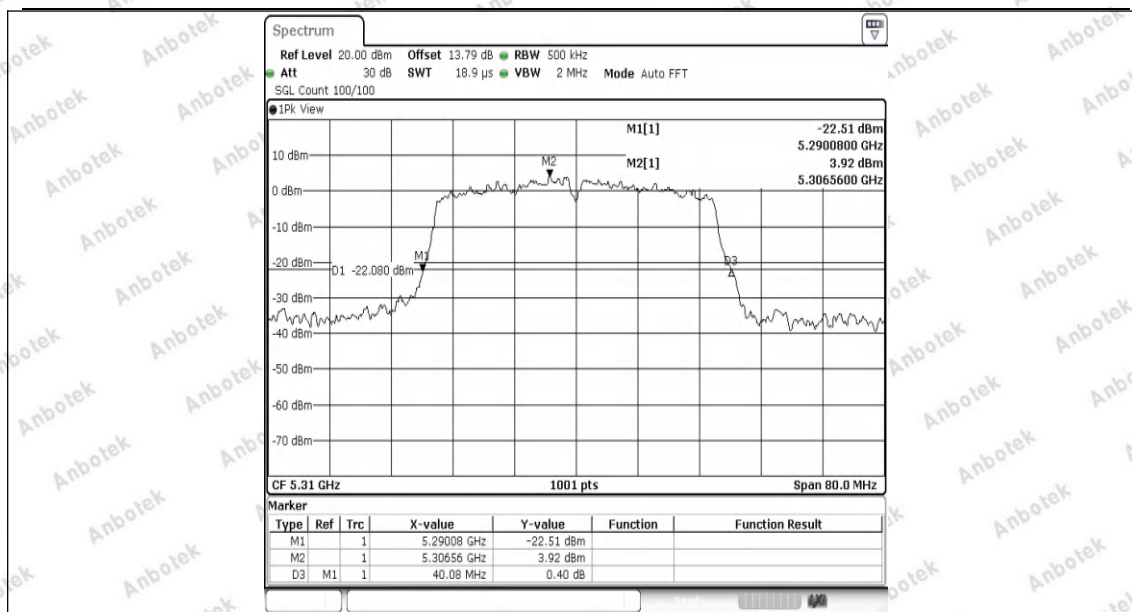


11AC40SISO-Ant1-5310

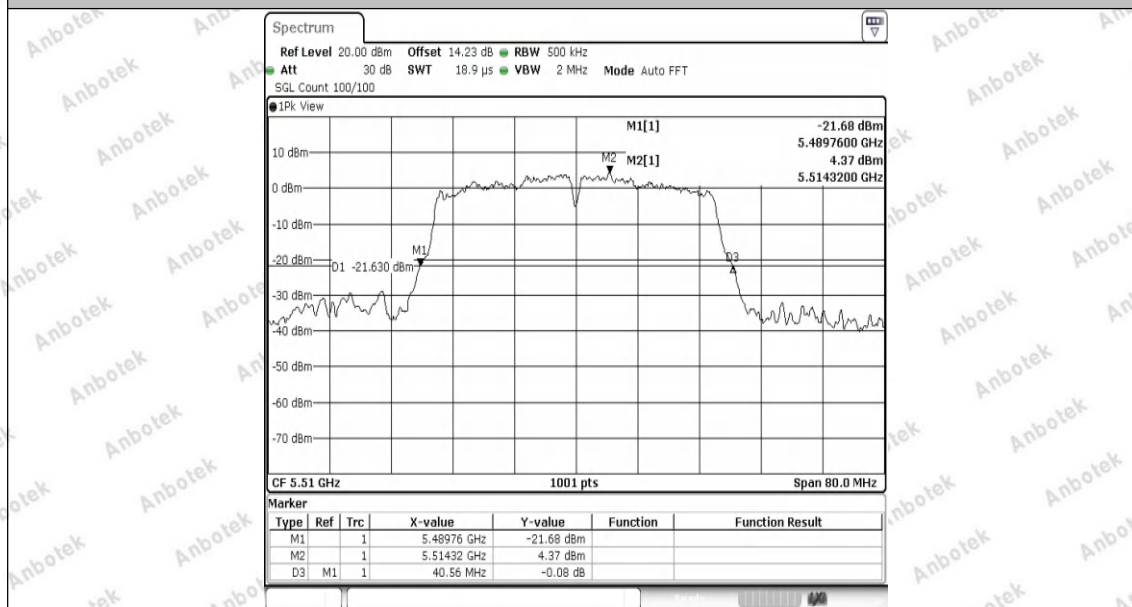


11AC40SISO-Ant1-5510



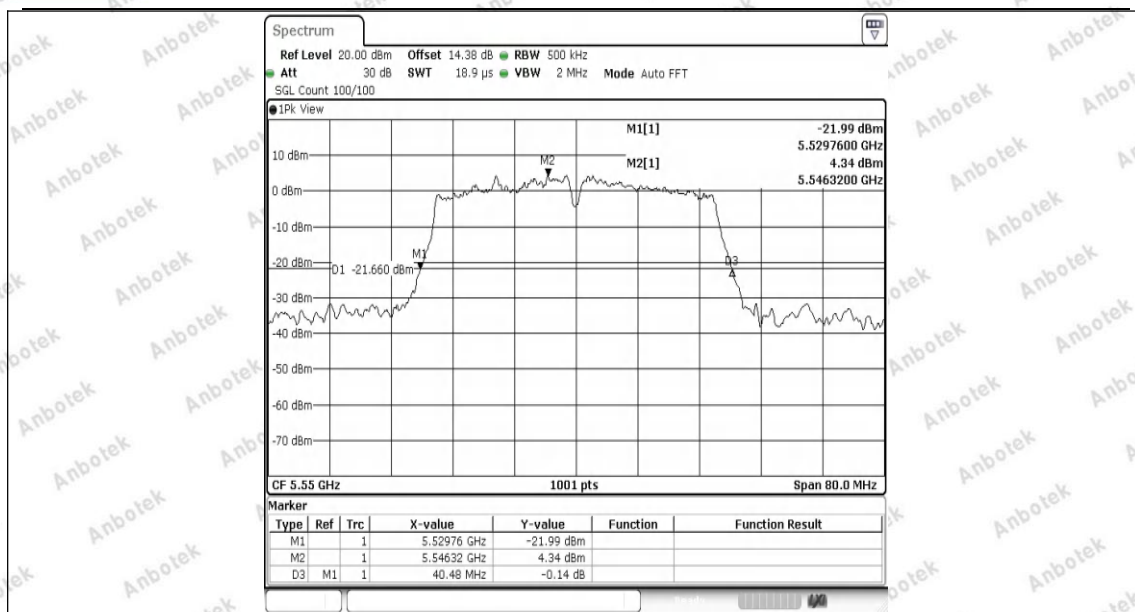


11AC40SISO-Ant1-5550

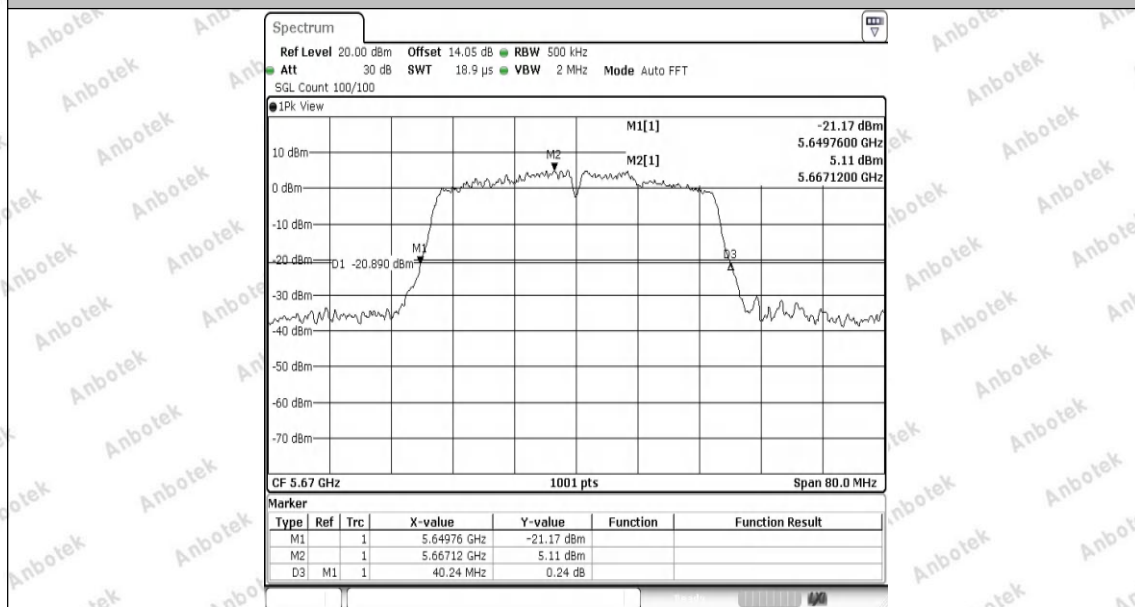


11AC40SISO-Ant1-5670



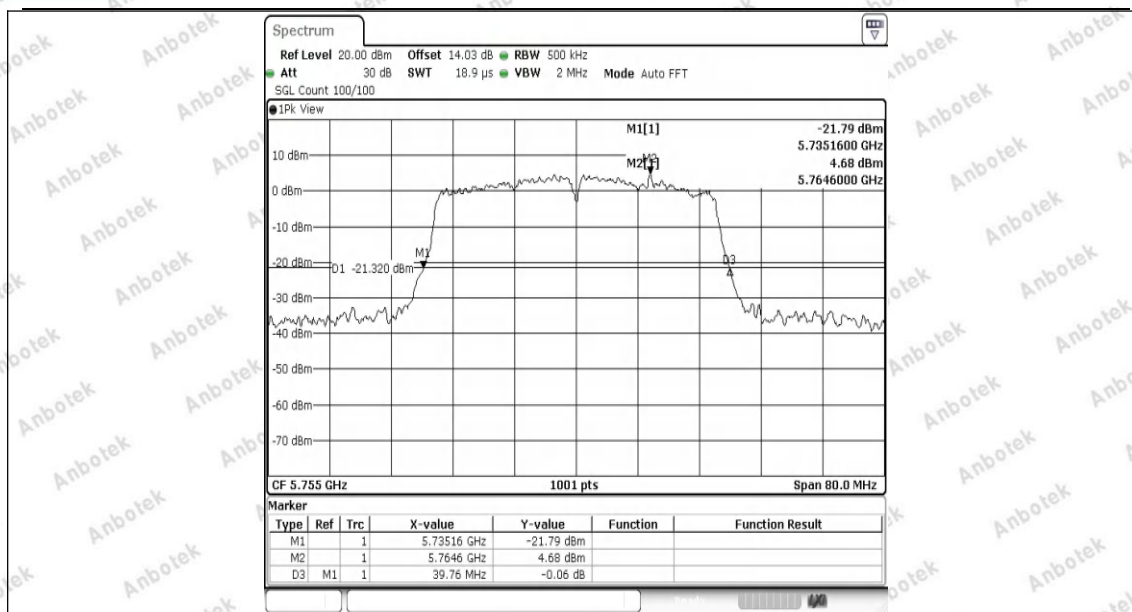


11AC40SISO-Ant1-5755

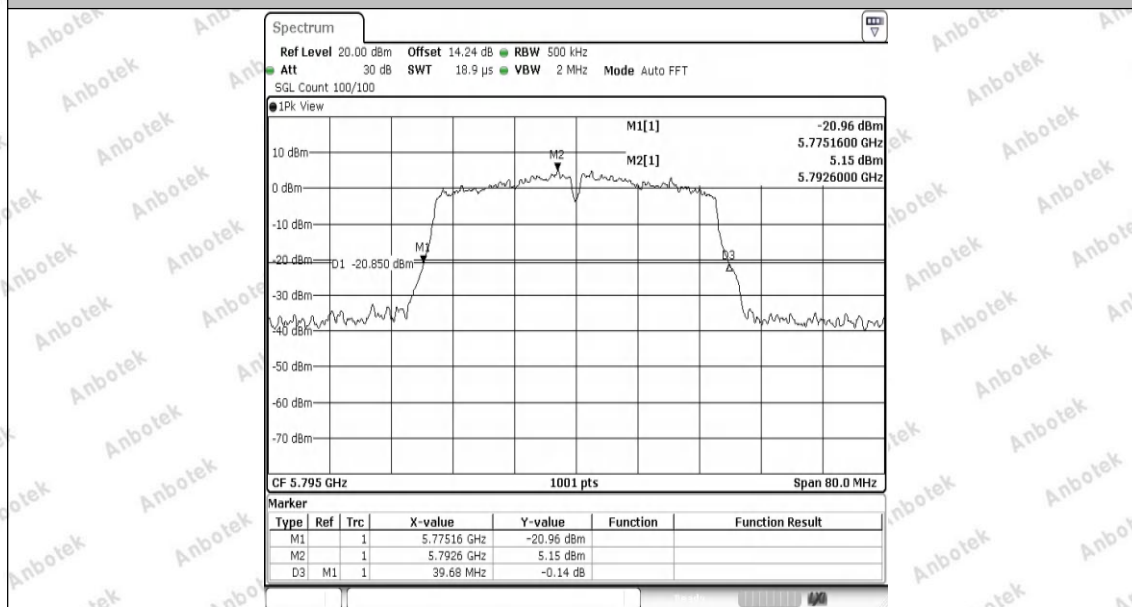


11AC40SISO-Ant1-5795



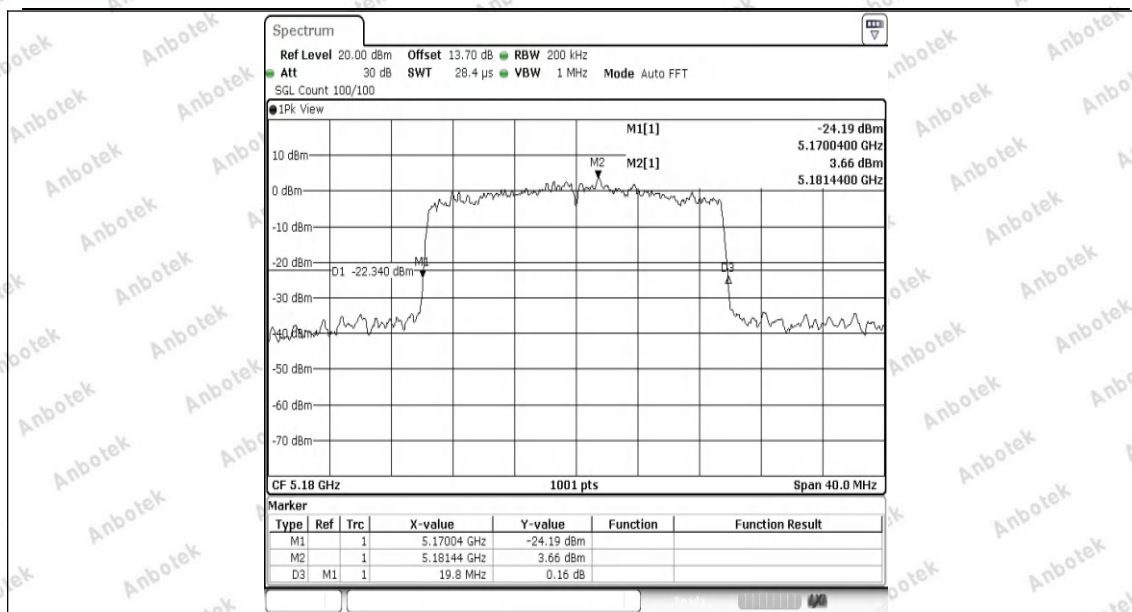


11AX20SISO-Ant1-5180

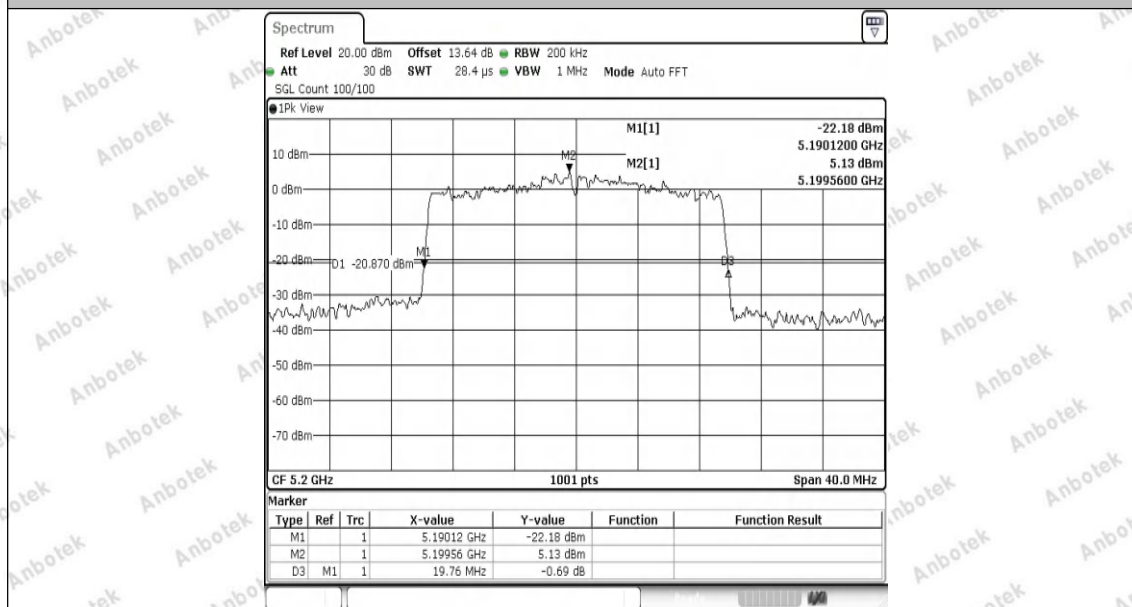


11AX20SISO-Ant1-5200



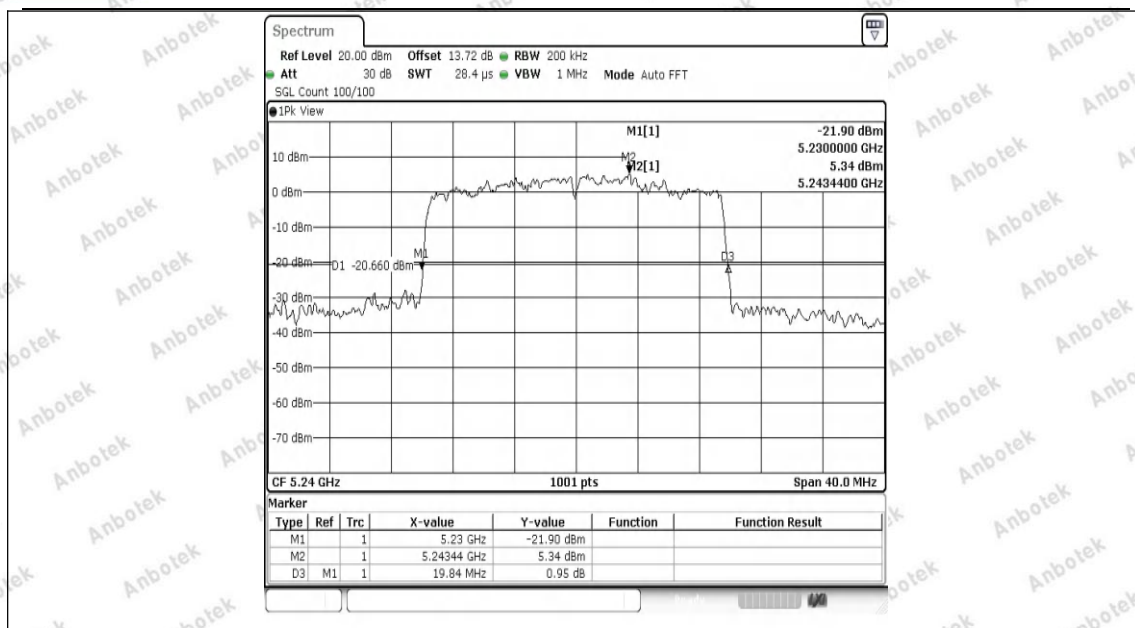


11AX20SISO-Ant1-5240

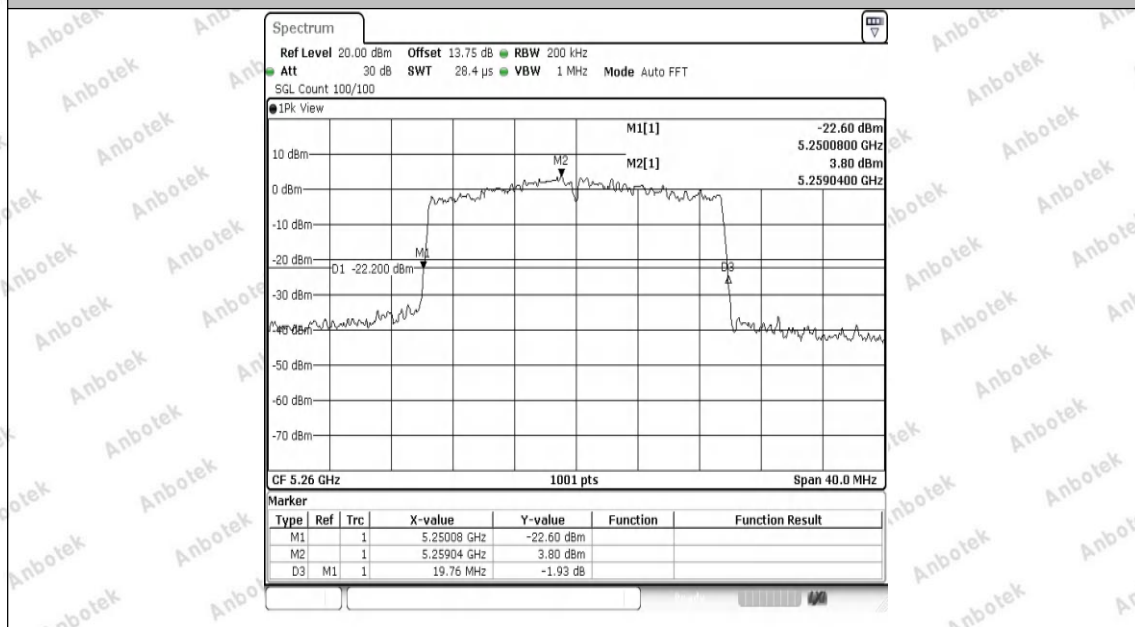


11AX20SISO-Ant1-5260



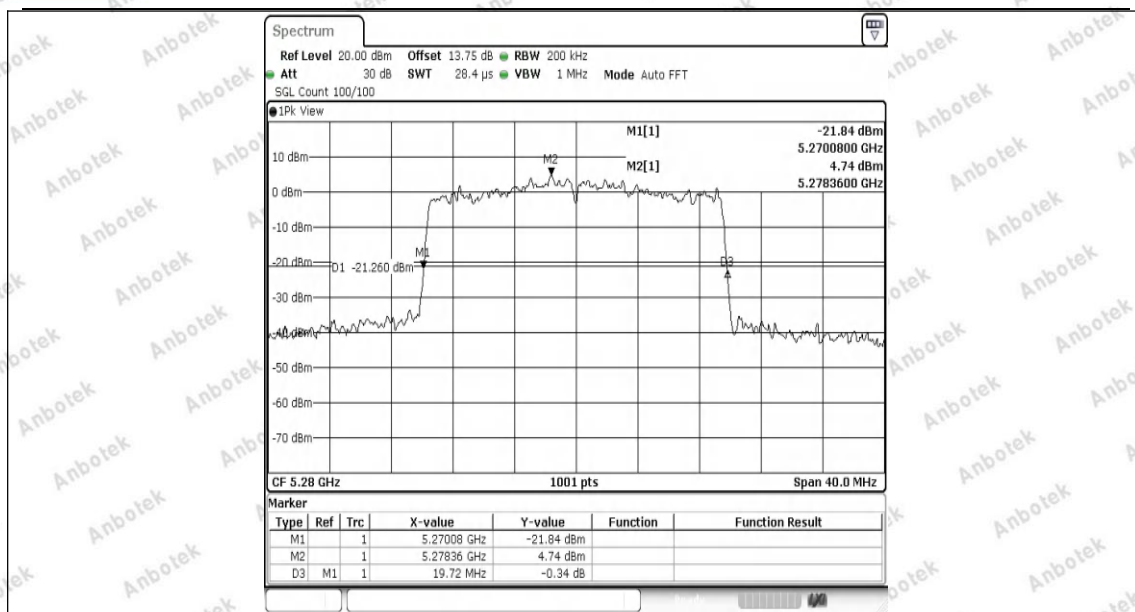


11AX20SISO-Ant1-5280

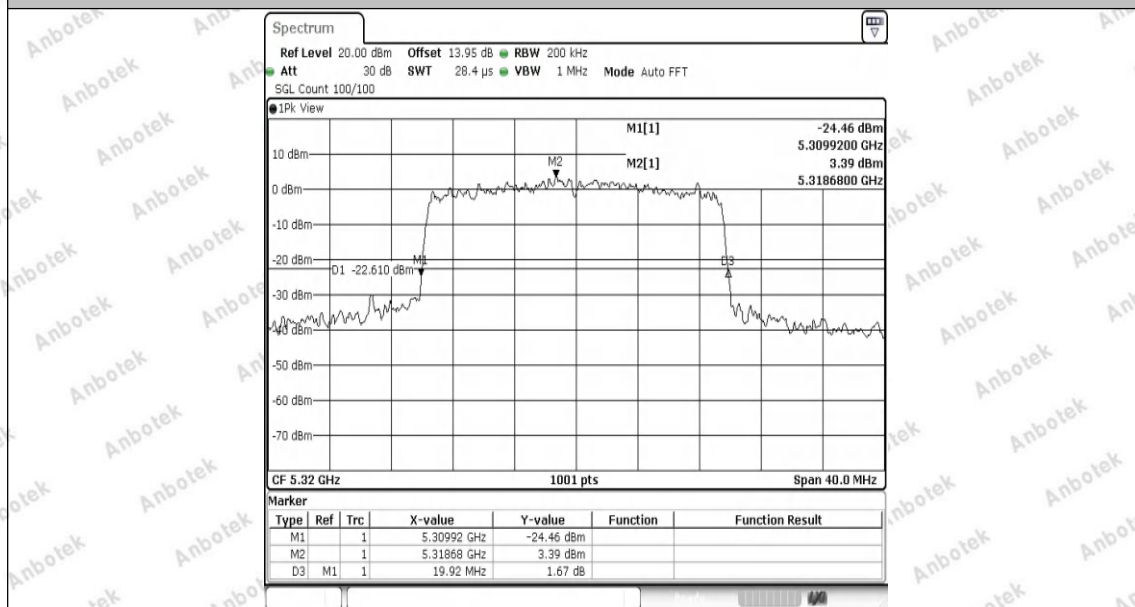


11AX20SISO-Ant1-5320



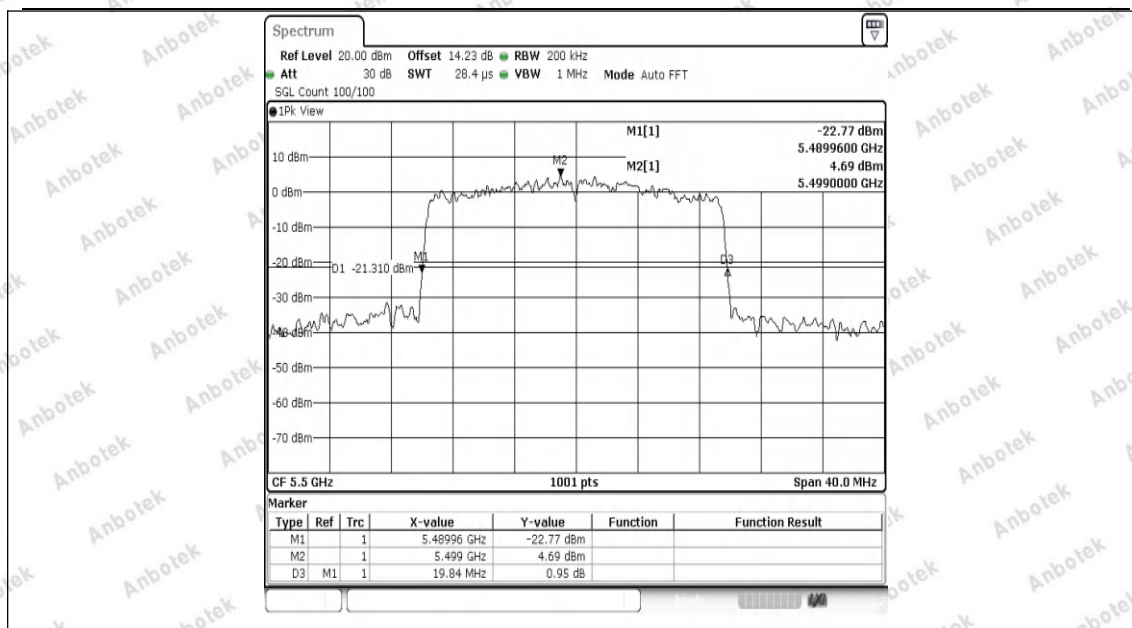


11AX20SISO-Ant1-5500

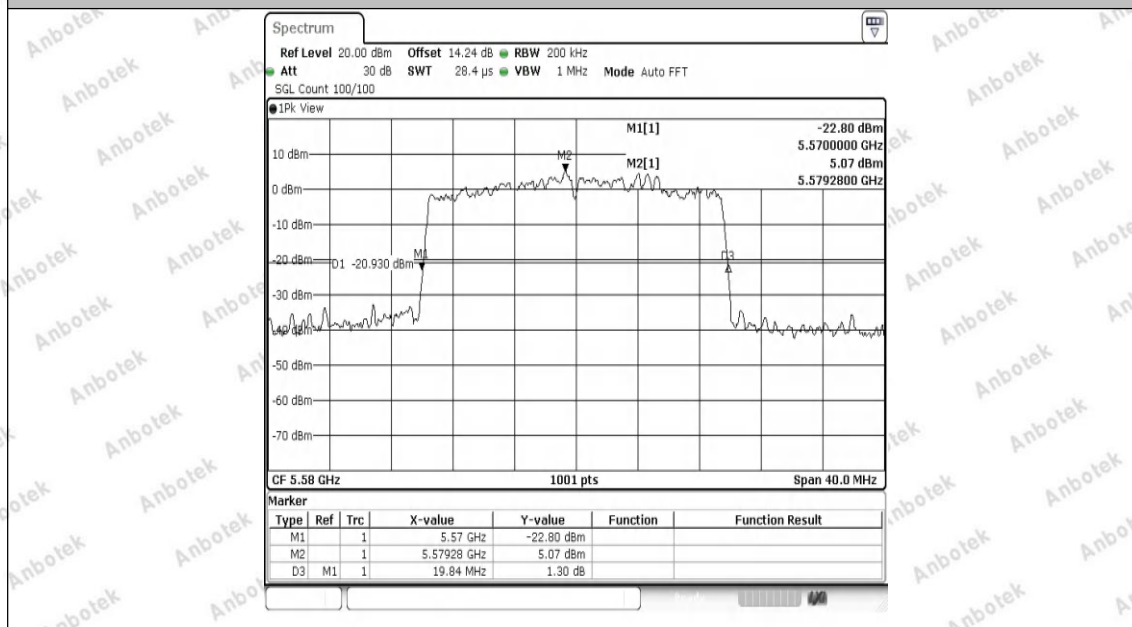


11AX20SISO-Ant1-5580



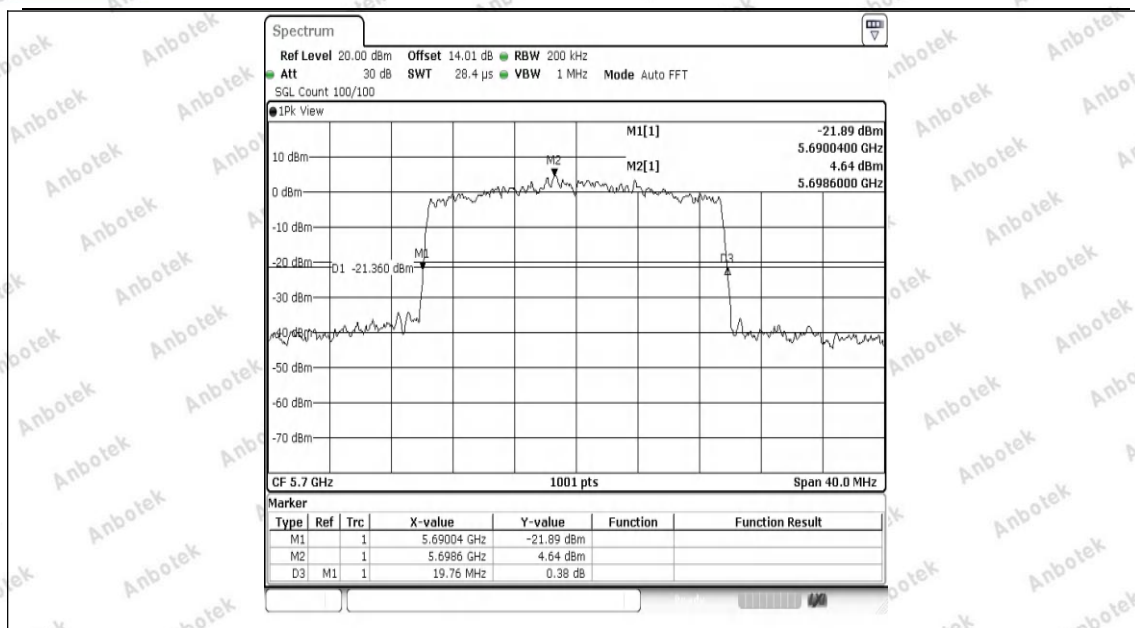


11AX20SISO-Ant1-5700

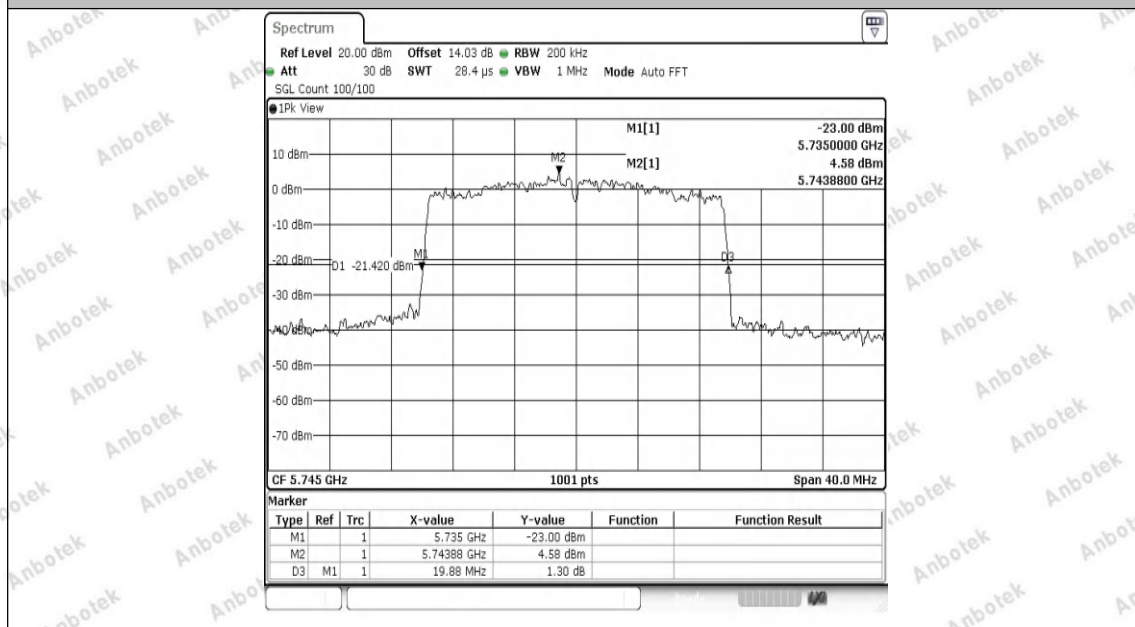


11AX20SISO-Ant1-5745



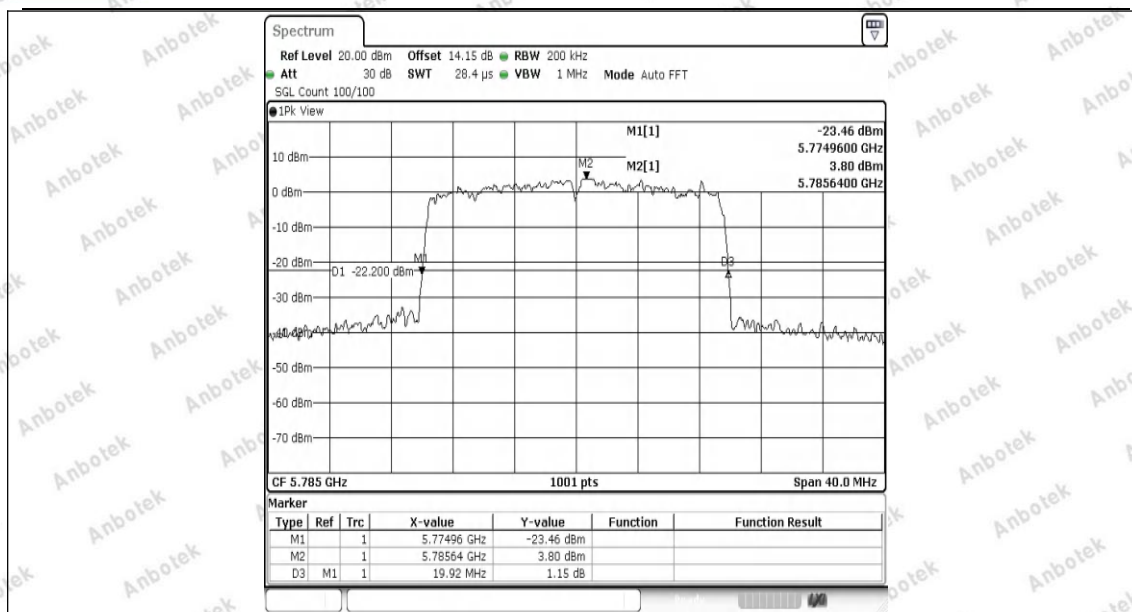


11AX20SISO-Ant1-5785

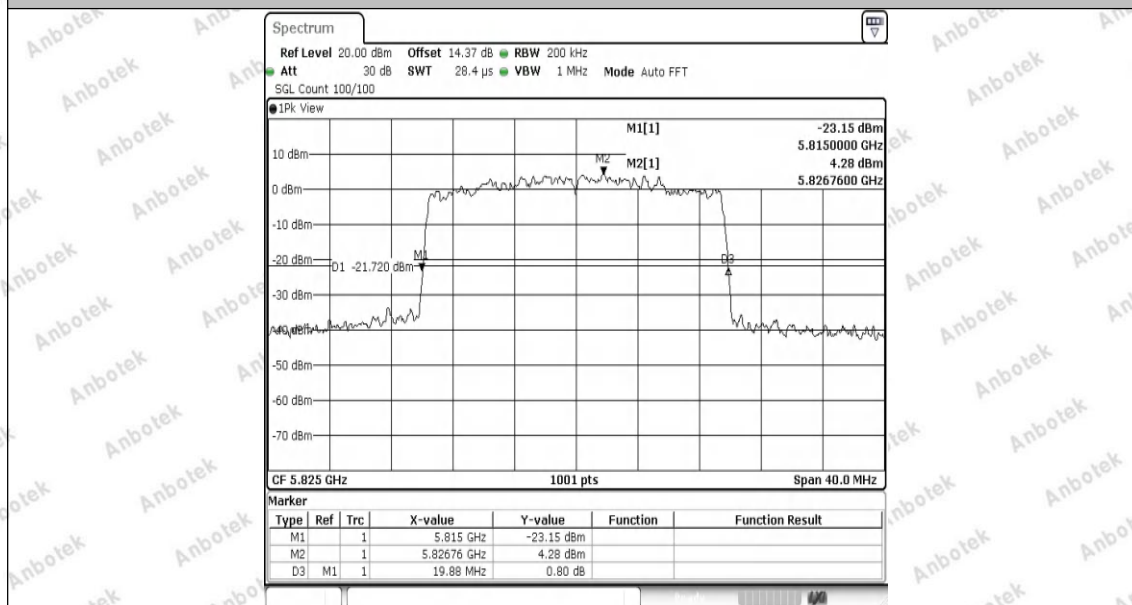


11AX20SISO-Ant1-5825



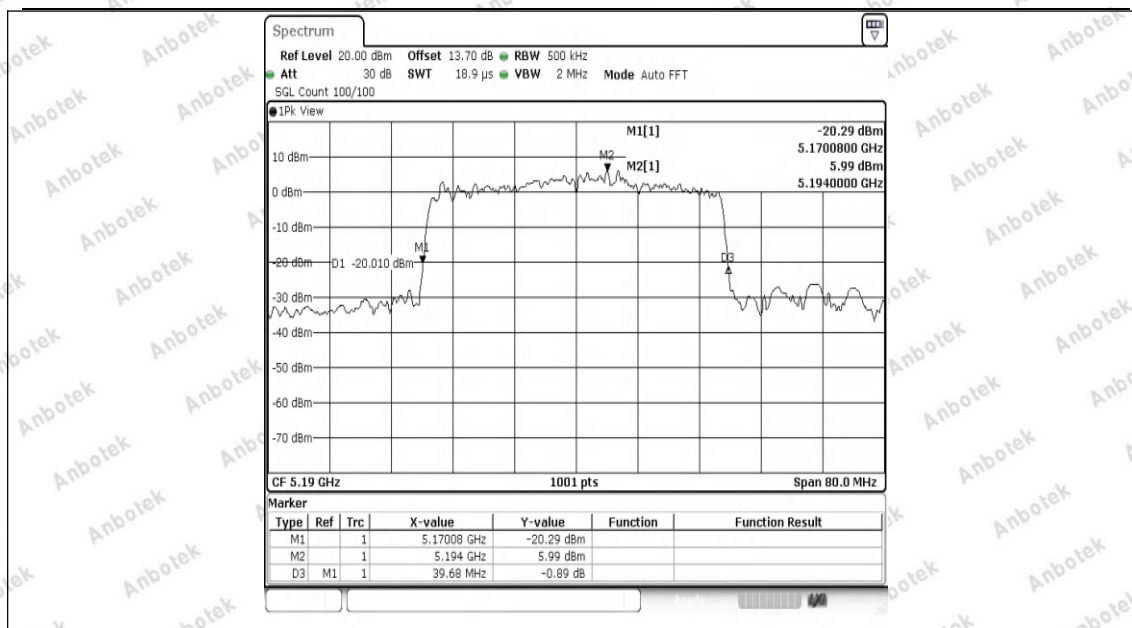


11AX40SISO-Ant1-5190

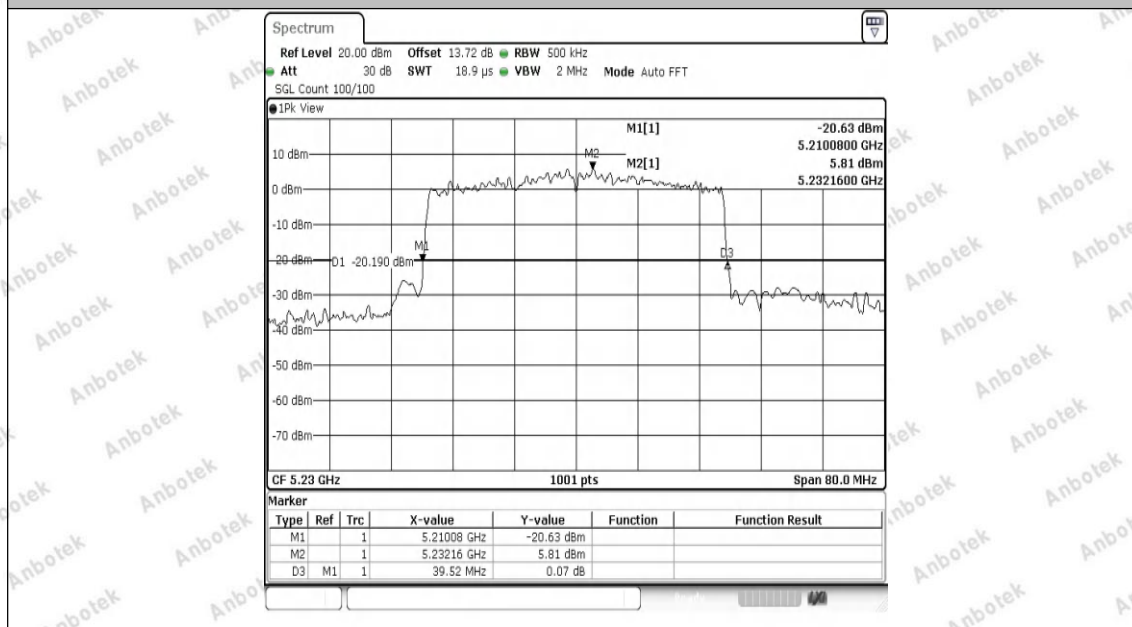


11AX40SISO-Ant1-5230



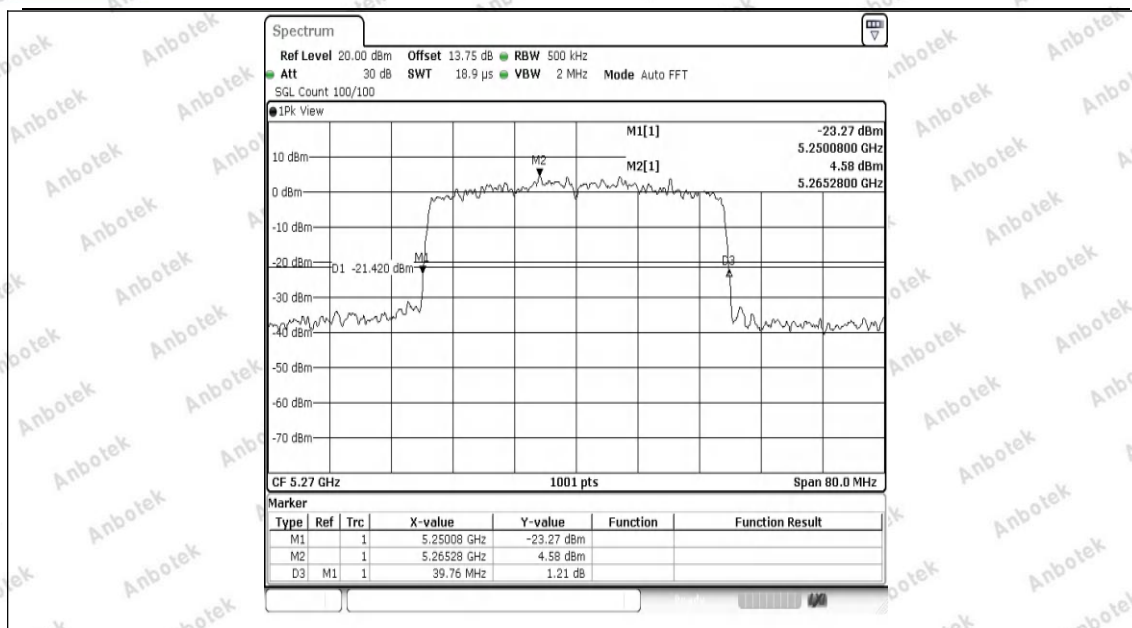


11AX40SISO-Ant1-5270

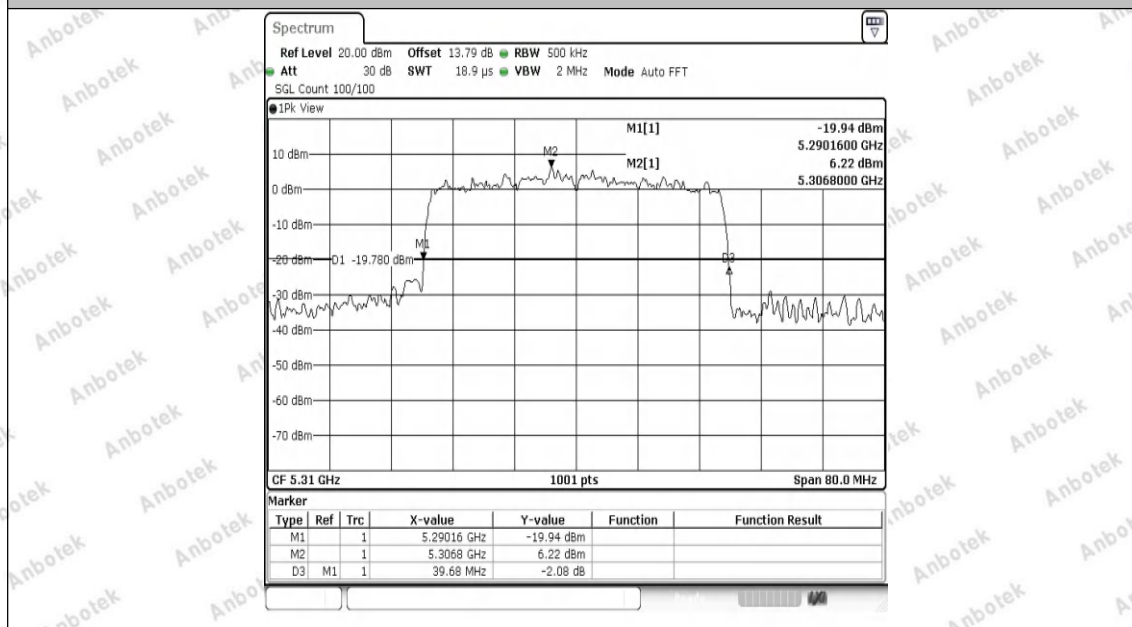


11AX40SISO-Ant1-5310



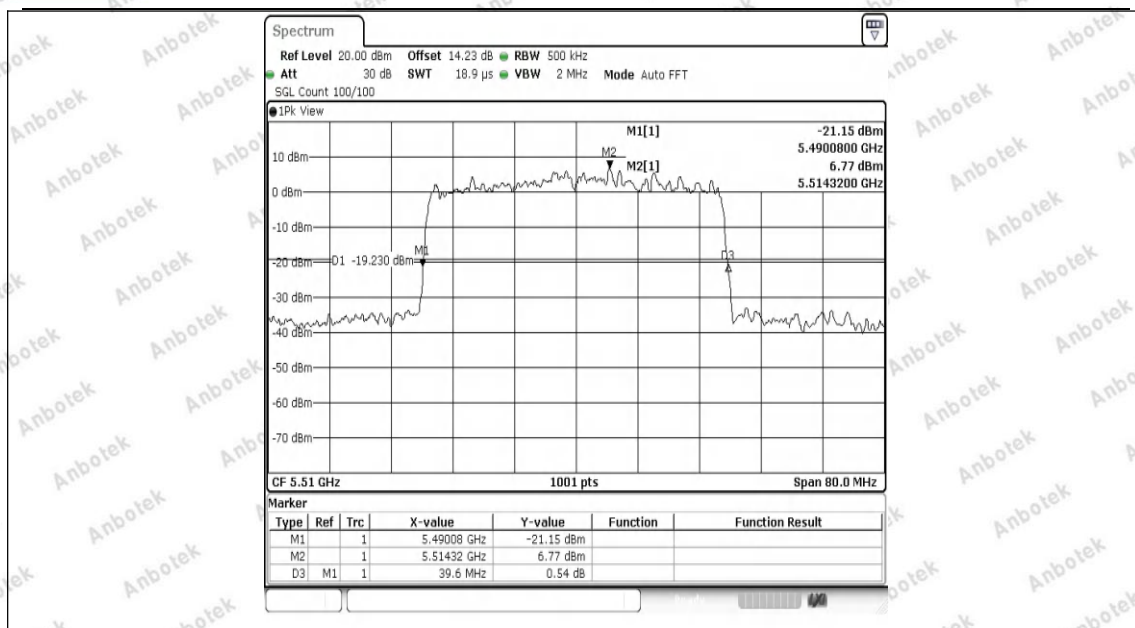


11AX40SISO-Ant1-5510

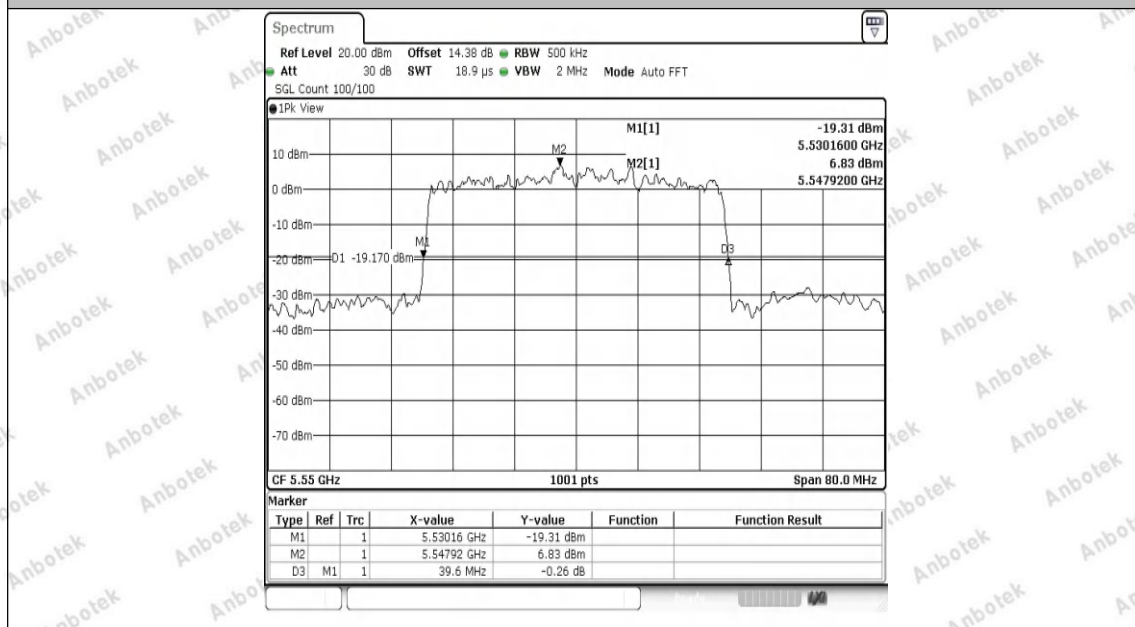


11AX40SISO-Ant1-5550



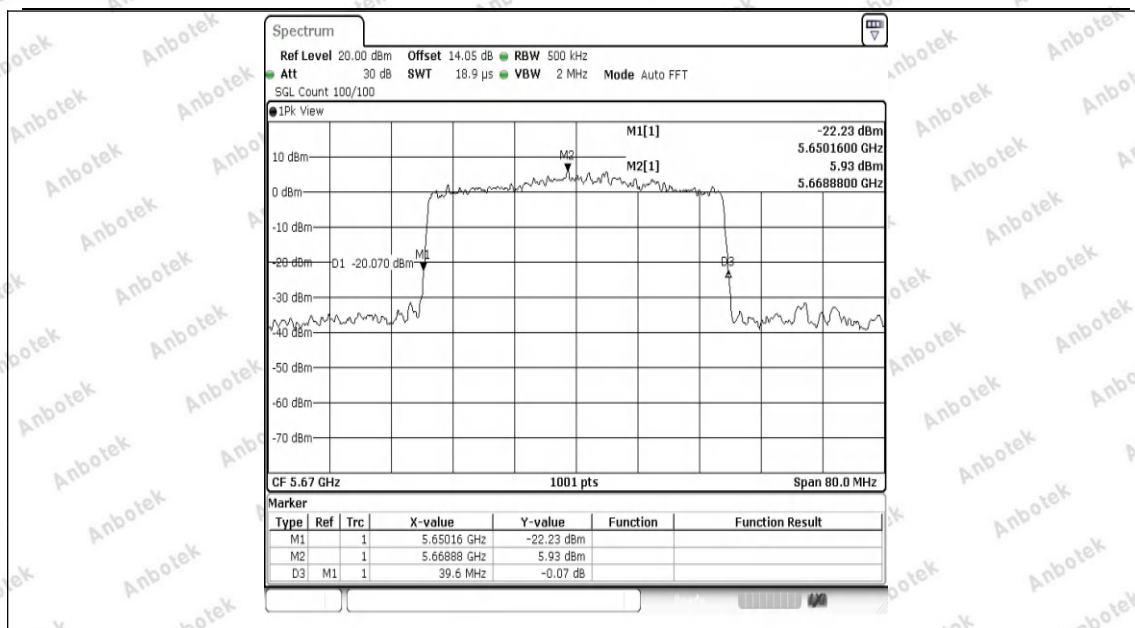

11AX40SISO-Ant1-5670

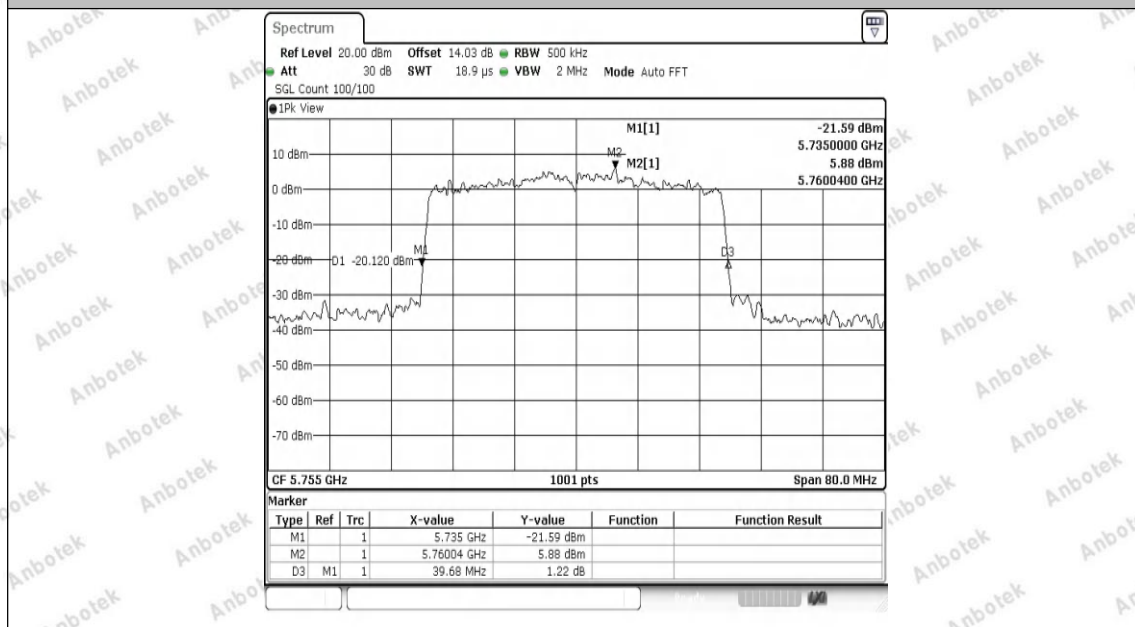

11AX40SISO-Ant1-5755

