

FCC SAR Test Report

Shenzhen DO Intelligent Technology Co., Ltd **Applicant:** EUT Description: Smart Watch Model: Bright IDO Brand: FCC ID: 2AHFT8037 Standards: FCC 47CFR §2.1093 Date of Receipt: 2025/03/13 Date of Test: 2025/03/24 Date of Issue: 2025/03/28

TOWE. tested the above equipment in accordance with the requirements set forth in the above standards. The test results show that the equipment tested is capable of demonstrating compliance with the requirements as documented in this report.

the results documented in this report apply only the tested sample, under the conditions and modes of operation as described herein. It is the manufacturer's responsibility assure that additional production units of the model are manufactured with identical electrical and mechanical components. All sample tested were in good operating condition throughout the entire test program. Measurement Uncertainties are published for informational purposes only and were not taken into account unless noted otherwise. without written approval of TOWE, the test report shall not be reproduced except in full.

Huang Kun Approved By:

Li Wei **Reviewed By:**



Revision History

Rev.	Issue Date	Description	Revised by
01	2025/03/28	Original	Li Wei



Table of Contents

1	;	Summ	nary of Test Results	5
2	(Guida	ance Applied	6
3	I	Lab In	nformation	6
	3.1 3.2 3.3	Tes	ting Location It Facility / Accreditations bient Condition	6
4			Information	
	4.1		olicant	
	4.2 4.3		nufacturer	
5			uct Information	
6			cosure Limits	
7			luction	
-	' 7.1		R Definition	
8		-	Neasurements System1	-
	、 8.1		SAR Measurement Set-up	
	8.2		ield Probe	
	8.3		a Acquisition Electronics (DAE)1	
	8.4		antom	
	8.5 8.6		rice Holder	
		8.6.1	Power reference measurement	
	8	8.6.2	Area scan1	
		8.6.3	Zoom Scan1	
_		8.6.4	Power Drift Measurement	
9			Equipment list1	
10			neasurement variability1	
11	I	Descr	ription of Test Position1	8
	11.		Next to the Mouth Exposure Condition1	
	11.:	2 E	Extremity Exposure Condition1	8
12	;	Syste	m Verification1	9
	12.		Recipes for Tissue Simulate Liquid1	
	12.		Tissue Verification	
	12.	3 ເ 12.3.1	2 2 System Check	
		12.3.2	5	
13	(Condu	ucted Power2	
	13.	1 C	Conducted Power of BLE2	1
14	;	SAR E	Data Summary2	2
	14.	1 5	SAR Measurement Result of BLE	2
15	I	Meası	urement Uncertainty2	3
16	(Calibr	ration Certificate2	3
17	•	Test S	Setup Photos2	3
Ар	pe	ndix A	A: System Check Plots2	3
Ар	pe	ndix E	B: SAR Test Plots2	3
Ap	pe	ndix (C: Calibration certificate2	3

Tel.: +86-755-27212361 TOWE-QP-15-F05 Rev.1.1 All rights reserved. Unless otherwise specified, no part of this report may be reproduced or utilized in any part, form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from TOWE.



Appendix D: Test Setup Photos......23



1 Summary of Test Results

Dand	Highest SAR(W/kg)		
Band	Next to the Mouth 1g	Extremity 10g	
BLE	0.02	0.03	
SAR Limited(W/kg)	1.6	4.0	



2 Guidance Applied

FCC 47CFR §2.1093 ANSI/IEEE C95.1-1992 IEC/IEEE 62209-1528:2020 FCC KDB 447498 D01 General RF Exposure Guidance v06 FCC KDB 865664 D01 SAR Measurement 100 MHz to 6 GHz v01r04 FCC KDB 865664 D02 RF Exposure Reporting v01r02

3 Lab Information

3.1 Testing Location

These measurements tests were conducted at the Sushi TOWE Wireless Testing (Shenzhen) Co., Ltd. facility located at F401 and F101, Building E, Hongwei Industrial Zone, Liuxian 3rd Road, Bao'an District, Shenzhen, China. The measurement facility is compliant with the test site requirements specified in ANSI C63.4-2014 Tel.: +86-755-27212361

Contact Email: info@towewireless.com

3.2 Test Facility / Accreditations

A2LA (Certificate Number: 7088.01)

This laboratory is accredited in accordance with the recognized International Standard ISO/IEC 17025:2017 General requirements for the competence of testing and calibration laboratories. This accreditation demonstrates technical competence for a defined scope and the operation of a laboratory quality management system (refer to joint ISO-ILAC-IAF Communiqué dated April 2017).

FCC Designation No.: CN1353

Sushi TOWE Wireless Testing (Shenzhen) Co., Ltd. has been recognized as an accredited testing laboratory. Designation Number: CN1353.

ISED CAB identifier: CN0152

Sushi TOWE Wireless Testing (Shenzhen) Co., Ltd. has been recognized by ISED as an accredited testing laboratory.

CAB identifier: CN0152 Company Number: 31000

3.3 Ambient Condition

Temperature: 18°C~25°C Relative Humidity: 30%~75%

4 Client Information

4.1 Applicant

Applicant	Shenzhen DO Intelligent Technology Co., Ltd
Address	11th Floor, 3# Building, Guole Tech Park, Lirong Road, Dalang, Longhua District, Shenzhen, China

4.2 Manufacturer

Manufacturer	Shenzhen DO Intelligent Technology Co., Ltd
Address	11th Floor, 3# Building, Guole Tech Park, Lirong Road, Dalang, Longhua District, Shenzhen, China

4.3 Factory

Factory	Shenzhen DO Intelligent Technology Co., Ltd
Address	11th Floor, 3# Building, Guole Tech Park, Lirong Road, Dalang, Longhua District, Shenzhen, China

Sushi TOWE Wireless Testing(Shenzhen) Co., Ltd. Email: info@towewireless.com Tel.: +86-755-27212361 TOWE-QP-15-F05 Rev.1.1 All rights reserved. Unless otherwise specified, no part of this report may be reproduced or utilized in any part, form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from TOWE.



5 Product Information

EUT Description	Smart Watch			
Model	Bright	Bright		
Brand	IDO	IDO		
Hardware Version	Version V1.0			
Software Version	V1.1.2			
SN.	M-01			
Device Capabilities:				
Band Frequency Modulation Type Range (MHz)				
BLE	2400 ~ 2483.5	GFSK		
Antenna Type 🛛 External, 🖂 Integrated				
Remark: The above EUT's information was declared by applicant, please refer to the specifications or user manual for more detailed description.				

Antenna Locations:

Please see Appendix D.



6 **RF Exposure Limits**

Human Exposure	Uncontrolled Environment General Population (W/kg) or (mW/g)	Controlled Environment Occupational (W/kg) or (mW/g)
Spatial Peak SAR ¹ (Brain/Trunk)	1.6	8.0
Spatial Average SAR ² (Whole Body)	0.08	0.4
Spatial Peak SAR ³ (Hands/Feet/Ankle/Wrist)	4.0	20.0

Note:

1, The Spatial Peak value of the SAR averaged over any 1 gram of tissue (defined as a tissue volume in the shape of a cube) and over the appropriate averaging time.

2, The Spatial Average value of the SAR averaged over the whole body.

3, The Spatial Peak value of the SAR averaged over any 10 grams of tissue (defined as a tissue volume in the shape of a cube) and over the appropriate averaging time.

Uncontrolled Environments are defined as locations where there is the exposure of individuals who have no knowledge or control of their exposure. The general population/uncontrolled exposure limits are applicable to situations in which the general public may be exposed or in which persons who are exposed as a consequence of their employment may not be made fully aware of the potential for exposure or cannot exercise control over their exposure. Members of the general public would come under this category when exposure is not employment-related; for example, in the case of a wireless transmitter that exposes persons in its vicinity.

Controlled Environments are defined as locations where there is exposure that may be incurred by persons who are aware of the potential for exposure, (i.e. as a result of employment or occupation). In general, occupational/controlled exposure limits are applicable to situations in which persons are exposed as a consequence of their employment, who have been made fully aware of the potential for exposure and can exercise control over their exposure. The exposure category is also applicable when the exposure is of a transient nature due to incidental passage through a location where the exposure levels may be higher than the general population/uncontrolled limits, but the exposed person is fully aware of the potential for exposure and can exercise control over his or her exposure by leaving the area or by some other appropriate means.



7 Introduction

SAR is related to the rate at which energy is absorbed per unit mass in an object exposed to a radio field. The SAR distribution in a biological body is complicated and is usually carried out by experimental techniques or numerical modeling. The standard recommends limits for two tiers of groups, occupational/controlled and general population/uncontrolled, based on a person's awareness and ability to exercise control over his or her exposure. In general, occupational/controlled exposure limits are higher than the limits for general population/uncontrolled.

7.1 SAR Definition

The SAR definition is the time derivative (rate) of the incremental energy (dW) absorbed by (dissipated in) an incremental mass (dm) contained in a volume element (dv) of a given density (ρ). The equation description is as below:

$$SAR = \frac{d}{dt} \left(\frac{dW}{dm} \right) = \frac{d}{dt} \left(\frac{dW}{\rho dv} \right)$$

SAR is expressed in units of Watts per kilogram (W/kg):

$$SAR = \frac{\sigma E^2}{\rho}$$

Where:

 σ is the conductivity of the tissue material (S/m)


 ρ is the mass density of the tissue material (kg/m³)

E is the RMS electrical field strength (V/m)

8 SAR Measurements System 8.1 The SAR Measurement Set-up

GJUE

The DASY system used for performing compliance tests consists of the following items:

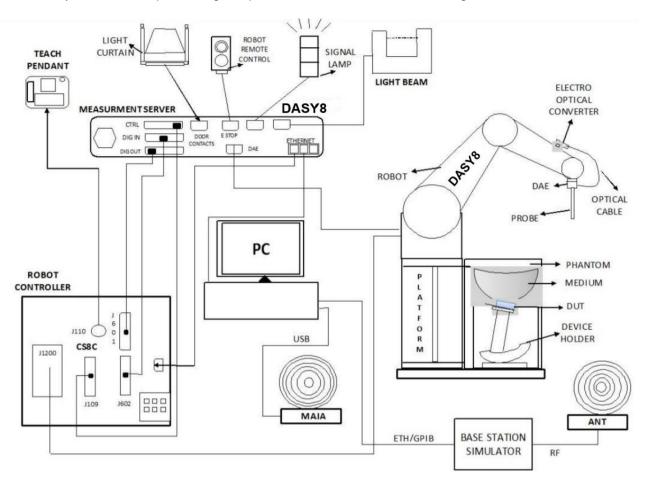

- A standard high precision 6-axis robot with controller, teach pendant and software. An arm extension for accommodating the data acquisition electronics (DAE).
- > An isotropic Field probe optimized and calibrated for the targeted measurement.
- A data acquisition electronics (DAE) which performs the signal amplification, signal multiplexing, ADconversion, offset measurements, mechanical surface detection, collision detection, etc. The unit is battery powered with standard or rechargeable batteries. The signal is optically transmitted to the EOC.
- The Electro-optical converter (EOC) performs the conversion from optical to electrical signals for the digital communication to the DAE. To use optical surface detection, a special version of the EOC is required. The EOC signal is transmitted to the measurement server.
- The function of the measurement server is to perform the time critical tasks such as signal filtering, control of the robot operation and fast movement interrupts.
- > The Light Beam used is for probe alignment. This improves the (absolute) accuracy of the probe positioning.
- > A computer running Windows 11 and the DASY8 software.
- > Remote control and teach pendant as well as additional circuitry for robot safety such as warning lamps, etc.
- The phantom, the device holder and other accessories according to the targeted measurement.



8.2 E-Field Probe	8.2 E-Field Probe			
	Symmetrical design with triangular core Built-in shielding against static charges PEEK enclosure material (resistant to organic solvents, e.g., DGBE)			
Calibration	ISO/IEC 17025 calibration service available.			
Frequency	10 MHz to > 6 GHz Linearity: ± 0.2 dB (30 MHz to 6 GHz)			
Directivity	± 0.3 dB in TSL (rotation around probe axis) ± 0.5 dB in TSL (rotation normal to probe axis)			
Dynamic Range	10 μW/g to > 100 mW/g Linearity: ± 0.2 dB (noise: typically < 1 μW/g)			
Dimensions	Overall length: 337 mm (Tip: 20 mm) Tip diameter: 2.5 mm (Body: 12 mm) Typical distance from probe tip to dipole centers: 1 mm			

8.3 Data Acquisition Electronics (DAE)



The data acquisition electronics (DAE) consists of a highly sensitive electrometer-grade preamplifier with auto-zeroing, a channel and gain switching multiplexer, a fast 16 bit AD-converter and a command decoder and control logic unit. Transmission to the measurement server is accomplished through an optical downlink for data and status information

as well as an optical uplink for commands and the clock.

The input impedance of the DAE is 200 MOhm; the inputs are symmetrical and floating. Common mode rejection is above 80 dB.



8.4 Phantom SAM Twin Phantom:

Material	Vinylester, glass fiber reinforced (VE-GF)			
Shell Thickness	2 ± 0.2 mm (6 ± 0.2 mm at ear point)			
Dimensions (incl. Wooden Support)	Length: 1000mm Width: 500mm Height: adjustable feet			
Filling Volume	Approx. 25 liters			
Wooden Support	SPEAG standard phantom table			

The bottom plate contains three pair of bolts for locking the device holder. The device holder positions are adjusted to the standard measurement positions in the three sections. A white cover is provided to tap the phantom during off-periods to prevent water evaporation and changes in the liquid parameters. On the phantom top, three reference markers are provided to identify the phantom position with respect to the robot.

ELI Phantom:

Material	Vinylester, glass fiber reinforced (VE-GF)	
Shell Thickness	2.0 ± 0.2 mm (bottom plate)	
Dimensions	Major axis: 600 mm	
	Minor axis: 400 mm	
Filling Volume	approx. 30 liters	1
Wooden Support	SPEAG standard phantom table	
The ELI phantom is intended for compliance testing of handheld and body-mounted wireless devices in the frequency range of 30 MHz to 6 GHz. ELI4 is fully compatible with standard and all known tissue simulating liquids.		



8.5 Device Holder

The SAR measured in the phantom is approximately inversely proportional to the square of the distance between the source and the liquid surface. For a source at 5mm distance, a positioning uncertainty of \pm 0.5mm would produce uncertainty in the SAR of \pm 20%. Accurate device positioning is therefore crucial for accurate and repeatable measurements. The positions at which the devices must be measured are defined by the standards. The DASY8 device holder along with the associated adaptors / options is designed to accommodate different types & sizes (laptops, tablets, phones) of test devices and yet provide accurate and repeatable positioning as described in the test standards.

The device holder is available in two configurations (see Figure 3.13.1): for hand held transmitters (mobile phones) - MD4HHTV5 - Mounting Device for Hand-Held Transmitters and for Body-Worn transmitters - MD4LAP5 - Mounting Device for laptops and other body worn transmitters.



(a) MD4HHTV5



(b) MD4LAPV5

Figure 3.13.1: Mounting Device for Hand-Held Devices and Laptop / Body-Worn Devices



8.6 Measurement procedure

8.6.1 Power reference measurement

The Power Reference Measurement and Power Drift Measurement jobs are useful jobs for monitoring the power drift of the device under test in the batch process. The minimum distance of probe sensors to surface determines the closest measurement point to phantom surface. This distance cannot be smaller than the distance of sensor calibration points to probe tip as defined in the probe properties.

8.6.2 Area scan

Measurement procedures for evaluating SAR from wireless handsets typically start with a coarse measurement grid to determine the approximate location of the local peak SAR values. This is known as the area-scan procedure. In addition, identify the positions of any local maxima with SAR values within 2 dB of the maximum value, and that will not be within the zoom scan of other peaks. Additional zoom scans shall be measured for such peaks only when the primary peak is within 2 dB of the SAR compliance limit.

Area scan parameters extracted from IEC/IEEE 62209-1528 SAR measurement as below:

Parameter	DUT transmit frequency being tested	
Falameter	<i>f</i> ≤ 3 GHz	3 GHz < <i>f</i> ≤ 10 GHz
Maximum distance between the measured points (geometric centre of the sensors) and the inner phantom surface (z_{M1} in Figure 20 in mm)	5 ± 1	$\delta \ln(2)/2 \pm 0.5 a$
Maximum spacing between adjacent measured points in mm (see O.8.3.1) ^b	20, or half of the corresponding zoom scan length, whichever is smaller	60/ <i>f</i> , or half of the corresponding zoom scan length, whichever is smaller
Maximum angle between the probe axis and the phantom surface normal (α in Figure 20) ^c	5° (flat phantom only) 30° (other phantoms)	5° (flat phantom only) 20° (other phantoms)
Tolerance in the probe angle	1°	1°

^a δ is the penetration depth for a plane-wave incident normally on a planar half-space.

^b See Clause O.8 on how Δx and Δy may be selected for individual area scan requirements.

^c The probe angle relative to the phantom surface normal is restricted due to the degradation in the measurement accuracy in fields with steep spatial gradients. The measurement accuracy decreases with increasing probe angle and increasing frequency. This is the reason for the tighter probe angle restriction at frequencies above 3 GHz.



8.6.3 Zoom Scan

Zoom Scans are used to assess the peak spatial SAR values within a cubic averaging volume containing 1 g and 10 g of simulated tissue. The Zoom Scan measures points (refer to table below) within a cube whose base faces are centered on the maxima found in a preceding area scan job within the same procedure. When the measurement is done, the Zoom Scan evaluates the average SAR for 1 g and 10 g and displays these values next to the job's label.

Zoom Scan parameters extracted from IEC/IEEE 62209-1528 SAR measurement as below:

Devenuetor	DUT transmit frequency being tested				
Parameter	<i>f</i> ≤ 3 GHz	3 GHz < <i>f</i> ≤ 10 GHz			
Maximum distance between the closest measured points and the phantom surface $(z_{\rm M1} {\rm ~in~Figure~20} {\rm ~and~Table~3,~in~mm})$	5	δ ln(2)/2 ^a			
Maximum angle between the probe axis and the	5° (flat phantom only)	5° (flat phantom only)			
phantom surface normal (α in Figure 20)	30° (other phantoms)	20° (other phantoms)			
Maximum spacing between measured points in the x- and y-directions (Δx and Δy , in mm)	8	24/f ^b			
For uniform grids: Maximum spacing between measured points in the direction normal to the phantom shell $(\Delta z_1$ in Figure 20, in mm)	5	10/(<i>f</i> - 1)			
For graded grids: Maximum spacing between the two closest measured points in the direction normal to the phantom shell (Δz_1 in Figure 20, in mm)	4	12 <i>\f</i>			
For graded grids: Maximum incremental increase in the spacing between measured points in the direction normal to the phantom shell ($R_z = \Delta z_2 / \Delta z_1$ in Figure 20)	1,5	1,5			
Minimum edge length of the zoom scan volume in the x- and y-directions (L_z in O.8.3.2, in mm)	30	22			
Minimum edge length of the zoom scan volume in the direction normal to the phantom shell $(L_{\rm h} \text{ in O.8.3.2 in mm})$	30	22			
Tolerance in the probe angle	1°	1°			
^a δ is the penetration depth for a plane-wave incid ^b This is the maximum spacing allowed, which mig					

8.6.4 Power Drift Measurement

The Power Drift Measurement job measures the field at the same location as the most recent power reference measurement job within the same procedure, and with the same settings. The Power Drift Measurement gives the field difference in dB from the reading conducted within the last Power Reference Measurement. Several drift measurements are possible for one reference measurement. This allows a user to monitor the power drift of the device under test that must remain within a maximum variation of $\pm 5\%$. Detail power drift measurement refer to appendix B.



9 Test Equipment list

Manufacturer	Equipment Name	Model	Serial Number	Calibration Date	Due Date of calibration
SPEAG	Twin Phantom	SAM	2168	NCR	NCR
SPEAG	E-Field Probe	EX3DV4	7812	2024/06/25	2025/06/24
SPEAG	Data Acquisition Electronics	DAE4	1846	2024/12/10	2025/12/09
SPEAG	System Validation Kits	D2450V2	1099	2023/02/02	2026/02/01
SPEAG	Dielectric parameter probes	DAK3.5	1341	2024/07/15	2025/07/14
R&S	Vector network analyzer	ZNB8	101413	2024/07/17	2025/07/16
R&S	Signal Generator	SMR20	100648	2025/03/11	2026/03/10
R&S	AVG Power Sensor	NRP-Z21	101651	2025/03/11	2026/03/10
R&S	AVG Power Sensor	NRP-Z21	104189	2025/03/11	2026/03/10
HAISIDIKE	Thermometer	TP300	TOWE-EQ- SR-023	2025/03/11	2026/03/10
BingYu	Temperature and Humidity Indicator	HTC-1	TOWE-EQ- SR-025	2024/06/03	2025/06/02
Talent Microwave	Directional Coupler	TC-05180-10S	220420003	NCR	NCR
QiJi	Amplifier	YX28982301	TOWE-EQ- SR-020	NCR	NCR

Note:

1. Referring to KDB 865664 D01v01r04, the dipole calibration interval can be extended to 3 years with justification. The dipoles are also not physically damaged or repaired during the interval.

2. The justification data of dipole can be found in Appendix C. The return loss is < -20dB, within 20% of prior calibration, the impedance is within 5 ohm of prior calibration.



10 SAR measurement variability

SAR measurement variability must be assessed for each frequency band, which is determined by the SAR probe calibration point and tissue-equivalent medium used for the device measurements. When both head and body tissue-equivalent media are required for SAR measurements in a frequency band, the variability measurement procedures should be applied to the tissue medium with the highest measured SAR, using the highest measured SAR configuration for that tissue equivalent medium.

The following procedures are applied to determine if repeated measurements are required.

1) Repeated measurement is not required when the original highest measured SAR is < 0.80 or 2 W/kg (1-g or 10-g respectively); steps2) through 4) do not apply.

2) When the original highest measured SAR is \geq 0.80 or 2 W/kg (1-g or 10-g respectively), repeat that measurement once.

3) Perform a second repeated measurement only if the ratio of largest to smallest SAR for the original and first repeated measurements is > 1.20 or when the original or repeated measurement is \geq 1.45 or 3.6W/kg (~ 10% from the 1-g or 10-g respective SAR limit).

4) Perform a third repeated measurement only if the original, first or second repeated measurement is \geq 1.5 or 3.75 W/kg (1-g or 10-g respectively) and the ratio of largest to smallest SAR for the original, first and second repeated measurements is > 1.20



11 Description of Test Position


11.1 Next to the Mouth Exposure Condition

Transmitters that are built-in within a wrist watch or similar wrist-worn devices typically operate in speaker mode for voice communication, with the device worn on the wrist and positioned next to the mouth. When SAR evaluation is required, next to the mouth use is evaluated with the front of the device positioned at 10 mm from a flat phantom filled with head tissue-equivalent medium. The wrist bands should be strapped together to represent normal use conditions.

11.2 Extremity Exposure Condition

A limb-worn device is a unit whose intended use includes being strapped to the arm or leg of the user while transmitting (except in idle mode). The strap shall be opened so that it is divided into two parts as shown in the following. The device shall be positioned directly against the phantom surface with the strap straightened as much as possible and the back of the device towards the phantom. If the strap cannot normally be opened to allow placing in direct contact with the phantom surface, it may be necessary to break the strap of the device but ensuring to not damage the antenna.

The wrist bands should be strapped together to represent normal use conditions. SAR for wrist exposure is evaluated with the back of the device positioned in direct contact against a flat phantom filled with body tissue-equivalent medium. The wrist bands should be unstrapped and touching the phantom. The space introduced by the watch or wrist bands and the phantom must be representative of actual use conditions; otherwise, if applicable, the neck or a curved head region of the SAM phantom may be used, provided the device positioning and SAR probe access issues have been addressed through a KDB inquiry. When other device positioning and SAR measurement considerations are necessary, a KDB inquiry is also required for the test results to be acceptable; for example, devices with rigid wrist bands or electronic circuitry and/or antenna(s) incorporated in the wrist bands. These test configurations are applicable only to devices that are worn on the wrist and cannot support other use conditions; therefore, the operating restrictions must be fully demonstrated in both the test reports and user manuals.

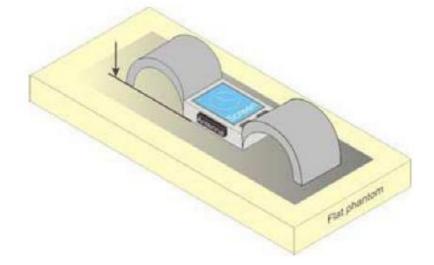



12 System Verification


12.1 Recipes for Tissue Simulate Liquid

The bellowing tables give the recipes for tissue simulating liquids to be used in different frequency bands:

Ingredients	Frequency (MHz)								
(% by weight)	450	700-900	1750-2000	2300-2500	2500-2700				
Water	38.56	40.30	55.24	55.00	54.92				
Salt (NaCl)	3.95	1.38	0.31	0.2	0.23				
Sucrose	56.32	57.90	0	0	0				
HEC	0.98	0.24	0	0	0				
Bactericide	0.19	0.18	0	0	0				
Tween	0	0	44.45	44.80	44.85				
Salt: 99+% Pure S	Sucrose								
Water: De-ionize	d, 16 MΩ+ resistivi	ty F	HEC: Hydroxyethyl Cellulose						
Tween: Polyoxye	ethylene (20) sorbit	an monolaurate							

12.2 Tissue Verification

The Conductivity (σ) and Permittivity (ρ) are listed in bellow table. The temperature variation of the Tissue Simulate Liquids was 22±2°C, the liquid depth of the ear reference point or the flat phantom was at least 15 cm (which is shown in Figure 12-1).

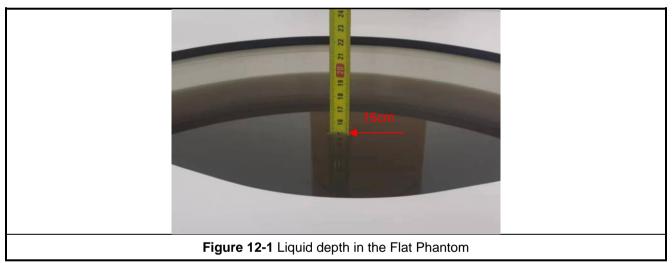

Frequency	Frequency Tissue Liquid		Targe	Target Tissue		Measured Tissue			Data	
(MHz)	Туре	(℃)	Permittivity	Conductivity	Permittivity	Conductivity	Δε _r	Δσ	Date	
		(0)	٤r	σ(S/m)	٤r	σ(S/m)	Δcr	ДО		
2450	Head	22.2	39.20	1.80	38.600	1.780	-1.53%	-1.11%	2025/03/24	

 Table 1:
 Measurement Tissue Parameters



12.3 SAR System Check

Prior to SAR assessment, a SAR system Check measurement was performed to see if the measured SAR was within ±10% from the target SAR values. The System Performance Check Setup in Figure 12-3.

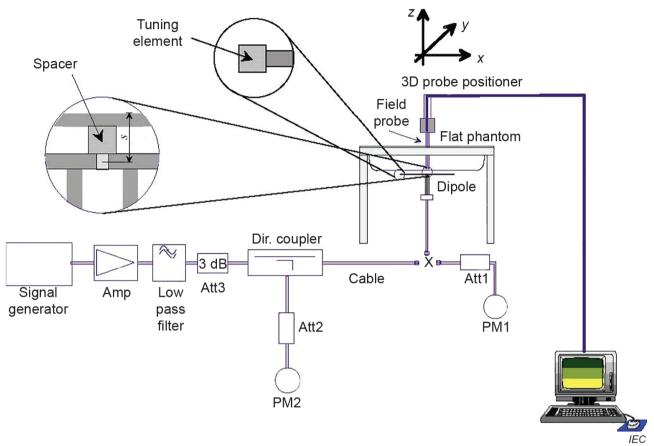


Figure 12-3 System Performance Check Setup

12.3.1 System Check Result

Frequency (MHz)	Tissue Type	Dipole	S/N	Target SAR (1W)		0			Measured SAR (normalized to 1W)		Deviation (Limit ±10%)		Date
				1g (W/kg)	10g (W/kg)	1g (W/kg)	10g (W/kg)	1g (W/kg)	10g (W/kg)	∆1g	Δ10g		
2450	Head	D2450V2	1099	51.40	23.90	4.97	2.34	49.70	23.40	-3.31%	-2.09%	2025/03/24	

Table 2: SAR System Check Result

12.3.2 Detailed System Check Result

Please see Appendix A



13 Conducted Power

13.1 Conducted Power of BLE

	Band	Ch./Freq. (MHz)	Average Conducted Power(dBm)	Tune up (dBm)
			8.23	9.0
BLE 1M	GFSK	19/2440	8.02	9.0
		39/2480	7.88	8.0



14 SAR Data Summary 14.1 SAR Measurement Result of BLE

Test Results										
Test position	Mode	Ch./Freq. (MHz)	SAR (W/kg) 1g	Power Drift (dB)	Conducted Power(dBm)	Tune up Limit(dBm)	Scaling Factor	Reported 1g SAR (W/kg)		
	Next to the mouth Test data 10mm									
Front side	GFSK	0/2402	0.011	-0.09	8.23	9.0	1.194	0.013		
	GFSK	19/2440	0.013	0.03	8.02	9.0	1.253	0.016		
	GFSK	39/2480	0.015	0.00	7.88	8.0	1.028	0.015		
Test position	Mode	Ch./Freq. (MHz)	SAR (W/kg) 10g	Power Drift (dB)	Conducted Power(dBm)	Tune up Limit(dBm)	Scaling Factor	Reported 10g SAR (W/kg)		
			Extrem	nity Test c	lata 0mm					
	GFSK	0/2402	0.019	0.10	8.23	9	1.194	0.023		
Back side	GFSK	19/2440	0.023	-0.07	8.02	9	1.253	0.029		
	GFSK	39/2480	0.028	-0.04	7.88	8	1.028	0.029		

Table 3: SAR of BLE.

Note:

1) For the SAR test is using the maximum duty cycle.

2) The Highest Reported SAR Plot refer to Appendix B.



15 Measurement Uncertainty

Per KDB 865664 D01 SAR measurement 100MHz to 6GHz, when the highest measured 1-g SAR within a frequency band is < 1.5 W/kg and the measured 10-g SAR within a frequency band is < 3.75 W/kg. The expanded SAR measurement uncertainty must be \leq 30%, for a confidence interval of k = 2. If these conditions are met, extensive SAR measurement uncertainty analysis described in IEC/IEEE 62209-1528 is not required in SAR reports submitted for equipment approval.

16 Calibration Certificate

Please see the Appendix C

17 Test Setup Photos

Please see the Appendix D

Appendix A: System Check Plots

Appendix B: SAR Test Plots

Appendix C: Calibration certificate

Appendix D: Test Setup Photos

--- The End ---