










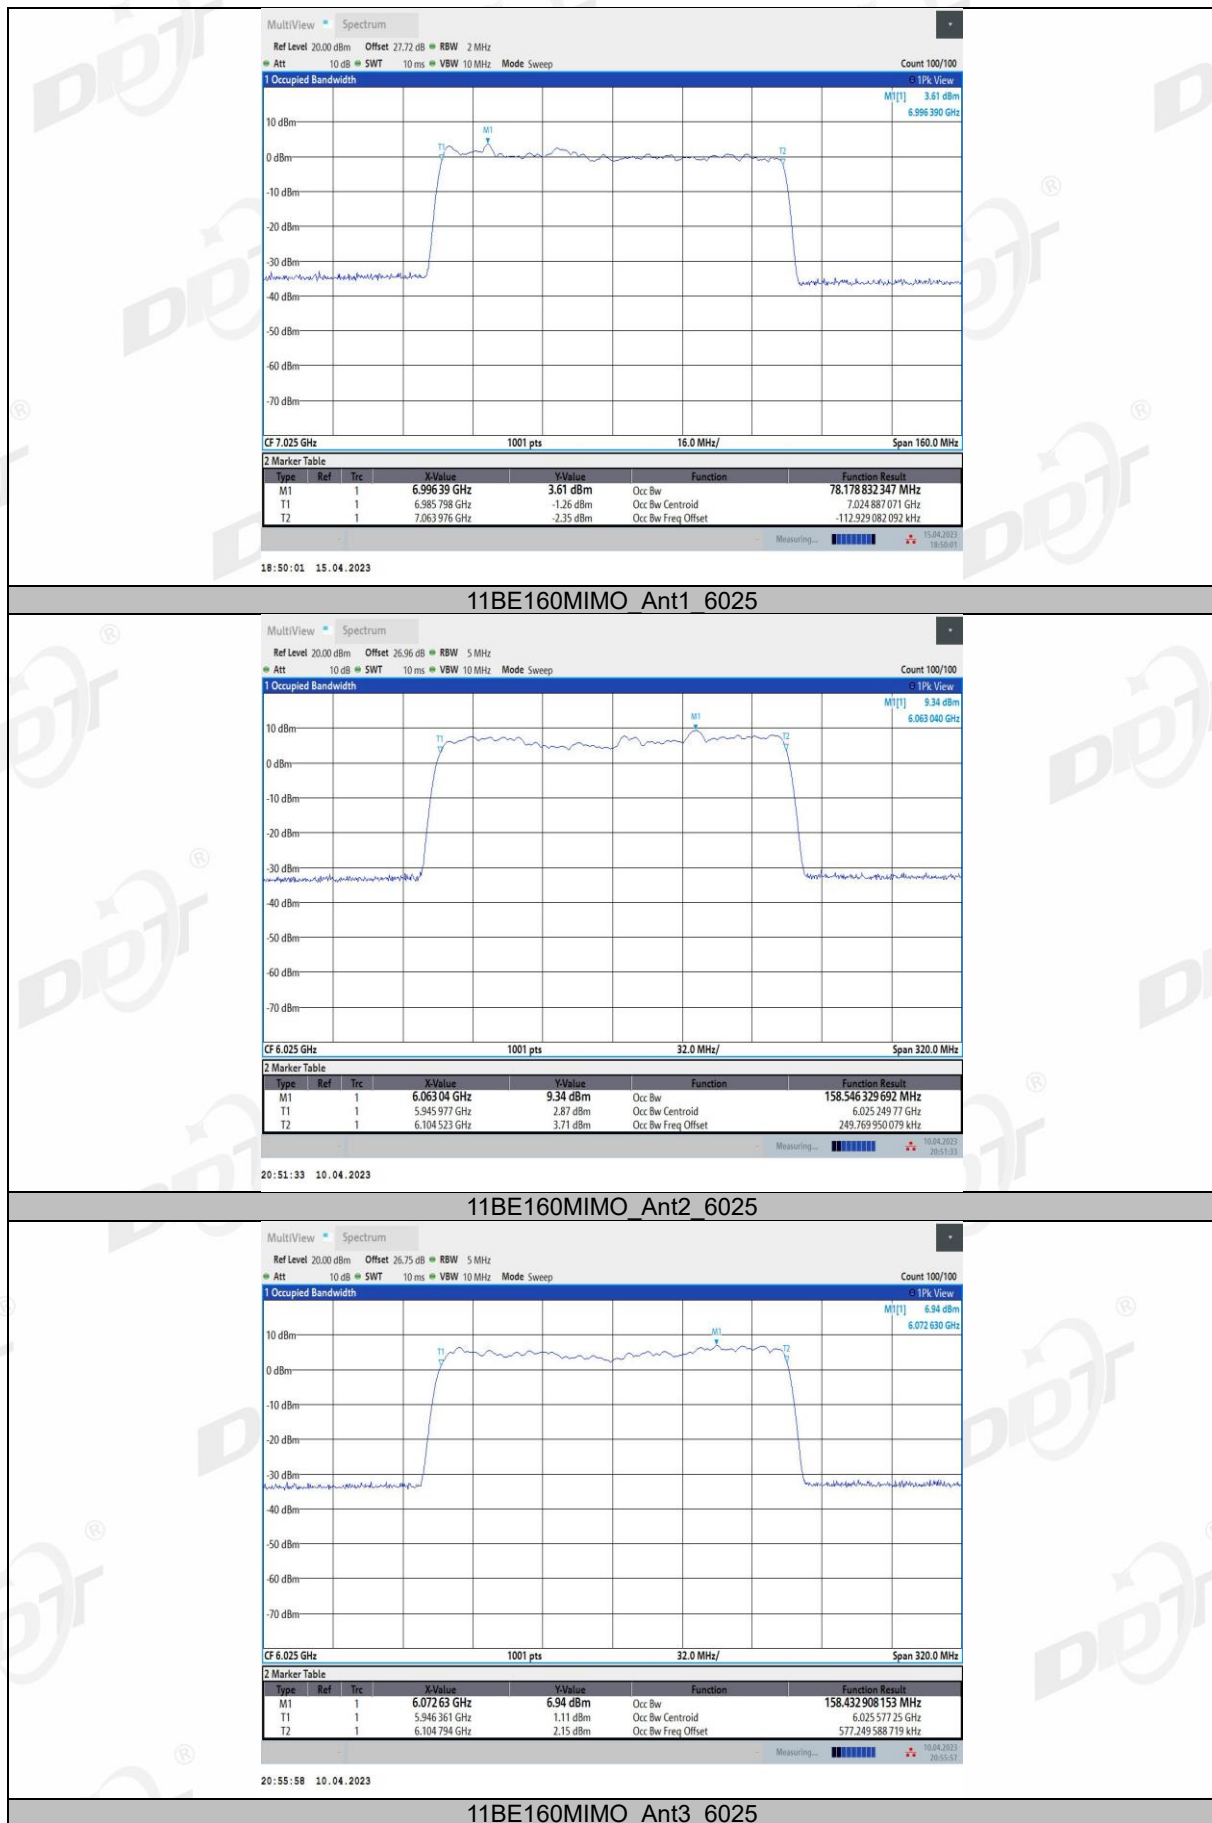

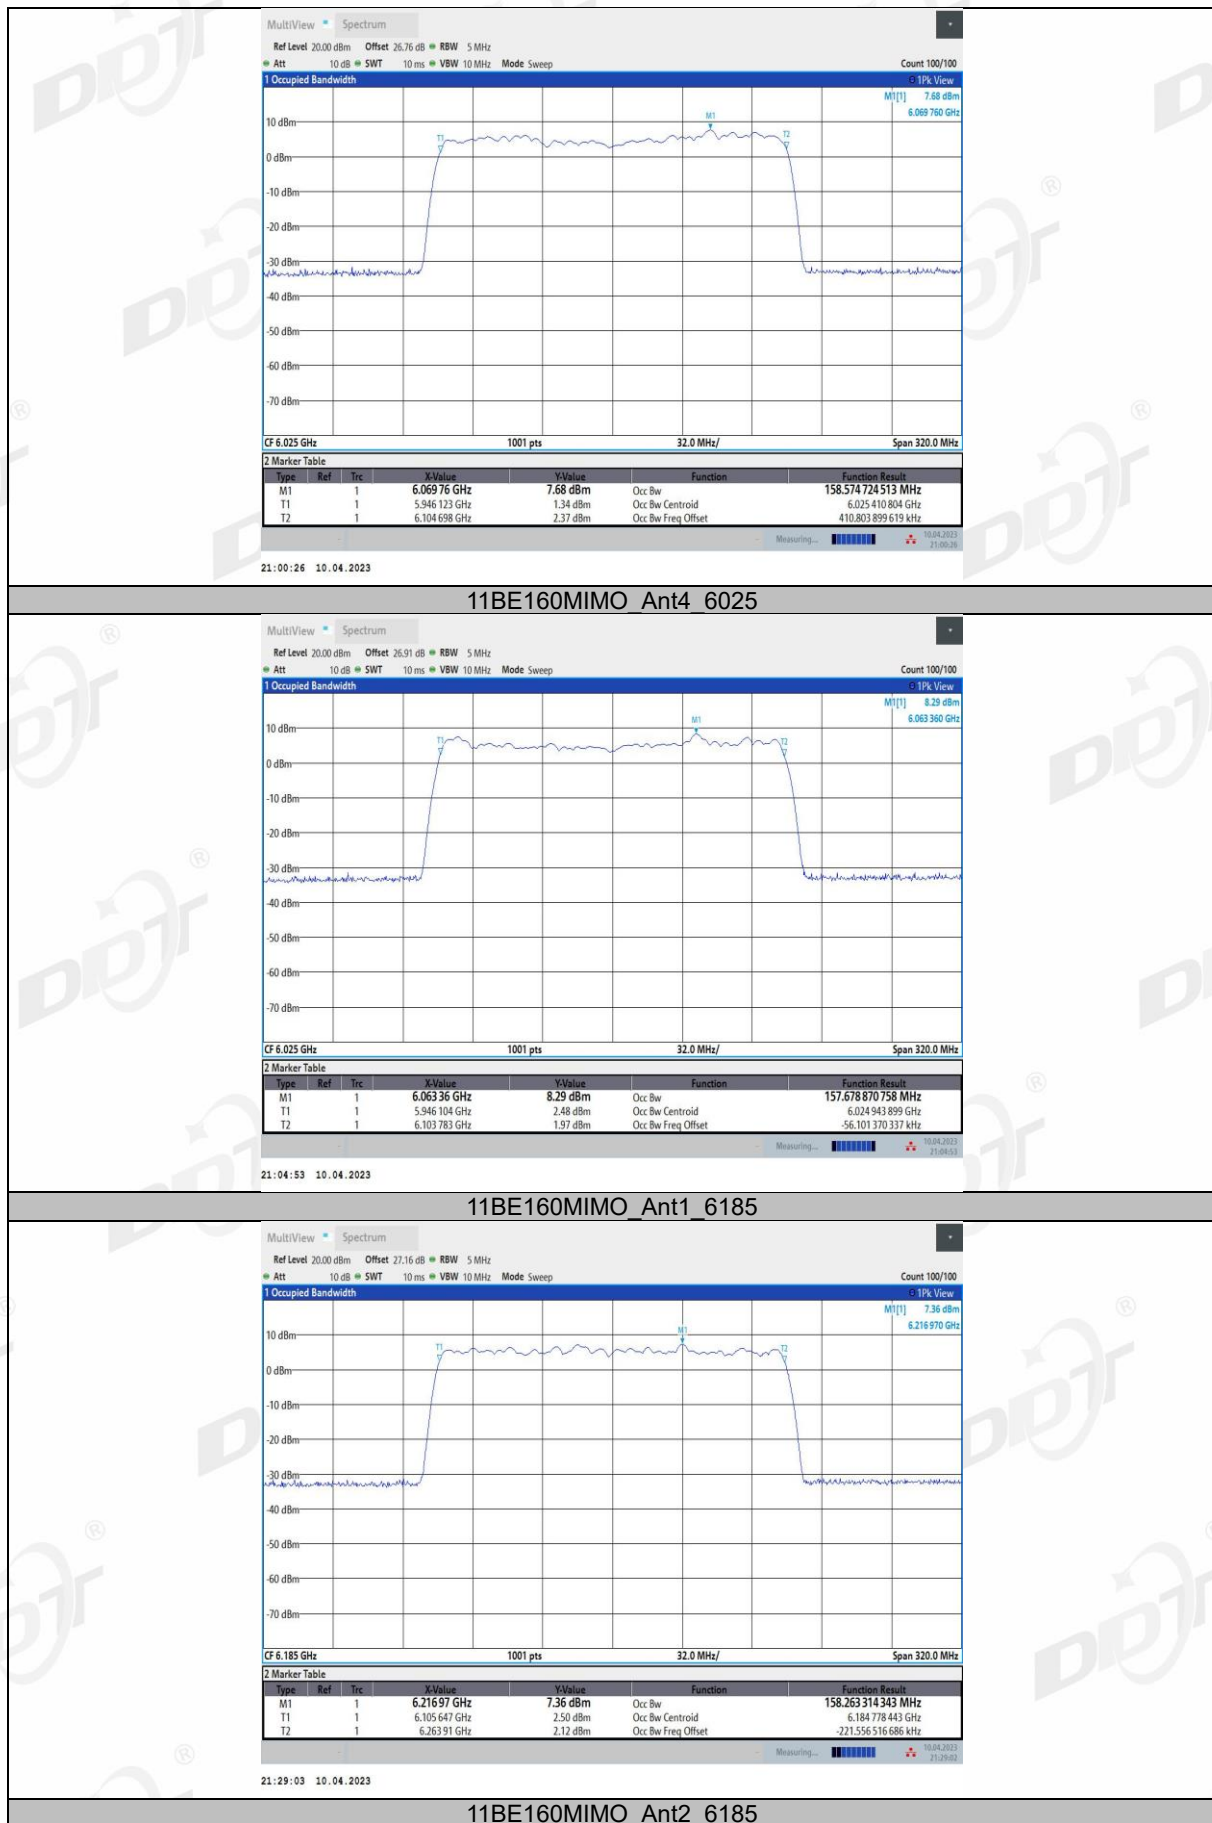








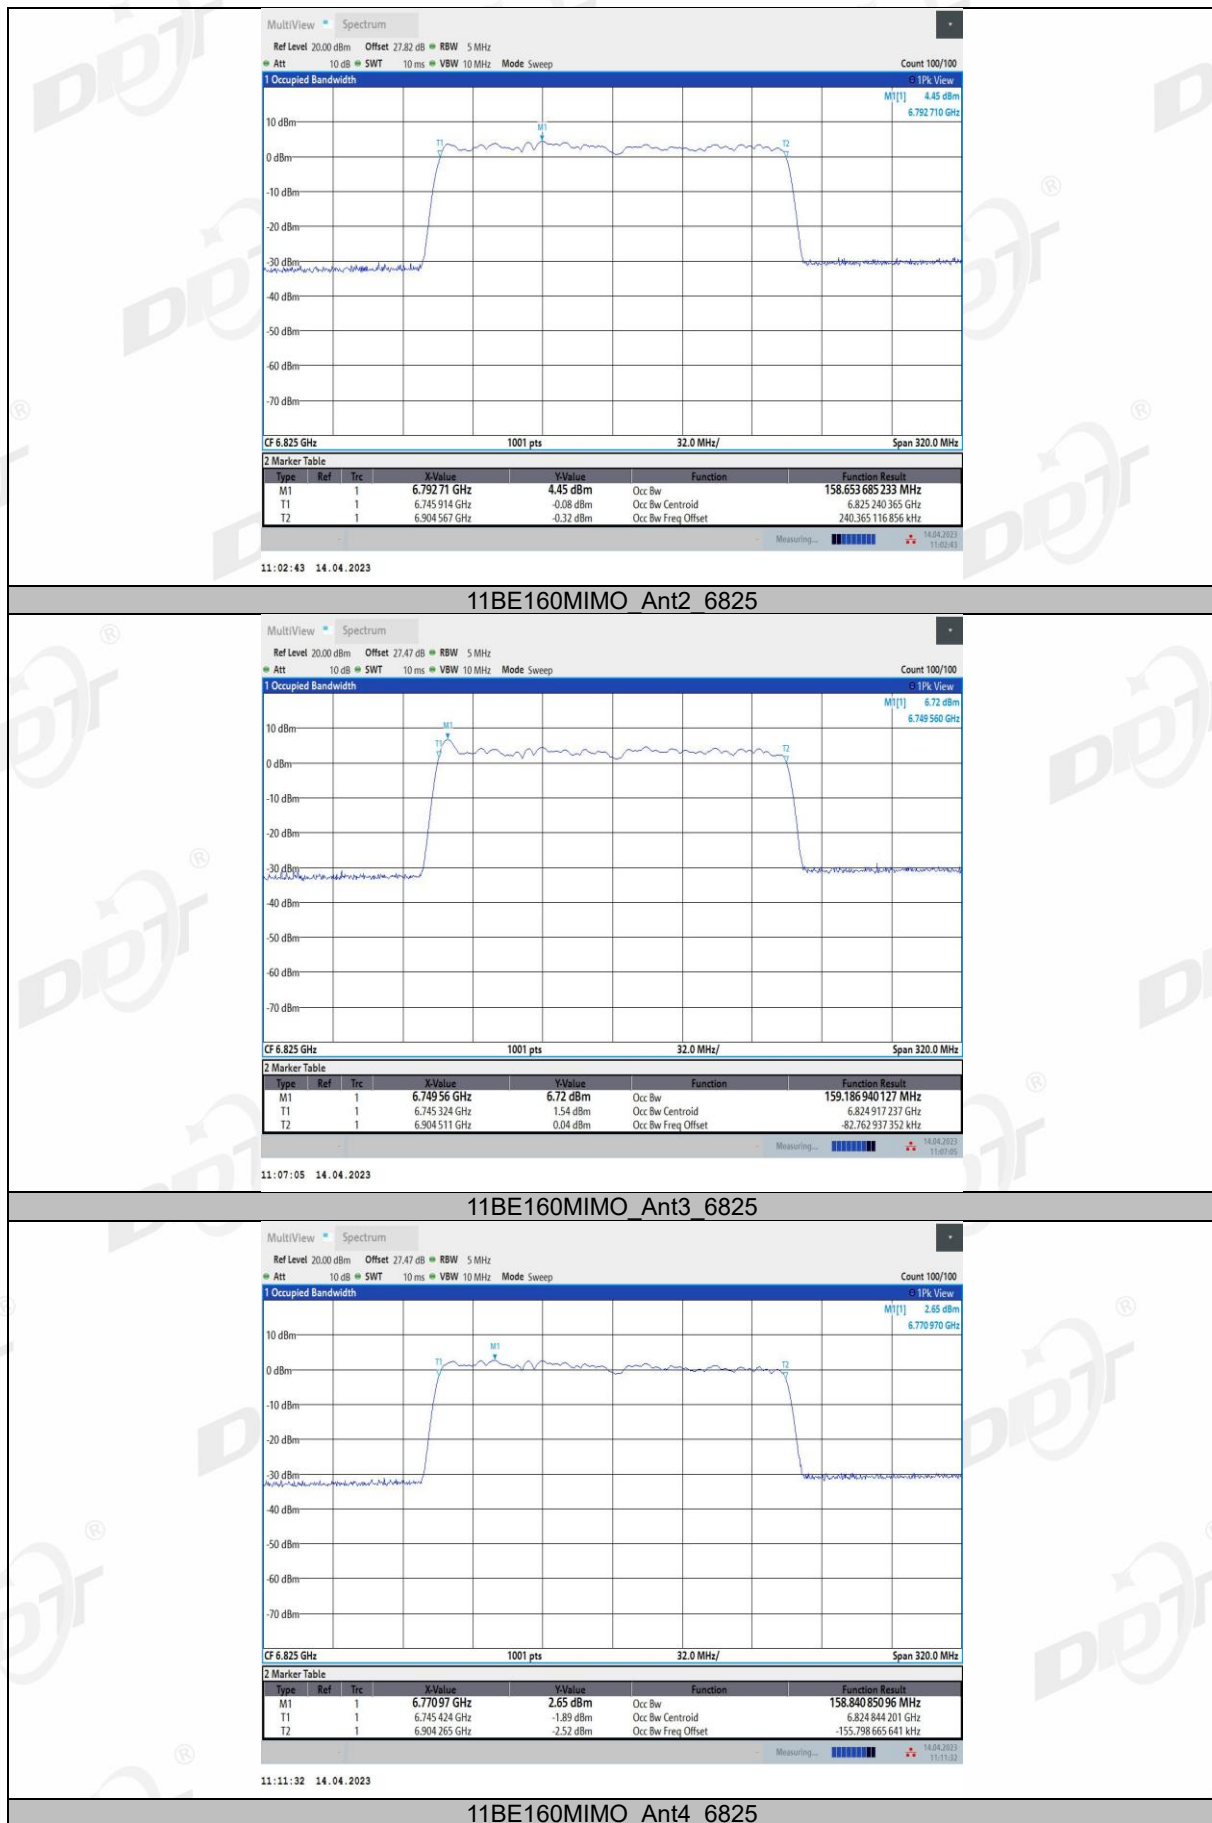





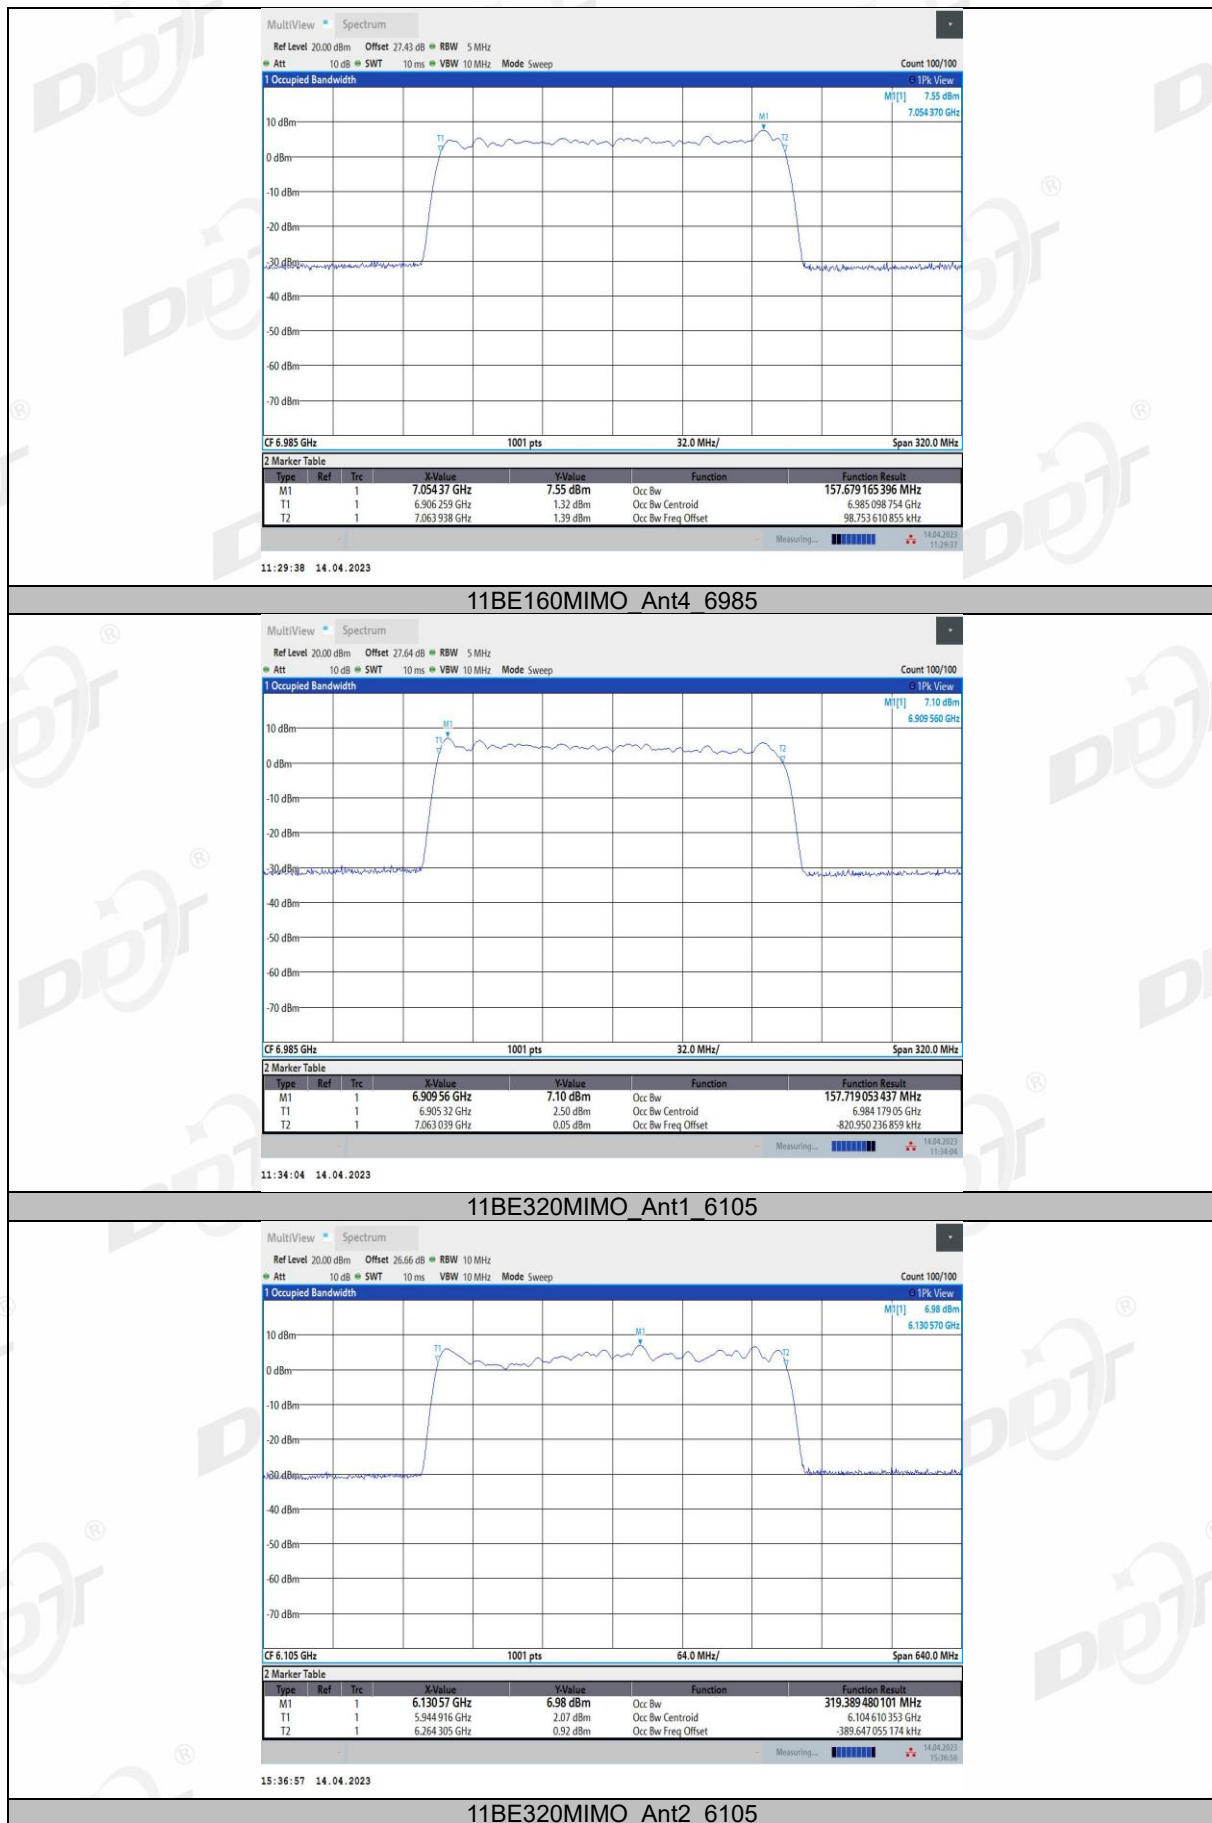


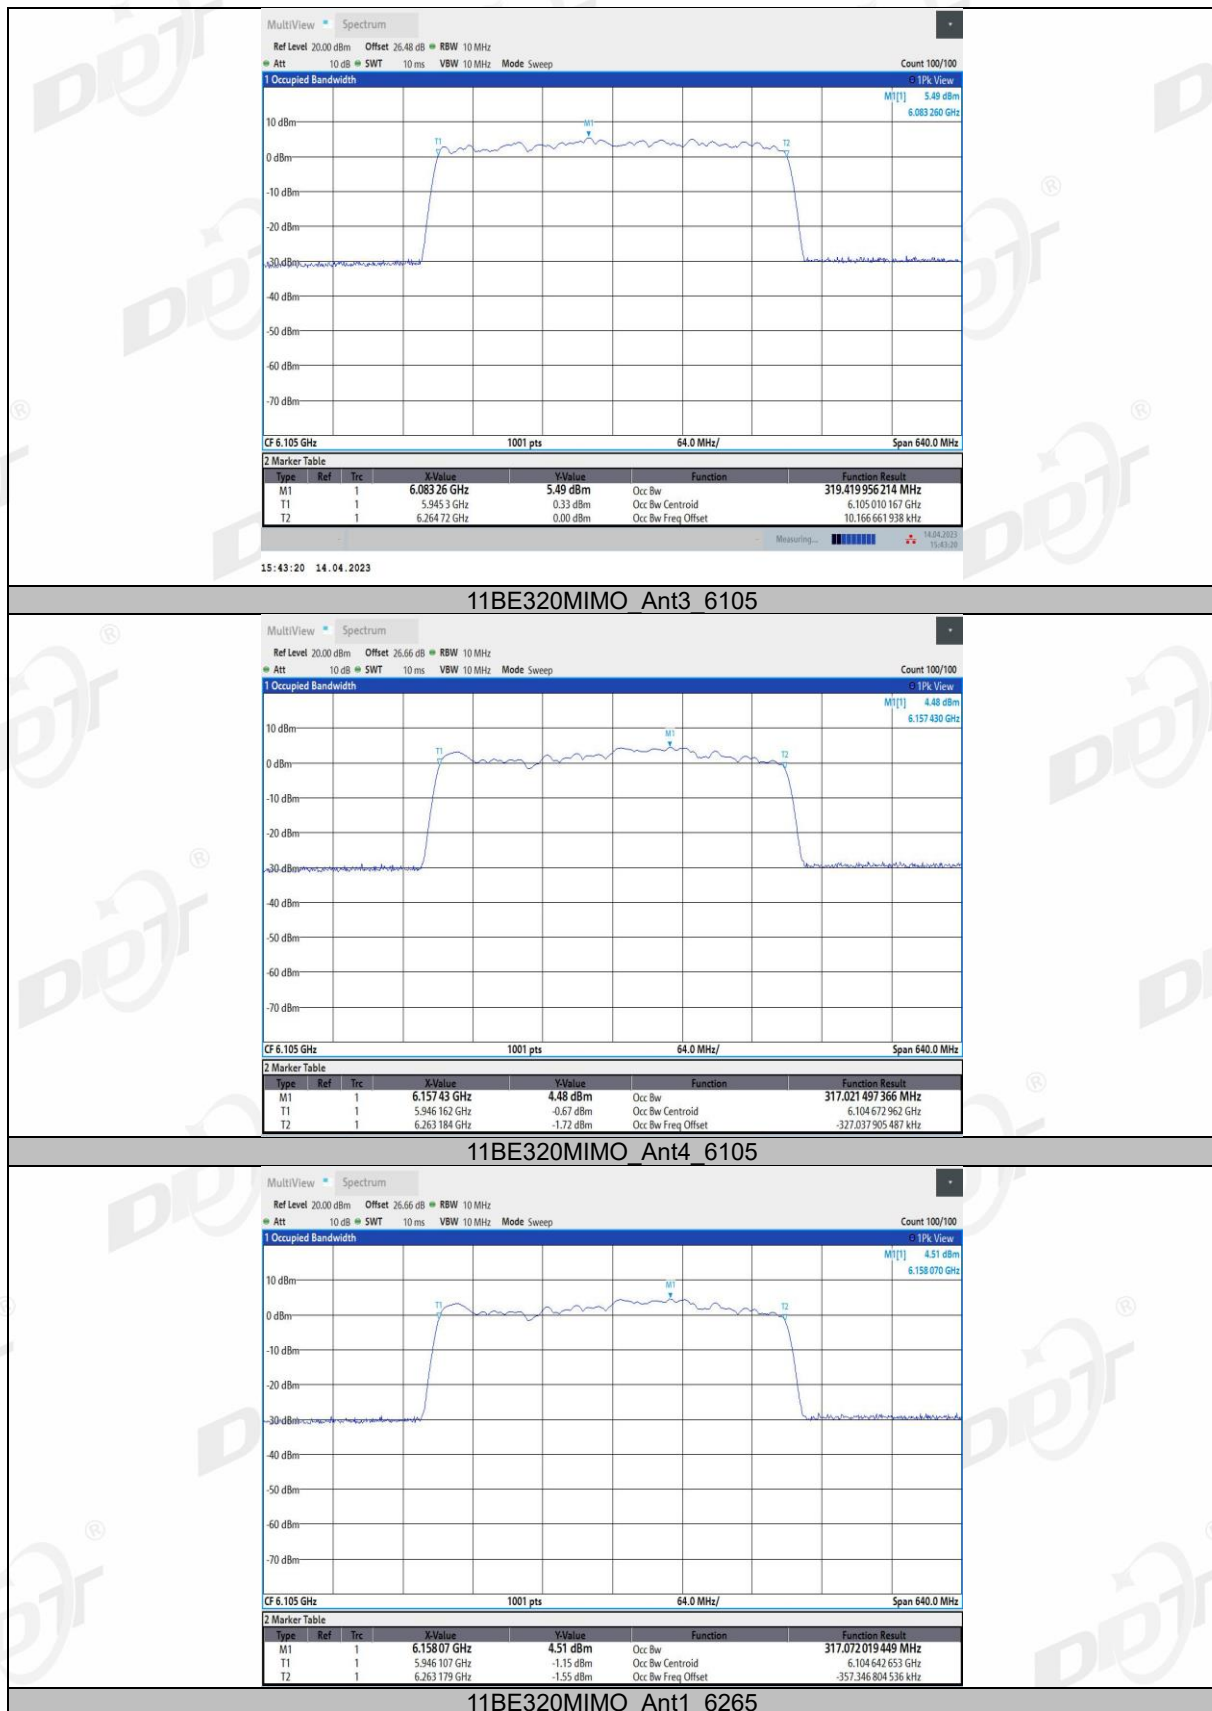

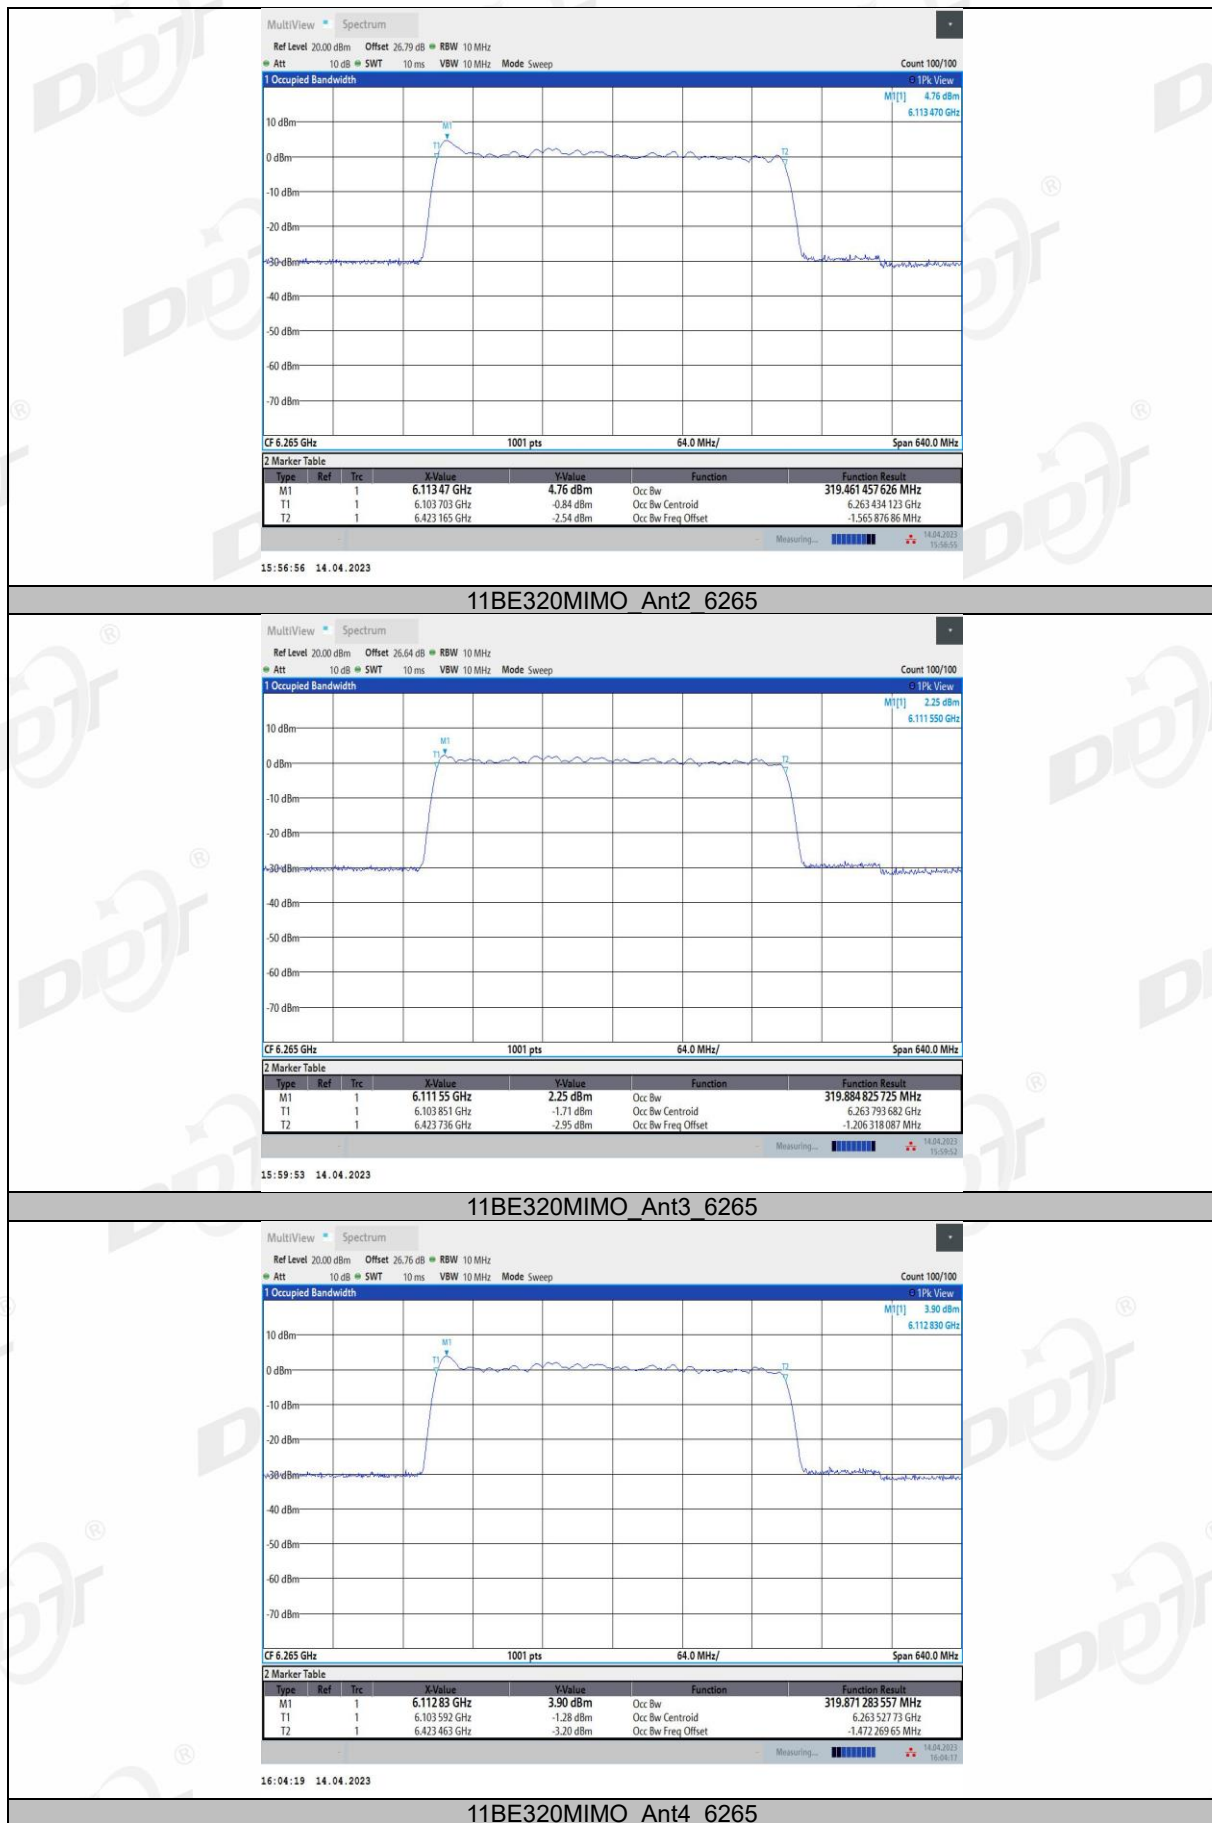


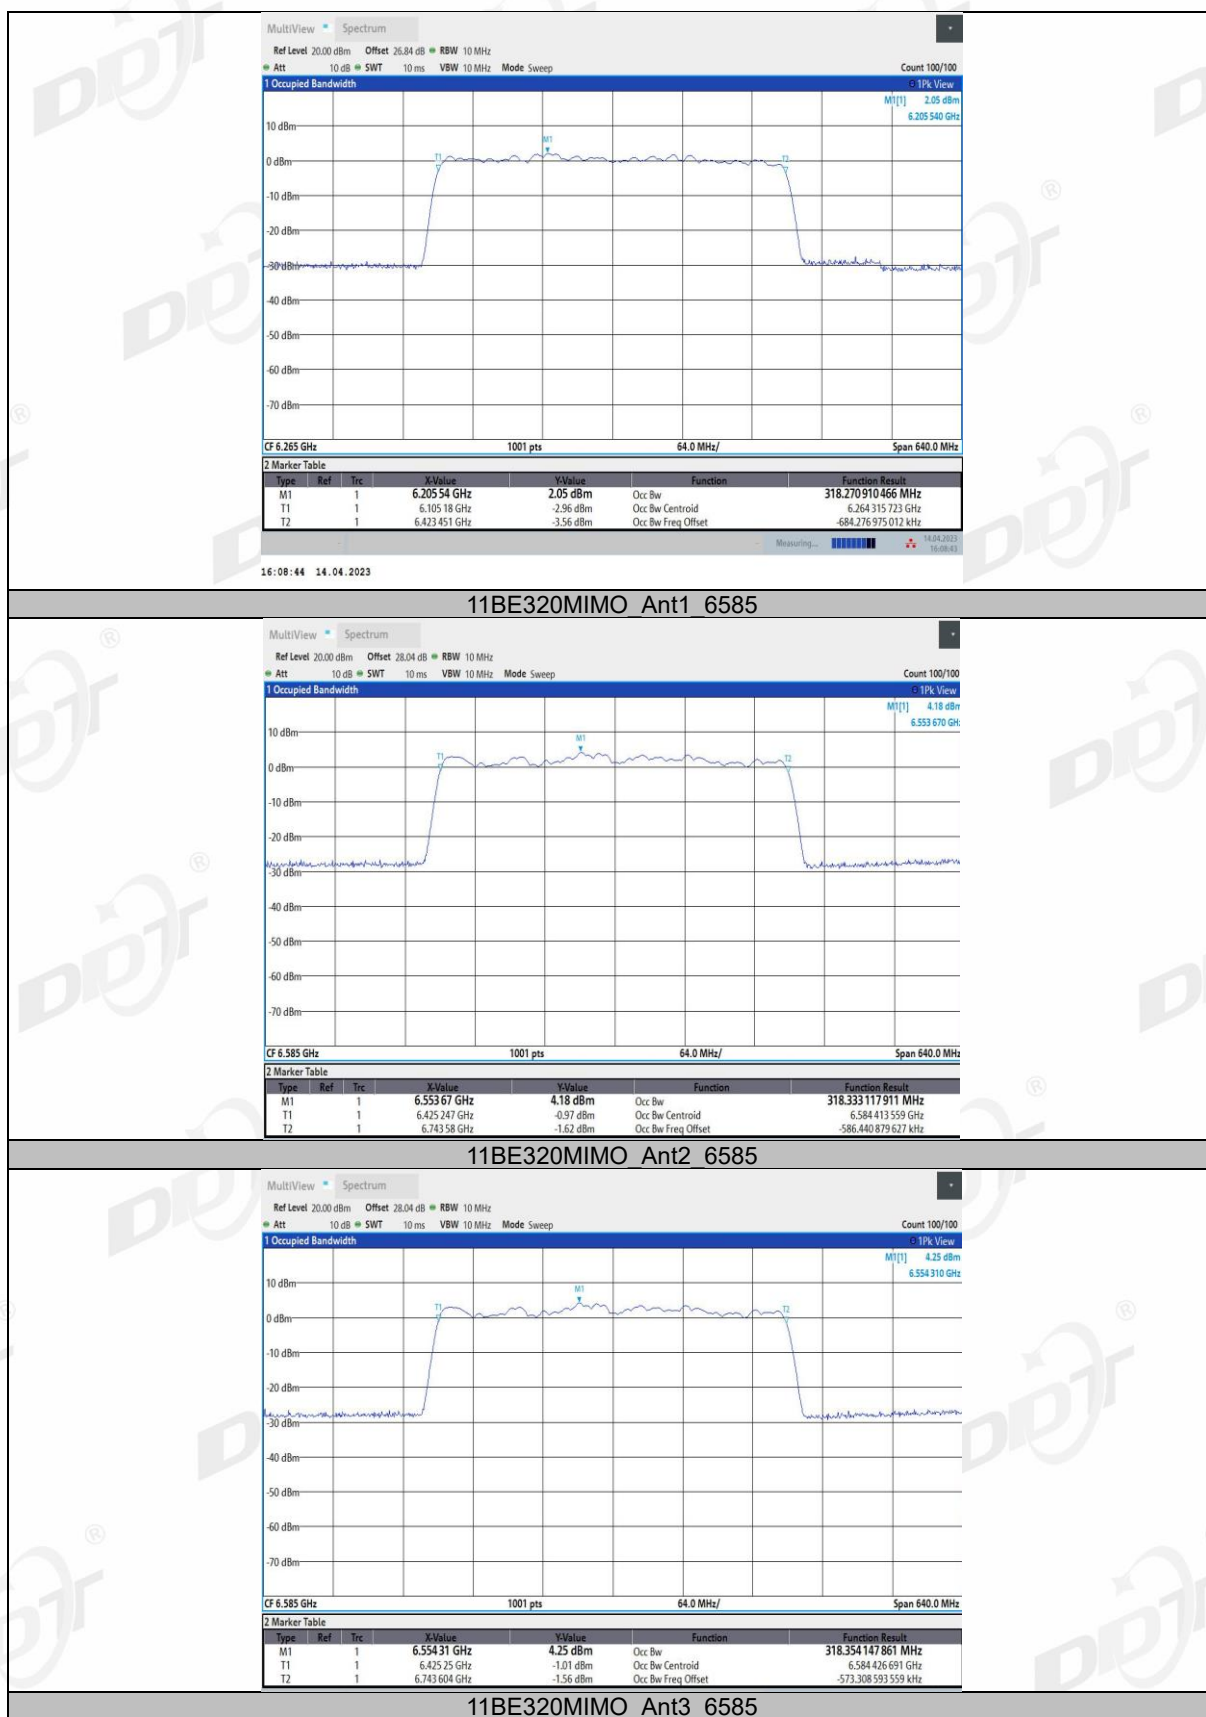

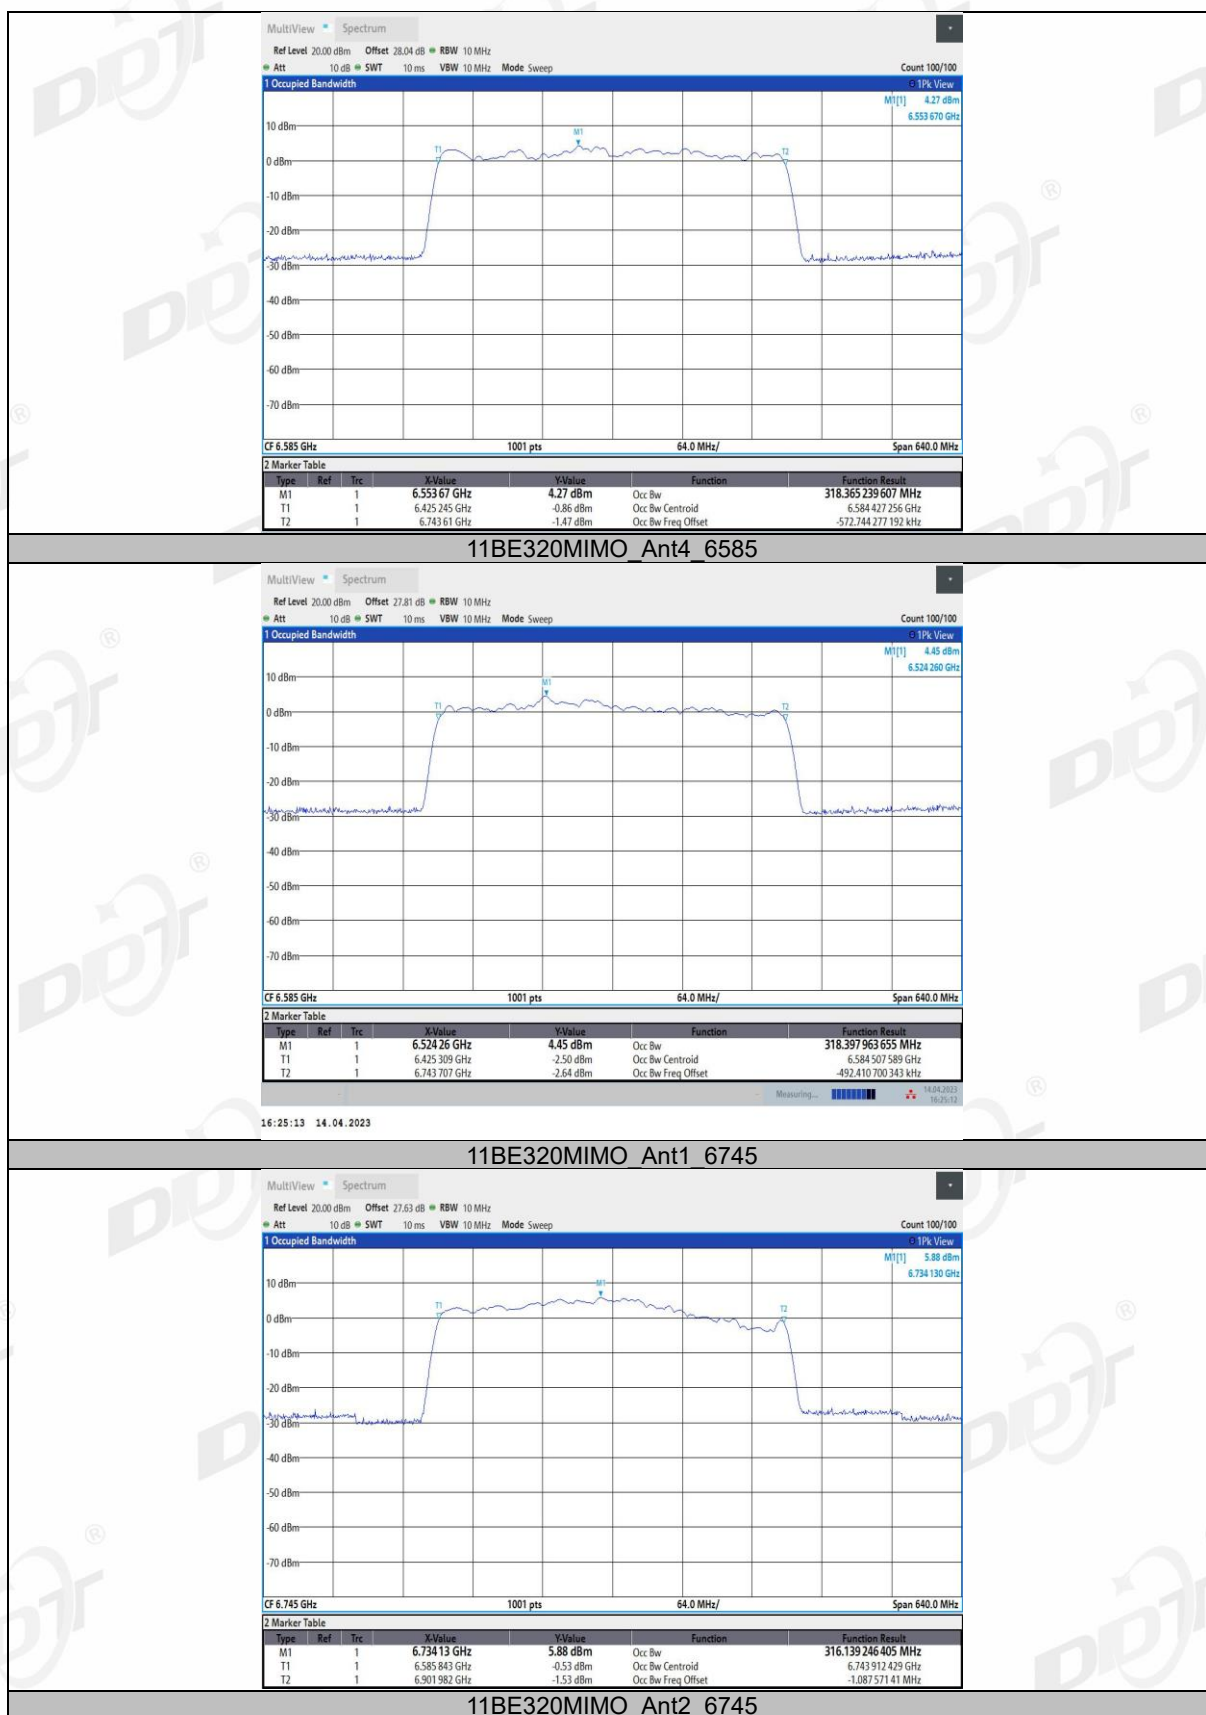

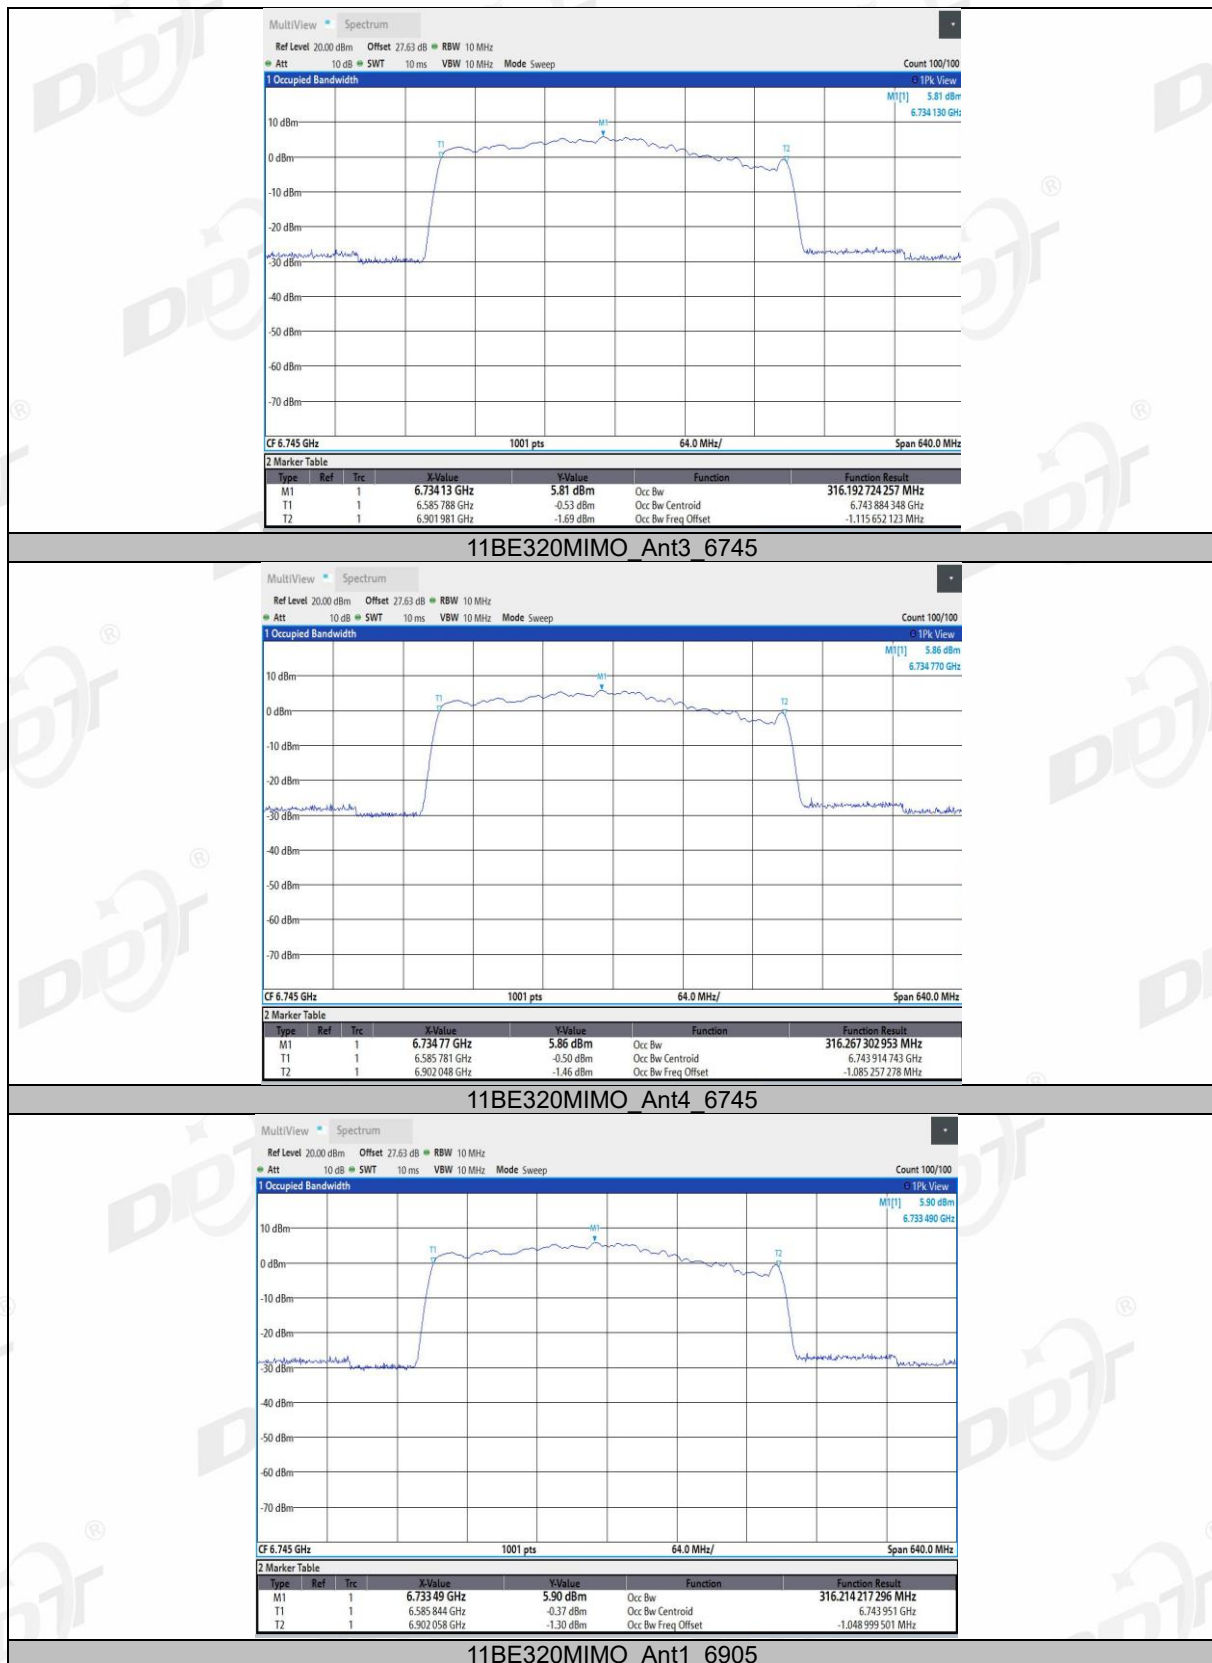




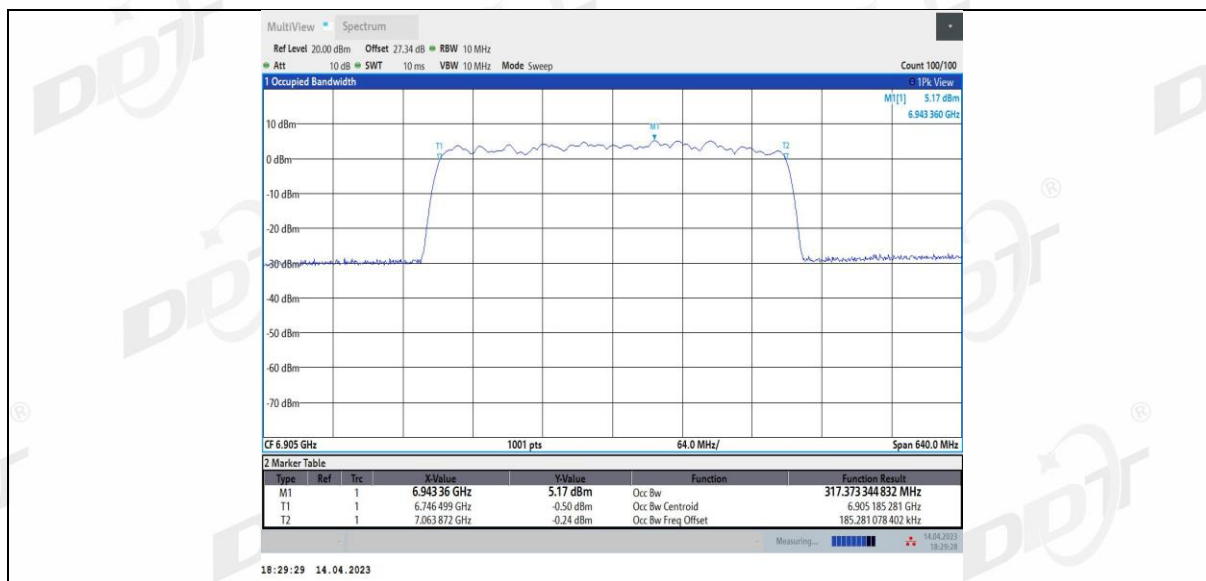

6. Duty Cycle

6.1. Block diagram of test setup

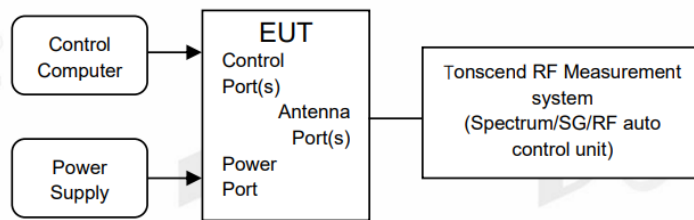

6.2. Limit

Just for Report.

6.3. Test procedure

- (1) Connected the EUT's antenna port to the Spectrum Analyzer by suitable attenuator, The cable loss and attenuator loss have been put into spectrum analyzer as amplitude offset.

set the Spectrum Analyzer as below:

Centre Frequency: The centre frequency of the middle hopping channel.

Resolution BW: 10 MHz.

Video BW: 10 MHz.

Span: Zero span.

Detector: Peak.

Sweep: Video Trigger

- (2) When the trace is complete, measure the sending time of 1 burst and the duty cycle of 1 burst cycle.

- (3) Calculate dwell time follow below formula:

Duty cycle= Pulse's on time / Burst cycle

6.4. Test result

Test Mode	Antenna	Frequency [MHz]	Transmission Duration [ms]	Transmission Period [ms]	Duty Cycle [%]	Limit	Verdict
11AX20MIMO	Ant1	5955	1.02	1.08	94.44	---	---
	Ant2	5955	1.02	1.09	93.58	---	---
	Ant3	5955	1.02	1.08	94.44	---	---
	Ant4	5955	1.02	1.09	93.58	---	---
	Ant1	6175	1.02	1.09	93.58	---	---
	Ant2	6175	1.02	1.08	94.44	---	---
	Ant3	6175	1.02	1.08	94.44	---	---
	Ant4	6175	1.02	1.09	93.58	---	---
	Ant1	6415	1.02	1.09	93.58	---	---
	Ant2	6415	1.02	1.08	94.44	---	---
	Ant3	6415	1.02	1.09	93.58	---	---
	Ant4	6415	1.02	1.08	94.44	---	---
	Ant1	6435	1.02	1.08	94.44	---	---
	Ant2	6435	1.02	1.09	93.58	---	---
	Ant3	6435	1.02	1.08	94.44	---	---
	Ant4	6435	1.02	1.09	93.58	---	---
	Ant1	6475	1.02	1.09	93.58	---	---
	Ant2	6475	1.02	1.08	94.44	---	---
	Ant3	6475	1.02	1.08	94.44	---	---
	Ant4	6475	1.02	1.09	93.58	---	---
	Ant1	6515	1.02	1.09	93.58	---	---
	Ant2	6515	1.02	1.08	94.44	---	---
	Ant3	6515	1.02	1.09	93.58	---	---
	Ant4	6515	1.02	1.08	94.44	---	---
	Ant1	6535	1.02	1.08	94.44	---	---
	Ant2	6535	1.02	1.08	94.44	---	---
	Ant3	6535	1.02	1.09	93.58	---	---
	Ant4	6535	1.02	1.09	93.58	---	---
	Ant1	6695	1.02	1.08	94.44	---	---
	Ant2	6695	1.02	1.08	94.44	---	---
	Ant3	6695	1.02	1.09	93.58	---	---
	Ant4	6695	1.02	1.09	93.58	---	---
	Ant1	6855	1.02	1.08	94.44	---	---
	Ant2	6855	1.02	1.08	94.44	---	---
	Ant3	6855	1.02	1.08	94.44	---	---
	Ant4	6855	1.02	1.08	94.44	---	---
	Ant1	6875	1.02	1.09	93.58	---	---
	Ant2	6875	1.02	1.08	94.44	---	---
	Ant3	6875	1.02	1.08	94.44	---	---
	Ant4	6875	1.02	1.08	94.44	---	---
	Ant1	6895	1.02	1.09	93.58	---	---
	Ant2	6895	1.02	1.09	93.58	---	---
	Ant3	6895	1.02	1.09	93.58	---	---
	Ant4	6895	1.02	1.08	94.44	---	---
	Ant1	6995	1.02	1.08	94.44	---	---
	Ant2	6995	1.02	1.09	93.58	---	---
	Ant3	6995	1.02	1.09	93.58	---	---
	Ant4	6995	1.02	1.08	94.44	---	---
	Ant1	7115	1.02	1.08	94.44	---	---
	Ant2	7115	1.02	1.08	94.44	---	---
	Ant3	7115	1.02	1.08	94.44	---	---
	Ant4	7115	1.02	1.08	94.44	---	---
11AX40MIMO	Ant1	5965	0.54	0.60	90.00	---	---
	Ant2	5965	0.54	0.60	90.00	---	---
	Ant3	5965	0.54	0.61	88.52	---	---
	Ant4	5965	0.54	0.60	90.00	---	---
	Ant1	6165	0.54	0.61	88.52	---	---
	Ant2	6165	0.54	0.60	90.00	---	---

	Ant3	6165	0.54	0.60	90.00	---	---
	Ant4	6165	0.54	0.60	90.00	---	---
	Ant1	6405	0.54	0.60	90.00	---	---
	Ant2	6405	0.54	0.61	88.52	---	---
	Ant3	6405	0.54	0.61	88.52	---	---
	Ant4	6405	0.54	0.61	88.52	---	---
	Ant1	6445	0.54	0.61	88.52	---	---
	Ant2	6445	0.54	0.60	90.00	---	---
	Ant3	6445	0.54	0.61	88.52	---	---
	Ant4	6445	0.54	0.60	90.00	---	---
	Ant1	6485	0.54	0.61	88.52	---	---
	Ant2	6485	0.54	0.60	90.00	---	---
	Ant3	6485	0.54	0.60	90.00	---	---
	Ant4	6485	0.54	0.61	88.52	---	---
	Ant1	6525	0.54	0.60	90.00	---	---
	Ant2	6525	0.54	0.61	88.52	---	---
	Ant3	6525	0.54	0.60	90.00	---	---
	Ant4	6525	0.54	0.60	90.00	---	---
	Ant1	6565	0.54	0.60	90.00	---	---
	Ant2	6565	0.54	0.60	90.00	---	---
	Ant3	6565	0.54	0.61	88.52	---	---
	Ant4	6565	0.54	0.61	88.52	---	---
	Ant1	6685	0.54	0.60	90.00	---	---
	Ant2	6685	0.54	0.60	90.00	---	---
	Ant3	6685	0.54	0.60	90.00	---	---
	Ant4	6685	0.54	0.61	88.52	---	---
	Ant1	6845	0.54	0.60	90.00	---	---
	Ant2	6845	0.54	0.60	90.00	---	---
	Ant3	6845	0.54	0.60	90.00	---	---
	Ant4	6845	0.54	0.60	90.00	---	---
	Ant1	6885	0.54	0.61	88.52	---	---
	Ant2	6885	0.54	0.61	88.52	---	---
	Ant3	6885	0.54	0.61	88.52	---	---
	Ant4	6885	0.54	0.60	90.00	---	---
	Ant1	6925	0.54	0.61	88.52	---	---
	Ant2	6925	0.54	0.60	90.00	---	---
	Ant3	6925	0.54	0.60	90.00	---	---
	Ant4	6925	0.54	0.60	90.00	---	---
	Ant1	6965	0.54	0.61	88.52	---	---
	Ant2	6965	0.54	0.60	90.00	---	---
	Ant3	6965	0.54	0.61	88.52	---	---
	Ant4	6965	0.54	0.60	90.00	---	---
	Ant1	7085	0.54	0.60	90.00	---	---
	Ant2	7085	0.54	0.60	90.00	---	---
	Ant3	7085	0.54	0.61	88.52	---	---
	Ant4	7085	0.54	0.60	90.00	---	---
11AX80MIMO	Ant1	5985	0.29	0.36	80.56	---	---
	Ant2	5985	0.29	0.36	80.56	---	---
	Ant3	5985	0.29	0.36	80.56	---	---
	Ant4	5985	0.29	0.36	80.56	---	---
	Ant1	6145	0.29	0.36	80.56	---	---
	Ant2	6145	0.29	0.35	82.86	---	---
	Ant3	6145	0.29	0.35	82.86	---	---
	Ant4	6145	0.29	0.36	80.56	---	---
	Ant1	6385	0.29	0.36	80.56	---	---
	Ant2	6385	0.29	0.36	80.56	---	---
	Ant3	6385	0.29	0.36	80.56	---	---
	Ant4	6385	0.29	0.35	82.86	---	---
	Ant1	6465	0.29	0.36	80.56	---	---
	Ant2	6465	0.29	0.35	82.86	---	---
	Ant3	6465	0.29	0.36	80.56	---	---
	Ant4	6465	0.29	0.36	80.56	---	---
	Ant1	6545	0.29	0.36	80.56	---	---
	Ant2	6545	0.29	0.36	80.56	---	---

	Ant3	6545	0.29	0.36	80.56	---	---
	Ant4	6545	0.29	0.35	82.86	---	---
	Ant1	6625	0.29	0.36	80.56	---	---
	Ant2	6625	0.29	0.36	80.56	---	---
	Ant3	6625	0.29	0.35	82.86	---	---
	Ant4	6625	0.29	0.36	80.56	---	---
	Ant1	6705	0.29	0.35	82.86	---	---
	Ant2	6705	0.29	0.36	80.56	---	---
	Ant3	6705	0.29	0.35	82.86	---	---
	Ant4	6705	0.29	0.36	80.56	---	---
	Ant1	6785	0.29	0.36	80.56	---	---
	Ant2	6785	0.29	0.36	80.56	---	---
	Ant3	6785	0.29	0.36	80.56	---	---
	Ant4	6785	0.29	0.36	80.56	---	---
	Ant1	6865	0.29	0.36	80.56	---	---
	Ant2	6865	0.29	0.36	80.56	---	---
	Ant3	6865	0.29	0.36	80.56	---	---
	Ant4	6865	0.29	0.36	80.56	---	---
	Ant1	6945	0.29	0.36	80.56	---	---
	Ant2	6945	0.29	0.36	80.56	---	---
	Ant3	6945	0.29	0.36	80.56	---	---
	Ant4	6945	0.29	0.36	80.56	---	---
	Ant1	7025	0.29	0.36	80.56	---	---
	Ant2	7025	0.29	0.35	82.86	---	---
	Ant3	7025	0.29	0.35	82.86	---	---
	Ant4	7025	0.29	0.36	80.56	---	---
11AX160MIMO	Ant1	6025	0.18	0.25	72.00	---	---
	Ant2	6025	0.18	0.25	72.00	---	---
	Ant3	6025	0.18	0.25	72.00	---	---
	Ant4	6025	0.18	0.25	72.00	---	---
	Ant1	6185	0.18	0.25	72.00	---	---
	Ant2	6185	0.18	0.25	72.00	---	---
	Ant3	6185	0.18	0.25	72.00	---	---
	Ant4	6185	0.18	0.25	72.00	---	---
	Ant1	6345	0.18	0.25	72.00	---	---
	Ant2	6345	0.18	0.25	72.00	---	---
	Ant3	6345	0.18	0.25	72.00	---	---
	Ant4	6345	0.18	0.25	72.00	---	---
	Ant1	6505	0.18	0.25	72.00	---	---
	Ant2	6505	0.18	0.25	72.00	---	---
	Ant3	6505	0.18	0.25	72.00	---	---
	Ant4	6505	0.18	0.25	72.00	---	---
	Ant1	6665	0.18	0.25	72.00	---	---
	Ant2	6665	0.18	0.25	72.00	---	---
	Ant3	6665	0.18	0.25	72.00	---	---
	Ant4	6665	0.18	0.25	72.00	---	---
	Ant1	6825	0.18	0.25	72.00	---	---
	Ant2	6825	0.18	0.25	72.00	---	---
	Ant3	6825	0.18	0.25	72.00	---	---
	Ant4	6825	0.18	0.25	72.00	---	---
	Ant1	6985	0.18	0.25	72.00	---	---
	Ant2	6985	0.18	0.25	72.00	---	---
	Ant3	6985	0.18	0.25	72.00	---	---
	Ant4	6985	0.18	0.25	72.00	---	---
11BE20MIMO	Ant1	5955	1.03	1.10	93.64	---	---
	Ant2	5955	1.03	1.09	94.50	---	---
	Ant3	5955	1.03	1.09	94.50	---	---
	Ant4	5955	1.03	1.09	94.50	---	---
	Ant1	6175	1.03	1.09	94.50	---	---
	Ant2	6175	1.03	1.10	93.64	---	---
	Ant3	6175	1.03	1.09	94.50	---	---
	Ant4	6175	1.03	1.09	94.50	---	---
	Ant1	6415	1.03	1.10	93.64	---	---
	Ant2	6415	1.03	1.10	93.64	---	---


	Ant3	6415	1.03	1.09	94.50	---	---
	Ant4	6415	1.03	1.09	94.50	---	---
	Ant1	6435	1.03	1.10	93.64	---	---
	Ant2	6435	1.03	1.09	94.50	---	---
	Ant3	6435	1.03	1.09	94.50	---	---
	Ant4	6435	1.03	1.09	94.50	---	---
	Ant1	6475	1.03	1.09	94.50	---	---
	Ant2	6475	1.03	1.10	93.64	---	---
	Ant3	6475	1.03	1.09	94.50	---	---
	Ant4	6475	1.03	1.09	94.50	---	---
	Ant1	6515	1.03	1.10	93.64	---	---
	Ant2	6515	1.03	1.10	93.64	---	---
	Ant3	6515	1.03	1.09	94.50	---	---
	Ant4	6515	1.03	1.09	94.50	---	---
	Ant1	6535	1.03	1.10	93.64	---	---
	Ant2	6535	1.03	1.09	94.50	---	---
	Ant3	6535	1.03	1.09	94.50	---	---
	Ant4	6535	1.03	1.09	94.50	---	---
	Ant1	6695	1.03	1.09	94.50	---	---
	Ant2	6695	1.03	1.10	93.64	---	---
	Ant3	6695	1.03	1.09	94.50	---	---
	Ant4	6695	1.03	1.09	94.50	---	---
	Ant1	6855	1.03	1.10	93.64	---	---
	Ant2	6855	1.03	1.10	93.64	---	---
	Ant3	6855	1.03	1.09	94.50	---	---
	Ant4	6855	1.03	1.09	94.50	---	---
	Ant1	6875	1.03	1.09	94.50	---	---
	Ant2	6875	1.03	1.10	93.64	---	---
	Ant3	6875	1.03	1.10	93.64	---	---
	Ant4	6875	1.03	1.09	94.50	---	---
	Ant1	6895	1.03	1.09	94.50	---	---
	Ant2	6895	1.03	1.09	94.50	---	---
	Ant3	6895	1.03	1.10	93.64	---	---
	Ant4	6895	1.03	1.10	93.64	---	---
	Ant1	6995	1.03	1.09	94.50	---	---
	Ant2	6995	1.98	2.05	96.59	---	---
	Ant3	6995	1.03	1.10	93.64	---	---
	Ant4	6995	1.03	1.09	94.50	---	---
	Ant1	7115	1.03	1.09	94.50	---	---
	Ant2	7115	1.03	1.10	93.64	---	---
	Ant3	7115	1.03	1.10	93.64	---	---
	Ant4	7115	1.03	1.09	94.50	---	---
11BE40MIMO	Ant1	5965	0.24	0.30	80.00	---	---
	Ant2	5965	0.23	0.30	76.67	---	---
	Ant3	5965	0.24	0.30	80.00	---	---
	Ant4	5965	0.23	0.30	76.67	---	---
	Ant1	6165	0.24	0.30	80.00	---	---
	Ant2	6165	0.23	0.30	76.67	---	---
	Ant3	6165	0.24	0.30	80.00	---	---
	Ant4	6165	0.24	0.30	80.00	---	---
	Ant1	6405	0.24	0.30	80.00	---	---
	Ant2	6405	0.23	0.30	76.67	---	---
	Ant3	6405	0.24	0.30	80.00	---	---
	Ant4	6405	0.24	0.30	80.00	---	---
	Ant1	6445	0.24	0.30	80.00	---	---
	Ant2	6445	0.24	0.30	80.00	---	---
	Ant3	6445	0.24	0.30	80.00	---	---
	Ant4	6445	0.23	0.30	76.67	---	---
	Ant1	6485	0.24	0.30	80.00	---	---
	Ant2	6485	0.24	0.30	80.00	---	---
	Ant3	6485	0.23	0.30	76.67	---	---
	Ant4	6485	0.23	0.30	76.67	---	---
	Ant1	6525	0.23	0.30	76.67	---	---
	Ant2	6525	0.23	0.30	76.67	---	---

	Ant3	6525	0.23	0.30	76.67	---	---
	Ant4	6525	0.24	0.30	80.00	---	---
	Ant1	6565	0.24	0.30	80.00	---	---
	Ant2	6565	0.24	0.30	80.00	---	---
	Ant3	6565	0.23	0.30	76.67	---	---
	Ant4	6565	0.24	0.30	80.00	---	---
	Ant1	6685	0.23	0.30	76.67	---	---
	Ant2	6685	0.23	0.30	76.67	---	---
	Ant3	6685	0.24	0.30	80.00	---	---
	Ant4	6685	0.23	0.30	76.67	---	---
	Ant1	6845	0.23	0.30	76.67	---	---
	Ant2	6845	0.23	0.30	76.67	---	---
	Ant3	6845	0.24	0.30	80.00	---	---
	Ant4	6845	0.24	0.30	80.00	---	---
	Ant1	6885	0.24	0.30	80.00	---	---
	Ant2	6885	0.23	0.30	76.67	---	---
	Ant3	6885	0.23	0.30	76.67	---	---
	Ant4	6885	0.24	0.30	80.00	---	---
	Ant1	6925	0.23	0.30	76.67	---	---
	Ant2	6925	0.23	0.30	76.67	---	---
	Ant3	6925	0.24	0.30	80.00	---	---
	Ant4	6925	0.23	0.30	76.67	---	---
	Ant1	6965	0.23	0.30	76.67	---	---
	Ant2	6965	0.23	0.30	76.67	---	---
	Ant3	6965	0.24	0.30	80.00	---	---
	Ant4	6965	0.24	0.30	80.00	---	---
	Ant1	7085	0.24	0.30	80.00	---	---
	Ant2	7085	0.23	0.30	76.67	---	---
	Ant3	7085	0.23	0.30	76.67	---	---
	Ant4	7085	0.24	0.30	80.00	---	---
11BE80MIMO	Ant1	5985	0.17	0.24	70.83	---	---
	Ant2	5985	0.17	0.23	73.91	---	---
	Ant3	5985	0.17	0.23	73.91	---	---
	Ant4	5985	0.17	0.24	70.83	---	---
	Ant1	6145	0.17	0.24	70.83	---	---
	Ant2	6145	0.17	0.23	73.91	---	---
	Ant3	6145	0.17	0.23	73.91	---	---
	Ant4	6145	0.17	0.23	73.91	---	---
	Ant1	6385	0.17	0.23	73.91	---	---
	Ant2	6385	0.17	0.23	73.91	---	---
	Ant3	6385	0.17	0.24	70.83	---	---
	Ant4	6385	0.17	0.23	73.91	---	---
	Ant1	6465	0.17	0.23	73.91	---	---
	Ant2	6465	0.17	0.23	73.91	---	---
	Ant3	6465	0.17	0.23	73.91	---	---
	Ant4	6465	0.17	0.24	70.83	---	---
	Ant1	6545	0.17	0.24	70.83	---	---
	Ant2	6545	0.17	0.23	73.91	---	---
	Ant3	6545	0.17	0.24	70.83	---	---
	Ant4	6545	0.17	0.24	70.83	---	---
	Ant1	6625	0.17	0.24	70.83	---	---
	Ant2	6625	0.17	0.23	73.91	---	---
	Ant3	6625	0.17	0.24	70.83	---	---
	Ant4	6625	0.17	0.23	73.91	---	---
	Ant1	6705	0.17	0.23	73.91	---	---
	Ant2	6705	0.17	0.23	73.91	---	---
	Ant3	6705	0.17	0.23	73.91	---	---
	Ant4	6705	0.17	0.23	73.91	---	---
	Ant1	6785	0.17	0.24	70.83	---	---
	Ant2	6785	0.17	0.23	73.91	---	---
	Ant3	6785	0.17	0.24	70.83	---	---
	Ant4	6785	0.17	0.33	51.52	---	---
	Ant1	6865	0.17	0.23	73.91	---	---
	Ant2	6865	0.17	0.24	70.83	---	---

	Ant3	6865	0.17	0.23	73.91	---	---
	Ant4	6865	0.17	0.24	70.83	---	---
	Ant1	6945	0.17	0.24	70.83	---	---
	Ant2	6945	0.17	0.24	70.83	---	---
	Ant3	6945	0.17	0.23	73.91	---	---
	Ant4	6945	0.17	0.24	70.83	---	---
	Ant1	7025	0.17	0.24	70.83	---	---
	Ant2	7025	0.17	0.23	73.91	---	---
	Ant3	7025	0.17	0.24	70.83	---	---
	Ant4	7025	0.17	0.24	70.83	---	---
11BE160MIMO	Ant1	6025	0.14	0.20	70.00	---	---
	Ant2	6025	0.14	0.21	66.67	---	---
	Ant3	6025	0.14	0.20	70.00	---	---
	Ant4	6025	0.14	0.20	70.00	---	---
	Ant1	6185	0.14	0.20	70.00	---	---
	Ant2	6185	0.14	0.21	66.67	---	---
	Ant3	6185	0.14	0.20	70.00	---	---
	Ant4	6185	0.14	0.20	70.00	---	---
	Ant1	6345	0.14	0.20	70.00	---	---
	Ant2	6345	0.14	0.21	66.67	---	---
	Ant3	6345	0.14	0.20	70.00	---	---
	Ant4	6345	0.14	0.20	70.00	---	---
	Ant1	6505	0.18	0.24	75.00	---	---
	Ant2	6505	0.18	0.25	72.00	---	---
	Ant3	6505	0.18	0.24	75.00	---	---
	Ant4	6505	0.18	0.25	72.00	---	---
	Ant1	6665	0.18	0.24	75.00	---	---
	Ant2	6665	0.18	0.25	72.00	---	---
	Ant3	6665	0.18	0.25	72.00	---	---
	Ant4	6665	0.18	0.25	72.00	---	---
	Ant1	6825	0.18	0.24	75.00	---	---
	Ant2	6825	0.18	0.25	72.00	---	---
	Ant3	6825	0.18	0.24	75.00	---	---
	Ant4	6825	0.18	0.25	72.00	---	---
	Ant1	6985	0.18	0.25	72.00	---	---
	Ant2	6985	0.18	0.25	72.00	---	---
	Ant3	6985	0.18	0.25	72.00	---	---
	Ant4	6985	0.18	0.25	72.00	---	---
11BE320MIMO	Ant1	6105	0.13	0.20	65.00	---	---
	Ant2	6105	0.13	0.20	65.00	---	---
	Ant3	6105	0.13	0.20	65.00	---	---
	Ant4	6105	0.12	0.19	63.16	---	---
	Ant1	6265	0.13	0.20	65.00	---	---
	Ant2	6265	0.13	0.20	65.00	---	---
	Ant3	6265	0.13	0.20	65.00	---	---
	Ant4	6265	0.13	0.20	65.00	---	---
	Ant1	6585	0.13	0.20	65.00	---	---
	Ant2	6585	0.13	0.20	65.00	---	---
	Ant3	6585	0.13	0.20	65.00	---	---
	Ant4	6585	0.13	0.20	65.00	---	---
	Ant1	6745	0.12	0.19	63.16	---	---
	Ant2	6745	0.13	0.20	65.00	---	---
	Ant3	6745	0.13	0.20	65.00	---	---
	Ant4	6745	0.12	0.19	63.16	---	---
	Ant1	6905	0.12	0.19	63.16	---	---
	Ant2	6905	0.13	0.20	65.00	---	---
	Ant3	6905	0.13	0.20	65.00	---	---
	Ant4	6905	0.12	0.19	63.16	---	---

7. Maximum Equivalent Isotropically Radiated Power (E.I.R.P.)

7.1. Block diagram of test setup

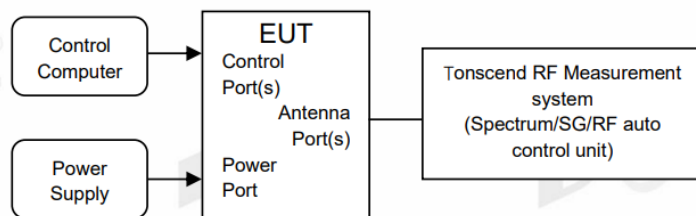

7.2. Limits

FCC Part15, Subpart E/ RSS-248		
Devices type	Limit	Frequency Range (MHz)
RLAN devices other than client devices	For FCC: standard power access point and fixed client device: 36 dBm outdoor devices: any elevation angle above 30 degrees as measured from the horizon must not exceed 125 mW (21 dBm).	5925-6425 and 6525-6875
	For FCC: indoor access point: 30 dBm	5925-7125
	For FCC: a subordinate device operating under the control of an indoor access point: 30 dBm	5925-7125
	For RSS: 30 dBm/occupied bandwidth.	5925-7125
Client devices	For FCC: client devices under the control of a standard power access point: 30 dBm, and the device must limit its power to no more than 6 dB below its associated standard power access point's authorized transmit power.	5925-6425 and 6525-6875
	For FCC: For client devices operating under the control of an indoor access point: 24 dBm	5925-7125
	For RSS: 24 dBm/occupied bandwidth	5925-7125

7.3. Test procedure

Connect each EUT's antenna output to power sensor by RF cable and attenuator

Measure the output power of each antenna port by power sensor.

7.4. Test result

Test Mode	Antenna	Frequency [MHz]	Duty Cycle [%]	DC Factor [dB]	Result [dBm]	EIRP [dBm]	EIRP Limit [dBm]	Verdict
11AX20MIMO	Ant1	5955	94.44	0.25	3.67	10.16	≤30.00	PASS
	Ant2	5955	93.58	0.29	2.55	6.54	≤30.00	PASS
	Ant3	5955	94.44	0.25	3.44	9.22	≤30.00	PASS
	Ant4	5955	93.58	0.29	3.28	8.91	≤30.00	PASS
	total	5955	---	---	9.28	15.77	≤30.00	PASS
	Ant1	6175	93.58	0.29	3.25	9.74	≤30.00	PASS
	Ant2	6175	94.44	0.25	2.55	6.54	≤30.00	PASS
	Ant3	6175	94.44	0.25	3.23	9.01	≤30.00	PASS
	Ant4	6175	93.58	0.29	2.47	8.1	≤30.00	PASS
	total	6175	---	---	8.91	15.4	≤30.00	PASS
	Ant1	6415	93.58	0.29	2.58	9.07	≤30.00	PASS
	Ant2	6415	94.44	0.25	1.81	5.8	≤30.00	PASS
	Ant3	6415	93.58	0.29	2.45	8.23	≤30.00	PASS
	Ant4	6415	94.44	0.25	2.25	7.88	≤30.00	PASS
	total	6415	---	---	8.30	14.79	≤30.00	PASS
	Ant1	6435	94.44	0.25	2.49	8.4	≤30.00	PASS
	Ant2	6435	93.58	0.29	2.42	6.47	≤30.00	PASS
	Ant3	6435	94.44	0.25	2.28	8.25	≤30.00	PASS
	Ant4	6435	93.58	0.29	2.62	7.46	≤30.00	PASS
	total	6435	---	---	8.47	14.44	≤30.00	PASS
	Ant1	6475	93.58	0.29	2.08	7.99	≤30.00	PASS
	Ant2	6475	94.44	0.25	2.76	6.81	≤30.00	PASS
	Ant3	6475	94.44	0.25	1.57	7.54	≤30.00	PASS
	Ant4	6475	93.58	0.29	2.49	7.33	≤30.00	PASS
	total	6475	---	---	8.27	14.24	≤30.00	PASS
	Ant1	6515	93.58	0.29	2.25	8.16	≤30.00	PASS
	Ant2	6515	94.44	0.25	3.51	7.56	≤30.00	PASS
	Ant3	6515	93.58	0.29	2.33	8.3	≤30.00	PASS
	Ant4	6515	94.44	0.25	3.03	7.87	≤30.00	PASS
	total	6515	---	---	8.83	14.8	≤30.00	PASS
	Ant1	6535	94.44	0.25	2.9	8.67	≤30.00	PASS
	Ant2	6535	94.44	0.25	3.52	8.19	≤30.00	PASS
	Ant3	6535	93.58	0.29	2.53	7.11	≤30.00	PASS
	Ant4	6535	93.58	0.29	3.31	9.15	≤30.00	PASS
	total	6535	---	---	9.10	14.94	≤30.00	PASS
	Ant1	6695	94.44	0.25	1.91	7.68	≤30.00	PASS
	Ant2	6695	94.44	0.25	2.59	7.26	≤30.00	PASS
	Ant3	6695	93.58	0.29	1.5	6.08	≤30.00	PASS
	Ant4	6695	93.58	0.29	1.02	6.86	≤30.00	PASS
	total	6695	---	---	7.81	13.65	≤30.00	PASS
	Ant1	6855	94.44	0.25	0.97	6.74	≤30.00	PASS
	Ant2	6855	94.44	0.25	1.56	6.23	≤30.00	PASS
	Ant3	6855	94.44	0.25	2.34	6.92	≤30.00	PASS
	Ant4	6855	94.44	0.25	2.23	8.07	≤30.00	PASS
	total	6855	---	---	7.83	13.67	≤30.00	PASS
	Ant1	6875	93.58	0.29	1.05	6.26	≤30.00	PASS
	Ant2	6875	94.44	0.25	0.2	6.28	≤30.00	PASS
	Ant3	6875	94.44	0.25	1.89	7.2	≤30.00	PASS
	Ant4	6875	94.44	0.25	1.8	7.47	≤30.00	PASS
	total	6875	---	---	7.31	13.39	≤30.00	PASS
	Ant1	6895	93.58	0.29	1.11	6.32	≤30.00	PASS
	Ant2	6895	93.58	0.29	0.39	6.47	≤30.00	PASS
	Ant3	6895	93.58	0.29	0.93	6.24	≤30.00	PASS
	Ant4	6895	94.44	0.25	0.82	6.49	≤30.00	PASS
	total	6895	---	---	6.84	12.92	≤30.00	PASS
	Ant1	6995	94.44	0.25	3.16	8.37	≤30.00	PASS
	Ant2	6995	93.58	0.29	2.79	8.87	≤30.00	PASS
	Ant3	6995	93.58	0.29	2.76	8.07	≤30.00	PASS
	Ant4	6995	94.44	0.25	2.55	8.22	≤30.00	PASS
	total	6995	---	---	8.84	14.92	≤30.00	PASS
	Ant1	7115	85.71	0.67	-9.35	-4.14	≤30.00	PASS
	Ant2	7115	85.37	0.69	-8.43	-2.35	≤30.00	PASS
	Ant3	7115	85.37	0.69	-9.30	-3.99	≤30.00	PASS
	Ant4	7115	85.37	0.69	-8.44	-2.77	≤30.00	PASS
	total	7115	---	---	-2.84	3.24	≤30.00	PASS
11AX40MIMO	Ant1	5965	90.00	0.46	7.32	13.81	≤30.00	PASS