

Maximum conducted output power

Shenzhen Anbotech Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotech.com



Hotline
400-003-0500
www.anbotech.com.cn



Appendix D: Maximum power spectral density

Test Result

Test Mode	Antenna	Frequency [MHz]	Result [dBm/30kHz]	Result [dBm/3kHz]	Result [dBm/3kHz]	Limit [dBm/3kHz]
11B	Ant1	2412	-0.93	-10.93	≤8.00	PASS
	Ant2	2412	-0.37	-10.37	≤8.00	PASS
	Ant1	2437	-0.67	-10.67	≤8.00	PASS
	Ant2	2437	-1.47	-11.47	≤8.00	PASS
	Ant1	2462	-0.81	-10.81	≤8.00	PASS
	Ant2	2462	-1.12	-11.12	≤8.00	PASS
11G	Ant1	2412	-7.69	-17.69	≤8.00	PASS
	Ant2	2412	-6.35	-16.35	≤8.00	PASS
	Ant1	2437	-7.33	-17.33	≤8.00	PASS
	Ant2	2437	-6.6	-16.6	≤8.00	PASS
	Ant1	2462	-7.61	-17.61	≤8.00	PASS
	Ant2	2462	-6.76	-16.76	≤8.00	PASS
11N20MIMO	Ant1	2412	0.03	-9.97	≤8.00	PASS
	Ant2	2412	-2.54	-12.54	≤8.00	PASS
	total	2412	1.94	-8.06	≤8.00	PASS
	Ant1	2437	-1.86	-11.86	≤8.00	PASS
	Ant2	2437	0.25	-9.75	≤8.00	PASS
	total	2437	2.33	-7.67	≤8.00	PASS
	Ant1	2462	-3.15	-13.15	≤8.00	PASS
	Ant2	2462	-3.24	-13.24	≤8.00	PASS
	total	2462	-0.18	-10.18	≤8.00	PASS
11N40MIMO	Ant1	2422	-5.09	-15.09	≤8.00	PASS
	Ant2	2422	-4.9	-14.90	≤8.00	PASS
	total	2422	-1.98	-11.98	≤8.00	PASS
	Ant1	2437	-5.8	-15.80	≤8.00	PASS
	Ant2	2437	-5.19	-15.19	≤8.00	PASS
	total	2437	-2.47	-12.47	≤8.00	PASS
	Ant1	2452	-6.11	-16.11	≤8.00	PASS
	Ant2	2452	-5.43	-15.43	≤8.00	PASS
	total	2452	-2.75	-12.75	≤8.00	PASS
11AX20MIMO	Ant1	2412	-4.18	-14.18	≤8.00	PASS
	Ant2	2412	-4.86	-14.86	≤8.00	PASS
	total	2412	-1.50	-11.50	≤8.00	PASS
	Ant1	2437	-4.09	-14.09	≤8.00	PASS
	Ant2	2437	-4.79	-14.79	≤8.00	PASS
	total	2437	-1.42	-11.42	≤8.00	PASS
	Ant1	2462	-5.01	-15.01	≤8.00	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn




	Ant2	2462	-4.73	-14.73	≤8.00	PASS
	total	2462	-1.86	-11.86	≤8.00	PASS
11AX40MIMO	Ant1	2422	-5.38	-15.38	≤8.00	PASS
	Ant2	2422	-5.13	-15.13	≤8.00	PASS
	total	2422	-2.24	-12.24	≤8.00	PASS
	Ant1	2437	-5.18	-15.18	≤8.00	PASS
	Ant2	2437	-6.71	-16.71	≤8.00	PASS
	total	2437	-2.87	-12.87	≤8.00	PASS
	Ant1	2452	-5.57	-15.57	≤8.00	PASS
	Ant2	2452	-5.66	-15.66	≤8.00	PASS
	total	2452	-2.60	-12.60	≤8.00	PASS

Note:

1. The Duty Cycle Factor($10 \cdot \log(1/D)$) and cable loss are compensated in the graph.
2. $\text{PSD}(\text{dBm}/3\text{kHz}) = \text{PSD}(\text{dBm}/30\text{kHz}) - (10 \cdot \log(30/3))$



Test Graphs

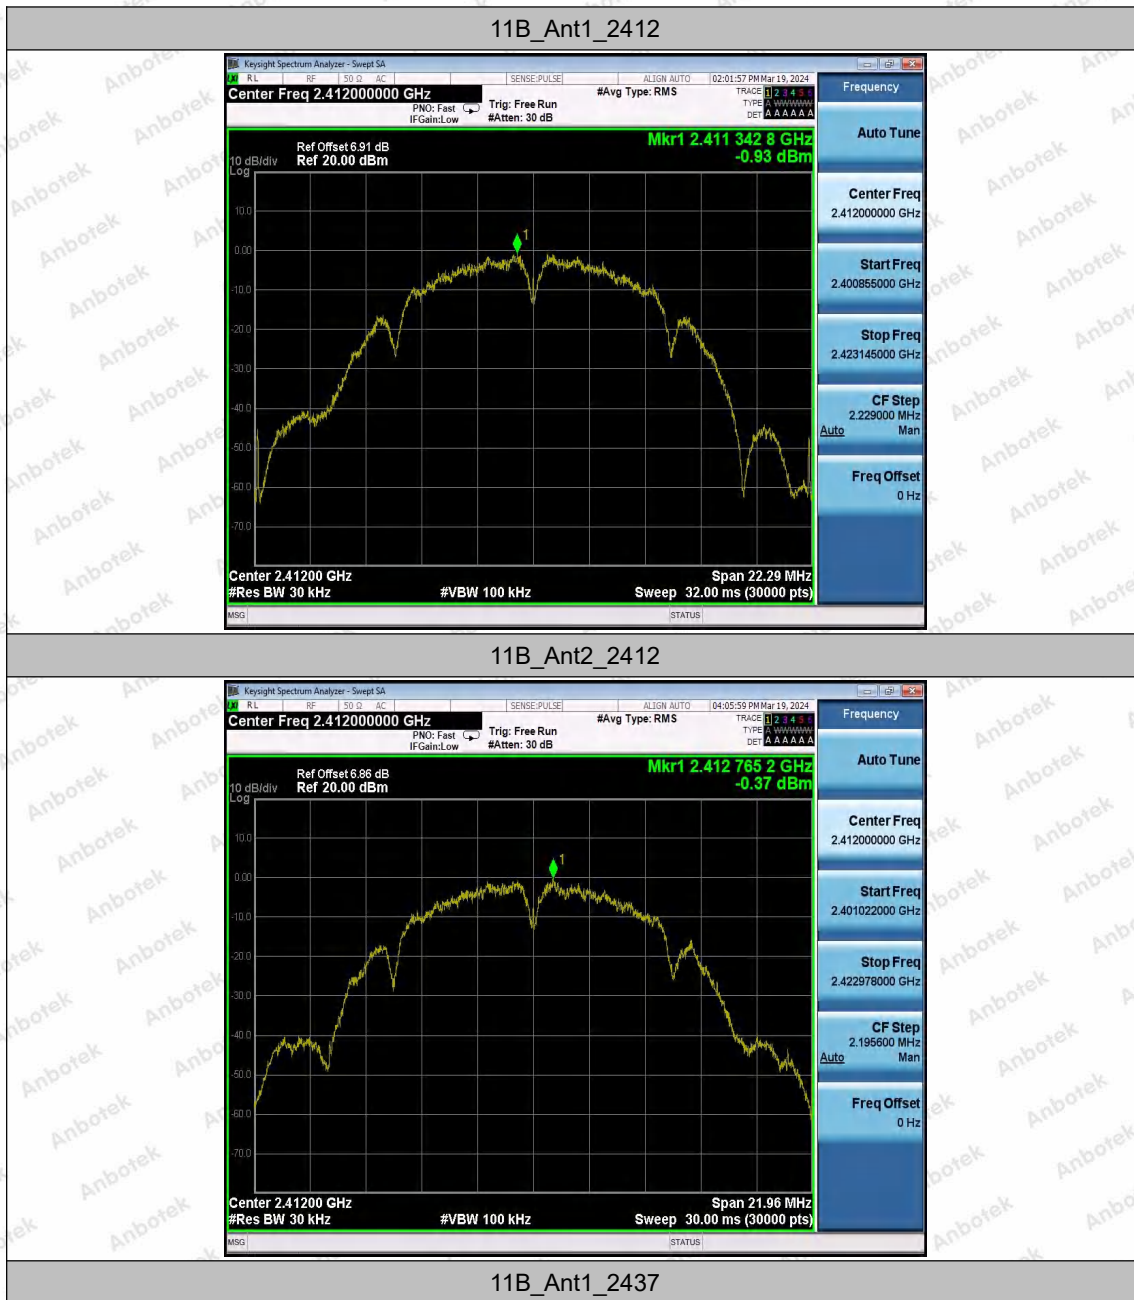

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn





11B_Ant2_2437



11B_Ant1_2462



Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn



11B_Ant2_2462



11G_Ant1_2412



11G_Ant2_2412

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn






11G_Ant1_2437



11G_Ant2_2437

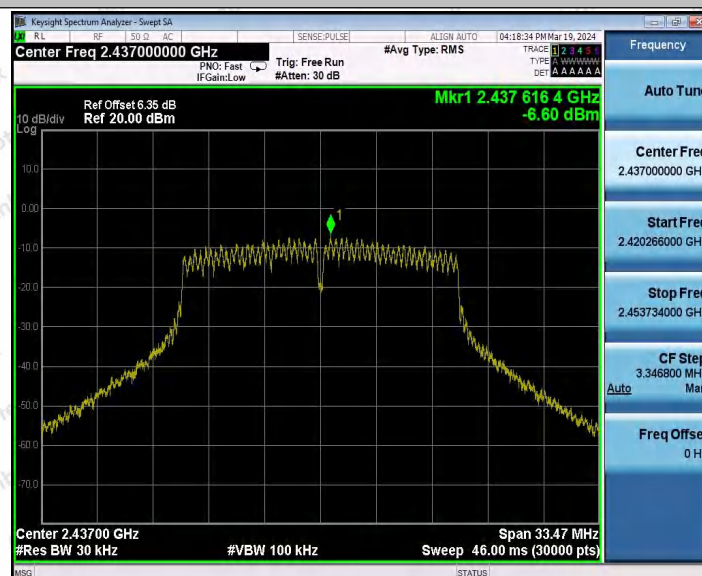

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn



11G_Ant1_2462



11G_Ant2_2462



11N20MIMO_Ant1_2412

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn





11N20MIMO_Ant2_2412



11N20MIMO_Ant1_2437



Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn



11N20MIMO_Ant2_2437



11N20MIMO_Ant1_2462



11N20MIMO_Ant2_2462

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline
400-003-0500
www.anbotek.com.cn






11N40MIMO_Ant1_2422

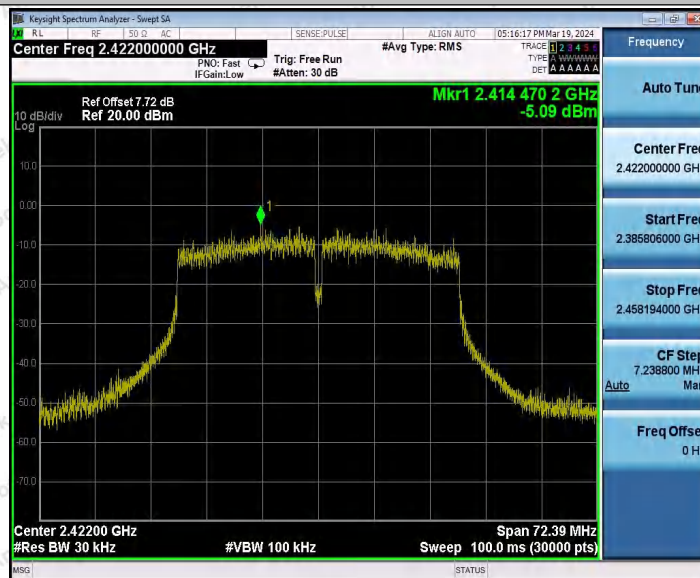

11N40MIMO_Ant2_2422

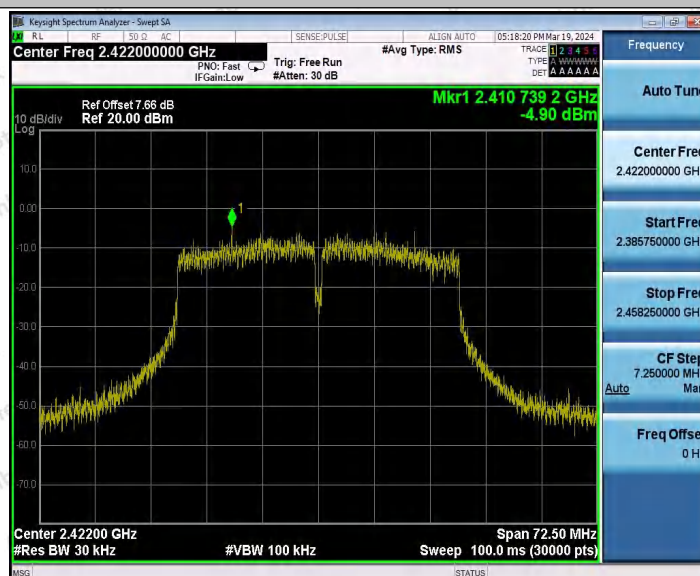

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn



11N40MIMO_Ant1_2437



11N40MIMO_Ant2_2437



11N40MIMO_Ant1_2452


Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn



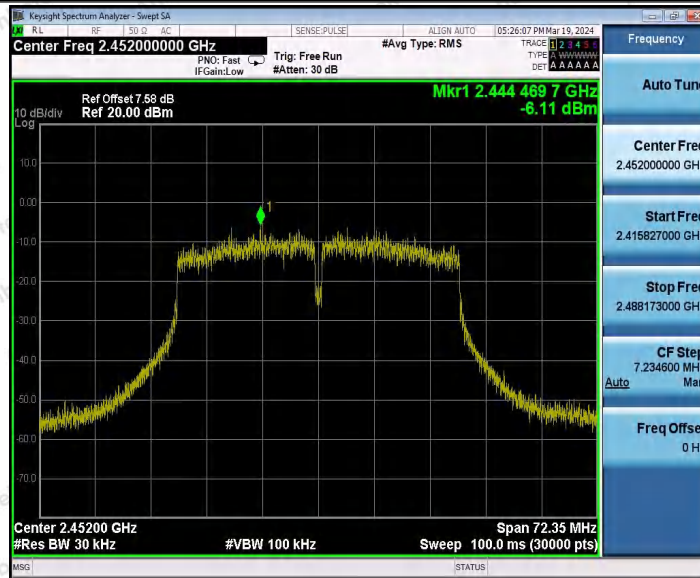

11N40MIMO_Ant2_2452



11AX20MIMO_Ant1_2412



Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn



11AX20MIMO_Ant2_2412



11AX20MIMO_Ant1_2437



11AX20MIMO_Ant2_2437

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn





11AX20MIMO_Ant1_2462



11AX20MIMO_Ant2_2462



Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn



11AX40MIMO_Ant1_2422



11AX40MIMO_Ant2_2422



11AX40MIMO_Ant1_2437


Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn



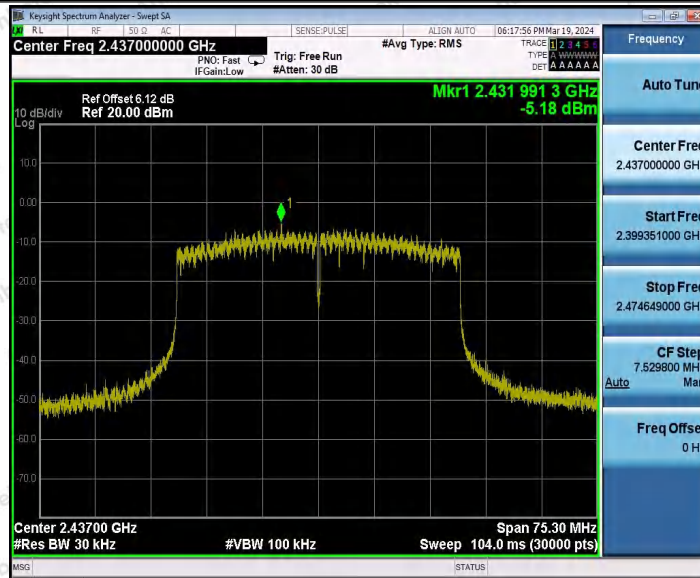

11AX40MIMO_Ant2_2437



11AX40MIMO_Ant1_2452


**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn

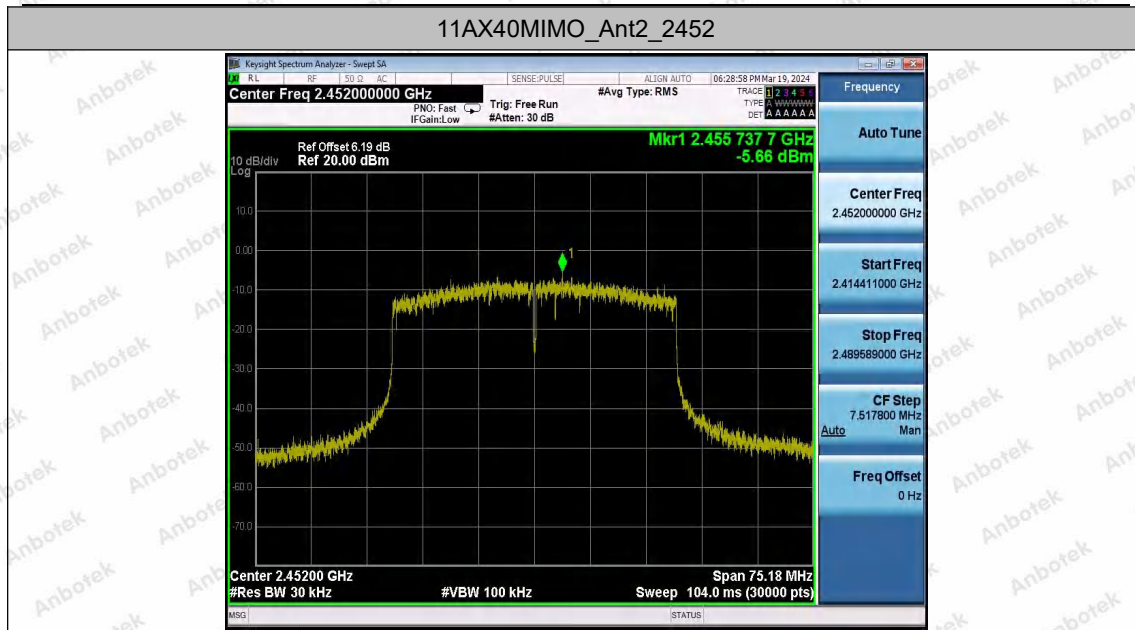

**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn



Appendix E: Conducted Band edge


Test Result

Test Mode	Antenna	ChName	Frequency[MHz]	RefLevel[dBm]	Result[dBm]	Limit[dBm]	Verdict
11B	Ant1	Low	2412	11.86	-33.25	≤-18.14	PASS
	Ant2	Low	2412	12.50	-33.24	≤-17.5	PASS
	Ant1	High	2462	11.84	-42.76	≤-18.16	PASS
	Ant2	High	2462	11.11	-39.58	≤-18.89	PASS
11G	Ant1	Low	2412	3.65	-31.42	≤-26.36	PASS
	Ant2	Low	2412	6.65	-26.92	≤-23.35	PASS
	Ant1	High	2462	5.01	-36.52	≤-24.99	PASS
	Ant2	High	2462	5.24	-42.72	≤-24.76	PASS
11N20MIMO	Ant1	Low	2412	12.05	-22.40	≤-17.95	PASS
	Ant2	Low	2412	12.06	-22.52	≤-17.94	PASS
	Ant1	High	2462	10.62	-28.94	≤-19.39	PASS
	Ant2	High	2462	10.53	-30.12	≤-19.47	PASS
11N40MIMO	Ant1	Low	2422	9.18	-25.19	≤-20.82	PASS
	Ant2	Low	2422	9.19	-21.13	≤-20.81	PASS
	Ant1	High	2452	8.33	-34.54	≤-21.67	PASS
	Ant2	High	2452	8.24	-28.96	≤-21.76	PASS
11AX20MIMO	Ant1	Low	2412	9.92	-26.66	≤-20.08	PASS
	Ant2	Low	2412	9.96	-26.33	≤-20.04	PASS
	Ant1	High	2462	9.92	-39.51	≤-20.08	PASS
	Ant2	High	2462	10.34	-38.38	≤-19.66	PASS
11AX40MIMO	Ant1	Low	2422	9.95	-22.34	≤-20.05	PASS
	Ant2	Low	2422	9.48	-22.63	≤-20.52	PASS
	Ant1	High	2452	9.58	-30.84	≤-20.42	PASS
	Ant2	High	2452	9.60	-30.12	≤-20.4	PASS



Test Graphs

11B_Ant1_Low_2412

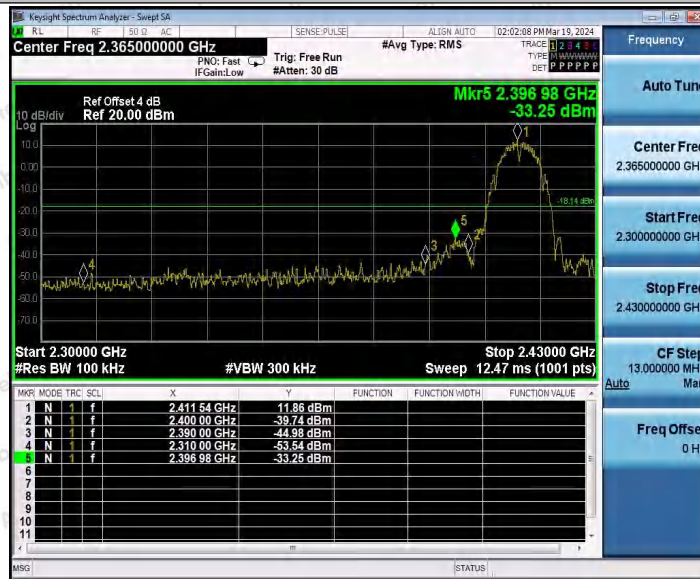

11B_Ant2_Low_2412



11B_Ant1_High_2462


Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline
400-003-0500
www.anbotek.com.cn



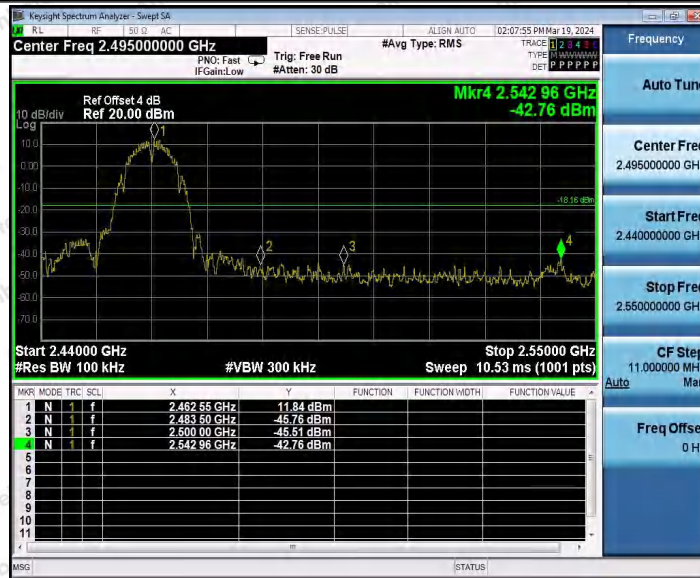

11B_Ant2_High_2462

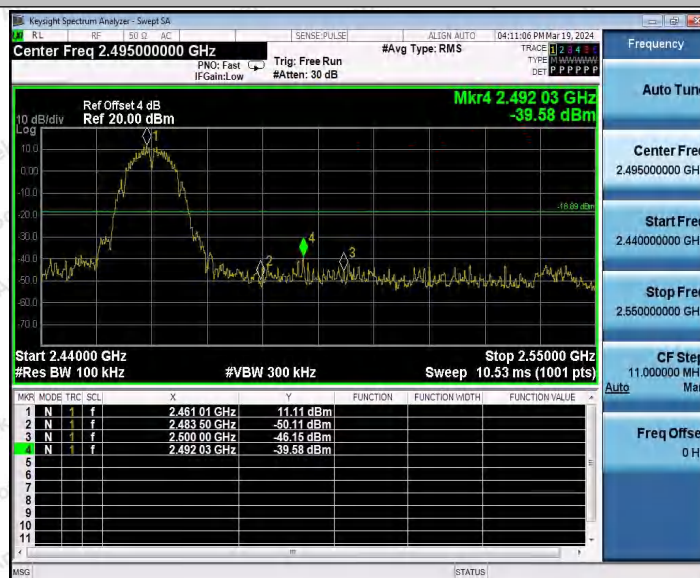

11G_Ant1_Low_2412



Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn



11G_Ant2_Low_2412



11G_Ant1_High_2462



11G_Ant2_High_2462


Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
 400-003-0500
www.anbotek.com.cn



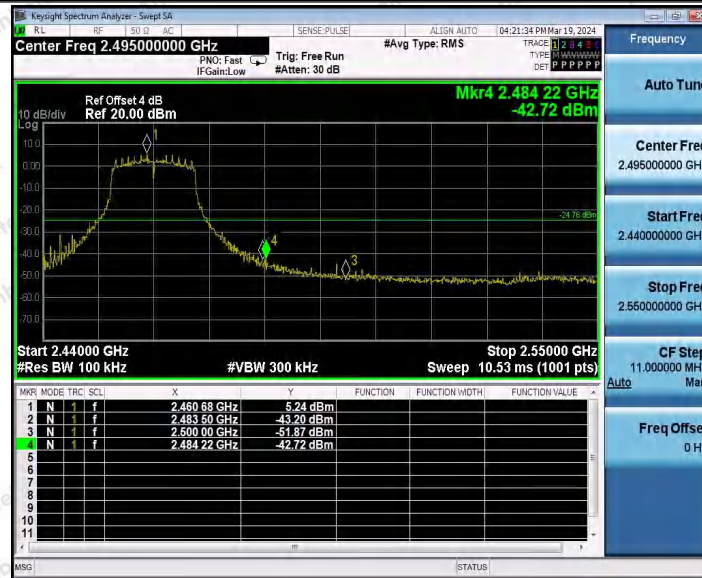

11N20MIMO_Ant1_Low_2412



11N20MIMO_Ant2_Low_2412



Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn



11N20MIMO_Ant1_High_2462



11N20MIMO_Ant2_High_2462



11N40MIMO_Ant1_Low_2422

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn





11N40MIMO_Ant2_Low_2422



11N40MIMO_Ant1_High_2452



Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
 400-003-0500
www.anbotek.com.cn



11N40MIMO_Ant2_High_2452



11AX20MIMO_Ant1_Low_2412



11AX20MIMO_Ant2_Low_2412

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
 400-003-0500
 www.anbotek.com.cn





11AX20MIMO_Ant1_High_2462



11AX20MIMO_Ant2_High_2462



Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
 400-003-0500
www.anbotek.com.cn



11AX40MIMO_Ant1_Low_2422



11AX40MIMO_Ant2_Low_2422



11AX40MIMO_Ant1_High_2452


Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn



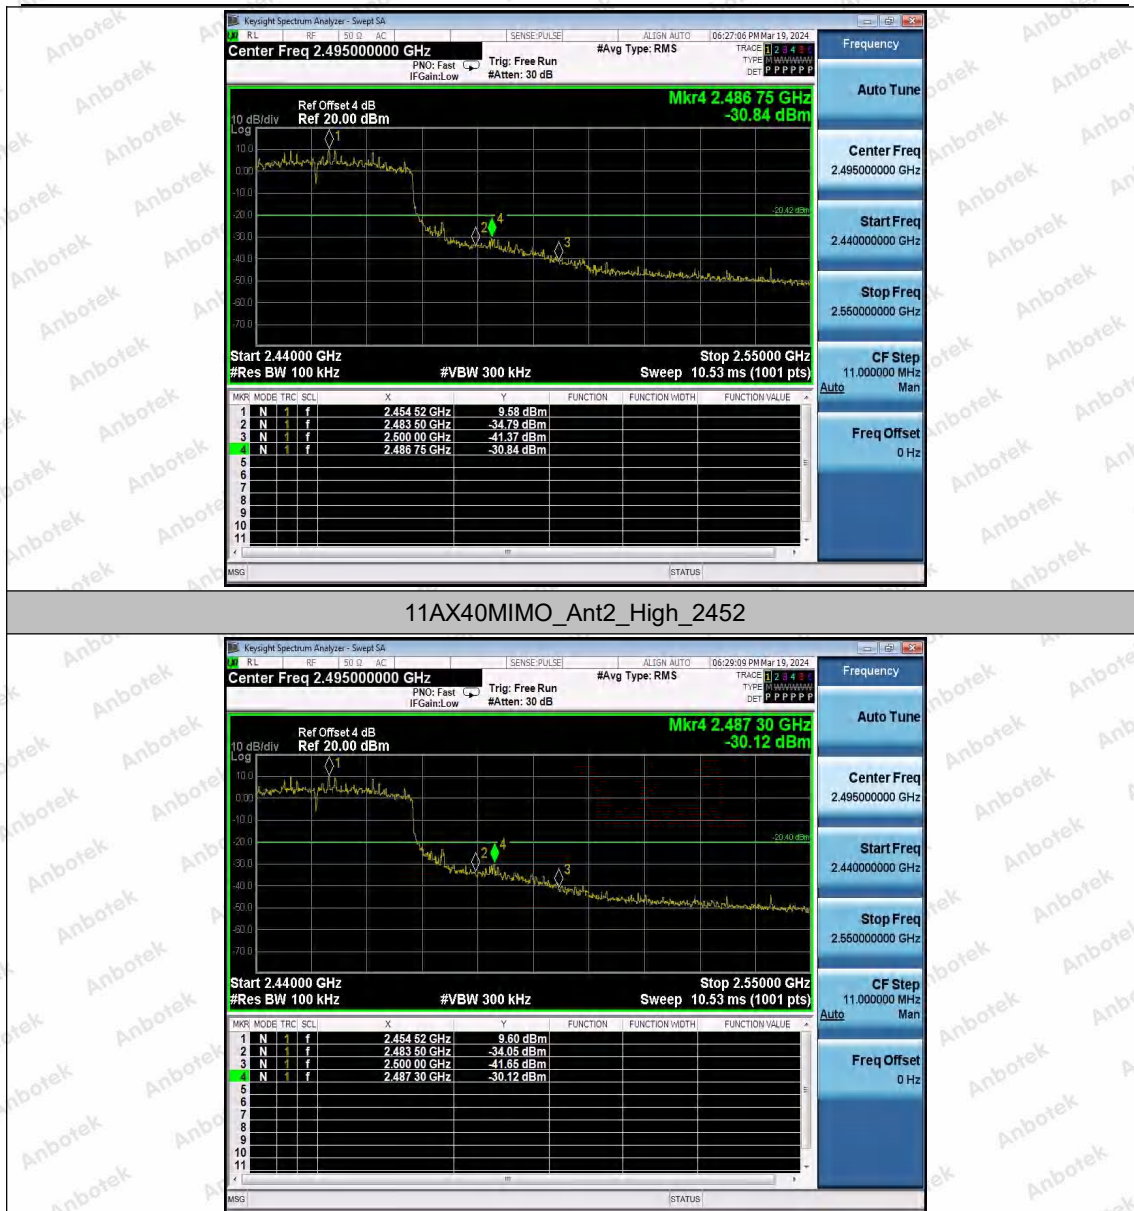

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn



Appendix F: Conducted Spurious Emission

Test Result

Test Mode	Antenna	Frequency[MHz]	FreqRange [Mhz]	RefLevel [dBm]	Result [dBm]	Limit [dBm]	Verdict
11B	Ant1	2412	Reference	11.91	11.91	---	PASS
			30~1000	11.91	-62.56	≤-18.09	PASS
			1000~26500	11.91	-45.08	≤-18.09	PASS
	Ant2	2412	Reference	12.37	12.37	---	PASS
			30~1000	12.37	-62.34	≤-17.63	PASS
			1000~26500	12.37	-42.22	≤-17.63	PASS
	Ant1	2437	Reference	11.79	11.79	---	PASS
			30~1000	11.79	-51.97	≤-18.21	PASS
			1000~26500	11.79	-45.89	≤-18.21	PASS
	Ant2	2437	Reference	11.29	11.29	---	PASS
			30~1000	11.29	-63.01	≤-18.71	PASS
			1000~26500	11.29	-43.78	≤-18.71	PASS
	Ant1	2462	Reference	11.49	11.49	---	PASS
			30~1000	11.49	-49.88	≤-18.51	PASS
			1000~26500	11.49	-45.42	≤-18.51	PASS
	Ant2	2462	Reference	11.08	11.08	---	PASS
			30~1000	11.08	-61.78	≤-18.92	PASS
			1000~26500	11.08	-45.42	≤-18.92	PASS
11G	Ant1	2412	Reference	5.33	5.33	---	PASS
			30~1000	5.33	-64.79	≤-24.67	PASS
			1000~26500	5.33	-50.18	≤-24.67	PASS
	Ant2	2412	Reference	6.07	6.07	---	PASS
			30~1000	6.07	-64.68	≤-23.93	PASS
			1000~26500	6.07	-48.12	≤-23.93	PASS
	Ant1	2437	Reference	5.16	5.16	---	PASS
			30~1000	5.16	-64.93	≤-24.84	PASS
			1000~26500	5.16	-49.27	≤-24.84	PASS
	Ant2	2437	Reference	5.45	5.45	---	PASS
			30~1000	5.45	-64.32	≤-24.55	PASS
			1000~26500	5.45	-49.9	≤-24.55	PASS
	Ant1	2462	Reference	5.06	5.06	---	PASS
			30~1000	5.06	-65.03	≤-24.94	PASS
			1000~26500	5.06	-50.49	≤-24.94	PASS
	Ant2	2462	Reference	5.67	5.67	---	PASS
			30~1000	5.67	-64.24	≤-24.33	PASS
			1000~26500	5.67	-49.98	≤-24.33	PASS
11N20MIMO	Ant1	2412	Reference	12.02	12.02	---	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn



	Ant2	2412	30~1000	12.02	-62.25	≤-17.98	PASS
			1000~26500	12.02	-45.94	≤-17.98	PASS
			Reference	12.05	12.05	---	PASS
			30~1000	12.05	-61.79	≤-17.95	PASS
			1000~26500	12.05	-45.94	≤-17.95	PASS
			Reference	11.74	11.74	---	PASS
	Ant1	2437	30~1000	11.74	-62.84	≤-18.26	PASS
			1000~26500	11.74	-44.34	≤-18.26	PASS
			Reference	11.75	11.75	---	PASS
	Ant2	2437	30~1000	11.75	-62.82	≤-18.25	PASS
			1000~26500	11.75	-46.36	≤-18.25	PASS
			Reference	10.57	10.57	---	PASS
	Ant1	2462	30~1000	10.57	-63.65	≤-19.43	PASS
			1000~26500	10.57	-48.14	≤-19.43	PASS
			Reference	10.61	10.61	---	PASS
	Ant2	2462	30~1000	10.61	-63.3	≤-19.39	PASS
			1000~26500	10.61	-45.54	≤-19.39	PASS
			Reference	9.09	9.09	---	PASS
11N40MIMO	Ant1	2422	30~1000	9.09	-62.46	≤-20.91	PASS
			1000~26500	9.09	-47.97	≤-20.91	PASS
			Reference	9.19	9.19	---	PASS
	Ant2	2422	30~1000	9.19	-62.83	≤-20.81	PASS
			1000~26500	9.19	-47.37	≤-20.81	PASS
			Reference	8.43	8.43	---	PASS
	Ant1	2437	30~1000	8.43	-61.81	≤-21.57	PASS
			1000~26500	8.43	-46.47	≤-21.57	PASS
			Reference	8.42	8.42	---	PASS
	Ant2	2437	30~1000	8.42	-62.71	≤-21.58	PASS
			1000~26500	8.42	-46.22	≤-21.58	PASS
			Reference	8.27	8.27	---	PASS
	Ant1	2452	30~1000	8.27	-63.64	≤-21.73	PASS
			1000~26500	8.27	-45.75	≤-21.73	PASS
			Reference	8.27	8.27	---	PASS
	Ant2	2452	30~1000	8.27	-64.18	≤-21.73	PASS
			1000~26500	8.27	-47.89	≤-21.73	PASS
			Reference	9.94	9.94	---	PASS
11AX20MIMO	Ant1	2412	30~1000	9.94	-62.81	≤-20.06	PASS
			1000~26500	9.94	-47.86	≤-20.06	PASS
			Reference	9.96	9.96	---	PASS
	Ant2	2412	30~1000	9.96	-64.22	≤-20.04	PASS
			1000~26500	9.96	-48.01	≤-20.04	PASS
			Reference	10.20	10.20	---	PASS
	Ant1	2437	Reference	10.20	10.20	---	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
 400-003-0500
 www.anbotek.com.cn



	Ant2	2437	30~1000	10.20	-62.85	≤-19.8	PASS
			1000~26500	10.20	-46.58	≤-19.8	PASS
			Reference	10.50	10.50	---	PASS
			30~1000	10.50	-63.27	≤-19.5	PASS
			1000~26500	10.50	-46.58	≤-19.5	PASS
			Reference	10.32	10.32	---	PASS
	Ant1	2462	30~1000	10.32	-63.46	≤-19.68	PASS
			1000~26500	10.32	-46.69	≤-19.68	PASS
			Reference	10.30	10.30	---	PASS
	Ant2	2462	30~1000	10.30	-63.53	≤-19.7	PASS
			1000~26500	10.30	-47.48	≤-19.7	PASS
			Reference	9.85	9.85	---	PASS
11AX40MIMO	Ant1	2422	30~1000	9.85	-62.25	≤-20.15	PASS
			1000~26500	9.85	-48.12	≤-20.15	PASS
			Reference	9.86	9.86	---	PASS
	Ant2	2422	30~1000	9.86	-63.1	≤-20.14	PASS
			1000~26500	9.86	-48.13	≤-20.14	PASS
			Reference	9.77	9.77	---	PASS
	Ant1	2437	30~1000	9.77	-62.79	≤-20.23	PASS
			1000~26500	9.77	-45.44	≤-20.23	PASS
			Reference	9.56	9.56	---	PASS
	Ant2	2437	30~1000	9.56	-62.78	≤-20.44	PASS
			1000~26500	9.56	-45.38	≤-20.44	PASS
			Reference	9.59	9.59	---	PASS
	Ant1	2452	30~1000	9.59	-62.29	≤-20.41	PASS
			1000~26500	9.59	-46.84	≤-20.41	PASS
			Reference	9.55	9.55	---	PASS
	Ant2	2452	30~1000	9.55	-61.44	≤-20.45	PASS
			1000~26500	9.55	-46.9	≤-20.45	PASS
			Reference	9.55	9.55	---	PASS

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
 400-003-0500
 www.anbotek.com.cn



Test Graphs

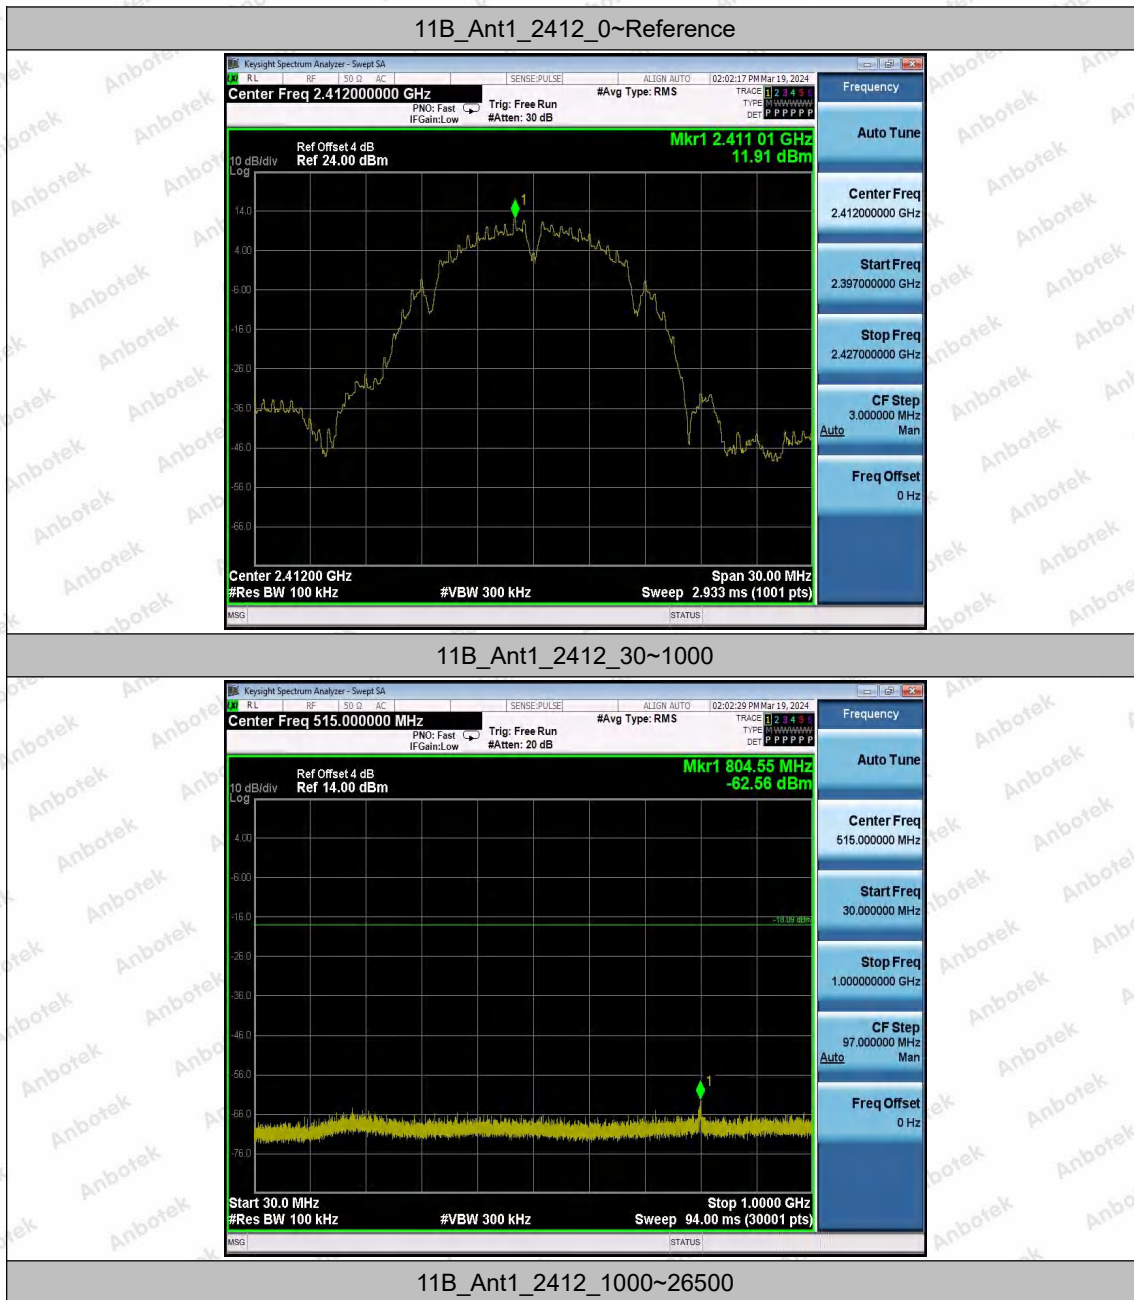


Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn




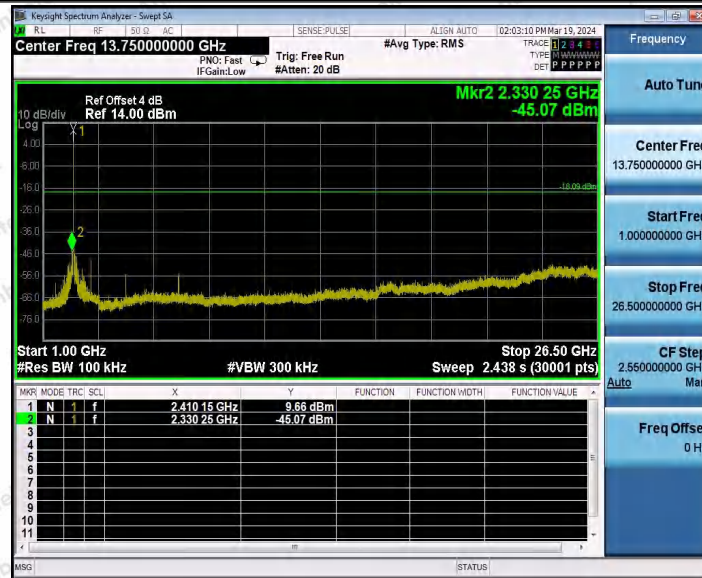

11B_Ant2_2412_0~Reference



11B_Ant2_2412_30~1000

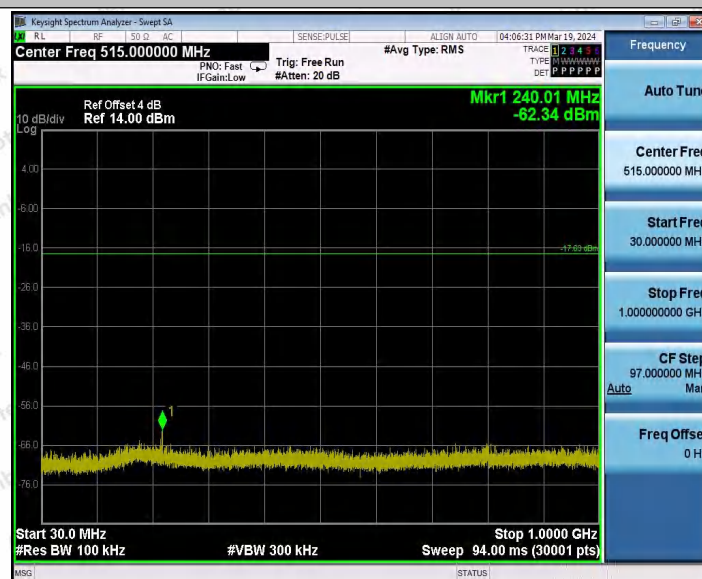

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
 400-003-0500
www.anbotek.com.cn



11B_Ant2_2412_1000~26500

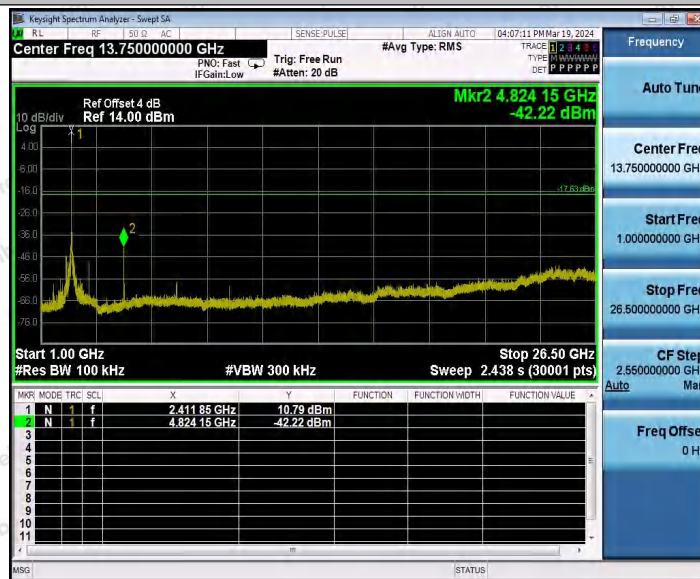

11B_Ant1_2437_0~Reference



11B_Ant1_2437_30~1000


Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline
400-003-0500
www.anbotek.com.cn



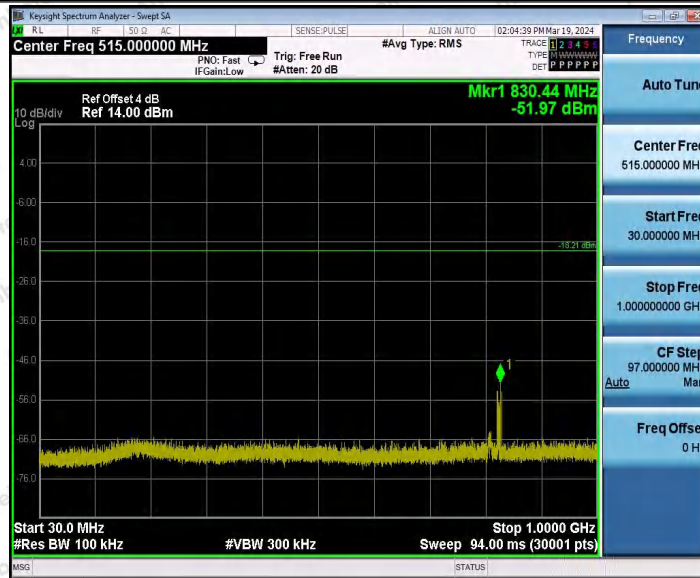

11B_Ant1_2437_1000~26500

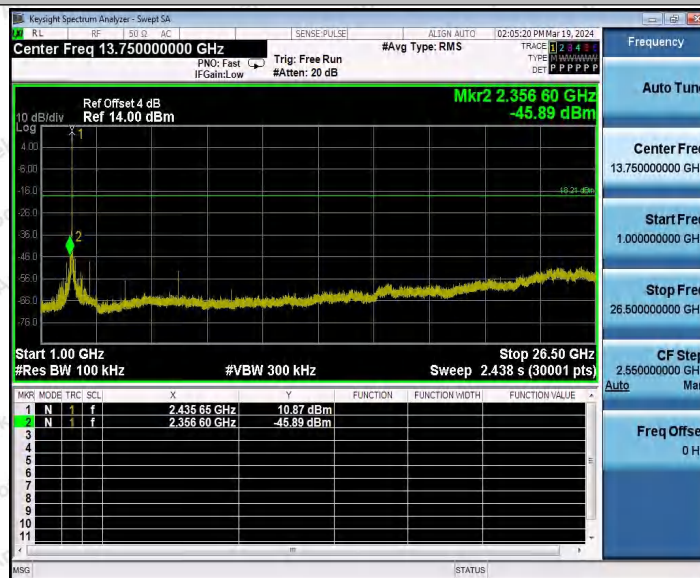

11B_Ant2_2437_0~Reference



Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline
400-003-0500
www.anbotek.com.cn






11B_Ant1_2462_30~1000

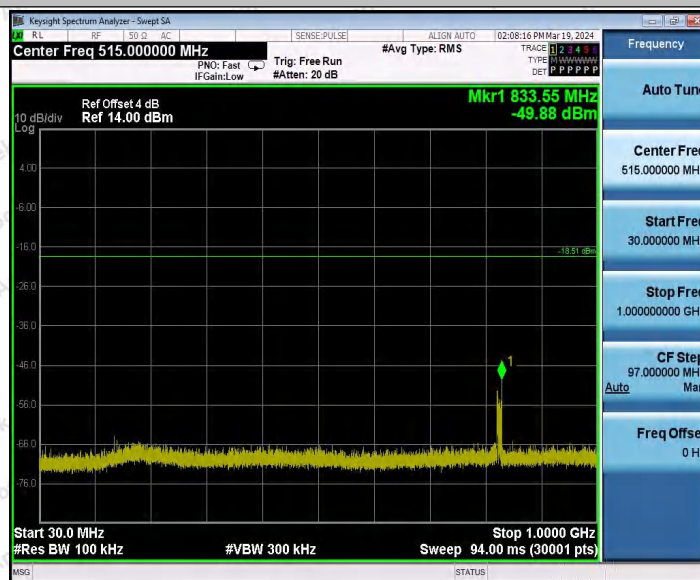

11B_Ant1_2462_1000~26500

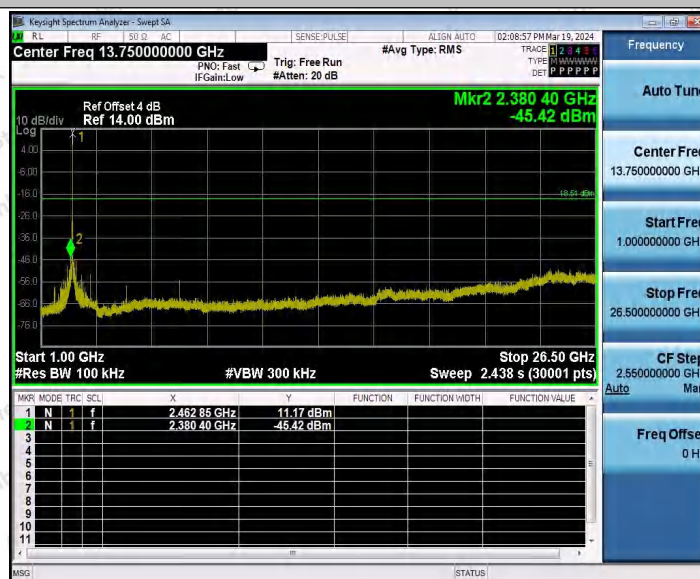

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn



11B_Ant2_2462_0~Reference



11B_Ant2_2462_30~1000



11B_Ant2_2462_1000~26500


Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn




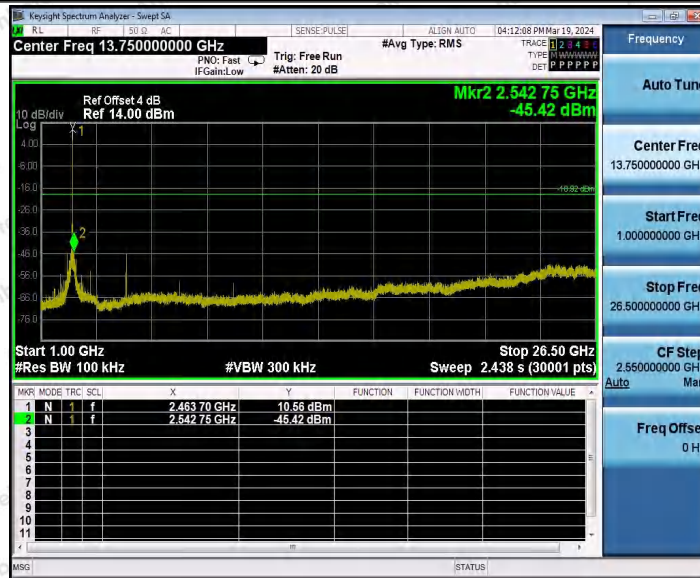

11G_Ant1_2412_0~Reference



11G_Ant1_2412_30~1000

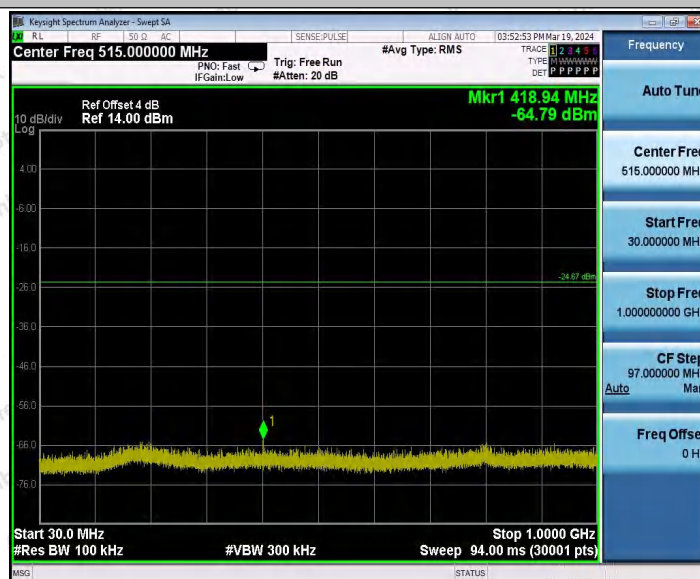

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn



11G_Ant1_2412_1000~26500

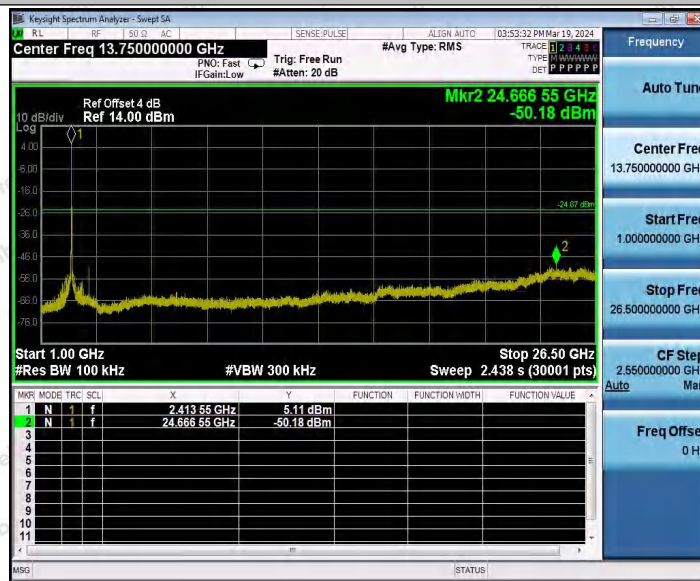

11G_Ant2_2412_0~Reference



11G_Ant2_2412_30~1000


Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline
400-003-0500
www.anbotek.com.cn



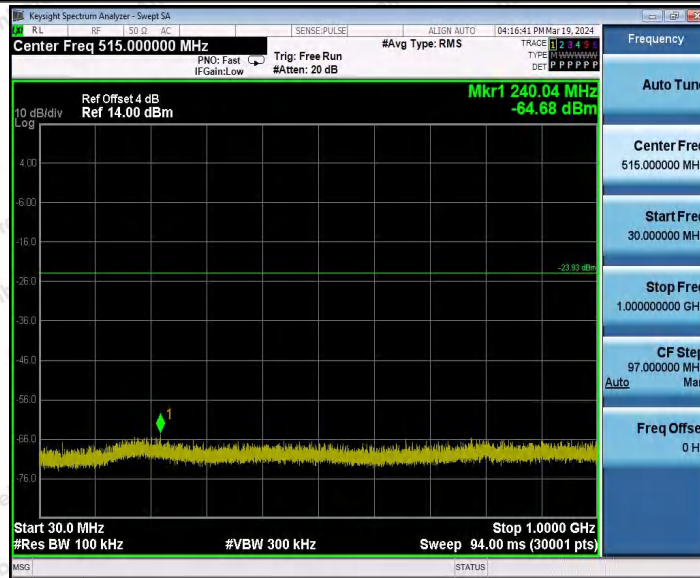

11G_Ant2_2412_1000~26500

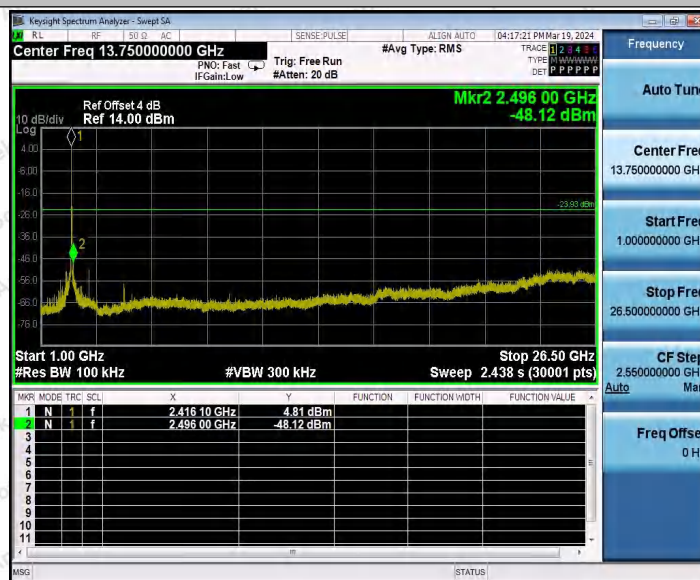

11G_Ant1_2437_0~Reference



Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline
400-003-0500
www.anbotek.com.cn



11G_Ant1_2437_30~1000

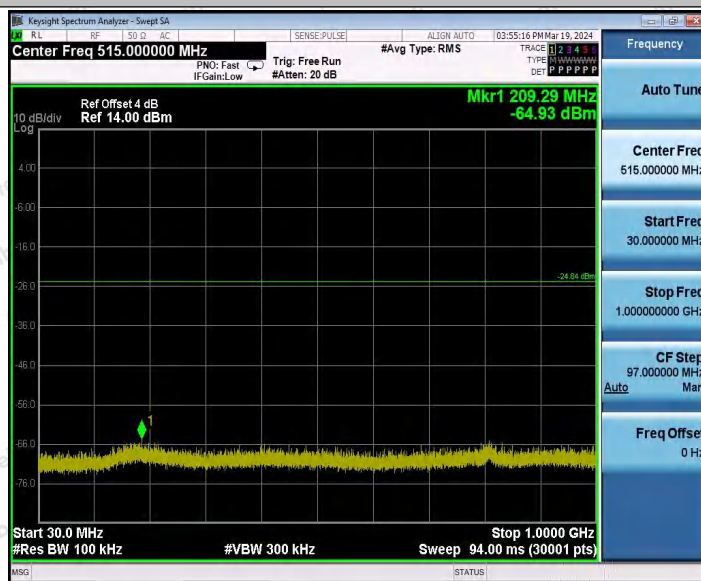

11G_Ant1_2437_1000~26500

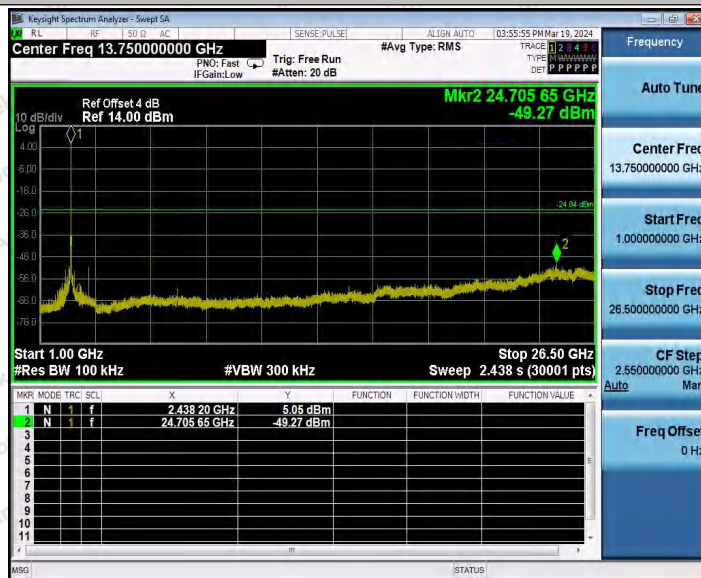

11G_Ant2_2437_0~Reference

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline
400-003-0500
www.anbotek.com.cn





11G_Ant2_2437_30~1000

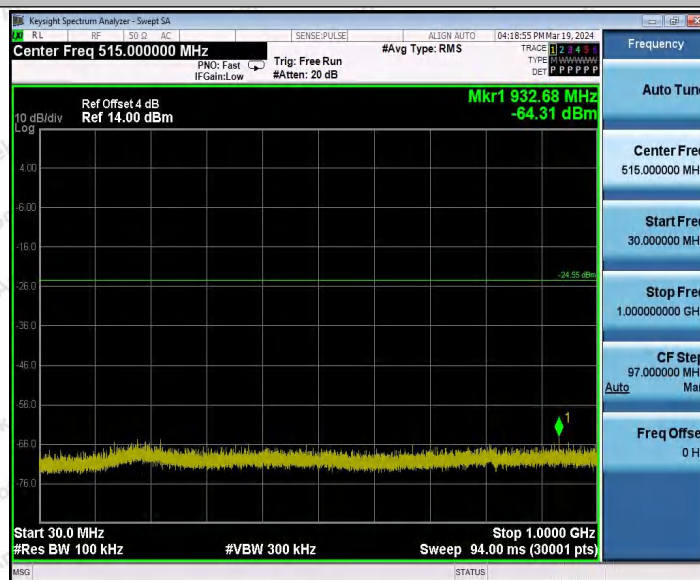

11G_Ant2_2437_1000~26500



Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline
400-003-0500
www.anbotek.com.cn



11G_Ant1_2462_0~Reference



11G_Ant1_2462_30~1000

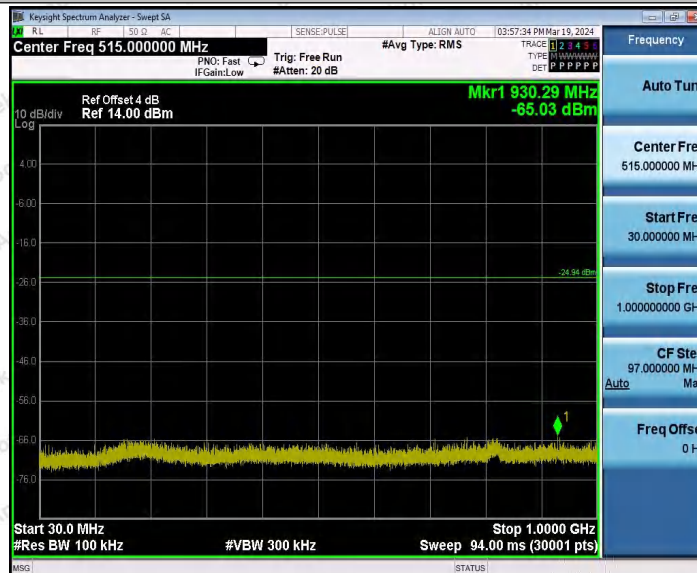

11G_Ant1_2462_1000~26500


Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn




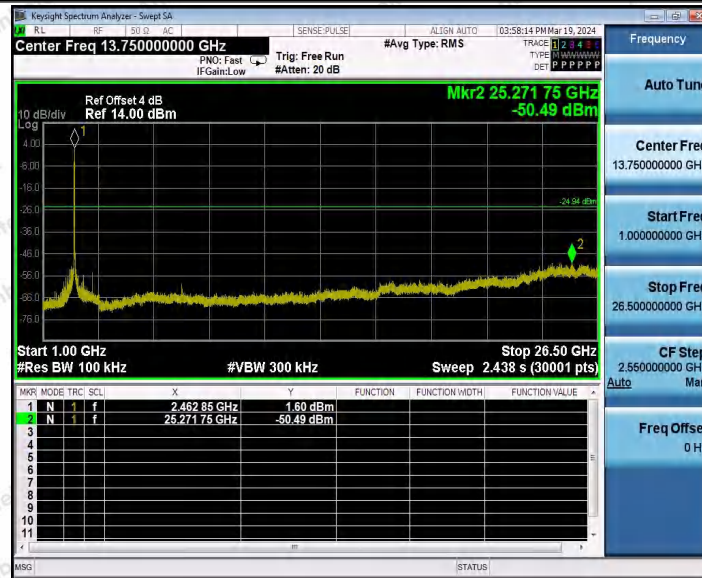

11G_Ant2_2462_0~Reference



11G_Ant2_2462_30~1000

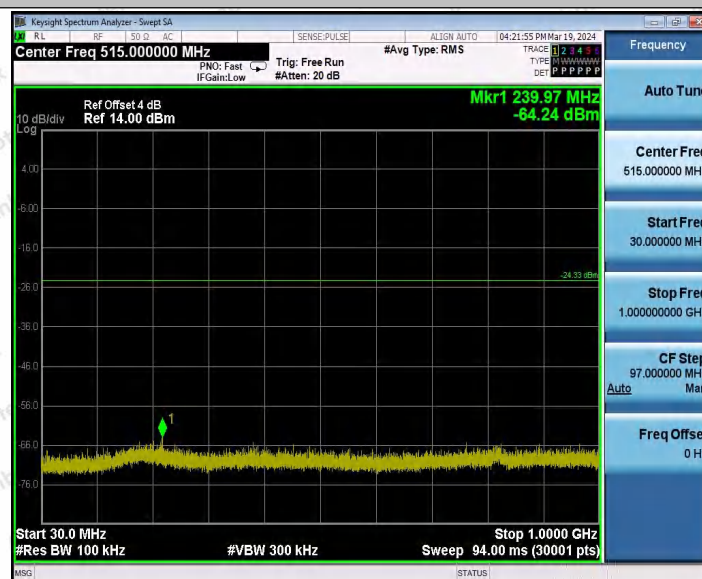

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
 400-003-0500
www.anbotek.com.cn



11G_Ant2_2462_1000~26500

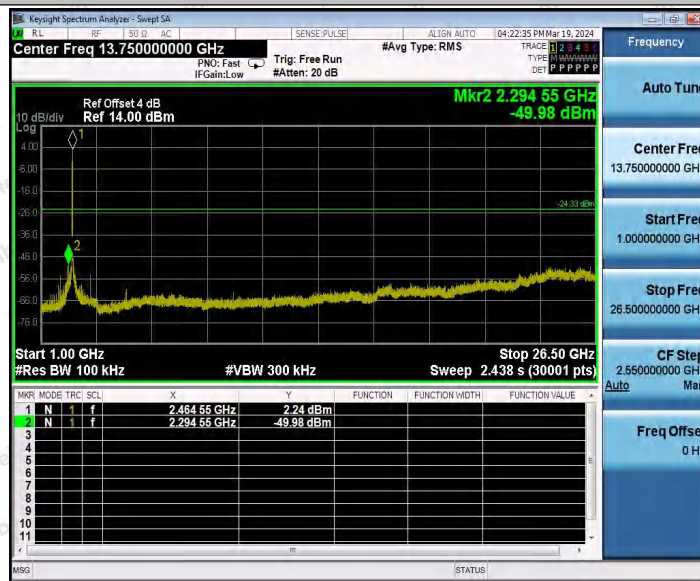

11N20MIMO_Ant1_2412_0~Reference



11N20MIMO_Ant1_2412_30~1000

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline
400-003-0500
www.anbotek.com.cn





11N20MIMO_Ant1_2412_1000~26500

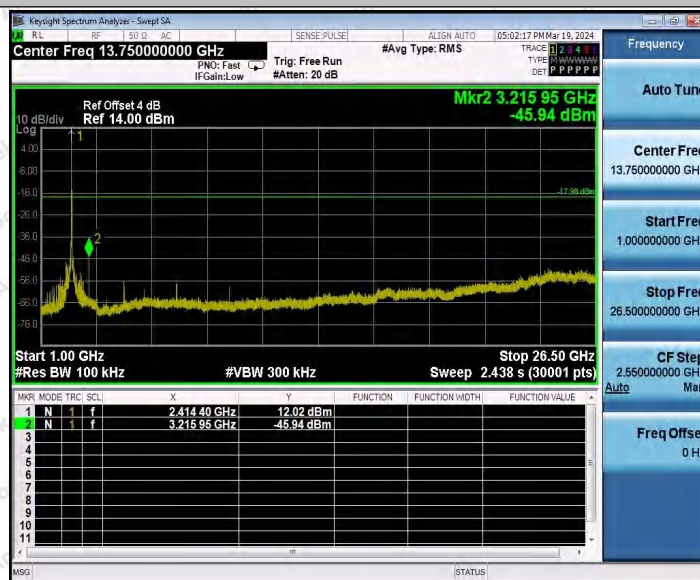

11N20MIMO_Ant2_2412_0~Reference



Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline
400-003-0500
www.anbotek.com.cn



11N20MIMO_Ant2_2412_30~1000

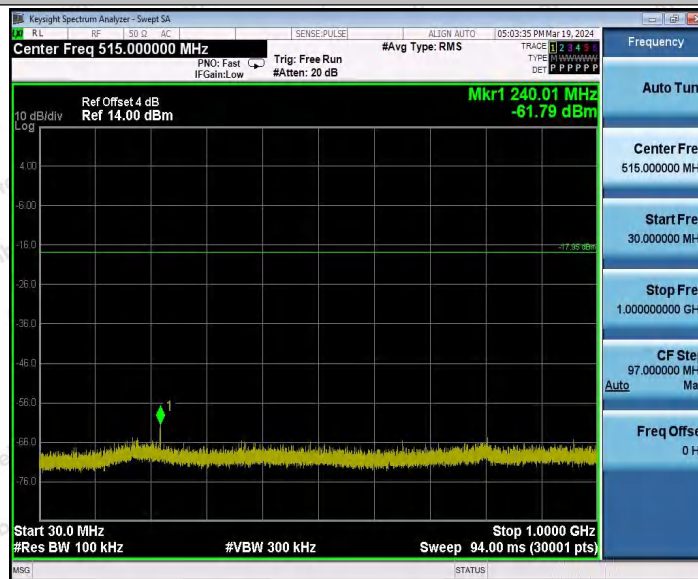

11N20MIMO_Ant2_2412_1000~26500

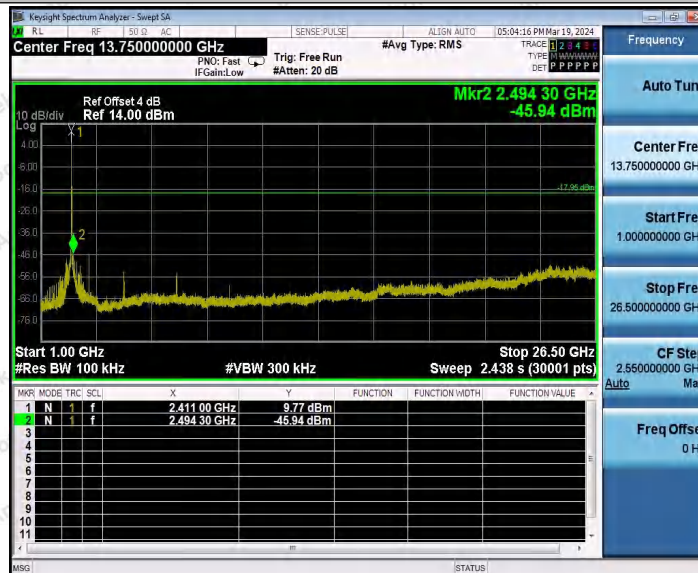

11N20MIMO_Ant1_2437_0~Reference


Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn



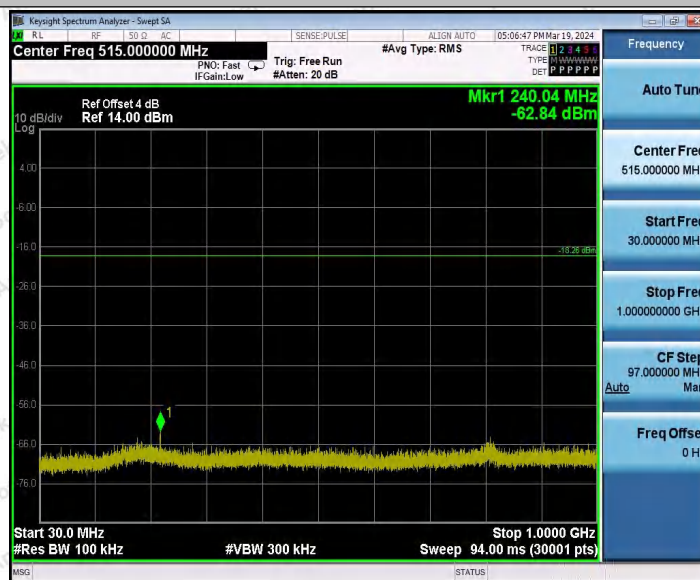

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn

