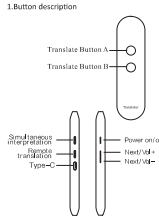



















 <p>Content</p> <p>English.....1-10</p> <p>智能语音翻译棒</p> <p>T4+AI Translator Manual</p>	<p>I. Instructions</p> <p>1.Button description</p>  <p>Volume key:</p> <ol style="list-style-type: none"> 1) Long press the volume button to increase or decrease the volume. 2) Short press can play the voice translation of the previous sentence or the next sentence. <p>Indicator light:</p> <ol style="list-style-type: none"> 1) When charging, a red light will be displayed, and the full light will go out. 2) The right light is the translation display light, long press the translation A key to show that the red light is always on, and long press the translation B key to show that the blue light is always on. <p>Source d'entree vocale B Toucher d'entree vocale A</p>  <p>1</p>	<p>II. Software Installation Method</p> <p>Scan the QR code in the picture, and the software will automatically identify the mobile phone system. After downloading the Smart Assistant software, it can be used normally after installing it on the mobile phone.</p>  <p>1.For Android APP version:</p> <ol style="list-style-type: none"> 1) Open WeChat and scan it and click "Official Download". 2) Select "Official Download", click the option in the upper right corner of the phone screen, open a third-party browser, and start downloading.  <p>2. For ISO App version:</p> <ol style="list-style-type: none"> 1) Scan the QR code to download 2) Click "Allow" to jump to the Apple Store; 3) Click Get Software, enter the password, and start downloading.After the download is successful, install it before you can use it.  <p>(2) Download From Apple Store.</p> <p>(1) Search for "Smart Assistant";</p> <p>2</p>	<p>2) Click Get Software, enter the password, and start downloading.After the download is successful, install it before you can use it.</p>  <p>III. Device connection</p> <p>Android Phone connect T4+ AI Translator usage:</p> <ol style="list-style-type: none"> 1) Press the power button for 3 seconds to turn the translator on. 2) Open the phone settings option → turn on Bluetooth → select the device "Translator Plus" → connect. 3) Open the Smart Assistant software, click "Discover Device" in the upper left corner → select "Translator-ble", and you can use it normally.  <p>iPhone connect T4+ AI Translator usage:</p> <ol style="list-style-type: none"> 1) Press the power button for 3 seconds to turn the translator on. 2) Open the phone settings option → turn on Bluetooth → select the device "Translator Plus" → connect. 3) Open the Smart Assistant software, click "Discover Device" in the upper left corner → select "Translator-ble", and you can use it normally.  <p>Reminder: Be sure to turn on the bluetooth on the Apple phone first, connect the translator, and then open the software for the second connection.The order cannot be reversed, otherwise it will affect the normal use of the translator.</p> <p>3</p>	<p>Reminder: In order not to affect the translation function of the translation stick, please allow the following permissions: positioning, Bluetooth, recording, storage, and camera, otherwise it will affect the normal use of the translation machine.</p> <p>When using it for the first time, you can directly enter the translation interface by clicking the portrait button at the bottom of the login interface without registering and logging in.</p>  <p>IV. Switch languages</p> <p>Click the language below or the language logo in the upper right corner of the screen to switch the language type.</p>  <p>V. Software main interface function</p> <ol style="list-style-type: none"> 1) Enter the main interface of the software to display the dialogue translation interface. 2) Click the dot symbol in the upper right corner to enter the sub-menu with Personal Center, Photo Translation, Simultaneous Interpretation and Remote Translation. <p>4</p>	<p>VI. Mutual-Translation personal center</p> <ol style="list-style-type: none"> 1) Click the "dot" symbol in the upper right corner. 2) Click "Personal Center".  <ol style="list-style-type: none"> 1) Click "My Records", all records will be displayed. 2) Click the "Inverted triangle" symbol on the right to choose to display the records of "All Records", "Conversation", "Photography" and "Simultaneous Interpretation". 3) Click the "arrow" symbol in the upper right corner to adjust the display order of records. 4) Click the "Delete" symbol in the upper right corner to delete all records or single selections. 5) Swipe the record to the left to delete or modify the record information.  <p>Click "Settings" in the upper right corner, and it will display Check for Updates, Clear Cache, Playback Settings, and Language Settings.</p> <p>Check for Updates: Check if the version is the latest version.</p> <p>5</p>	<p>Clear Cache: Clear the device cache.</p> <p>Playback settings: Autoplay selection, Playback speed option.</p> <p>Language settings: language selection for dialogue and photo translation.</p>  <p>Voice translation</p> <ol style="list-style-type: none"> 1) Long press the translation key A, and start speaking after hearing a beep, (the translation key A corresponds to Chinese, and the translation B key corresponds to English, and the translation language can be changed). 2) Release the button after speaking. 3) The translation stick will automatically recognize what it says into text, translate it into the language corresponding to the translation B key, and play it. <p>The translation result will be displayed on the APP side, and the translation stick will read the translation result aloud. The mobile phone translation function can only be used in the state of the internet, and the poor network signal will affect the use effect.</p>  <p>Click the copy icon to copy the translated content.</p> <p>6</p>	<p>Photo translation</p> <ol style="list-style-type: none"> 1) Click the "dot" symbol in the upper right corner of the home page. 2) Click "Photo Translation". 3) The language can be switched through the language setting icon. <p>You can click the picture button at the bottom left of the screen to access the mobile photo album and select a picture for translation.</p> <p>You can click the copy button at the bottom right of the screen to copy the translated content.</p> <p>Simultaneous Interpretation</p> <ol style="list-style-type: none"> 1) Click the "Simultaneous Interpretation" button or click the "dot" icon in the upper right corner. 2) Press "Simultaneous Interpretation" for a short time, and the key A and it will always be on, so that the voice input can be interpreted simultaneously. 3) personne n'a entendu. Les Luce A y B se asagen y la entrada de voz se cierra. <p>The APP side will display the upper and lower white and blue colors. The blue part shows the voice you want to say, and the white part shows the translation content. You can click the blue end to pause recording and translation,</p>  <p>7</p>	<p>and click the white end of the screen to switch to the blue end.</p>  <p>You can change the text direction of the translated content by clicking the arrow symbol at the top right of the screen.</p>  <ol style="list-style-type: none"> 1) When the simultaneous interpretation is finished, the option to exit will pop up, after confirming the exit. 2) Jump to the translation copy page. 3) You can click the "Share" symbol in the upper right corner, and an option box will pop up to select the method and content to be shared. 4) Click the "Recording Information" symbol in the upper right corner to view the content of the recording information and delete the recording.  <p>8</p>	<p>Remote translation</p> <p>Click the "Remote Translator" button or click the "Dot" icon in the upper right corner.</p>  <ol style="list-style-type: none"> 1) You need two mobile phones, and click the "Remote Translation" interface. Enter the APPID Number of another mobile phone, and click Connect to enter the function. 2) Click the "Settings" icon in the lower right corner to enter the "Language Selection" interface and select the language you need. 3) Press and hold the remote translation key or the voice icon in the function interface to input the voice.  <p>VII. FAQ Session</p> <p>1) How many languages is available for mutual translation of T4+ AI Translator right now?</p> <p>Currently T4+ translator supports 97 different languages for mutual translation, including: Chinese, Traditional Chinese, Korean, Japanese, French, German, Spanish (Spain), Mexico, Argentina, Bolivia, Chile, Colombia, Costa Rica, Ecuador, Iran, (I) Salvador, United States, Guatemala, Honduras, Nicaragua, Uruguay, Venezuela), Thai, Arabic, Bulgarian, English (UK, Australia, Canada, India, New Zealand), Danish, Finnish, Italian, Dutch/Polish, Portuguese (Portugal, Brazil), Swedish, Indonesian, Czech, Lithuanian, Hungarian, Romanian, Slovenian, Vietnamese, Turkish, Latin, Ukrainian, Hebrew, Indian, Terrestrial, Russian, Croatian, etc.</p> <p>2) How far is available for wireless distance and voice recognition?</p> <p>The wireless distance is available for 10 meters. The voice recognition is available for 1 meter.</p> <p>3) How many hours is available for working and stand-by time?</p> <p>The T4+ AI Translator is used 400mah lithium polymer battery. It is available around 8 hours for working. Around 48 hours for stand-by time.</p> <p>4) How can I add new languages for T4+ AI Translator in the future?</p> <p>The software of T4+ translator will be continued and improved from time by time. You can scan the QR code again and download the latest Translator soft-ware, which is provided the latest & the most complete translation experience to customers.</p> <p>5) What accessories are including in the standard package?</p> <p>The standard package are including a T4+ AI translator, a USB cable, an operation manual and a gift box.</p> <p>6) Could I use the T4+ Translator after turn off the screen of the smartphone?</p> <p>As long as the cellphone is not under the low battery mode and the translator software is available running in the background.</p> <p>1) For Android system, T4+ Translator is still available to use even turn off the cellphone screen.</p> <p>8. Mobile phones with iOS system support the T4+ translator. After the screen of the mobile phone is turned off.</p> <p>9</p>	<p>10</p>
---	---	--	--	--	--	--	--	---	--	-----------

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.