

Appendix Test Data

|                  |                 |                    |             |
|------------------|-----------------|--------------------|-------------|
| Report No:       | 18220WC40019704 | Test Sample NO:    | 1-2-2       |
| Start Test Date: | 2024.2.21       | Finish Test Date:  | 2024.2.22   |
| Test Engineer:   | Joker Wang      | Auditor:           | Justin Feng |
| Temperature:     | 25.3℃           | Relative Humidity: | 48%         |
| Pressure:        | 101kPa          |                    |             |

Appendix A1: Emission Bandwidth

Test Result

| TestMode   | Antenna | Frequency[MHz] | 26db<br>EBW<br>[MHz] | FL[MHz]  | FH[MHz]  | Limit[MHz] | Verdict |
|------------|---------|----------------|----------------------|----------|----------|------------|---------|
| 11A-CDD    | Ant1    | 5745           | 26.640               | 5731.760 | 5758.400 | ---        | ---     |
|            | Ant2    | 5745           | 18.440               | 5735.840 | 5754.280 | ---        | ---     |
|            | Ant1    | 5785           | 27.800               | 5771.520 | 5799.320 | ---        | ---     |
|            | Ant2    | 5785           | 18.520               | 5775.760 | 5794.280 | ---        | ---     |
|            | Ant1    | 5825           | 31.560               | 5809.200 | 5840.760 | ---        | ---     |
|            | Ant2    | 5825           | 18.560               | 5815.800 | 5834.360 | ---        | ---     |
| 11N20MIMO  | Ant1    | 5745           | 30.200               | 5729.200 | 5759.400 | ---        | ---     |
|            | Ant2    | 5745           | 19.440               | 5735.280 | 5754.720 | ---        | ---     |
|            | Ant1    | 5785           | 32.520               | 5769.200 | 5801.720 | ---        | ---     |
|            | Ant2    | 5785           | 19.480               | 5775.200 | 5794.680 | ---        | ---     |
|            | Ant1    | 5825           | 35.080               | 5806.200 | 5841.280 | ---        | ---     |
|            | Ant2    | 5825           | 19.240               | 5815.320 | 5834.560 | ---        | ---     |
| 11N40MIMO  | Ant1    | 5755           | 71.840               | 5722.360 | 5794.200 | ---        | ---     |
|            | Ant2    | 5755           | 40.800               | 5734.920 | 5775.720 | ---        | ---     |
|            | Ant1    | 5795           | 61.760               | 5765.160 | 5826.920 | ---        | ---     |
|            | Ant2    | 5795           | 41.040               | 5774.360 | 5815.400 | ---        | ---     |
| 11AC20MIMO | Ant1    | 5745           | 36.640               | 5726.320 | 5762.960 | ---        | ---     |
|            | Ant2    | 5745           | 19.440               | 5735.240 | 5754.680 | ---        | ---     |
|            | Ant1    | 5785           | 30.360               | 5769.840 | 5800.200 | ---        | ---     |
|            | Ant2    | 5785           | 19.320               | 5775.320 | 5794.640 | ---        | ---     |
|            | Ant1    | 5825           | 35.960               | 5807.480 | 5843.440 | ---        | ---     |
|            | Ant2    | 5825           | 19.520               | 5815.200 | 5834.720 | ---        | ---     |
| 11AC40MIMO | Ant1    | 5755           | 69.440               | 5717.880 | 5787.320 | ---        | ---     |

Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel:(86) 0755-26066440 Fax:(86) 0755-26014772 Email:service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



|            |      |      |         |          |          |     |     |
|------------|------|------|---------|----------|----------|-----|-----|
|            | Ant2 | 5755 | 40.160  | 5734.760 | 5774.920 | --- | --- |
|            | Ant1 | 5795 | 64.640  | 5762.200 | 5826.840 | --- | --- |
|            | Ant2 | 5795 | 41.040  | 5774.520 | 5815.560 | --- | --- |
| 11AC80MIMO | Ant1 | 5775 | 132.160 | 5710.200 | 5842.360 | --- | --- |
|            | Ant2 | 5775 | 82.880  | 5734.520 | 5817.400 | --- | --- |

### Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
 400-003-0500  
[www.anbotek.com.cn](http://www.anbotek.com.cn)



## Test Graphs

11A-CDD\_Ant1\_5745



11A-CDD\_Ant2\_5745



11A-CDD\_Ant1\_5785

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn





11A-CDD\_Ant2\_5785



11A-CDD\_Ant1\_5825



## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



11A-CDD\_Ant2\_5825



11N20MIMO\_Ant1\_5745



11N20MIMO\_Ant2\_5745

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn





11N20MIMO\_Ant1\_5785



11N20MIMO\_Ant2\_5785



## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



11N20MIMO\_Ant1\_5825



11N20MIMO\_Ant2\_5825



11N40MIMO\_Ant1\_5755


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



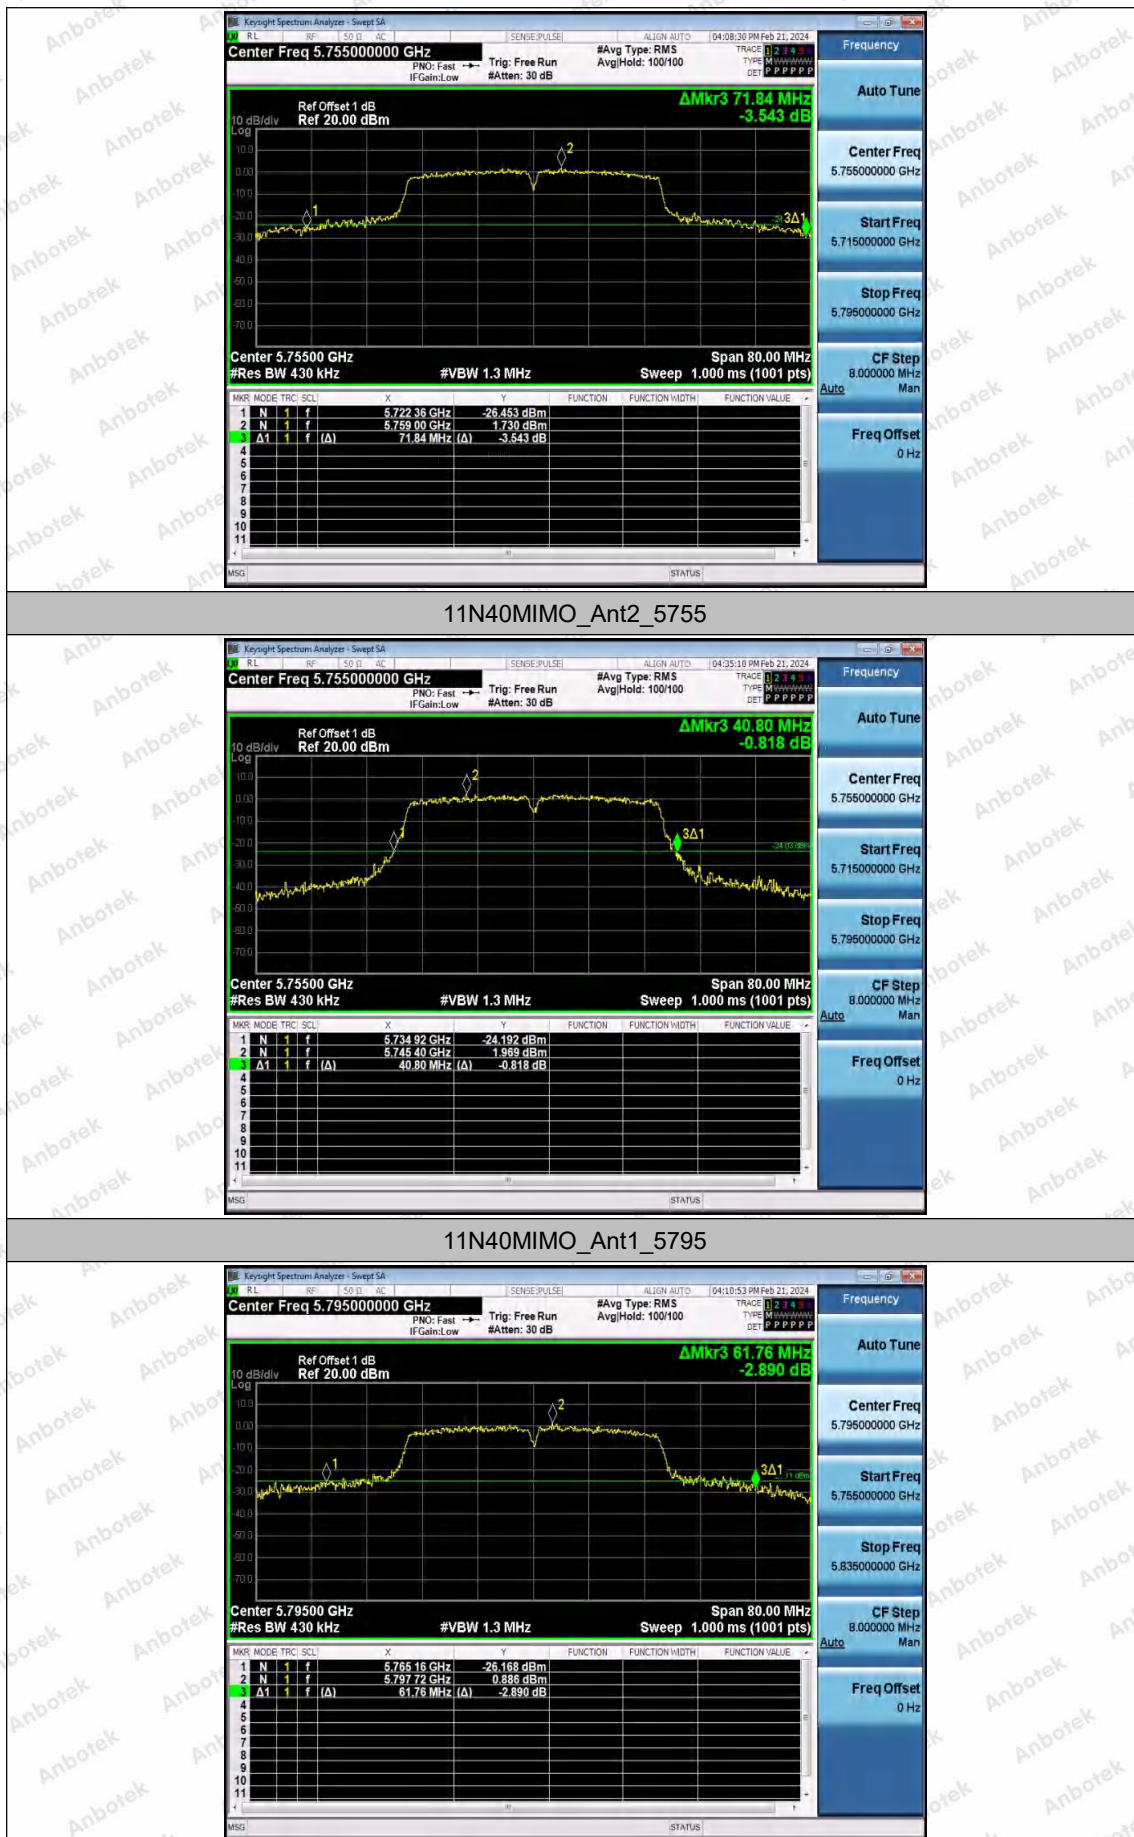

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



11N40MIMO\_Ant2\_5795



11AC20MIMO\_Ant1\_5745



11AC20MIMO\_Ant2\_5745

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn





Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotech.com



Hotline  
400-003-0500  
anbotek.com.cn



11AC20MIMO\_Ant1\_5825



11AC20MIMO\_Ant2\_5825



11AC40MIMO\_Ant1\_5755

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn





11AC40MIMO\_Ant2\_5755



11AC40MIMO\_Ant1\_5795



## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



11AC40MIMO\_Ant2\_5795



11AC80MIMO\_Ant1\_5775



11AC80MIMO\_Ant2\_5775


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



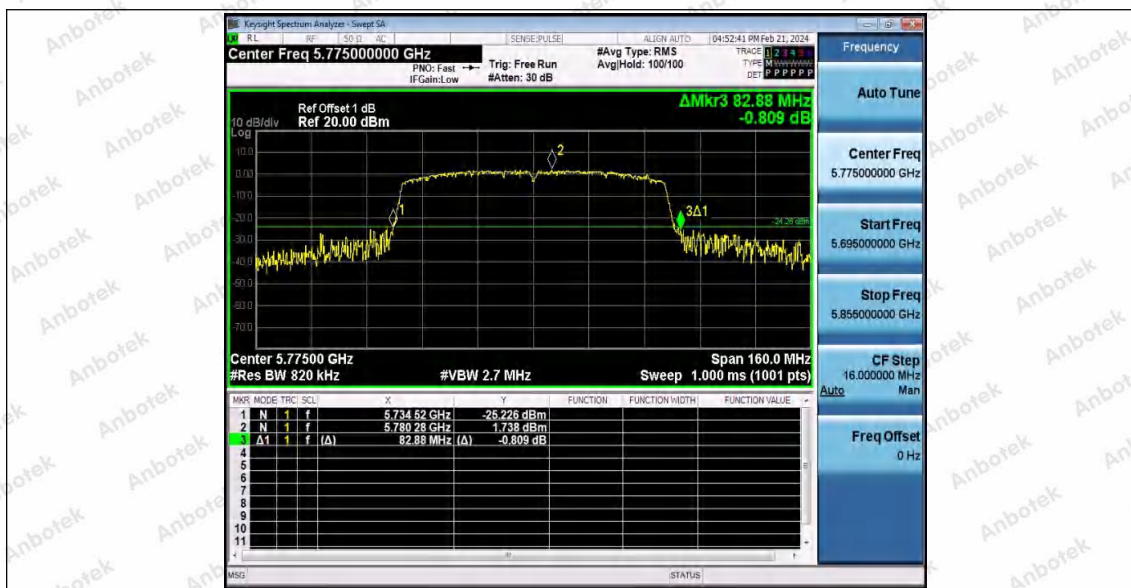

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



## Appendix A2: Occupied channel bandwidth

### Test Result

| TestMode   | Antenna | Frequency[MHz] | OCB [MHz] | FL[MHz]   | FH[MHz]   | Limit[MHz] | Verdict |
|------------|---------|----------------|-----------|-----------|-----------|------------|---------|
| 11A-CDD    | Ant1    | 5745           | 16.910    | 5736.5945 | 5753.5045 | ---        | ---     |
|            | Ant2    | 5745           | 16.497    | 5736.7797 | 5753.2767 | ---        | ---     |
|            | Ant1    | 5785           | 16.976    | 5776.5112 | 5793.4872 | ---        | ---     |
|            | Ant2    | 5785           | 16.492    | 5776.7604 | 5793.2524 | ---        | ---     |
|            | Ant1    | 5825           | 17.294    | 5816.3476 | 5833.6416 | ---        | ---     |
|            | Ant2    | 5825           | 16.512    | 5816.7351 | 5833.2471 | ---        | ---     |
| 11N20MIMO  | Ant1    | 5745           | 18.103    | 5736.0195 | 5754.1225 | ---        | ---     |
|            | Ant2    | 5745           | 17.641    | 5736.1790 | 5753.8200 | ---        | ---     |
|            | Ant1    | 5785           | 18.210    | 5775.9102 | 5794.1202 | ---        | ---     |
|            | Ant2    | 5785           | 17.633    | 5776.1731 | 5793.8061 | ---        | ---     |
|            | Ant1    | 5825           | 18.789    | 5815.6069 | 5834.3959 | ---        | ---     |
|            | Ant2    | 5825           | 17.664    | 5816.1522 | 5833.8162 | ---        | ---     |
| 11N40MIMO  | Ant1    | 5755           | 37.370    | 5736.3229 | 5773.6929 | ---        | ---     |
|            | Ant2    | 5755           | 36.249    | 5736.9555 | 5773.2045 | ---        | ---     |
|            | Ant1    | 5795           | 37.092    | 5776.4723 | 5813.5643 | ---        | ---     |
|            | Ant2    | 5795           | 36.376    | 5776.7877 | 5813.1637 | ---        | ---     |
| 11AC20MIMO | Ant1    | 5745           | 18.440    | 5735.8087 | 5754.2487 | ---        | ---     |
|            | Ant2    | 5745           | 17.623    | 5736.2044 | 5753.8274 | ---        | ---     |
|            | Ant1    | 5785           | 18.217    | 5775.9290 | 5794.1460 | ---        | ---     |
|            | Ant2    | 5785           | 17.633    | 5776.1681 | 5793.8011 | ---        | ---     |
|            | Ant1    | 5825           | 18.786    | 5815.6386 | 5834.4246 | ---        | ---     |
|            | Ant2    | 5825           | 17.648    | 5816.1618 | 5833.8098 | ---        | ---     |
| 11AC40MIMO | Ant1    | 5755           | 37.413    | 5736.4468 | 5773.8598 | ---        | ---     |
|            | Ant2    | 5755           | 36.277    | 5736.9565 | 5773.2335 | ---        | ---     |
|            | Ant1    | 5795           | 36.974    | 5776.5623 | 5813.5363 | ---        | ---     |
|            | Ant2    | 5795           | 36.356    | 5776.8407 | 5813.1967 | ---        | ---     |
| 11AC80MIMO | Ant1    | 5775           | 80.270    | 5736.3269 | 5816.5969 | ---        | ---     |
|            | Ant2    | 5775           | 74.780    | 5737.7979 | 5812.5779 | ---        | ---     |



## Test Graphs

11A-CDD\_Ant1\_5745



11A-CDD\_Ant2\_5745



11A-CDD\_Ant1\_5785

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn





11A-CDD\_Ant2\_5785



11A-CDD\_Ant1\_5825



## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



11A-CDD\_Ant2\_5825



11N20MIMO\_Ant1\_5745



11N20MIMO\_Ant2\_5745


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



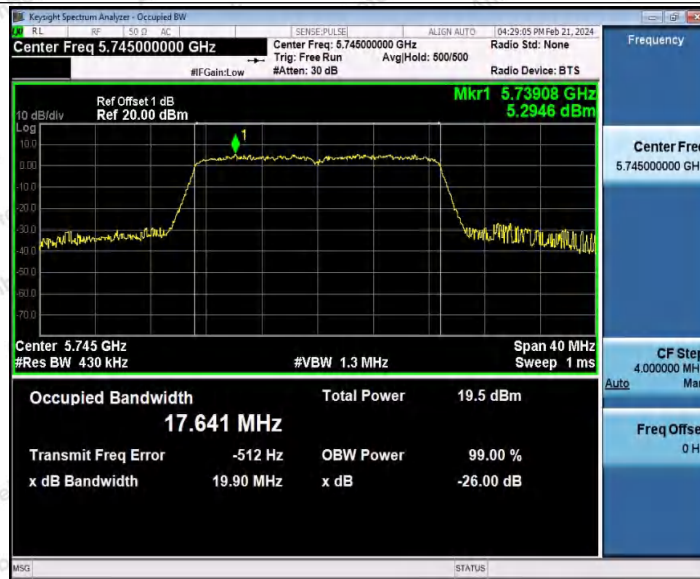

11N20MIMO\_Ant1\_5785



11N20MIMO\_Ant2\_5785



## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



## 11N20MIMO\_Ant1\_5825



## 11N20MIMO\_Ant2\_5825



## 11N40MIMO\_Ant1\_5755

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn





11N40MIMO\_Ant2\_5755



11N40MIMO\_Ant1\_5795



## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



## 11N40MIMO\_Ant2\_5795



## 11AC20MIMO\_Ant1\_5745



## 11AC20MIMO\_Ant2\_5745

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn





11AC20MIMO\_Ant1\_5785



11AC20MIMO\_Ant2\_5785

**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



## 11AC20MIMO\_Ant1\_5825



## 11AC20MIMO\_Ant2\_5825



## 11AC40MIMO\_Ant1\_5755

### Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn





11AC40MIMO\_Ant2\_5755



11AC40MIMO\_Ant1\_5795



## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



## 11AC40MIMO\_Ant2\_5795



## 11AC80MIMO\_Ant1\_5775



## 11AC80MIMO\_Ant2\_5775

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn





## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



## Appendix A3: Min emission bandwidth

### Test Result B4

| TestMode   | Antenna | Frequency[MHz] | 6db<br>EBW<br>[MHz] | FL[MHz]  | FH[MHz]  | Limit[MHz] | Verdict |
|------------|---------|----------------|---------------------|----------|----------|------------|---------|
| 11A-CDD    | Ant1    | 5745           | 16.360              | 5736.800 | 5753.160 | 0.5        | PASS    |
|            | Ant2    | 5745           | 16.280              | 5736.840 | 5753.120 | 0.5        | PASS    |
|            | Ant1    | 5785           | 16.280              | 5776.840 | 5793.120 | 0.5        | PASS    |
|            | Ant2    | 5785           | 16.320              | 5776.800 | 5793.120 | 0.5        | PASS    |
|            | Ant1    | 5825           | 16.360              | 5816.800 | 5833.160 | 0.5        | PASS    |
|            | Ant2    | 5825           | 16.320              | 5816.800 | 5833.120 | 0.5        | PASS    |
| 11N20MIMO  | Ant1    | 5745           | 17.560              | 5736.200 | 5753.760 | 0.5        | PASS    |
|            | Ant2    | 5745           | 17.560              | 5736.200 | 5753.760 | 0.5        | PASS    |
|            | Ant1    | 5785           | 17.560              | 5776.200 | 5793.760 | 0.5        | PASS    |
|            | Ant2    | 5785           | 17.560              | 5776.200 | 5793.760 | 0.5        | PASS    |
|            | Ant1    | 5825           | 17.560              | 5816.200 | 5833.760 | 0.5        | PASS    |
|            | Ant2    | 5825           | 17.520              | 5816.200 | 5833.720 | 0.5        | PASS    |
| 11N40MIMO  | Ant1    | 5755           | 35.040              | 5737.480 | 5772.520 | 0.5        | PASS    |
|            | Ant2    | 5755           | 35.040              | 5737.480 | 5772.520 | 0.5        | PASS    |
|            | Ant1    | 5795           | 34.160              | 5778.360 | 5812.520 | 0.5        | PASS    |
|            | Ant2    | 5795           | 35.120              | 5777.400 | 5812.520 | 0.5        | PASS    |
| 11AC20MIMO | Ant1    | 5745           | 17.560              | 5736.200 | 5753.760 | 0.5        | PASS    |
|            | Ant2    | 5745           | 17.560              | 5736.200 | 5753.760 | 0.5        | PASS    |
|            | Ant1    | 5785           | 17.160              | 5776.200 | 5793.360 | 0.5        | PASS    |
|            | Ant2    | 5785           | 17.560              | 5776.200 | 5793.760 | 0.5        | PASS    |
|            | Ant1    | 5825           | 17.160              | 5816.200 | 5833.360 | 0.5        | PASS    |
|            | Ant2    | 5825           | 17.600              | 5816.160 | 5833.760 | 0.5        | PASS    |
| 11AC40MIMO | Ant1    | 5755           | 32.640              | 5739.880 | 5772.520 | 0.5        | PASS    |
|            | Ant2    | 5755           | 33.760              | 5738.680 | 5772.440 | 0.5        | PASS    |
|            | Ant1    | 5795           | 35.040              | 5777.480 | 5812.520 | 0.5        | PASS    |
|            | Ant2    | 5795           | 35.120              | 5777.400 | 5812.520 | 0.5        | PASS    |
| 11AC80MIMO | Ant1    | 5775           | 75.040              | 5737.400 | 5812.440 | 0.5        | PASS    |
|            | Ant2    | 5775           | 72.480              | 5739.960 | 5812.440 | 0.5        | PASS    |



## Test Graphs B4

11A-CDD\_Ant1\_5745



11A-CDD\_Ant2\_5745



11A-CDD\_Ant1\_5785





11A-CDD\_Ant2\_5785



11A-CDD\_Ant1\_5825



## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



11A-CDD\_Ant2\_5825



11N20MIMO\_Ant1\_5745



11N20MIMO\_Ant2\_5745


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



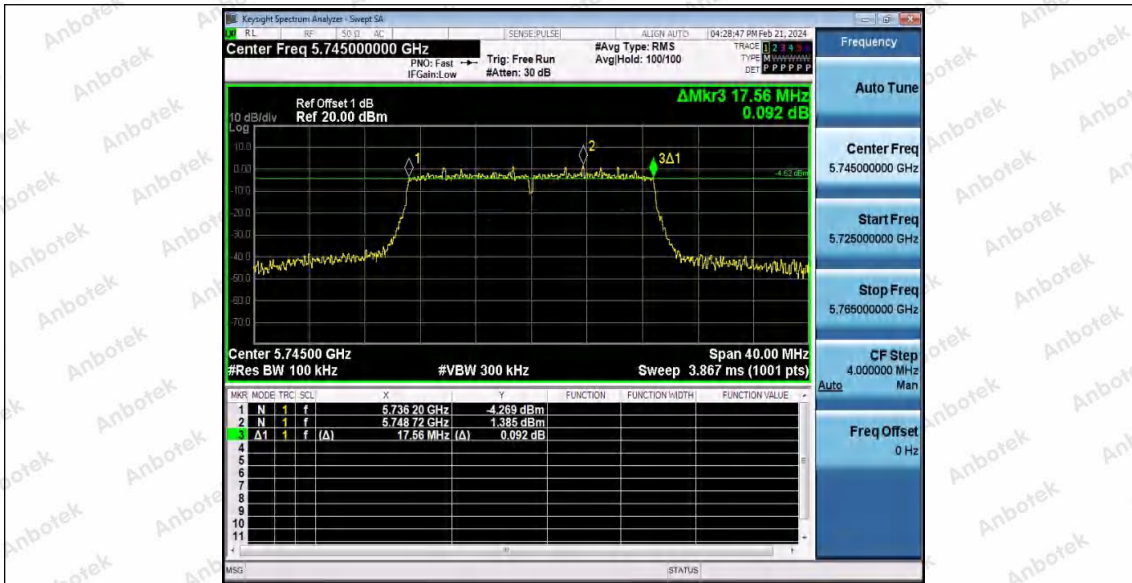

11N20MIMO\_Ant1\_5785



11N20MIMO\_Ant2\_5785



## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn



11N20MIMO\_Ant1\_5825



11N20MIMO\_Ant2\_5825

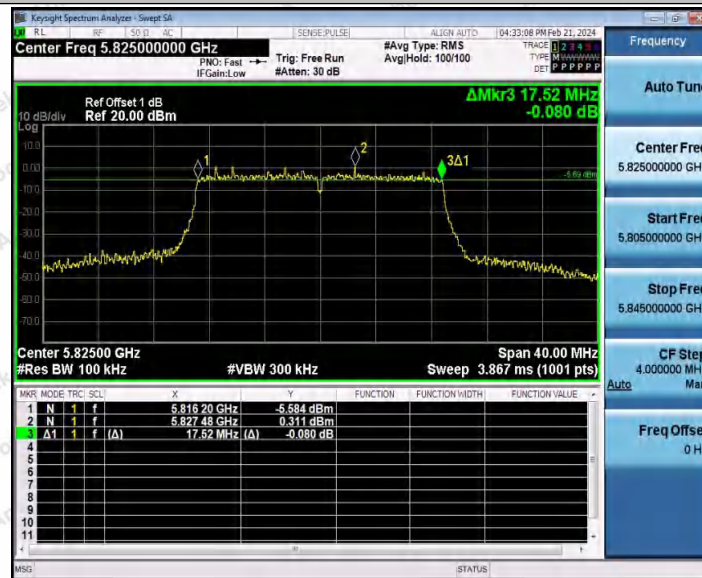

11N40MIMO\_Ant1\_5755

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn





11N40MIMO\_Ant2\_5755

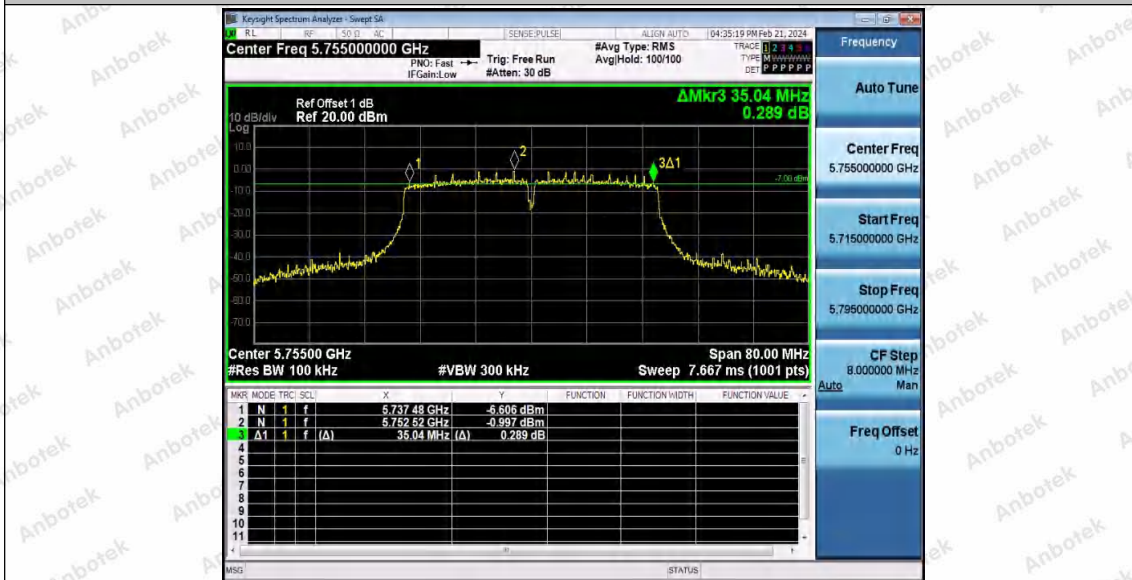

11N40MIMO\_Ant1\_5795



## Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



11N40MIMO\_Ant2\_5795

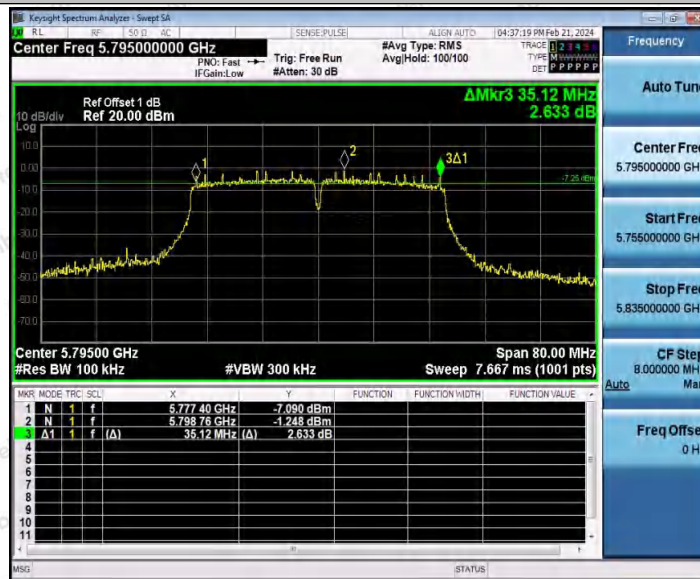

11AC20MIMO\_Ant1\_5745



11AC20MIMO\_Ant2\_5745

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn






11AC20MIMO\_Ant1\_5785



11AC20MIMO\_Ant2\_5785

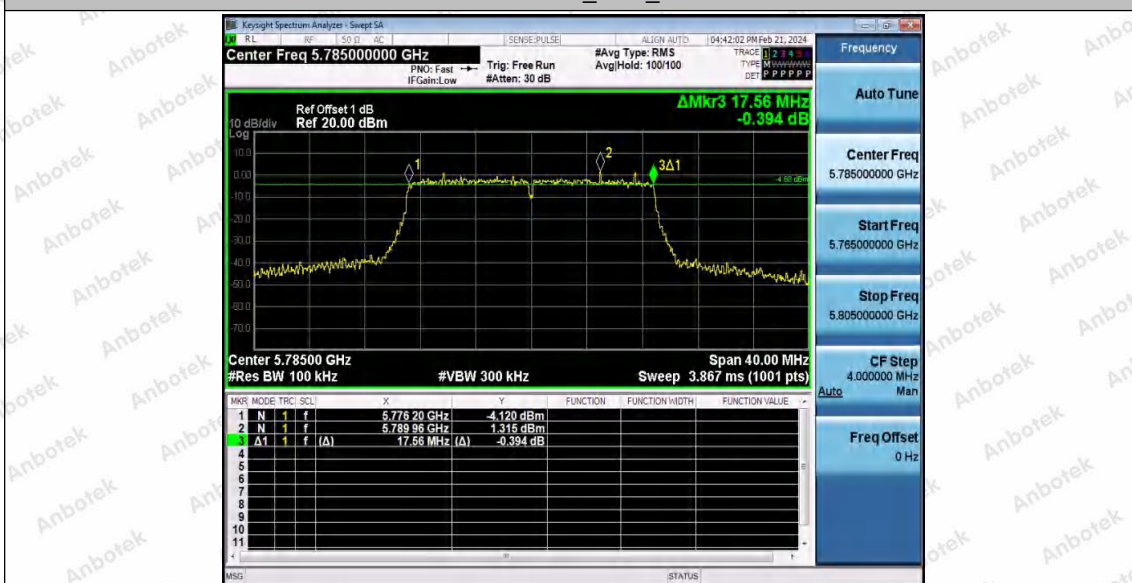

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



11AC20MIMO\_Ant1\_5825



11AC20MIMO\_Ant2\_5825



11AC40MIMO\_Ant1\_5755

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn





11AC40MIMO\_Ant2\_5755

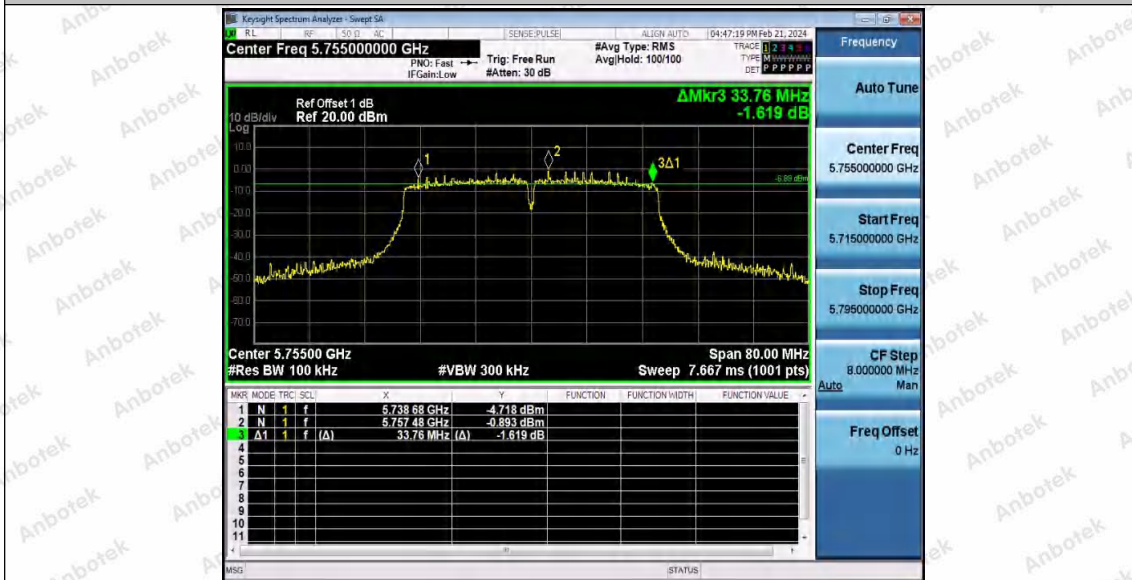

11AC40MIMO\_Ant1\_5795



## Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



11AC40MIMO\_Ant2\_5795

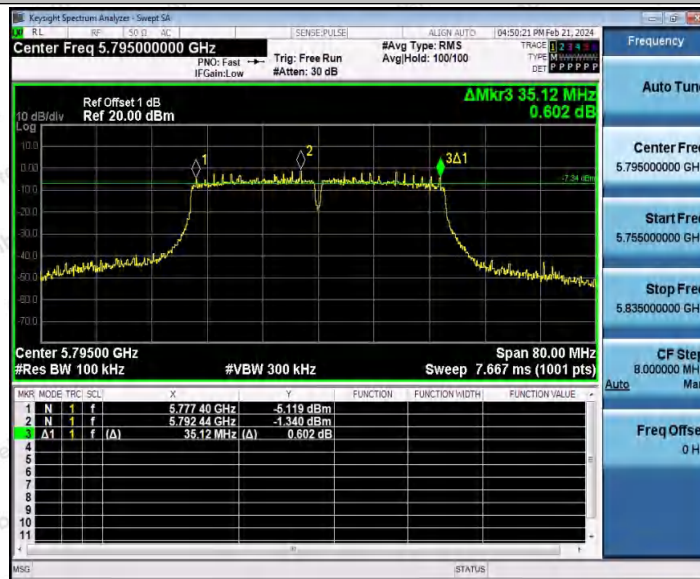

11AC80MIMO\_Ant1\_5775



11AC80MIMO\_Ant2\_5775

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



## Appendix B: Duty Cycle


### Test Result

| TestMode   | Antenna | Frequency[MHz] | Transmission Duration [ms] | Transmission Period [ms] | Duty Cycle [%] |
|------------|---------|----------------|----------------------------|--------------------------|----------------|
| 11A-CDD    | Ant1    | 5745           | 2.06                       | 2.28                     | 90.35          |
|            | Ant2    | 5745           | 2.07                       | 2.24                     | 92.41          |
|            | Ant1    | 5785           | 2.06                       | 2.30                     | 89.57          |
|            | Ant2    | 5785           | 2.07                       | 2.27                     | 91.19          |
|            | Ant1    | 5825           | 2.07                       | 2.28                     | 90.79          |
|            | Ant2    | 5825           | 2.06                       | 2.29                     | 89.96          |
| 11N20MIMO  | Ant1    | 5745           | 1.92                       | 2.14                     | 89.72          |
|            | Ant2    | 5745           | 1.92                       | 2.14                     | 89.72          |
|            | Ant1    | 5785           | 1.92                       | 2.11                     | 91.00          |
|            | Ant2    | 5785           | 1.92                       | 2.08                     | 92.31          |
|            | Ant1    | 5825           | 1.92                       | 2.11                     | 91.00          |
|            | Ant2    | 5825           | 1.92                       | 2.10                     | 91.43          |
| 11N40MIMO  | Ant1    | 5755           | 0.95                       | 1.16                     | 81.90          |
|            | Ant2    | 5755           | 0.94                       | 1.16                     | 81.03          |
|            | Ant1    | 5795           | 0.95                       | 1.13                     | 84.07          |
|            | Ant2    | 5795           | 0.94                       | 1.16                     | 81.03          |
| 11AC20MIMO | Ant1    | 5745           | 1.92                       | 2.16                     | 88.89          |
|            | Ant2    | 5745           | 1.92                       | 2.15                     | 89.30          |
|            | Ant1    | 5785           | 1.92                       | 2.08                     | 92.31          |
|            | Ant2    | 5785           | 1.92                       | 2.13                     | 90.14          |
|            | Ant1    | 5825           | 1.92                       | 2.13                     | 90.14          |
|            | Ant2    | 5825           | 1.92                       | 2.08                     | 92.31          |
| 11AC40MIMO | Ant1    | 5755           | 0.94                       | 1.16                     | 81.03          |
|            | Ant2    | 5755           | 0.94                       | 1.16                     | 81.03          |
|            | Ant1    | 5795           | 0.94                       | 1.16                     | 81.03          |
|            | Ant2    | 5795           | 0.95                       | 1.16                     | 81.90          |
| 11AC80MIMO | Ant1    | 5775           | 1.92                       | 2.13                     | 90.14          |
|            | Ant2    | 5775           | 1.92                       | 2.14                     | 89.72          |




## Test Graphs

11A-CDD\_Ant1\_5745

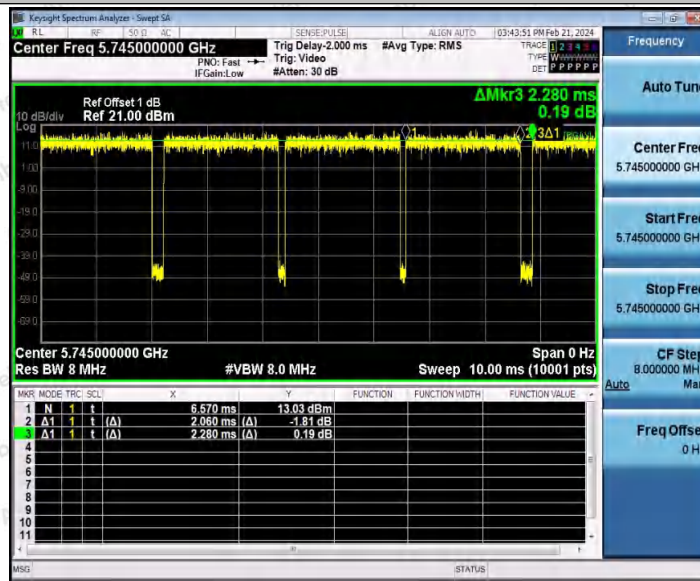

11A-CDD\_Ant2\_5745

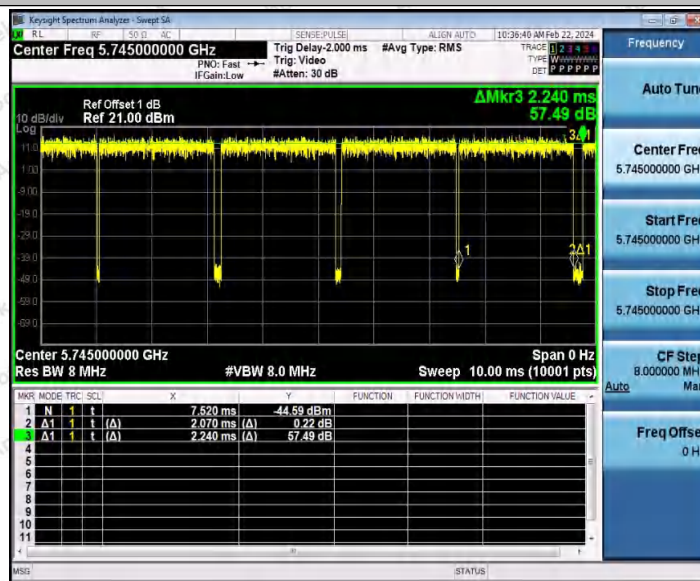

11A-CDD\_Ant1\_5785


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn




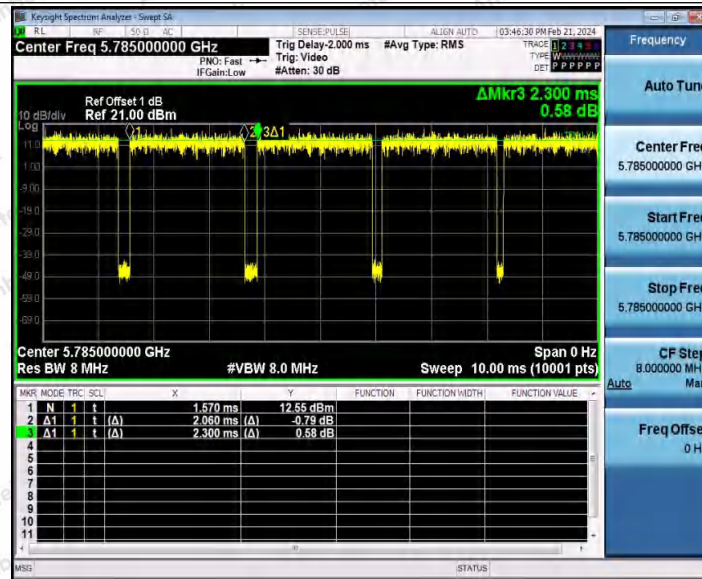

11A-CDD\_Ant2\_5785

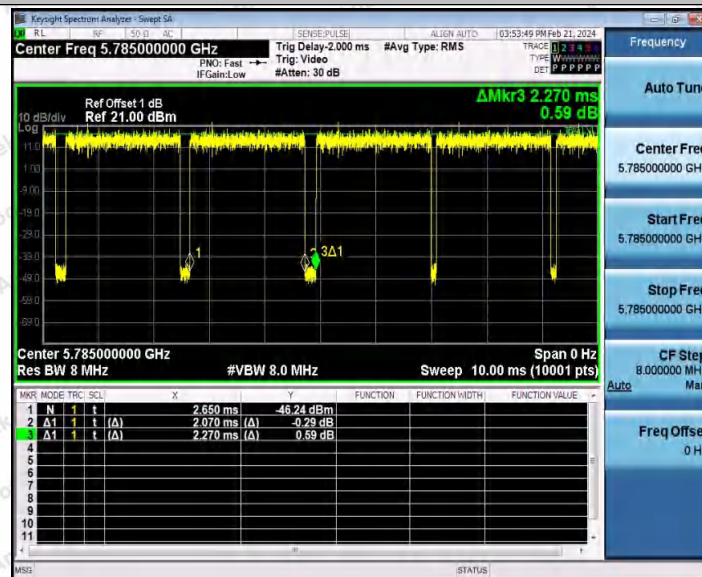

11A-CDD\_Ant1\_5825

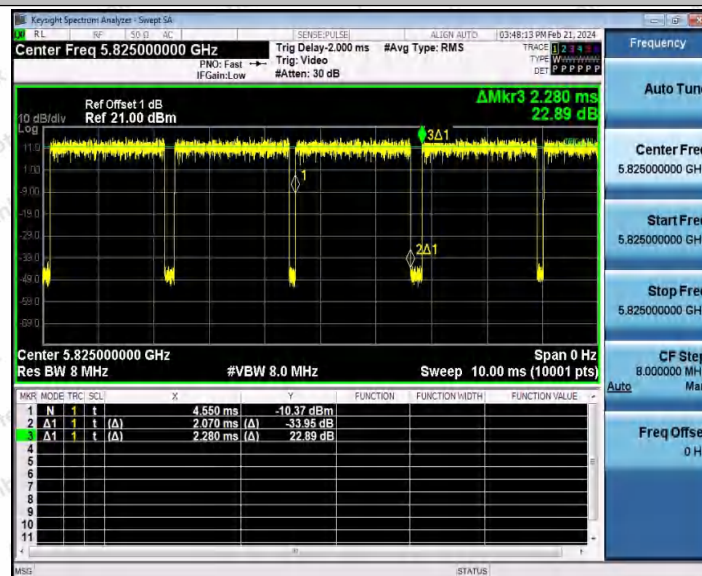

## Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
 400-003-0500  
 www.anbotek.com.cn



11A-CDD\_Ant2\_5825

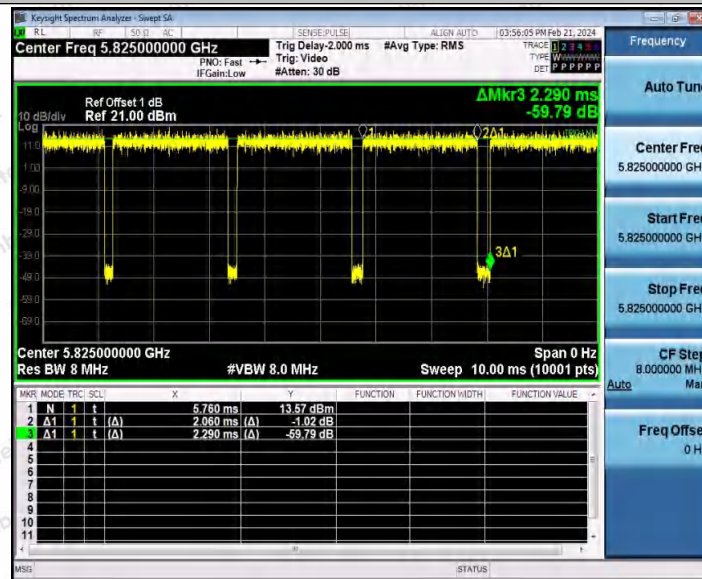

11N20MIMO\_Ant1\_5745



11N20MIMO\_Ant2\_5745


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn




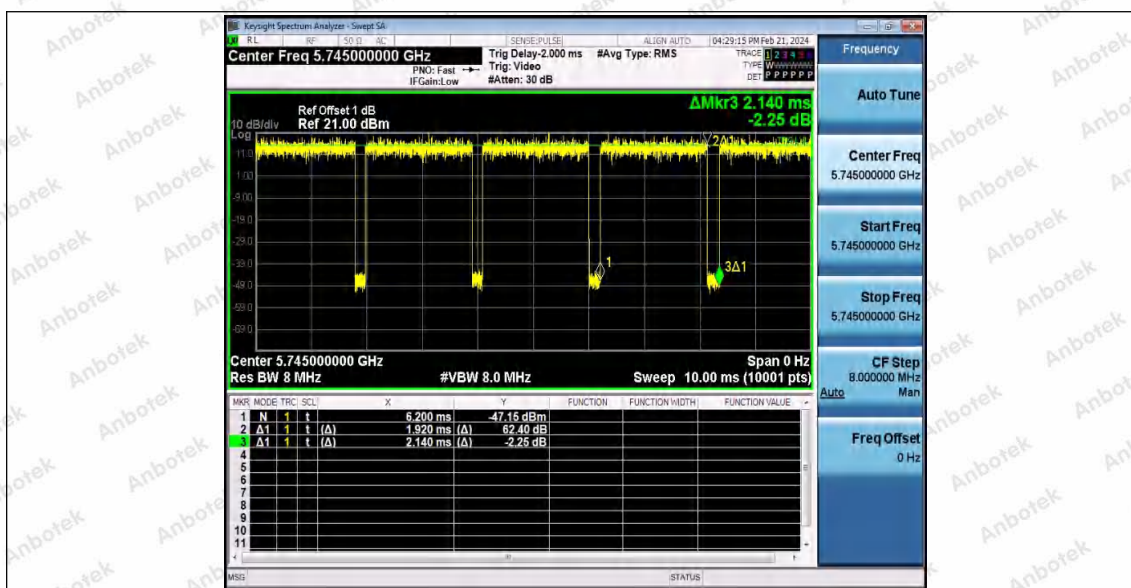

11N20MIMO\_Ant1\_5785

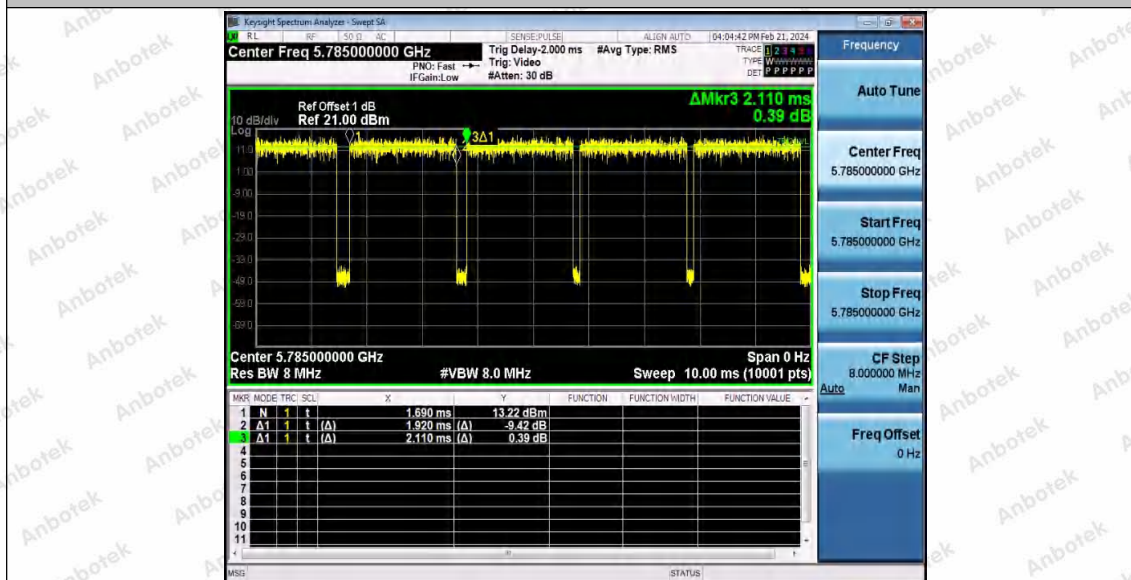

11N20MIMO\_Ant2\_5785

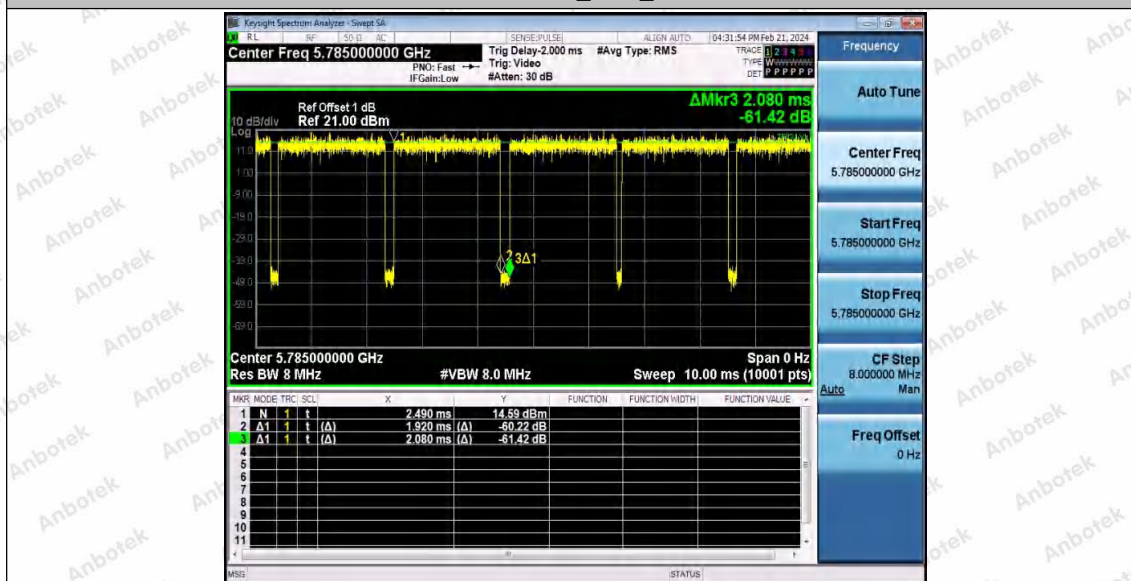

## Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn



11N20MIMO\_Ant1\_5825

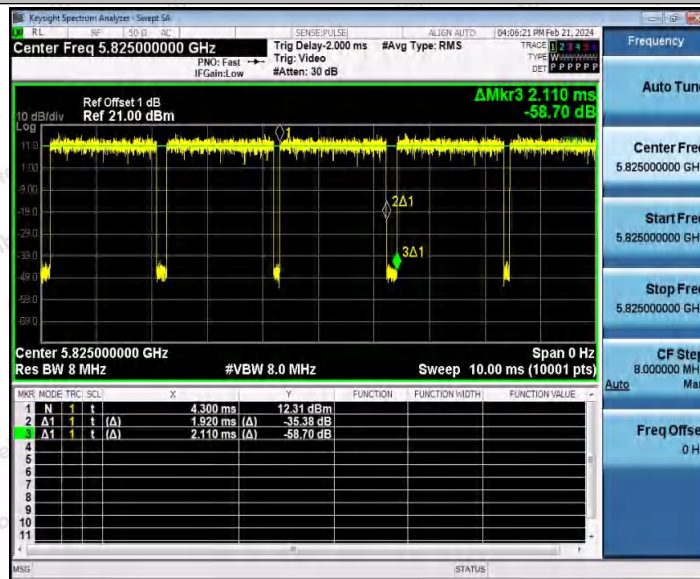

11N20MIMO\_Ant2\_5825



11N40MIMO\_Ant1\_5755


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn




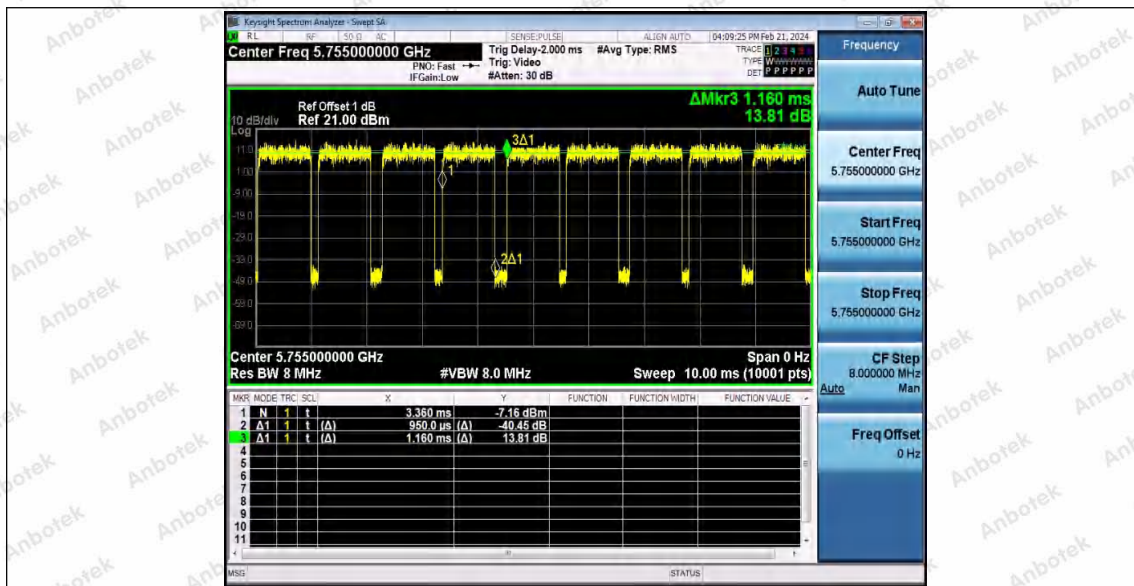

11N40MIMO\_Ant2\_5755

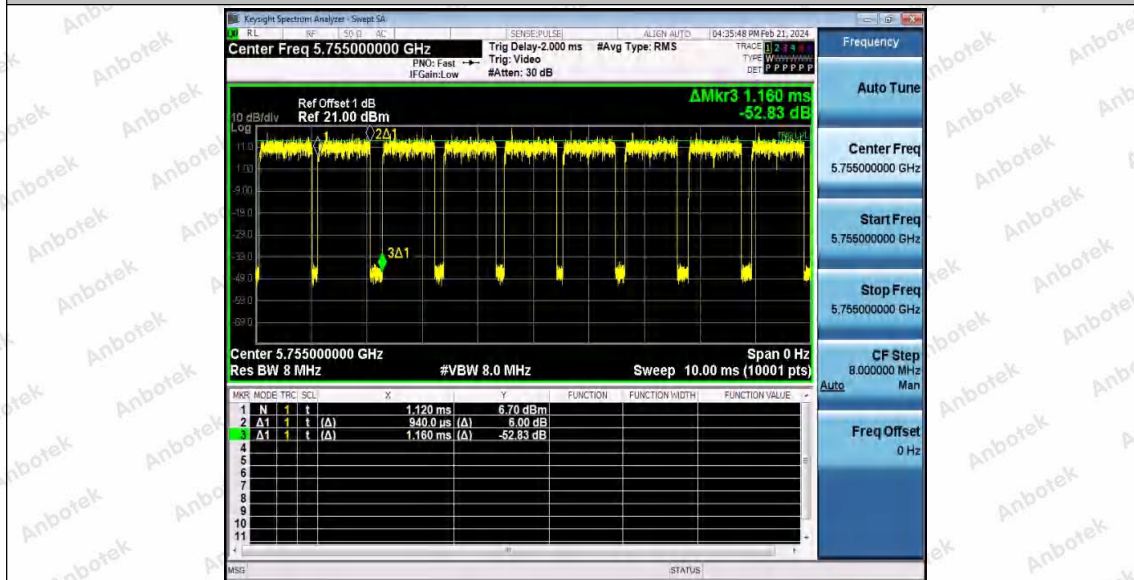

11N40MIMO\_Ant1\_5795

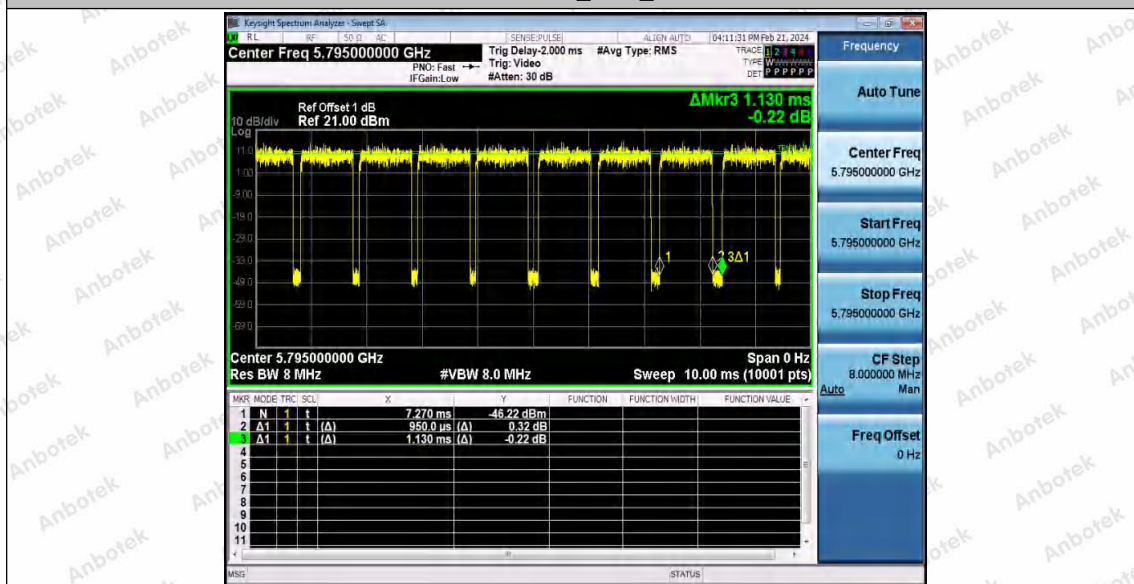

## Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn



11N40MIMO\_Ant2\_5795

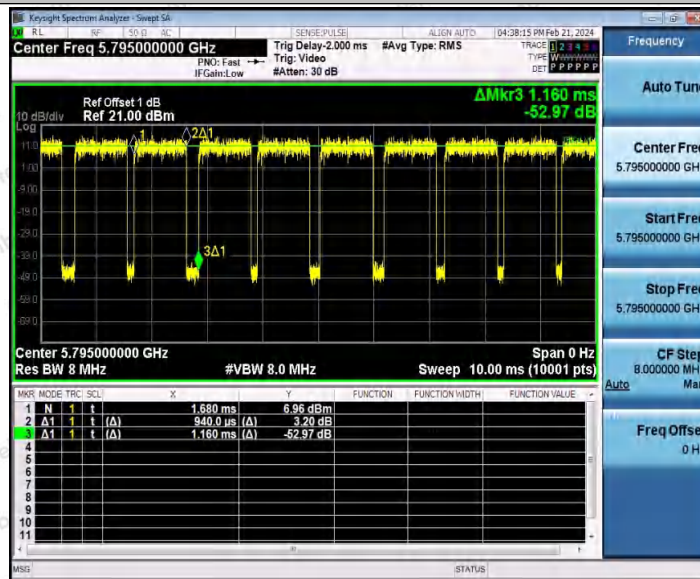

11AC20MIMO\_Ant1\_5745

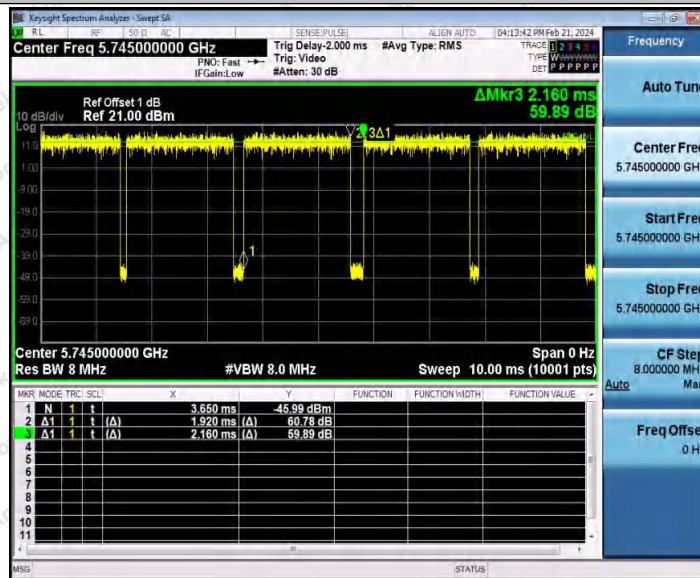

11AC20MIMO\_Ant2\_5745


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn




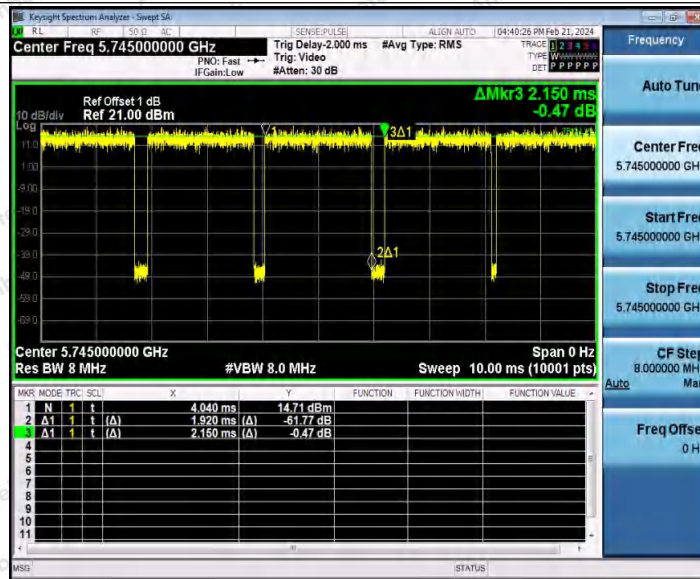

11AC20MIMO\_Ant1\_5785



11AC20MIMO\_Ant2\_5785

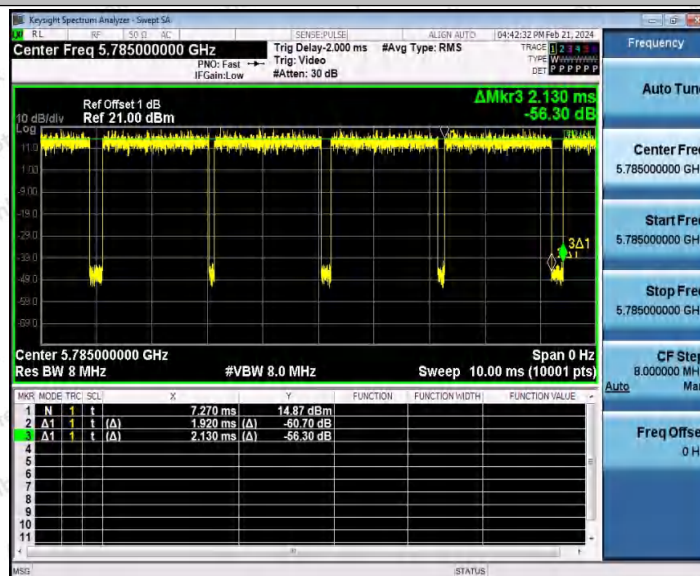

## Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
 400-003-0500  
 www.anbotek.com.cn



11AC20MIMO\_Ant1\_5825

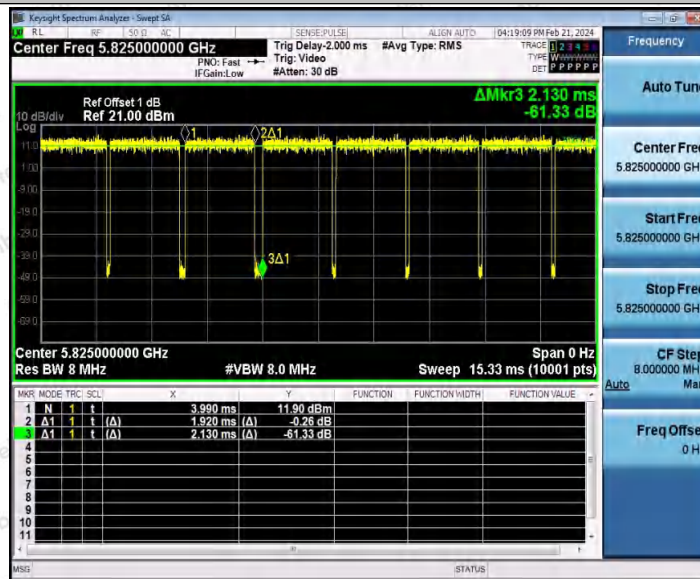

11AC20MIMO\_Ant2\_5825

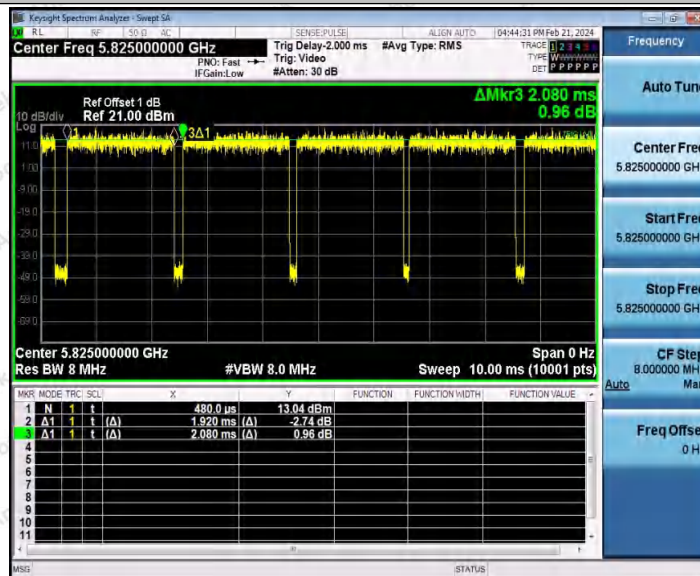

11AC40MIMO\_Ant1\_5755

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline  
400-003-0500  
www.anbotek.com.cn

