### **NCL CALIBRATION LABORATORIES**

Calibration File No.: CP-477

Client.: RFEL

# CERTIFICATE OF CALIBRATION

It is certified that the equipment identified below has been calibrated in the NCL CALIBRATION LABORATORIES by qualified personnel following recognized procedures and using transfer standards traceable to NRC/NIST.

Equipment: Miniature Isotropic RF Probe 450 MHz

Manufacturer: APREL Laboratories Model No.: E-020 Serial No.: 217

**Body Calibration** 

Calibration Procedure: SSI/DRB-TP-D01-032-E020-V2
Project No: RFEB-Probe-Calibration-450B-5098

Calibrated: 12<sup>th</sup> January 2005 Released on: 12<sup>th</sup> January 2005

This Calibration Certificate is Incomplete Unless Accompanied with the Calibration Results Summary

Released By:

NCL CALIBRATION LABORATORIES

51 SPECTRUM WAY NEPEAN, ONTARIO CANADA K2R 1E6 Division of APREL Lab. TEL: (613) 820-4988 FAX: (613) 820-4161

#### Introduction

This Calibration Report reproduces the results of the calibration performed in line with the SSI/DRB-TP-D01-032-E020-V2 E-Field Probe Calibration Procedure. The results contained within this report are for APREL E-Field Probe E-020 217.

#### References

SSI/DRB-TP-D01-032-E020-V2 E-Field Probe Calibration Procedure
IEEE 1528 "Recommended Practice for Determining the Peak Spatial-Average
Specific Absorption Rate (SAR) in the Human Body Due to Wireless
Communications Devices: Experimental Techniques"
SSI-TP-011 Tissue Calibration Procedure

#### Conditions

Probe 217 was a re-calibration.

Ambient Temperature of the Laboratory: 22 °C +/- 0.5 °C Temperature of the Tissue: 21 °C +/- 0.5 °C

We the undersigned attest that to the best of our knowledge the calibration of this probe has been accurately conducted and that all information contained within this report has been reviewed for accuracy.

Stuart Nicol
Director Product Development

Y. Chen Member of Engineering Staff (Calibration Engineer)

# **Calibration Results Summary**

**Probe Type:** 

E-Field Probe E-020

Serial Number:

217

Frequency:

450 MHz

Sensor Offset:

1.56 mm

Sensor Length:

2.5 mm

Tip Enclosure:

Ertalyte\*

**Tip Diameter:** 

<5 mm

Tip Length:

60 mm

**Total Length:** 

290 mm

## Sensitivity in Air

Channel X:

Channel Y:

1.2  $\mu$ V/(V/m)<sup>2</sup>
1.2  $\mu$ V/(V/m)<sup>2</sup>

Channel Z:

 $1.2 \, \mu V/(V/m)^2$ 

**Diode Compression Point:** 

95 mV

<sup>\*</sup>Resistive to recommended tissue recipes per IEEE-1528

### Sensitivity in Body Tissue

Frequency:

450 MHz

**Epsilon:** 

56.38 (+/-5%)

Sigma:

0.94 S/m (+/-10%)

ConvF

Channel X:

6.0

Channel Y:

6.0

Channel Z:

6.0

Tissue sensitivity values were calculated using the load impedance of the APREL Laboratories Daq-Paq.


### **Boundary Effect:**

Uncertainty resulting from the boundary effect is less than 2% for the distance between the tip of the probe and the tissue boundary, when less than 2.44mm.


# **Spatial Resolution:**


The measured probe tip diameter is 5 mm (+/- 0.01 mm) and therefore meets the requirements of SSI/DRB-TP-D01-032 for spatial resolution.

# Receiving Pattern 450 MHz (Air)

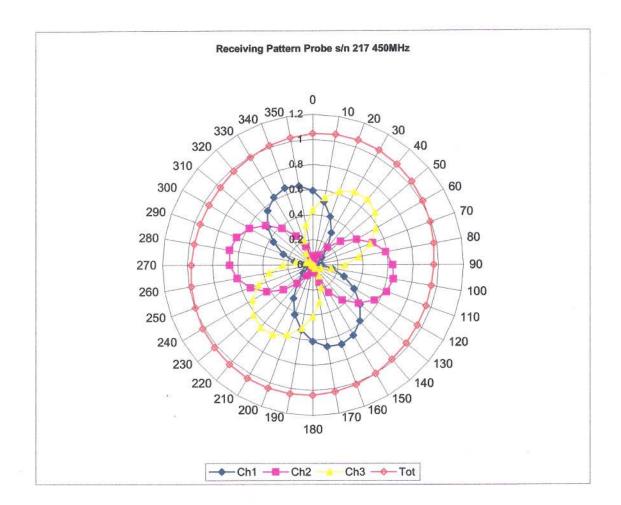

# Isotropy Error 450 MHz (Air)

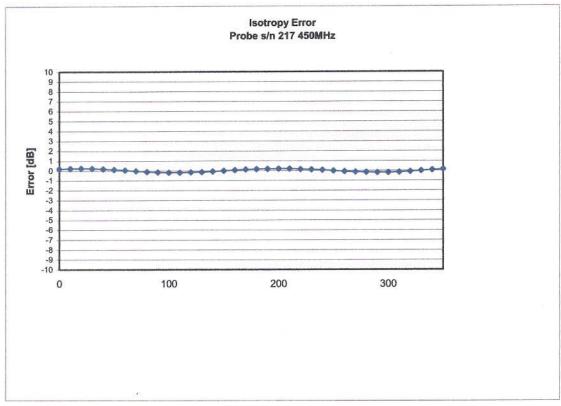

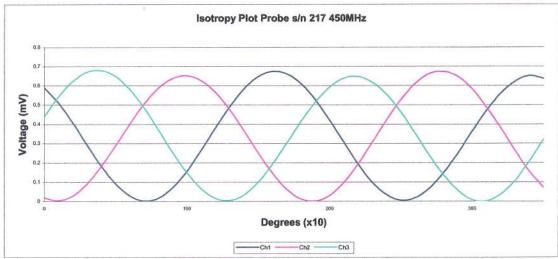


**Isotropicity Tissue:** 

0.10 dB

Page 6 of 10


This page has been reviewed for content and attested to by signature within this document.

# **Dynamic Range**

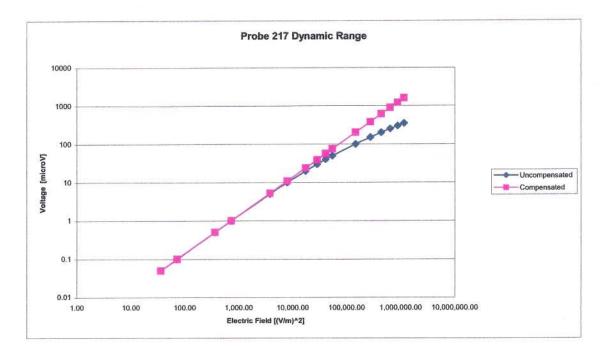

### Video Bandwidth

#### **Probe Frequency Characteristics**

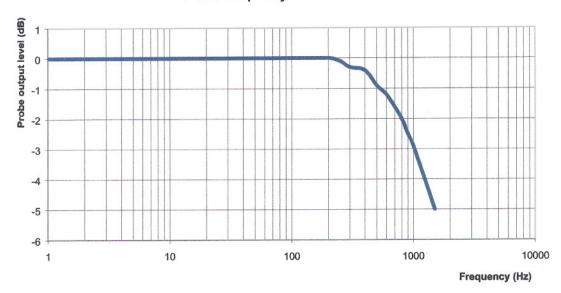

Video Bandwidth at 500 Hz 1 dB Video Bandwidth at 1.02 KHz: 3 dB

## **Conversion Factor Uncertainty Assessment**

Frequency:

450 MHz

Epsilon:

56.38 (+/-5%)

Sigma:

0.94 S/m (+/-10%)

ConvF

Channel X:

6.0

7%(K=2)

Channel Y:

6.0

7%(K=2)

Channel Z:

6.0

7%(K=2)

To minimize the uncertainty calculation all tissue sensitivity values were calculated using a load impedance of 5 M $\Omega$ .

#### **Boundary Effect:**

For a distance of 2.5mm the evaluated uncertainty (increase in the probe sensitivity) is less than 2%.

## **Test Equipment**

The test equipment used during Probe Calibration, manufacturer, model number and, current calibration status are listed and located on the main APREL server R:\NCL\Calibration Equipment\Instrument List May 2004.