

AKB9691S

Detail

Color: Gray/black

Material: 80gsm woodfree paper

Folded Size: 4.5H

Open size: 9W x 4.5H

FC: 4.08K UGR / 2.9994E-05

271000 UGR (2.9994E-05) is given in a regulatory table based on the guidelines issued by the FCC. The FCC has no technical or scientific evidence to support the claim that UGR is a health risk. Targus LLC. reserves the right to make changes without notice. ©2013 Targus Inc. All rights reserved. Targus is a registered trademark and the T logo is a trademark of Targus Corporation, Inc. Targus, LLC, 1001 Main Street, Aliso Viejo, CA 92656, USA 888.988.9888.

DISCLAIMER: AKB9691S: Targus is not responsible for Targus International LLC's or its affiliates' or contractors' terms and conditions. Chrome OS™ and Google™ are trademarks of Google Inc. Targus is not responsible for Google's terms and conditions. Please refer to Google's website for more information. Targus International LLC, 1001 Main Street, Aliso Viejo, CA 92656, USA 888.988.9888.

AKB9691S: Targus (U.S.A.) LLC (2.9994E-05). Targus is not responsible for Google's terms and conditions. Targus International LLC, 1001 Main Street, Aliso Viejo, CA 92656, USA 888.988.9888. FCC ID: OOW000134, IC: 2A357-A00000. Targus (U.S.A.) LLC, 1001 Main Street, Aliso Viejo, CA 92656, USA 888.988.9888. Targus (U.S.A.) LLC, 1001 Main Street, Aliso Viejo, CA 92656, USA 888.988.9888.

folding line  
2 staples here (add the stitching)

Targus®

## WIRELESS ANTIMICROBIAL MIDSIZE KEYBOARD

### User Guide



Product Name: Wireless Keyboard  
Model: AKB9691S  
SKU: AKB9691S

folding line  
2 staples here (add the stitching)

## Targus Wireless Antimicrobial Midsize Keyboard

### Installing the battery

1. Remove the battery cover located on the bottom of the keyboard.
2. Insert the supplied batteries, making sure that the positive (+) and negative (-) ends of each battery match the polarity indicators inside the battery compartment.



### Low Battery Alert

Chrome OS™ will detect low batteries in the keyboard and will alert the user with an on-screen notification of low battery for the "Targus BT Keyboard AKB869".

### Contents

- Wireless Antimicrobial Midsize Keyboard
- User manual
- 2 x AAA battery


### System requirements

- Chrome OS

Product Name	Operating Frequency(MHz)	Maximum EIRP Power(dBm)(EU)	Working distance
Wireless Keyboard: AKB869	2402-2480MHz	10	10M

## Targus Wireless Antimicrobial Midsize Keyboard

### Establishing pairing

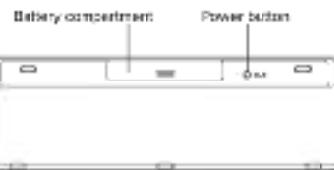

1. Press and hold the power button for 3 seconds to enable Bluetooth pairing mode, the blue LED indicator light will flash for up to 3 minutes when the keyboard is in pairing mode.
2. Select "Targus BT Keyboard AKB869" in the Bluetooth menu on your Chrome device.



3. Type in security code on keyboard, then press Enter (Security code is randomly generated by Chrome OS in pairing mode).
4. Select "Targus BT Keyboard AKB869" in the bluetooth menu on your device.
5. Pairing will start automatically.
6. The Targus Wireless Antimicrobial Midsize Keyboard is now connected to your Chrome device and the blue LED will stop flashing.


Note: User can power the keyboard on/off by pressing the power button once.

### Help with setup: Keyboard is not working

- Check the orientation of the batteries inside the keyboard, or replace the batteries.
- Remove any metal object between the receiver and the keyboard that may interfere with reception.
- Restart the computer and Power off/on your keyboard.
- After pairing for the first time, your device will automatically connect to the keyboard within 3-5 seconds the next time you turn on the keyboard.
- In case of connection failure, delete the keyboard from the Bluetooth menu of your device, and try re-pairing the keyboard to your device.

### Power saving mode

One Click for power off/on.

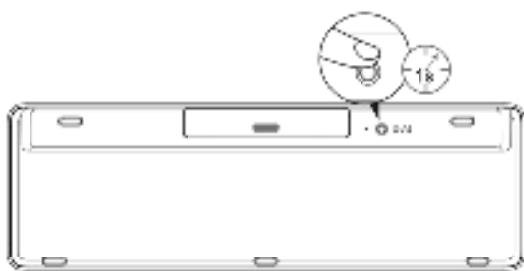

### Function keys



Targus Wireless Antimicrobial Midsize Keyboard

## Function keys

	Key	Chrome OS		Key	Chrome OS
1		esc	10		F1/F11
2		back	11		Next Track
3		refresh	12		Speaker Max
4		full screen	13		Speaker Volume Down
5		Down/Next	14		Speaker Volume Up
6		Screen Shot	15		Lock
7		Display Brightness Down			
8		Display Brightness Up			
9		Last Track			

Function key features may vary depending on the Chrome OS version and device.

## Targus Wireless Antimicrobial Midsize Keyboard

Targus

**Supplier's Declaration of Conformity**



<b>Manufacture:</b> Emporia Party <b>Address:</b>	Taylor Instrument Co.	Tel:	1-714-75-8538
	101 E. 4th Street Emporia, KS 66801 USA	Fax:	1-714-75-8538

Environ Monit Assess (2010) 166:47–53

#### **REFERENCES**

Product name: WWWCP Pharmacy Software System

Model and the Wright-Patterson

Please answer the following questions:

FIGURE 10: STATE OF FLA. VS. BUDGET BLDG. & CONSTRUCTION CO., INC., et al., Defendants,  
The State of Florida, et al., Plaintiffs-Appellees, v. The State of Florida, et al., Defendants-  
Appellants.

#### Implementation

The device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Dynastinae: Tipula (Inonotus) 1: E

卷之三

卷之三

卷之三

## Targus Wireless Antimicrobial Midsize Keyboard

### Installation des piles

1. Retirez le couvercle des piles situé sur la partie inférieure du clavier.
2. Insérez les piles fournies, en vous assurant que les extrémités positives (+) et négatives (-) de chaque pile correspondent aux indicateurs de polarité à l'intérieur du compartiment à piles.



### Fonction d'alerte basse tension

Chrome OS® détectera les piles faibles dans le clavier et avertira l'utilisateur avec une notification à l'écran de piles faibles pour le « Targus BT Keyboard AKB860 ».

### Contenu

- Clavier sans fil antimicrobien de taille moyenne
- Manuel de l'utilisateur
- 2 piles de type AAA


### Configuration requise

- Chrome OS

Nom du produit	Fréquence de fonctionnement (MHz)	Distance PPP maximale (Rang 1) (m)	Distance de fonctionnement
Clavier sans fil AKB860	2402-2480MHz	10	10M

## Targus Wireless Antimicrobial Midsize Keyboard

### Établissement de l'appariement

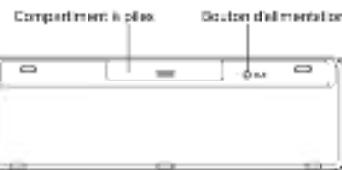

1. Appuyez longuement sur le bouton d'alimentation pendant 3 secondes pour activer le mode d'appariement Bluetooth. Le voyant lumineux LED bleu clignote pendant 3 minutes lorsque le clavier est en mode d'appariement.
2. Sélectionnez « Targus BT Keyboard AKB860 » dans le menu Bluetooth de votre appareil Chrome.



3. Tapez le code de sécurité sur le clavier, puis appuyez sur Entrée (le code de sécurité est généré aléatoirement par Chrome OS en mode d'appariement).
4. Sélectionnez « Targus BT Keyboard AKB860 » dans le menu Bluetooth de votre appareil.
5. L'appariement démarre automatiquement.
6. Le clavier sans fil antimicrobien de taille moyenne Targus est maintenant connecté à votre appareil Chrome et le voyant LED bleu cessera de clignoter.

Remarque : L'utilisateur peut mettre le clavier sous tension / hors tension en appuyant une fois sur le bouton d'alimentation.


## Targus Wireless Antimicrobial Midsize Keyboard

### Aide à la configuration : Le clavier ne fonctionne pas

- Vérifiez l'orientation des piles à l'intérieur du clavier, ou remplacez-les.
- Retirez tout objet métallique situated entre le récepteur et le clavier et susceptible de perturber la réception.
- Redémarrez l'appareil et éteignez ou rallumez votre clavier.
- Après le premier appariement, votre appareil se connectera automatiquement au clavier dans les 3 à 5 secondes la prochaine fois que vous allumerez le clavier.
- En cas d'échec de la connexion, supprimez le clavier du menu Bluetooth de votre appareil et essayez de réappairer le clavier de votre appareil.

### Mode d'économie d'énergie

Un clic pour la mise sous tension ou la mise hors tension.

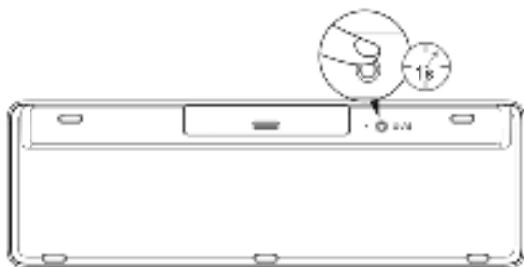

9

## Targus Wireless Antimicrobial Midsize Keyboard

### Touches de fonction



10

## Targus Wireless Antimicrobial Midsize Keyboard

### Touches de fonction

	Touche	Chrome OS
1		Esc
2		Retour
3		Supprimer
4		Print Screen
5		Vers l'ensemble
6		Défilez d'acres
7		Bascule de la molette de souris
8		Augmentation de l'unité de la page
9		Page précédente

	Touche	Chrome OS
10		Accès / page
11		Page suivante
12		Sauvegarde / supprimer
13		Augmentation du volume du haut-parleur
14		Augmentation de volume du haut-parleur
15		Mémo

Les fonctions ci-dessous peuvent varier en fonction de la version et de l'appareil Chrome OS.

## Targus Wireless Antimicrobial Midsize Keyboard

### Targus

#### Déclaration de conformité du fabricant



Entreprise:  
Targus International LLC  
Adresse: 12117 Research Forest Drive  
Austin, TX 78754 USA  
Téléphone: 512-787-0000  
E-mail: [targus@targus.com](mailto:targus@targus.com)

Déclarer que les produits qui suivent:

Désignation du produit: Targus

Nom du modèle: Targus AWE500 Midsize Keyboard

Nom de modèle: XPMW

Certifications nécessaires suivantes:

FCC ID: 2AB9U-AWE500, IC: 2405A-AWE500, CE: 004-AWE500

Prise dans les deux cas de la certification de l'UE, ce module a le numéro de modèle: 1000000070422 (PC-04).

Les deux preuves de la qualité sont ci-dessous:

Cet appareil est conforme à la partie 15 des règlements de la FCC, et fonctionne avec succès dans les deux conditions suivantes: (1) Un accord de test par une partie tierce accréditée, ou (2), un appareil de diagnostic radio électronique et/ou un autre appareil de communication électronique.

Entreprise: Targus International LLC	Modèle: AWE500
Adresse: 12117 Research Forest Drive	Numéro de modèle: XPMW
Austin, TX 78754 USA	Numéro de modèle: AWE500
Téléphone: 512-787-0000	E-mail: <a href="mailto:targus@targus.com">targus@targus.com</a>

## Targus Wireless Antimicrobial Midsize Keyboard

### Instalar la batería

1. Retire la tapa de la batería que está en la parte inferior del teclado.
2. Inserte las baterías provistas, asegúrese de que los terminales positivo (+) y negativo (-) de cada batería coincidan con los indicadores de polaridad del compartimiento de batería.



### Función de alerta de bajo voltaje

Chrome OS™ detectará baterías bajas en el teclado y alertará al usuario con una notificación en pantalla de batería baja para el "Targus Keyboard BT AKB869".

### Contenido

- Teclado inalámbrico antimicrobiano de tamaño mediano
- Manual del usuario
- 2 Baterías AAA

### Requisitos del sistema

- Chrome OS

Nombre del producto	Frecuencia operativa (MHz)	Potencia EIRP máxima (dBm) (IR)	Distancia de trabajo
Teclado inalámbrico AKB869	2402-2480MHz	10	10M

## Targus Wireless Antimicrobial Midsize Keyboard

### Establecer emparejamiento



1. Mantenga presionado el botón de encendido durante 3 segundos para habilitar el modo de emparejamiento de Bluetooth. La luz indicadora LED azul parpadeará hasta 3 minutos cuando el teclado esté en modo de emparejamiento.
2. Seleccione "Targus BT Keyboard AKB869" en el menú de Bluetooth de su dispositivo Chrome.



3. Tectee el código de seguridad en el teclado y luego presione Enter (el sistema operativo Chrome genera automáticamente el código de seguridad en el modo de emparejamiento).
4. Seleccione "Targus BT Keyboard AKB869" en el menú Bluetooth de su dispositivo.
5. El emparejamiento comienza automáticamente.
6. El teclado antimicrobiano de tamaño mediano inalámbrico Targus ahora está conectado a su dispositivo Chrome y el LED azul dejará de parpadear.


Nota: El usuario puede encender/apagar el teclado presionando el botón de encendido una vez.

### Ayuda con la configuración: El teclado no funciona

- Compruebe la orientación de las baterías dentro del teclado o cámbielas.
- Retire cualquier objeto metálico que esté entre el receptor y el teclado ya que puede interferir con la recepción.
- Reinicie la computadora y encienda de nuevo su teclado.
- Tras emparejar por primera vez, su dispositivo se conectará automáticamente con el teclado en un lapso de 3 a 5 segundos la próxima vez que encienda su teclado.
- En caso de que falte la conexión, elimine el teclado del menú Bluetooth de su dispositivo y trate de volver a emparejar el teclado con su dispositivo.

### Modo de ahorro de energía

Un clic para apagar/encender.

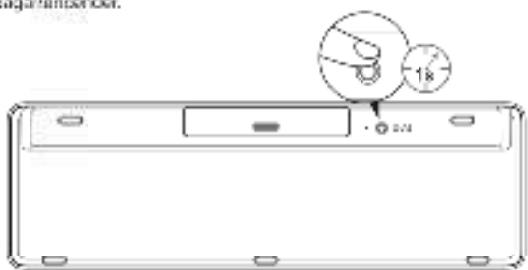

### Teclas de función



## Targus Wireless Antimicrobial Midsize Keyboard

### Teclas de función

	Tecle	Chrome OS		Tecle	Chrome OS
1		... Esc		10	
2		Retorno ←		11	
3		Actualizar Delete		12	
4		Perfiles completos		13	
5		Descripción general		14	
6		Captura de pantalla		15	
7		Reducir rueda de scroll			
8		Aumentar rueda de scroll			
9		Brama páginas			

Las características de las teclas de función pueden variar según la versión y el dispositivo de Chrome OS.

## Targus Wireless Antimicrobial Midsize Keyboard

### Technical support

For technical questions, please visit:

#### Internet

US	Internet: <a href="http://targus.com/us/support">http://targus.com/us/support</a>
Canada	Internet: <a href="http://www.targus.ca/en/ca/support">http://www.targus.ca/en/ca/support</a>
Australia	Internet: <a href="http://www.targus.com/au/support">http://www.targus.com/au/support</a> Email: <a href="mailto:australia@targus.com">australia@targus.com</a> Telephone: 1000-641-645
New Zealand	Telephone: 0800-688-222
Latin America	Email: <a href="mailto:latam@targus.com">latam@targus.com</a>

English	<a href="https://us.targus.com/pages/support">https://us.targus.com/pages/support</a>
French	<a href="https://fr.targus.com/pages/support">https://fr.targus.com/pages/support</a>
German	<a href="https://de.targus.com/pages/support">https://de.targus.com/pages/support</a>
Spanish	<a href="https://es.targus.com/pages/support">https://es.targus.com/pages/support</a>

#### Phone (language unanswered in):

Austria: 01-785-070-42 (German)
Belgium: 02-717-2431 (French)
Denmark: +45 35 28 87 51 (English)
Finland: +358 922845016 (English)
France: 01-6453-0151 (French)
Germany: 0211-6509-1151 (German)
Netherlands: 03-0504-9671 (English)
Norway: +47 22577729 (English)
Portugal: 4051-21-415-4120 (English)
South Africa: +27 21-603-271 (English) - Calls answered 10am-6pm South African time
Spain: 91-746-6221 (Spanish)
Sweden: 08-751-4189 (English)
Switzerland: +41 (0) 41-212-0027 (French or German)
UK: 020-7744-0330 (English)

Eastern Europe and others not listed above:  
+44 (0) 207 744 0330 (English)

## Targus Wireless Antimicrobial Midsize Keyboard

### Warranty

2 YEAR LIMITED WARRANTY: We pride ourselves on the quality of our products. For complete warranty details and a list of our worldwide offices, please visit [www targus com](http://www targus com). Features and specifications are subject to change without notice. All trademarks and registered trademarks are the property of their respective owners. All rights reserved. ©2012 Manufactured or Imported by Targus Europe Ltd., Fourth Floor, One London Road, Staines, TW18 4EX, UK.

### Regulatory compliance (applicable to products with electronic circuitry/parts only)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC statement

#### Tested to Comply

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications; however, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna;
- Increase the separation between the equipment and receiver;
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected;
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not authorized by the party responsible for compliance could void the user's authority to operate this product.

## Targus Wireless Antimicrobial Midsize Keyboard

### Radiation Exposure Statement

The product comply with the FCC portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

### IC statement

This device contains license-exempt transmitter(s)(receiver(s)) that comply with Innovation, Science and Economic Development Canada's license-exempt RSSs. Operation is subject to the following two conditions:  
1. This device may not cause interference.  
2. This device must accept any interference, including interference that may cause undesired operation of the device.

### Déclaration IC

Cet appareil contient un émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:  
1. L'appareil ne doit pas causer d'interférence;  
2. L'appareil doit accepter toute interférence, y compris celle qui peut entraîner un fonctionnement non désiré de l'appareil.

### Radiation Exposure Statement

The product comply with the Canadian portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

### Déclaration d'exposition aux radiations

Le produit est conforme aux limites d'exposition pour les appareils portables RF pour les Etats-Unis et le Canada établies pour un environnement non contrôlé.  
Le produit est sûr pour un fonctionnement tel que décrit dans ce manuel. La réduction aux expositions RF peut être augmentée si l'appareil peut être conservé aussi loin que possible du corps de l'utilisateur ou que le dispositif est réglé sur la puissance de sortie la plus faible si une telle fonction est disponible.

**Declaration of conformity**

Hereby, Targus, declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/35/EU.

**Targus recycling directive**

At the end of this product's useful life please dispose at an appropriate recycling collection point provided in your country.