




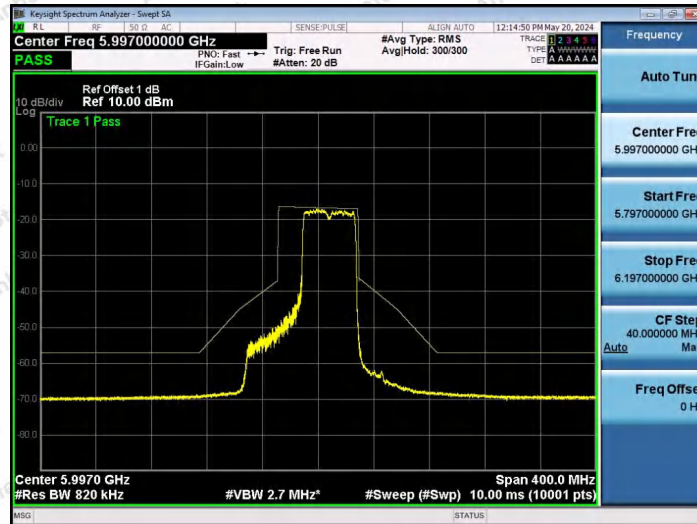

NTNV-11AX80SISO-Ant1-5985-484Tone-RU66-PASS

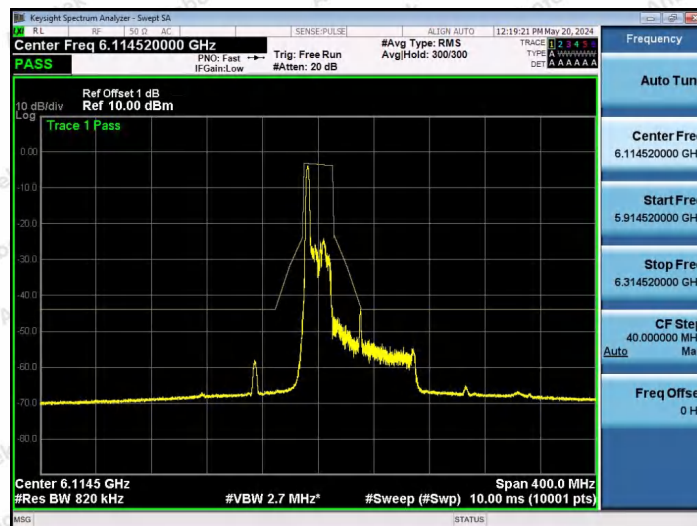

NTNV-11AX80SISO-Ant1-6145-26Tone-RU0-PASS

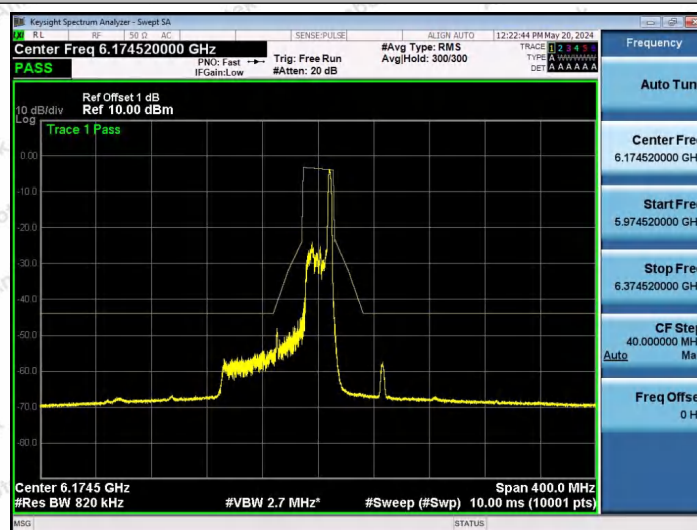


NTNV-11AX80SISO-Ant1-6145-26Tone-RU36-PASS

## Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com.cn




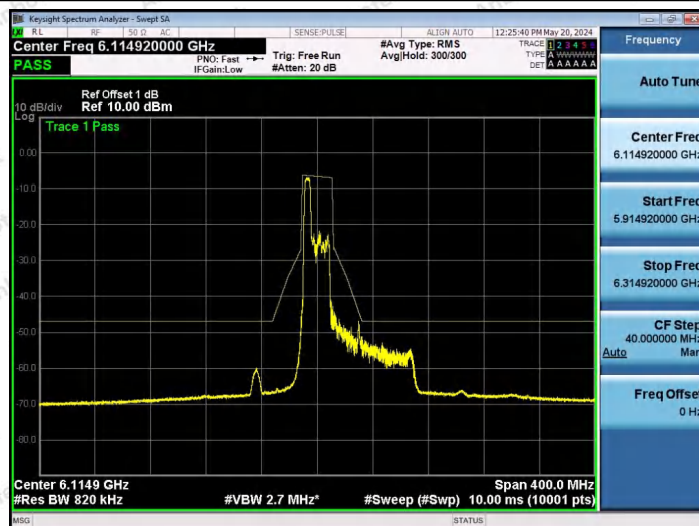

NTNV-11AX80SISO-Ant1-6145-52Tone-RU37-PASS

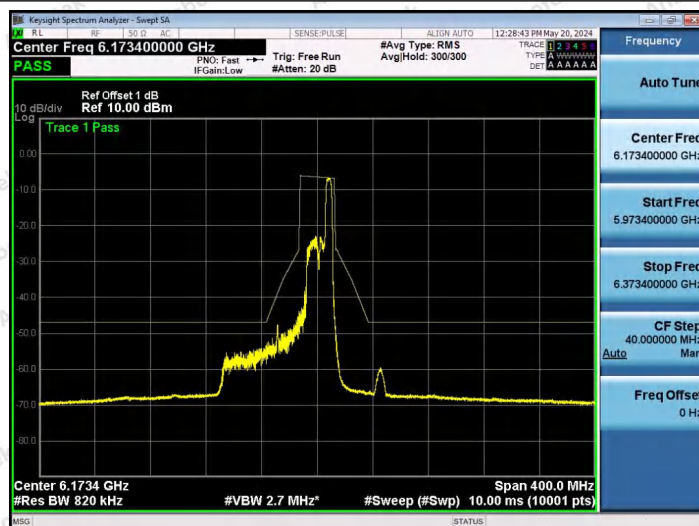

NTNV-11AX80SISO-Ant1-6145-52Tone-RU52-PASS

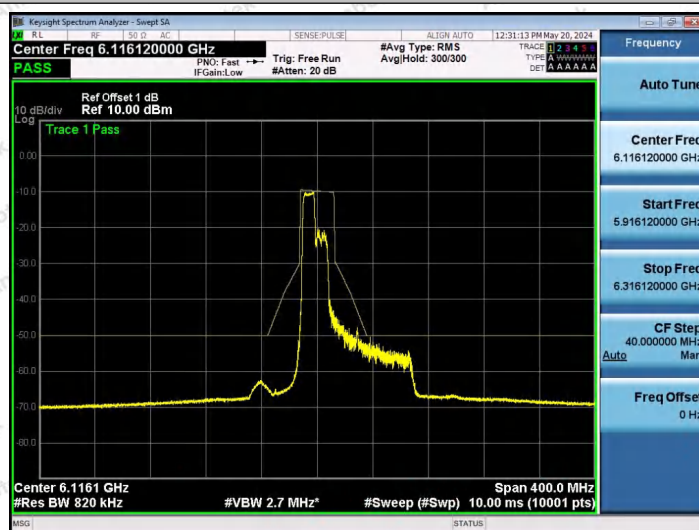

NTNV-11AX80SISO-Ant1-6145-106Tone-RU53-PASS

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




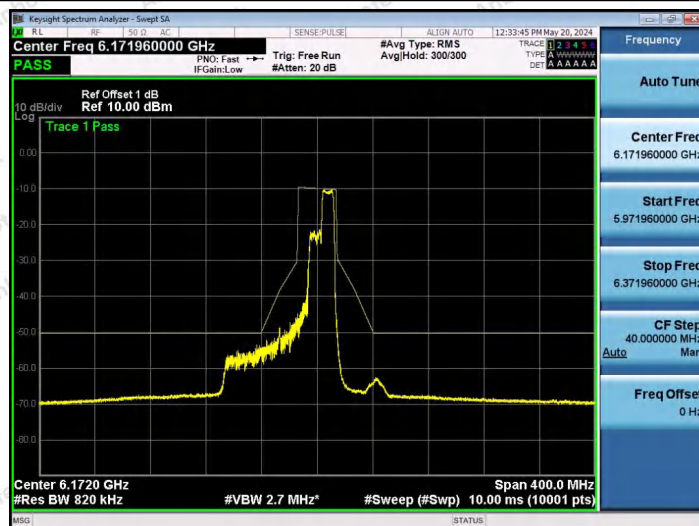

NTNV-11AX80SISO-Ant1-6145-106Tone-RU60-PASS

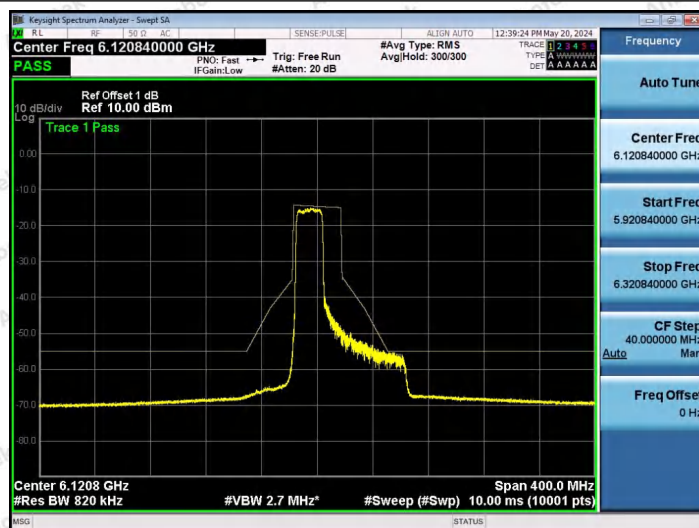

NTNV-11AX80SISO-Ant1-6145-242Tone-RU61-PASS

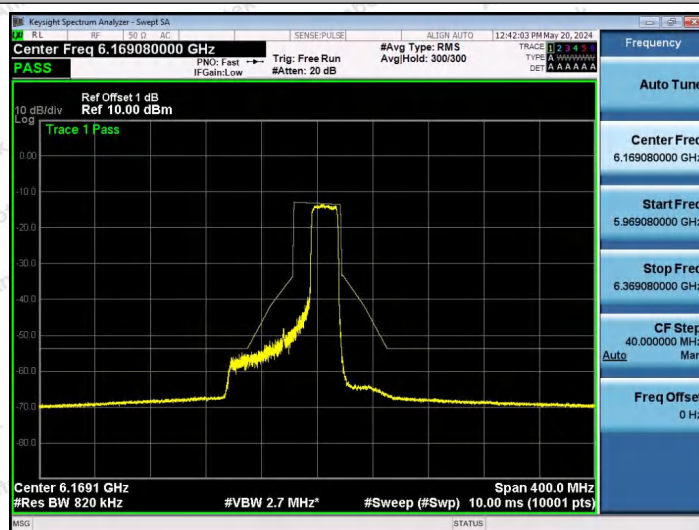

NTNV-11AX80SISO-Ant1-6145-242Tone-RU64-PASS


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn




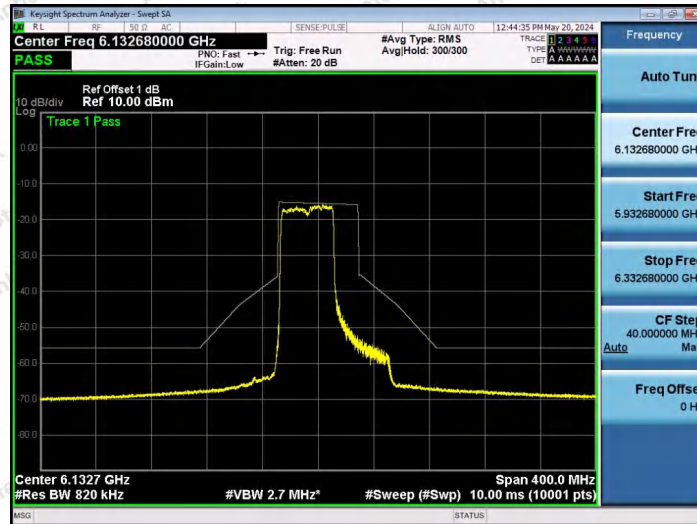

NTNV-11AX80SISO-Ant1-6145-484Tone-RU65-PASS

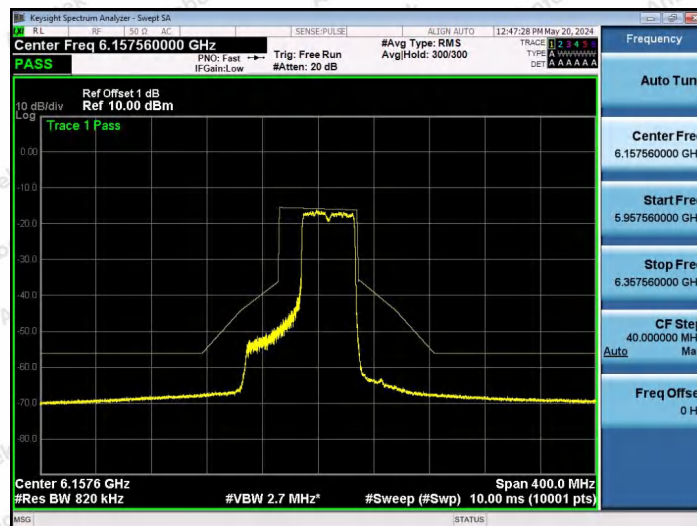

NTNV-11AX80SISO-Ant1-6145-484Tone-RU66-PASS

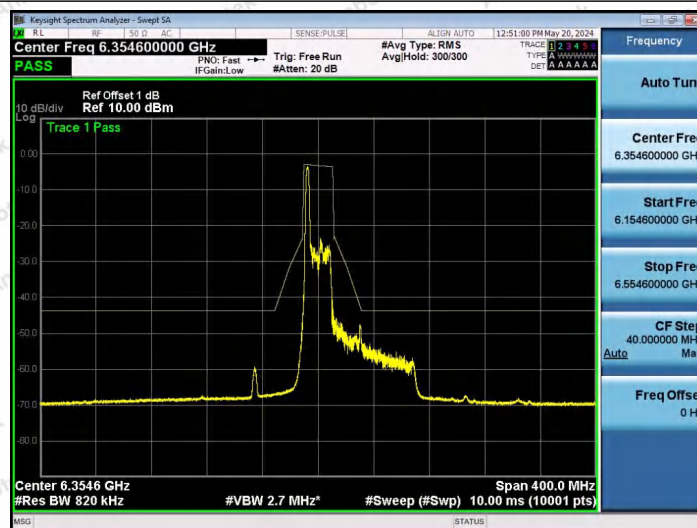


NTNV-11AX80SISO-Ant1-6385-26Tone-RU0-PASS

## Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com.cn




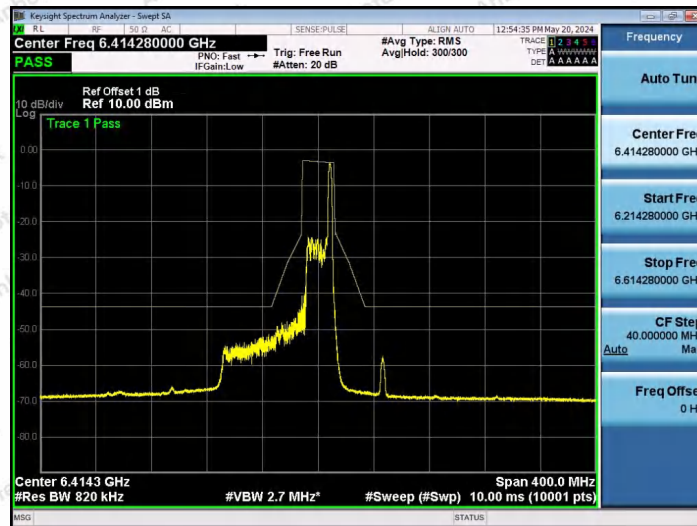

NTNV-11AX80SISO-Ant1-6385-26Tone-RU36-PASS

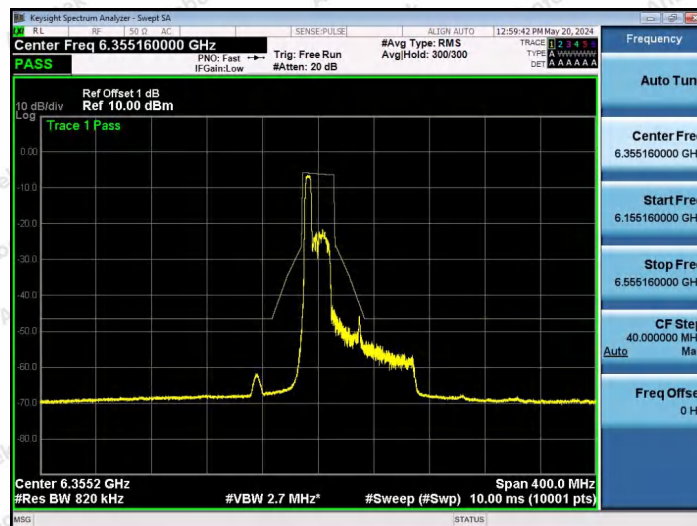

NTNV-11AX80SISO-Ant1-6385-52Tone-RU37-PASS

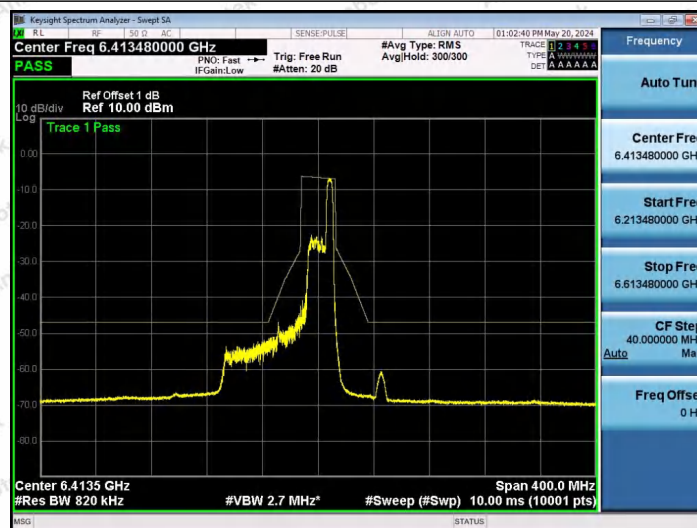


NTNV-11AX80SISO-Ant1-6385-52Tone-RU52-PASS

## Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com.cn




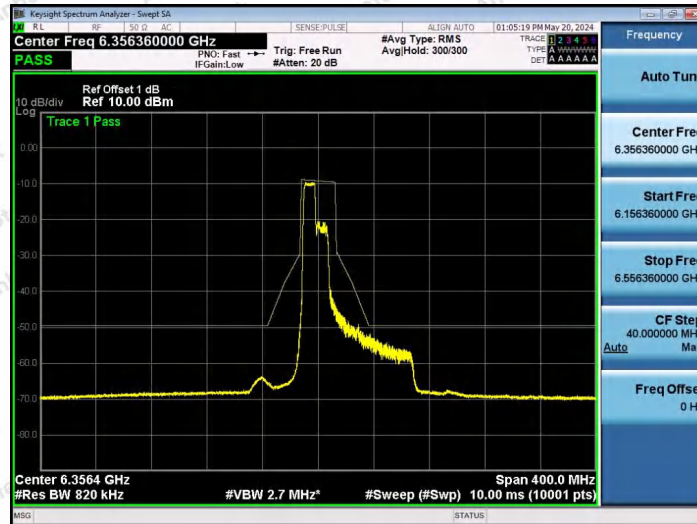

NTNV-11AX80SISO-Ant1-6385-106Tone-RU53-PASS

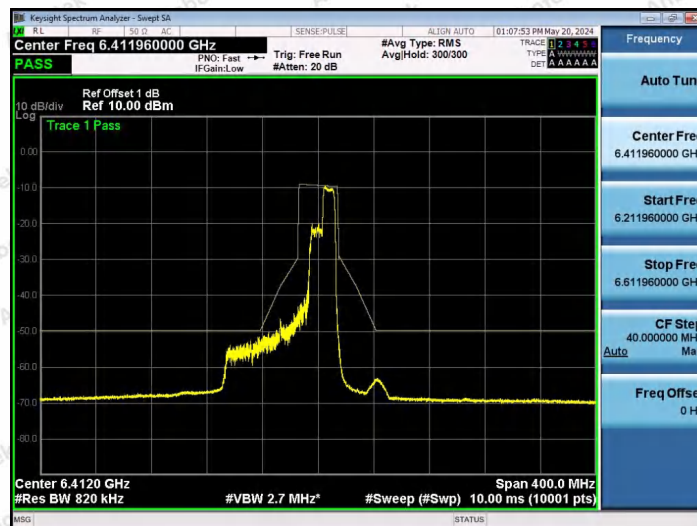

NTNV-11AX80SISO-Ant1-6385-106Tone-RU60-PASS

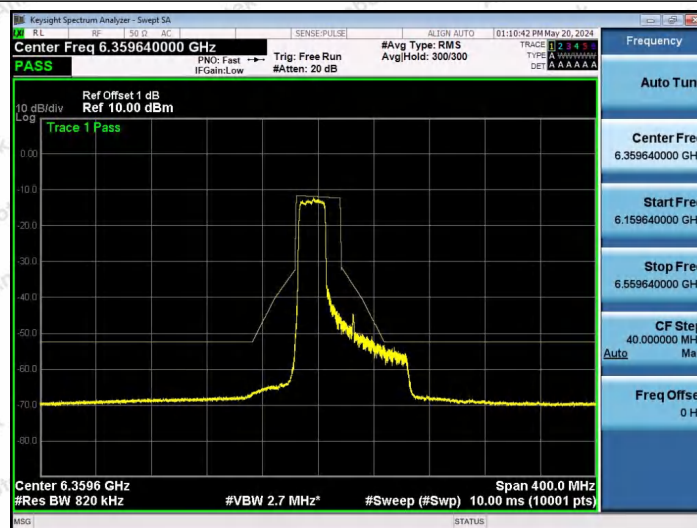

NTNV-11AX80SISO-Ant1-6385-242Tone-RU61-PASS


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn



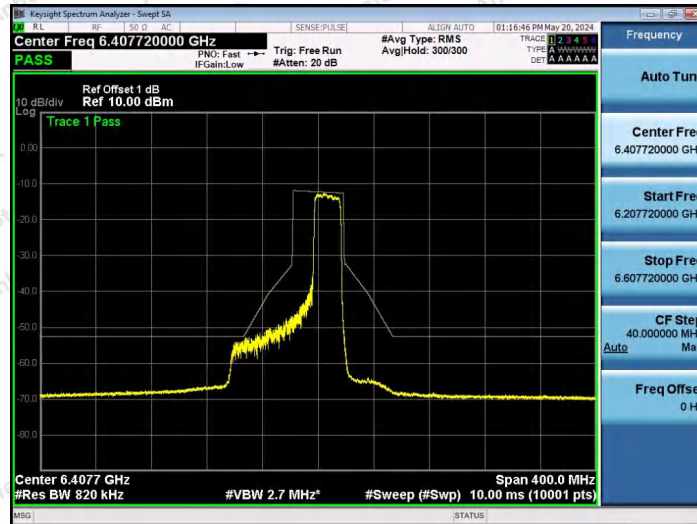

NTNV-11AX80SISO-Ant1-6385-242Tone-RU64-PASS

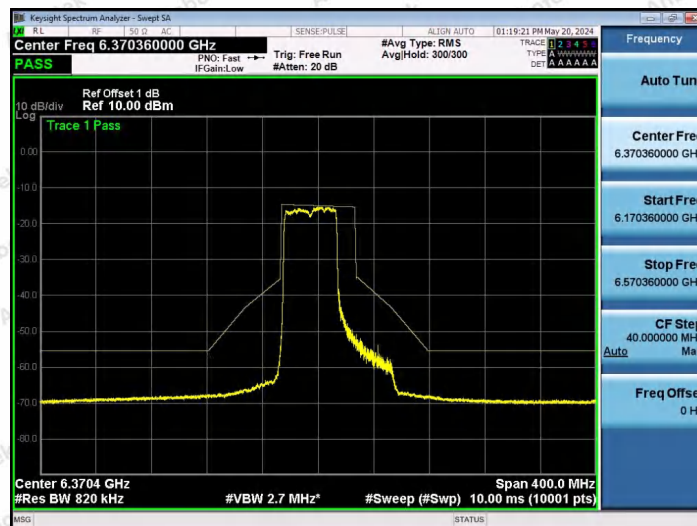

NTNV-11AX80SISO-Ant1-6385-484Tone-RU65-PASS




NTNV-11AX80SISO-Ant1-6385-484Tone-RU66-PASS

## Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com.cn




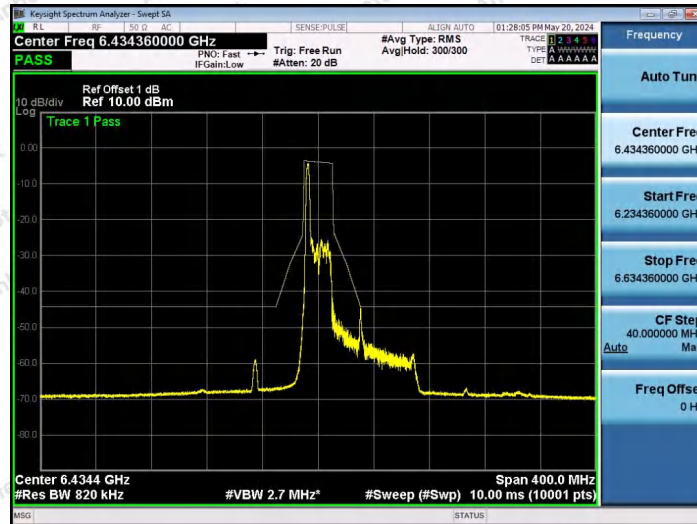

NTNV-11AX80SISO-Ant1-6465-26Tone-RU0-PASS

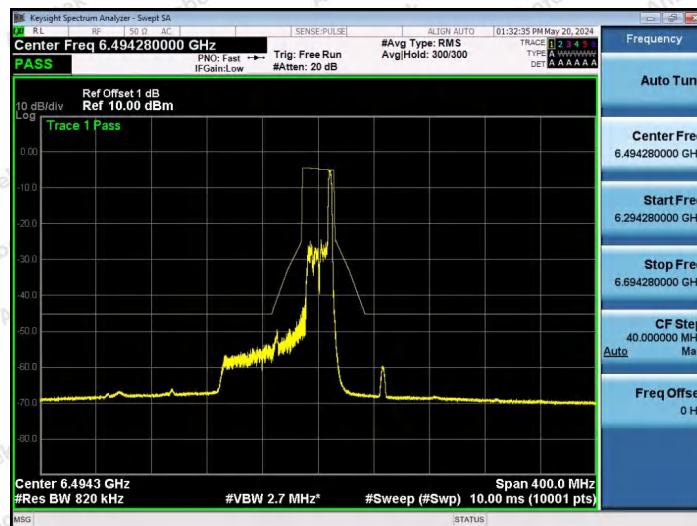

NTNV-11AX80SISO-Ant1-6465-26Tone-RU36-PASS

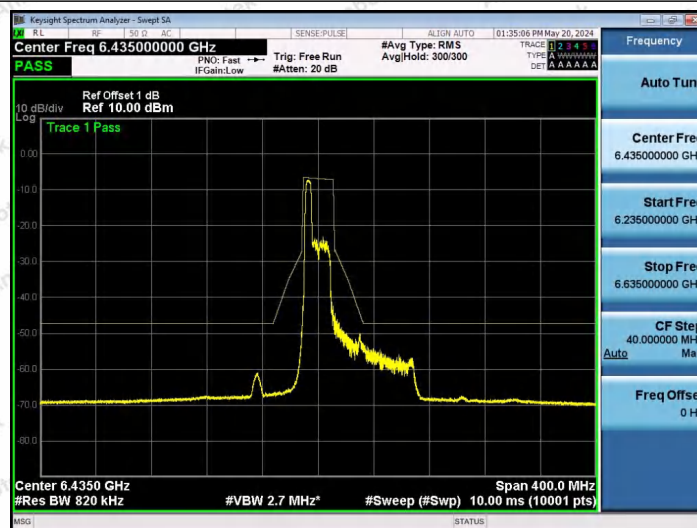


NTNV-11AX80SISO-Ant1-6465-52Tone-RU37-PASS

## Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com.cn




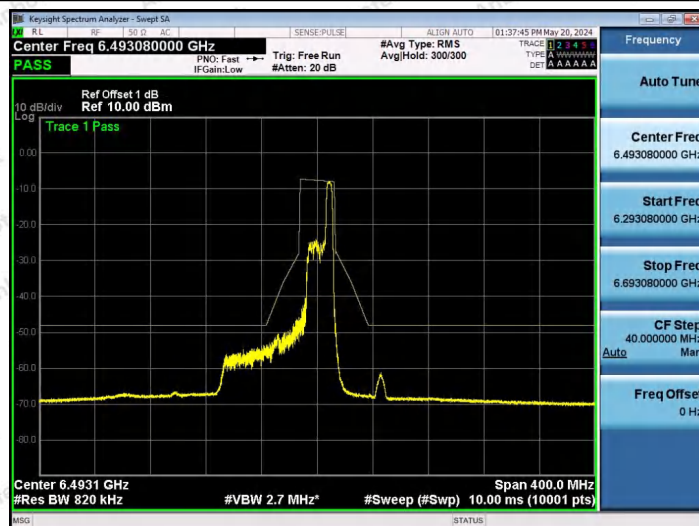

NTNV-11AX80SISO-Ant1-6465-52Tone-RU52-PASS

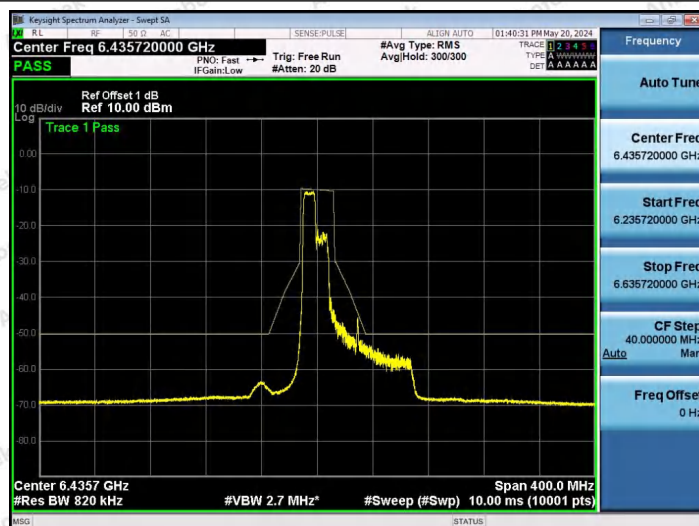

NTNV-11AX80SISO-Ant1-6465-106Tone-RU53-PASS

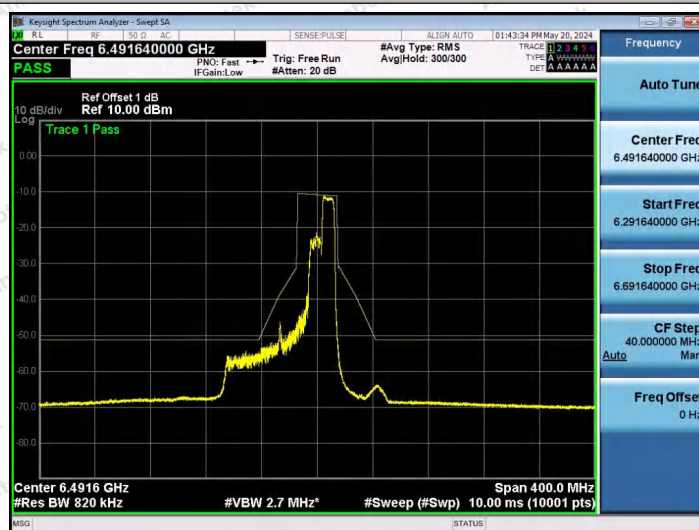

NTNV-11AX80SISO-Ant1-6465-106Tone-RU60-PASS

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




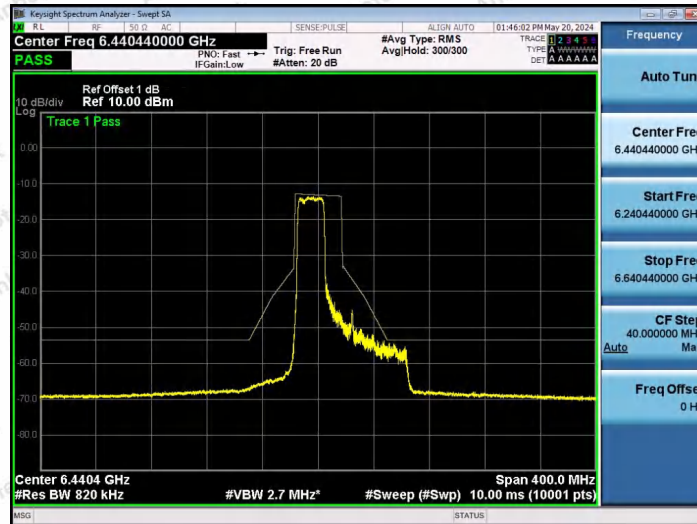

NTNV-11AX80SISO-Ant1-6465-242Tone-RU61-PASS

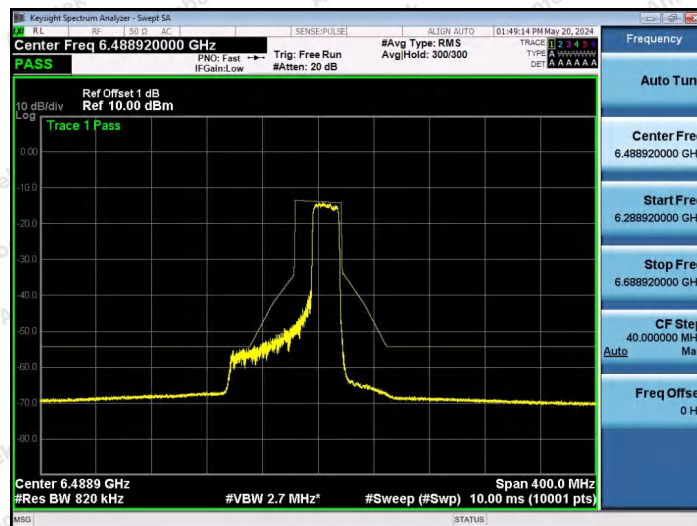

NTNV-11AX80SISO-Ant1-6465-242Tone-RU64-PASS

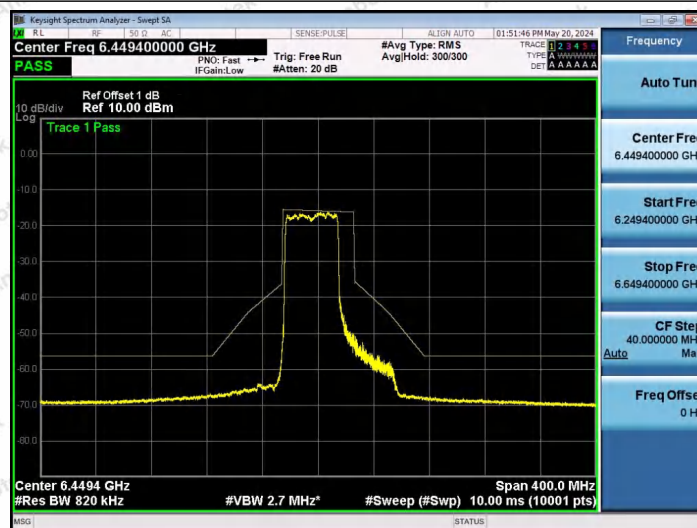

NTNV-11AX80SISO-Ant1-6465-484Tone-RU65-PASS

## Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com.cn






NTNV-11AX80SISO-Ant1-6465-484Tone-RU66-PASS

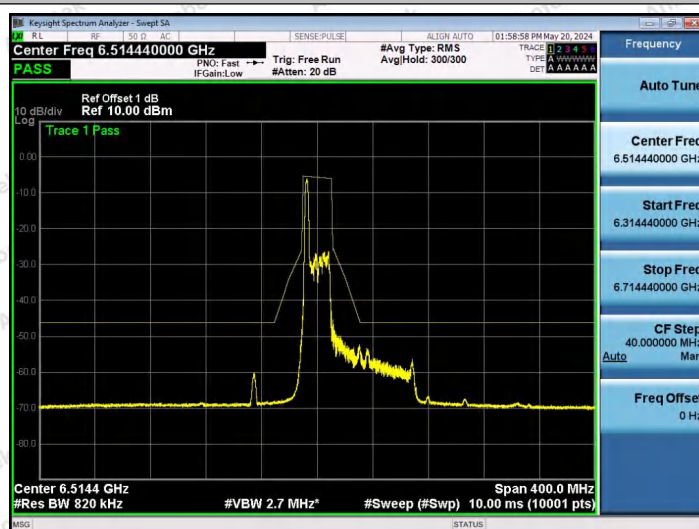

NTNV-11AX80SISO-Ant1-6545-26Tone-RU0-PASS

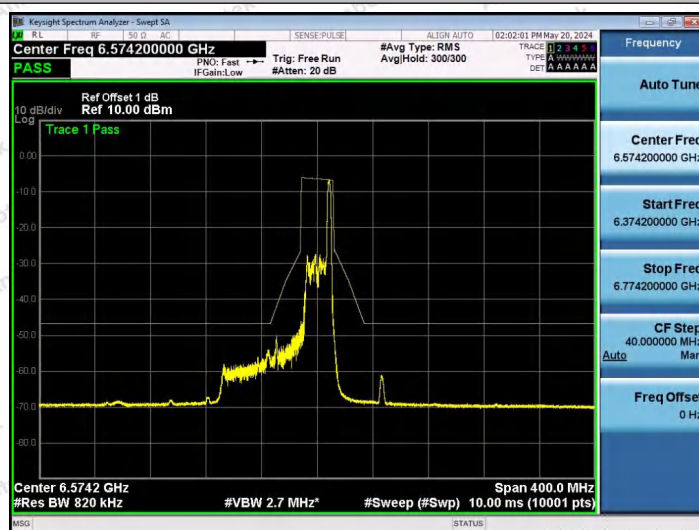

NTNV-11AX80SISO-Ant1-6545-26Tone-RU36-PASS

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




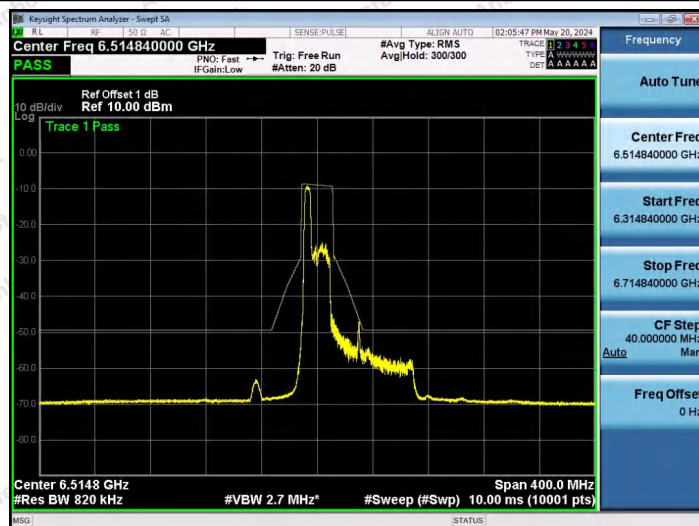

NTNV-11AX80SISO-Ant1-6545-52Tone-RU37-PASS

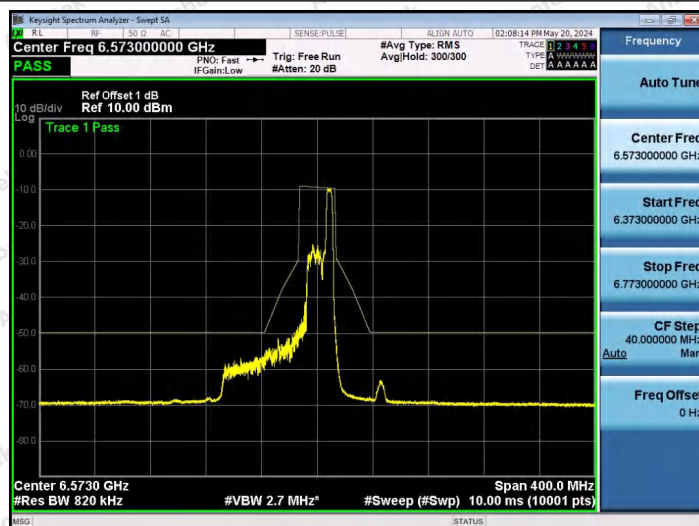

NTNV-11AX80SISO-Ant1-6545-52Tone-RU52-PASS

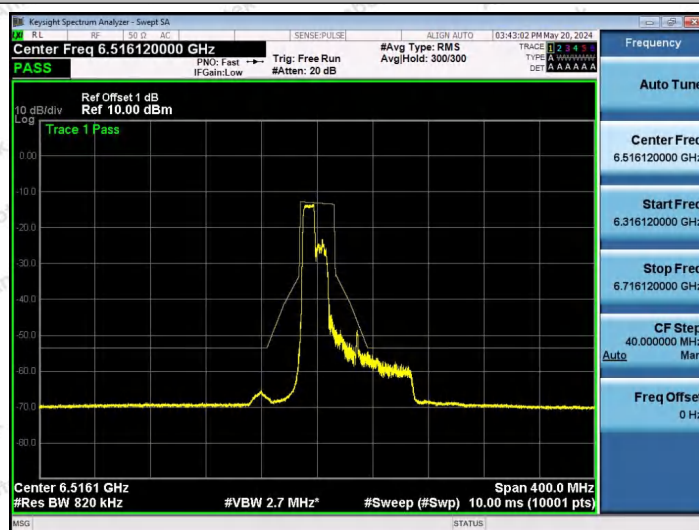

NTNV-11AX80SISO-Ant1-6545-106Tone-RU53-PASS

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




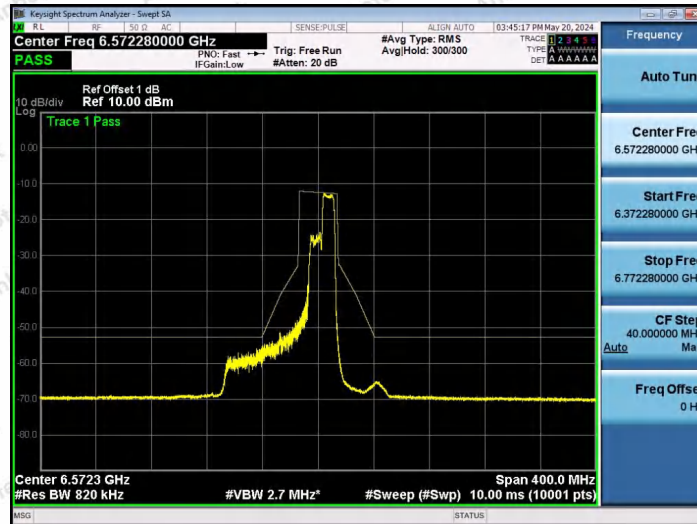

NTNV-11AX80SISO-Ant1-6545-106Tone-RU60-PASS

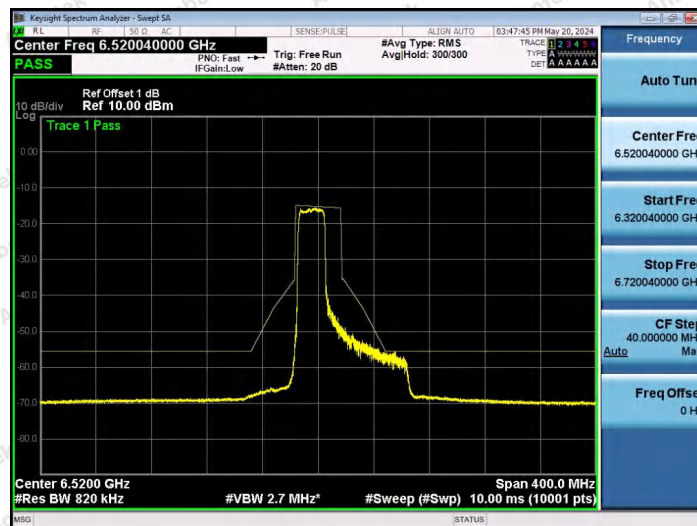

NTNV-11AX80SISO-Ant1-6545-242Tone-RU61-PASS

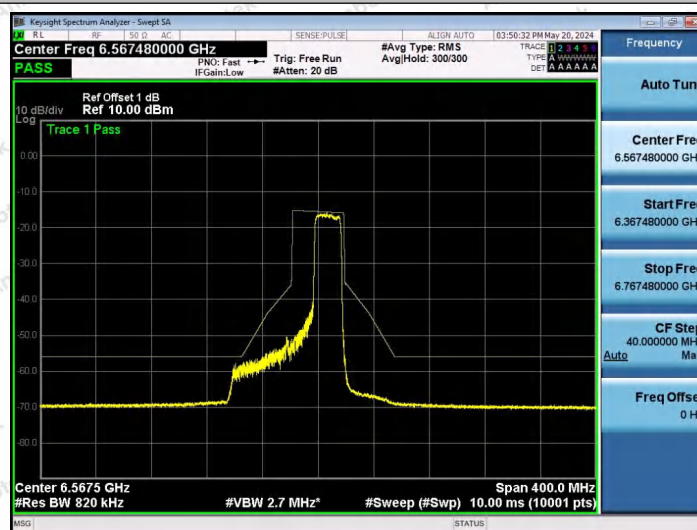


NTNV-11AX80SISO-Ant1-6545-242Tone-RU64-PASS

## Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com.cn




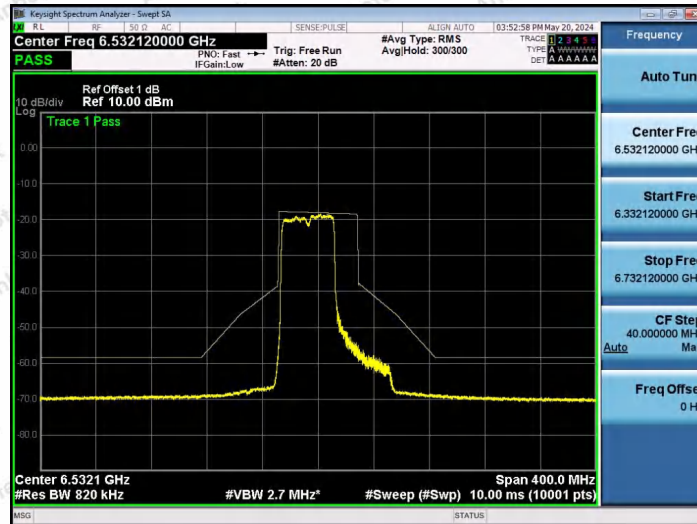

NTNV-11AX80ISO-Ant1-6545-484Tone-RU65-PASS

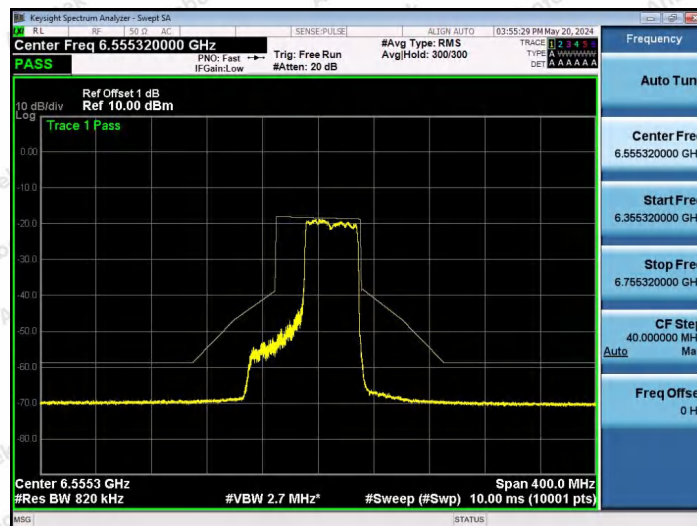

NTNV-11AX80ISO-Ant1-6545-484Tone-RU66-PASS

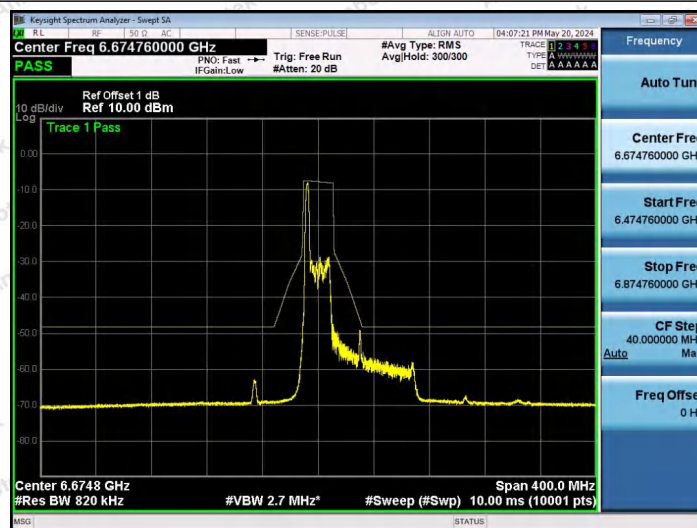


NTNV-11AX80ISO-Ant1-6705-26Tone-RU0-PASS

## Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com.cn




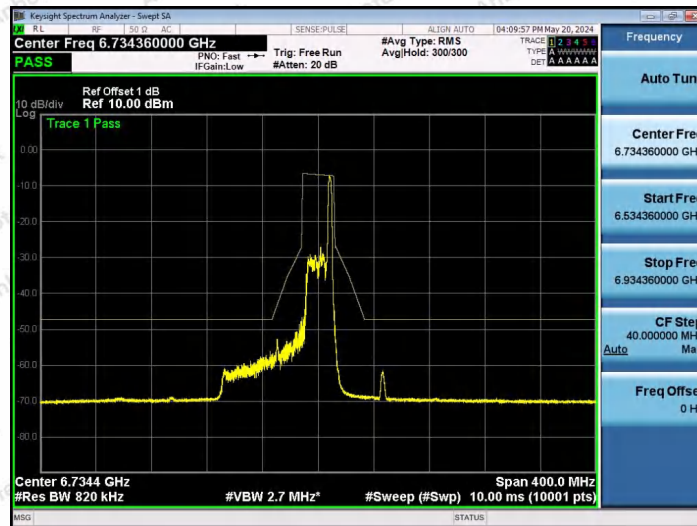

NTNV-11AX80SISO-Ant1-6705-26Tone-RU36-PASS

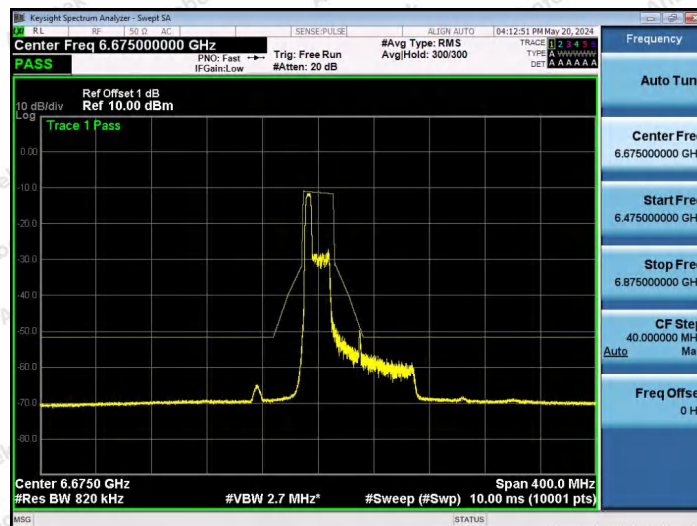

NTNV-11AX80SISO-Ant1-6705-52Tone-RU37-PASS

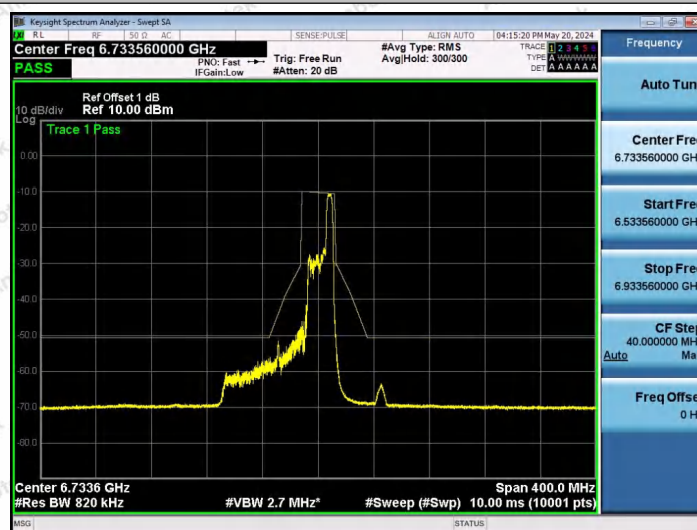

NTNV-11AX80SISO-Ant1-6705-52Tone-RU52-PASS


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn




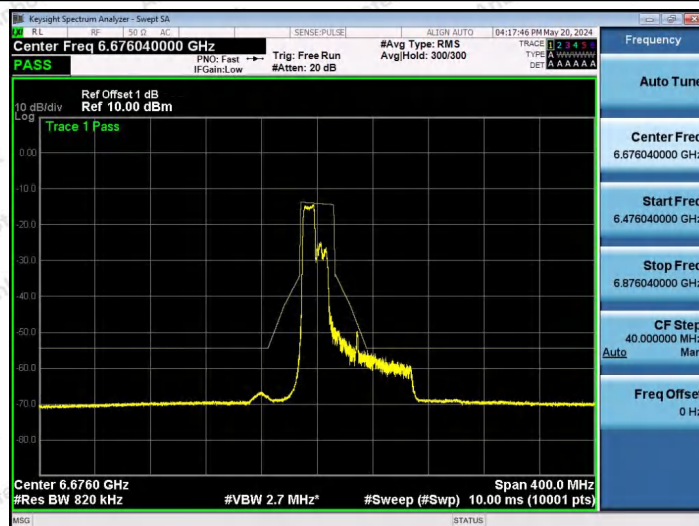

NTNV-11AX80SISO-Ant1-6705-106Tone-RU53-PASS

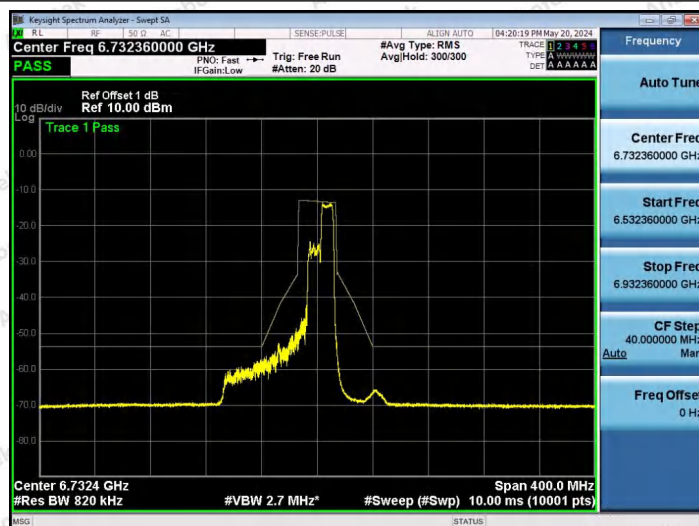

NTNV-11AX80SISO-Ant1-6705-106Tone-RU60-PASS

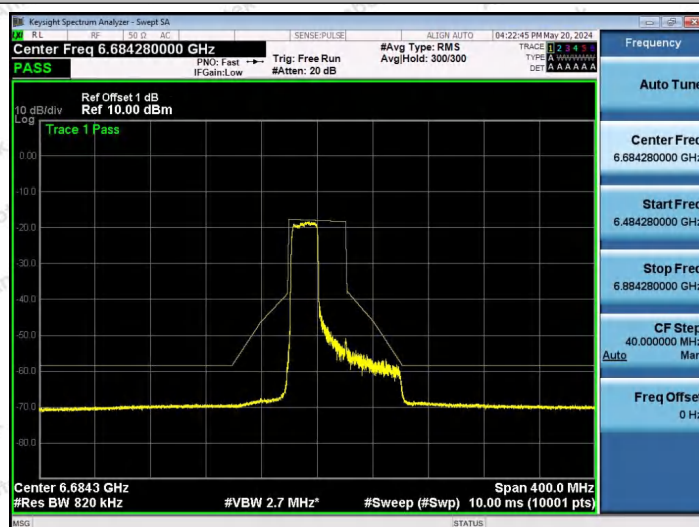

NTNV-11AX80SISO-Ant1-6705-242Tone-RU61-PASS


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn




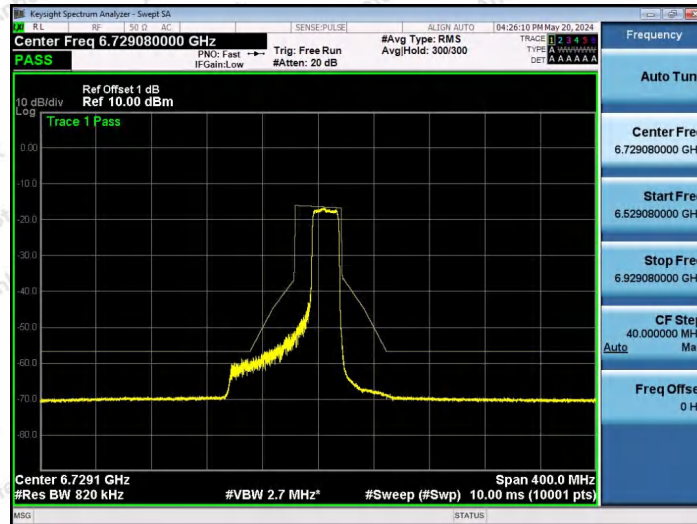

NTNV-11AX80SISO-Ant1-6705-242Tone-RU64-PASS

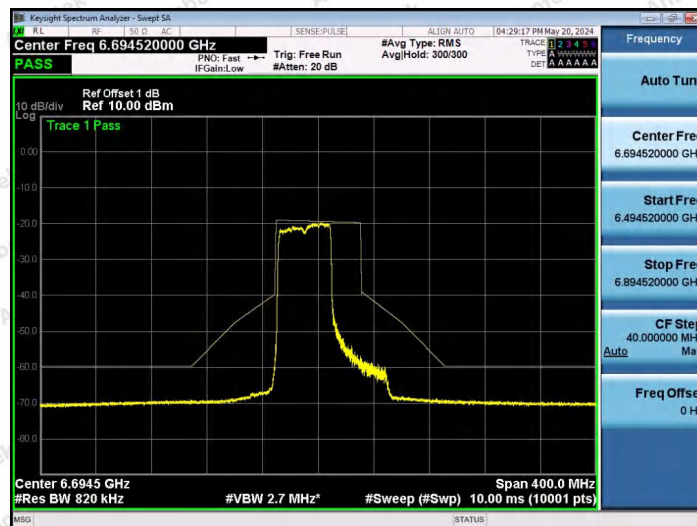

NTNV-11AX80SISO-Ant1-6705-484Tone-RU65-PASS

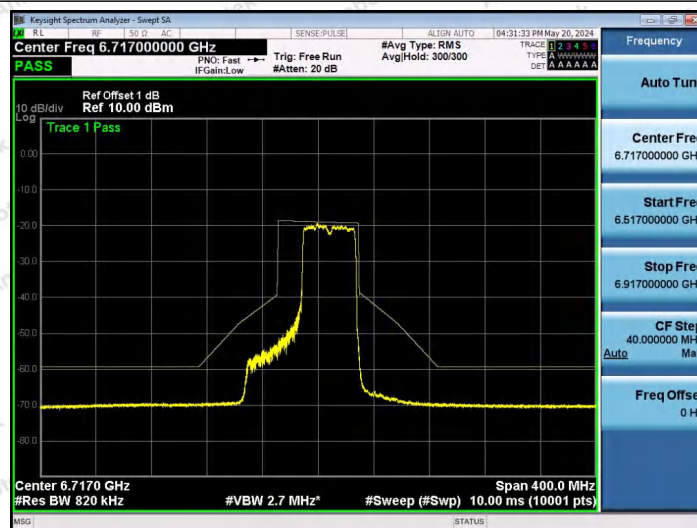

NTNV-11AX80SISO-Ant1-6705-484Tone-RU66-PASS


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn




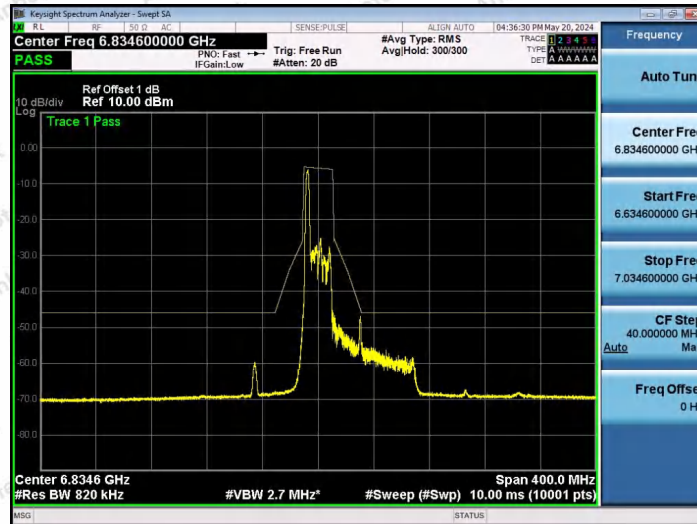

NTNV-11AX80SISO-Ant1-6865-26Tone-RU0-PASS

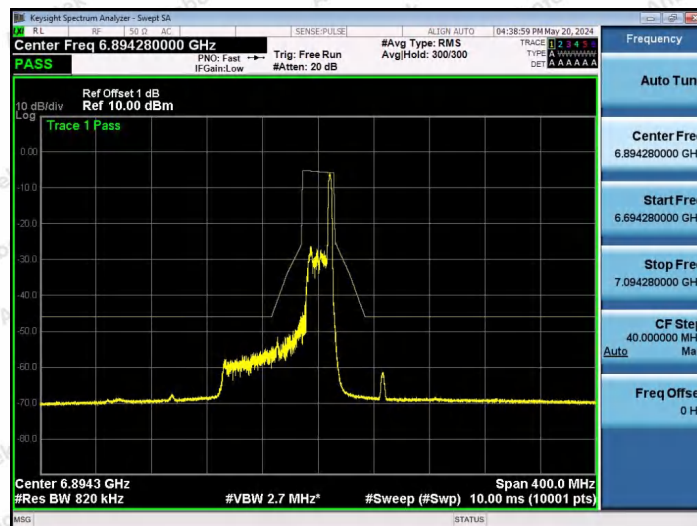

NTNV-11AX80SISO-Ant1-6865-26Tone-RU36-PASS

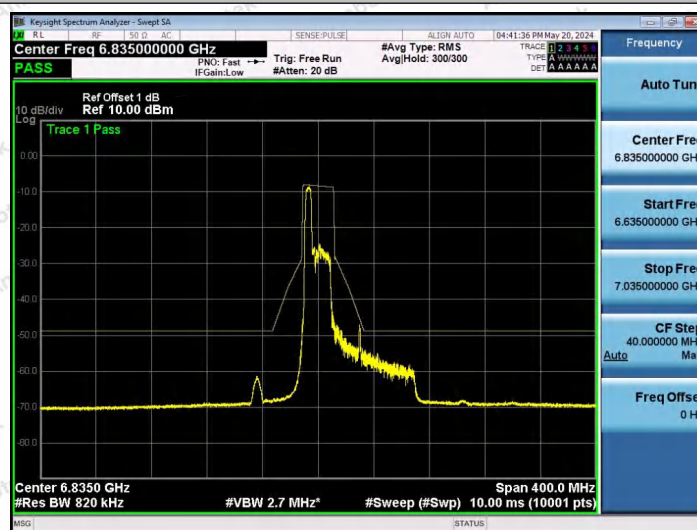


NTNV-11AX80SISO-Ant1-6865-52Tone-RU37-PASS

## Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com.cn




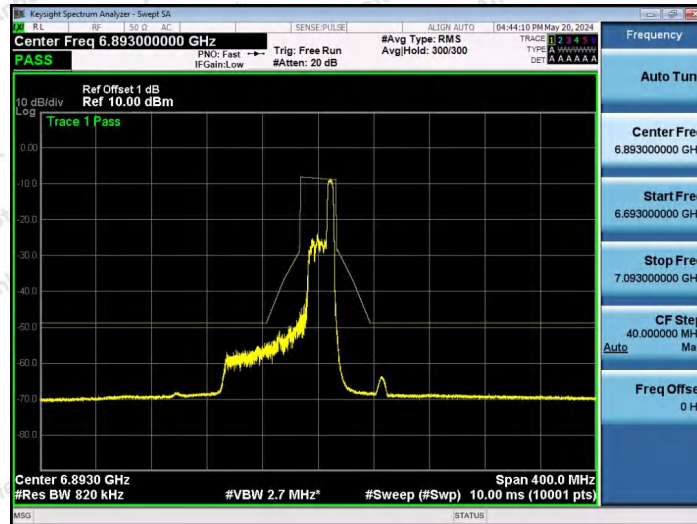

NTNV-11AX80SISO-Ant1-6865-52Tone-RU52-PASS

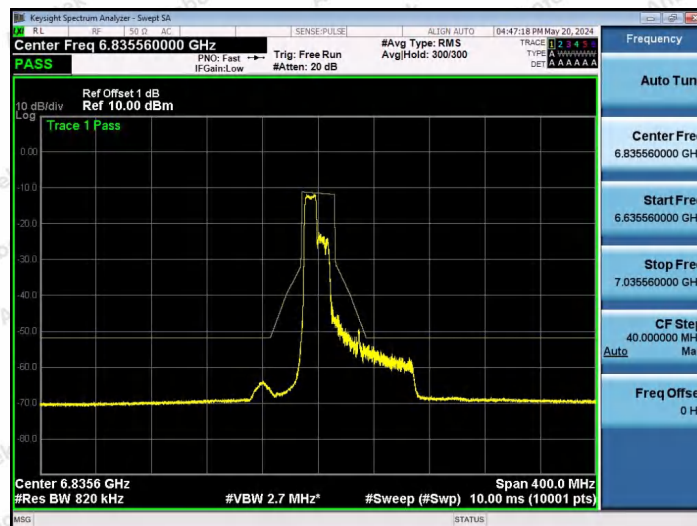

NTNV-11AX80SISO-Ant1-6865-106Tone-RU53-PASS

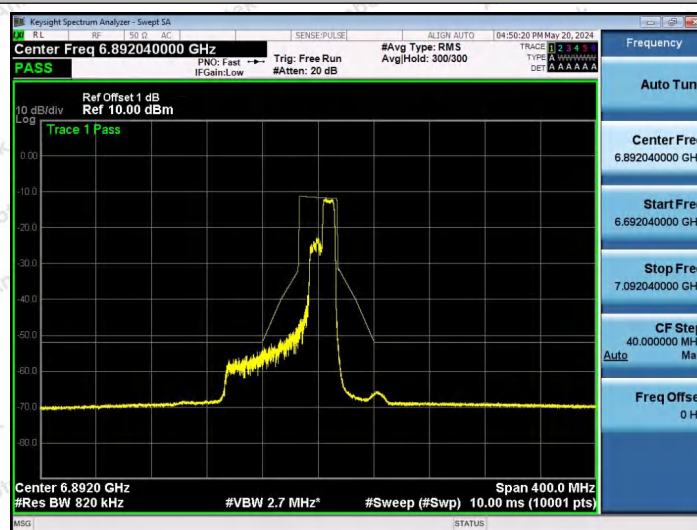

NTNV-11AX80SISO-Ant1-6865-106Tone-RU60-PASS


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn




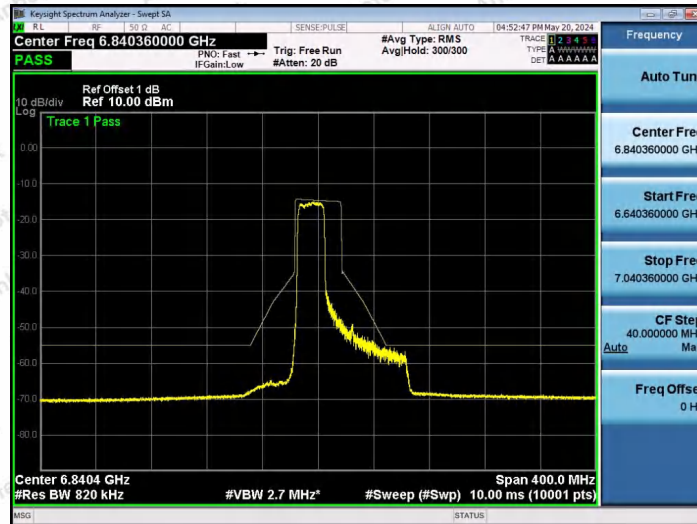

NTNV-11AX80SISO-Ant1-6865-242Tone-RU61-PASS

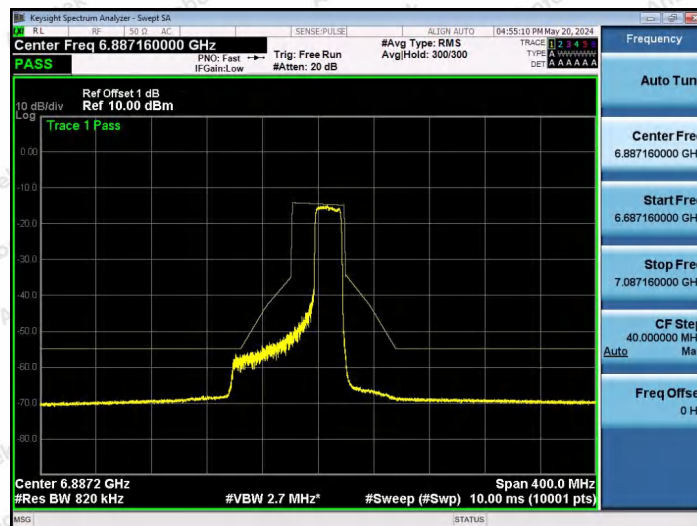

NTNV-11AX80SISO-Ant1-6865-242Tone-RU64-PASS

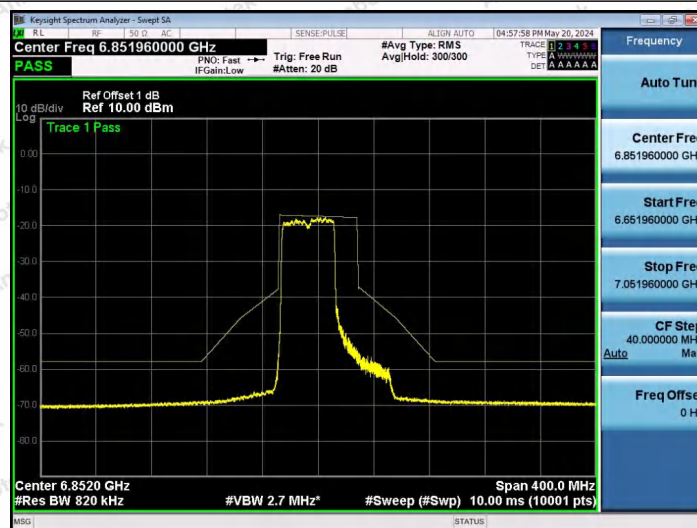


NTNV-11AX80SISO-Ant1-6865-484Tone-RU65-PASS

## Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com.cn




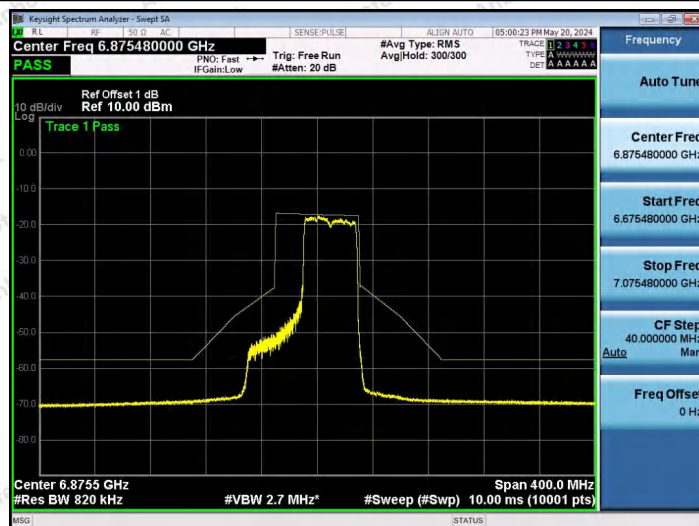

NTNV-11AX80SISO-Ant1-6865-484Tone-RU66-PASS

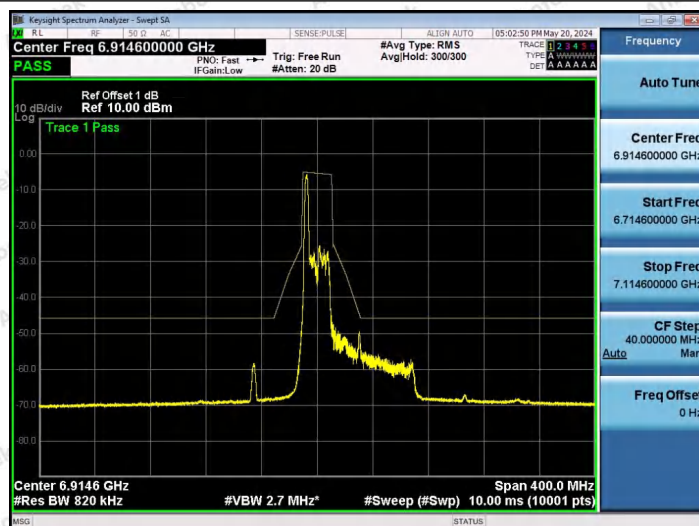

NTNV-11AX80SISO-Ant1-6945-26Tone-RU0-PASS

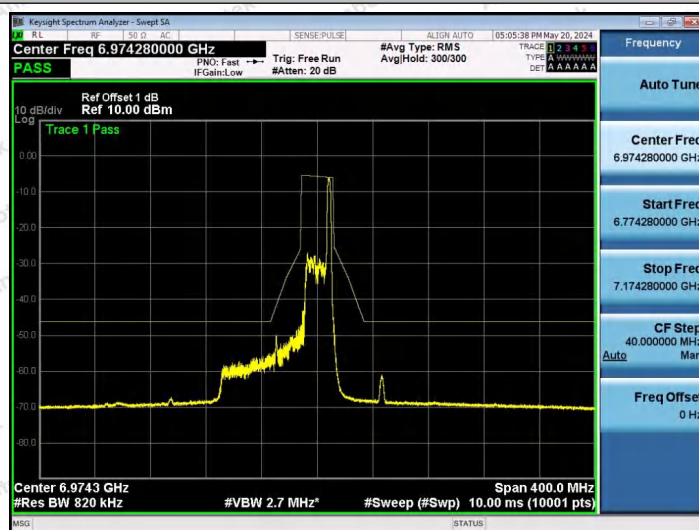

NTNV-11AX80SISO-Ant1-6945-26Tone-RU36-PASS

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




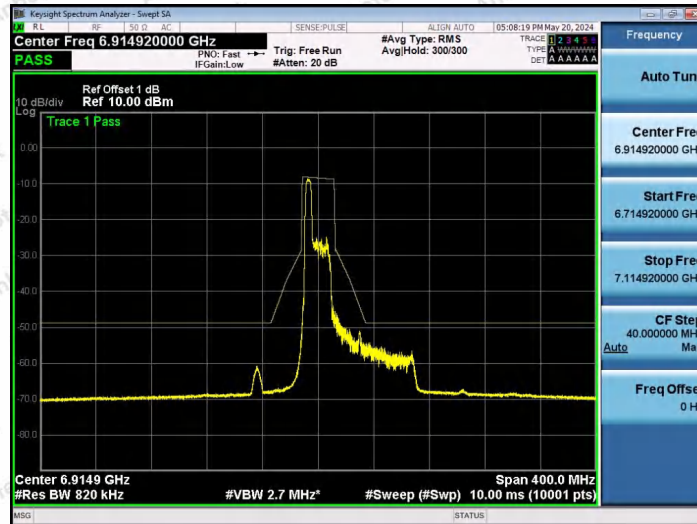

NTNV-11AX80SISO-Ant1-6945-52Tone-RU37-PASS

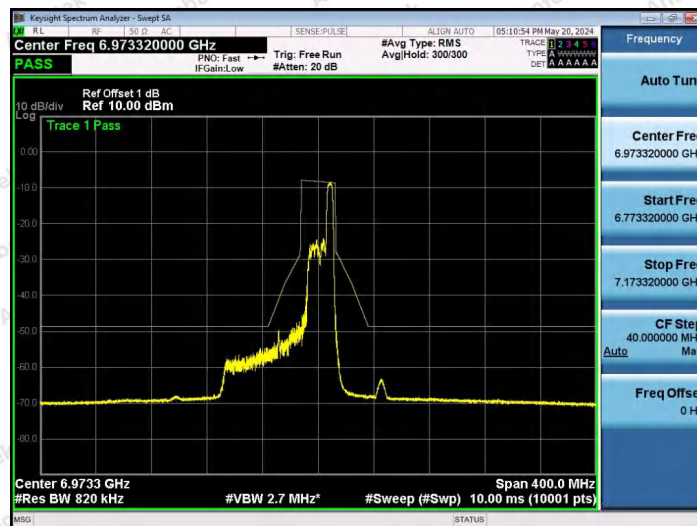

NTNV-11AX80SISO-Ant1-6945-52Tone-RU52-PASS

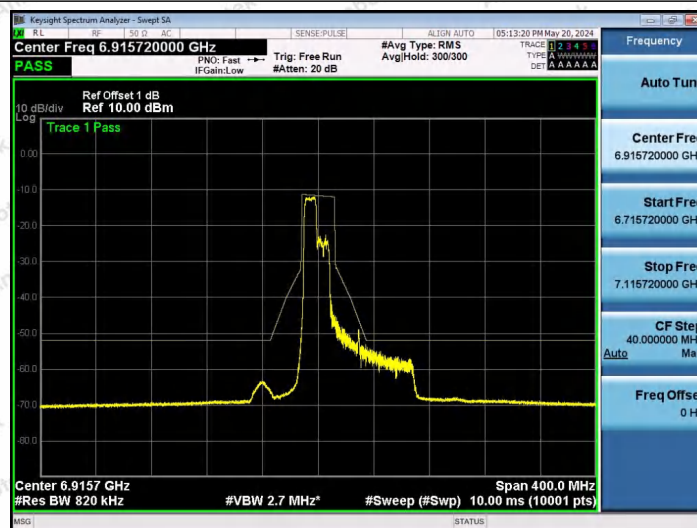

NTNV-11AX80SISO-Ant1-6945-106Tone-RU53-PASS


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline  
400-003-0500  
www.anbotek.com.cn




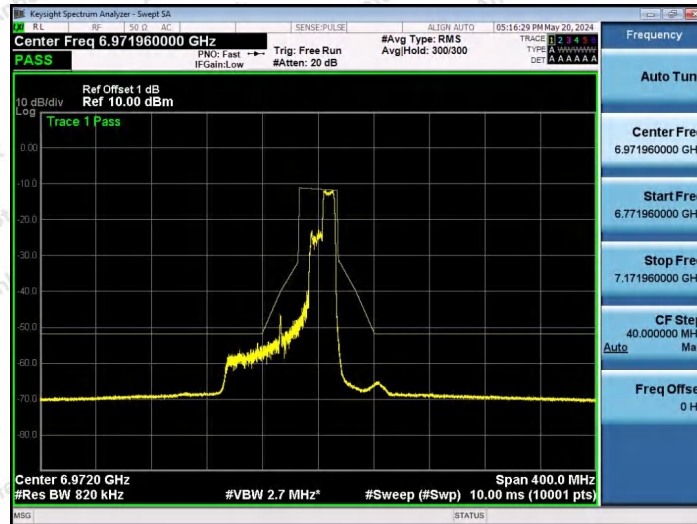

NTNV-11AX80SISO-Ant1-6945-106Tone-RU60-PASS

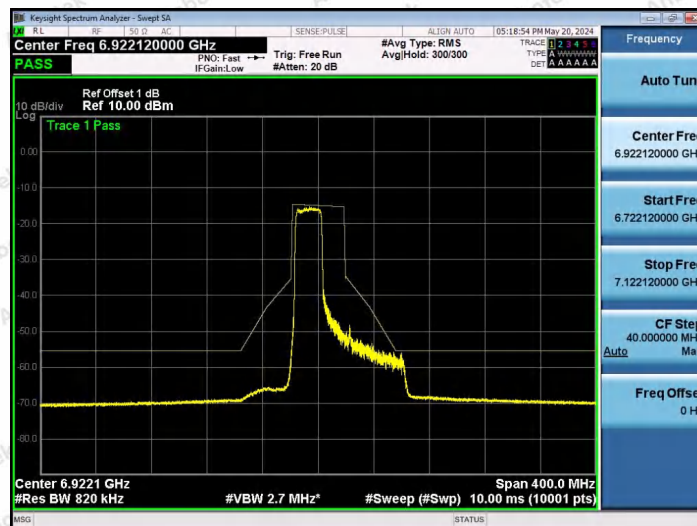

NTNV-11AX80SISO-Ant1-6945-242Tone-RU61-PASS

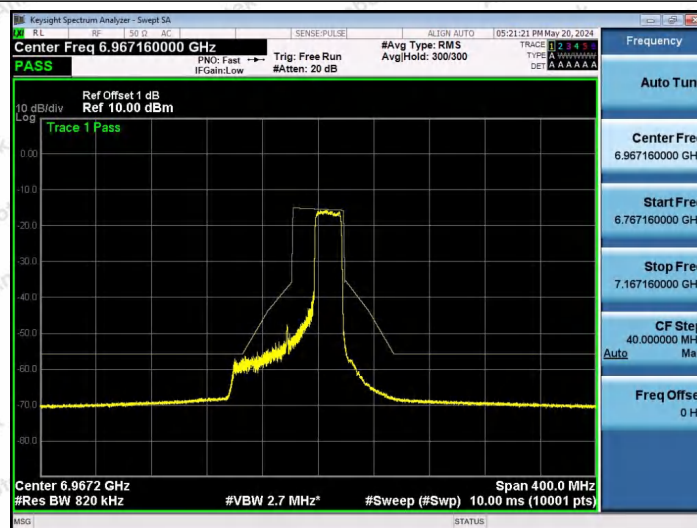


NTNV-11AX80SISO-Ant1-6945-242Tone-RU64-PASS

## Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com.cn




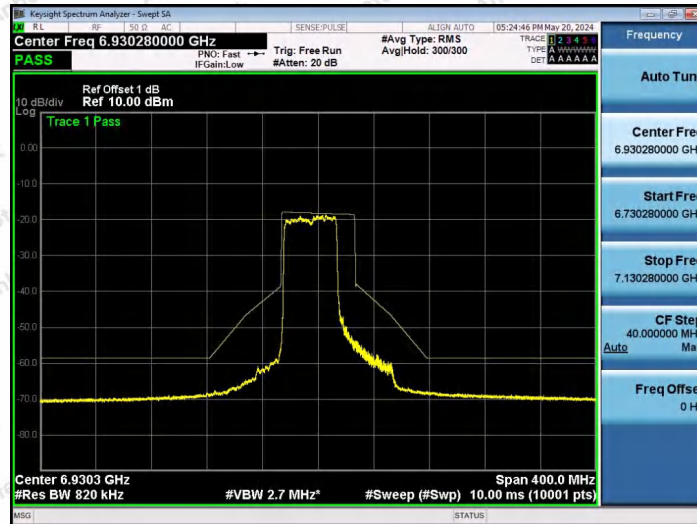

NTNV-11AX80SISO-Ant1-6945-484Tone-RU65-PASS

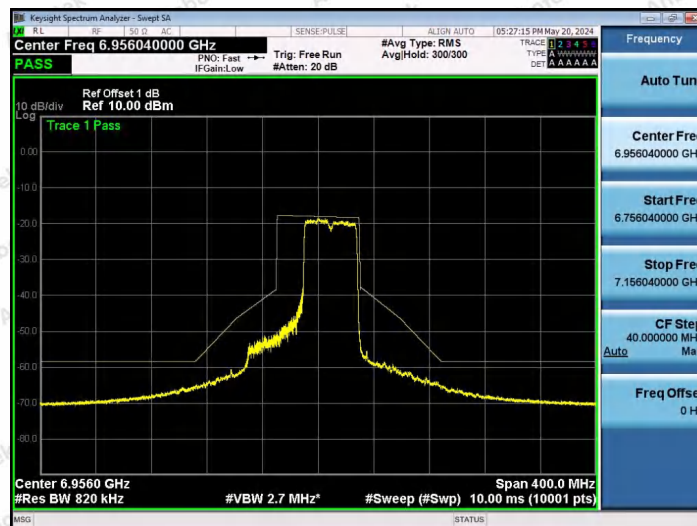

NTNV-11AX80SISO-Ant1-6945-484Tone-RU66-PASS

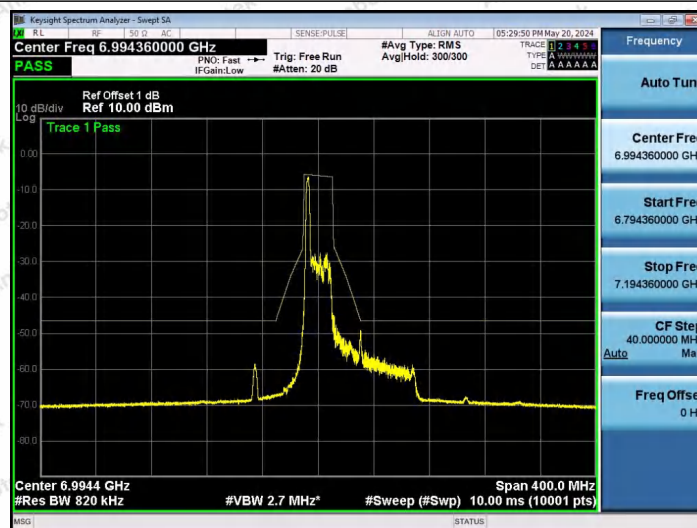


NTNV-11AX80SISO-Ant1-7025-26Tone-RU0-PASS

## Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com.cn




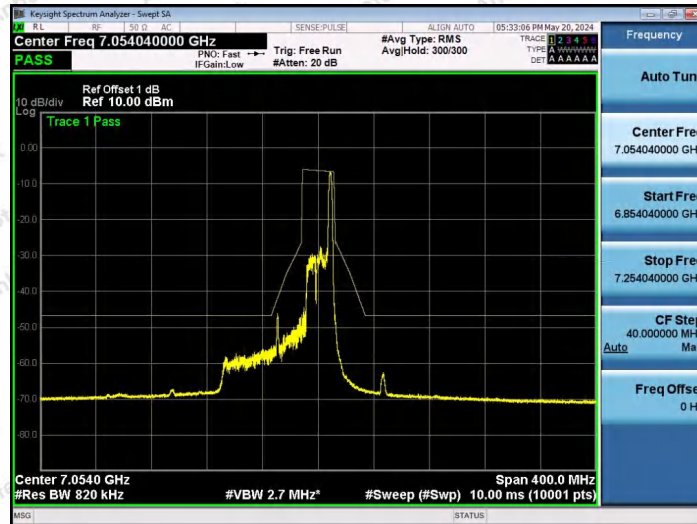

NTNV-11AX80SISO-Ant1-7025-26Tone-RU36-PASS

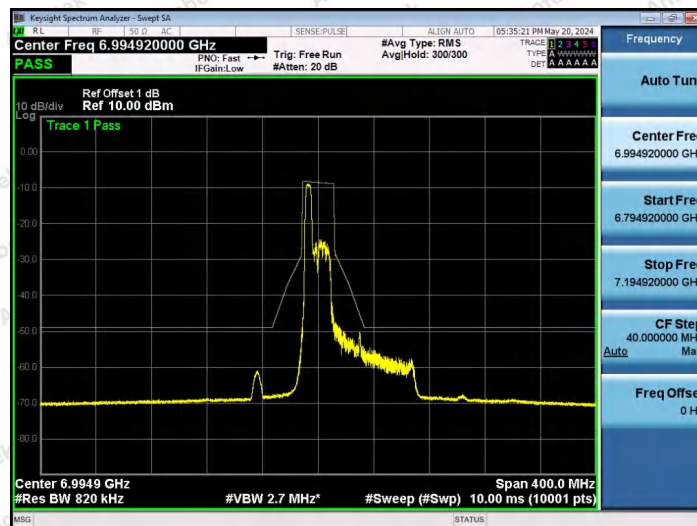

NTNV-11AX80SISO-Ant1-7025-52Tone-RU37-PASS

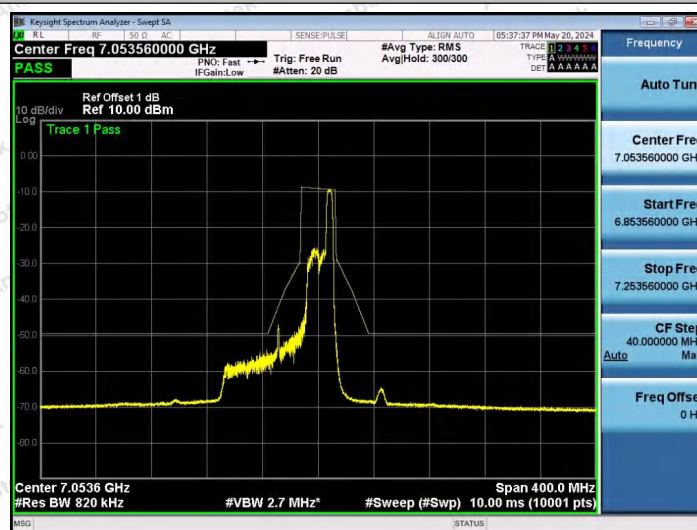


NTNV-11AX80SISO-Ant1-7025-52Tone-RU52-PASS

## Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com.cn




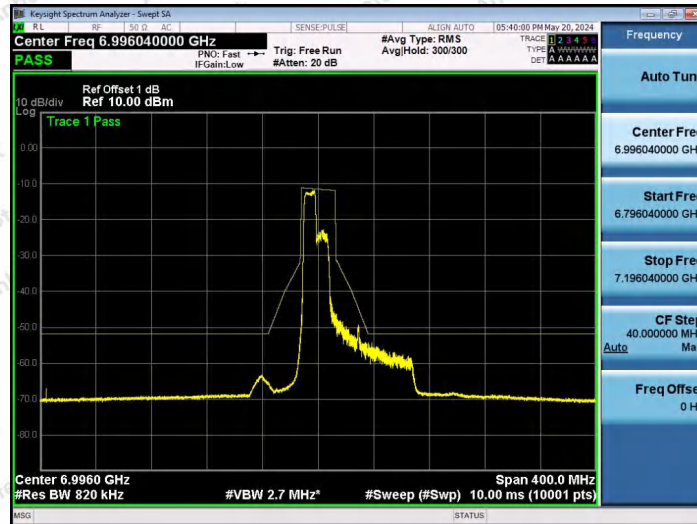

NTNV-11AX80SISO-Ant1-7025-106Tone-RU53-PASS

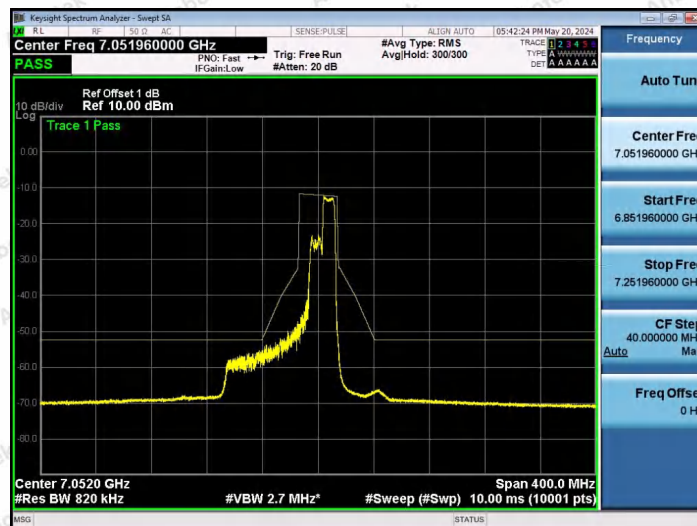

NTNV-11AX80SISO-Ant1-7025-106Tone-RU60-PASS

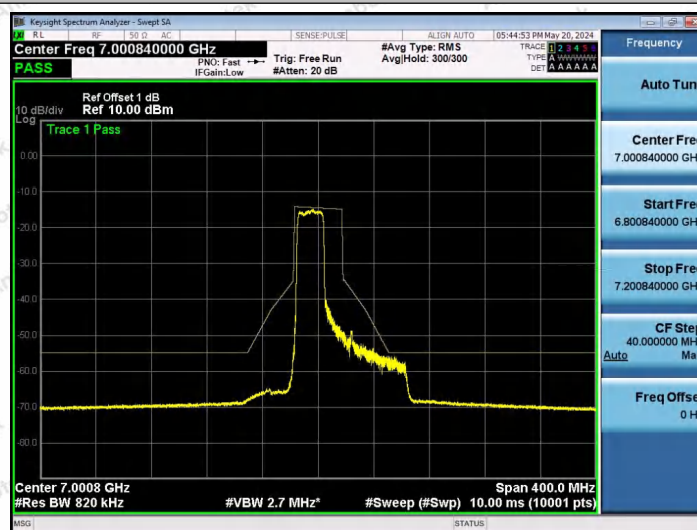


NTNV-11AX80SISO-Ant1-7025-242Tone-RU61-PASS

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com.cn




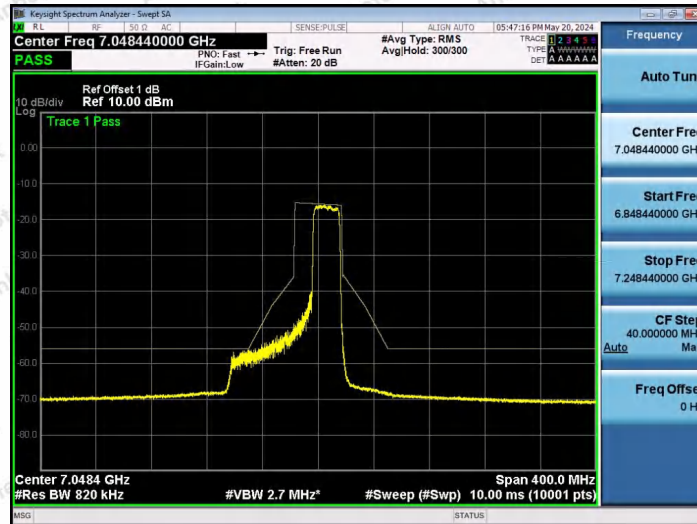

NTNV-11AX80SISO-Ant1-7025-242Tone-RU64-PASS



NTNV-11AX80SISO-Ant1-7025-484Tone-RU65-PASS

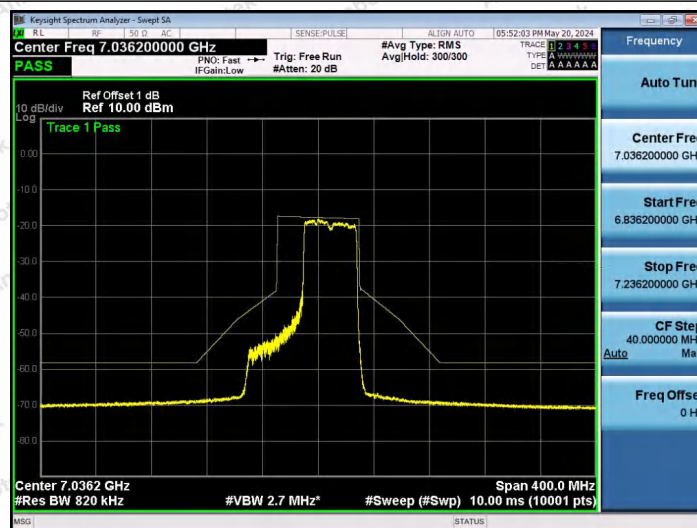

NTNV-11AX80SISO-Ant1-7025-484Tone-RU66-PASS

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com.cn



## Appendix F: Conducted Spurious Emission

### Test Result

| Test Mode  | Antenna | Frequency [MHz] | Ru Size | Ru Index | FreqRange [Mhz] | Max. Fre [MHz] | Max. Level [dBm] | Limit [dBm] | Verdict |
|------------|---------|-----------------|---------|----------|-----------------|----------------|------------------|-------------|---------|
| 11AX20SISO | Ant1    | 5955            | 26Tone  | RU0      | 30~3000         | 2419.76        | -47.25           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 5955            | 26Tone  | RU4      | 30~3000         | 2419.86        | -48              | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 5955            | 26Tone  | RU8      | 30~3000         | 2415.5         | -48.35           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 5955            | 52Tone  | RU37     | 30~3000         | 2419.46        | -44.76           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 5955            | 52Tone  | RU39     | 30~3000         | 2418.97        | -53.13           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 5955            | 52Tone  | RU40     | 30~3000         | 2418.87        | -48.99           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 5955            | 106Tone | RU53     | 30~3000         | 2416.4         | -50.97           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 5955            | 106Tone | RU54     | 30~3000         | 2419.66        | -46.65           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 5955            | 26Tone  | RU0      | 3000~10000      | 5194.27        | -35.23           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 5955            | 26Tone  | RU4      | 3000~10000      | 5747.73        | -52.95           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 5955            | 26Tone  | RU8      | 3000~10000      | 5182.13        | -45.86           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 5955            | 52Tone  | RU37     | 3000~10000      | 5203.13        | -38.32           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 5955            | 52Tone  | RU39     | 3000~10000      | 5502.5         | -53.84           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 5955            | 52Tone  | RU40     | 3000~10000      | 6328.97        | -49.86           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 5955            | 106Tone | RU53     | 3000~10000      | 5242.33        | -47.55           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 5955            | 106Tone | RU54     | 3000~10000      | 5193.1         | -38.02           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 5955            | 26Tone  | RU0      | 10000~40000     | 26484.9        | -43.63           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 5955            | 26Tone  | RU4      | 10000~40000     | 24779.23       | -44.08           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 5955            | 26Tone  | RU8      | 10000~40000     | 25281.3        | -44.07           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 5955            | 52Tone  | RU37     | 10000~40000     | 24370.67       | -44.14           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 5955            | 52Tone  | RU39     | 10000~40000     | 25732.37       | -43.76           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 5955            | 52Tone  | RU40     | 10000~40000     | 24965.1        | -44.21           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 5955            | 106Tone | RU53     | 10000~40000     | 24353.1        | -44.49           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 5955            | 106Tone | RU54     | 10000~40000     | 24362.73       | -44.03           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 6175            | 26Tone  | RU0      | 30~3000         | 2420.95        | -50.51           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 6175            | 26Tone  | RU4      | 30~3000         | 826.46         | -37.33           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 6175            | 26Tone  | RU8      | 30~3000         | 2419.37        | -51.86           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 6175            | 52Tone  | RU37     | 30~3000         | 2419.76        | -49.32           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 6175            | 52Tone  | RU39     | 30~3000         | 2419.37        | -48.2            | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 6175            | 52Tone  | RU40     | 30~3000         | 2416.69        | -46.55           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 6175            | 106Tone | RU53     | 30~3000         | 2419.17        | -49.74           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 6175            | 106Tone | RU54     | 30~3000         | 2416.69        | -47.69           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 6175            | 26Tone  | RU0      | 3000~10000      | 5201.27        | -52.06           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 6175            | 26Tone  | RU4      | 3000~10000      | 5202.9         | -32.66           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 6175            | 26Tone  | RU8      | 3000~10000      | 6305.17        | -55.59           | ≤-27        | PASS    |
| 11AX20SISO | Ant1    | 6175            | 52Tone  | RU37     | 3000~10000      | 5192.4         | -36.17           | ≤-27        | PASS    |

### Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



|            |      |      |         |      |             |          |        |      |      |
|------------|------|------|---------|------|-------------|----------|--------|------|------|
| 11AX20SISO | Ant1 | 6175 | 52Tone  | RU39 | 3000~10000  | 5193.8   | -34.77 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6175 | 52Tone  | RU40 | 3000~10000  | 5748.43  | -49.77 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6175 | 106Tone | RU53 | 3000~10000  | 5203.6   | -48.99 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6175 | 106Tone | RU54 | 3000~10000  | 5219.93  | -41.24 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6175 | 26Tone  | RU0  | 10000~40000 | 24663.63 | -43.56 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6175 | 26Tone  | RU4  | 10000~40000 | 25306.8  | -44.07 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6175 | 26Tone  | RU8  | 10000~40000 | 24753.73 | -43.91 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6175 | 52Tone  | RU37 | 10000~40000 | 26091.63 | -44.11 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6175 | 52Tone  | RU39 | 10000~40000 | 24752.6  | -44.14 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6175 | 52Tone  | RU40 | 10000~40000 | 25297.17 | -44.03 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6175 | 106Tone | RU53 | 10000~40000 | 24775.83 | -44.21 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6175 | 106Tone | RU54 | 10000~40000 | 24389.93 | -44.1  | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6415 | 26Tone  | RU0  | 30~3000     | 2417.19  | -46.5  | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6415 | 26Tone  | RU4  | 30~3000     | 2416.49  | -48.85 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6415 | 26Tone  | RU8  | 30~3000     | 2416     | -51.14 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6415 | 52Tone  | RU37 | 30~3000     | 2416     | -47.55 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6415 | 52Tone  | RU39 | 30~3000     | 2416.1   | -47.98 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6415 | 52Tone  | RU40 | 30~3000     | 2416     | -47.87 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6415 | 106Tone | RU53 | 30~3000     | 2419.66  | -49.65 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6415 | 106Tone | RU54 | 30~3000     | 1737.16  | -34.77 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6415 | 26Tone  | RU0  | 3000~10000  | 6328.97  | -52.6  | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6415 | 26Tone  | RU4  | 3000~10000  | 5193.33  | -34.97 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6415 | 26Tone  | RU8  | 3000~10000  | 5193.33  | -33.88 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6415 | 52Tone  | RU37 | 3000~10000  | 5184     | -39.96 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6415 | 52Tone  | RU39 | 3000~10000  | 5192.87  | -34.24 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6415 | 52Tone  | RU40 | 3000~10000  | 5203.6   | -29.25 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6415 | 106Tone | RU53 | 3000~10000  | 5193.57  | -34.78 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6415 | 106Tone | RU54 | 3000~10000  | 5192.87  | -33.62 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6415 | 26Tone  | RU0  | 10000~40000 | 25879.7  | -44.14 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6415 | 26Tone  | RU4  | 10000~40000 | 25813.4  | -43.65 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6415 | 26Tone  | RU8  | 10000~40000 | 24702.17 | -43.98 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6415 | 52Tone  | RU37 | 10000~40000 | 24855.17 | -43.77 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6415 | 52Tone  | RU39 | 10000~40000 | 25030.83 | -43.78 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6415 | 52Tone  | RU40 | 10000~40000 | 24358.77 | -44.33 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6415 | 106Tone | RU53 | 10000~40000 | 25769.2  | -44.62 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6415 | 106Tone | RU54 | 10000~40000 | 25605.43 | -43.92 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6435 | 26Tone  | RU0  | 30~3000     | 2416.3   | -53.7  | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6435 | 26Tone  | RU4  | 30~3000     | 2419.37  | -50.65 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6435 | 26Tone  | RU8  | 30~3000     | 2416.49  | -51.92 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6435 | 52Tone  | RU37 | 30~3000     | 2416.3   | -48.4  | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6435 | 52Tone  | RU39 | 30~3000     | 2415.8   | -48.55 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6435 | 52Tone  | RU40 | 30~3000     | 2420.65  | -55.23 | ≤-27 | PASS |

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



|            |      |      |         |      |             |          |        |      |      |
|------------|------|------|---------|------|-------------|----------|--------|------|------|
| 11AX20SISO | Ant1 | 6435 | 106Tone | RU53 | 30~3000     | 2416.49  | -48.58 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6435 | 106Tone | RU54 | 30~3000     | 2415.5   | -46.89 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6435 | 26Tone  | RU0  | 3000~10000  | 5193.1   | -34.28 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6435 | 26Tone  | RU4  | 3000~10000  | 5492.93  | -54.78 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6435 | 26Tone  | RU8  | 3000~10000  | 5185.63  | -44.34 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6435 | 52Tone  | RU37 | 3000~10000  | 5195.43  | -48.09 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6435 | 52Tone  | RU39 | 3000~10000  | 5193.33  | -35.1  | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6435 | 52Tone  | RU40 | 3000~10000  | 5180.5   | -45.98 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6435 | 106Tone | RU53 | 3000~10000  | 5885.63  | -55.5  | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6435 | 106Tone | RU54 | 3000~10000  | 5193.57  | -36    | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6435 | 26Tone  | RU0  | 10000~40000 | 24698.77 | -44.42 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6435 | 26Tone  | RU4  | 10000~40000 | 24374.07 | -43.77 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6435 | 26Tone  | RU8  | 10000~40000 | 25335.13 | -44.33 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6435 | 52Tone  | RU37 | 10000~40000 | 24404.67 | -44.07 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6435 | 52Tone  | RU39 | 10000~40000 | 24710.67 | -44.06 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6435 | 52Tone  | RU40 | 10000~40000 | 24758.27 | -44.42 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6435 | 106Tone | RU53 | 10000~40000 | 24771.3  | -44.46 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6435 | 106Tone | RU54 | 10000~40000 | 24762.23 | -43.1  | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6475 | 26Tone  | RU0  | 30~3000     | 2416.2   | -50.58 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6475 | 26Tone  | RU4  | 30~3000     | 2419.56  | -46.14 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6475 | 26Tone  | RU8  | 30~3000     | 2417.88  | -51.94 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6475 | 52Tone  | RU37 | 30~3000     | 2415.7   | -50.71 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6475 | 52Tone  | RU39 | 30~3000     | 2416.99  | -47.19 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6475 | 52Tone  | RU40 | 30~3000     | 2416.49  | -43.74 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6475 | 106Tone | RU53 | 30~3000     | 2416.4   | -46.82 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6475 | 106Tone | RU54 | 30~3000     | 2416     | -51.28 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6475 | 26Tone  | RU0  | 3000~10000  | 6568.13  | -53.04 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6475 | 26Tone  | RU4  | 3000~10000  | 5744.93  | -48.39 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6475 | 26Tone  | RU8  | 3000~10000  | 5201.73  | -55.68 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6475 | 52Tone  | RU37 | 3000~10000  | 5200.33  | -53.28 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6475 | 52Tone  | RU39 | 3000~10000  | 5743.07  | -47.8  | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6475 | 52Tone  | RU40 | 3000~10000  | 5245.37  | -50.13 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6475 | 106Tone | RU53 | 3000~10000  | 5835     | -55.38 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6475 | 106Tone | RU54 | 3000~10000  | 5743.3   | -50.09 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6475 | 26Tone  | RU0  | 10000~40000 | 24722    | -43.8  | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6475 | 26Tone  | RU4  | 10000~40000 | 24396.73 | -44.24 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6475 | 26Tone  | RU8  | 10000~40000 | 24707.83 | -44.2  | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6475 | 52Tone  | RU37 | 10000~40000 | 25872.9  | -43.52 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6475 | 52Tone  | RU39 | 10000~40000 | 24717.47 | -44.3  | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6475 | 52Tone  | RU40 | 10000~40000 | 26002.1  | -43.78 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6475 | 106Tone | RU53 | 10000~40000 | 24740.13 | -44.26 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6475 | 106Tone | RU54 | 10000~40000 | 26039.5  | -43.71 | ≤-27 | PASS |

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



|            |      |      |         |      |             |          |        |      |      |
|------------|------|------|---------|------|-------------|----------|--------|------|------|
| 11AX20SISO | Ant1 | 6515 | 26Tone  | RU0  | 30~3000     | 2419.07  | -46.81 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6515 | 26Tone  | RU4  | 30~3000     | 2416.79  | -47.3  | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6515 | 26Tone  | RU8  | 30~3000     | 2417.58  | -48.34 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6515 | 52Tone  | RU37 | 30~3000     | 2416.4   | -46.26 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6515 | 52Tone  | RU39 | 30~3000     | 2415.11  | -49.46 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6515 | 52Tone  | RU40 | 30~3000     | 2416.49  | -44.55 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6515 | 106Tone | RU53 | 30~3000     | 2416.4   | -49.65 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6515 | 106Tone | RU54 | 30~3000     | 2416     | -52.31 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6515 | 26Tone  | RU0  | 3000~10000  | 6595.43  | -55.16 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6515 | 26Tone  | RU4  | 3000~10000  | 5203.37  | -44.47 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6515 | 26Tone  | RU8  | 3000~10000  | 5201.73  | -35.42 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6515 | 52Tone  | RU37 | 3000~10000  | 6280.2   | -55.96 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6515 | 52Tone  | RU39 | 3000~10000  | 5179.33  | -46.92 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6515 | 52Tone  | RU40 | 3000~10000  | 5194.03  | -34.64 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6515 | 106Tone | RU53 | 3000~10000  | 5507.17  | -50.76 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6515 | 106Tone | RU54 | 3000~10000  | 5748.43  | -50.31 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6515 | 26Tone  | RU0  | 10000~40000 | 25746.53 | -44.26 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6515 | 26Tone  | RU4  | 10000~40000 | 24777.53 | -44.17 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6515 | 26Tone  | RU8  | 10000~40000 | 24871.6  | -44.36 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6515 | 52Tone  | RU37 | 10000~40000 | 24661.37 | -43.6  | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6515 | 52Tone  | RU39 | 10000~40000 | 25282.43 | -44.22 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6515 | 52Tone  | RU40 | 10000~40000 | 25942.03 | -44.1  | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6515 | 106Tone | RU53 | 10000~40000 | 24363.87 | -43.54 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6515 | 106Tone | RU54 | 10000~40000 | 25761.27 | -43.78 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6535 | 26Tone  | RU0  | 30~3000     | 1757.65  | -34.8  | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6535 | 26Tone  | RU4  | 30~3000     | 2416.3   | -53.08 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6535 | 26Tone  | RU8  | 30~3000     | 2420.85  | -52.45 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6535 | 52Tone  | RU37 | 30~3000     | 2471.84  | -56.41 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6535 | 52Tone  | RU39 | 30~3000     | 2416     | -50.01 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6535 | 52Tone  | RU40 | 30~3000     | 2426.59  | -52.52 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6535 | 106Tone | RU53 | 30~3000     | 2434.81  | -52.36 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6535 | 106Tone | RU54 | 30~3000     | 2419.37  | -50.96 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6535 | 26Tone  | RU0  | 3000~10000  | 5196.6   | -50.09 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6535 | 26Tone  | RU4  | 3000~10000  | 3425.6   | -55.99 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6535 | 26Tone  | RU8  | 3000~10000  | 5085.3   | -56.46 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6535 | 52Tone  | RU37 | 3000~10000  | 5230.43  | -52.53 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6535 | 52Tone  | RU39 | 3000~10000  | 5202.43  | -37.88 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6535 | 52Tone  | RU40 | 3000~10000  | 5253.77  | -48.56 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6535 | 106Tone | RU53 | 3000~10000  | 6054.57  | -56.32 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6535 | 106Tone | RU54 | 3000~10000  | 6658.9   | -54.53 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6535 | 26Tone  | RU0  | 10000~40000 | 24746.37 | -43.82 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6535 | 26Tone  | RU4  | 10000~40000 | 24609.23 | -43.93 | ≤-27 | PASS |

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



|            |      |      |         |      |             |          |        |      |      |
|------------|------|------|---------|------|-------------|----------|--------|------|------|
| 11AX20SISO | Ant1 | 6535 | 26Tone  | RU8  | 10000~40000 | 25663.23 | -44.37 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6535 | 52Tone  | RU37 | 10000~40000 | 25841.73 | -43.49 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6535 | 52Tone  | RU39 | 10000~40000 | 24806.43 | -43.99 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6535 | 52Tone  | RU40 | 10000~40000 | 24733.9  | -43.67 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6535 | 106Tone | RU53 | 10000~40000 | 25952.8  | -44.26 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6535 | 106Tone | RU54 | 10000~40000 | 25276.2  | -44.18 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6695 | 26Tone  | RU0  | 30~3000     | 2416     | -49.53 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6695 | 26Tone  | RU4  | 30~3000     | 2415.9   | -51.81 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6695 | 26Tone  | RU8  | 30~3000     | 2416     | -42.94 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6695 | 52Tone  | RU37 | 30~3000     | 2417.78  | -43.3  | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6695 | 52Tone  | RU39 | 30~3000     | 2420.45  | -49.53 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6695 | 52Tone  | RU40 | 30~3000     | 2416.59  | -49.59 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6695 | 106Tone | RU53 | 30~3000     | 2419.37  | -47.05 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6695 | 106Tone | RU54 | 30~3000     | 2419.27  | -45.79 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6695 | 26Tone  | RU0  | 3000~10000  | 5507.87  | -51.89 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6695 | 26Tone  | RU4  | 3000~10000  | 6945.67  | -56.46 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6695 | 26Tone  | RU8  | 3000~10000  | 5192.87  | -40.26 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6695 | 52Tone  | RU37 | 3000~10000  | 6388.47  | -55.15 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6695 | 52Tone  | RU39 | 3000~10000  | 5180.03  | -44.87 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6695 | 52Tone  | RU40 | 3000~10000  | 5201.97  | -35.65 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6695 | 106Tone | RU53 | 3000~10000  | 5762.67  | -56.08 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6695 | 106Tone | RU54 | 3000~10000  | 5901.73  | -56.29 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6695 | 26Tone  | RU0  | 10000~40000 | 25857.6  | -43.82 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6695 | 26Tone  | RU4  | 10000~40000 | 24951.5  | -44.28 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6695 | 26Tone  | RU8  | 10000~40000 | 25281.3  | -44.24 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6695 | 52Tone  | RU37 | 10000~40000 | 24430.73 | -44.43 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6695 | 52Tone  | RU39 | 10000~40000 | 24702.17 | -44.6  | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6695 | 52Tone  | RU40 | 10000~40000 | 24744.67 | -43.9  | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6695 | 106Tone | RU53 | 10000~40000 | 24675.53 | -43.61 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6695 | 106Tone | RU54 | 10000~40000 | 24360.47 | -43    | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6875 | 26Tone  | RU0  | 30~3000     | 910.01   | -39.71 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6875 | 26Tone  | RU4  | 30~3000     | 2474.31  | -54.98 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6875 | 26Tone  | RU8  | 30~3000     | 2416.49  | -51.22 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6875 | 52Tone  | RU37 | 30~3000     | 2419.27  | -49.25 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6875 | 52Tone  | RU39 | 30~3000     | 2419.27  | -48.23 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6875 | 52Tone  | RU40 | 30~3000     | 2416.89  | -54.48 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6875 | 106Tone | RU53 | 30~3000     | 2414.12  | -53.42 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6875 | 106Tone | RU54 | 30~3000     | 2321.85  | -48.56 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6875 | 26Tone  | RU0  | 3000~10000  | 6786.77  | -56.7  | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6875 | 26Tone  | RU4  | 3000~10000  | 5245.13  | -50.11 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6875 | 26Tone  | RU8  | 3000~10000  | 5798.6   | -56.05 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6875 | 52Tone  | RU37 | 3000~10000  | 5208.27  | -50.43 | ≤-27 | PASS |

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



|            |      |      |         |      |             |          |        |      |      |
|------------|------|------|---------|------|-------------|----------|--------|------|------|
| 11AX20SISO | Ant1 | 6875 | 52Tone  | RU39 | 3000~10000  | 5494.8   | -52.45 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6875 | 52Tone  | RU40 | 3000~10000  | 5751     | -49.43 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6875 | 106Tone | RU53 | 3000~10000  | 5246.77  | -49.23 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6875 | 106Tone | RU54 | 3000~10000  | 5193.1   | -36.68 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6875 | 26Tone  | RU0  | 10000~40000 | 25790.73 | -44.37 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6875 | 26Tone  | RU4  | 10000~40000 | 24948.1  | -44.45 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6875 | 26Tone  | RU8  | 10000~40000 | 25732.37 | -44.1  | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6875 | 52Tone  | RU37 | 10000~40000 | 25758.43 | -44.01 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6875 | 52Tone  | RU39 | 10000~40000 | 24387.1  | -43.7  | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6875 | 52Tone  | RU40 | 10000~40000 | 24952.63 | -43.24 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6875 | 106Tone | RU53 | 10000~40000 | 25842.87 | -43.82 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6875 | 106Tone | RU54 | 10000~40000 | 24393.33 | -44.35 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6895 | 26Tone  | RU0  | 30~3000     | 2419.17  | -43.89 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6895 | 26Tone  | RU4  | 30~3000     | 2418.87  | -51.22 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6895 | 26Tone  | RU8  | 30~3000     | 2418.87  | -49.62 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6895 | 52Tone  | RU37 | 30~3000     | 2417.09  | -49.53 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6895 | 52Tone  | RU39 | 30~3000     | 2413.92  | -49.93 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6895 | 52Tone  | RU40 | 30~3000     | 1755.08  | -40.37 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6895 | 106Tone | RU53 | 30~3000     | 2419.37  | -48.12 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6895 | 106Tone | RU54 | 30~3000     | 2414.22  | -49.98 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6895 | 26Tone  | RU0  | 3000~10000  | 5202.43  | -53.17 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6895 | 26Tone  | RU4  | 3000~10000  | 5180.27  | -49.27 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6895 | 26Tone  | RU8  | 3000~10000  | 5744.23  | -50.42 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6895 | 52Tone  | RU37 | 3000~10000  | 5192.87  | -36.28 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6895 | 52Tone  | RU39 | 3000~10000  | 5202.67  | -46.12 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6895 | 52Tone  | RU40 | 3000~10000  | 5193.57  | -39.79 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6895 | 106Tone | RU53 | 3000~10000  | 5737.7   | -54.11 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6895 | 106Tone | RU54 | 3000~10000  | 5202.2   | -38.01 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6895 | 26Tone  | RU0  | 10000~40000 | 24994    | -44.46 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6895 | 26Tone  | RU4  | 10000~40000 | 25851.93 | -43.34 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6895 | 26Tone  | RU8  | 10000~40000 | 25787.33 | -44.38 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6895 | 52Tone  | RU37 | 10000~40000 | 24388.8  | -43.99 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6895 | 52Tone  | RU39 | 10000~40000 | 24702.73 | -44.28 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6895 | 52Tone  | RU40 | 10000~40000 | 24704.43 | -44.28 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6895 | 106Tone | RU53 | 10000~40000 | 25774.3  | -43.97 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 6895 | 106Tone | RU54 | 10000~40000 | 24752.03 | -44.09 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7015 | 26Tone  | RU0  | 30~3000     | 2419.66  | -51.82 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7015 | 26Tone  | RU4  | 30~3000     | 2416.2   | -48.22 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7015 | 26Tone  | RU8  | 30~3000     | 2417.19  | -45.53 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7015 | 52Tone  | RU37 | 30~3000     | 2416.1   | -53.67 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7015 | 52Tone  | RU39 | 30~3000     | 2414.91  | -53.44 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7015 | 52Tone  | RU40 | 30~3000     | 2418.77  | -50.82 | ≤-27 | PASS |

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



|            |      |      |         |      |             |          |        |      |      |
|------------|------|------|---------|------|-------------|----------|--------|------|------|
| 11AX20SISO | Ant1 | 7015 | 106Tone | RU53 | 30~3000     | 2417.19  | -49.76 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7015 | 106Tone | RU54 | 30~3000     | 2417.78  | -48.01 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7015 | 26Tone  | RU0  | 3000~10000  | 5191.23  | -52.66 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7015 | 26Tone  | RU4  | 3000~10000  | 6320.8   | -54.31 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7015 | 26Tone  | RU8  | 3000~10000  | 7104.8   | -56.32 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7015 | 52Tone  | RU37 | 3000~10000  | 5749.6   | -49.84 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7015 | 52Tone  | RU39 | 3000~10000  | 5739.57  | -49.33 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7015 | 52Tone  | RU40 | 3000~10000  | 5193.8   | -33.8  | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7015 | 106Tone | RU53 | 3000~10000  | 6718.63  | -56.18 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7015 | 106Tone | RU54 | 3000~10000  | 5193.1   | -33.02 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7015 | 26Tone  | RU0  | 10000~40000 | 24323.63 | -44.06 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7015 | 26Tone  | RU4  | 10000~40000 | 25913.13 | -44.43 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7015 | 26Tone  | RU8  | 10000~40000 | 25727.27 | -44.22 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7015 | 52Tone  | RU37 | 10000~40000 | 24793.97 | -43.81 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7015 | 52Tone  | RU39 | 10000~40000 | 25916.53 | -43.57 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7015 | 52Tone  | RU40 | 10000~40000 | 25891.6  | -41.77 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7015 | 106Tone | RU53 | 10000~40000 | 24708.4  | -43.87 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7015 | 106Tone | RU54 | 10000~40000 | 24406.93 | -43.46 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7115 | 26Tone  | RU0  | 30~3000     | 2418.67  | -45.08 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7115 | 26Tone  | RU4  | 30~3000     | 2419.46  | -47.96 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7115 | 26Tone  | RU8  | 30~3000     | 2419.46  | -50.27 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7115 | 52Tone  | RU37 | 30~3000     | 2418.87  | -49.25 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7115 | 52Tone  | RU39 | 30~3000     | 1736.96  | -39.12 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7115 | 52Tone  | RU40 | 30~3000     | 2415.8   | -45.62 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7115 | 106Tone | RU53 | 30~3000     | 2795.66  | -56.08 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7115 | 106Tone | RU54 | 30~3000     | 2416.3   | -46.87 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7115 | 26Tone  | RU0  | 3000~10000  | 5735.6   | -56.14 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7115 | 26Tone  | RU4  | 3000~10000  | 6289.77  | -54.17 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7115 | 26Tone  | RU8  | 3000~10000  | 5193.33  | -35.35 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7115 | 52Tone  | RU37 | 3000~10000  | 5205.7   | -36.8  | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7115 | 52Tone  | RU39 | 3000~10000  | 5507.4   | -50.72 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7115 | 52Tone  | RU40 | 3000~10000  | 5742.6   | -51.19 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7115 | 106Tone | RU53 | 3000~10000  | 5743.3   | -54.08 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7115 | 106Tone | RU54 | 3000~10000  | 5192.87  | -36.73 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7115 | 26Tone  | RU0  | 10000~40000 | 25817.93 | -44.52 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7115 | 26Tone  | RU4  | 10000~40000 | 25880.83 | -43.69 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7115 | 26Tone  | RU8  | 10000~40000 | 24341.2  | -44.21 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7115 | 52Tone  | RU37 | 10000~40000 | 24753.73 | -44.14 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7115 | 52Tone  | RU39 | 10000~40000 | 24350.83 | -44.18 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7115 | 52Tone  | RU40 | 10000~40000 | 24717.47 | -44.23 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7115 | 106Tone | RU53 | 10000~40000 | 25328.33 | -43.44 | ≤-27 | PASS |
| 11AX20SISO | Ant1 | 7115 | 106Tone | RU54 | 10000~40000 | 24399.57 | -44.15 | ≤-27 | PASS |

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



|            |      |      |         |      |             |          |        |      |      |
|------------|------|------|---------|------|-------------|----------|--------|------|------|
| 11AX40SISO | Ant1 | 5965 | 26Tone  | RU0  | 30~3000     | 1764.68  | -46.15 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 5965 | 26Tone  | RU17 | 30~3000     | 2416.79  | -45.4  | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 5965 | 52Tone  | RU37 | 30~3000     | 2417.19  | -47.04 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 5965 | 52Tone  | RU44 | 30~3000     | 2474.51  | -54.77 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 5965 | 106Tone | RU53 | 30~3000     | 2418.87  | -45.66 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 5965 | 106Tone | RU56 | 30~3000     | 2417.98  | -44.96 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 5965 | 242Tone | RU61 | 30~3000     | 2416.49  | -44.9  | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 5965 | 242Tone | RU62 | 30~3000     | 2417.39  | -45.91 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 5965 | 26Tone  | RU0  | 3000~10000  | 5738.63  | -48.12 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 5965 | 26Tone  | RU17 | 3000~10000  | 5193.8   | -35.58 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 5965 | 52Tone  | RU37 | 3000~10000  | 5207.8   | -41.42 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 5965 | 52Tone  | RU44 | 3000~10000  | 5288.3   | -52.64 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 5965 | 106Tone | RU53 | 3000~10000  | 5192.87  | -32.14 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 5965 | 106Tone | RU56 | 3000~10000  | 5746.8   | -52.36 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 5965 | 242Tone | RU61 | 3000~10000  | 5506.93  | -52.41 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 5965 | 242Tone | RU62 | 3000~10000  | 6390.8   | -56.72 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 5965 | 26Tone  | RU0  | 10000~40000 | 25762.4  | -44.48 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 5965 | 26Tone  | RU17 | 10000~40000 | 24412.03 | -44.56 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 5965 | 52Tone  | RU37 | 10000~40000 | 24791.13 | -44.17 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 5965 | 52Tone  | RU44 | 10000~40000 | 24745.8  | -44.54 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 5965 | 106Tone | RU53 | 10000~40000 | 24854.6  | -44.13 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 5965 | 106Tone | RU56 | 10000~40000 | 24685.17 | -44.13 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 5965 | 242Tone | RU61 | 10000~40000 | 25874.6  | -43.47 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 5965 | 242Tone | RU62 | 10000~40000 | 24790.57 | -43.55 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6165 | 26Tone  | RU0  | 30~3000     | 2418.97  | -51.56 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6165 | 26Tone  | RU17 | 30~3000     | 2418.67  | -49.27 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6165 | 52Tone  | RU37 | 30~3000     | 2471.44  | -48.23 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6165 | 52Tone  | RU44 | 30~3000     | 2418.67  | -34.44 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6165 | 106Tone | RU53 | 30~3000     | 2414.12  | -51.28 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6165 | 106Tone | RU56 | 30~3000     | 2415.41  | -51.46 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6165 | 242Tone | RU61 | 30~3000     | 2417.78  | -49.87 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6165 | 242Tone | RU62 | 30~3000     | 2417.39  | -49.12 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6165 | 26Tone  | RU0  | 3000~10000  | 5783.67  | -40.59 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6165 | 26Tone  | RU17 | 3000~10000  | 6394.77  | -53.38 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6165 | 52Tone  | RU37 | 3000~10000  | 5257.27  | -44.14 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6165 | 52Tone  | RU44 | 3000~10000  | 5762.67  | -47.68 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6165 | 106Tone | RU53 | 3000~10000  | 5811.67  | -43.69 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6165 | 106Tone | RU56 | 3000~10000  | 7125.8   | -56.69 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6165 | 242Tone | RU61 | 3000~10000  | 5263.1   | -46.19 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6165 | 242Tone | RU62 | 3000~10000  | 5778.3   | -43.91 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6165 | 26Tone  | RU0  | 10000~40000 | 24703.3  | -44.81 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6165 | 26Tone  | RU17 | 10000~40000 | 24343.47 | -44.55 | ≤-27 | PASS |

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



|            |      |      |         |      |             |          |        |      |      |
|------------|------|------|---------|------|-------------|----------|--------|------|------|
| 11AX40SISO | Ant1 | 6165 | 52Tone  | RU37 | 10000~40000 | 25643.4  | -44.73 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6165 | 52Tone  | RU44 | 10000~40000 | 24427.33 | -44.14 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6165 | 106Tone | RU53 | 10000~40000 | 25290.37 | -44.27 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6165 | 106Tone | RU56 | 10000~40000 | 24360.47 | -43.68 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6165 | 242Tone | RU61 | 10000~40000 | 25673.43 | -43.16 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6165 | 242Tone | RU62 | 10000~40000 | 24682.33 | -43.61 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6405 | 26Tone  | RU0  | 30~3000     | 2470.65  | -41.03 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6405 | 26Tone  | RU17 | 30~3000     | 2470.94  | -35.18 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6405 | 52Tone  | RU37 | 30~3000     | 2471.74  | -37.59 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6405 | 52Tone  | RU44 | 30~3000     | 2471.54  | -34    | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6405 | 106Tone | RU53 | 30~3000     | 2470.85  | -35.98 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6405 | 106Tone | RU56 | 30~3000     | 2471.64  | -35.38 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6405 | 242Tone | RU61 | 30~3000     | 2471.54  | -37.02 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6405 | 242Tone | RU62 | 30~3000     | 2471.44  | -39.45 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6405 | 26Tone  | RU0  | 3000~10000  | 5648.33  | -56.49 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6405 | 26Tone  | RU17 | 3000~10000  | 5786     | -39.84 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6405 | 52Tone  | RU37 | 3000~10000  | 5800.47  | -44.15 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6405 | 52Tone  | RU44 | 3000~10000  | 5802.33  | -48.45 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6405 | 106Tone | RU53 | 3000~10000  | 5742.37  | -46.69 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6405 | 106Tone | RU56 | 3000~10000  | 5262.63  | -45.08 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6405 | 242Tone | RU61 | 3000~10000  | 5782.97  | -36.46 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6405 | 242Tone | RU62 | 3000~10000  | 5258.67  | -43.73 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6405 | 26Tone  | RU0  | 10000~40000 | 24376.33 | -43.01 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6405 | 26Tone  | RU17 | 10000~40000 | 24387.1  | -43.81 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6405 | 52Tone  | RU37 | 10000~40000 | 24401.27 | -43.76 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6405 | 52Tone  | RU44 | 10000~40000 | 25237.67 | -44.06 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6405 | 106Tone | RU53 | 10000~40000 | 25686.47 | -43.73 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6405 | 106Tone | RU56 | 10000~40000 | 25902.37 | -43.45 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6405 | 242Tone | RU61 | 10000~40000 | 25872.9  | -43.97 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6405 | 242Tone | RU62 | 10000~40000 | 25755.03 | -43.05 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6445 | 26Tone  | RU0  | 30~3000     | 2471.04  | -32.57 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6445 | 26Tone  | RU17 | 30~3000     | 2471.44  | -37.26 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6445 | 52Tone  | RU37 | 30~3000     | 2471.54  | -37.46 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6445 | 52Tone  | RU44 | 30~3000     | 2471.04  | -37.5  | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6445 | 106Tone | RU53 | 30~3000     | 2471.74  | -37.62 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6445 | 106Tone | RU56 | 30~3000     | 2417.58  | -33.27 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6445 | 242Tone | RU61 | 30~3000     | 2419.17  | -34.58 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6445 | 242Tone | RU62 | 30~3000     | 2472.23  | -37.51 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6445 | 26Tone  | RU0  | 3000~10000  | 5256.8   | -46.51 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6445 | 26Tone  | RU17 | 3000~10000  | 5789.27  | -38.76 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6445 | 52Tone  | RU37 | 3000~10000  | 5746.1   | -50.78 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6445 | 52Tone  | RU44 | 3000~10000  | 6613.4   | -50.11 | ≤-27 | PASS |

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



|            |      |      |         |      |             |          |        |      |      |
|------------|------|------|---------|------|-------------|----------|--------|------|------|
| 11AX40SISO | Ant1 | 6445 | 106Tone | RU53 | 3000~10000  | 5788.8   | -40.77 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6445 | 106Tone | RU56 | 3000~10000  | 6611.77  | -51.45 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6445 | 242Tone | RU61 | 3000~10000  | 5785.07  | -38.69 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6445 | 242Tone | RU62 | 3000~10000  | 5778.3   | -44.62 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6445 | 26Tone  | RU0  | 10000~40000 | 24767.9  | -43.61 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6445 | 26Tone  | RU17 | 10000~40000 | 25653.03 | -43.25 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6445 | 52Tone  | RU37 | 10000~40000 | 25709.7  | -43.63 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6445 | 52Tone  | RU44 | 10000~40000 | 24328.17 | -44.08 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6445 | 106Tone | RU53 | 10000~40000 | 24368.4  | -43.83 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6445 | 106Tone | RU56 | 10000~40000 | 24796.23 | -43.54 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6445 | 242Tone | RU61 | 10000~40000 | 25947.7  | -43.86 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6445 | 242Tone | RU62 | 10000~40000 | 24396.73 | -43.26 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6485 | 26Tone  | RU0  | 30~3000     | 2420.45  | -41.89 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6485 | 26Tone  | RU17 | 30~3000     | 2471.14  | -35.84 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6485 | 52Tone  | RU37 | 30~3000     | 2472.03  | -33.14 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6485 | 52Tone  | RU44 | 30~3000     | 2419.76  | -32.93 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6485 | 106Tone | RU53 | 30~3000     | 2471.24  | -31.84 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6485 | 106Tone | RU56 | 30~3000     | 2417.39  | -29.18 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6485 | 242Tone | RU61 | 30~3000     | 2471.84  | -39.84 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6485 | 242Tone | RU62 | 30~3000     | 2471.24  | -32.75 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6485 | 26Tone  | RU0  | 3000~10000  | 5743.07  | -49.47 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6485 | 26Tone  | RU17 | 3000~10000  | 5261.7   | -44.23 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6485 | 52Tone  | RU37 | 3000~10000  | 5786.47  | -39.17 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6485 | 52Tone  | RU44 | 3000~10000  | 5784.6   | -47.36 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6485 | 106Tone | RU53 | 3000~10000  | 5779.7   | -56.53 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6485 | 106Tone | RU56 | 3000~10000  | 5787.4   | -42.54 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6485 | 242Tone | RU61 | 3000~10000  | 5786.47  | -42.04 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6485 | 242Tone | RU62 | 3000~10000  | 5788.8   | -40.48 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6485 | 26Tone  | RU0  | 10000~40000 | 25930.13 | -44.2  | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6485 | 26Tone  | RU17 | 10000~40000 | 24120.77 | -44.39 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6485 | 52Tone  | RU37 | 10000~40000 | 24703.87 | -44.02 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6485 | 52Tone  | RU44 | 10000~40000 | 24398.43 | -44.03 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6485 | 106Tone | RU53 | 10000~40000 | 25666.07 | -44.06 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6485 | 106Tone | RU56 | 10000~40000 | 25301.7  | -43.75 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6485 | 242Tone | RU61 | 10000~40000 | 25889.33 | -44.21 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6485 | 242Tone | RU62 | 10000~40000 | 25952.8  | -43.99 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6525 | 26Tone  | RU0  | 30~3000     | 2471.34  | -38.36 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6525 | 26Tone  | RU17 | 30~3000     | 2471.34  | -31.82 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6525 | 52Tone  | RU37 | 30~3000     | 2471.44  | -46.16 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6525 | 52Tone  | RU44 | 30~3000     | 2472.92  | -48.84 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6525 | 106Tone | RU53 | 30~3000     | 2471.93  | -45.08 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6525 | 106Tone | RU56 | 30~3000     | 2472.53  | -45.71 | ≤-27 | PASS |

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



|            |      |      |         |      |             |          |        |      |      |
|------------|------|------|---------|------|-------------|----------|--------|------|------|
| 11AX40SISO | Ant1 | 6525 | 242Tone | RU61 | 30~3000     | 2471.74  | -47.31 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6525 | 242Tone | RU62 | 30~3000     | 2471.64  | -47.66 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6525 | 26Tone  | RU0  | 3000~10000  | 5786.7   | -43.51 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6525 | 26Tone  | RU17 | 3000~10000  | 5785.3   | -44.12 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6525 | 52Tone  | RU37 | 3000~10000  | 5783.9   | -40.06 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6525 | 52Tone  | RU44 | 3000~10000  | 5784.83  | -40.49 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6525 | 106Tone | RU53 | 3000~10000  | 5791.13  | -39.63 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6525 | 106Tone | RU56 | 3000~10000  | 5791.6   | -41.78 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6525 | 242Tone | RU61 | 3000~10000  | 5797.9   | -48.39 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6525 | 242Tone | RU62 | 3000~10000  | 5740.27  | -51.85 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6525 | 26Tone  | RU0  | 10000~40000 | 24354.23 | -44.04 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6525 | 26Tone  | RU17 | 10000~40000 | 24364.43 | -43.46 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6525 | 52Tone  | RU37 | 10000~40000 | 24932.8  | -44.05 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6525 | 52Tone  | RU44 | 10000~40000 | 24728.23 | -44.35 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6525 | 106Tone | RU53 | 10000~40000 | 25912.57 | -44.06 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6525 | 106Tone | RU56 | 10000~40000 | 24744.1  | -43.71 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6525 | 242Tone | RU61 | 10000~40000 | 24409.77 | -43.86 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6525 | 242Tone | RU62 | 10000~40000 | 24343.47 | -44.35 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6565 | 26Tone  | RU0  | 30~3000     | 2471.84  | -45.88 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6565 | 26Tone  | RU17 | 30~3000     | 2418.57  | -47.63 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6565 | 52Tone  | RU37 | 30~3000     | 2471.74  | -49.73 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6565 | 52Tone  | RU44 | 30~3000     | 2471.04  | -49.04 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6565 | 106Tone | RU53 | 30~3000     | 1746.86  | -39.18 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6565 | 106Tone | RU56 | 30~3000     | 2470.55  | -44.85 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6565 | 242Tone | RU61 | 30~3000     | 2471.54  | -43.97 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6565 | 242Tone | RU62 | 30~3000     | 2415.8   | -49.45 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6565 | 26Tone  | RU0  | 3000~10000  | 5787.17  | -39.52 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6565 | 26Tone  | RU17 | 3000~10000  | 5791.83  | -41.61 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6565 | 52Tone  | RU37 | 3000~10000  | 5258.43  | -43.87 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6565 | 52Tone  | RU44 | 3000~10000  | 5784.83  | -41.05 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6565 | 106Tone | RU53 | 3000~10000  | 5749.13  | -51.2  | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6565 | 106Tone | RU56 | 3000~10000  | 5257.5   | -46.09 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6565 | 242Tone | RU61 | 3000~10000  | 5791.13  | -41    | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6565 | 242Tone | RU62 | 3000~10000  | 5807.23  | -47.68 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6565 | 26Tone  | RU0  | 10000~40000 | 25660.4  | -44.3  | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6565 | 26Tone  | RU17 | 10000~40000 | 24392.77 | -44.21 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6565 | 52Tone  | RU37 | 10000~40000 | 24788.3  | -44.33 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6565 | 52Tone  | RU44 | 10000~40000 | 24745.23 | -43.88 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6565 | 106Tone | RU53 | 10000~40000 | 25887.07 | -43.85 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6565 | 106Tone | RU56 | 10000~40000 | 25286.97 | -43.56 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6565 | 242Tone | RU61 | 10000~40000 | 25374.8  | -44.37 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6565 | 242Tone | RU62 | 10000~40000 | 24688    | -43.29 | ≤-27 | PASS |

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



|            |      |      |         |      |             |          |        |      |      |
|------------|------|------|---------|------|-------------|----------|--------|------|------|
| 11AX40SISO | Ant1 | 6685 | 26Tone  | RU0  | 30~3000     | 2471.64  | -48.6  | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6685 | 26Tone  | RU17 | 30~3000     | 2470.85  | -49.9  | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6685 | 52Tone  | RU37 | 30~3000     | 1784.58  | -44.74 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6685 | 52Tone  | RU44 | 30~3000     | 2415.41  | -47.28 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6685 | 106Tone | RU53 | 30~3000     | 2471.74  | -50.07 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6685 | 106Tone | RU56 | 30~3000     | 2471.04  | -49.26 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6685 | 242Tone | RU61 | 30~3000     | 2471.84  | -48.43 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6685 | 242Tone | RU62 | 30~3000     | 2448.57  | -48.86 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6685 | 26Tone  | RU0  | 3000~10000  | 5257.73  | -45.53 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6685 | 26Tone  | RU17 | 3000~10000  | 5780.87  | -43.87 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6685 | 52Tone  | RU37 | 3000~10000  | 5789.73  | -41.04 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6685 | 52Tone  | RU44 | 3000~10000  | 5788.33  | -40.75 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6685 | 106Tone | RU53 | 3000~10000  | 5784.37  | -37.08 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6685 | 106Tone | RU56 | 3000~10000  | 5784.83  | -41.44 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6685 | 242Tone | RU61 | 3000~10000  | 6832.97  | -50.32 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6685 | 242Tone | RU62 | 3000~10000  | 5791.13  | -41.27 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6685 | 26Tone  | RU0  | 10000~40000 | 24368.97 | -44.05 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6685 | 26Tone  | RU17 | 10000~40000 | 24328.17 | -43.78 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6685 | 52Tone  | RU37 | 10000~40000 | 24318.53 | -44.49 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6685 | 52Tone  | RU44 | 10000~40000 | 24370.1  | -43.67 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6685 | 106Tone | RU53 | 10000~40000 | 25871.77 | -44.61 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6685 | 106Tone | RU56 | 10000~40000 | 24457.37 | -44.26 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6685 | 242Tone | RU61 | 10000~40000 | 25743.7  | -44.29 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6685 | 242Tone | RU62 | 10000~40000 | 24369.53 | -43.49 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6845 | 26Tone  | RU0  | 30~3000     | 2416.2   | -48.82 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6845 | 26Tone  | RU17 | 30~3000     | 2471.54  | -47.77 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6845 | 52Tone  | RU37 | 30~3000     | 2417.98  | -47.87 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6845 | 52Tone  | RU44 | 30~3000     | 2417.19  | -47.62 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6845 | 106Tone | RU53 | 30~3000     | 2420.95  | -46.72 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6845 | 106Tone | RU56 | 30~3000     | 2416.4   | -48.85 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6845 | 242Tone | RU61 | 30~3000     | 2417.68  | -50.18 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6845 | 242Tone | RU62 | 30~3000     | 2415.9   | -51.38 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6845 | 26Tone  | RU0  | 3000~10000  | 5256.8   | -44.45 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6845 | 26Tone  | RU17 | 3000~10000  | 5752.4   | -48.69 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6845 | 52Tone  | RU37 | 3000~10000  | 5782.97  | -35.46 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6845 | 52Tone  | RU44 | 3000~10000  | 7075.87  | -55.77 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6845 | 106Tone | RU53 | 3000~10000  | 5759.17  | -46.47 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6845 | 106Tone | RU56 | 3000~10000  | 5257.03  | -45    | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6845 | 242Tone | RU61 | 3000~10000  | 5257.5   | -43.83 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6845 | 242Tone | RU62 | 3000~10000  | 5780.4   | -39.62 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6845 | 26Tone  | RU0  | 10000~40000 | 24373.5  | -43.82 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6845 | 26Tone  | RU17 | 10000~40000 | 25908.6  | -43.52 | ≤-27 | PASS |

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



|            |      |      |         |      |             |          |        |      |      |
|------------|------|------|---------|------|-------------|----------|--------|------|------|
| 11AX40SISO | Ant1 | 6845 | 52Tone  | RU37 | 10000~40000 | 24353.1  | -43.75 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6845 | 52Tone  | RU44 | 10000~40000 | 24994    | -43.8  | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6845 | 106Tone | RU53 | 10000~40000 | 24805.3  | -44.09 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6845 | 106Tone | RU56 | 10000~40000 | 24452.27 | -43.71 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6845 | 242Tone | RU61 | 10000~40000 | 26008.33 | -43.5  | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6845 | 242Tone | RU62 | 10000~40000 | 24680.63 | -43.81 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6885 | 26Tone  | RU0  | 30~3000     | 2471.93  | -48.17 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6885 | 26Tone  | RU17 | 30~3000     | 2416.69  | -46.04 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6885 | 52Tone  | RU37 | 30~3000     | 2415.6   | -50.48 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6885 | 52Tone  | RU44 | 30~3000     | 2416.69  | -50.17 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6885 | 106Tone | RU53 | 30~3000     | 2448.37  | -51.48 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6885 | 106Tone | RU56 | 30~3000     | 2471.14  | -50.97 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6885 | 242Tone | RU61 | 30~3000     | 2416.79  | -47.5  | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6885 | 242Tone | RU62 | 30~3000     | 2416     | -48.6  | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6885 | 26Tone  | RU0  | 3000~10000  | 7201.17  | -56.23 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6885 | 26Tone  | RU17 | 3000~10000  | 7065.37  | -56.34 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6885 | 52Tone  | RU37 | 3000~10000  | 5789.73  | -40.34 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6885 | 52Tone  | RU44 | 3000~10000  | 5780.63  | -41.66 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6885 | 106Tone | RU53 | 3000~10000  | 5807.93  | -49.84 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6885 | 106Tone | RU56 | 3000~10000  | 5258.43  | -48.49 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6885 | 242Tone | RU61 | 3000~10000  | 5780.17  | -44.5  | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6885 | 242Tone | RU62 | 3000~10000  | 5768.73  | -51.63 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6885 | 26Tone  | RU0  | 10000~40000 | 25289.8  | -43.33 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6885 | 26Tone  | RU17 | 10000~40000 | 24795.67 | -42.85 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6885 | 52Tone  | RU37 | 10000~40000 | 25762.97 | -44.18 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6885 | 52Tone  | RU44 | 10000~40000 | 25319.83 | -42.94 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6885 | 106Tone | RU53 | 10000~40000 | 24641.53 | -44.12 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6885 | 106Tone | RU56 | 10000~40000 | 25804.9  | -44.02 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6885 | 242Tone | RU61 | 10000~40000 | 25758.43 | -43.3  | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 6885 | 242Tone | RU62 | 10000~40000 | 25664.93 | -44.01 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7005 | 26Tone  | RU0  | 30~3000     | 2419.96  | -46.7  | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7005 | 26Tone  | RU17 | 30~3000     | 2419.96  | -49.62 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7005 | 52Tone  | RU37 | 30~3000     | 2416.89  | -49.05 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7005 | 52Tone  | RU44 | 30~3000     | 2418.77  | -47.95 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7005 | 106Tone | RU53 | 30~3000     | 2419.56  | -52    | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7005 | 106Tone | RU56 | 30~3000     | 1746.96  | -37.53 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7005 | 242Tone | RU61 | 30~3000     | 2471.14  | -51.54 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7005 | 242Tone | RU62 | 30~3000     | 2416.1   | -49.67 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7005 | 26Tone  | RU0  | 3000~10000  | 5787.4   | -38.41 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7005 | 26Tone  | RU17 | 3000~10000  | 5788.1   | -38.06 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7005 | 52Tone  | RU37 | 3000~10000  | 5781.57  | -38.19 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7005 | 52Tone  | RU44 | 3000~10000  | 5747.03  | -49.34 | ≤-27 | PASS |

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



|            |      |      |         |      |             |          |        |      |      |
|------------|------|------|---------|------|-------------|----------|--------|------|------|
| 11AX40SISO | Ant1 | 7005 | 106Tone | RU53 | 3000~10000  | 3269.97  | -56.3  | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7005 | 106Tone | RU56 | 3000~10000  | 5784.6   | -41.66 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7005 | 242Tone | RU61 | 3000~10000  | 5783.2   | -39.35 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7005 | 242Tone | RU62 | 3000~10000  | 5786.47  | -43.16 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7005 | 26Tone  | RU0  | 10000~40000 | 24793.97 | -44.43 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7005 | 26Tone  | RU17 | 10000~40000 | 25706.3  | -44.57 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7005 | 52Tone  | RU37 | 10000~40000 | 25745.97 | -43.98 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7005 | 52Tone  | RU44 | 10000~40000 | 24391.07 | -44.49 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7005 | 106Tone | RU53 | 10000~40000 | 25702.9  | -44.57 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7005 | 106Tone | RU56 | 10000~40000 | 24317.4  | -44.18 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7005 | 242Tone | RU61 | 10000~40000 | 25880.83 | -44.08 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7005 | 242Tone | RU62 | 10000~40000 | 24827.97 | -44.15 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7085 | 26Tone  | RU0  | 30~3000     | 2472.03  | -51.88 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7085 | 26Tone  | RU17 | 30~3000     | 2471.04  | -51.05 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7085 | 52Tone  | RU37 | 30~3000     | 2415.8   | -48.74 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7085 | 52Tone  | RU44 | 30~3000     | 2417.48  | -48.79 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7085 | 106Tone | RU53 | 30~3000     | 2416.99  | -48.56 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7085 | 106Tone | RU56 | 30~3000     | 2416.49  | -48.15 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7085 | 242Tone | RU61 | 30~3000     | 2415.7   | -49.8  | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7085 | 242Tone | RU62 | 30~3000     | 2416.1   | -49.04 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7085 | 26Tone  | RU0  | 3000~10000  | 7532.5   | -55.95 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7085 | 26Tone  | RU17 | 3000~10000  | 5787.87  | -41.93 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7085 | 52Tone  | RU37 | 3000~10000  | 5746.57  | -49.9  | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7085 | 52Tone  | RU44 | 3000~10000  | 5785.3   | -41.41 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7085 | 106Tone | RU53 | 3000~10000  | 5782.5   | -38.21 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7085 | 106Tone | RU56 | 3000~10000  | 5262.87  | -45.95 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7085 | 242Tone | RU61 | 3000~10000  | 5780.63  | -41.87 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7085 | 242Tone | RU62 | 3000~10000  | 5751     | -49.11 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7085 | 26Tone  | RU0  | 10000~40000 | 25305.67 | -44.38 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7085 | 26Tone  | RU17 | 10000~40000 | 25249.57 | -44.26 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7085 | 52Tone  | RU37 | 10000~40000 | 24419.4  | -43.65 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7085 | 52Tone  | RU44 | 10000~40000 | 24179.13 | -43.52 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7085 | 106Tone | RU53 | 10000~40000 | 24394.47 | -43.76 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7085 | 106Tone | RU56 | 10000~40000 | 24757.7  | -43.02 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7085 | 242Tone | RU61 | 10000~40000 | 24704.43 | -44.01 | ≤-27 | PASS |
| 11AX40SISO | Ant1 | 7085 | 242Tone | RU62 | 10000~40000 | 24720.87 | -43.45 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 5985 | 26Tone  | RU0  | 30~3000     | 2417.58  | -52.76 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 5985 | 26Tone  | RU36 | 30~3000     | 2414.32  | -51.38 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 5985 | 52Tone  | RU37 | 30~3000     | 2415.8   | -47.53 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 5985 | 52Tone  | RU52 | 30~3000     | 2418.97  | -51.83 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 5985 | 106Tone | RU53 | 30~3000     | 2419.17  | -45.82 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 5985 | 106Tone | RU60 | 30~3000     | 2419.27  | -47.8  | ≤-27 | PASS |

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



|            |      |      |         |      |             |          |        |      |      |
|------------|------|------|---------|------|-------------|----------|--------|------|------|
| 11AX80SISO | Ant1 | 5985 | 242Tone | RU61 | 30~3000     | 2419.17  | -46.43 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 5985 | 242Tone | RU64 | 30~3000     | 2415.11  | -48.6  | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 5985 | 484Tone | RU65 | 30~3000     | 2419.66  | -49.75 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 5985 | 484Tone | RU66 | 30~3000     | 2419.76  | -48.17 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 5985 | 26Tone  | RU0  | 3000~10000  | 5254.23  | -50.91 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 5985 | 26Tone  | RU36 | 3000~10000  | 5506.23  | -48.93 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 5985 | 52Tone  | RU37 | 3000~10000  | 5257.27  | -48.77 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 5985 | 52Tone  | RU52 | 3000~10000  | 6292.57  | -54.85 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 5985 | 106Tone | RU53 | 3000~10000  | 5252.83  | -48.4  | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 5985 | 106Tone | RU60 | 3000~10000  | 5502.97  | -55.73 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 5985 | 242Tone | RU61 | 3000~10000  | 5493.87  | -49.8  | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 5985 | 242Tone | RU64 | 3000~10000  | 5236.27  | -52.3  | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 5985 | 484Tone | RU65 | 3000~10000  | 5494.1   | -49.05 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 5985 | 484Tone | RU66 | 3000~10000  | 5208.03  | -51.62 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 5985 | 26Tone  | RU0  | 10000~40000 | 25956.77 | -43.28 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 5985 | 26Tone  | RU36 | 10000~40000 | 24342.9  | -43.98 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 5985 | 52Tone  | RU37 | 10000~40000 | 24695.37 | -43.99 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 5985 | 52Tone  | RU52 | 10000~40000 | 24712.37 | -43.99 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 5985 | 106Tone | RU53 | 10000~40000 | 24346.3  | -44.31 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 5985 | 106Tone | RU60 | 10000~40000 | 25312.47 | -43.96 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 5985 | 242Tone | RU61 | 10000~40000 | 24332.7  | -44.04 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 5985 | 242Tone | RU64 | 10000~40000 | 24320.8  | -43.95 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 5985 | 484Tone | RU65 | 10000~40000 | 24421.1  | -43.76 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 5985 | 484Tone | RU66 | 10000~40000 | 24810.97 | -43.72 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 6145 | 26Tone  | RU0  | 30~3000     | 2472.43  | -56.21 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 6145 | 26Tone  | RU36 | 30~3000     | 2421.94  | -47.5  | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 6145 | 52Tone  | RU37 | 30~3000     | 2415.9   | -45.77 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 6145 | 52Tone  | RU52 | 30~3000     | 2416.69  | -45.07 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 6145 | 106Tone | RU53 | 30~3000     | 2419.96  | -46.21 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 6145 | 106Tone | RU60 | 30~3000     | 2421.94  | -48.86 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 6145 | 242Tone | RU61 | 30~3000     | 2416.3   | -50.19 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 6145 | 242Tone | RU64 | 30~3000     | 2415.6   | -52.86 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 6145 | 484Tone | RU65 | 30~3000     | 2419.17  | -47.33 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 6145 | 484Tone | RU66 | 30~3000     | 2417.09  | -52.76 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 6145 | 26Tone  | RU0  | 3000~10000  | 7071.43  | -56.5  | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 6145 | 26Tone  | RU36 | 3000~10000  | 5275.47  | -47.89 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 6145 | 52Tone  | RU37 | 3000~10000  | 5493.63  | -52.86 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 6145 | 52Tone  | RU52 | 3000~10000  | 5254.47  | -52.31 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 6145 | 106Tone | RU53 | 3000~10000  | 5254     | -51.75 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 6145 | 106Tone | RU60 | 3000~10000  | 5739.33  | -46.78 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 6145 | 242Tone | RU61 | 3000~10000  | 5493.17  | -49.04 | ≤-27 | PASS |
| 11AX80SISO | Ant1 | 6145 | 242Tone | RU64 | 3000~10000  | 5747.73  | -48.55 | ≤-27 | PASS |

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,  
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.  
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn

