


ATTACHMENT P – SAR TEST SETUP PHOTOGRAPHS

■ Test Setup Photo



■ Test Setup Photo

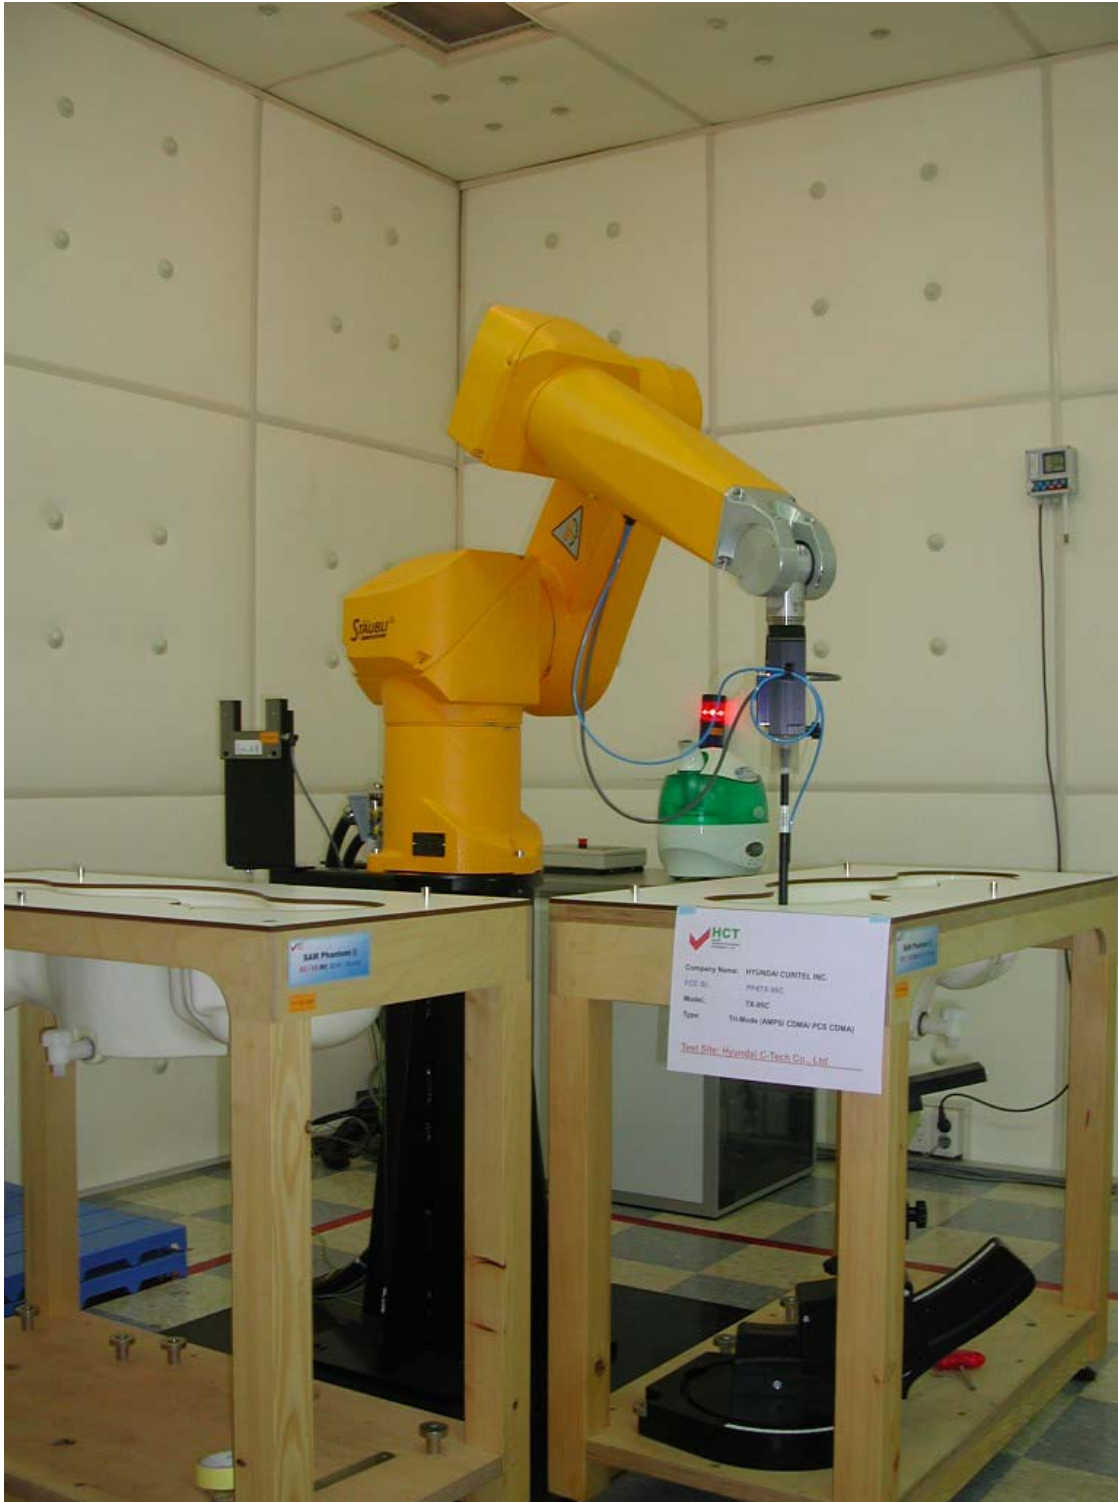

■ Test Setup Photo



■ Test Setup Photo



■ Test Setup Photo



■ Test Setup Photo




■ Test Setup Photo



■ Test Setup Photo




■ Test Setup Photo

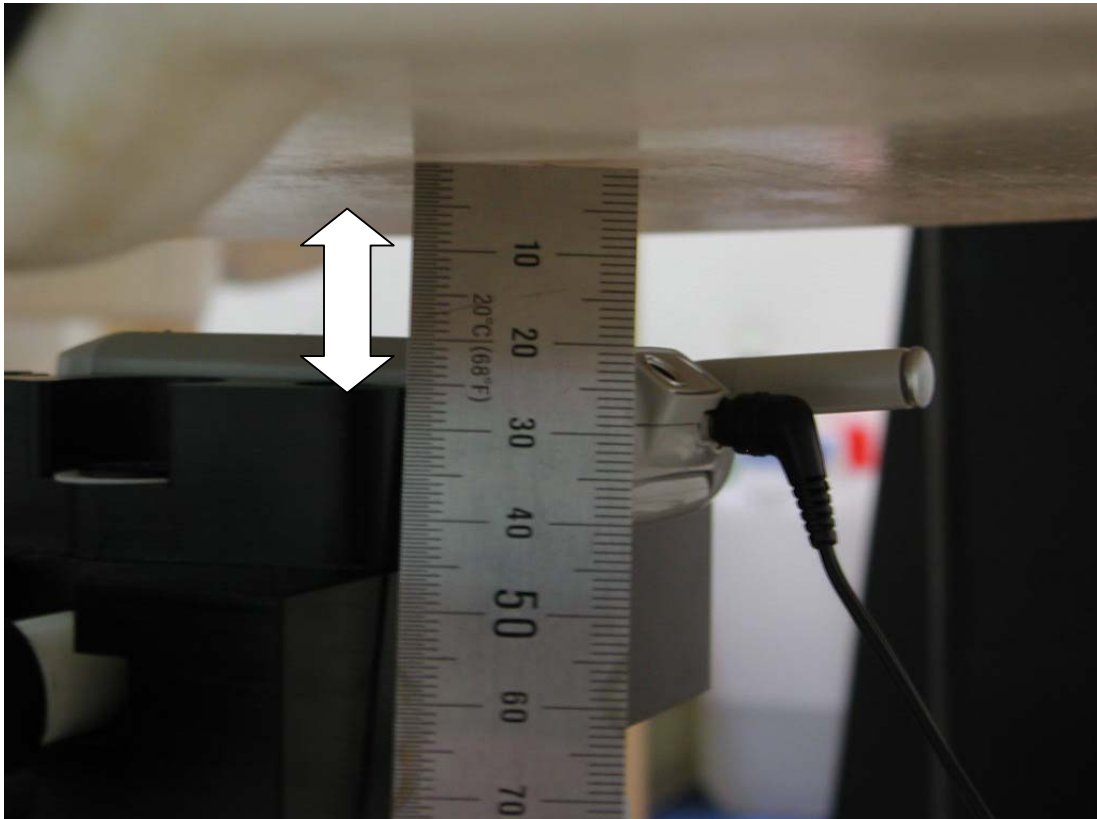



■ Test Setup Photo

[835MHz/ 1900MHz Head Tissue Liquid Depth : 15cm]

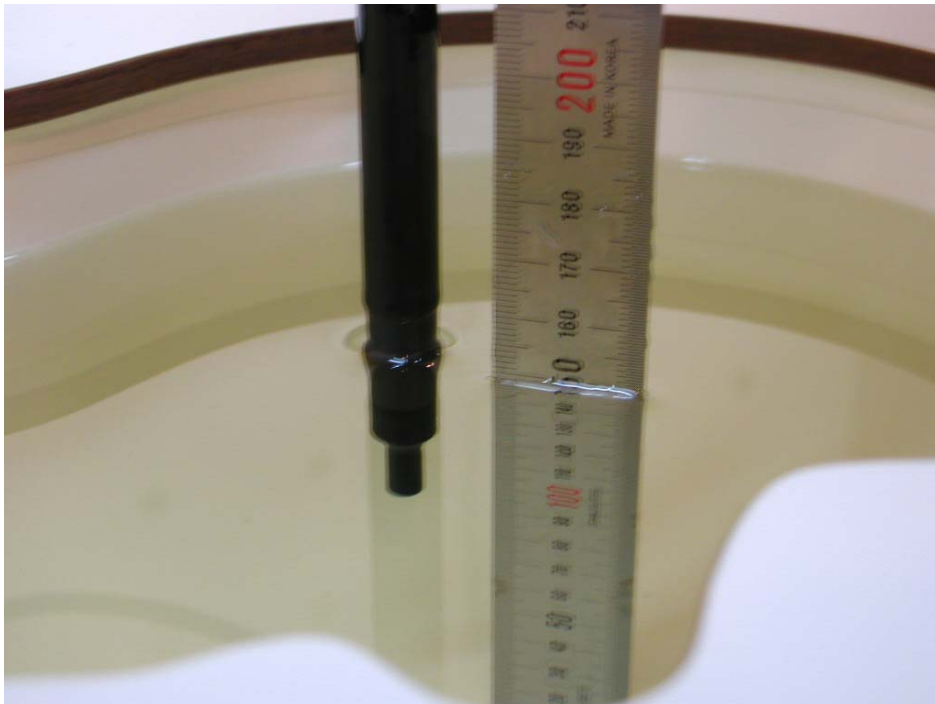

■ Test Setup Photo

[835MHz/ 1900MHz Body Tissue Liquid Depth : 15cm]

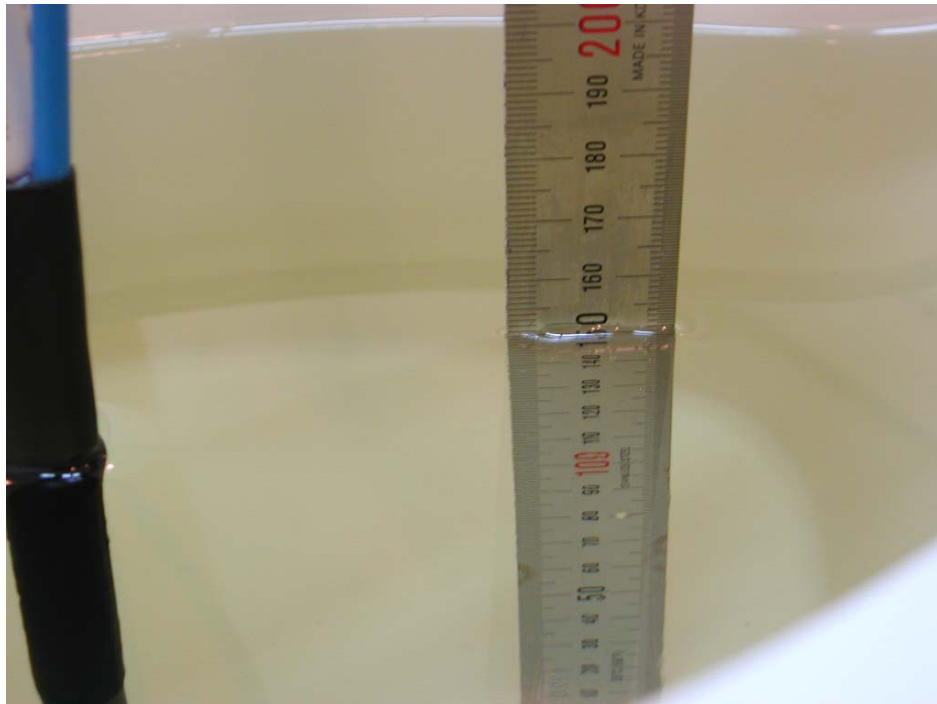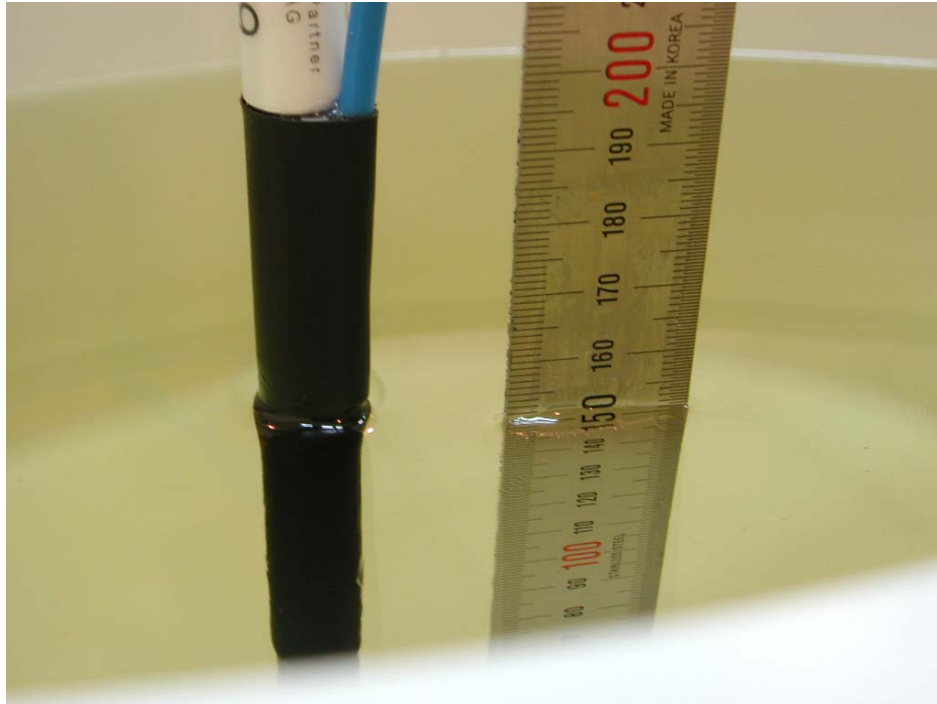

■ Test Setup Photo


[Conducted Power Measurement set-up]




■ TX-55C Battery Power test

■ TX-95C Conducted Power test


AMPS (383 channel)	
Time	TX Power (dBm)
0	27.20
2	27.20
4	27.19
6	27.18
8	27.17
10	27.17
12	27.15
14	27.14
16	27.14
18	27.12
20	27.11
22	27.10
24	27.09
26	27.08
28	27.07
30	27.05

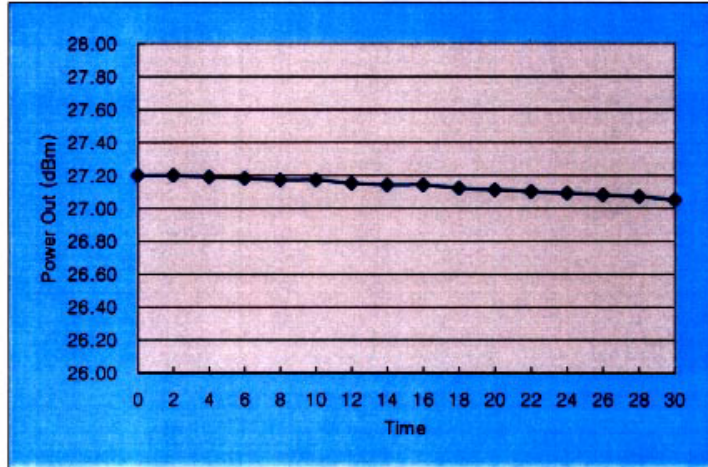

CDMA (363 channel)	
Time	TX Power (dBm)
0	25.50
2	25.50
4	25.49
6	25.48
8	25.48
10	25.47
12	25.45
14	25.44
16	25.43
18	25.43
20	25.41
22	25.40
24	25.39
26	25.38
28	25.37
30	25.37

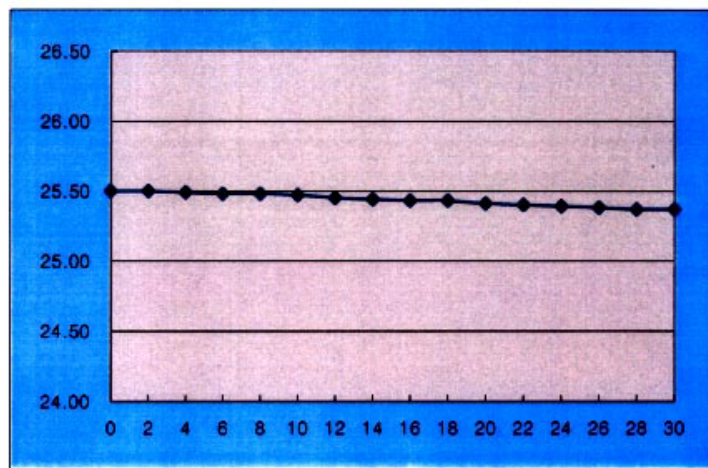

PCS CDMA (600 channel)	
Time	TX Power (dBm)
0	25.00
2	25.00
4	24.99
6	24.98
8	24.98
10	24.96
12	24.96
14	24.94
16	24.93
18	24.92
20	24.91
22	24.91
24	24.89
26	24.88
28	24.87
30	24.87

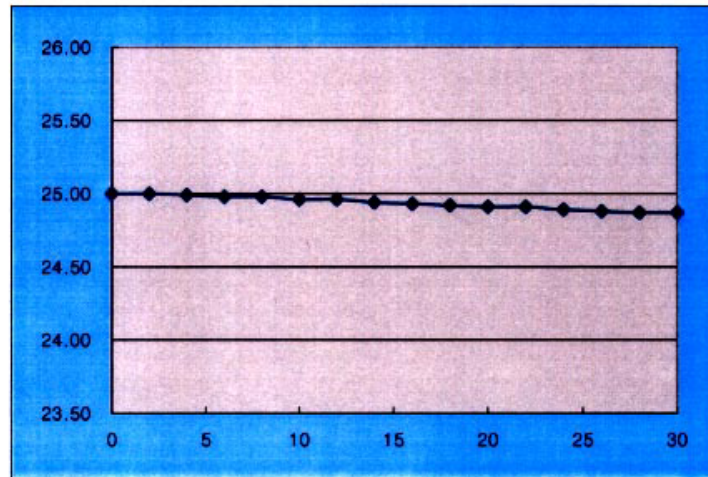

■ Test Setup Photo

