TREUN

Gateway in protective enclosure

Quickstart Guide, Safety, and Warranty

v 0.6




System description

Overview

When there is a need for high density of connected devices, a mesh network is the perfect solution for connectivity. In a mesh network. devices transmit their own sensor data and act as a relay for other devices. Relays provide the best and most efficient communication path to a gateway.

Treon Gateway connects a mesh of a few to hundreds of wireless devices to a backend. It exchanges data with the mesh network and can process, store and send data to in-premise or cloud backends. Gateway can be connected to the internet over a wired Ethernet connection or wirelessly over a WLAN or Cellular (NB-IoT, CatM1 or 2G) connection.

In protective enclosure, you can place Treon Gateway in environments, outdoor or industrial, that require higher degree of water and dust protection.

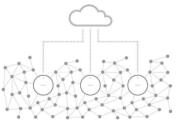

What's in the box

When you open the sales box, check that it contains the following:

- 1. Gateway in protective enclosure
- 2. Documentation

Keys and parts


A. Status light


- B. Ethernet cable gland
- C. Air vent
- D. Power cable gland
- E. Power cable
- F. Adjustable mounting brackets
- G. USB A host port
- H. Power cable connector
- Ethernet cable connector
- J. Micro SIM card slot
- K. Configuration button
- (see the image in section 1)

- L. Finger guard for power cable


Enclosure

Gateway inside enclosure





Gateway

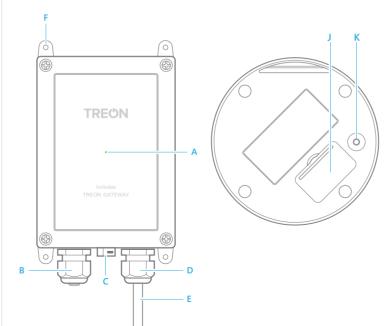

Open the enclosure

- 1. Unplug the gateway's power cable from the wall outlet.
- 2. Unscrew the four screws at the corners of the protective enclosure lid with a suitable screwdriver tool.
- 3. Open the lid carefully. Avoid bending the cable too much as it may damage the device.



Connect to the internet


You can connect the gateway to the internet with an Ethernet cable connection, a cellular connection, or a WLAN connection. Note that the Ethernet and cellular connections automatically override the WLAN connection.


Use an Ethernet cable connection

- 1. Open the protective enclosure lid as described in step 1.
- 2. Screw open the ethernet cable gland cap (B). Remove the sealing rubber (B1) and plug (B2) by pushing from inside out.
- 3. Pull RJ45 cable through cable gland cap and install rubber sealing around cable. Push rubber sealing inside RJ45 cable gland.
- 4. Attach the Ethernet cable to RJ45 connector (1)
- 5. Adjust the cable length to appropriate length and tighten the RJ45 cable gland cap.
- 6. Close the lid and tighten the screws.



Always unplug the gateway's power cable from the wall outlet before opening the enclosure. Do not remove the finger guard of the power cable (L) as this may result in electric shock.

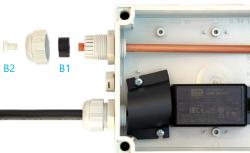

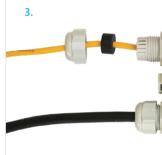






Use a cellular connection

- Open the protective enclosure lid as described in step 1.
- 2. Put your fingernail in the seam between the lid of the SIM card slot (E) and the back cover and remove the lid.
- 3. Slide the SIM card holder to the right until it unlocks, and lift the holder up.

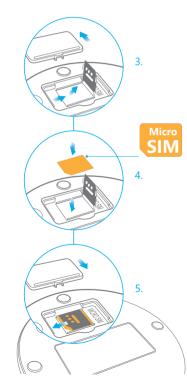

- 4. Place the micro SIM card in the holder with the contact area face down, and close the holder.
- 5. Slide the holder to the left until it locks into place, and put back the lid of the SIM card slot.
- 6. Close the protective enclosure lid and tighten the screws.

Use a WLAN connection

Open the configuration mode and set up a WLAN connection as instructed in step 4.

Power up the gateway

Make sure that the power cable is attached to the gateway (G) and close the protective enclosure lid. Plug the gateway in a wall outlet. The gateway switches on automatically. Use only the power supply unit provided together with the product.

Status light (A) colours:

Green light The gateway is connected to the internet

Blue light The gateway is trying to establish a connection to the internet.

Blinking blue The gateway is in the configuration mode

Red light

There's an error with the gateway. Open the configuration mode to see what's wrong

Configure the gateway

- 1. Open the protective enclosure lid as described in step 1. Plug the gateway back in a wall outlet.
- 2. Press the configuration button (F) until the status light (A) starts blinking. The gateway becomes a WLAN access point
- . Using your phone, computer, or tablet, connect to the access point: select treongw1-serialnumber, where serialnumber is the serial number of your gateway.
- 4. Enter your password. It has been provided separately with the gateway. Windows 10 may ask for a pin code as a primary access point password. Please use the "password" option instead. Remember to change the password later.
- 5. Open the browser on your phone or computer and go to address 192.168.0.1:3001
- Make the needed configurations. You can, for example, change the gateway access point password, check the error log, and set up a WLAN connection.
- 7. To exit the configuration mode, select Quit, or press and hold the configuration button (F) until the status light stops blinking.
- 8. When needed configurations are done, close the protective enclosure lid and tighten the screws.

Mount the gateway

- 1. Turn the four adjustable mounting brackets (E) outwards.
- 2. Attach the enclosure to the surface with four screws (diameter maximum 4mm). Screws are not included in sales package.
- 3. Ensure that the mains power plug is easily accessible

Product info

Power supply and cables

Use only the power supply unit provided together with the product. Do not use a USB cable longer than 2 meters with the product.

Operating environment

The product is dust and waterproof and it is designed for outdoor or indoor industrial environment, but it is not intended for continuous submersion. The operating temperature range of the product is from -20 to +50 °C.

The enclosure is rated to IP67

Maximum transmit power

Supported radio networks	Operating fre- quency bands	Maximum transmit- ted radio-frequency power
LTE Cat M1	B2, B3, B4, B5, B8, B20	+23 dBm
LTE NB-IOT	B2, B3, B4, B5, B8, B20	+23 dBm
2G GPRS/EGPRS	B3	+30 dBm
2G GPRS/EGPRS	B8	+33 dBm
WLAN	ISM 2.4 GHz	+17.3 dBm
Bluetooth LE/Wirepas Mesh	ISM 2.4 GHz	+4 dBm

NORWAY. This device is not allowed to be used within a 20 km radius of the centre of Ny-Ålesund at Svalbard, Norway.

CERTIFICATION INFORMATION

Manufacturer

Treon Oy, Visiokatu 3, 33720 Tampere, Finland.

EU DECLARATION OF CONFORMITY

Hereby, Treon Ov declares that the radio equipment Gateway in Protective Enclosure is in compliance Directive 2014/53/EU

https://www.treon.fi/documentation

This product contains a certified Treon Gateway.

FCC NOTICE

FCC ID: 2AR86GW11

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna

Increase the separation between the equipment and receiver

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected

Consultant the dealer or an experienced radio/TV technician for help

Radiofrequency radiation exposure information: this device complies with the radiation exposure limits prescribed for an uncontrolled environment for fixed and mobile use conditions. This device should be installed and operated with a minimum distance of 20 cm between the device and the body of the user or nearby persons.

Canada IC: 24716-GW11

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause interference, and 2. This device must accept any interference, including interference that

installé et utilisé en maintenant une distance minimum de 20 cm entre le radiateur et votre corps.

canadienne NMB-003.

Safety guide and Warranty

Introduction

Read these simple guidelines. Not following them may be dangerous or against local laws and regulations. For further information, read the user guide and visit https://www.treon.fi/documentation

The device must not be used without the finger guard of the power cable connector. Removing the finger guard may result in electric shock. The protective guard can only be removed by an authorized electrician when gateway's power cable is unplugged from the wall outlet.

Safety distance

Due to radio frequency exposure limits the gateway should be installed and operated with a minimum distance of 20 cm between the device and the body of the user or nearby persons

Care and maintenance

Handle your device with care. The following suggestions help you keep your device operational.

- · Do not open the device other than as instructed in the user guide.
- Unauthorized modifications may damage the device and violate regulations governing radio devices.
- Do not drop, knock, or shake the device. Rough handling can broak it
- Only use a soft, clean, dry cloth to clean the surface of the device. Do not clean the device with solvents, toxic chemicals or strong detergents as they may damage your device and void the warranty
- Do not paint the device. Paint can prevent proper operation.

Damage

If the device is damaged contact support@treon.fi. Only gualified personnel may repair this device.

Small children

Your device is not a toy. It may contain small parts. Keep them out of the reach of small children

Interference with medical devices

The device may emit radio waves, which could affect the operation of nearby electronics, including cardiac pacemakers, hearing aids and defibrillators. If you have a pacemaker or other implanted medical device, do not use the device without first consulting your doctor or the manufacturer of your medical device. Maintain a safe distance between the device and your medical devices and stop using the device if you observe a persistent interference with your medical device.

Storage

Always store the device with covers attached.

Recycle

Check the local regulations for proper disposal of electronic products.

The Directive on Waste Electrical and Electronic Equipment (WEEE). which entered into force as European law on 13th February 2003, result ed in a major change in the treatment of electrical equipment at end-oflife. The purpose of this Directive is, as a first priority, the prevention of WEEE, and in addition, to promote the reuse, recycling and other forms of recovery of such wastes so as to reduce disposal.



The crossed-out wheelie-bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products and batteries must be taken to separate collection at the end of their working life o not dispose of these products as unsorted municipal waste: take them for recycling. For info on your nearest recycling point, check with your local waste authority.

WARRANTY AND SOFTWARF LICENSE AGREEMENT

"By using the Treon Gateway", you are agreeing to be bound by the terms of Treon Gateway Software License Aareement, unless you return reon Gateway as part of the return policy"

Treon Limited Warranty, and Treon Software License Agreement (SLA) documents are available at the following internet address:

https://www.treon.fi/documentation

QUICKSTART GUIDE, v0.6 (2020) © 2020 Treon Oy. All rights reserved.

may cause undesired operation of the device.

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

This Class B digital apparatus complies with Canadian ICES-003

Cet appareil est conforme à la(aux) norme(s) RSS sans licence d'Industry Canada

Son utilisation est soumise aux deux conditions suivantes:

1. Cet appareil ne doit pas causer d'interférences et 2. il doit accepter toutes interférences reçues, y compris celles susceptibles d'avoir des effets indésirables sur son fonctionnement

Cet équipement respecte les limites d'exposition aux rayonnements IC RSS-102 définies pour un environnement non contrôlé. Il doit être

Cet appareil numérique de classe B est conforme à la norme