

Test Setup Photographs

EUT Front



EUT Back



Page: 1 of 5 Version:1.0



EUT Rear






EUT Photographs









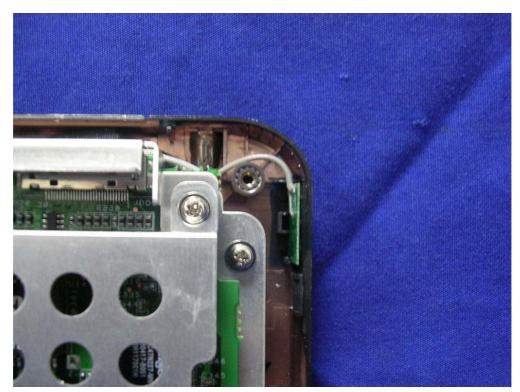





QuieTek

Appendix - Probe Calibration

Miniature Isotropic RF Probe

M/N: ALS-E-020

S/N: 264

2450MHz Head Calibration page 2~11 2450MHz Body Calibration page 12~21



NCL CALIBRATION LABORATORIES

Calibration File No.: CP-634

Client: QUIETEK

CERTIFICATE OF CALIBRATION

It is certified that the equipment identified below has been calibrated in the NCL CALIBRATION LABORATORIES by qualified personnel following recognized procedures and using transfer standards traceable to NRC/NIST.

Equipment: Miniature Isotropic RF Probe 2450 MHz

Manufacturer: APREL Laboratories Model No.: ALS-E-020 Serial No.: 264

HEAD Calibration

Calibration Procedure: SSI/DRB-TP-D01-032-E020-V2
Project No: QUIB-Probe-Cal-5210

Calibrated: 21st March 2006 Released on; 21st March 2006

This Calibration Certificate is Incomplete Unless Ascompanied with the Calibration Results Summary

Released By:

NCL CALIBRATION LABORATORIES

51 SPECTRUM WAY NEPEAN, ONTARIO CANADA K2R 1E6 Division of APREL Lab TEL (613) 820-4988 FAX (610) 820-4161

Temperature of the Tissue:

21 °C +/- 0.5°C

We the undersigned attest that to the best of our knowledge the calibration of



Division of APREL Laboratories.

Introduction

This Calibration Report reproduces the results of the calibration performed in line with the SSI/DRB-TP-D01-032-E020-V2 E-Field Probe Calibration Procedure. The results contained within this report are for APREL E-Field Probe E-020 264.

References

SSI/DRB-TP-D01-032-E020-V2 E-Field Probe Calibration Procedure
IEEE 1528 "Recommended Practice for Determining the Peak Spatial-Average Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques"
SSI-TP-011 Tissue Calibration Procedure

Conditions

Probe 264 was a new probe taken from stock prior to calibration.

Ambient Temperature of the Laboratory: 22 $^{\circ}$ C +/- 0.5 $^{\circ}$ C Temperature of the Tissue: 21 $^{\circ}$ C +/- 0.5 $^{\circ}$ C

We the undersigned attest that to the best of our knowledge the calibration of this probe has been accurately conducted and that all information contained within this report has been reviewed for accuracy.

Stuart Nicol

Yi Pan

Page 2 of 10



Division of APREL Laboratories.

Calibration Results Summary

Probe Type:

E-Field Probe E-020

Serial Number:

264

Frequency:

2450 MHz

Sensor Offset:

THE RESERVE THE PARTY OF

1.56 mm

Sensor Length:

2.5 mm

Tip Enclosure:

Ertalyte*

Tip Diameter:

<5 mm

Tip Length:

60 mm

The same

The state of the state of

290 mm

Sensitivity in Air

Channel X: Channel Y: Channel Z: 1.2 μV/(V/m)² 1.2 μV/(V/m)² 1.2 μV/(V/m)²

Diode Compression Point:

95 mV

Page 3 of 10

Total Length:

^{*}Resistive to recommended tissue recipes per IEEE-1528



Division of APREL Laboratories.

Sensitivity in Head Tissue

Frequency:

2450 MHz

Epsilon:

39.2 (+/-5%)

Sigma:

1.80 S/m (+/-5%)

ConvF

Channel X:

5.0

Channel Y:

5.0

Channel Z:

5.0

Tissue sensitivity values were calculated using the load impedance of the APREL Laboratories Dag-Pag.

Boundary Effect:

Uncertainty resulting from the boundary effect is less than 2% for the distance between the tip of the probe and the tissue boundary, when less than 2.44mm.

Spatial Resolution:

The measured probe tip diameter is 5 mm (+/- 0.01 mm) and therefore meets the requirements of SSI/DRB-TP-D01-032 for spatial resolution.


Page 4 of 10



NCL Calibration Laboratories

Division of APREL Laboratories.


Receiving Pattern 2450 MHz (Air)

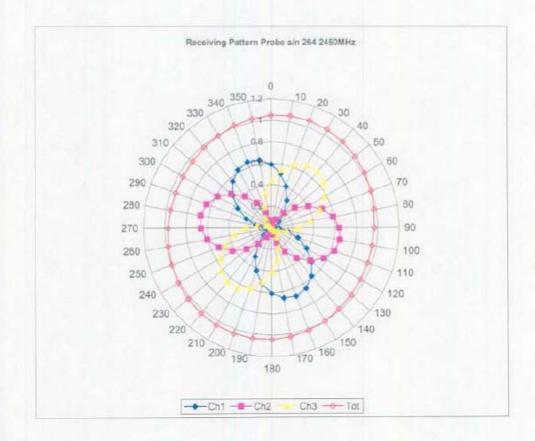


Page 5 of 10

This page has been reviewed for content and attested to on Page 2 of this document.




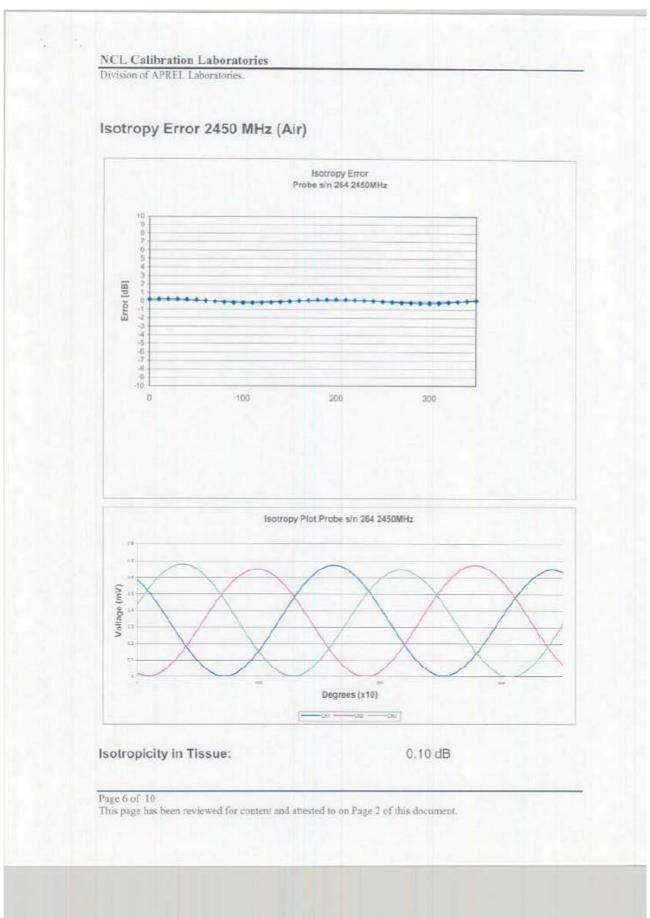



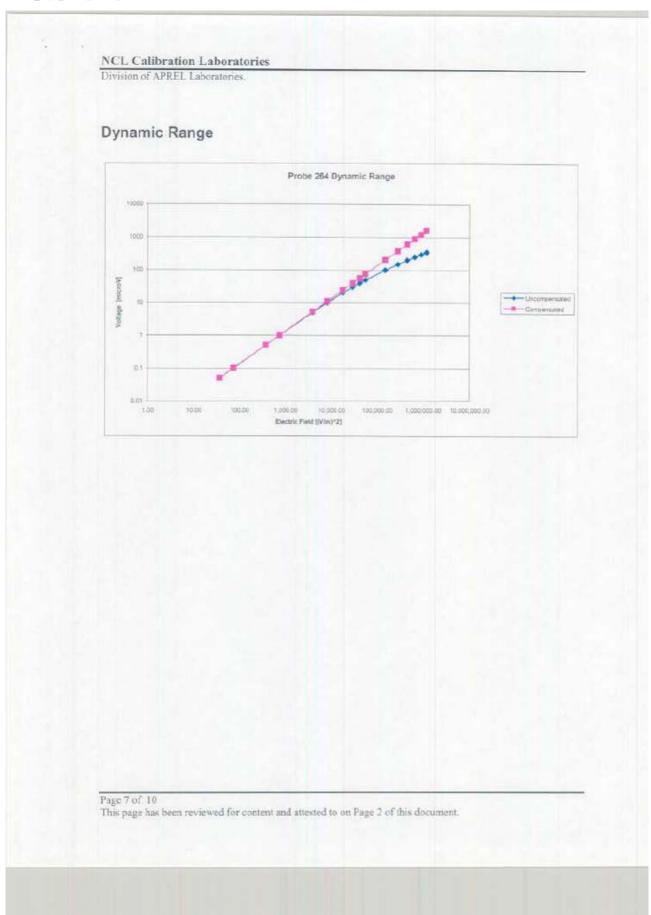



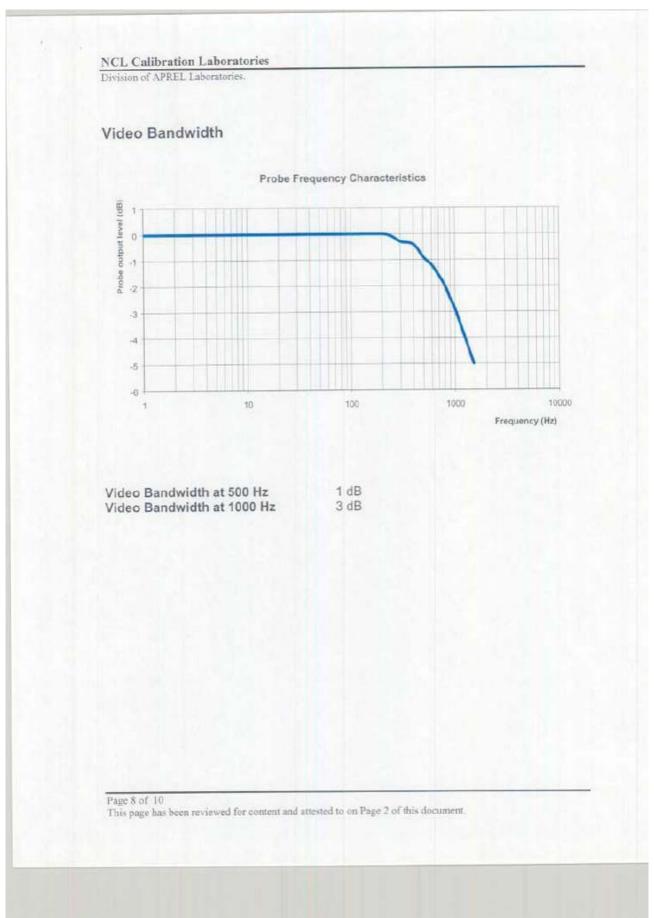



Division of APREL Laboratories.

Conversion Factor Uncertainty Assessment

Frequency:

2450MHz

Epsilon:

39.2 (+/-5%)

Sigma:

1.80 S/m (+/-5%)

ConvF

Channel X: 5.0

7%(K=2)

Channel Y:

5.0

7%(K=2)

Channel Z:

5.0

7%(K=2)

To minimize the uncertainty calculation all tissue sensitivity values were calculated using a load impedance of 5 M Ω .

Boundary Effect:

For a distance of 2.4mm the evaluated uncertainty (increase in the probe sensitivity) is less than 2%.

Page 9 of 10

This page has been reviewed for content and attested to on Page 2 of this document.

Page: 10 of 21



NCL Calibration Laboratories Division of APREL Laboratories. Test Equipment The test equipment used during Probe Calibration, manufacturer, model number and, current calibration status are listed and located on the main APREL server R:\NCL\Calibration Equipment\Instrument List. Page 10 of 10 This page has been reviewed for content and attested to on Page 2 of this document.

Page: 11 of 21



NCL CALIBRATION LABORATORIES

Calibration File No.: CP-641

Client: QUIETEK

CERTIFICATE OF CALIBRATION

It is certified that the equipment identified below has been calibrated in the NCL CALIBRATION LABORATORIES by qualified personnel following recognized procedures and using transfer standards traceable to NRC/NIST.

Equipment: Miniature Isotropic RF Probe 2450 MHz

Manufacturer: APREL Laboratories Model No.: ALS-E-020 Serial No.: 264

BODY Calibration

Calibration Procedure: SSI/DRB-TP-D01-032-E020-V2 Project No: QUIB-Probe-Cal-5210

> Calibrated: 21st March 2006 Released on: 21st March 2006

This Calibration Certificate is incomplete Unless Accompagied with the Calibration Results Summary

Released By:

NCL CALIBRATION LABORATORIES

51 SPECTRUM WAY NEPEAN, ONTARIO CANADA, K2R 1E6 Division of APREL Lab TEL (613) 820-4988 FAX (613) 820-4161



Division of APREL Laboratories.

Introduction

This Calibration Report reproduces the results of the calibration performed in line with the SSI/DRB-TP-D01-032-E020-V2 E-Field Probe Calibration Procedure. The results contained within this report are for APREL E-Field Probe E-020 264.

References

SSI/DRB-TP-D01-032-E020-V2 E-Field Probe Calibration Procedure
IEEE 1528 "Recommended Practice for Determining the Peak Spatial-Average
Specific Absorption Rate (SAR) in the Human Body Due to Wireless
Communications Devices: Experimental Techniques"
SSI-TP-011 Tissue Calibration Procedure

Conditions

Probe 264 was a new probe taken from stock prior to calibration.

Ambient Temperature of the Laboratory: 22 °C +/- 0.5°C Temperature of the Tissue: 21 °C +/- 0.5°C

We the undersigned attest that to the best of our knowledge the calibration of this probe has been accurately conducted and that all information contained within this report has been reviewed for accuracy.

Stuart Nicol

Yi Pan

Page 2 of 10



NCL Calibration Laboratories Division of APREL Laboratories. Calibration Results Summary Probe Type: E-Field Probe E-020 Serial Number: 264 Frequency: 2450 MHz Sensor Offset: 1.56 mm Sensor Length: 2.5 mm Tip Enclosure: Ertalyte* Tip Diameter: <5 mm Tip Length: 60 mm Total Length: 290 mm *Resistive to recommended tissue recipes per IEEE-1528 Sensitivity in Air Channel X: 1.2 µV/(V/m)2 Channel Y: 1.2 µV/(V/m)2 Channel Z: 1.2 µV/(V/m)2 **Diode Compression Point:** 95 mV Page 3 of 10 This page has been reviewed for content and attested to on Page 2 of this document.



Division of APREL Laboratories.

Sensitivity in Body Tissue

Frequency:

2450 MHz

Epsilon:

52.7 (+/-5%)

Sigma:

1.95 S/m (+/-5%)

ConvF

Channel X: 5.2

Channel Y: 5.2

Channel Z: 5.2

Tissue sensitivity values were calculated using the load impedance of the APREL Laboratories Daq-Paq.

Boundary Effect:

Uncertainty resulting from the boundary effect is less than 2% for the distance between the tip of the probe and the tissue boundary, when less than 2.44mm.

Spatial Resolution:


The measured probe tip diameter is 5 mm (+/- 0.01 mm) and therefore meets the requirements of SSI/DRB-TP-D01-032 for spatial resolution.

Page 4 of 10




Division of APREL Laboratories.


Receiving Pattern 2450 MHz (Air)

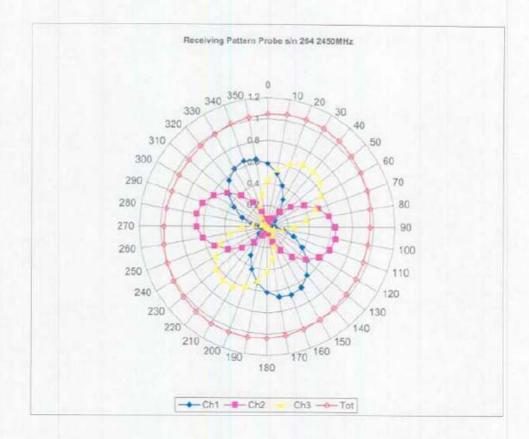


QuieTek

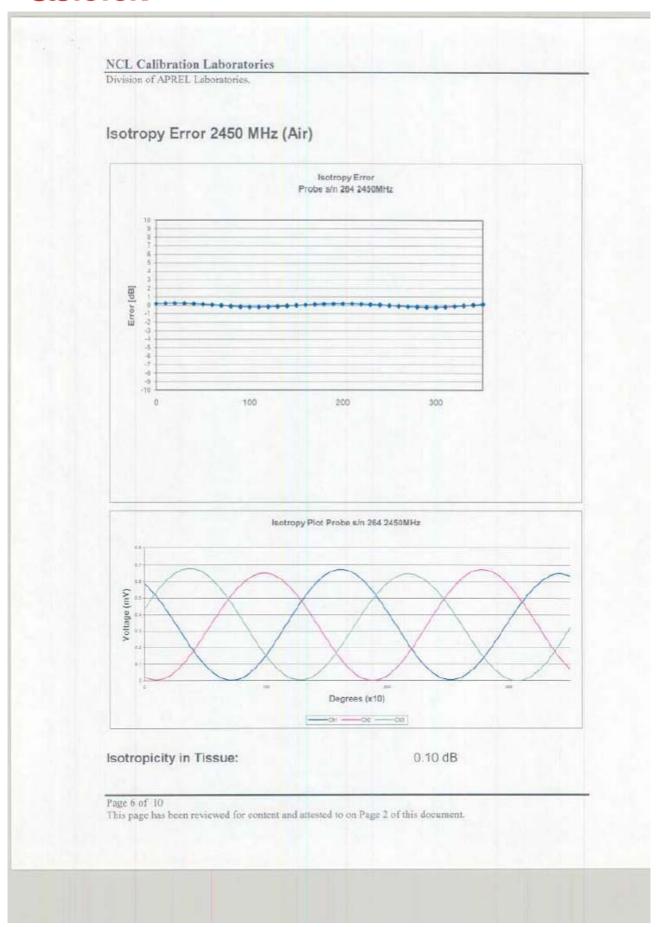



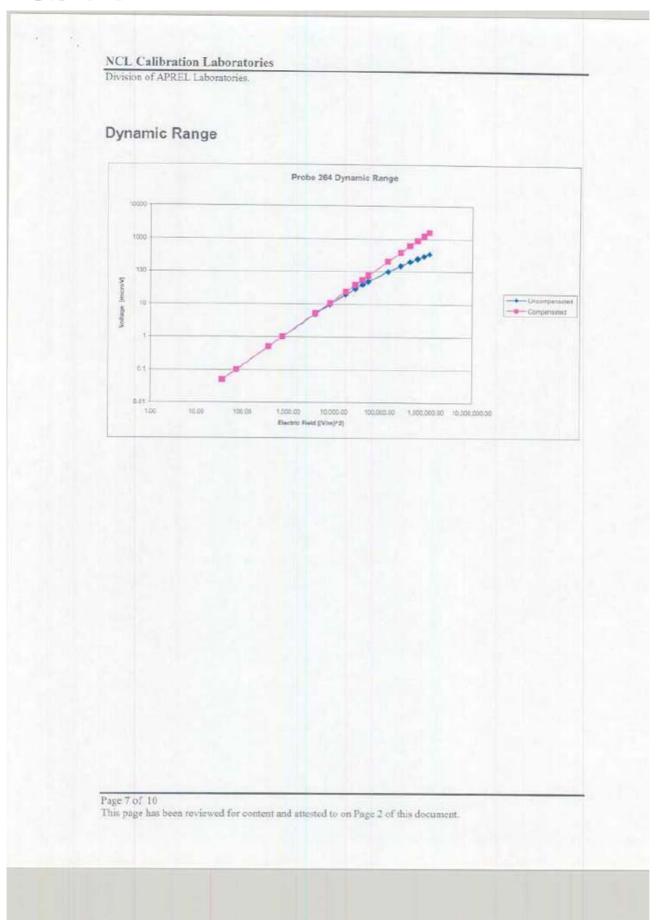



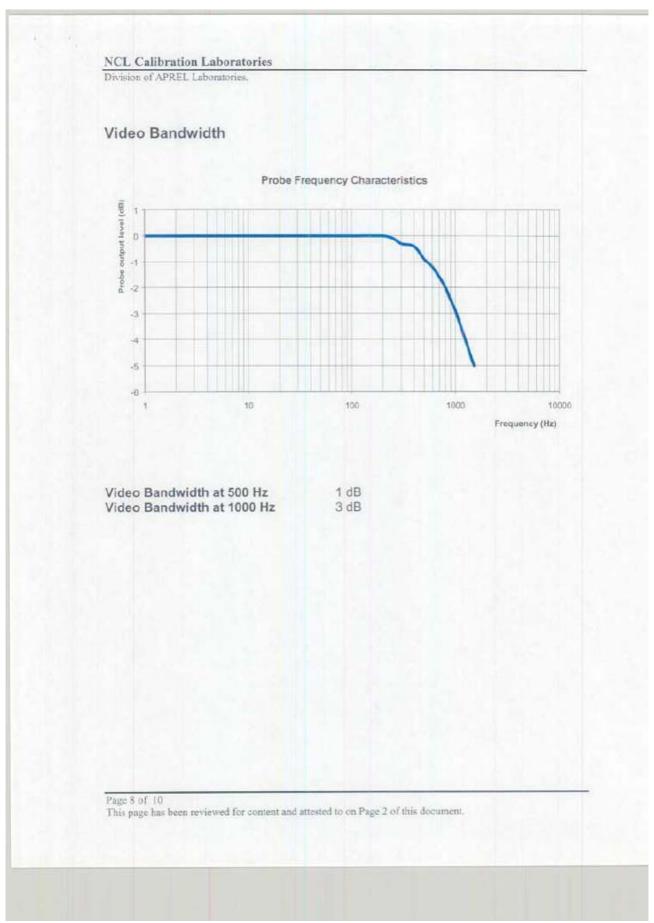

Page: 19 of 21



Division of APREL Laboratories.

Conversion Factor Uncertainty Assessment

Frequency:

2450MHz

Epsilon:

52.7 (+/-5%)

Sigma:

1.95 S/m (+/-5%)

ConvF

Channel X:

5.2

7%(K=2)

Channel Y:

5.2

7%(K=2)

Channel Z:

5.2

7%(K=2)

To minimize the uncertainty calculation all tissue sensitivity values were calculated using a load impedance of $5~\mathrm{M}\Omega$.

Boundary Effect:

For a distance of 2.4mm the evaluated uncertainty (increase in the probe sensitivity) is less than 2%.

Page 9 of 10



NCL Calibration Laboratories Division of APREL Laboratories. Test Equipment The test equipment used during Probe Calibration, manufacturer, model number and, current calibration status are listed and located on the main APREL server R:\NCL\Calibration Equipment\Instrument List. Page 10 of 10 This page has been reviewed for content and attested to on Page 2 of this document.



Appendix - Dipole Calibration

Validation Dipole 2450MHz

P/N: ALS-D-2450-S-2

S/N: QTK-319

NCL CALIBRATION LABORATORIES

Calibration File No: DC-409-1 Project Number: QTKB-Dipole Cal-5228

CERTIFICATE OF CALIBRATION

It is certified that the equipment identified below has been calibrated in the NCL CALIBRATION LABORATORIES by qualified personnel following recognized procedures and using transfer standards traceable to NRC/NIST.

Quietek Validation Dipole

Manufacturer: APREL Laboratories
Part number: ALS-D-2450-S-2
Frequency: 2.45 GHz
Serial No: QTK-319

Customer: Quietek

Calibrated: 15 June 2006 Released on: 15 June 2006

Released By:

NCL CALIBRATION LABORATORIES

51 SPECTRUM WAY NEPEAN, ONTARIO CANADA K2R 1E6 Division of APREL Lab. TEL: (613) 820-4988 FAX: (613) 820-4161 Division of APREL Laboratories.

Calibration Results Summary

The following results relate the Calibrated Dipole and should be used as a quick reference for the user.

Mechanical Dimensions

Length:

53.5 mm

Height:

30.4 mm

Electrical Specification

SWR:

1.21 U

Return Loss:

-20.7 dB

Impedance:

 47.7Ω

System Validation Results

Frequency	1 Gram	10 Gram	Peak
2.45 GHz	48.07	25.65	95.6



Calibrated by

Approved by:

Division of APREL Laboratories.

Introduction

This Calibration Report has been produced in line with the SSI Dipole Calibration Procedure SSI-TP-018-ALSAS. The results contained within this report are for Validation Dipole QTK-319. The calibration routine consisted of a three-step process. Step 1 was a mechanical verification of the dipole to ensure that it meets the IEEE/APREL mechanical specifications. Step 2 was an Electrical Calibration for the Validation Dipole, where the SWR, Impedance, and the Return loss were assessed. Step 3 involved a System Validation using the ALSAS-10U, along with QTK E-020 130 MHz to 26 GHz E-Field Probe Serial Number 212.

References

SSI-TP-018-ALSAS Dipole Calibration Procedure
SSI-TP-016 Tissue Calibration Procedure
IEEE 1528 "Recommended Practice for Determining the Peak Spatial-Average
Specific Absorption Rate (SAR) in the Human Body Due to Wireless
Communications Devices: Experimental Techniques"

Conditions

Dipole QTK-319 was received for calibration.

Ambient Temperature of the Laboratory:

22 °C +/- 0.5°C

Temperature of the Tissue:

20 °C +/- 0.5°C

Tide

Dipole Calibration Results

Mechanical Verification

IEEE Length	IEEE Height	Measured Length	Measured Height
51.5 mm	30.4 mm	53.5 mm	30.4 mm

Tissue Validation

Body Tissue 2450 MHz	Measured
Dielectric constant, ε _r	52.5
Conductivity, σ [S/m]	1.78

Calibrated by

Division of APREL Laboratories.


Electrical Calibration

Test	Result	
S11 R/L	-20.7 dB	
SWR	1.21 U	
Impedance	47.7 Ω	

The Following Graphs are the results as displayed on the Vector Network Analyzer.

S11 Parameter Return Loss




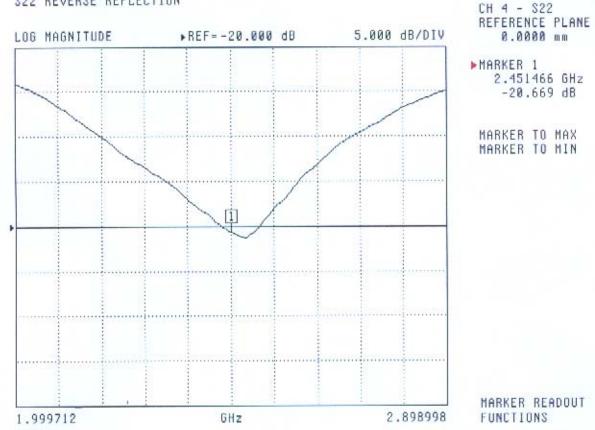

Division of APREL Laboratories.


SWR

S22 REVERSE REFLECTION

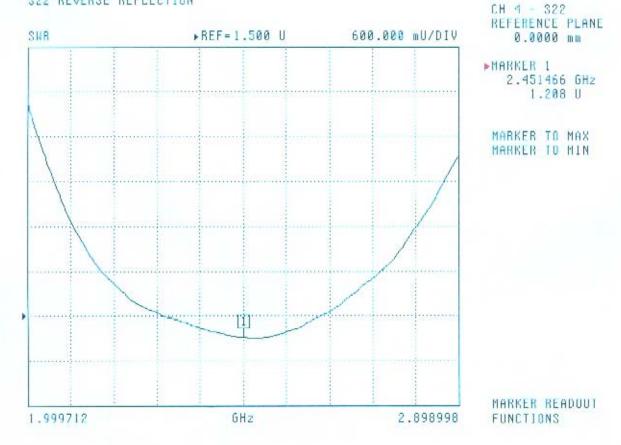

Calibrated by Approved by:

Smith Chart Dipole Impedance

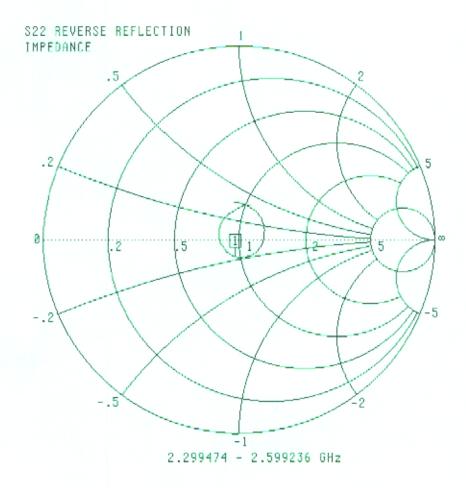

CH 4 - S22 REFERENCE PLANE 0.0000 mm

►MARKER 1 2.451466 GHz 47.685 Ω -8.809 jΩ


MARKER TO MAX MARKER TO MIN

MARKER READOUT FUNCTIONS

1 }

System Validation Results Using the Electrically Calibrated Dipole

Frequency	1 Gram	10 Gram	Peak Above Feed Point
2.45 GHz	48.07	25.65	95.6

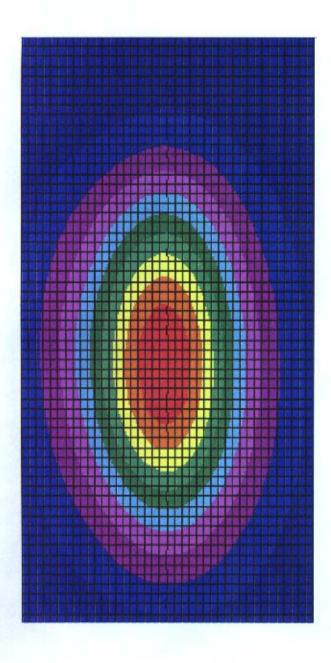

Calibrated by

Division of APREL Laboratories.

Test Equipment

The test equipment used during Probe Calibration, manufacturer, model number and, current calibration status are listed and located on the main APREL server R:\NCL\Calibration Equipment\Instrument List

Calibrated by