

Silencer BT 2.0 Instruction Manual



Table of Contents

About Your Earbuds	3
Earbud Overview	4
How to Properly Fit the Silencer BT 2.0	5
Device Function	6
Connect to Walker's LINK App	7
Walker's LINK APP Features	8
FCC Compliance	12
Limited Warranty	13
Warranty Registration	14

Contact Us

WEDGITE

WEBSITE	CUSTOMER SERVICE
www.walkersgameear.com	CONTACT & HOURS
	Toll Free: 877-269-8490
GSM, LLC	
P.O. Box 535189	CALL CENTER HOURS
Grand Prairie, TX 75053-9504	Mon - Fri / 8 AM - 5 PM (CST)

CLICTOMED CEDVICE

About Your Earbuds



Touch Interface

Control your ear buds with ease, using gesture-based touch controls.



Bluetooth Enabled

Connect your Silencer BT 2.0 earbuds to your phone to control with ease on our Walker's LINK app, free on iOS and Android.



Sleep Mode

Conserve device battery with our automatic device shut off.



Extended Battery Life

Never cut a session short with over 10 hours of battery life in a single charge.



Operation Modes

Switch between Universal, High Frequency, Power Boost, and Clear Voice operation modes to be prepared for any situation.

Earbud Overview



How to Properly Fit the Silencer BT 2.0

Fitment Instructions

Press the arrows in the top right of the Walker's Link app, or swipe right, to access the Fitment Instruction page. On this page, you will find detailed instructions and diagrams to assist in properly fitting your earplugs. To return to main screen of app, press the arrows in the top left corner, or swipe left.

When inserting ear buds grab by sides as to not activate ear buds with touch surface. Far buds must be off to verify a complete seal has been made.



Step 1: Select the proper size ear bud tip to fit your ear canal. This ear bud should form a complete seal, blocking out sound. This is critical to achieve the highest possible NRR rating and protect your


hearing.

Step 2: Compress the foam tip by rolling between your fingers until it becomes malleable

Step 3: Quickly insert the foam tips into the ear canal as deep as it is comfortable to wear

Step 4: Hold in place for 10 seconds to ensure plug expands and seals in the ear canal.

Outside noises should be significantly reduced. If not, remove the plugs and perform step 2-4 again until a good seal is made

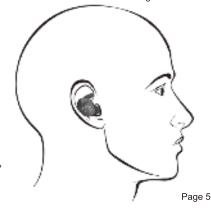

Device Function

Power On Device: Press and hold touch surface for 2 seconds to power on each ear bud. Ear buds will play an audible "Walker's" sound clip to indicate the unit has powered on

Ambient Volume Adjust: Ambient Volume is controlled by the touch sensor controls located on the housing of both ear buds.

- Increase Ambient Volume: Swipe Up
- Decrease Ambient Volume: Swipe Down

NOTE:

When Ambient volume reaches minimum there will be a double beep.

When Ambient volume reaches maximum there will be a double beep.

Operation Modes: Earbuds come with four operation modes. Cycle through operations by double tapping the touch interface on the **right** earbud.

- Universal: General use with no filter applied
- Clear Voice: Use that emphasizes vocal frequencies
- High Frequency: Amplified higher and vocal frequencies
- Power Boost: Amplified version of Universal

Charging the Ear Buds: To charge your Silencer ear buds, insert them into the included charging case. When inserted, ear buds will automatically shut down and begin charging. A red LED will shine to indicate devices are charging. LED will turn blue and then shut off when earbuds are fully charged.

Charging the Ear Bud Case: Your charging case will store a charge in order to always be ready to charge your ear buds. To recharge the battery in the case, plug in a Micro USB cable, then plug the other end into a USB power source or adapter. Your case will shine a red LED while charging and your earbuds and case will shine a blue LED and power off when complete. Charging dock will provide up to 3 full charges.

NOTE: If case has under 10% charge, it will flash a red LED. When user inserts earbuds.

Note: To pair the Silencer BT 2.0 to a new device, press and hold the power touch surface from an off state for 7 seconds. This forgets the previously paired device. Silencer BT 2.0 will confirm by playing a "Pairing" voice clip and the LED with flash red and blue.

Get the Walker's LINK APP









Bluetooth Settings (Left Earbud Only)

Use the LEFT earbud to control device Bluetooth Settings.

Pairing the device

To enter pairing mode, from the powered down state, press and hold the touch zone for 5 seconds. An audible notification will play ("Pairing") when the device enters pairing mode.

Pairing Mode

- In this mode, the unit will advertise itself and allow itself to be paired to a new device.
- The device will enter this mode automatically when no previous paired device profile is present.
- The LED will alternately flash red and blue
- Pairing mode will timeout after 60 seconds and enter Reconnectable Mode.
- The system will play the "Pairing" audio clip on mode activation
- The advertising name will be: "Silencer BT 2.0"

Paired Mode

- While paired to a device, the LED will remain off.
- The system will play the "Connected" audio clip when entering this mode.
- If the device disconnects, it will enter Reconnectable Mode.

Phone Call

- To answer a call, tap the touch zone
- To reject a call, press and hold the touch zone for 1sec
- · To end a call, tap the touch zone

Audio/Music

- · To Play music, tap the touch zone
- To Pause music, tap the touch zone during playback
- · To skip to next track, short press the BT button twice
- To skip to previous track, short press the BT button three times

NRR Information

Although hearing protectors can be recommended for protection against the harmful effects of impulsive noise, the Noise Reduction Rating (NRR) is based on the attenuation of continuous noise and may not be an accurate indicator of the protection attainable against impulsive noise such as gunfire.

The level of noise entering a person's ear, when hearing protector is worn as directed, is closely approximated by the difference between the A-weighted environmental noise level and the NRR.

Example:

- 1. The environmental noise level as measured at the ear is 92 dBA.
- 2. The NRR is 22 decibels (dB)
- 3. The level of noise entering the ear is approximately equal to [92dB-22dB] Caution: For noise environments dominated by frequencies below 500 Hz the C-weighted environmental

noise level should be used.

MEANS STD. DEV.	29.8 3.2	26.1 2.9	29.7 3.1	 38.7 4.0		45.0 3.2	
				OSA Clas	35 =	BL	

NRR = 24 dB

Use these laboratory-derived data for comparison purposes only. The amount of protection afforded in field use is often significantly lower depending on how the protectors are filled and worn.

FCC Compliance



PCC Stewment

This decrea contrains with Part 15 of the PCC Rules. Operation is subject to the following but conditions. (1) this decrea may not cause harmful and related and (2) this deviation must accept any mentioned received, yithding interference that may cause understand operation.

FCC Caption:

Changes or modifications not expressly approved by the party responsible for compliance south and the user's authority to operate the assignment.

ROTE. This equipment has been habed and found to comply with the least for Close B eligible downs, pursuant its part 15 of the PCC Plates. These lettes are charged to private rescentive presention against hereful interfluence in a resolvential installation. This equipment generates uses and don reduce toda frequency energy and if you installed and used in accordance with the estimations, may cause harmful interfluence to radiu or between recoptions, which can be determined by tunning the equipment off and on. The same is procuraged to by to commit the interfluence to one or more of the following research.

- Recrised or relocate the receiving antenna.
- . Increase the expandion between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

Shielded intellerance cable must be used with the equipment in order to comply with the limits for a difficill device journaled to Subject B of PArt 15 of PCC Rules.

Specifications and designs are solved to charge without any reduce or obligation on the part of the manufacturer

The Davice has been evaluated to meet general RF exposure requirement. The Davice can be used in portable response condition without restriction.

IC NOTE

Tris device contains itemos-exempt transmitter(s)/tecevents) that comply with timosation, Science and Economic Geoekgeneri Canada's tiomics-exempt RSS(s). Operation is subject to the following two conditions:

- 1. This device may red zaves relettenesse.
- The divide most accept any interference, including interference that may cause processed question of the revision Unmitted third persons accept the literate contents date in present appearal and conforms acceptance.

CNR s'innovation. Sciences et Developpement économique Caracte applicative aux aggareis radio exempts de tionne. L'institution est autorisée sur dans roccitans suivantes.

- L'oppareil res riot pare pendure de brouitieps;
- L'append doit acceptir tout brouflage refinitectique auté, même si le trouflage sel succeptito d'en comprometre le funcionnement.

The device reside for exemption from the number evaluation limits in section 2.5 of ASS-102 and compliance with RSS-102 RF exposure, users can obser Canadian information on RF exposure and compliance.

Le dispositif rencontre l'exemption des finites consentes d'évaluation dans le section 2 d de RSS-102 etle conformés le l'exposition de RSS-102 d', utilisateurs peut obtann l'information careadienne sont esposition et le conformét de d'

Limited Warranty

Walker's warranties this product to the original purchaser to be free from defects in materials and workmanship, under normal use and conditions for a period of one year parts from the date of purchase.

Under this warranty, this device will be replaced or repaired at our option. Copy of the original receipt or gift receipt, is required for any warranty service. To enact the warranty, the customer is required to contact our Customer Service Group at 877-268-8490 to receive a Return Authorization (RA) number PRIOR to sending the product back.

This warranty is void if any of the following occur:

- 1. The device is not accompanied by a copy of the receipt or gift receipt from the original purchaser.
- 2. The device has been tampered with, opened or punctured.
- 3. The device has been immersed in water or other liquids, allowed to be filled with dirt or dust, or otherwise physically abused.
- 4. The one year limited warranty has expired. Please inquire about other options from your Customer Service Representative.

This shall be the exclusive written warranty of the original purchaser and neither this warranty nor any other warranty, expressed or implied, shall extend beyond the 12-month period listed above. In no event shall Walker's, Inc. be liable for consequential property damage, or consequential personal injury. (Some states do not allow limitations on implied warranties or exclusions of consequential damages, so that these restrictions may not apply to you). This warranty gives you specific legal rights, and you may have other rights, which vary from state to state,

Record Serial # for future reference: Serial #

Return page 12 of manual to Walker's, Inc. - PO Box 535189 - Grand Prairie, TX 75053-5189

Warranty Registration

Model:	Date of Purchase:	
Purchased From:		-
City:	State:	Zip:
Primary Use:		_
Your Name:		
Address:		
City:	State:	Zip:
Email Address:	Serial #:	

©2018 Google LLC, used with permission. Google and the Google logo are registered trademarks of Google LLC. Apple and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.