




WH67 (WHB670 and WHM631 DECT Wireless Headset


Quick Start Guide

V1.0

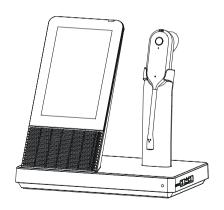




Package Contents

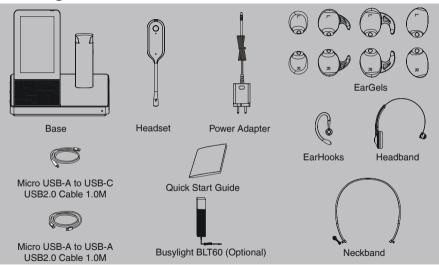


We recommend that you use the included accessories, and other accessories may have compatibility issues that prevent them from working properly. Yealink provides a USB device manager client - Yealink USB Connect, you can download it on the Yealink website support.yealink.com.


How to Connect

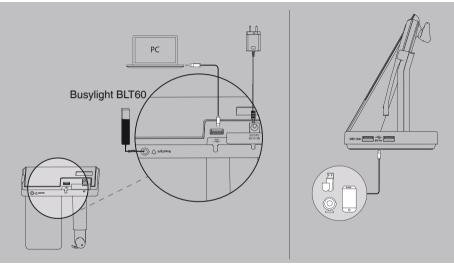


How to Charge the Mobile Phone and Headset

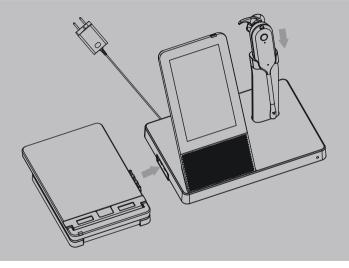

How to Wear

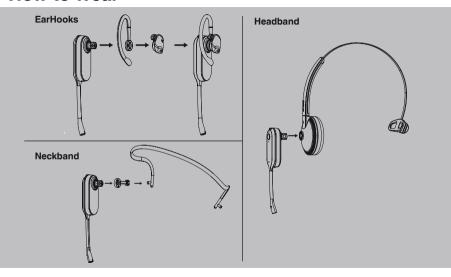

How to Use

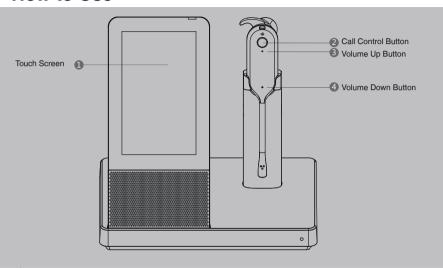

 $[\]bigcirc$ Before using the Teams button functions, you should install the Microsoft Teams client on your PC.

No.	Item	Action & Function
1	Touch Screen	Display phone's system status. Tap to select and highlight touch-sensitive screen items.
2	Call Control Button	 Press to answer, reject, or end a call. Hold 2 seconds to activate Cortana (this requires Microsoft's support). Press to invoke the Teams client in the idle state.
3	Volume Up Button	Press to turn up volume.
4	Volume Down Button	Press to turn down volume.

We sincerely recommend you to use Yealink Ticketing system (https://ticket.yelink.com) to submit all your technical issues.

Regulatory Notices

Operating Ambient Temperatures

- Operating temperature: +32 to 104°F (0 to 40°C)
- Relative humidity: 5% to 90%, noncondensing
 Storage temperature: -22 to +160°F (-30 to +70°C)


Warranty

Our product warranty is limited only to the unit itself, when used normally in accordance with the operating instructions and the system environment. We are not liable for chamage or loss resulting from the use of this product, or for any claim from a third party. We are not liable for problems with Yasilink device arising from the use of this product; we are not liable for financial diamages, lost profits, claims from third parties, etc., arising from the use of this product.

Explanation of the symbols

- DC symbol
- is the DC voltage symbol.

 WEFF Warning symbol.
- To avoid the potential effects on the environment and human health as a result of the presence of hazardous

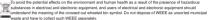

Restriction of Hazardous Substances Directive (RoHS)

This device complies with the requirements of the EU RoHS Directive. Statements of compliance can be obtained by contacting support@vealink.com.

Safety Instructions

Save these instructions. Read these safety instructions before use!

A General Requirements

- Before you install and use the device, read the safety instructions carefully and observe the situation during opera
 - ion.

 During the process of storage transportation and operation please abuses keen the desice dry and clean applied.
 - collision and crash.

 Please attempt not to dismantle the device by yourself. In case of any discrepancy, please contact the appointed
 - maintenance center for repair.

 Please refer to the relevant laws and statutes while using the device. Legal rights of others should be respected as well

Environmental Requirements

- Place the device at a well-ventilated place. Do not expose the device under direct sunlight.
- Keep the device dry and free of dust.
 Do not place the device on or near any inflammable or fire-vulnerable object, such as rubber-made materials.
- Keep the device away from any heat source or bare fire, such as a candle or an electric heater.

Derating Requirements

- . Do not let a child operate the device without guidance.
- Do not let a child play with the device or any accessory in case of accidental swallowing
 Please use the accessories provided or authorized by the manufacturer only.
- The power supply of the device shall meet the requirements of the input voltage of the device. Please use the provided surge protection power socket only.
- Before plugging or unplugging any cable, make sure that your hands are completely dry.
- Do not spill liquid of any kind on the product or use the equipment near water, for example, near a bathtub, washbowl, kitchen sink, wet basement or near a swimming pool.
- bowl, kitchen sink, wet basement or near a swimming pool.
 During a thunderstorm, stop using the device and disconnect it from the power supply. Unplug the power plug and the Asymmetric Dicital Subscriber Line (ADSL) wisted pair (the radio frequency cable) to avoid lightning strike.
- If the device is left unused for a rather long time, disconnect it from the power supply and unplug the power plug.
 When there is smoke emitted from the device, or some abnormal noise or smell, disconnect the device from the
- When there is smoke emitted from the device, or some abnormal noise or smell, disconnect the device from the power supply, and unplug the power plug immediately.
- Contact the specified maintenance center for repair.
- . Do not insert any object into equipment slots that is not part of the product or auxiliary product.
- Before connecting a cable, connect the grounding cable of the device first. Do not disconnect the grounding cable until you disconnect all other cables.
- Battery Requirements

- Do not immerse the battery into water, which could short-circuit and damage the battery.
- Do not expose the battery to an open flame or leave the battery where it could be subjected to extremely high temperatures, which could cause the battery to explode.
- Do power the handset off before removing the battery.
- Do not try to use the battery for the power supply of any device other than this handset.
 Do not open or mutilate the battery, released electrolyte is corrosive and may cause damage to your eyes or skin.
- Use only the rechargeable battery pack delivered with the handset or those rechargeable battery packs expressly recommended by Yealink
- Defective or exhausted battery should never be disposed of as municipal waste. Return old battery to the battery supplier, a licensed battery dealer or a designated collection facility.

Cleaning Requirements • Refore cleaning the device, disconnect if from the power supply

- Before cleaning the device, disconnect it from the power supply.
- Use a piece of soft, dry and anti-static cloth to clean the device.
- Keep the power plug clean and dry.

FCC Statement

This device complies with part 15 of the FCC Rutes. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to cental the equipment. Note: This exponent has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15.

of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if no installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that littlerence will not occur in a particular installation. If this equipment does cause harmful interference to guarantee that littlerence will not occur in a particular installation. If this equipment does cause harmful interference to the control of the c

- to correct the interference by one or more of the following measures:

 —Regrient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 —Consult the dealer or an experienced radio (TV technician for help.

IC Statement

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

(1) this device may not cause interference; and

(2) this device must accept any interference, including interference that may cause undesired operation of the device. CAN ICES-3(B)
(BS-3(B) control of the device of the present appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'ex-

ploitation est autorisée aux deux conditions suivantes :
(1) l'appareil ne doit pas produire de brouillage;

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.NMB-3(B)

Radiation Exposure Statement

For base

This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. Cet émetteur ne doit pas être Co-obacé ou ne fonctionnant en même temps ou aucure untre antenne ou émetteur. Cet

équipement devrait être installé et actionné avec une distance minimum de 20 centimètres entre le radiateur et votre corps.

For Headset: The device has been tested and comply with FCC and IC SAR limits. L'appareil a été testé et est conforme

For readset: I he device has been tested and comply with FCC and IC SAR limits. Lapparel a ete teste et est conforme aux restrictions FCC et IC SAR.

Contact Information

Made in China

YEALINK NETWORK TECHNOLOGY CO., LTD. 309, 3rd Floor, No. 16, Yun Ding North Road, Huli District.

Xiamen City, Fujian, P.R.C YEALINK (EUROPE) NETWORK TECHNOLOGY B.V. Strawinskylaan 3127, Atrium Building, 8th floor, 1077ZX

Amsterdam, The Netherlands
YEALINK (USA) NETWORK TECHNOLOGY CO., LTD.
999 Peachtree Street Suite 2300, Fullon, Allanta, GA. 20309, USA



430104001353