




5" High Definition Pan & Tilt Monitor

LF915HD
LF915-2HD

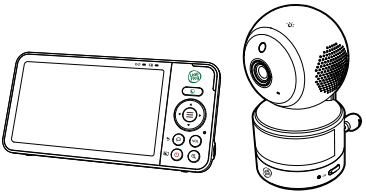

Parent Guide
This guide contains important information.
Please keep it for future reference.

Need help?
Visit leapfrog.com/support

Key Features

Color and B&W Automatic Night Vision

Thanks to the latest starlight sensor and noise suppression technology, you can check in on your baby 24/7 with the finest clarity. Night vision is no longer just black-and-white, you can choose to see your baby in color at night!

Humidity and Temperature Sensor

Rest assured of the environment your baby is in with the built-in real-time temperature and humidity sensor. It lets you know when the room is outside a comfortable temperature and humidity range.

Lullabies and Soothing Sounds

Comforting and engaging your baby can be done easily and from a distance. Choose from 5 lullabies and 5 soothing sounds to help lull your baby back to sleep.

Night Light

Need some additional lighting near your baby for those bedtime stories? The built-in night light on the baby monitor can help with that. You can control the night light directly on the Baby Unit, or remotely from the Parent Viewer.

Pan, Tilt, and Zoom

Watch your curious little ones closely as they wiggle and move around in bed. Get a 360-degree panoramic view, see as many as 80 degrees up and down, and zoom up to 8x to spot more details with ease.

Motion and Sound Sensor

With adjustable alerts on noise or motion detected from the baby monitor, give yourself a peace of mind with an extra set of eyes.

Technical Specifications

Frequency control	Crystal controlled PLL synthesizer
Transmit frequency	Baby Unit: 2406-2475MHz Parent Viewer: 2406-2475MHz
Channels	24
LCD	5" Color LCD (IPS 1280x720 pixels)
Nominal effective range	Maximum power allowed by FCC and IC. Actual operating range may vary according to environmental conditions at the time of use.
Power requirements	Parent Viewer: 3.7V 5000mAh Lithium-ion battery Baby Unit power adapter: Output: 5V DC @ 1.5A Parent Viewer power adapter: Output: 5V DC @ 2A

Credits:
The Background Noise sound file was created by Caroline Ford, and is used under the Creative Commons license.
The Stream Noise sound file was created by Caroline Ford, and is used under the Creative Commons license.
The Crickets At Night sound file was created by Mike Koenig, and is used under the Creative Commons license.
The Heart Beat sound file was created by Zarabadeu, and is used under the Creative Commons license.



Read our complete warranty policy online at leapfrog.com/warranty.



Visit our website for more information about our products, downloads, resources and more.

Important Safety Instructions

The applied nameplate is located at the bottom of the Baby Unit's base. When using your equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:


- Follow all warnings and instructions marked on the product.
- Adult setup is required.
- CAUTION:** Do not install the Baby Unit at a height above 2 meters.
- This product is not a substitute for adult supervision of the infant. Supervising the infant is the parent's or caregiver's responsibility. This product could cease operating, and therefore you should not assume it will continue working properly for any given period of time. Further, this is not a medical device and should not be used as such. This product is intended to assist you in supervising your baby.
- Do not use this product near water. For example, do not use it next to a bath tub, wash bowl, kitchen sink, laundry tub or swimming pool, or in a wet basement or shower.
- CAUTION:** Use only the battery provided. There may be a risk of explosion if a wrong type of battery is used for the Parent Viewer. The battery cannot be subjected to high or low extreme temperature and low air pressure at high altitude during use, storage or transportation. Disposal of battery into fire or a hot oven, or mechanically crushing or cutting or the battery can result in an explosion. Leaving the battery in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid or gas. Battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas. Dispose of used battery according to the information in **The RBRC seal**.
- Use only the adapters included with this product. Incorrect adapter polarity or voltage can seriously damage the product.
 - Power adapter information:
Baby Unit output: Output: 5V DC 1.5A; VTech Telecommunications Ltd.; Model: VT07EUS05150
Parent Viewer output: Output: 5V DC 2A; VTech Telecommunications Ltd.; Model: VT07EUS05200
 - Rechargeable battery information:
Zhuhai Great Power Energy Co., Ltd.; Lithium battery, 3.7V 5000mAh; Model: GSP806090-5Ah-3.7V-ISP

Get Started


1. Connect the Baby Monitor

Notes:


- The rechargeable battery in the Parent Viewer is built-in.
- Use only the power adapters supplied with this product.
- Make sure the Parent Viewer and the Baby Unit are not connected to the switch controlled electric outlets.
- Connect the power adapters in a vertical or floor mount position only. The adapters' prongs are not designed to hold the weight of the Parent Viewer and the Baby Unit, so do not connect them to any ceiling, under-the-table, or cabinet outlets. Otherwise, the adapters may not properly connect to the outlets.
- Make sure the Parent Viewer, the Baby Unit and the power adapter cords are out of reach of children.
- To maintain compliance with the FCC's RF exposure guidelines, place the Baby Unit at least 20cm from nearby persons.

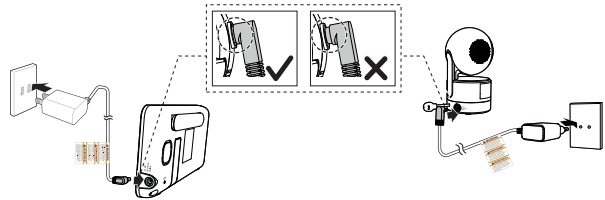

Overview - Parent Viewer

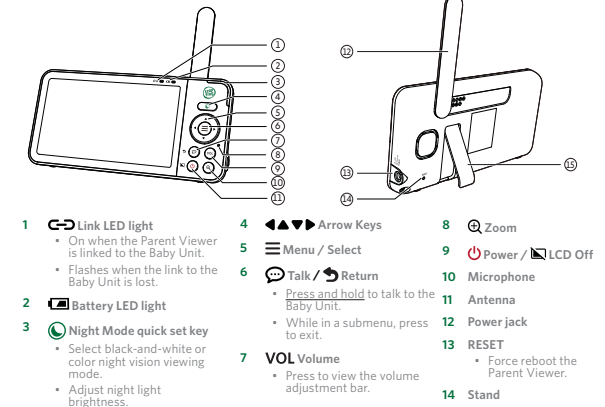

Overview - Baby Unit

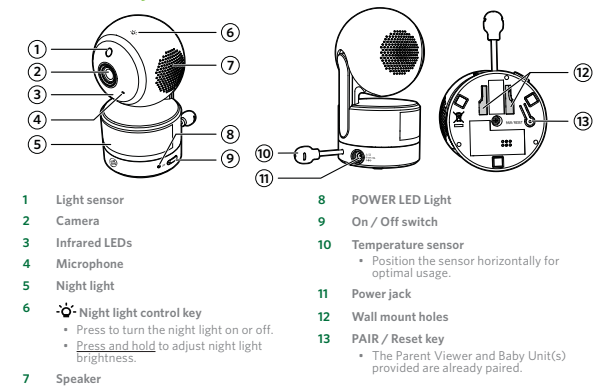

- The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- Unplug this product from the wall outlet before cleaning.
- Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning. Do not cut off the power adapters to replace them with other plugs, as this causes a hazardous situation.
- Do not allow anything to rest on the power cords. Do not install this product where the cords may be walked on or crimped.
- This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your dealer or local power company.
- Do not overload wall outlets or use an extension cord.
- Do not place this product on an unstable table, shelf, stand or other unstable surfaces.
- This product should not be placed in any area where proper ventilation is not provided. Slots and openings in the back or bottom of this product are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register.
- Never push objects of any kind into this product through the slots because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.
- To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the product other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.
- You should test the sound reception every time you turn on the units or move one of the components.
- Periodically examine all components for damage.
- There is a very low risk of privacy loss when using certain electronic devices, such as baby monitors, cordless telephones, etc. To protect your privacy, make sure the product has never been used before purchase, reset the baby monitor periodically by powering off and then powering on the units, and power off the baby monitor if you will not use it for some time.
- Children should be supervised to ensure that they do not play with the product.
- The product is not intended for use by persons (including children) with reduced physical, sensory or mental

Charge the Parent Viewer battery before use

When you connect and turn on the Parent Viewer, the battery charges automatically.

Notes:

- Before using the baby monitor for the first time, charge the Parent Viewer battery for 12 hours. When the Parent Viewer battery is fully charged, the battery icon becomes solid .
- It takes longer to charge the battery when the Parent Viewer is turned on. To shorten the charging time, turn the Parent Viewer off while charging.
- The standby time varies depending on the Baby Unit sensitivity levels you set, your actual usage time and the age of the battery.


The battery icon on the screen indicates the battery status (see the following table).

Battery Indicators	Battery Status	Action
The screen displays . The light flashes.	The battery has very little power left and may only be used for a short time.	Charge without interruption (about 30 minutes).
The battery icon becomes solid .	The battery is fully charged.	To keep the battery charged, connect it to AC power when not in use.

Basic Operation - Parent Viewer


Adjust Parent Viewer's speaker volume

- Press **VOL** to open the volume adjustment bar.
- Press to increase the speaker volume and to decrease the speaker volume.

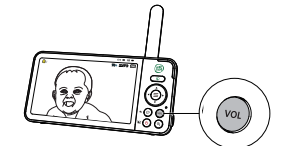


Talk to your baby via the Baby Unit

- Press and hold the key.
- When the icon displays on the screen, speak to your Parent Viewer. Your voice is transmitted to the Baby Unit.
- When finished talking, release the key and hear your baby again.

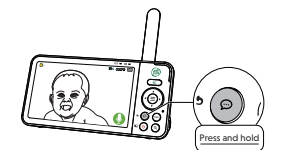

Zoom


Press to zoom in or out. The zoom sequence is , , then .

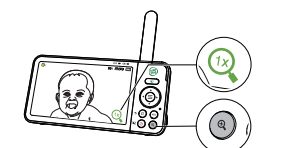

Turn on/off the Parent Viewer screen

You can turn on or off the Parent Viewer screen without powering off the Parent Viewer. You will still be able to hear sounds from the Baby Unit.


- Press on the Parent Viewer to turn off the screen.
- Press any key on the Parent Viewer to turn on the screen again.

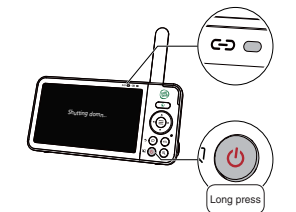

Use the menu

Press to enter the menu, choose a menu item, or save a setting. You can use the Parent Viewer for advanced settings or operations, such as to play or stop the Baby Unit's lullaby, or to adjust the Baby Unit sound sensitivity. While in the menu:

- Press , , or to scroll among the menu options.
- Press to select an item, or to save a setting.
- Press or to return to the live video.
- Press to go to the **Help & Info** page.

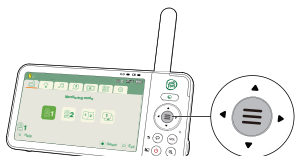

capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

SAVE THESE INSTRUCTIONS

Cautions

- Use and store the product at a temperature between 32°F and 104°F.
- Do not expose the product to extreme cold, heat or direct sunlight. Do not put the product close to a heating source. Batteries should not be exposed to excessive heat such as bright sunshine or fire.
- Warning—Strangulation Hazard**—Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 3 ft (0.9m) away). Do not remove this tag.
- Never place the Baby Unit(s) inside the baby's crib or playpen. Never cover the Baby Unit(s) or Parent Viewer with anything such as a towel or a blanket.
- Other electronic products may cause interference with your baby monitor. Try installing your baby monitor as far away from these electronic devices as possible: wireless routers, radios, cellular telephones, intercoms, room monitors, televisions, personal computers, kitchen appliances and cordless telephones.

Precautions for users of implanted cardiac pacemakers


Cardiac pacemakers (applies only to digital cordless devices):
Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless devices and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

Pacemaker patients

- Should keep wireless devices at least six inches from the pacemaker.
 - Should NOT place wireless devices directly over the pacemaker, such as in a breast pocket, when it is turned ON. WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless devices.
- Electromagnetic fields (EMF)**
This LeapFrog product complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user's manual, the product is safe to be used based on scientific evidence available today.

2. Power On or Off the Baby Monitor


- Slide the On/Off switch to **ON** to power on your Baby Unit.
- After the Parent Viewer is fully charged, **press and hold** until the welcome screen appears.

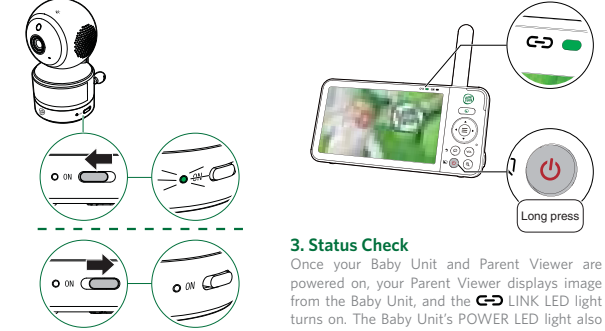

3. Status Check

Once your Baby Unit and Parent Viewer are powered on, your Parent Viewer displays image from the Baby Unit, and the LINK LED light turns on. The Baby Unit's POWER LED light also turns on.

What's Included

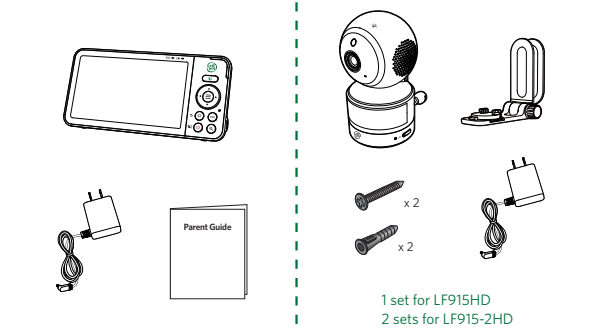

1 set for LF915HD
2 sets for LF915-2HD

4. Positioning the Baby Monitor



Notes:

- To avoid interference from other electronic devices, place your baby monitor at least 3 feet (1 meter) away from devices such as wireless routers, microwaves, cell phones and computers.

Caution:

- The default volume of your Parent Viewer is level 3, and the maximum volume is level 5. If you experience a high-pitched screaming noise from your baby monitor while positioning:
 - Make sure your Baby Unit and Parent Viewer are more than 3 feet (1 meter) apart, **OR**
 - Lower the volume of your Parent Viewer.

Parent Unit Icons

Main Menu Icons
Monitoring mode (For LF915-2HD only)

		Baby unit 1 in Single mode
		Baby unit 2 in Single mode
		Split mode
		Patrol mode

Night light

		Turn On/Off night light.
		Select Auto Brightness mode (or) Adjust the fixed level night light brightness.

Lullaby

		Stop melody playing.
		Play all melodies.
		View all Songs and play one of the five melodies and five soothing sounds.
		Lullaby Timer
		Set a timer to stop playing melodies after 15, 30, or 60 minutes, or let them play non-stop.

Detection

		Sound
		Select sound Sensitivity level.
		Turn on/off Sound Detection Alert.
		Turn on/off Auto Wake Up function.
		(See Sound Detection and Auto Wake Up sections to learn more)

Tip: Do your icons look a little different? Your baby monitor has undergone a recent software update. Go to our online manual for an overview of the latest icons (See [Online Help](#)).

Detection (continued)

		Motion
		Turn on/off Motion Alert.
		Select motion Sensitivity level.
		(See Motion Detection section to learn more)
		Temperature
		Turn on/off Temperature Alert.
		When you turn it on, the parent unit beeps whenever the room temperature detected by the baby unit falls outside the set temperature range.
		Select the Minimum temperature of the temperature alert range.
		Select Maximum temperature of the temperature alert range.
		Select temperature Format.
		Change the temperature display format to Fahrenheit (°F) or Celsius (°C).

LCD settings

		Adjust parent unit screen Brightness.
		Turn on/off Dim Mode.
		(See Dim Mode section to learn more)

Camera settings

		Turn on/off Status LED indicator.
		When you turn it on, the POWER LED light on the baby unit to turn on/off or flash to indicate the camera's conditions.
		Adjust the baby unit's speaker Volume.

General settings

		Turn on/off Low Battery Alert Tone.
		When you turn it on, the parent unit beeps when the battery is low.
		Turn on/off No Link Alert Tone.
		When you turn it on, the parent unit beeps when the link between the parent unit and the baby unit is lost.
		Add Baby Unit
		Remove Baby Unit

Status Bar Icons

		Current view status
		The Baby Unit number that is being viewed when in:
		- Single Baby Unit mode.
		- Patrol mode
		(° For LF915-2HD or pairing with LF920-0HD)
		- Split mode
		(° For LF915-2HD or pairing with LF920-0HD)
		Split mode
		(° For LF915-2HD or pairing with LF920-0HD)
		Patrol mode
		(° For LF915-2HD or pairing with LF920-0HD)
		Black and white night vision is activated.
		Color night vision is activated.
		Motion detection and alert is turned on.
		Sound detection and alert is turned on.
		Melodies or soothing sounds are playing.
		Night light is turned on and the automatic brightness setting is turned off.
		Night light is turned on and the automatic brightness setting is turned on.
		Parent Viewer speaker is muted.
		Temperature alert is turned on.
		Humidity is lower than 30%.
		Humidity is within 30-60%.
		Humidity is higher than 60%.
		70°F °F Temperature is lower than 68°F.
		°F Temperature is between 68-75°F.
		°F Temperature is higher than 75°F.
		Battery level indicator

Parent Viewer Icons (continued)

- Alert Icons
- Displays when Parent Viewer's battery is low and needs charging.
- Displays when motion is detected by Baby Unit.
- Displays when sound is detected by Baby Unit.
- Displays when the temperature detected by Baby Unit exceeds the set maximum.
- Displays when the temperature detected by Baby Unit is lower than the set minimum.

Night Vision (B&W and Color)

The Baby Unit has infrared LEDs that allow you to see your baby clearly at night or in a dark room. When the Baby Unit being viewed detects low light levels, the infrared LEDs switch on automatically. When Black and White Night Vision mode is activated, appears on the screen. When Color Night Vision mode is activated, appears on the screen.

Notes

- It is normal to see a short white glare on your Parent Viewer screen as the Baby Unit is adapting to the dark environment.
- If you adjust the night vision mode while night vision is not activated, the new settings will be saved and applied the next time it activates.

Tip

- The video quality may vary depending on the surrounding environment and interfering factors like lightings, objects, colors and backgrounds. Adjust the Baby Unit's angle or place the Baby Unit at a higher elevation to prevent glare and blurry displays.

Night Vision Mode	Description
	B&W Night Vision Suitable for extremely dark or low light environments. Images will be in black-and-white.
	Color Night Vision Suitable for low-light room conditions with night light as an assisting light source. Images will be in color.

Change your night vision viewing mode

- Press the **Night Mode quick set key** to view the Night Mode menu.
- Press or to choose for black-and-white night vision viewing or for color night vision viewing.

Sound Detection and Auto Wake Up

Adjust Sound Detection Sensitivity

You can turn on **Sound Detection Alert** and adjust the Baby Unit's **Sound Sensitivity** to only detect your desired level of sounds. When the Baby Unit detects sounds that exceed the chosen level, the Parent Viewer screen turns on if it has been switched off or dimmed, and the Baby Unit transmits the detected sounds to the Parent Viewer. You will immediately be able to see and hear your baby.

If you have turned on **Sound Detection Alert**, the Parent Viewer beeps when the Baby Unit detects sounds.

Sound Sensitivity Level	Level 3 (Highest)	Level 2 (Medium)	Level 1 (Lowest)
Description	The Parent Viewer screen and speaker turn on for very small sounds, including background noises from your baby's room.	The Parent Viewer screen and speaker turn on for babbling and louder sounds from your baby. The Parent Viewer remains quiet when your baby makes soft sounds.	The Parent Viewer screen and speaker turn on only for loud crying or screeching sounds from your baby. The Parent Viewer remains quiet when your baby makes soft sounds.

Motion Detection

Adjust Motion Detection Sensitivity

You can turn on **Motion Alert** and adjust the Baby Unit's **Motion Sensitivity** to only detect your desired level of motion. When the Baby Unit detects motions that exceed the chosen level, the Parent Viewer screen turns on if it has been switched off or dimmed, and the Baby Unit displays the live video feed. You will immediately be able to see and hear your baby.

If you have turned on **Motion Alert**, the Parent Viewer beeps when the Baby Unit detects movements.

Motion Sensitivity Level	Level 3 (Highest)	Level 2 (Medium)	Level 1 (Lowest)
Description	The Parent Viewer screen and speaker turn on for small motions, such as yawning or stretching.	The Parent Viewer screen and speaker turn on for normal daily motions, such as people walking around the house.	The Parent Viewer screen and speaker only turn on for large motions, such as children running or jumping around.

Dim Mode

The Parent Viewer display will dim to conserve energy after 5 minutes of inactivity, in which there were neither any key pressed nor alert received from the Baby Unit.

5 minutes of inactivity

Press any button

For LF915-2HD and Pairing with LF920-0HD Only

Monitoring mode

Single CAM mode

Select Baby Unit 1 or Baby Unit 2 to view the image from the selected Baby Unit.

Patrol mode

Select Patrol mode as your monitoring mode to alternately view the image from Baby Units and every 10 seconds.

Split mode

Select Split mode as your monitoring mode to view the images from both Baby Units at once.

Note

- While in Split mode, you can press or to highlight the view of the Baby Unit 1 or Baby Unit 2 and hear the sounds transmitted from the highlighted Baby Unit.

Mount the baby unit on a dry wall (optional)

Notes

- Check for reception strength and the Baby Unit's viewing angle before drilling the holes.
- The types of screws and anchors you need depend on the composition of the wall. You may need to purchase the screws and anchors separately to mount your Baby Units.

- Place the wall mount bracket on a wall and then use a pencil to mark the top and the bottom holes as shown. Remove the wall mount bracket and drill two holes in the wall (7/32 inch drill bit).
- If you drill the holes into a stud, go to step 3.
 - If you drill the holes into an object other than a stud, insert the wall anchors into the holes. Tap gently on the ends with a hammer until the wall anchors are flush with the wall.
- Align the wall mount bracket and screws with the holes in the wall as shown. Tighten the screw in the middle hole first, so that the wall mount bracket position is fixed. You can tighten the other screw in the top hole.
- Place the Baby Unit on the wall mount bracket. Tighten the screw into the threaded socket at the bottom to secure the Baby Unit.
- You can maximize your Baby Unit's viewing angles by tilting the wall mount bracket. Hold the Baby Unit, and then rotate the knob in an anti-clockwise direction. This will loosen the joint of the wall mount bracket. Tilt your Baby Unit up or down to adjust to your preferred angle. Then, rotate the knob in a clockwise direction to tighten the joint and secure the angle.

Troubleshooting	
Symptom	Try this
Why does the baby monitor not respond normally?	Try the following (in the order listed) for a common cure: 1. Disconnect the power to the the Baby Unit(s) and Parent Viewer. 2. Wait a few seconds before connecting power back to the Baby Unit(s) and Parent Viewer. 3. Turn on the Baby Unit(s) and the Parent Viewer. 4. Wait for the Parent Viewer to synchronize with the Baby Unit(s). Allow up to one minute for this to take place.
Why doesn't the Baby Unit's and Parent Viewer's power LED turn on when I switch on the units?	The Parent Viewer may not be connected to power. Insert the appliance plug into the power jack of the Parent Viewer and put the adapter in a wall socket. Then, press the button on the Parent Viewer to establish connection with the Baby Unit. The Baby Unit may not be connected to power. Insert the appliance plug into the power jack of the Baby Unit and put the adapter in a wall socket. Then, slide the On/Off switch on the Baby Unit to establish connection with the Parent Viewer.
Why doesn't my Parent Viewer charge when connected to AC power?	Make sure your power source is not controlled by a wall switch.
Why are my images in black and white?	The images are in black white during night-time or in a dark room when night vision is automatically activated. You can also choose to view your baby at night in color, see Night Vision (B&W and Color) to learn how.
Why is the Baby Unit producing a high-pitched noise?	The Parent Viewer and Baby Unit(s) may be too close to each other. - Move the Parent Viewer away from the Baby Unit(s) until the noise stops (OR) - Turn down the volume of your Parent Viewer.
Why does the Parent Viewer beep?	The Baby Unit(s) may be out of range. Move the Parent Viewer closer to the Baby Unit(s) (but not less than 3 feet). The Parent Viewer may not have enough battery for the Parent Viewer to perform normally. Charge the Parent Viewer until the battery icon becomes solid . The temperature of your baby's room may be too high or too low.
Why can't I hear any sounds from the Parent Viewer? Why can't I hear my baby cry?	The Parent Viewer speaker volume may be too low or muted. Press VOL to open the volume adjustment menu, then press to increase the speaker volume. Or you can use the Parent Viewer menu to change the Parent Viewer's sound sensitivity to the highest level (level 5), see Sound Detection and Auto Wake Up .
Why can't I establish a connection? Why does my connection cut off every now and then? Why are there sound interruptions?	The Baby Unit(s) may be out of range. Move the Parent Viewer closer to the Baby Unit(s) (but not less than 3 feet). Other electronic and wireless products may cause interference with your baby monitor. Try installing your baby monitor as far away from these devices as possible. If you powered on only one Baby Unit but have two paired to the Parent Viewer, your Parent Viewer may display and the LINK LED light flashes. Switch to the Baby Unit you have turned on via the menu.

The RBRC seal

The RBRC seal on the Li-ion battery indicates that VTech Communications, Inc. is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States and Canada. The program provides a convenient alternative to placing used Li-ion batteries into the trash or municipal waste, which may be illegal in your area.

VTech's participation makes it easy for you to drop off the spent battery at local retailers participating in the program or at authorized VTech product service centers. Please call 1 (800) 8 BATTERY for information on Li-ion battery recycling and disposal bans/restrictions in your area. VTech's involvement in this program is part of its commitment to protecting our environment and conserving natural resources.

The RBRC Seal and 1 (800) 8 BATTERY® are registered trademarks of Call2recycle, Inc.

FCC and IC regulations

FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The Baby Unit shall be installed and used such that parts of all persons' body are maintained at a distance of approximately 8 in (20 cm) or more. The transmitter and antenna of the Parent Viewer shall be held at least 1 in (2.5 cm) from your face. This Class B digital apparatus complies with Canadian requirement: CAN ICES-3 (B)/NMB-3(B).

Industry Canada

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device. The term "IC" before the certification/registration number only signifies that the Industry Canada technical specifications were met. This product meets the applicable Innovation, Science and Economic Development Canada technical specifications.

RF radiation exposure statement

The product complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The Baby Unit should be installed and operated with a minimum distance of 8 in (20 cm) between the Baby Unit and all persons' body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. This equipment complies also with Industry Canada RSS-102 with respect to Canada's Health Code 6 for Exposure of Humans to RF Fields.

California Energy Commission battery charging testing mode

This baby monitor meets the California Energy Commission (CEC) regulations for energy consumption. Your baby monitor is set up to comply with the energy-conserving standards right out of the box. Follow the instructions to install and charge the battery. The CEC battery charging testing mode is activated while charging. Even if the Parent Viewer is paired to Baby Units, the CEC battery charging testing mode is activated while it is powered off and charging.

For cETL compliance only

Mesures de sécurité importantes

La plaque signalétique appliquée est située au bas du socle de l'unité du bébé.

Lorsque vous utilisez votre appareil, vous devez toujours suivre certaines mesures de précaution afin de réduire les risques d'incendie, d'électrocution et de blessures corporelles, dont qui suivent.

- Observez toutes les instructions et mises en garde inscrites sur l'appareil.
- L'installation par un adulte est requise.
- MISE EN GARDE : N'installez pas l'unité du bébé à une hauteur supérieure à 2 mètres.
- Ce produit ne remplace pas la surveillance adéquate du nourrisson. La supervision d'un nourrisson est la responsabilité du parent ou de la personne qui s'occupe de l'enfant. Ce produit pourrait cesser de fonctionner et, par conséquent, vous ne devez pas présumer qu'il continuera de fonctionner correctement pendant une période de temps donnée. De plus, il ne s'agit pas d'un instrument médical et ne devrait pas être utilisé comme tel. Ce produit est destiné à vous aider à superviser votre bébé.
- N'utilisez pas cet appareil près de l'eau ni de toute autre source d'humidité, par exemple, près d'une baignoire, cuve à lessive, évier de cuisine, dans un sous-sol humide ni près d'une piscine, dans un sous-sol humide ou une douche.
- MISE EN GARDE : Utilisez uniquement la pile fournie. Un risque d'explosion pourrait survenir si un mauvais type de pile n'a jamais été utilisé avant l'achat; réinstallez l'unité de façon périodique, étendez l'écoute-bébé quand il n'est pas en cours d'utilisation.
- Les enfants devraient être supervisés afin de vous assurer qu'ils ne jouent pas avec l'appareil.
- Le produit n'est pas conçu pour être utilisé par des personnes (incluant des enfants) aux capacités physiques, sensorielles ou mentales réduites ou qui manquent d'expérience et de connaissances, à moins qu'un leur ait donné suffisamment de supervision ou d'instructions relativement à l'utilisation de l'appareil par une personne responsable de leur sécurité. CONSERVEZ CES INSTRUCTIONS.

Mises en garde

- Utilisez et entreposez le produit à une température entre 0 °C (32°F) et 40 °C (104 °F).
- N'exposez pas cet appareil à des froids ou des chaleurs extrêmes, ainsi qu'à la lumière directe du soleil. Ne l'installez pas près d'une source de chauffage.
- Le bloc-piles ne doit pas être exposé à la chaleur excessive telle que la lumière du soleil ou au feu.
- Avertissement - Risque de strangulation**
Les enfants se sont ÉTRANGLÉS dans des cordons. Gardez ce cordon hors de portée des enfants (à plus de 0,9 m). N'enlevez pas cette étiquette.
- Ne jamais placer le moniteur à l'intérieur du berceau ou du parc de bébé. Ne jamais couvrir le moniteur ou l'unité (s) portative avec un article tel une serviette ou une couverture.
- D'autres équipements électroniques peuvent produire des interférences sur votre moniteur vidéo et audio. Tentez d'installer votre moniteur vidéo ou audio à l'écart des appareils électroniques tels que des routeurs sans fil, radios, téléphones cellulaires, interphones, monteurs, téléphones, ordinateurs personnels, électroménagers et téléphones sans fil.

Stimulateurs cardiaques implantés dans l'organisme

Les stimulateurs cardiaques (ne s'applique qu'aux dispositifs numériques sans fil)

L'organisme Wireless Technology Research, LLC (WTR) est une firme de recherche indépendante, à même une évaluation pluridisciplinaire des interférences entre les téléphones sans fil portatifs et les stimulateurs cardiaques implantés dans l'organisme. Appuyée par l'Administration des aliments et des drogues (FDA) des États-Unis, la firme WTR recommande aux médecins:

Aviez des détecteurs de stimulateurs cardiaques

- Vous devriez maintenir les dispositifs sans fil à au moins six pouces du stimulateur cardiaque.
- Ils ne doivent PAS placer le téléphone sans fil directement sur le stimulateur cardiaque, tel que dans une poche de chemise, lorsque celui-ci est en marche.

L'étude effectuée par l'organisme WRS n'a pas identifié de risque pour les détenteurs de stimulateurs cardiaques causés par les gens qui utilisent des dispositifs sans fil à proximité de ceux-ci.

Champs électromagnétiques (EMF)

Ce produit de Leapfrog est conforme à toutes les normes se rapportant aux champs électromagnétiques (EMF) standard. Si vous le manipulez correctement en suivant les instructions de ce guide, son utilisation sera sécuritaire pendant de nombreuses années, selon les meilleures évidences scientifiques dont nous disposons aujourd'hui.

Disclaimer and Limitation of Liability

Leapfrog and its suppliers assume no responsibility for any damage or loss resulting from the use of this handbook. Leapfrog and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this software. Leapfrog and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to make backup copies of important data on other media to protect against data loss.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION. CAN ICES-3 (B)/NMB-3(B)

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Warranty: Please visit our website at leapfrog.com for full details of the warranty provided in your country.

Customer Support

Visit our Consumer Support website 24 hours a day at:
U.S.: leapfrog.com/support
C.A.: leapfrog.ca/support
Or call our **Customer Service number:** 1 (800) 701-5327 in the U.S. and Canada during Customer Service hours Monday to Friday, 9am - 6pm Central Time

Instructions for Care

FOR INDOOR, DRY-LOCATION USE ONLY.

To keep this product in good condition, follow these guidelines:

- Avoid putting it near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
- Clean with a slightly damp cloth in cold water (do not use soap, detergent, or other chemicals).
- Make sure the product is dry before you connect it to the power source again.
- Avoid prolonged exposure to extreme temperatures and direct sunlight or moisture.

- Do not spill liquid of any kind on this product or immerse the product in water as it may render it inoperative.
- Keep food and beverages away from this product.
- Never try to dismantle the unit.
- Avoid dropping the product or treating it roughly.