

DASY - Parameters of Probe: ET3DV6 SN:1790

Sensitivity in Free Space

Diode Compression

NormX	1.74 $\mu\text{V}/(\text{V}/\text{m})^2$	DCP X	96	mV
NormY	1.69 $\mu\text{V}/(\text{V}/\text{m})^2$	DCP Y	96	mV
NormZ	1.76 $\mu\text{V}/(\text{V}/\text{m})^2$	DCP Z	96	mV

Sensitivity in Tissue Simulating Liquid

Head 900 MHz $\epsilon_r = 41.5 \pm 5\%$ $\sigma = 0.97 \pm 5\%$ mho/m

Valid for f=800-1000 MHz with Head Tissue Simulating Liquid according to EN 50361, P1528-200X

ConvF X	6.4 $\pm 9.5\%$ (k=2)	Boundary effect:	
ConvF Y	6.4 $\pm 9.5\%$ (k=2)	Alpha	0.48
ConvF Z	6.4 $\pm 9.5\%$ (k=2)	Depth	2.13

Head 1800 MHz $\epsilon_r = 40.0 \pm 5\%$ $\sigma = 1.40 \pm 5\%$ mho/m

Valid for f=1710-1910 MHz with Head Tissue Simulating Liquid according to EN 50361, P1528-200X

ConvF X	5.1 $\pm 9.5\%$ (k=2)	Boundary effect:	
ConvF Y	5.1 $\pm 9.5\%$ (k=2)	Alpha	0.49
ConvF Z	5.1 $\pm 9.5\%$ (k=2)	Depth	2.70

Boundary Effect

Head 900 MHz Typical SAR gradient: 5 % per mm

Probe Tip to Boundary		1 mm	2 mm
SAR _{be} [%]	Without Correction Algorithm	9.4	5.2
SAR _{be} [%]	With Correction Algorithm	0.2	0.4

Head 1800 MHz Typical SAR gradient: 10 % per mm


Probe Tip to Boundary		1 mm	2 mm
SAR _{be} [%]	Without Correction Algorithm	13.9	9.5
SAR _{be} [%]	With Correction Algorithm	0.2	0.1

Sensor Offset


Probe Tip to Sensor Center	2.7	mm
Optical Surface Detection	1.6 $\pm$ 0.2	mm

Receiving Pattern (ϕ), $\theta = 0^\circ$


$f = 30 \text{ MHz}$, TEM cell ifi110

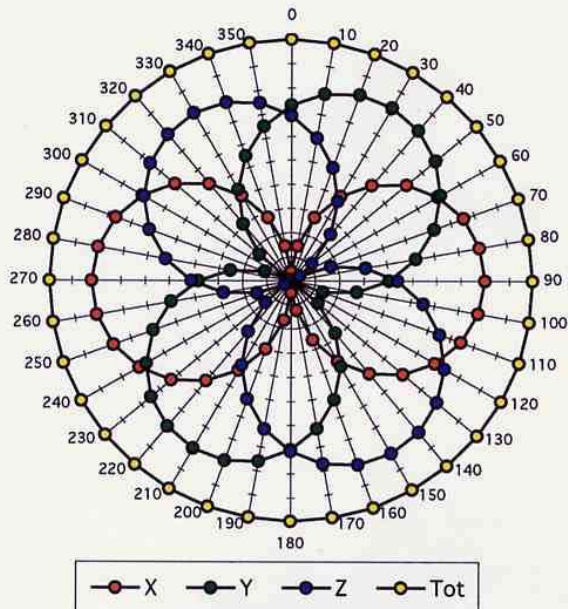


$f = 100 \text{ MHz}$, TEM cell ifi110


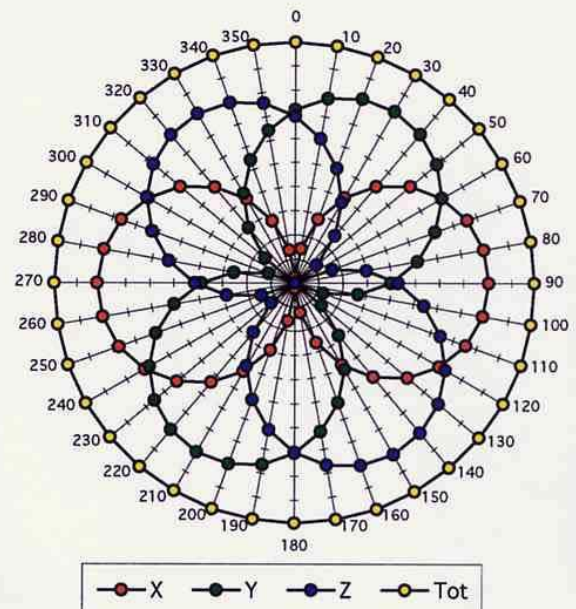


$f = 300 \text{ MHz}$, TEM cell ifi110

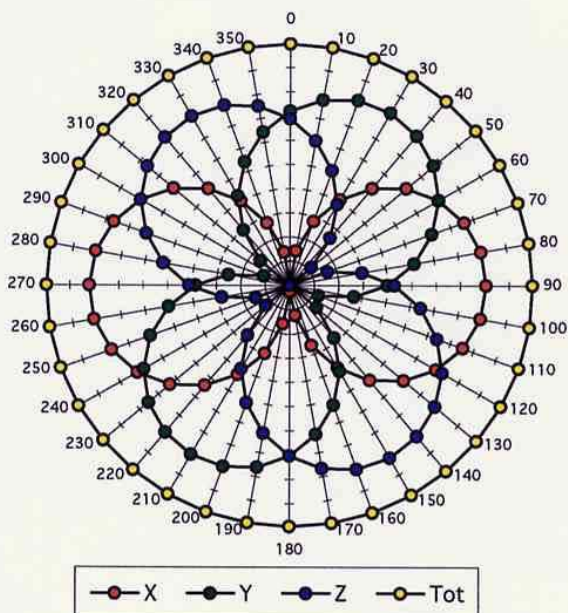


$f = 900 \text{ MHz}$, TEM cell ifi110

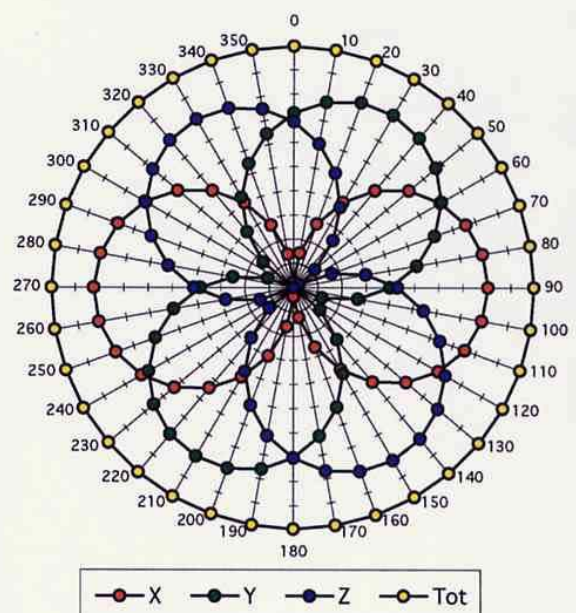

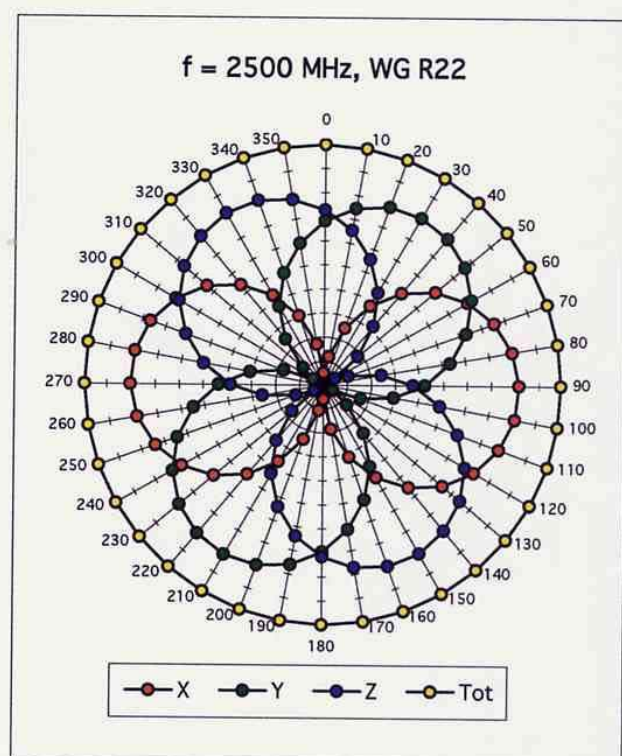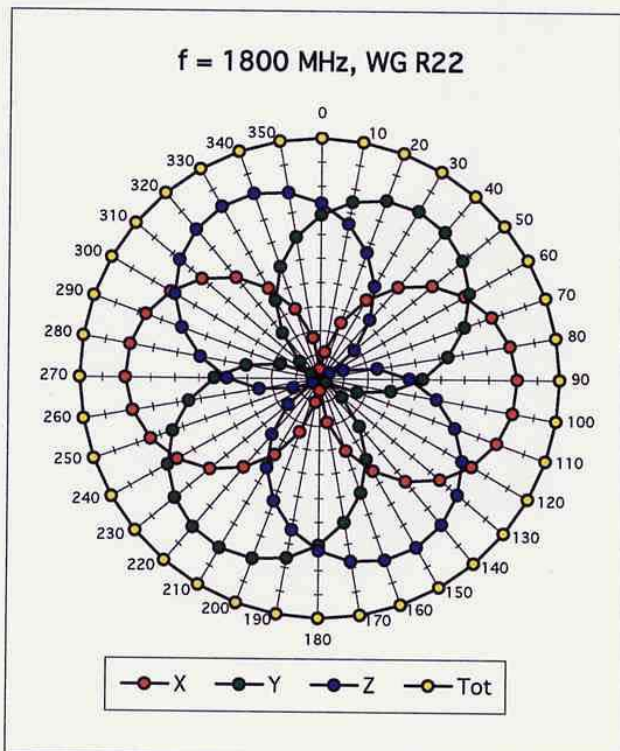


Isotropy Error (ϕ), $\theta = 0^\circ$

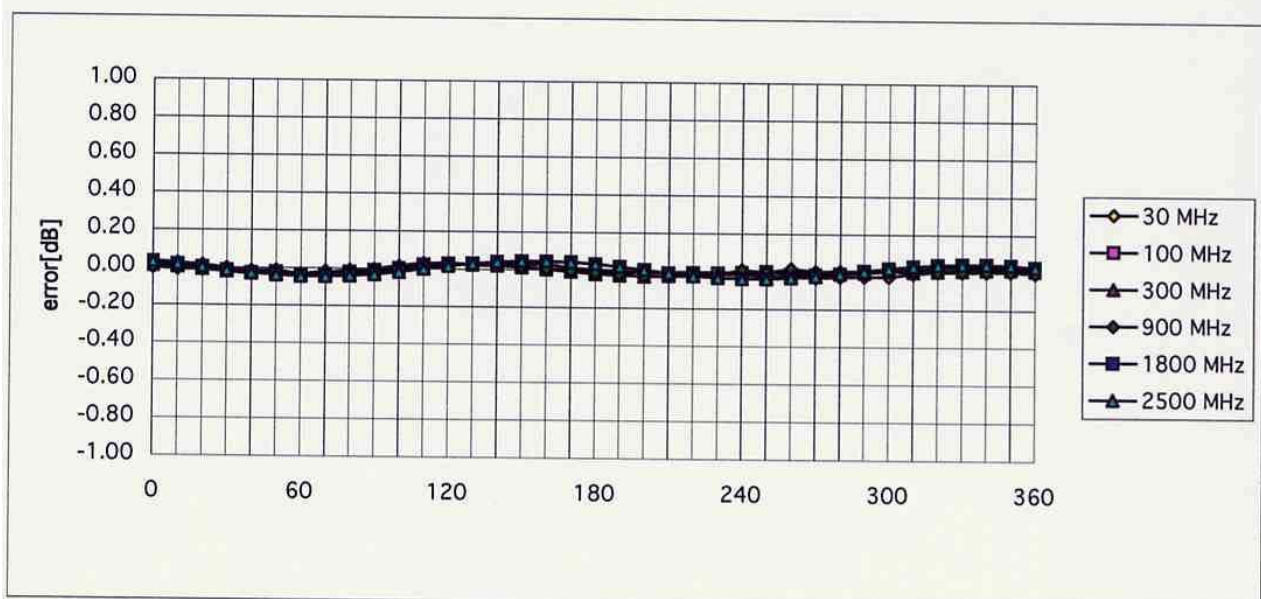



Frequency Response of E-Field

(TEM-Cell:ifi110, Waveguide R22)


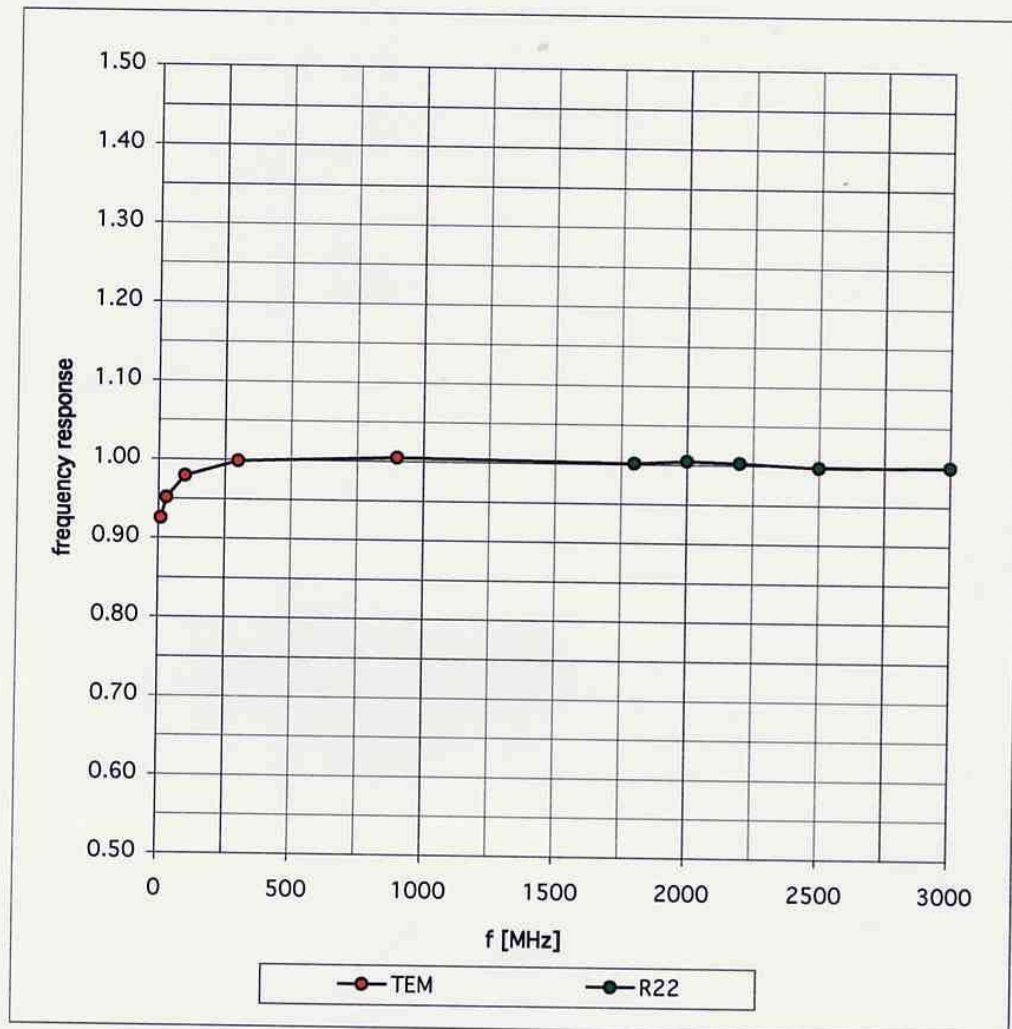


Dynamic Range f(SAR_{brain})

(Waveguide R22)

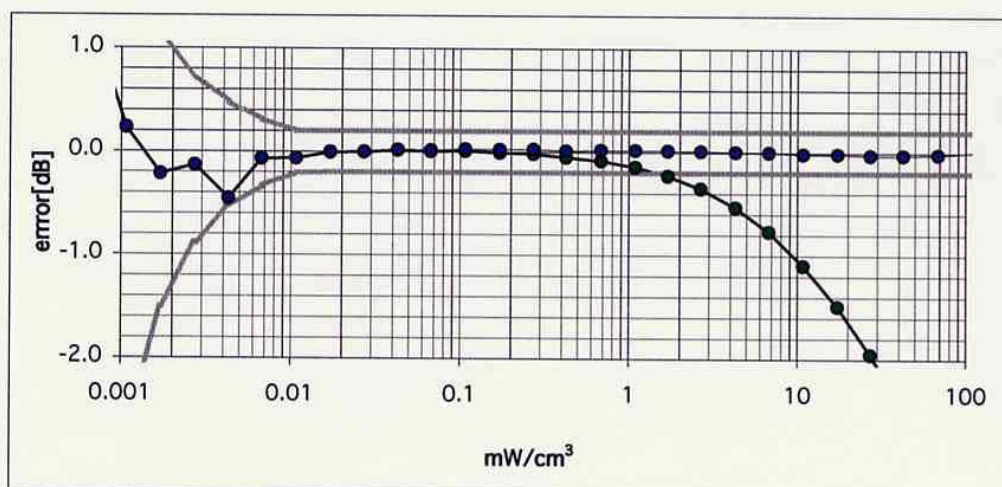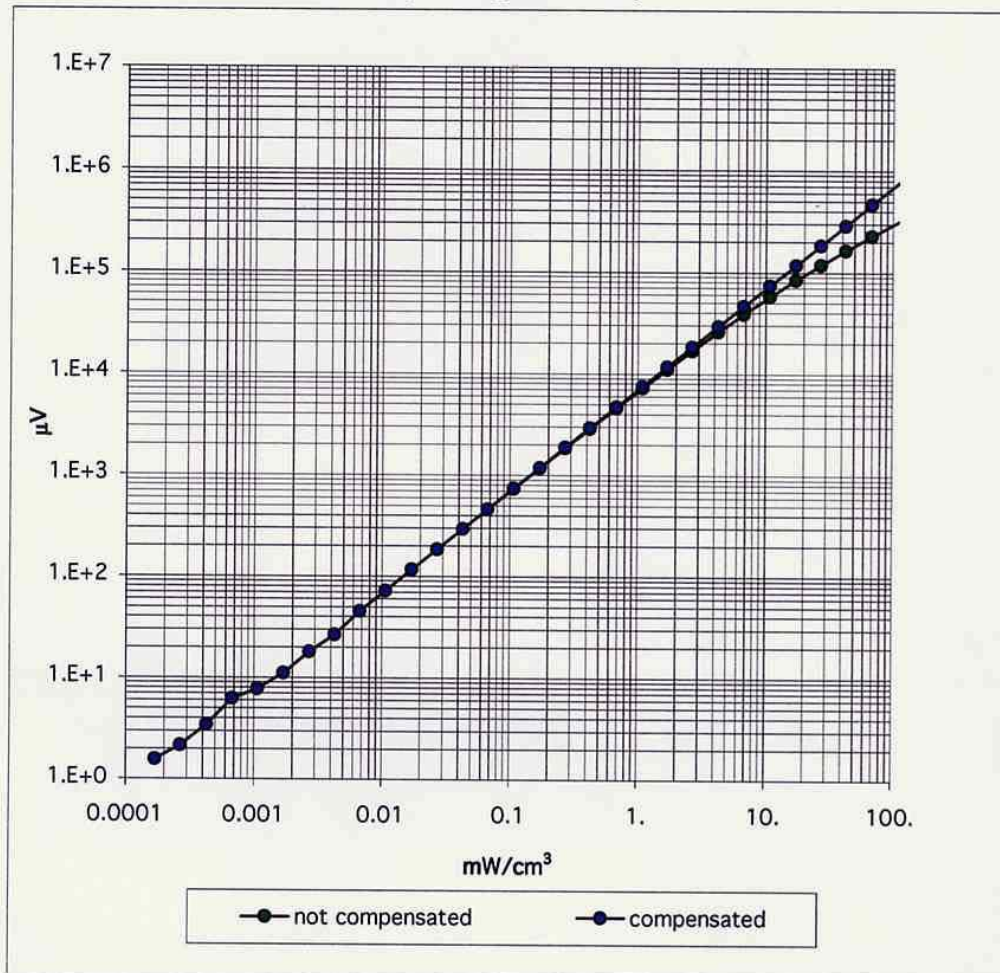

Conversion Factor Assessment

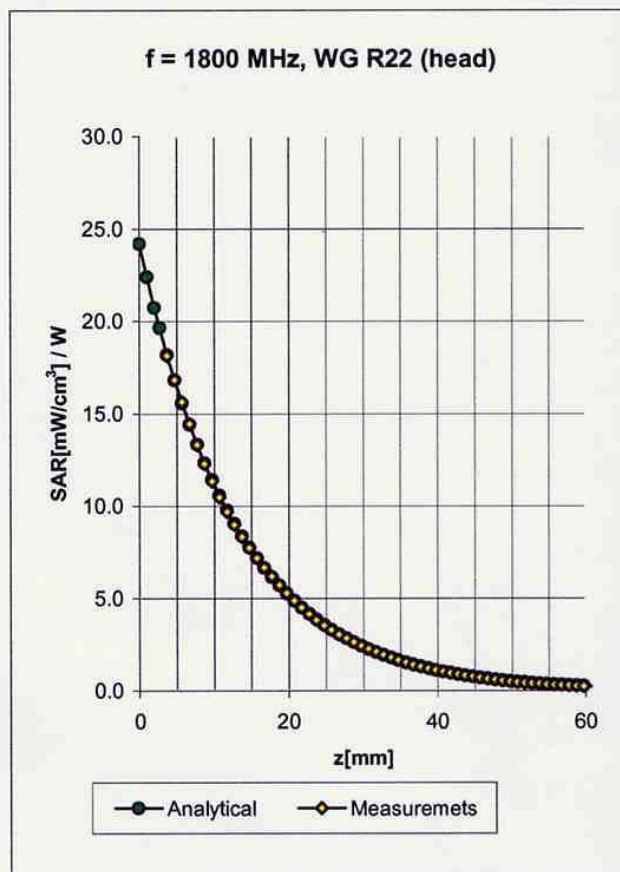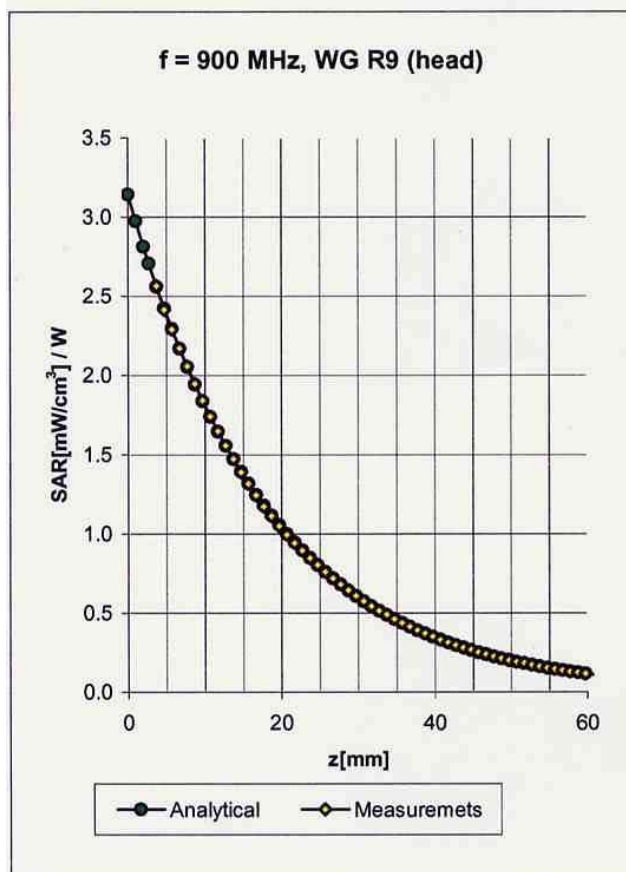

Head 900 MHz $\epsilon_r = 41.5 \pm 5\%$ $\sigma = 0.97 \pm 5\%$ mho/m

Valid for f=800-1000 MHz with Head Tissue Simulating Liquid according to EN 50361, P1528-200X


ConvF X	6.4 $\pm 9.5\%$ (k=2)	Boundary effect:	
ConvF Y	6.4 $\pm 9.5\%$ (k=2)	Alpha	0.48
ConvF Z	6.4 $\pm 9.5\%$ (k=2)	Depth	2.13

Head 1800 MHz $\epsilon_r = 40.0 \pm 5\%$ $\sigma = 1.40 \pm 5\%$ mho/m

Valid for f=1710-1910 MHz with Head Tissue Simulating Liquid according to EN 50361, P1528-200X

ConvF X	5.1 $\pm 9.5\%$ (k=2)	Boundary effect:	
ConvF Y	5.1 $\pm 9.5\%$ (k=2)	Alpha	0.49
ConvF Z	5.1 $\pm 9.5\%$ (k=2)	Depth	2.70

Conversion Factor Assessment

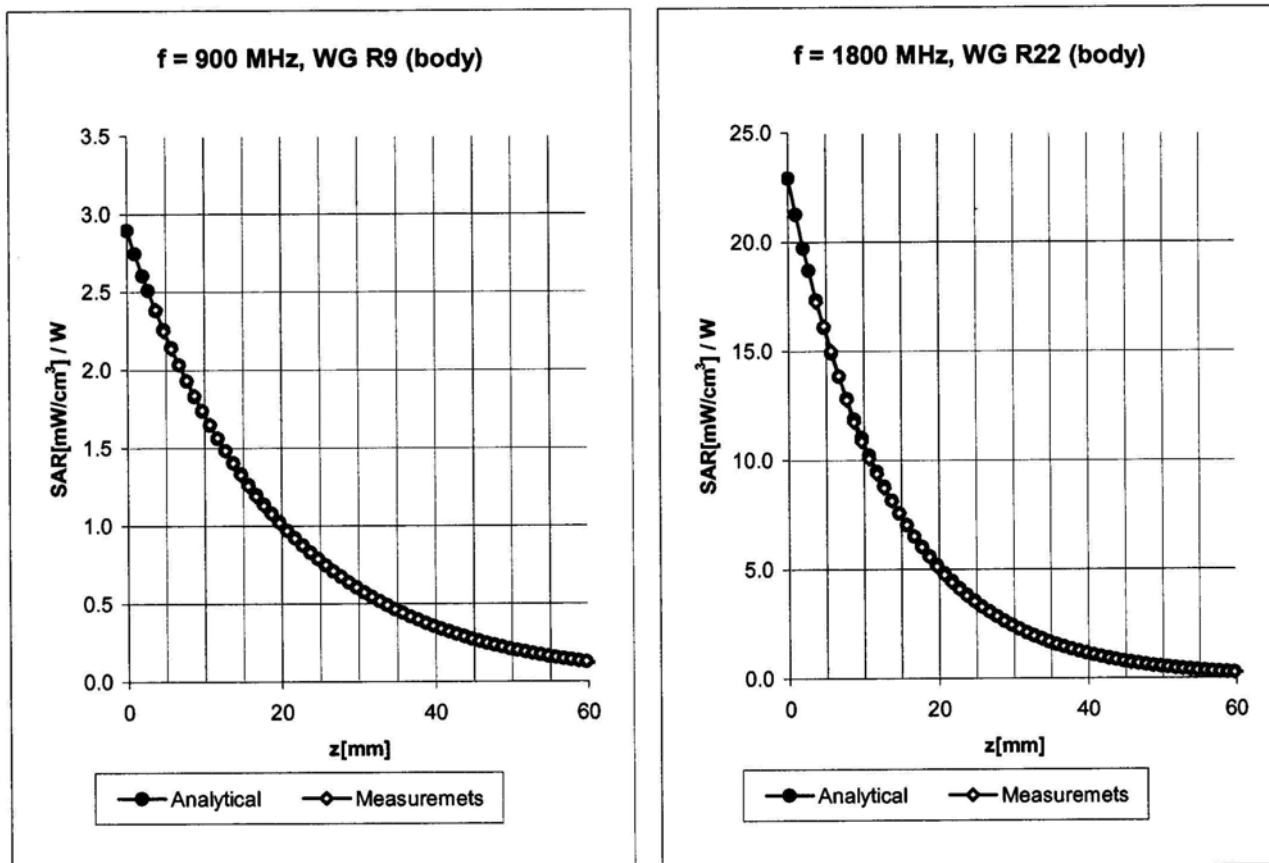

Body 900 MHz $\epsilon_r = 55.0 \pm 5\%$ $\sigma = 1.05 \pm 5\%$ mho/m

Valid for f=800-1000 MHz with Body Tissue Simulating Liquid according to OET 65 Suppl. C


ConvF X	6.2 $\pm 9.5\%$ (k=2)	Boundary effect:	
ConvF Y	6.2 $\pm 9.5\%$ (k=2)	Alpha	0.40
ConvF Z	6.2 $\pm 9.5\%$ (k=2)	Depth	2.57

Body 1800 MHz $\epsilon_r = 53.3 \pm 5\%$ $\sigma = 1.52 \pm 5\%$ mho/m

Valid for f=1710-1910 MHz with Body Tissue Simulating Liquid according to OET 65 Suppl. C

ConvF X	4.8 $\pm 9.5\%$ (k=2)	Boundary effect:	
ConvF Y	4.8 $\pm 9.5\%$ (k=2)	Alpha	0.54
ConvF Z	4.8 $\pm 9.5\%$ (k=2)	Depth	2.76

Conversion Factor Assessment

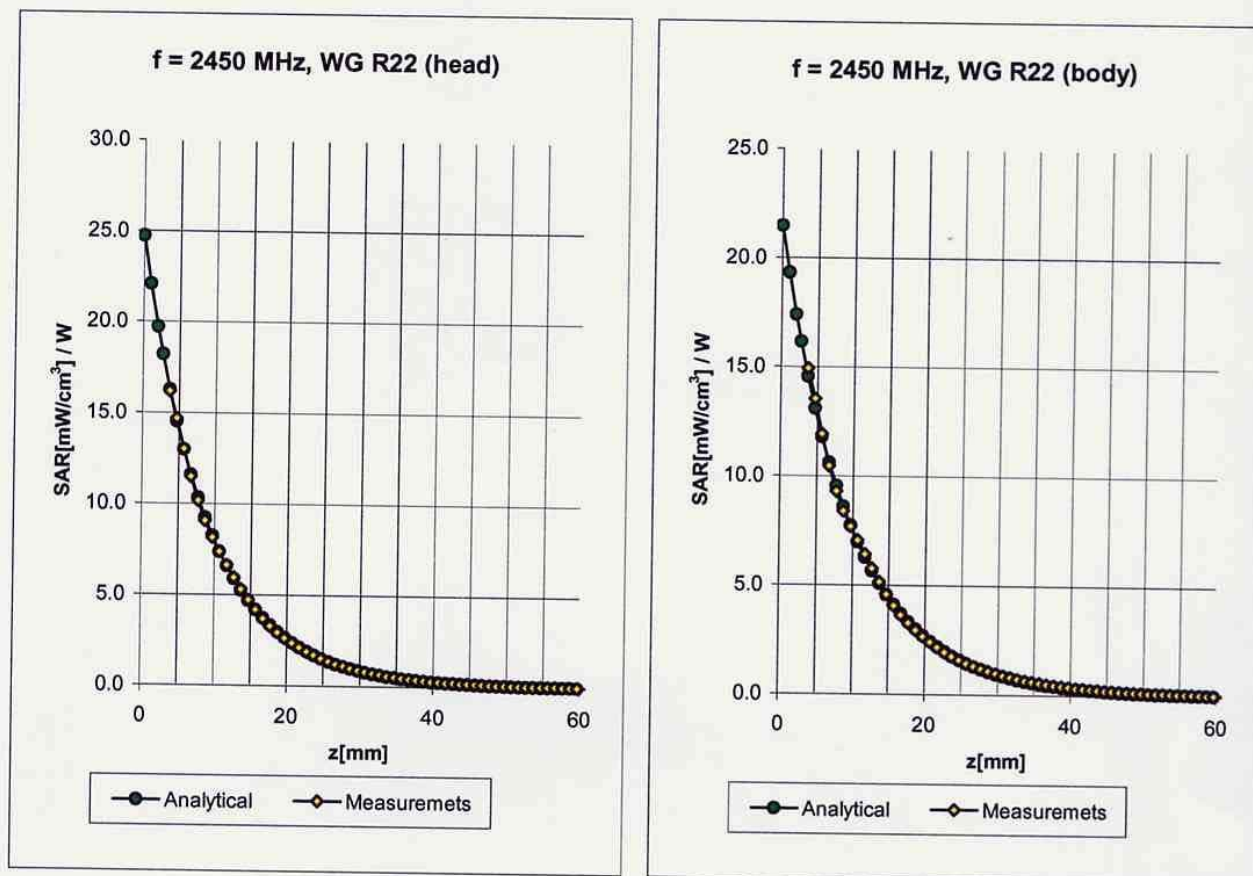

Head 2450 MHz $\epsilon_r = 39.2 \pm 5\%$ $\sigma = 1.80 \pm 5\%$ mho/m

Valid for f=2400-2500 MHz with Head Tissue Simulating Liquid according to EN 50361, P1528-200X

ConvF X	4.7 $\pm$ 8.9% (k=2)	Boundary effect:	
ConvF Y	4.7 $\pm$ 8.9% (k=2)	Alpha	1.00
ConvF Z	4.7 $\pm$ 8.9% (k=2)	Depth	1.89


Body 2450 MHz $\epsilon_r = 52.7 \pm 5\%$ $\sigma = 1.95 \pm 5\%$ mho/m

Valid for f=2400-2500 MHz with Body Tissue Simulating Liquid according to OET 65 Suppl. C

ConvF X	4.4 $\pm$ 8.9% (k=2)	Boundary effect:	
ConvF Y	4.4 $\pm$ 8.9% (k=2)	Alpha	1.21
ConvF Z	4.4 $\pm$ 8.9% (k=2)	Depth	1.59

Deviation from Isotropy in HSL

Error (θ, ϕ), $f = 900$ MHz

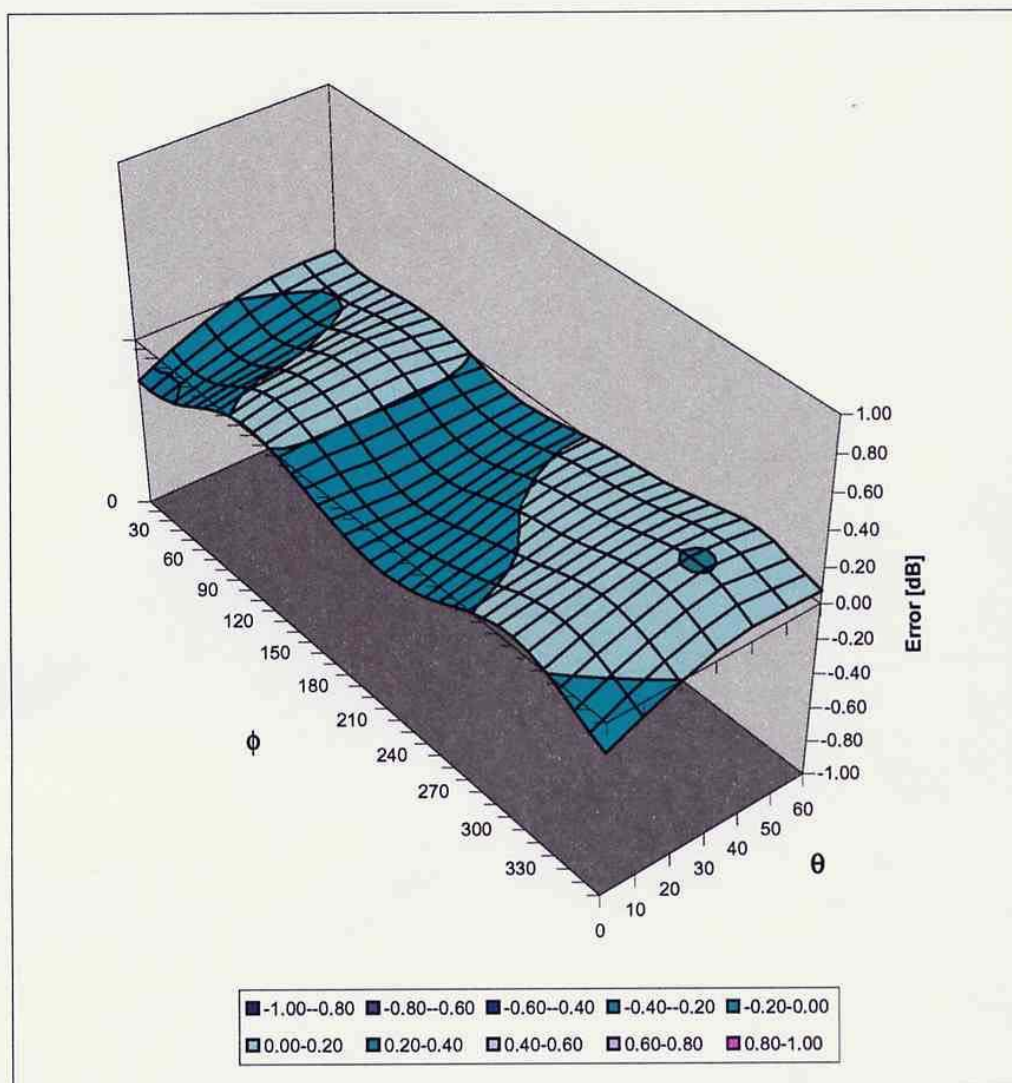

D3: DAE

Client

CALIBRATION CERTIFICATE

Object(s) **DAE3 - SN:579**

Calibration procedure(s) **QA CAL-06.v3**
Calibration procedure for the data acquisition unit (DAE)

Calibration date: **August 15, 2003**

Condition of the calibrated item **In Tolerance (according to the specific calibration document)**

This calibration statement documents traceability of M&TE used in the calibration procedures and conformity of the procedures with the ISO/IEC 17025 international standard.

All calibrations have been conducted in the closed laboratory facility: environment temperature 22 +/- 2 degrees Celsius and humidity < 75%.

Calibration Equipment used (M&TE critical for calibration)

Model Type	ID #	Cal Date	Scheduled Calibration
Fluke Process Calibrator Type 702	SN: 6295803	3-Sep-01	Sep-03

	Name	Function	Signature
Calibrated by:	Philipp Storchenegger	Technician	
Approved by:	Fin Bomholt	R&D Director	

Date issued: August 15, 2003

This calibration certificate is issued as an intermediate solution until the accreditation process (based on ISO/IEC 17025 International Standard) for Calibration Laboratory of Schmid & Partner Engineering AG is completed.