

# Bluetooth

## Model: DC-0701



#### Product Overview

Please read this manual carefully before putting the speaker into operation and keep it for future reference.

(IPX4)

#### Safety Instructions

- . Keep this speaker away from heat, direct sunlight and sharp edges.
- · Do not insert any metal object into the speaker.
- · To avoid short circuit due to static charge, do not use the device in an extremely dry climate.
- · Do not attempt to repair the unit yourself

NOTE: Before using this device make sure it is fully charged. The ShowerSpeaker is powered by an integrated rechargeable lithium battery.

## Pairing the ShowerSpeaker to your Device:

Activate the Bluetooth® speaker's pairing mode when in power off mode.

Press and hold the d button for 6-8 seconds or until the blue light goes on. Now the speaker is ready for pairing.

Tip: Please make sure the speaker is in power Off mode when trying to activate the pairing mode.

## Syncing your Device

- 1. Turn on your device and activate the Bluetooth® function.
- 2. Search for ONTEK SPEAKER Bluetooth®



#### Thank you for choosing our product. We hope you enjoy it!

device and select to pair. 3. If a password is needed, type in "0000".

#### Charging the Battery

1. Insert the charging cable into the port on the speaker marked DC 5V. Connect the USB part of the plug into a PC or AC/DC Adaptor. When LED indicator turns a light purple color, the battery is being charged.

2. When the battery is fully charged the light purple LED indicator turns off

#### **Buttons Description**

- 也 To turn the unit On or Off.
- Kt Short press for the previous song, Long press for turning down the volume.
- DI Short press for the next song, long press for turning up the volume.
- So To pick up or hang up a phone call
- Play/Pause the music.

#### Note:

You can quickly press the phone button twice to redial the last phone call.

#### **Technical Specifications**


## Water-Resistant Level IPX4 Suction Cup attaches to most surfaces

## Built-in 400mAh rechargeable lithium battery

- Bluetooth®:
- · Frequency:
- Battery:

#### Troubleshooting your Speaker

Symptoms	Causes	Solutions
Can not switch the speaker on	Battery empty	Charge the battery
Unable to pair the speaker	Speaker is already switched on, and it is not in pairing mode.	Refer to the section of "Pairing the ShowerSpeaker to your mobile device"

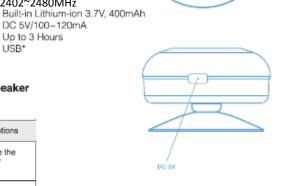



V3.0 + EDR Class II · Operating Distance: Up to 33ft (10m) · Play Time: Up to 4.5 Hours 2402~2480MHz

- - Up to 3 Hours USB\*
- · Charging Interface:

#### Charging Input: DC 5V/100~120mA Charging Time:

### FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation