

Wireless Solutions in Your Hand

1. Introduction

Thank you for purchasing our Bluetooth serial adaptor. The adaptor eliminates your conventional RS232 serial cables, providing an easy-to-use, invisible connection with superior freedom of movement. This tiny adaptor allows any device with a standard 9-pin serial port to communicate wirelessly. You can communicate with another *Bluetooth* serial adaptor or other *Bluetooth*-enabled devices such as a laptop computer, PDA or mobile phone.

1.1. Features

- Supports Bluetooth Serial Port Profile and Generic Access Profile
- No need of external host and software
- Easy of installation and use
- Supports configuration of the local device
- Easy of maintenance
- Supports up to 100 meters (line of sight)

1.2. Package

- Bluetooth serial adaptor: 2 ea
- Antenna: 2 ea
- USB cable for power supply: 2 ea
- DC adaptor: 2 ea
- A user's manual

2. Specifications


2.1. General

Specification	Description
Baud Rate	Supports 4.8/9.6/19.2/38.4/57.6/115.2/230.4/460.8kbps
Coverage	Up to 100m
Connection	Point-to-point or multipoint (pico net)
Signal	TxD, RxD, GND, CTS, and RTS
RS-232 Interface	D_SUB 9-pin female
Standard	Bluetooth specification version 2.0+EDR
Frequency	2.400 to 2.4835GHz
Hopping	1,600/sec, 1MHz channel space
Modulation	GFSK, 1Mbps, 0.5BT Gaussian
Tx. Power	Max. 18dBm (Class 1)
Rx. Sensitivity	-86dBm typical
Antenna	Chip antenna or SMA female + external antenna (optional)
Antenna Gain	Chip antenna max. 1 to 2dBi
Power Supply	+5 to +9V DC
Current Consumption	Max. 90mA
Operation Temperature	-20°C to +75°C
Dimensions	35mm (W) x 65mm (D) x 16mm (H)

1. INTRODUCTION.....	3
1.1. Features.....	3
1.2. Package.....	3
2. SPECIFICATIONS.....	3
2.1. General.....	3
2.2. RS232 Interface.....	4
2.2.1. Pin-out.....	4
2.2.2. Signals.....	4
2.3. Factory Settings.....	4
3. INSTALLATION.....	4
3.1. Hardware Structure.....	4
3.1.1. Reset Button.....	4
3.1.2. Slide Switch.....	5
3.1.3. Power Supply.....	5
3.1.4. LED Status.....	5
3.2 Installation Procedure.....	5
4. USAGE.....	5
4.1 HyperTerminal Settings.....	5
4.2 Configuration Start-up.....	5
4.3 AT Command Set.....	6

2.2. RS232 Interface

2.2.1. Pin-out

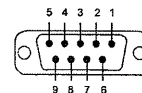

2.2.2. Signals

Pin	Signal	Direction	Description
2	TxD	Output	Transmitted data
3	RxD	Input	Received data
5	GND	N/A	Signal ground
7	CTS	Input	Clear to send (Remarks)
8	RTS	Output	Request to send (Remarks)
9	Vcc	Input	Power supply

Remarks: The default hardware configuration is for using CTS/RTS. If you want to use DSR/DTR, please contact us.

2.3. Factory Settings


The factory settings of COM port are as follows:

- Baud rate: 19200bps
- Data bit: 8
- Parity: none
- Stop bit: 1
- Flow control: H/W or none
- Others: Please refer to section 4.3 AT Command Set.

3. Installation

3.1. Hardware Structure

The figure below is an outline of the adaptor.

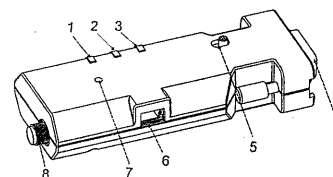

1 Power LED	2 Data LED	3 Link LED	4 RS232 connector
5 Slide switch	6 Mini USB connector	7 Reset button	8 Antenna connector

3.1.1. Reset Button

By pressing the Reset button, you can disconnect and reconnect a wireless connection.

3.1.2. Slide Switch

The slide switch is used to set the adaptor as a DTE (to the side of antenna connector) or a DCE (to the side of RS232 connector).

3.1.3. Power Supply

The adaptor can be powered via:

- An AC/DC converter (output power: +5 to +9 V DC/300 mA)
- A USB cable
- Pin 9 of the D SUB 9-pin connector

3.1.4. LED Status

The following is LED status information.

Status	Description
Power LED off	No power supply.
Power LED on	Firmware is running OK.
Link LED off	No pairing established.
Link LED fast (0.1 sec) blinking	Pairing (slave or master mode).
Link LED fast (0.3 sec) blinking	Discoverable and waiting for a connection (slave mode).
Link LED slow (0.9 sec) blinking	Inquiring (master mode).
Link LED very slow (1.2 sec) blinking	Connecting (master mode).
Link LED steadily on	Connection established.

3.2. Installation Procedure

Step 1: If provided with an external antenna, assemble it to the adaptor body.

Step 2: Plug the adaptor into the COM port of device.

Step 3: Adjust the slide switch, depending on whether the device is a DTE or DCE.

Step 4: Power the adaptor on.

Step 5: Configure the adaptor if necessary.

4. Usage

You can reprogram the default settings on the adaptor using HyperTerminal.

4.1 HyperTerminal Settings

- Bits per second: 19200 bps (baud rate)
- Data bit: 8
- Parity: None
- Stop bit: 1
- Flow control: H/W

4.2 Configuration Start-up

Step 1: Plug the adaptor into a COM port of PC.

Step 2: Power the adaptor on.

Step 3: Create a HyperTerminal file.

Step 4: On the interface of the new HyperTerminal file, click **Properties** button.

Step 5: Select the COM port where the adaptor is attached to your PC and set the port properties as described in section 4.1 HyperTerminal Settings.

Step 6: Input "A" in the file and then press <Enter>.

If no echo, that is, nothing is displayed when you input "A", it indicates that the baud rate is incorrect. Ensure that the baud rate is 19200 bps.

Step 7: Input "AT", and then press <Enter>.

"OK" is displayed.

If necessary, reprogram the configuration of adaptor using AT commands.

For related commands, please refer to section 4.3 AT Command Set.

4.3. AT Command Set

The following is the AT command set for the local adaptor in the command mode (that is, the local adaptor is in the disconnection state). All the commands and parameters are case insensitive.

Command	Description
E	This command is used to specify whether the adaptor echoes characters received from the UART back to the DTE/DCE.
E0	Command characters received from the UART are not echoed back to the DTE/DCE.
E1 (default)	Command characters received from the UART are echoed back to the DTE/DCE.
E?	Inquire the current setting.
H	This command is used to specify whether the adaptor can be discovered or connected by remote devices.
H0	The adaptor enters the undiscoverable mode. If a pair has been made, the original connection can be resumed. But other remote master device cannot discover this adaptor.
H1 (default)	The adaptor enters the discoverable mode.
H?	Inquire the current setting.
L	This command is used to specify the baud rate of COM port.
L0	4800bps
L1	9600bps
L2 (default)	19200bps

- 5 -

- 6 -

L3	38400 bps
L4	57600 bps
L5	115200 bps
L6	230.4 kbps
L7	460.8 kbps
L?	Inquire the current baud rate.
N	This command is used to specify a name for the adaptor. You can specify a friendly name using 0 to 9, A to Z, a to z, space and -, which are all valid characters. Note that "first space or -, last space or - isn't permitted". The default name is "Serial Adaptor".
N=xxxxxx	"xxxxxx" is a character string with a maximal length of 16.
N?	Inquire the name of the local adaptor.
P	This command is used to specify a PIN. The default PIN is "1234". Paired adaptors should have a same PIN.
P=xxxx	"xxxx" is a 4-digit string.
P0	Cancel authentication by PIN.
P?	Inquire the current PIN.
R	This command is used to specify whether the adaptor is in the master or slave role. If the device role is changed, the adaptor will reboot and all paired addresses will be cleared.
R0	Set the adaptor to the master role.
R1 (default)	Set the adaptor to the slave role.
R?	Inquire the current role of the adaptor.
B	This command is used to display the Bluetooth address of the local adaptor.
B?	Inquire the Bluetooth address of the local adaptor.

- 7 -

D	For security purpose, this command is used to specify a unique remote <i>Bluetooth</i> serial adaptor to be connected. In the master role, the adaptor pairs and connects with the designated remote slave address. If the adaptor is in the slave mode, this command is a filter condition to accept the inquiry of the master device.
D=xxxxxxxxxxxx	"xxxx-xx-xxxxxx" is a string of 12 hexadecimal digits.
D0	Restore the status in which the adaptor can connect with any remote address.
D?	Inquiry the designated address that can be paired and connected.
I	This command is used to inquire the firmware version.
I?	Inquiry the version codes.
Q	The command is used to determine whether result messages are sent back to the DTE/DCE when AT commands are executed. The result messages are: OK/ERROR for command execution, or CONNECT/DISCONNECT for connection status.
Q0 (default)	Result messages are back to the DTE/DCE.
Q1	Result messages are not back to the DTE/DCE.
Q?	Inquire the current setting.

- 8 -

Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

Service Center

Rayming Corporation
18688 San Jose Ave., City of Industry, CA 91748
Phone No.: 626-839-0366
Fax No.: 626-839-7038
Contact person: Grant Tsao
e-mail: gt@rayson.com