



Nokia WiFi Beacon 6

HA-0336G-A WiFi Beacon

Nokia WiFi Beacon 6 Product Guide

3FE-xxxxx-AAAA-TCZZA

Issue: 01

Use pursuant to applicable agreements

Nokia is a registered trademark of Nokia Corporation. Other products and company names mentioned herein may be trademarks or tradenames of their respective owners.

The information presented is subject to change without notice. No responsibility is assumed for inaccuracies contained herein.

© 2019 Nokia.

Contains proprietary/trade secret information which is the property of Nokia and must not be made available to, or copied or used by anyone outside Nokia without its written authorization. Not to be used or disclosed except in accordance with applicable agreements.

1 Preface

This preface provides general information about the documentation set for Beacon 6 (HA-0336G-A) equipment.

1.1 Scope

This documentation set provides information about safety, features and functionality, ordering, hardware installation and maintenance, and software installation procedures for the current release.

1.2 Audience

This documentation set is intended for planners, administrators, operators, and maintenance personnel involved in installing, upgrading, or maintaining the devices.

1.3 Required knowledge

The reader must be familiar with general telecommunications and networking principles.

1.4 Acronyms and initialisms

The expansions and optional descriptions of most acronyms and initialisms appear in the Glossary (3FE 47157 AAAA TCZZA).

1.5 Assistance and ordering phone numbers

Nokia provides global technical support through regional call centers. Phone numbers for the regional call centers are available at the following URL: <http://customer.nokia.com/s/> . If this link does not work, copy and paste it directly into your web browser.

For ordering information, contact your Nokia sales representative.

1.6 Nokia quality processes

Nokia's BEACON 6 quality practices are in compliance with TL 9000 requirements. These requirements are documented in the Fixed Networks Quality Manual 3FQ-30146-6000-QRZZA. The quality practices adequately ensure that technical requirements and customer end-point requirements are met. The customer or its representatives may be allowed to perform on-site quality surveillance audits, as agreed upon during contract negotiations

1.7 Safety information

For safety information, see the appropriate safety guidelines chapter.

1.8 Documents

Documents are available using ALED or OLCS.

Procedure 1 To download a ZIP file package of the customer documentation

1 Navigate to <http://customer.nokia.com/s/> and enter your user name and password. If you are a new user and require access to this service, please contact your Nokia sales representative.

5 Select the image from the drop-down menu and click Next.

6 Follow the on-screen directions to download the file.

Procedure 2 To access individual documents

Individual PDFs of customer documents are also accessible through the Nokia Customer Support website.

-
- 1 Navigate to <http://customer.nokia.com/s/> and enter your user name and password. If you are a new user and require access to this service, please contact your Nokia sales representative.
 - 2 From the Technical Content for drop-down menu, choose the product.
 - 3 Click on Manuals and Guides to display a list of customer documents by title and part number. You can filter this list using the Release drop-down menu.
 - 4 Click on the PDF to open or save the file.
-

1.9 Special information

The following are examples of how special information is presented in this document.



Danger — Danger indicates that the described activity or situation may result in serious personal injury or death; for example, high voltage or electric shock hazards.



Warning — Warning indicates that the described activity or situation may, or will, cause equipment damage or serious performance problems.



Caution — Caution indicates that the described activity or situation may, or will, cause service interruption.



Note — A note provides information that is, or may be, of special interest.

1.9.1 Procedures with options or substeps

When there are options in a procedure, they are identified by letters. When there are required substeps in a procedure, they are identified by roman numerals.

Procedure 3 Example of options in a procedure

At step 1, you can choose option a or b. At step 1, you must do what the step indicates.

-
- 1 This step offers two options. You must choose one of the following:
 - a This is one option.
 - b This is another option.
-
- 2 You must perform this step.
-

Procedure 4 Example of required substeps in a procedure

At step 1, you must perform a series of substeps within a step. At step 2, you must do what the step indicates.

-
- 1 This step has a series of substeps that you must perform to complete the step. You must perform the following substeps: i This is the first substep. iiThis is the second substep.
 - iii This is the third substep.
-

¹ You must perform this step.

1.10 Multiple PDF document search

You can use Adobe Reader Release 6.0 and later to search multiple PDF files for a common term. Adobe Reader displays the results in a single display panel. The results are grouped by PDF file, and you can expand the entry for each file.



Note — The PDF files in which you search must be in the same folder.

Procedure 5 To search multiple PDF files for a common term

-
- 1 Open Adobe Acrobat Reader.
 - 2 Choose Edit→Search from the Acrobat Reader main menu. The Search PDF panel appears.
 - 5 Select the folder in which to search using the drop-down menu.
 - 6 Click on the Search button.

Acrobat Reader displays the search results. You can expand the entries for each document by clicking on the + symbol.
-

Table of contents

1 Preface	3
1.1 Scope.....	3
1.2 Audience	3
1.3 Required knowledge	3
1.4 Acronyms and initialisms	3
1.5 Assistance and ordering phone numbers	3
1.6 Nokia quality processes.....	4
1.7 Safety information.....	4
1.8 Documents.....	4
1.9 Special information	5
1.9.1 Procedures with options or substeps.....	6
1.10 Multiple PDF document search	7
2 ANSI BEACON 6 safety guidelines	16
2.1 Safety instructions	16
2.1.1 Safety instruction boxes in customer documentation	16
2.1.2 Safety-related labels	17
2.2 Safety standards compliance.....	18
2.2.1 EMC, EMI, and ESD standards compliance.....	18
2.2.2 Energy-related products standby and off modes compliance	19
2.2.3 FCC statement.....	19
2.2.4 FCC Radiation Exposure Statement	20
2.2.5 Resistibility requirements compliance	20
2.3 Electrical safety guidelines	21
2.3.1 Power supplies	21
2.3.2 Cabling.....	21
3 ETSI BEACON 6 safety guidelines.....	22
3.1 Safety instructions	22
3.1.1 Safety instruction boxes.....	22
3.1.2 Safety-related labels	23
3.2 Safety standards compliance.....	23
3.2.1 EMC, EMI, and ESD compliance.....	24
3.2.2 Equipment safety standard compliance.....	25
3.2.3 Environmental standard compliance	25
3.2.4 CE RED RF Radiation Exposure Statement	25
3.2.5 Resistibility requirements compliance	25
3.2.6 Acoustic noise emission standard compliance	26
3.3 Electrical safety guidelines	26
3.3.1 Power supplies	26
3.3.2 Cabling.....	26
4 ETSI environmental and CRoHS guidelines	27
4.1 Environmental labels	27
4.1.1 Overview	27

4.1.2 Environmental related labels	27
4.1.2.1 Products below Maximum Concentration Value (MCV) label	27
4.1.2.2 Products containing hazardous substances above Maximum Concentration Value (MCV) label	28
4.2 Hazardous Substances Table (HST).....	29
4.3 Other environmental requirements.....	30
4.3.1 BEACON 6 environmental requirements.....	30
4.3.2 Transportation	30
4.3.3 EU RoHS	30
4.3.4 End-of-life collection and treatment.....	30
5 Beacon 6 (HA-0336G-A) unit data sheet	32
5.1 Beacon 6 (HA-0336G-A) part numbers and identification.....	32
5.2 Beacon 6 (HA-0336G-A) general description.....	33
5.2.1 TR-069 object support for WiFi parameters	37
5.2.2 Independent TR-069 session with SaaS.....	37
5.2.3 TR-069 authentication using TLS and CA certificates	37
5.3 Beacon 6 (HA-0336G-A) software and installation feature support.....	37
5.4 Beacon 6 (HA-0336G-A) interfaces and interface capacity	37
5.4.1 Beacon 6 (HA-0336G-A) connections and components	38
5.5 Beacon 6 (HA-0336G-A) LEDs	39
5.6 Beacon 6 (HA-0336G-A) detailed specifications.....	39
5.7 Beacon 6 (HA-0336G-A) functional blocks	40
5.8 Beacon 6 (HA-0336G-A) special considerations.....	41
5.8.1 WiFi service	41
5.8.1.1 WiFi standards and certifications	41
5.8.1.2 Nokia WiFi app configuration	42
5.8.1.3 WiFi GUI features	42
5.8.2 Beacon 6 (HA-0336G-A) considerations and limitations.....	42
6 Install a Beacon 6 (HA-0336G-A)	43
6.1 Purpose	43
6.2 General.....	43
6.3 Prerequisites.....	43
6.4 Recommended tools.....	44
6.5 Safety information.....	44
6.6 Procedure	45
7 Replace a Beacon 6 (HA-0336G-A).....	47
7.1 Purpose	47
7.2 General.....	48
7.3 Prerequisites.....	48
7.4 Recommended tools.....	48
7.5 Safety information.....	48
7.6 Procedure	49
8 Configure a Beacon 6 (HA-0336G-A).....	52
8.1 GUI configuration.....	52
8.1.1 Login.....	53

8.1.2 Device and connection status.....	55
8.1.3 Network configuration	66
8.1.4 Security configuration	90
8.1.5 Application configuration.....	103
8.1.6 Maintenance	109
8.1.7 RG troubleshooting counters.....	119

List of figures

2	ANSI BEACON 6 safety
	guidelines.....17
Figure 1	Sample safety label.....19
3	ETSI BEACON 6 safety
	guidelines23
Figure 2	Sample safety label.....26
4	ETSI environmental and CROHS guidelines.....29
Figure 3	Products below MCV value label.....30
Figure 4	Products above MCV value label31
Figure 5	Recycling/take back/disposal of product symbol.....33
5	Beacon 6 (HA-0336G-A) unit data
	sheet35
Figure 6	Beacon 6 (HA-0336G-A) WiFi gateway/beacon43
Figure 7	Beacon 6 (HA-0336G-A) physical connections.....47
Figure 8	Single-residence WiFi BEACON 6 with Gigabit Ethernet.....50
6	Install a Beacon 6 (HA-0336G-A)53
Figure 9	Beacon 6 (HA-0336G-A) connections.....55
7	Replace a Beacon 6 (HA-0336G-A).....57
Figure 10	Beacon 6 (HA-0336G-A) connections.....59
8	Configure a Beacon 6 (HA-0336G-A).....61
Figure 11	Beacon 6 (HA-0336G-A) web-based GUI dashboard.....61
Figure 12	Beacon 6 (HA-0336G-A) web-based GUI dashboard—Bridge mode.....62
Figure 13	Beacon 6 (HA-0336G-A) web-based GUI dashboard—Factory default mode.....62
Figure 14	Web login window.....63
Figure 15	Web login window—password hint.....64
Figure 16	Device Information window.....65
Figure 17	LAN status window.....68
Figure 18	WAN Status window.....70
Figure 19	WAN Status IPv6 window.....71
Figure 20	Home Networking information window.....73
Figure 21	LAN ports statistics window.....75
Figure 22	LAN settings window.....76
Figure 23	LAN IPv6 network window.....78
Figure 24	WAN window - Route Mode80

Figure 25	WAN window - Bridge Mode.....	80
Figure 26	WAN DHCP window.....	82
Figure 27	Wireless 2.4GHz network window.....	84
Figure 28	Wireless 5GHz network window.....	87
Figure 29	Wireless Schedule window.....	89
Figure 30	IP Routing window.....	90
Figure 31	DNS network window	92
Figure 32	TR-069 network window.....	93
Figure 33	QoS Config window (L2).....	94
Figure 34	Mesh window.....	96
Figure 35	Mesh window—Enable Bridge Mode.....	97
Figure 36	Mesh window—Enable Bridge Mode confirmation.....	97
Figure 37	Firewall window.....	99
Figure 38	MAC filter window.....	101
Figure 39	IP filter window	103
Figure 40	URL Filter window	104
Figure 41	Parental Control window.....	105
Figure 42	DMZ and ALG window.....	107
Figure 43	Access Control window	109
Figure 44	Port forwarding window.....	111
Figure 45	Port Triggering window.....	112
Figure 46	DDNS window	113
Figure 47	NTP window	114
Figure 48	UPnP and DLNA window.....	115
Figure 49	Password window.....	116
Figure 50	Device Management window.....	117
Figure 51	Backup and Restore window.....	118
Figure 52	Firmware Upgrade window.....	119
Figure 53	Reboot Device window.....	120
Figure 54	Factory Default window.....	121
Figure 55	Diagnostics window.....	122
Figure 56	Log window.....	123

List of tables

2	ANSI	BEACON	6	safety
	guidelines.....		17	
Table 1	Safety labels.....			18
3	ETSI	BEACON	6	safety
	guidelines		23	
Table 2	Safety labels.....			24
Table 3	Safety labels.....			25
5	Beacon	6	(HA-0336G-A)	unit data
	sheet		35	
Table 4	Beacon	6		(HA-0336G-A)
	identification.....			35
Table 5	Beacon	6	(HA-0336G-A)	power supply ordering
	information.....			38
Table 6	Beacon	6	(HA-0336G-A)	function
	detail.....			44
Table 7	Beacon	6	(HA-0336G-A)	interface connection
	capacity			46
Table 8	Beacon	6	(HA-0336G-A)	physical
	connections.....			47
Table 9	Beacon	6	(HA-0336G-A)	LED
	indications.....			48
Table 10	Beacon	6	(HA-0336G-A)	physical
	specifications.....			48
Table 11	Beacon	6	(HA-0336G-A)	power consumption
	specifications.....			49
Table 12	Beacon	6	(HA-0336G-A)	environmental
	specifications.....			49
8	Configure	a	Beacon	6 (HA-0336G-A).....
	A).....		61	
Table 13	Device Information parameters			65
Table 14	LAN status parameters.....			69
Table 15	WAN Status parameters.....			70
Table 16	WAN status IPv6 parameters.....			72
Table 17	Home Networking parameters.....			73
Table 18	LAN parameters			77
Table 19	LAN IPv6 network parameters.....			78
Table 20	WAN parameters - Route Mode.....			81
Table 21	WAN parameters - Bridge Mode			81
Table 22	WAN DHCP parameters.....			82
Table 23	Wireless 2.4GHz network parameters.....			85
Table 24	Wireless 5GHz network parameters.....			87
Table 25	IP Routing parameters.....			91
Table 26	DNS network parameters.....			92
Table 27	TR-069 network parameters.....			93
Table 28	QoS Config parameters.....			95
Table 29	Mesh parameters.....			96

Table 30	Firewall parameters.....	99
Table 31	MAC filter parameters.....	101
Table 32	IP filter parameters.....	103
Table 33	URL Filter parameters.....	105
Table 34	Parental control parameters.....	106
Table 35	DMZ and ALG parameters	107
Table 36	Access control parameters.....	110
Table 37	Port forwarding parameters.....	111
Table 38	Port triggering parameters.....	112
Table 39	DDNS parameters.....	114
Table 40	Password parameters.....	117
Table 41	Device Management parameters	118

2 ANSI BEACON 6 safety guidelines

This chapter provides information about the mandatory regulations that govern the installation and operation of devices in the North American or ANSI market.

2.1 Safety instructions

This section describes the safety instructions that are provided in the BEACON 6 customer documentation and on the equipment.

2.1.1 Safety instruction boxes in customer documentation

The safety instruction boxes are provided in the BEACON 6 customer documentation. Observe the instructions to meet safety requirements.

The following is an example of the Danger box.



Danger — Possibility of personal injury.

The Danger box indicates that the described activity or situation may pose a threat to personal safety. It calls attention to a situation or procedure which, if not correctly performed or adhered to, may result in death or serious physical harm.

Do not proceed beyond a Danger box until the indicated conditions are fully understood and met.

The following is an example of the Warning box.



Warning 1 — Possibility of equipment damage.

Warning 2 — Possibility of data loss.

The Warning box indicates that the described activity or situation may, or will, cause equipment damage, loss of data, or serious performance problems. It identifies a possible equipment-damaging situation or provides essential information to avoid the degradation of system operations or data.

Do not proceed beyond a warning until the indicated conditions are fully understood and met.
The following is an example of the Caution box.



- Caution 1** — Possibility of service interruption.
- Caution 2** — Service interruption.

The Caution box indicates that the described activity or situation may, or will, cause service interruption.

Do not proceed beyond a caution until the indicated conditions are fully understood and met.

The following is an example of the Note box.



Note — Information of special interest.

The Note box provides information that assists the personnel working with devices. It does not provide safety-related instructions.

2.1.2 Safety-related labels

The Beacon 6 is labeled with specific safety compliance information and instructions that are related to the BEACON 6. Observe the instructions on the safety labels.

Table 1 provides the description of the logos in the Beacon 6 label.

Table 1 **Safety label**

Logo	Description
ETL compliance	Communication service equipment US listed.
FCC standards compliance	Tested to comply with FCC standards for home or office use.

Figure 1 shows the label located on the bottom of the Beacon 6 (HA-0336G-A).

Figure 1 Beacon 6 safety label



2.2 Safety standards compliance

This section describes the BEACON 6 compliance with North American safety standards.



Warning — Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

2.2.1 EMC, EMI, and ESD standards compliance

The Beacon 6 complies with the following requirements:

- Federal Communications Commission (FCC) CFR 47, Part 15, Subpart B, Class B requirements for equipment

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television

reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

2.2.2 Energy-related products standby and off modes compliance

Hereby, Nokia declares that the Beacon 6 (HA-0336G-A) devices are in compliance with the essential requirements and other relevant provisions of [Directive 2009/125/EC together with Commission Regulation \(EC\) No 1275/2008 and Commission Regulation \(EC\) No 801/2013](#).

The Beacon 6 (HA-0336G-A) devices qualify as high network availability (HiNA) equipment. Since the main purpose of Beacon 6 (HA-0336G-A) devices is to provide network functionality with HiNA 7 days/24 hours, the modes Off/Standby, Power Management, and Networked Standby are inappropriate.

For information about the type and number of network ports, see [“Beacon 6 \(HA-0336G-A\) interfaces and interface capacity”](#) in chapter 5.

For information about power consumption, see [“Beacon 6 \(HA-0336G-A\) detailed specifications”](#) in chapter 5.

2.2.3 FCC statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which

can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

2.2.4 FCC Radiation Exposure Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 26cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and consider removing the no-collocation statement.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1 this device may not cause harmful interference, and
- 2 this device must accept any interference received, including interference that may cause undesired operation.



Caution — Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

2.2.5 Resistibility requirements compliance

The Beacon 6 complies with the requirements of ITU Recommendation K.21 for resistibility of telecommunication equipment installed in customer premises to overvoltage and overcurrents.

2.3 Electrical safety guidelines

This section provides the electrical safety guidelines for the Beacon 6. Beacon 6 (HA-0336G-A) devices are compliant with the following standards

- IEC 62368-1
- UL 62368-1



Note — The devices comply with the U.S. National Electrical Code. However, local electrical authorities have jurisdiction when there are differences between the local and U.S. standards.

2.3.1 Power supplies

The use of any non-Nokia approved power supplies or power adapters is not supported or endorsed by Nokia. Such use will void any warranty or support contract with Nokia. Such use greatly increases the danger of damage to equipment or property.

2.3.2 Cabling

The following are the guidelines regarding cables used for the Beacon 6:

- Use only cables approved by the relevant national electrical code.

3 ETSI BEACON 6 safety guidelines

This chapter provides information about the mandatory regulations that govern the installation and operation of devices.

3.1 Safety instructions

This section describes the safety instructions that are provided in the BEACON 6 customer documentation and on the equipment.

3.1.1 Safety instruction boxes

The safety instruction boxes are provided in the BEACON 6 customer documentation. Observe the instructions to meet safety requirements.

The following is an example of the Danger box.



Danger — Possibility of personal injury.

The Danger box indicates that the described activity or situation may pose a threat to personal safety. It calls attention to a situation or procedure which, if not correctly performed or adhered to, may result in death or serious physical harm.

Do not proceed beyond a Danger box until the indicated conditions are fully understood and met.

The following is an example of the Warning box.



Warning 1 — Possibility of equipment damage.

Warning 2 — Possibility of data loss.

The Warning box indicates that the described activity or situation may, or will, cause equipment damage, loss of data, or serious performance problems. It identifies a possible equipment-damaging situation or provides essential information to avoid the degradation of system operations or data.

Do not proceed beyond a warning until the indicated conditions are fully understood and met.

The following is an example of the Caution box.



Caution 1 — Possibility of service interruption.

Caution 2 — Service interruption.

The Caution box indicates that the described activity or situation may, or will, cause service interruption.

Do not proceed beyond a caution until the indicated conditions are fully understood and met.

The following is an example of the Note box.



Note — Information of special interest.

The Note box provides information that assists the personnel working with devices. It does not provide safety-related instructions.

3.1.2 Safety-related labels

The Beacon 6 is labeled with the specific safety instructions and compliance information that is related to a variant of the BEACON 6. Observe the instructions on the safety labels.

Table 2 provides the description of logos in the Beacon 6 label.

Table 2 **Safety labels**

Logo	Description
CE marking	Indicates compliance to the European Council Directives including EN60950-1 safety

Figure 2 shows the label located on the bottom of the Beacon 6 (HA-0336G-A).

Figure 2 Beacon 6 label (ETSI variants)

3.2 Safety standards compliance

This section describes the BEACON 6 compliance with the European safety standards.

3.2.1 EMC, EMI, and ESD compliance

The Beacon 6 complies with the following EMC, EMI, and ESD requirements:

- EN 300-386 V1.6.1: Electromagnetic Compatibility and Radio Spectrum Matters (ERM): Telecommunications Network Equipment; Electromagnetic Compatibility (EMC) requirements; Electrostatic Discharge (ESD) requirements
- EN 301489-1: Electromagnetic Compatibility and Radio Spectrum Matters (ERM): Telecommunications Network Equipment; Electromagnetic Compatibility (EMC) Standard for Radio Equipment and Services; part 1: Common Technical Requirements
- EN 301489-17: Electromagnetic Compatibility and Radio Spectrum Matters (ERM); Electromagnetic Compatibility (EMC) Standard for Radio Equipment; Part 17: Specific Conditions for Broadband Data Transmission Systems.
- Radio Equipment Directive (RED) 2014/53/EU (applicable from 13 June 2016)

-
- EN 55032 (2015): Electromagnetic compatibility of multimedia equipment - Emission Requirements
 - EN 55024 (2010): Information Technology Equipment, Immunity Characteristics, limits and methods of measurement
 - Electromagnetic Compatibility (EMC) directive 2014/30/EU
 - European Council Directive 2004/108/EC
 - Low Voltage (LVD) directive 2014/35/EC

3.2.2 Equipment safety standard compliance

The Beacon 6 complies with the requirements of EN60950-1, Safety of Information Technology Equipment for use in a restricted location.

3.2.3 Environmental standard compliance

The Beacon 6 complies with the EN 300 019 European environmental standards.

3.2.4 CE RED RF Radiation Exposure Statement

This device complies with CE RED radiation exposure limits set forth for an uncontrolled environment. To comply with CE RED RF exposure compliance requirements, this grant is applicable only for mobile configurations. The antennas used for the transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

3.2.5 Resistibility requirements compliance

The Beacon 6 complies with the requirements of ITU Recommendation K.21 for resistibility of telecommunication equipment installed in customer premises to over voltage and overcurrents.

3.2.6 Acoustic noise emission standard compliance

The Beacon 6 complies with EN 300 753 acoustic noise emission limit and test methods.

3.3 Electrical safety guidelines

This section provides the electrical safety guidelines for the Beacon 6.



Note — The devices comply with BS EN 61140.

3.3.1 Power supplies

The use of any non-Nokia approved power supplies or power adapters is not supported or endorsed by Nokia. Such use will void any warranty or support contract with Nokia. Such use greatly increases the danger of damage to equipment or property.

3.3.2 Cabling

The following are the guidelines regarding cables used for the Beacon 6:

- All cables must be approved by the relevant national electrical code.

4 ETSI environmental and CRoHS guidelines

This chapter provides information about the ETSI environmental China Restriction of Hazardous Substances (CRoHS) regulations that govern the installation and operation of devices. This chapter also includes environmental operation parameters of general interest.

4.1 CRoHS Environmental Requirements

This section describes the environmental instructions that are provided with the customer documentation, equipment, and location where the equipment resides.

4.1.1 Overview

CRoHS is applicable to Electronic Information Products (EIP) manufactured or sold and imported in the territory of the mainland of the People's Republic of China. EIP refers to products and their accessories manufactured by using electronic information technology, including electronic communications products and such subcomponents as batteries and cables.

4.1.2 Environmental related labels

Environmental labels are located on appropriate equipment. The following are sample labels.

4.1.2.1 Products below Maximum Concentration Value (MCV) label

Figure 3 shows the label that indicates a product is below the maximum concentration value, as defined by standard SJ/T11363-2006 (Requirements for

Concentration Limits for Certain Hazardous Substances in Electronic Information Products). Products with this label are recyclable. The label may be found in this documentation or on the product.

Figure 3 Products below MCV value label



18986

**4.1.2.2 Products containing hazardous substances above
Maximum Concentration Value (MCV) label**

Figure 4 shows the label that indicates a product is above the maximum concentration value, as defined by standard SJ/T11363-2006 (Requirements for Concentration Limits for Certain Hazardous Substances in Electronic Information Products). The number contained inside the label indicates the Environment-Friendly User Period (EFUP) value. The label may be found in this documentation or on the product.

Figure 4 Products above MCV value label

18985

Together with major international telecommunications equipment companies, Nokia has determined it is appropriate to use an EFUP of 50 years for network infrastructure equipment and an EFUP of 20 years for handsets and accessories. These values are based on manufacturers' extensive practical experience of the design, manufacturing, maintenance, usage conditions, operating environments, and physical condition of infrastructure and handsets after years of service. The values reflect minimum values and refer to products operated according to the intended use conditions. See "[Hazardous Substances Table \(HST\)](#)" for more information.

4.1.3 Hazardous Substances Table (HST)

This section describes the compliance of the BEACON 6 to the CRoHS standard when the product and subassemblies contain hazardous substances beyond the MCV value. This information is found in this user documentation where part numbers for the product and subassemblies are listed. It may be referenced in other OLT and BEACON 6 documentation.

In accordance with the People's Republic of China Electronic Industry Standard Marking for the Control of Pollution Caused by Electronic Information Products (SJ/T11364-2006), customers may access the Nokia Hazardous Substance Table, in Chinese, from the following location:

- <http://www.alcatel-sbell.com.cn/wwwroot/images/upload/private/1/media/ChinaRoHS.pdf>

4.2 ETSI environmental requirements

Observe the following environmental requirements when handling BEACON 6

4.2.1 BEACON 6 environmental requirements

See the BEACON 6 technical specification documentation for more information about temperature ranges.

4.2.2 Transportation

According to EN 300-019-1-2 - Class 2.3, transportation of the equipment must be in packed, public transportation with no rain on packing allowed.

4.2.3 EU RoHS

European Union (EU) Directive 2011/65/EU, “Restriction of the use of certain Hazardous Substances” (RoHS), restricts the use of lead, mercury, cadmium, hexavalent chromium, and certain flame retardants in electrical and electronic equipment. Nokia products shipped to the EU comply with the EU RoHS Directive.

Nokia has implemented a material/substance content management process. The process is described in: Nokia process for ensuring RoHS Compliance (1AA002660031ASZZA). This ensures compliance with the European Union Directive 2011/65/EU on the Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment.

4.2.4 End-of-life collection and treatment

Electronic products bearing or referencing the symbol shown in Figure 5, when put on the market within the European Union (EU), shall be collected and treated at the end of their useful life, in compliance with applicable EU and local legislation. They shall not be disposed of as part of unsorted municipal waste. Due to materials that may be contained in the product, such as heavy metals or batteries,

the environment and human health may be negatively impacted as a result of inappropriate disposal.



Note — In the European Union, a solid bar under the symbol for a crossed-out wheeled bin indicates that the product was put on the market after 13 August 2005.

Figure 5 Recycling/take back/disposal of product symbol



About mark is used in compliance to European Union WEEE Directive (2012/19/EU).

There can be different requirements for collection and treatment in different member states of the European Union.

In compliance with legal requirements and contractual agreements, where applicable, Nokia will offer to provide for the collection and treatment of Nokia products bearing the logo shown in Figure 5 at the end of their useful life, or products displaced by Nokia equipment offers. For information regarding take-back of equipment by Nokia, or for more information regarding the requirements for recycling/disposal of product, contact your Nokia account manager or Nokia take back support at sustainability.global@nokia.com.

5 Beacon 6 (HA-0336G-A) unit data sheet

5.1 Beacon 6 (HA-0336G-A) part numbers and identification

5.2 Beacon 6 (HA-0336G-A) general description

5.3 Beacon 6 (HA-0336G-A) software and installation feature support

5.4 Beacon 6 (HA-0336G-A) interfaces and interface capacity

5.5 Beacon 6 (HA-0336G-A) LEDs

5.6 Beacon 6 (HA-0336G-A) detailed specifications

5.7 Beacon 6 (HA-0336G-A) functional blocks

5.8 Beacon 6 (HA-0336G-A) special considerations

5.1 Beacon 6 (HA-0336G-A) part numbers and identification

Table 4 provides part numbers and identification information for the Beacon 6 (HA-0336G-A).

Table 4 Beacon 6 (HA-0336G-A) identification

Ordering part number	Provisioning number	Description	CLEC	CPR	ECI/ Bar code
3FE48064AA	3FE 47429 AA	Nokia WiFi Beacon 6 (HA-0336G-A), AX4200, US plug, US variant, 1 pack.			
3FE48065AA	3FE 47429 AA	Nokia WiFi Beacon 6 (HA-0336G-A), AX4200, US plug, US variant, 2 pack.			
3FE48064BA	3FE 47429 BA	Nokia WiFi Beacon 6 (HA-0336G-A), AX4200, EU plug, pan-EU variant, 1 pack.	—	—	—
3FE48065BA	3FE 47429 BA	Nokia WiFi Beacon 6 (HA-0336G-A), AX4200, EU plug, pan-EU variant, 2 pack.	—	—	—
3FE48064CA	3FE 47429 BA	Nokia WiFi Beacon 6 (HA-0336G-A), AX4200, UK plug, pan-EU variant, 1 pack.	—	—	—

3FE48065CA	3FE 47429 BA	Nokia WiFi Beacon 6 (HA-0336G-A), AX4200,UK plug, UK variant, 2 pack.	—	—	—
3FE48064DA	3FE 47429 DA	Nokia WiFi Beacon 6 (HA-0336G-A), AX4200,AU plug, UK variant, 1 pack.	—	—	—
3FE48065DA	3FE 47429 DA	Nokia WiFi Beacon 6 (HA-0336G-A), AX4200,AU plug, UK variant, 2 pack.	—	—	—

Table 5 provides power supply ordering information for the Beacon 6 (HA-0336G-A).

Table 5 Beacon 6 (HA-0336G-A) power supply ordering information

Beacon 6 ordering part number	Manufacturer	Applicable power supply model	Power information	Compliance detail	Notes
Kit: 3FE 47357 AA EMA: 3FE 47429 AA	Fu hua	UES24WU-120200SPA	12V 2A 24W AC/DC power adapter	ANSI municipality US, FCC/ETL	2-pin US input plug
	Ruide	RD1202000-C55-80MG	12V 2A 24W AC/DC power adapter	ANSI municipality US, FCC/ETL	2-pin US input plug
Kit: 3FE 47671 AA EMA: 3FE 47429 AA	Fu hua	UES24WU-120200SPA	12V 2A 24W AC/DC power adapter	ANSI municipality US, FCC/ETL	2-pin US input plug
	Ruide	RD1202000-C55-80MG	12V 2A 24W AC/DC power adapter	ANSI municipality US, FCC/ETL	2-pin US input plug
Kit: 3FE 47672 AA EMA: 3FE 47429 AA	Fu hua	UES24WU-120200SPA	12V 2A 24W AC/DC power adapter	ANSI municipality US, FCC/ETL	2-pin US input plug
	Ruide	RD1202000-C55-80MG	12V 2A 24W AC/DC power adapter	ANSI municipality US, FCC/ETL	2-pin US input plug
Kit: 3FE 47357 BA EMA: 3FE 47429 BA	Fu hua	UES24WV-120200SPA	12V 2A 24W AC/DC power adapter	Europe, CE certified	2-pin EU input plug
	Ruide	RD1202000-C55-800G	12V 2A 24W AC/DC power adapter	Europe, CE certified	2-pin EU input plug
Kit: 3FE 47671 BA EMA: 3FE 47429 BA	Fu hua	UES24WV-120200SPA	12V 2A 24W AC/DC power adapter	Europe, CE certified	2-pin EU input plug
	Ruide	RD1202000-C55-800G	12V 2A 24W AC/DC power adapter	Europe, CE certified	2-pin EU input plug


(1 of 5)

5.2 Beacon 6 (HA-0336G-A) general description

WiFi is abundantly deployed in home networks. Users crave a seamless experience at home including effortlessly connecting their wireless devices to the network. Traditional WiFi networks require unique SSIDs for each of the access points or tedious set-up of WiFi extenders, which complicate the user experience. The Nokia WiFi network simplifies the user experience by providing a seamless

mesh network with easy device onboarding and automated network optimization enhanced by easymesh.

The overall Nokia WiFi solution is composed of one Nokia WiFi gateway (or Nokia WiFi beacon) as root AP, one or more Nokia WiFi beacons, the Nokia WiFi Care Portal for the operator’s customer care team, and a mobile application for the end-user’s self care.




Note — The Nokia WiFi Care Portal can be accessed by the end user and the operator.

Beacon 6 (HA-0336G-A) is a Triband Wi-Fi6 router. It can be deployed as either an Ethernet residential gateway or a WiFi beacon in the Nokia WiFi solution. The residential gateway is the central point of the mesh network providing access to the broadband network (Internet) while the beacon aids with extending the WiFi coverage to every corner of the home, providing seamless roaming to wireless connected devices.

The Beacon 6 (HA-0336G-A) has built-in concurrent dual-band WiFi 802.11b/g/n/ax and 802.11 a/n/ac/ax networking with triple-play capability. Beacon 6 devices can be configured by using the Nokia WiFi Mobile App, which can be downloaded on both iOS and Android devices.

Figure 6 shows the Beacon 6 (HA-0336G-A).

Figure 6 Beacon 6 (HA-0336G-A) WiFi gateway/beacon

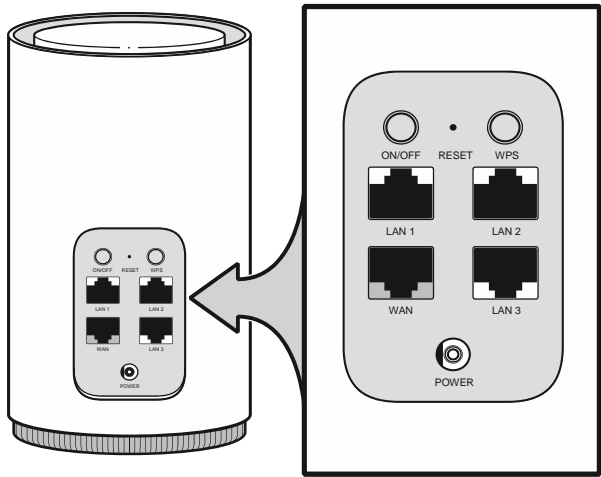

28231

The Beacon 6 (HA-0336G-A) provides the following functions and benefits.

Functions:

- Tri-band Wifi6: concurrent IEEE 802.11b/g/n/ax 2x3 2.4 GHz, 802.11 a/n/ac/ax 2x2 5.2 GHz, and 802.11 a/n/ac/ax 4x4 5.8 GHz
- Automatically decide on wireless router mode and beacon mode in a mesh network
- Three 10/100/1000Base-T interface with RJ-45 connectors
- One USB 3.1(gen1)
- Nokia intelligent Easy Mesh
- Embedded edge analytics optimize network performance in real-time
- UPnP IGD1.0 support
- DLNA

Benefits:

- OFDMA and MU-MIMO are multiuser technologies that enable simultaneous bidirectional communication between an access point (AP) and end users. While MU-MIMO increases capacity and efficiency in high-bandwidth applications like mission-critical voice calls and video streaming, OFDMA is ideal for low-bandwidth, small-packet applications such as IoT sensors.
- PHY rate up to 574 Mb/s for 2.4 GHz, 1200 M b/s for low 5 GHz, and 2400 Mb/s for High 5 GHz
- Improves connection speeds throughout the home and provides Wi-Fi where typically there would be none.
- Better Mesh performance by using dedicate 4x4 5G radio for Wi-Fi backhaul
- Seamless roaming (IEEE 802.11k and 802.11v)
- Client steering, channel optimization
- Real-time wireless spectrum scan and analysis
- High quality of service (QoS) video over Wi-Fi
- Ease of setup and user intuitive information

Table 6 lists additional function detail.

Table 6 Beacon 6 (HA-0336G-A) function detail

Function	Detail
Installation	Desk mounted

interfaces	<ul style="list-style-type: none"> • Three RJ45 Gigabit Ethernet LAN ports; one can be used as Ethernet backhaul link • Supports 2x2 802.11a/b/g/n/ac/ax 2.4 GHz wireless LAN (WLAN) interface • Supports 2x2 802.11a/b/g/n/ac/ax 5.2 GHz wireless LAN (WLAN) interface • Supports 4x4 802.11a/b/g/n/ac/ax 5.8 GHz wireless LAN (WLAN) interface • Maximum effective isotropic radiated power (EIRP) on 2.4 GHz up to 1000 mW, 5.2 GHz (5G low band) up to 1000mw, and 5.8 GHz (5G high band) up to 2 W • WPA support including WPA2 and WPA3 Personal and Enterprise encryption • Nokia Design for Security (DFSEC) requirement compliant • 64-bit and 128-bit Wired Equivalent Privacy (WEP) support
------------	--

(1 of 2)

Function	Detail
Router mode	<ul style="list-style-type: none"> • IPv4 • Point-to-Point Protocol over Ethernet (PPPoE) and IP over Ethernet (IPoE) • Network Address Translation (NAT), demilitarized zone (DMZ) and firewall • Dynamic Host Configuration Protocol (DHCP) and domain name system (DNS) proxy • Internet Group Management Protocol (IGMP) v2/v3 proxy • Supports TR-069 • Supports virtual private network (VPN) pass-through for Point-to-Point Tunneling protocol (PPTP), Layer 2 Tunneling Protocol (L2TP) and IPSec • Port forwarding and DMZ/dynamic domain name system (DDNS) • Flexible video delivery options over Ethernet or wireless • DLNA • UPnP IGD1.0 support
Beacon mode	<ul style="list-style-type: none"> • Supports IPv4 • Supports TR-069/TR-111 • Supports VPN pass-through for PPTP, L2TP and IPSec • IGMP v2/v3 snooping • Flexible video delivery options over Ethernet or wireless
LED	<ul style="list-style-type: none"> • Single LED for simple and intuitive status indication •
Regulatory compliance	<ul style="list-style-type: none"> • ETL • FCC Part 15 • CB • CE marking

(2 of 2)

5.2.1 TR-069 object support for WiFi parameters

The Beacon 6 (HA-0336G-A) supports the status retrieval and configuration of the following WiFi parameters via TR-069:

- channel
- SSID
- password for WPA and WEP
- Tx power (transmission rate in dBm)

These are the same TR-069 object parameters that are supported in the GUI. For more information, see Tables 23 and 24 in the chapter [“Configure a Beacon 6 \(HA-0336G-A\)”](#).

5.2.2 TR-069 authentication using TLS and CA certificates

Beacon 6 (HA-0336G-A) devices support encrypted remote TR-069 management using TLS, as well as ACS authentication using SHA-256 pre-installed certificates.

If the ACS URL is set to the https://... format, by default, the connection will use TLS without authentication mode. The Beacon 6 (HA-0336G-A) can also authenticate the ACS using a pre-installed CA certificate.

5.3 Beacon 6 (HA-0336G-A) software and installation feature support

For information on installing or replacing the Beacon 6 (HA-0336G-A), see:

- [Install a Beacon 6 \(HA-0336G-A\)](#)
- [Replace a Beacon 6 \(HA-0336G-A\)](#)

5.4 Beacon 6 (HA-0336G-A) interfaces and interface capacity

Table 7 describes the supported interfaces and interface capacity for Beacon 6 (HA-0336G-A) devices.


Table 7 Beacon 6 (HA-0336G-A) interface connection capacity

Device type and model	Maximum capacity								
	POTS	10/ 100 BASE-T	10/ 100/1000 BASE-T	RF video (CATV)	MoCA	VDSL2	E1/T1	Local craft	USB3.1(gen1)
Beacon 6 (HA-0336G-A)	—	—	3	—	—	—	—	—	1

5.4.1 Beacon 6 (HA-0336G-A) connections and components

Figure 7 shows the physical connections for Beacon 6 (HA-0336G-A).

Figure 7 Beacon 6 (HA-0336G-A) physical connections

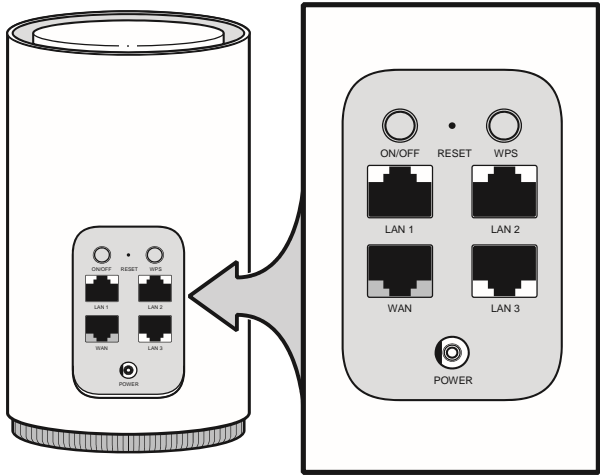

28231

Table 8 describes the physical connections for Beacon 6 (HA-0336G-A) devices.

Table 8 Beacon 6 (HA-0336G-A) physical connections

Connection	Description
On/Off button	This button powers the unit on or off.
WAN/LAN0 port	This connection is provided through an RJ-45 Gigabit Ethernet interface.
LAN 1/LAN 2	This connection is provided through Ethernet RJ-45 connectors. Up to three 10/100/1000 Base-T Ethernet interfaces are supported. The Ethernet ports can support both data and in-band video services on all three interfaces.
WPS ON/Off button	This button is used to start the WiFi Protected Setup (WPS) for new WiFi devices.

Reset button	Pressing the Reset button for less than 10 seconds reboots the Beacon; pressing the Reset button for 10 seconds or more restores the Beacon to its factory defaults.
Power input	This connection is provided through the power connector. A power cable fitted with a barrel connector is used to make the connection.

5.5 Beacon 6 (HA-0336G-A) LEDs

The circular top of the Beacon 6 (HA-0336G-A) functions as a multi-color LED indicator. The LED color and pulse rate acts as a signal to the home user, which indicates the state of the Beacon 6 and the quality of its backhaul link.

Table 9 provides LED descriptions for the Beacon 6 (HA-0336G-A).

Table 9 Beacon 6 (HA-0336G-A) LED indications

LED color	LED behavior	Router mode	Bridge mode	LED behavior description
Off	Off	✓	✓	Power off.
Blue-Green	Solid	✓		Good backhaul connection to the Internet.
	Solid		✓	Good backhaul connection. A link to the next node is available.
Yellow	Solid		✓	Backhaul connection is successful but not optimal. A link to the next node is below standard.
	Slow pulsing	✓	✓	Configuration mode. The unit is waiting to be configured.
Red	Solid	✓		No connection to the Internet.
	Solid		✓	Backhaul connection is not successful. A link to the next node is not operational.
	Fast pulsing	✓	✓	Factory reset
White	Slow pulsing	✓	✓	WPS enabled
	3 quick pulses	✓	✓	WPS successful
	Solid	✓	✓	Powering on

5.6 Beacon 6 (HA-0336G-A) detailed specifications

Table 10 lists the physical specifications for the Beacon 6 (HA-0336G-A).

Table 10 Beacon 6 (HA-0336G-A) physical specifications

Description	Specification
Length	61 mm (2.40 in.)

Width	160 mm (6.30 in.)
Height	205 mm (8.07in.)
Weight [within ± 0.5 lb (0.23 kg)]	766.0 g (1.69 lb)

Table 11 lists the power consumption specifications for the Beacon 6 (HA-0336G-A).

Table 11 Beacon 6 (HA-0336G-A) power consumption specifications

Maximum power (Not to exceed)	Condition	Minimum power	Condition
??	3 10/100/1000 Base-T Ethernet, WiFi operational	??	Interfaces/services not provisioned

Table 12 lists the environmental specifications for Beacon 6 (HA-0336G-A).


Table 12 Beacon 6 (HA-0336G-A) environmental specifications

Mounting method	Temperature range and humidity	Altitude
On desk or shelf	Operating: -5°C to 45°C (23°F to 113°F) ambient temperature	Contact your Nokia technical support representative for more information
	95% relative humidity, non-condensing at 40°C	
	Storage: -20°C to 85°C (-4°F to 185°F)	

5.7 Beacon 6 (HA-0336G-A) functional blocks

Beacon 6 (HA-0336G-A) devices are single-residence units that support Wireless (WiFi) service. WiFi service on these devices is compliant with the IEEE 802.11 standard. In addition to the WiFi service, these devices transmit Ethernet packets to three RJ-45 Ethernet ports.

Figure 8 shows the functional blocks for the Beacon 6 (HA-0336G-A).

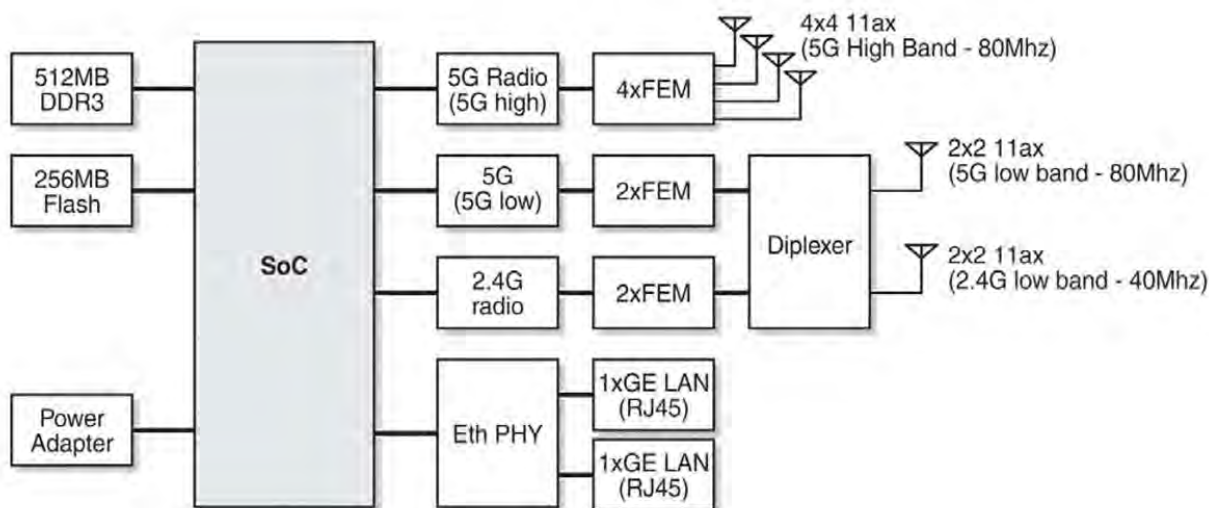Figure 8 Single-residence WiFi BEACON 6 with Gigabit Ethernet

28285

35

5.8 Beacon 6 (HA-0336G-A) special considerations

This section describes the special considerations for Beacon 6 (HA-0336G-A) devices.

5.8.1 WiFi service

Beacon 6 (HA-0336G-A) devices feature WiFi service as well as data services. WiFi is a wireless networking technology that uses radio waves to provide wireless HSI and network connections. This device complies with the IEEE 802.11 standards, which the WiFi Alliance defines as the basis for WiFi technology.

5.8.1.1 WiFi standards and certifications

The WiFi service on Beacon 6 (HA-0336G-A) devices supports the following IEEE standards and WiFi Alliance certifications:

- compliant with IEEE 802.11 standards
- certified for IEEE 802.11b/g/n/ac standards
- certified for Wi-Fi6

-
- WPA support including WPA-PSK
 - certified for WPA2-Personal and WPA2-Enterprise
 - certified for WPA3
 - certified for WMM, WMM-PS
 - certified for EasyMesh

5.8.1.2 Nokia WiFi app configuration

The Nokia WiFi mobile app can be used to set up the Beacon 6 (HA-0336G-A) and manage the network.

It can be downloaded from the App Store for iOS (<https://apps.apple.com/us/app/nokia-wifi/id1345278192>) and the Google Play store for Android (<https://play.google.com/store/apps/details?id=com.nokia.wifi>).

Information about the Nokia WiFi app can be found on the Nokia WiFi Help Center www.nokia.com/wifi/helpcenter.

5.8.1.3 WiFi GUI features

Beacon 6 (HA-0336G-A) devices have HTML-based WiFi configuration GUIs.

5.8.2 Beacon 6 (HA-0336G-A) considerations and limitations

For details about the considerations and limitations, see the CRN (Customer Release Notes).

6 Install a Beacon 6 (HA-0336G-A)

6.1 Purpose

6.2 General

6.3 Prerequisites

6.4 Recommended tools

6.5 Safety information

6.6 Procedure

6.1 Purpose

This chapter provides the steps to install a Beacon 6 (HA-0336G-A).

6.2 General

The steps listed in this chapter describe installing and cabling for a Beacon 6 (HA-0336G-A).

6.3 Prerequisites

You need the following items before beginning the installation:

- all required cables

6.4 Recommended tools

You need the following tools for the installation:

- RJ-45 cable
- paper clip

Install a Beacon 6 (HA-0336G-A)

6.5 Safety information

Read the following safety information before installing the unit.



Danger 1 — Hazardous electrical voltages and currents can cause serious physical harm or death. Always use insulated tools and follow proper safety precautions when connecting or disconnecting power circuits.

Danger 2 — Make sure all sources of power are turned off and have no live voltages present on feed lines or terminals. Use a voltmeter to measure for voltage before proceeding.

Danger 3 — Always contact the local utility company before connecting the enclosure to the utilities.



direct sunlight.
can damage the unit.

Caution — Keep indoor devices out of
Prolonged exposure to direct sunlight

Note 1 — Observe the local and national laws and regulations that may be applicable to this installation.



Note 2 — Observe the following:

- The device should be installed in accordance with the applicable requirements of the NEC or CEC. Local authorities and practices take precedent when there is conflict between the local standard and the NEC or CEC.
- The device must be installed by qualified service personnel.
- Indoor units must be installed with cables that are suitably rated and listed for indoor use.
- See the detailed specifications in the [Beacon 6 \(HA-0336G-A\) unit data sheet](#) for the temperature ranges for these devices.

Install a Beacon 6 (HA-0336G-A)

6.6 Procedure

Use this procedure to install a Beacon 6 (HA-0336G-A).


-
- 1 Place the unit on a flat surface, such as a desk or shelf.



Note — The Beacon 6 (HA-0336G-A) cannot be stacked with another or with other equipment. The installation requirements are:

- allow a minimum 100 mm clearance above the top cover
- allow a minimum 50 mm clearance from the side vents
- do not place any heat source directly above the top cover or below the bottom cover

-
- 2 Review the connection locations, as shown in [Figure 9](#).

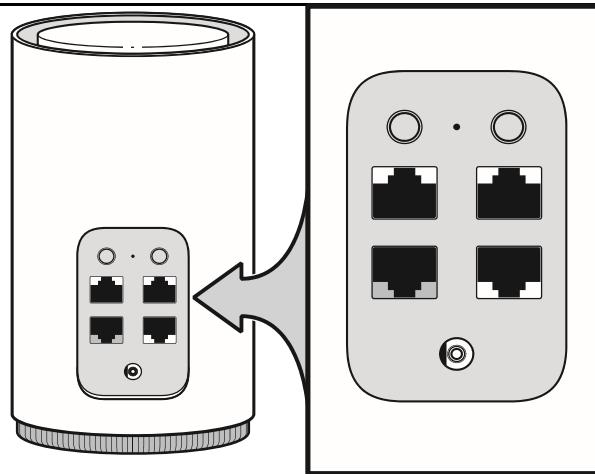Figure 9 Beacon 6 (HA-0336G-A) connections

28231

-
- 3 Connect the Ethernet cables to the RJ-45 ports; see Figure 9 for the location of the RJ-45 ports.
-

- 4 Connect the WAN cable to the RJ-45 WAN port; see Figure 9 for the location of the RJ-45 WAN port.
-

Install a Beacon 6 (HA-0336G-A)

-
- 5 Connect the power cable to the power connector.



Note — Observe the following:

- Units must be powered by a Listed or CE approved and marked limited power source power supply with a minimum output rate of 12 V dc, 2 A. The polarity of the power adapter plug must match the Beacon 6 (HA-0336G-A).
-

- 6 Power up the unit by using the On/Off power switch.
-

7 Verify the LEDs and voltage status.

8 Activate and test the services.

9 If necessary, reset the Beacon 6 (HA-0336G-A).



Note — Resetting the device will return all settings to factory default values; any configuration customization will be lost.

- i Locate the Reset button as shown in Figure 9.
- ii Insert the end of a straightened paper clip or other narrow object into the hole in the Reset button to reset the device.

10 STOP. This procedure is complete.

Replace a Beacon 6 (HA-0336G-A)

7 Replace a Beacon 6 (HA-0336G-A)

7.1 Purpose

7.2 General

7.3 Prerequisites

7.4 Recommended tools

7.5 Safety information

7.6 Procedure

7.1 Purpose

This chapter provides the steps to replace a Beacon 6 (HA-0336G-A).

7.2 General

The steps listed in this chapter describe mounting and cabling for a Beacon 6 (HA-0336G-A).

7.3 Prerequisites

You need the following items before beginning the installation:

- all required cables

7.4 Recommended tools

You need the following tools for replacing the Beacon 6 (HA-0336G-A):

- RJ-45 cable
- paper clip

Replace a Beacon 6 (HA-0336G-A)



7.5 Safety information

Read the following safety information before replacing the unit.

Danger 1 — Hazardous electrical voltages and currents can cause serious physical harm or death. Always use insulated tools and follow proper safety precautions when connecting or disconnecting power circuits.

Danger 2 — Make sure all sources of power are turned

off and have no live voltages present on feed lines or terminals. Use a voltmeter to measure for voltage before proceeding.

Danger 3 — Always contact the local utility company before connecting the enclosure to the utilities.



Caution — Keep indoor devices out of direct sunlight. Prolonged exposure to direct sunlight can damage the unit.



Note 1 — Observe the local and national laws and regulations that may be applicable to this installation.

Note 2 — Observe the following:

- The device should be installed in accordance with the applicable requirements of the NEC or CEC. Local authorities and practices take precedent when there is conflict between the local standard and the NEC or CEC.
- The device must be installed by qualified service personnel.
- Indoor units must be installed with cables that are suitably rated and listed for indoor use.
- See the detailed specifications in the [Beacon 6 \(HA-0336G-A\) unit data sheet](#) for the temperature ranges for these devices.

Replace a Beacon 6 (HA-0336G-A)


7.6 Procedure

Use this procedure to replace a Beacon 6 (HA-0336G-A).

- 1 Power down the unit by using the on/off power switch. See Figure 10 for the connections on

the Beacon 6 (HA-0336G-A).

Figure 10 Beacon 6 (HA-0336G-A) connections

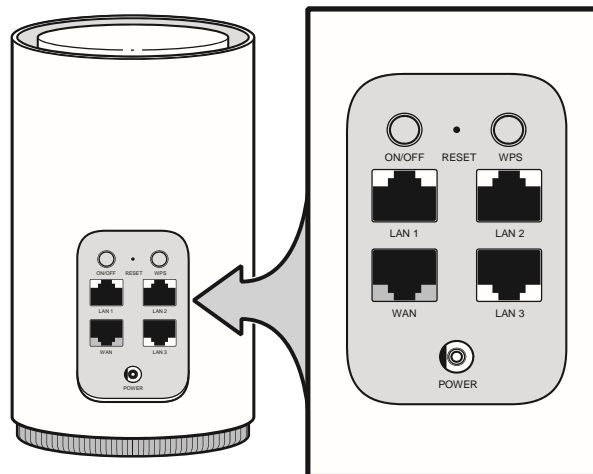

28231

-
- 2 Disconnect the WAN, Ethernet, and power cables from the Beacon 6 (HA-0336G-A); see Figure 10 for the connector locations on the Beacon 6 (HA-0336G-A).
-
- 3 Replace the Beacon 6 (HA-0336G-A) with the new device. The device can be placed on any flat surface, such as a desk or shelf.
-
- 4 Connect the Ethernet cables directly to the RJ-45 ports; see Figure 10 for the location of the RJ-45 ports.
-
- 5 Connect the WAN cable directly to the RJ-45 port; see Figure 10 for the location of the RJ-45 WAN port.

Replace a Beacon 6 (HA-0336G-A)

-
- 6 Connect the power cable to the power connector.

Note — Observe the following:



- Units must be powered by a Listed or CE approved and marked limited power source with a minimum output rate of 12 V dc, 2 A. The polarity of the power adapter plug must match the Beacon 6 (HA-0336G-A).

7 Power up the unit by using the On/Off power button.

8 Verify the LEDs and voltage status.

9 Activate and test the services.

10 If necessary, reset the Beacon 6 (HA-0336G-A).



Note — Resetting the device will return all settings to factory default values; any configuration customization will be lost.

- i Locate the Reset button on a Beacon 6 (HA-0336G-A) as shown in Figure 10.
- ii Insert the end of a straightened paper clip or other narrow object into the hole in the Reset button to reset the device.

11 STOP. This procedure is complete.

8 Configure a Beacon 6 (HA-0336G-A)

8.1 GUI configuration

8.1 GUI configuration

Use the procedures below to use the web-based GUI for the Beacon 6 (HA-0336G-A).

The Beacon 6 (HA-0336G-A) is used as an Ethernet gateway to connect devices in the home to the Internet. The GUI provides a variety of features for the home network including routing and firewall capability. By using the GUI, users can configure the right network connectivity for all equipment in their home, including personal computers, set-top boxes, mobile phones, and other consumer electronics devices, to the Internet.

Figure 11 shows the web-based GUI dashboard for the Beacon 6 (HA-0336G-A). Multilingual support is available when device names are displayed in the dashboard.

Figure 11 Beacon 6 (HA-0336G-A) web-based GUI dashboard

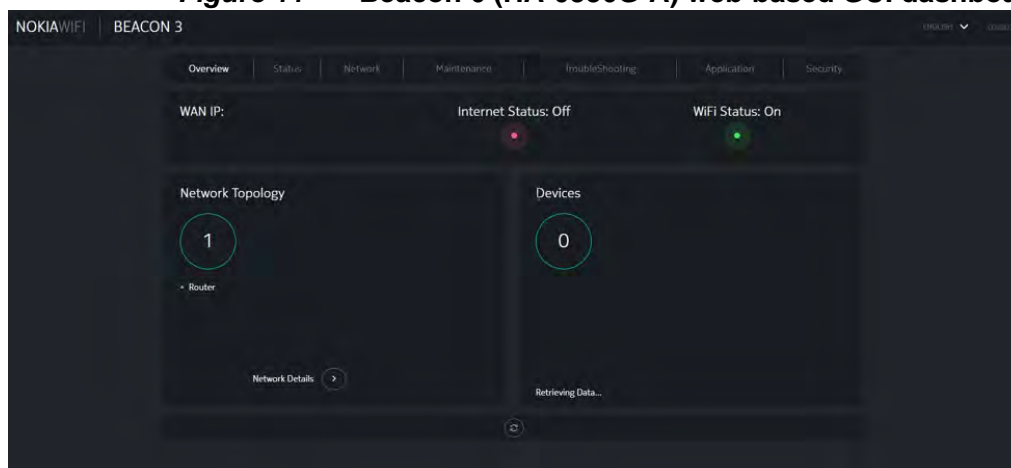



Figure 12 shows the web-based GUI dashboard for the Beacon 6 (HA-0336G-A) with Bridge mode in the network topology.

Figure 12 Beacon 6 (HA-0336G-A) web-based GUI dashboard—Bridge mode



Figure 13 shows the Beacon 6 (HA-0336G-A) factory default mode for the web-based GUI dashboard.

Figure 13 Beacon 6 (HA-0336G-A) web-based GUI dashboard—Factory default mode

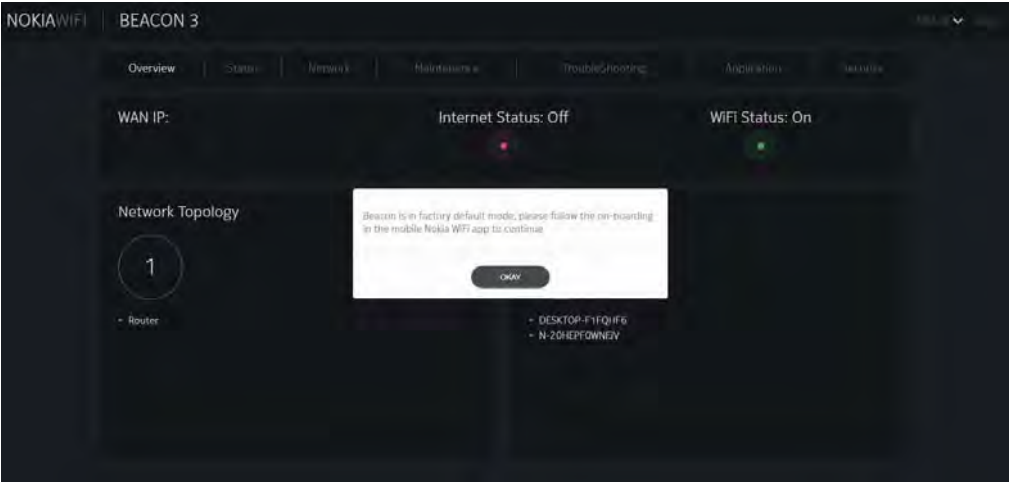

8.1.1 Login

Use the procedure below to login to the web-based GUI for the Beacon 6 (HA-0336G-A).

Procedure 6 Login to web-based GUI


- 1 Open a web browser and enter the IP address of the Beacon 6 (HA-0336G-A) in the address bar.
The login window appears.

The default gateway IP address is `http://192.168.18.1`. You can connect to this IP address using your web browser after connecting your PC to one of Ethernet ports of the Beacon 6 (HA-0336G-A). The static IP address of your PC must be in the same 192.168.18.x subnet as the Beacon 6 (HA-0336G-A).

- 2 Enter your username and password in the Log in window, as shown in Figure 14.

The default user name is admin. The default password is a random number, which is included in the product kit.


Figure 14 Web login window

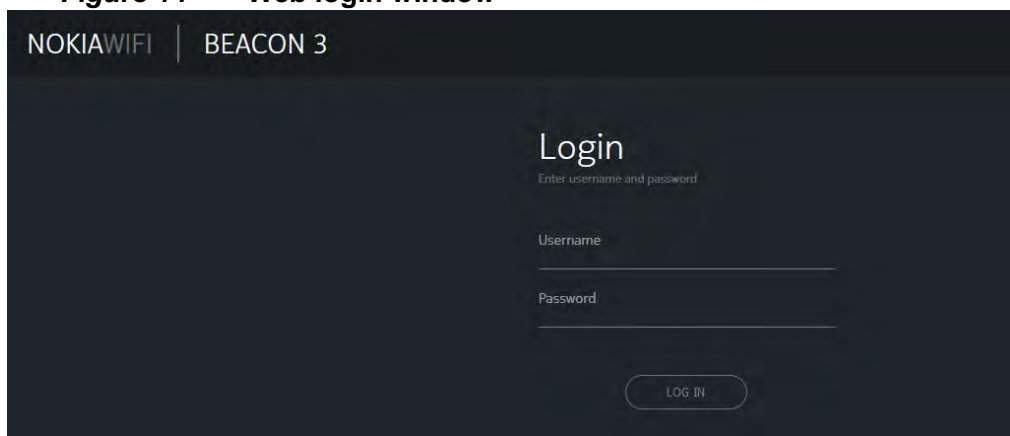

Caution — If you forget the current username and password, press the reset button for 10 seconds and the default values for the username and password will be recovered at startup.

Pressing the Reset button for less than 10 seconds reboots the device; pressing the Reset button for 10 seconds resets the device to the factory defaults.

Figure 15 shows the Web login window with a password hint dialog box.

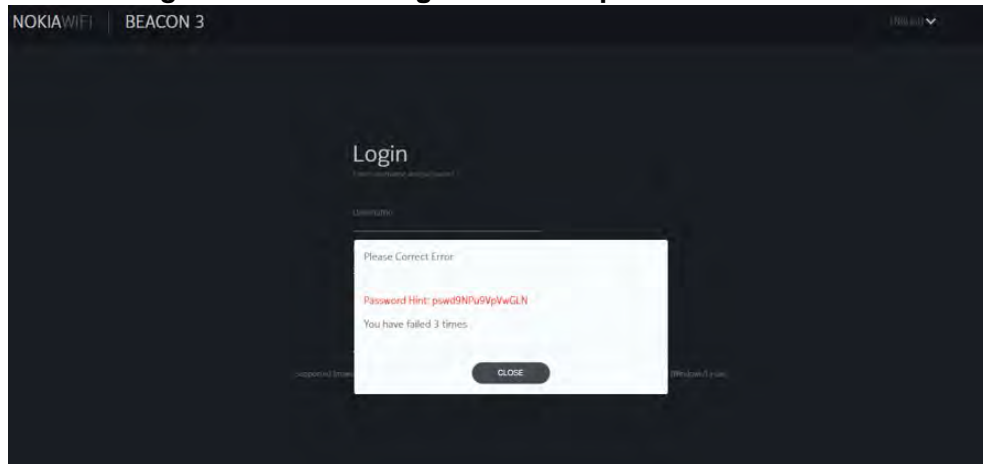Figure 15 Web login window—password hint

-
- 3 Click Login. The Device Information screen appears.



Note — To help protect the security of your Internet connection, the application displays a pop-up reminder to change both the WiFi password and the Beacon 6 (HA-0336G-A) password.

To increase password security, use a minimum of 10 characters, consisting of a mix of numbers and upper and lowercase letters.

-
- 4 STOP. This procedure is complete.
-

8.1.2 Device and connection status

The Beacon 6 (HA-0336G-A) supports the retrieval of a variety of device and connection information, including:

- device information
- LAN status
- WAN status
- WAN status IPv6
- home networking information

- statistics

Procedure 7 Device information retrieval

- 1 Select Status > Device Information from the top-level menu in the Ethernet Gateway window, as shown in Figure 16.

Figure 16 Device Information window

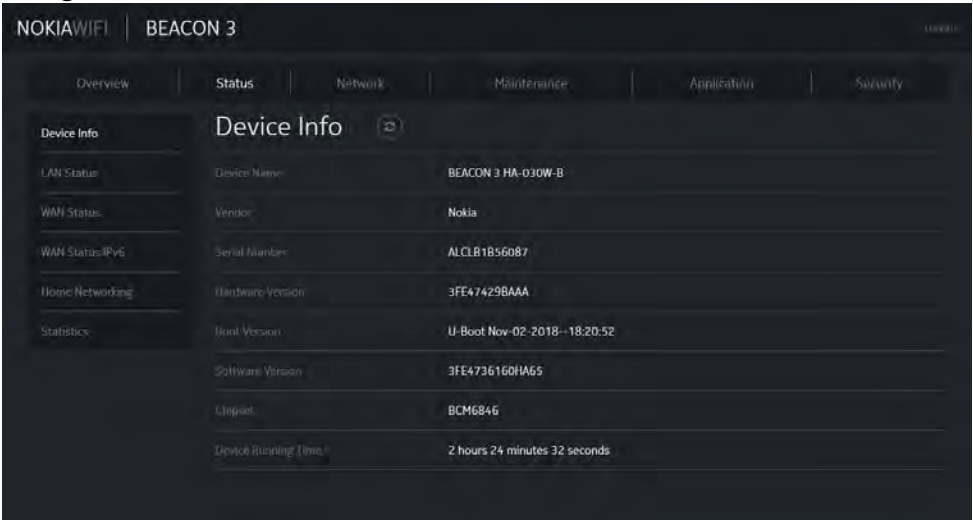


Table 13 describes the fields in the Device Information window.

Table 13 Device Information parameters

Field	Description
Device Name	Name on the Beacon 6 (HA-0336G-A)
Vendor	Name of the vendor
Serial Number	Serial number of the Beacon 6 (HA-0336G-A)
Hardware version	Hardware version of the Beacon 6 (HA-0336G-A)
Boot version	Boot version of the Beacon 6 (HA-0336G-A)
Software version	Software version of the Beacon 6 (HA-0336G-A)
Chipset	Chipset of the Beacon 6 (HA-0336G-A)
Device Running Time	Amount of time the device has run since last reset in hours, minutes, and seconds

- 2 Click Refresh to update the displayed information.

3 STOP. This procedure is complete.

Procedure 8 LAN status retrieval

- 1 Select Status > LAN Status from the top-level menu in the Ethernet Gateway window, as shown in Figure 17.

Figure 17 LAN status window

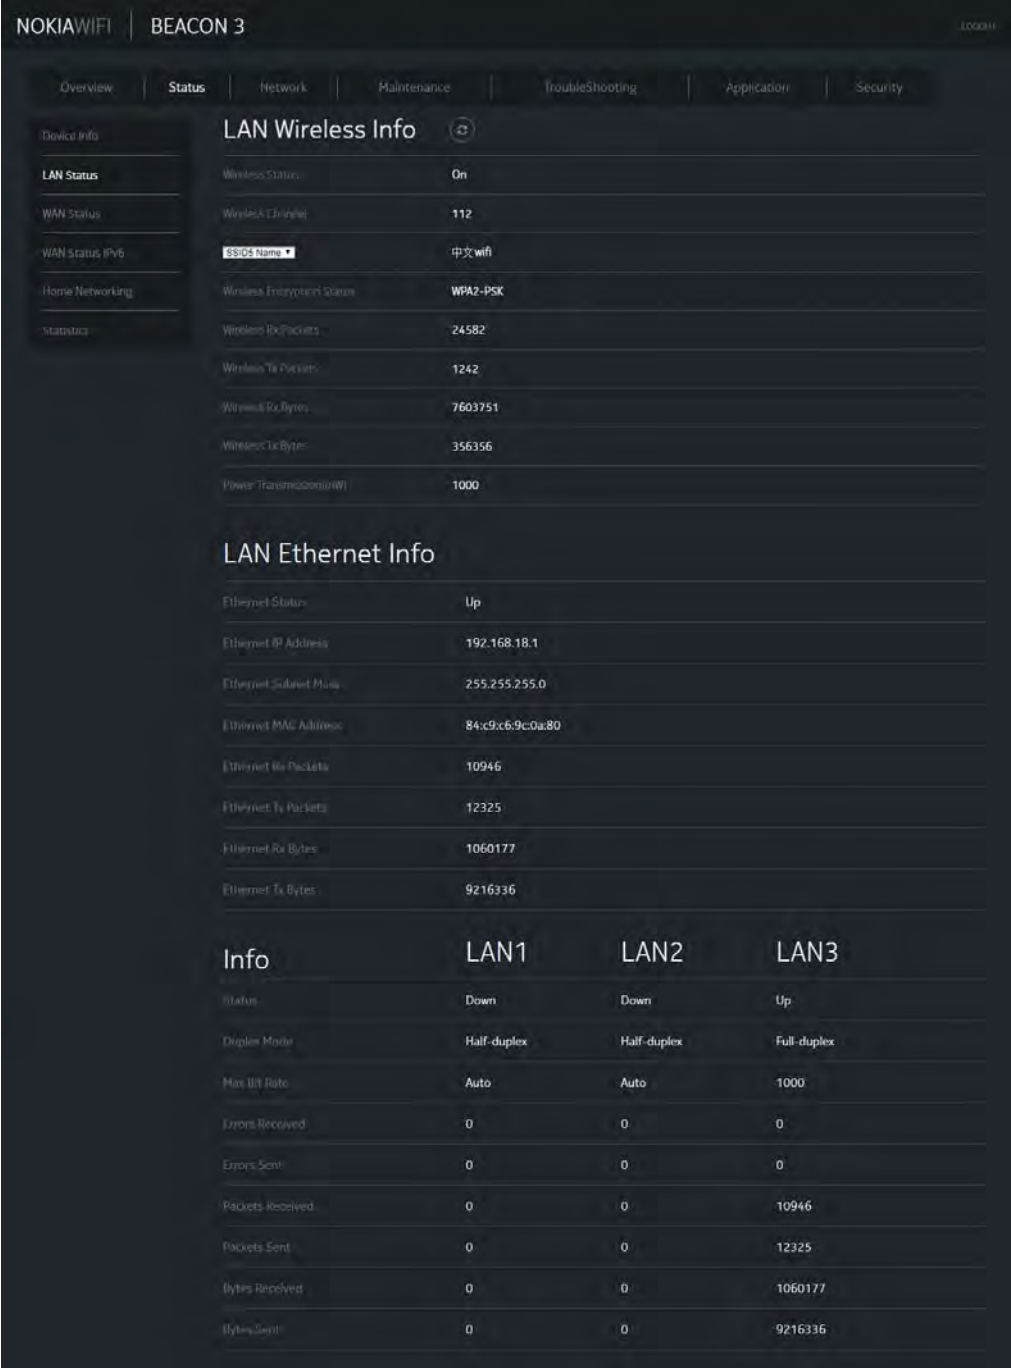


Table 14 describes the fields in the LAN status window.

Table 14 LAN status parameters

Field	Description
LAN Wireless Info	
Wireless Status	Indicates whether the wireless is on or off
Wireless Channel	Wireless channel number
SSID Name	Name of each multilingual SSID
Wireless Encryption Status	Encryption type used on the wireless connection
Wireless Rx Packets	Number of packets received on the wireless connection
Wireless Tx Packets	Number of packets transmitted on the wireless connection
Wireless Rx Bytes	Number of bytes received on the wireless connection
Wireless Tx Bytes	Number of bytes transmitted on the wireless connection
Power Transmission (mW)	Power of the wireless transmission, in mW
LAN Ethernet Info	
Ethernet Status	Indicates whether the Ethernet connection is on or off
Ethernet IP Address	IP address of the Ethernet connection
Ethernet Subnet Mask	Subnet Mask of the Ethernet connection
Ethernet MAC Address	MAC address of the Ethernet connection
Ethernet Rx Packets	Number of packets received on the Ethernet connection
Ethernet Tx Packets	Number of packets transmitted on the Ethernet connection
Ethernet Rx Bytes	Number of bytes received on the Ethernet connection
Ethernet Tx Bytes	Number of bytes transmitted on the Ethernet connection

2 Click Refresh to update the displayed information.

3 STOP. This procedure is complete.

Procedure 9 WAN status retrieval

- 1 Select Status > WAN Status from the top-level menu in the Ethernet Gateway window, as shown in Figure 18.

Figure 18 WAN Status window

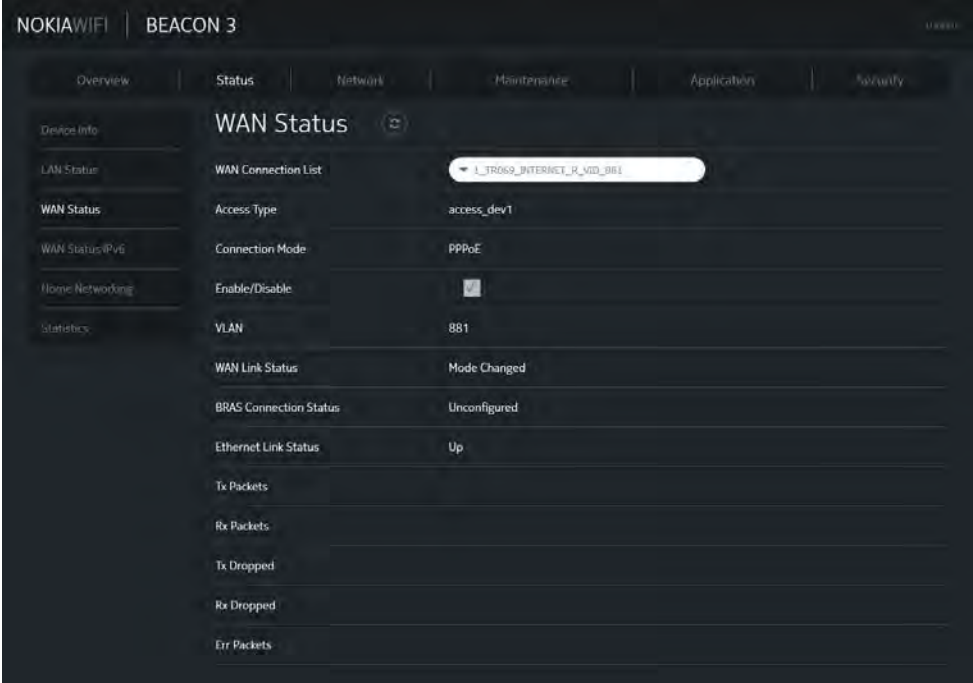


Table 15 describes the fields in the WAN Status window.

Table 15 WAN Status parameters

Field	Description
WAN connection list	Drop-down menu listing all WAN connections. The connection shown is the connection for which WAN status will be shown.
Connection Mode	Connection mode of the WAN connection
Enable/Disable	Select this checkbox to enable the WAN connection
VLAN	VLAN ID
WAN Link Status	Whether the WAN link is up or down
BRAS Connection Status	Read-only field indicating the status of the broadband remote access server
Ethernet Link Status	Whether the PON link is up or down
Tx Packets	Number of packets transmitted on the WAN connection

(1 of 2)

Field	Description
Rx Packets	Number of packets received on the WAN connection

Tx Dropped	Number of packets dropped on the transmit WAN connection
Rx Dropped	Number of packets dropped on the receive WAN connection
Err Packets	Number of errored packets on the WAN connection

(2 of 2)

- 2 Click Refresh to update the displayed information.
- 3 STOP. This procedure is complete.

Procedure 10 WAN status IPv6 retrieval

- 1 Select Status > WAN Status IPv6 from the top-level menu in the Ethernet Gateway window, as shown in Figure 19.

Figure 19 WAN Status IPv6 window



Table 16 describes the fields in the WAN status IPv6 window.

Table 16 WAN status IPv6 parameters

Field	Description
-------	-------------

WAN connection list	Drop-down menu listing all WAN connections. The connection selected is the connection for which WAN status will be shown.
Enable/Disable	Select this checkbox to enable the WAN connection
VLAN	VLAN ID
WAN Link Status	Whether the WAN link is up or down
Ethernet Link Status	Whether the link is up or down
Tx Packets	Number of packets transmitted on the WAN connection
Rx Packets	Number of packets received on the WAN connection
Tx Dropped	Number of packets dropped on the transmit WAN connection
Rx Dropped	Number of packets dropped on the receive WAN connection
Err Packets	Number of errored packets on the WAN connection

2 Click Refresh to update the displayed information.

3 STOP. This procedure is complete.

Procedure 11 Home networking information retrieval

-
- 1** Select Status > Home Networking from the top-level menu in the Ethernet Gateway window, as shown in Figure 20.

Figure 20 Home Networking information window

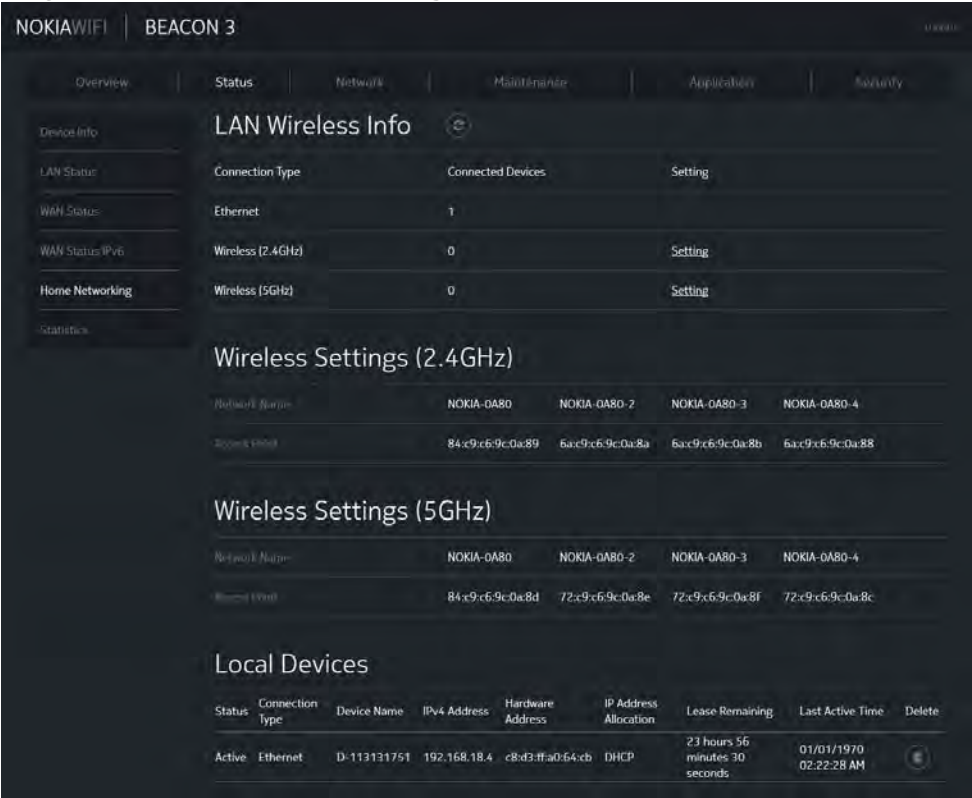


Table 17 describes the fields in the Home Networking window.

Table 17 Home Networking parameters

Field	Description
LAN Wireless Info	
Ethernet	Table displays the number of Ethernet connections and their settings
Wireless	Table displays the number of wireless connections and their settings
Wireless Settings (2.4GHz and 5GHz)	
Network Name	Name of the wireless network access point
Access Point	Hexadecimal address of the wireless access point
(1 of 2)	
Field	Description
Local Devices	

Table entry	Each entry indicates the status (active or inactive), connection type, device name, IP address, hardware address, and IP address allocation, lease remaining, and last active time of each connected local device.
-------------	--


(2 of 2)

-
- 2 Click Delete to delete a particular local device connection.
-
- 3 Click Refresh to update the displayed information.
-
- 4 STOP. This procedure is complete.
-

Procedure 12 Statistics retrieval

-
- 1 Select Status > Statistics from the top-level menu in the Ethernet Gateway window.
- Statistics are available for LAN ports, WAN ports, and WLAN ports.
- Figure 21 shows the statistics for the LAN ports.

Figure 21 LAN ports statistics window

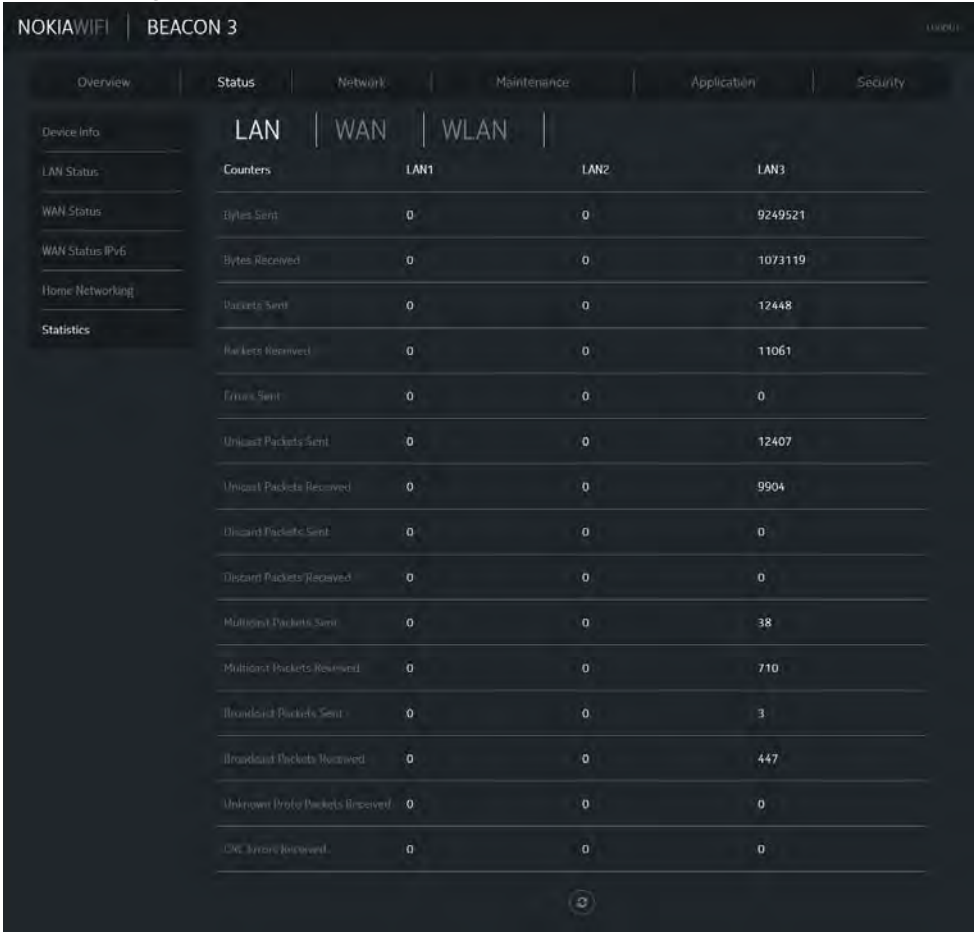

- 2 Click Refresh to update the displayed information.
- 3 STOP. This procedure is complete.

8.1.3 Network configuration

The Beacon 6 (HA-0336G-A) supports network configuration, including:

- LAN

-
- LAN IPv6
 - WAN
 - WAN DHCP
 - Wireless 2.4GHz
 - Wireless 5GHz
 - Wireless Schedule
 - IP routing
 - DNS
 - TR-069
 - QoS Configuration
 - Mesh

Procedure 13 LAN configuration

- 1 Select Network > LAN from the top-level menu in the Ethernet Gateway window, as shown in Figure 22.

Figure 22 LAN settings window

LAN

LAN IPv6

WAN

WAN DHCP

Wireless (2.4GHz)

Wireless (5GHz)

Wireless Scheduler

IP Routing

DNS

TR-069

QoS Config

MESH

LAN

IPv4 Address

Subnet Mask

DHCP Enable

DHCP Start IP Address

DHCP End IP Address

DHCP Lease Time

Primary DNS

Secondary DNS

Static DHCP

Mac Address

IPv4 Address

192.168.18.1

255.255.255.0

☒

192.168.18.2

192.168.18.253

1440

127.0.0.1

Static DHCP

ADD

MAC ADDRESS

IPv4 ADDRESS

DELETE

Table 18 describes the fields in the LAN window.

Table 18 LAN parameters

Field	Description
LAN	
IPv4 Address	IP Address of the ONT
Subnet Mask	Subnet mask of the ONT
DHCP enable	Select this checkbox to enable DHCP
DHCP Start IP Address	Starting DHCP IP address
DHCP End IP Address	Ending DHCP IP address
DHCP Lease Time	DHCP lease time (in min)
Primary DNS	Primary domain name server address
Secondary DNS	Secondary domain name server address

Static DHCP	
MAC Address	Hexadecimal MAC address to associate to the LAN
IPv4 Address	IP address to associate to the bound MAC address

- 2 Configure the LAN.
- 3 Click Save.
- 4 Bind a MAC address to the LAN by entering the MAC and IP addresses in the Static DHCP Entry fields and then clicking Add. Repeat for all MAC addresses to be bound.

Procedure 14 LAN IPv6 networking configuration

- 1 Select Network > LAN_IPv6 from the top-level menu in the Ethernet Gateway window, as shown in Figure 23.

Figure 23 LAN IPv6 network window



Table 19 describes the fields in the LAN IPv6 network window.

Table 19 LAN IPv6 network parameters

Field	Description
IPv6 LAN Host Configuration	
DNS Server	Choose a DNS server from the drop-down menu
Prefix Config	Choose a prefix config option from the drop-down menu, either WANConnection (prefix will be obtained from the WAN) or Static (enables you to enter the prefix).
Prefix	This field appears if you selected the "Static" option for the "prefix config" field. Type a connection.
Interface	This field appears if you selected the Wan Connection option for the "prefix config" field. Choose a WAN connection interface from the drop-down menu.
DHCPv6 Server Pool	
DHCP Start IP Address	Enter the starting DHCP IP address
DHCP End IP Address	Enter the ending DHCP IP address

(1 of 2)

Field	Description
Whether the address info through DHCP	Select this checkbox to enable address information retrieval through DHCP
Whether other info obtained through DHCP	Select this checkbox to enable retrieval of other information through DHCP
Maximum interval for periodic RA messages	Enter the maximum interval (in seconds) for periodic Router Advertisement messages. The interval range is from 4 to 1800.
Minimum interval for periodic RA messages	Enter the minimum interval (in seconds) for periodic Router Advertisement messages. The interval range is from 4 to 1800.

(2 of 2)

-
- 2** Choose a DNS server, Prefix Config, and Interface.
-
- 3** Enter the DHCP configuration information.
-
- 4** Enter the maximum and minimum intervals for RA messages.
-
- 5** Click Save/Apply.
-
- 6** STOP. This procedure is complete.
-

Procedure 15 WAN configuration

- 1 Select **Network > WAN** from the top-level menu in the Ethernet Gateway window, as shown in Figure 24 and Figure 25. The fields visible on screen change according to the Connection Mode: Route Mode or Bridge Mode.

Figure 24 WAN window - Route Mode


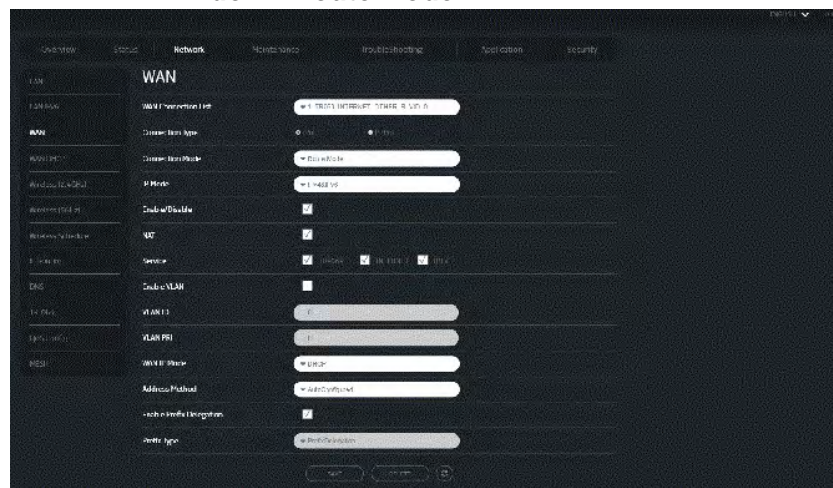


Figure 25 WAN window - Bridge Mode

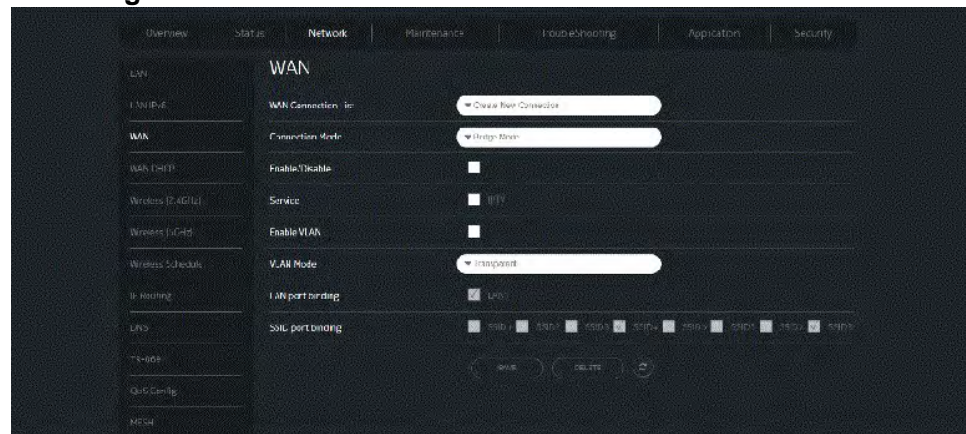

Tables 20 and 21 describe the fields in the WAN window. The fields visible on the screen change according to the Connection Mode: Route Mode or Bridge Mode.

Table 20 **WAN parameters - Route Mode**

Field	Description
WAN Connection List	Choose a WAN connection from the drop-down menu to set the connection parameters

Connection Type	Select a connection type: IPoE or PPPoE
Connection Mode	Choose the connection mode from the drop-down menu; either Route mode or Bridge mode
IP Mode	Choose an IP mode from the drop-down menu: IPv4 or IPv6
Enable/Disable	Select this checkbox to enable the WAN connection
NAT	Select this checkbox to enable NAT
Service	Select the checkboxes to enable service types for this connection
Enable VLAN	Select this checkbox to enable VLAN
VLAN ID	Enter the VLAN ID
VLAN PRI	Enter the VLAN PRI
WAN IP Mode	Choose an IP mode from the drop-down menu
Address Method	Choose the address method from the drop-down menu
Enable Prefix Delegation	Select the checkbox to enable prefix delegation
Prefix Type	Choose the prefix type from drop-down menu

Table 21 WAN parameters - Bridge Mode

Field	Description
WAN Connection List	Choose a WAN connection from the drop-down menu to set the connection parameters
Connection Mode ⁽¹⁾	Choose the connection mode from the drop-down menu; either Route mode or Bridge mode
Enable/Disable	Select this checkbox to enable the WAN connection
Service	Select the checkboxes to enable service types for this connection
Enable VLAN	Select this checkbox to enable VLAN
VLAN Mode	Choose a VLAN mode from the drop-down menu
LAN port binding	Select the checkbox(es) to bind selected LAN ports to the WAN connection
SSID port binding	Select the checkbox(es) to bind selected SSID ports to the WAN connection. The options are SSID ports 2, 3, 4, and 6-8; SSID ports 1 and 5 cannot be selected and are therefore grayed out.

Notes

⁽¹⁾ A warning pop-up message is displayed when Bridge mode is selected: "Please remove and re-insert the cables connected to the LAN ports. Reconnect to the SSIDs associated to the bridge WAN. Make sure that the extension beacons are not connected to the LAN ports associated to the bridge WAN." You can then accept or cancel the operation.

2 Configure a specific WAN connection.

- 3

Click Save.
- 4

STOP. This procedure is complete.

Procedure 16 WAN DHCP configuration

- 1 Select Network > WAN DHCP from the top-level menu in the Ethernet Gateway window, as shown in Figure 26.

Figure 26 WAN DHCP window

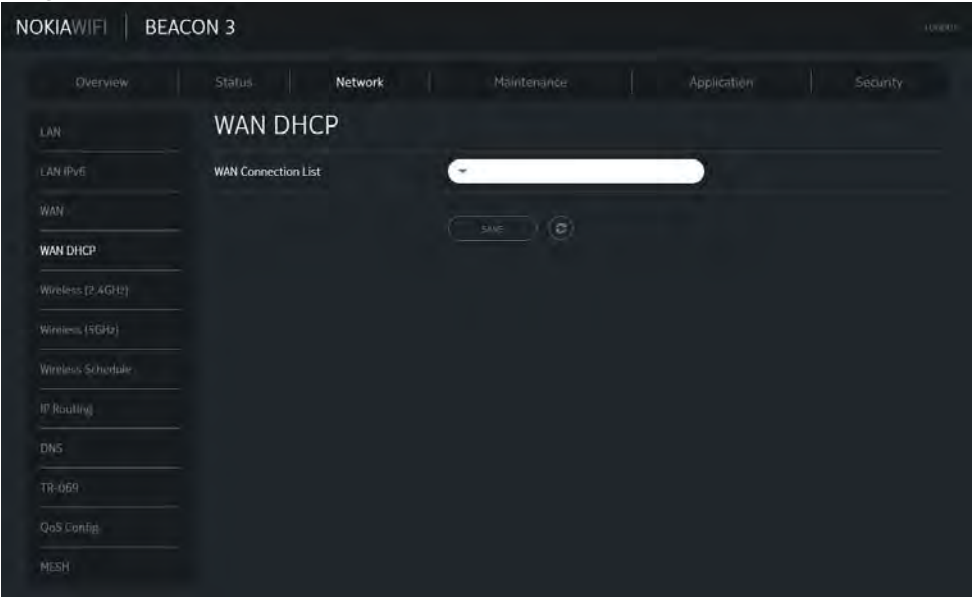


Table 22 describes the fields in the WAN DHCP window.

Table 22 WAN DHCP parameters

Field	Description
WAN Connection List	Choose a WAN connection from the drop-down menu
DHCP Option 50 persistent	Select this checkbox to enable DHCP Option 50
Enable DHCP Option 60	Select this checkbox to enable DHCP Option 60 (vendor class identifier)

(1 of 2)

Field	Description
Enable DHCP Option 61	Select this checkbox to enable DHCP Option 61 (client identifier)

(2 of 2)

2 Configure a WAN DHCP option.

3 Click Save.

4 STOP. This procedure is complete.

Procedure 17 Wireless 2.4G networking configuration

- 1 Select Network > Wireless 2.4GHz from the top-level menu in the Ethernet Gateway window, as shown in Figure 27.

Figure 27 Wireless 2.4GHz network window

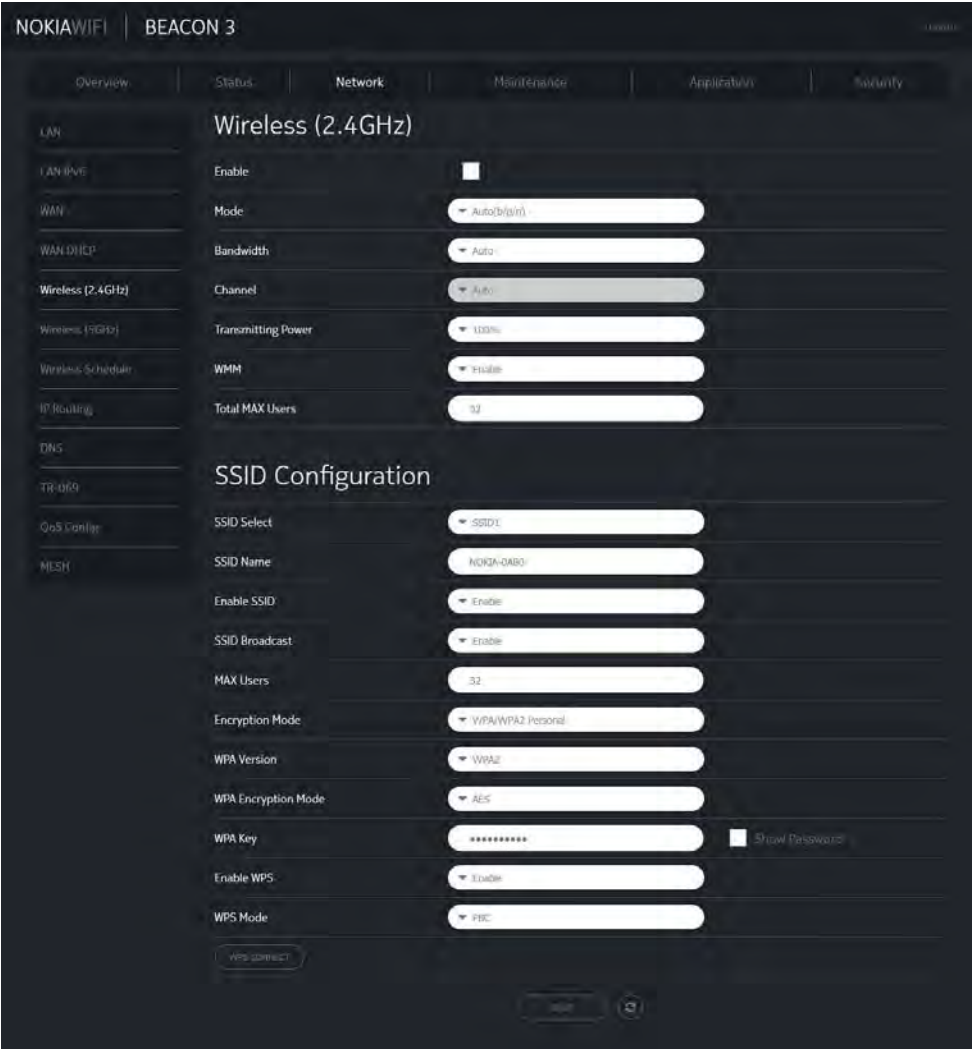


Table 23 describes the fields in the Wireless 2.4GHz network window.

Table 23 Wireless 2.4GHz network parameters

Field	Description
Wireless (2.4GHz)	

Enable	Select this checkbox to enable WiFi
Mode	Choose a WiFi mode from the drop-down menu: <ul style="list-style-type: none"> • auto (b/g/n) • b • g • n • b/g
Bandwidth	Choose 20 MHz or 40 MHz from the drop-down menu.
Channel	Choose a channel from the drop-down menu or choose Auto to have the channel automatically assigned
Transmitting Power	Choose the percentage transmitting power from the drop-down menu
WMM	Select this checkbox to enable or disable wireless multi media
Total MAX Users	Enter the total number of MAX users
SSID Configuration	
SSID Select	Choose the SSID from the drop-down menu
SSID Name	Enter the SSID name
Enable SSID	Enable or disable SSID from this drop-down menu
SSID Broadcast	Enable or disable SSID broadcast from this drop-down menu
MAX Users	Enter the number of MAX users
Encryption Mode	Choose an encryption mode from the drop-down menu: <ul style="list-style-type: none"> • OPEN • WEP • WPA/WPA2 Personal • WPA/WPA2 Enterprise
WPA Version	Choose a WPA version from the drop-down menu: <ul style="list-style-type: none"> • WPA1 • WPA2 • WPA1/WPA2
WPA Encryption Mode	Choose a WPA encryption mode from the drop-down menu: <ul style="list-style-type: none"> • TKIP • AES • TKIP/AES
WPA Key	Enter the WPA key
Enable WPS	Enable or disable WPS from this drop-down menu

WPS Mode	<p>Select a WPS mode from the drop-down menu:</p> <ul style="list-style-type: none">• PBC (Push Button Connect)• PIN AP (Personal Identification Number) generated by the AP (Access Point)• PIN STA (Personal Identification Number) generated by the WiFi client (STA)
----------	--

2 Configure the WiFi connection.

3 If you have enabled and configured WPS, click WPS connect.

4 Click Save.

5 STOP. This procedure is complete.

Procedure 18 Wireless 5G networking configuration

- 1 Select Network > Wireless 5GHz from the top-level menu in the Ethernet Gateway window, as shown in Figure 28.

Figure 28 Wireless 5GHz network window

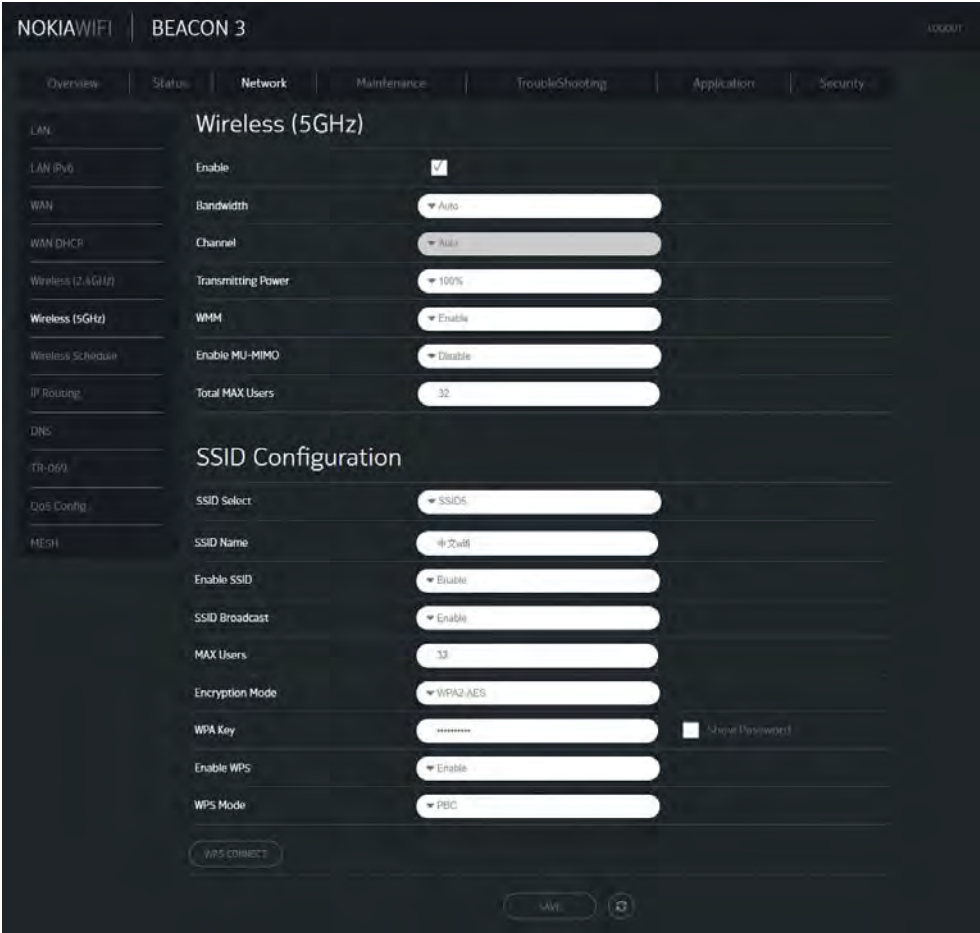


Table 24 describes the fields in the Wireless 5GHz network window.

Table 24 Wireless 5GHz network parameters

Field	Description
Wireless (5GHz)	
Enable	Select this checkbox to enable WiFi

(1 of 2)

Field	Description
Bandwidth	Choose from: <ul style="list-style-type: none"> • 20 MHz • 40 MHz • 80 MHz
Channel	Choose a channel from the drop-down menu or choose Auto to have the channel automatically assigned
Transmitting Power	Choose a percentage for the transmitting power from the drop-down menu: <ul style="list-style-type: none"> • Low (20%) • Medium (40%) • High (60%) • Maximum (100%)
WMM	Select this checkbox to enable or disable wireless multi media
Enable MU-MIMO	Choose Enable or disable MU-MIMO from this drop-down menu The default is Enable, which enables users and wireless terminals to communicate with each other. MU-MIMO may decrease WiFi performance for clients who do not support it, in which case Nokia recommends that you choose Disable.
Total MAX Users	Enter the total number of MAX users
DFS re-entry	Select this checkbox to enable or disable DFS re-entry
SSID Configuration	
SSID Select	Choose the SSID from the drop-down menu
SSID Name	Change the name of the selected multilingual SSID
Enable SSID	Choose Enable or disable SSID from this drop-down menu
SSID Broadcast	Choose Enable or disable SSID broadcast from this drop-down menu
MAX Users	Enter the number of MAX users
Encryption Mode	Choose an encryption mode from the drop-down menu: <ul style="list-style-type: none"> • OPEN • WEP • WPA/WPA2 Personal • WPA/WPA2 Enterprise ⁽¹⁾ ⁽²⁾
WPA Key	Enter the WPA key
Enable WPS	Choose Enable or disable WPS from this drop-down menu

(2 of 2)

Notes

- ⁽¹⁾ When Encryption Mode is set to "WPA/WPA2 Enterprise", the following options are no longer available: WPA version, WPA encryption mode, WPA key, Enable WPS, WPS mode.

⁽²⁾ When Encryption Mode is set to “WPA/WPA2 Enterprise”, the following options become available: Primary RADIUS server, port and password; Secondary RADIUS server, port, and password; RADIUS accounting port.

- 3 If you have enabled and configured WPS, click WPS connect.
- 4 Click Save.
- 5 STOP. This procedure is complete.

Procedure 19 Wireless scheduling

- 1 Select Network > Wireless Schedule from the top-level menu in the Ethernet Gateway window, as shown in Figure 29.

Figure 29 Wireless Schedule window



- 2 Select the Schedule Function checkbox to turn the wireless signal off for the configured period.

-
- 3 Click the plus sign (+) to add a scheduling rule.

A separate panel appears for configuring wireless schedule rules.

-
- 4 Enter a start time and end time for the period in which you want the wireless signal off.

-
- 5 Choose Everyday or Individual Days from the drop-down menu.

-
- 6 If you chose Individual Days, select the checkboxes for the desired days.

The Recurrence Pattern shows the rules created to date.

-
- 7 If desired, click the plus sign (+) to add more rules.

-
- 8 Click Save Changes.

-
- 9 STOP. This procedure is complete.
-

Procedure 20 IP Routing

-
- 1 Select Network > IP Routing from the top-level menu in the Ethernet Gateway window, as shown in Figure 30.

Figure 30 IP Routing window



Table 25 describes the fields in the IP Routing window.

Table 25 IP Routing parameters

Field	Description
Enable Routing	Select this checkbox to enable static routing
Destination IP Address	Enter the destination IP address
Destination Netmask	Enter the destination network mask
Gateway	Enter the gateway address
IPv4 Interface	Choose a WAN connection previously created in the WAN network window from the drop-down menu
Forwarding Policy	Choose a forwarding policy from the drop-down menu

2 Enter the routing information.

3 Click Add.

4 STOP. This procedure is complete.



Procedure 21 DNS configuration

- 1 Select Network > DNS from the top-level menu in the Ethernet Gateway window, as shown in Figure 31.

Figure 31 DNS network window

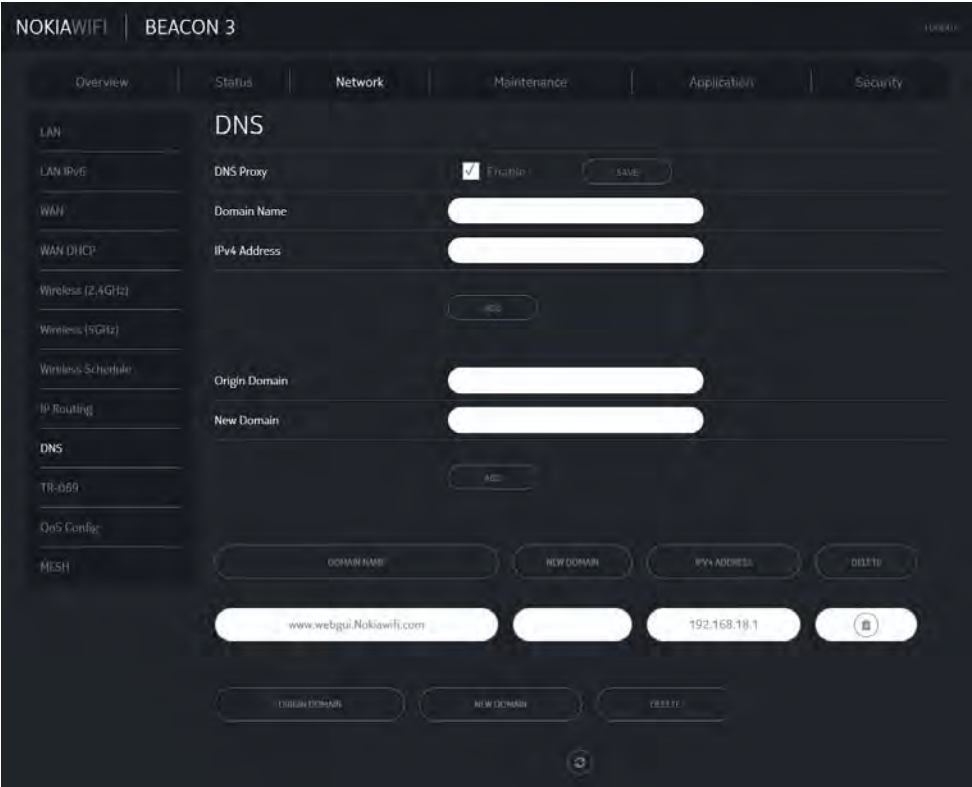


Table 26 describes the fields in the DNS network window.

Table 26 DNS network parameters

Field	Description
DNS Proxy	Select this checkbox to enable DNS proxy
Domain Name	Domain name
IPv4 Address	Domain IP address
Origin Domain	Origin domain name
New Domain	New domain name

- 2

Enter the domain name and IP address and click Add.
- 3

If required, associate an origin domain with a new domain, click Add.
- 4

STOP. This procedure is complete.

Procedure 22 TR-069 configuration

- 1

Select Network > TR-069 from the top-level menu in the Ethernet Gateway window, as shown in Figure 32.

Figure 32 TR-069 network window



Table 27 describes the fields in the TR-069 network window.

Table 27 TR-069 network parameters

Field	Description
Periodic Inform Enable	Select this checkbox to enable periodic inform updates
Periodic Inform Interval(s)	Time between periodic inform updates, in seconds
URL	URL of the auto-configuration server

(1 of 2)

Field	Description
Username	Username used to log in to the Beacon 6 (HA-0336G-A)
Password	Password used to log in to the Beacon 6 (HA-0336G-A)
Connect Request Username	Username used to log in to the auto-configuration server
Connect Request Password	Password used to log in to the auto-configuration server

(2 of 2)

2 Configure TR-069 by entering the required information.

3 Click Save.

4 STOP. This procedure is complete.

Procedure 23 QoS configuration

-
- 1** Select Network > QoS Config from the top-level menu in the Ethernet Gateway window.

Figure 33 shows the window for configuring QoS L2 (Layer 2 packet sizes). A QoS L3 (Layer 3 packet sizes) option is also available.

Figure 33 QoS Config window (L2)

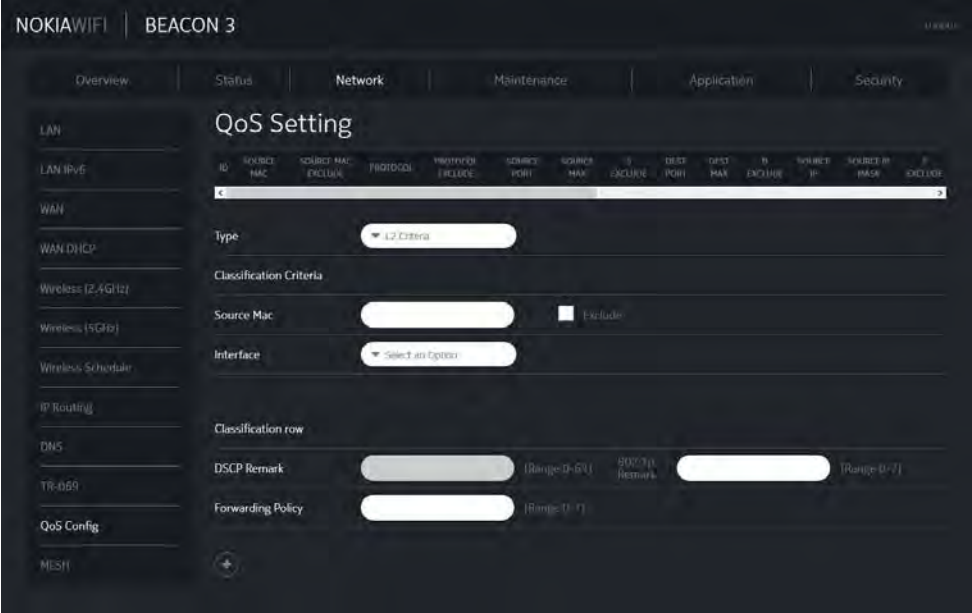


Table 28 describes the fields in the QoS Config window.

Table 28 QoS Config parameters

Field	Description
Type	Choose a QoS service layer type from the drop-down menu, either L2 or L3
Source MAC	Enter the source MAC Select the Exclude checkbox to exclude the source MAC
Interface	Choose an interface from the drop-down menu
Classification row	
DSCP Remark	Enter the value for the DSCP remark (range: 0-63). This field is read-only for L2 criteria. For L3 criteria, read and write access is available.
802.1p Remark	Enter the value for the 802.1p (range: 0-7)
Forwarding Policy	Enter the number for the forwarding policy (range: 1-7)
Additional fields for L3	
Protocol	Choose a protocol from the drop-down menu, or select the Exclude checkbox
Application	Choose an application from the drop-down menu
Source IP and Source IP Mask	Enter the values for the source IP and IP mask, or select the Exclude checkbox
Destination IP and Destination IP Mask	Enter the values for the destination IP and IP mask, or select the Exclude checkbox

Source Port and Source Port Max	Enter the values for the source port and port max (highest port number) or select the Exclude checkbox
Destination Port and Destination Port Max	Enter the values for the destination port and port max (highest port number), or select the Exclude checkbox

2 Choose a QoS type from the drop-down menu: L2 or L3.

3 Configure a QoS policy.

4 Click Add to add a QoS policy.

5 STOP. This procedure is complete.

Procedure 24 Mesh

This procedure describes how to add a Beacon 6 (HA-0336G-A) to the mesh table.

1 Select Network > Mesh from the top-level menu in the Ethernet Gateway window.

Figure 34 shows the window for configuring the mesh.

Figure 34 Mesh window

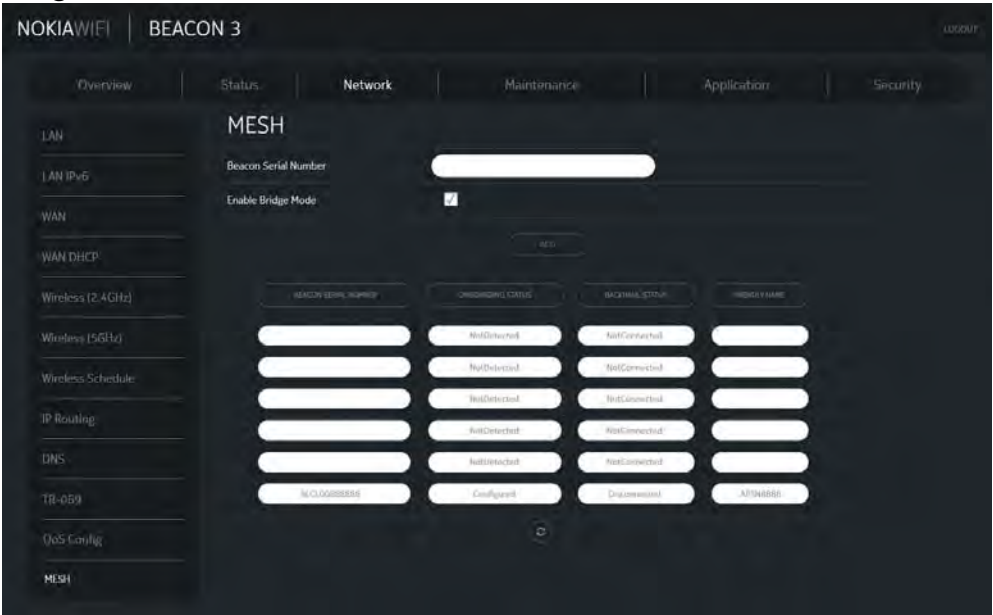



Table 29 describes the fields in the Mesh window.

Table 29 Mesh parameters

Field	Description
Beacon Serial Number	Serial number of the Beacon 6 (HA-0336G-A)
Enable Bridge Mode	Select this checkbox to enable bridge mode; see Figure 35.
Onboarding Status	Indicates whether or not the Beacon 6 (HA-0336G-A) associated with the serial number is onboarded to the mesh
Backhaul Status	Indicates the status of the backhaul connection
Friendly Name	Indicates a name determined by the user for the Beacon 6 (HA-0336G-A) associated with the serial number


2 If required, select the Enable Bridge Mode checkbox. See Figure 35.

Figure 35 Mesh window—Enable Bridge Mode

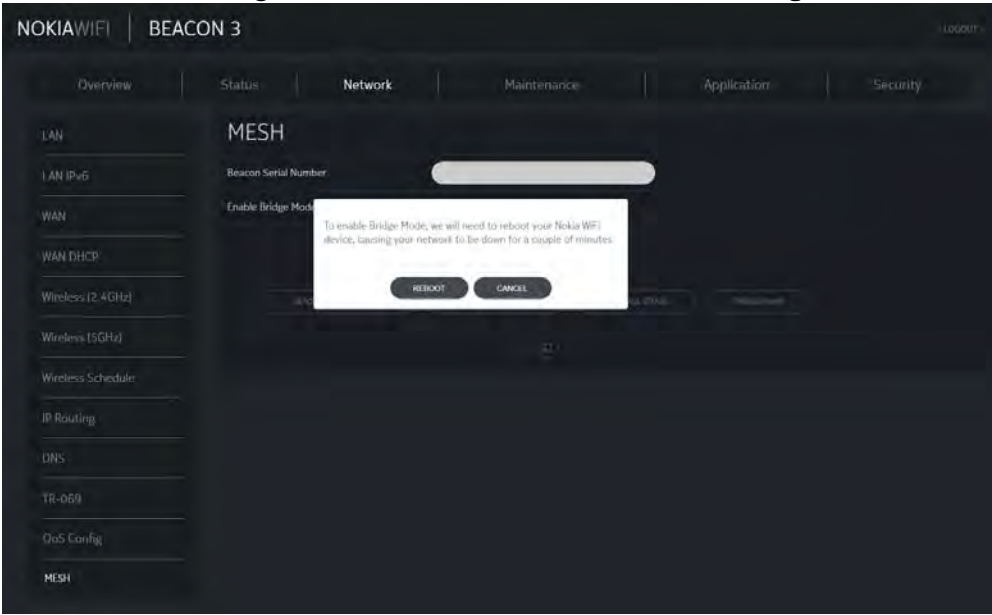

3 Click REBOOT in the confirmation dialog box. Ensure that you have connected the WAN port of your Nokia Wi-Fi device to the LAN port of your existing router; see Figure 36. You will lose network connectivity for a short period of time.

Figure 36 Mesh window—Enable Bridge Mode confirmation

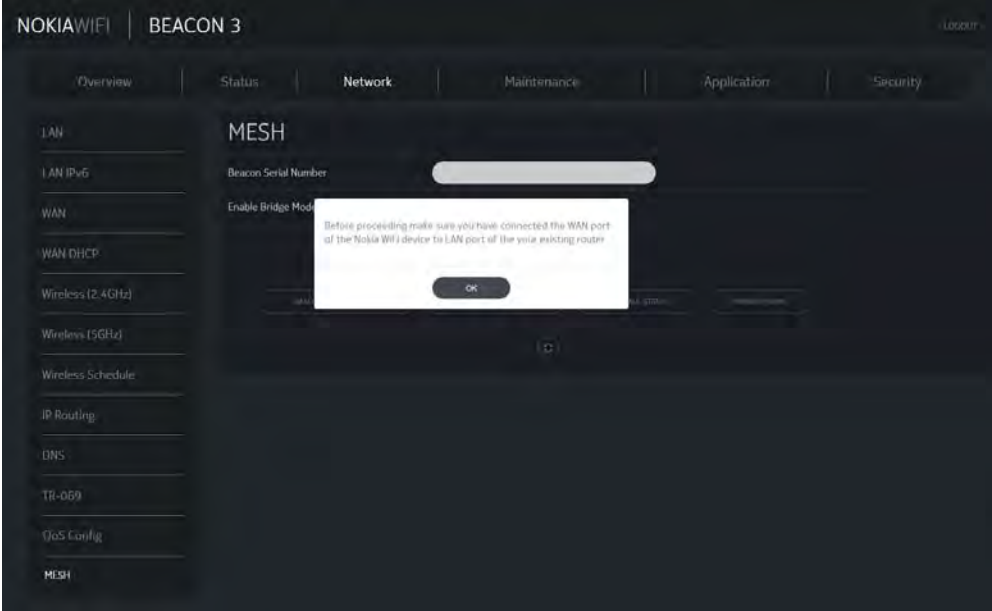

- 4 If required, deselect the Enable Bridge Mode checkbox to return the mesh from bridge mode to router mode.
- 5 Click Add to add the Beacon 6 (HA-0336G-A) to the table.
- 6 Click Refresh to update the information in the table.
- 7 STOP. This procedure is complete.

8.1.4 Security configuration

The Beacon 6 (HA-0336G-A) supports security configuration, including:


- Firewall
- MAC Filter
- IP Filter
- URL Filter
- Parental Control
- DMZ and ALG

-
- Access Control

Procedure 25 Firewall configuration

Select Security > Firewall from the top-level menu in the Ethernet Gateway window, as shown in Figure 37.

Figure 37 Firewall window

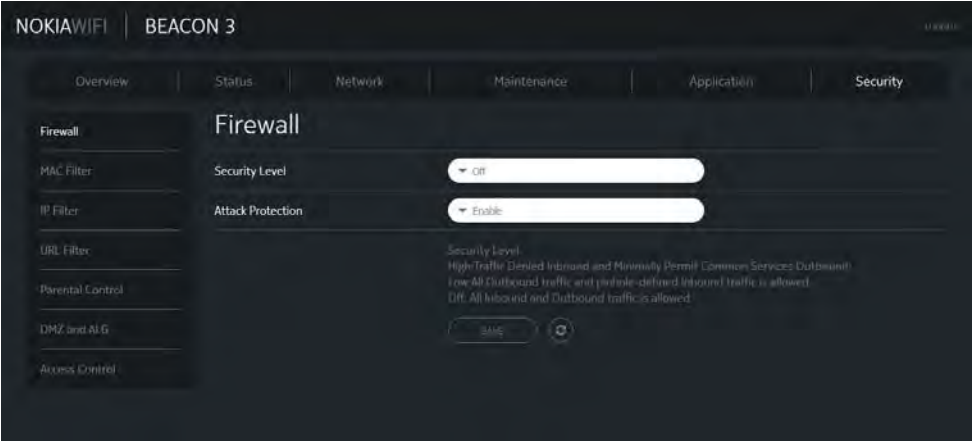

Three security levels are available: Off, Low, and High.

At the Off level, no firewall security is in effect.

At the Low level, pre-routing is supported: port forwarding, DMZ, host application, and host drop. Also supported are application services: DDNS, DHCP, DNS, H248, IGMP, NTP client, SSH, Telnet, TFTP, TR-069, and VoIP. The following types of ICMP messages are permitted: echo request and reply, destination unreachable, and TTL exceeded. Other types of ICMP messages are blocked. DNS proxy is supported from LAN to WAN but not from WAN to LAN.

At the High level, pre-routing and application services are not supported. UDP Port 8000 can be used to access the services, for example FTP can use 8021 and Telnet can use 8023. Regular UDP cannot be used. RG access is permitted via the LAN side but not via the WAN side.

Table 30 describes the fields in the firewall window.

Table 30 Firewall parameters

Field	Description
Security Level	Choose the security level from the drop-down menu: Off, Low, or High
Attack Protection (Protection against DoS or DDoS attacks)	Choose enable or disable attack protection from the drop-down menu The default is disable

-
- 1
 - 2 Configure the firewall.
 - 3 Click Save.
 - 4 STOP. This procedure is complete.
-

Procedure 26 MAC filter configuration

Select Security > MAC Filter from the top-level menu in the Ethernet Gateway window, as shown in Figure 38.

Figure 38 MAC filter window

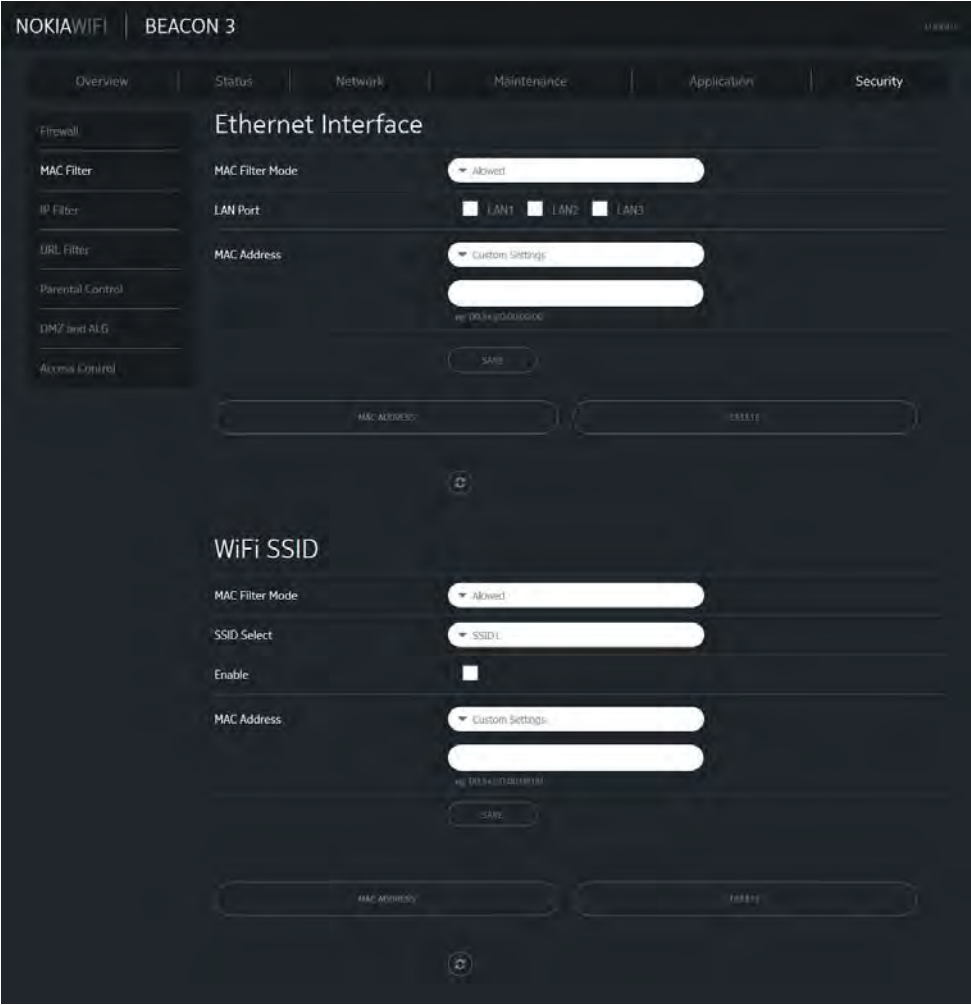


Table 31 describes the fields in the MAC filter window.

Table 31 MAC filter parameters

Field	Description
Ethernet Interface	

(1 of 2)

1

Field	Description
MAC Filter Mode	Choose the MAC filter mode from this drop-down menu: Blocked or Allowed
LAN Port	Select the checkboxes for the LAN ports
MAC Address	Choose a MAC address from the drop-down menu or enter the address in the text field
WiFi SSID	
MAC Filter Mode	Choose the MAC filter mode from this drop-down menu: Blocked or Allowed
SSID Select	Choose an SSID option from the drop-down menu
Enable	Select this checkbox to enable MAC filtering for WiFi SSID
MAC Address	Choose a MAC address from the drop-down menu or enter the address in the text field

(2 of 2)

- 2 Configure a MAC filter for the Ethernet interface.
- 3 Click Save.
- 4 If desired, select a MAC address and click the Delete column to delete a MAC address.
- 5 Click Refresh to update the information.
- 6 Configure a MAC filter for WiFi SSID (WLAN MAC filter).
- 7 Click Save.
- 8 STOP. This procedure is complete.

Procedure 27 IP filter configuration

Select Security > IP filter from the top-level menu in the Ethernet Gateway window, as shown in Figure 39.

Figure 39 IP filter window



Table 32 describes the fields in the IP filter window.

Table 32 IP filter parameters

Field	Description
Enable IP Filter	Select this checkbox to enable an IP filter
Mode	Choose an IP filter mode from the drop-down menu: <ul style="list-style-type: none">Drop for upstreamDrop for downstream
Internal Client	Choose an internal client from the drop-down menu: <ul style="list-style-type: none">Customer setting—uses the IP address input belowIP—uses the connecting IP address of the device input below
Local IP Address	Local IP address
Source Subnet Mask	Source subnet mask
Remote IP Address	Remote IP address
Destination Subnet Mask	Destination subnet mask

(1 of 2)

Field	Description
Protocol	Choose an application protocol or all from the drop-down menu

1
(2 of 2)

2 Configure the IP filter.

3 Click Add.

4 STOP. This procedure is complete.

Procedure 28 URL filter configuration

-
- 1** Select Security > URL Filter from the top-level menu in the Ethernet Gateway window, as shown in Figure 40.

Figure 40 URL Filter window



Note — You cannot use URL filtering for HTTPS. The URL is encrypted when using HTTPS.

Table [33](#) describes the fields in the URL Filter window.

Table 33 URL Filter parameters

Field	Description
URL Filter	
Enable URL Filter	Select the checkbox to enable the URL filter
URL Filter Type	Select the radio button for Block or Allow the URL
URL List	
URL Address	Enter the URL address
PortNumber	Enter the port number; the default is 80

- 2 Configure the URL Filter.
- 3 Click Add Filter.
- 4 STOP. This procedure is complete.

Procedure 29 Parental control

- 1 Select Security > Parent Control from the top-level menu in the Ethernet Gateway window, as shown in Figure 41.

Figure 41 Parental Control window



Table 34 describes the fields in the Parental Control window.

Table 34 Parental control parameters

Field	Description
Policy Name	Enter a name for the parental control policy or choose a policy from the list
Device	The device for which the rule will apply
IP	Enter the IPv4 address for the device or choose an IPv4 address from the list
URL	Enter the URL for the device or choose a URL from the list
Days of week	Choose Every Day, or Individual Days and select the checkboxes for the days of the week for which the policy applies
From/To	Enter the times for the policy to be in effect
Delete	Click Delete to remove a policy from the list
Edit	Click Edit to modify a policy in the list
Enable	Click Enable to activate the policy

-
- 3** Click the plus sign (+) to add a policy.

A separate panel appears for configuring the policy name, IP address of the device, and dates and times for the policy.

Click Enable to activate the policy.

- 6** STOP. This procedure is complete.
-

Procedure 30 DMZ and ALG configuration

- 1** Select Security > DMZ and ALG from the top-level menu in the Ethernet Gateway window, as shown in Figure 42.

Figure 42 DMZ and ALG window



Table 35 describes the fields in the DMZ and ALG window.

Table 35 DMZ and ALG parameters

Field	Description
ALG Config	Select the checkboxes to enable the protocols to be supported by the ALG: FTP, TFTP, SIP, H323, RTSP, L2TP, IPSEC, PPTP
DMZ Config	
WAN Connection List	Choose a WAN connection from the drop-down menu
Enable DMZ	Select this checkbox to enable DMZ on the chosen WAN connection
DMZ IP Address	Choose Customer Setting and enter the DMZ IP address or choose the IP address of a connected device from the drop-down menu

2 Configure ALG.

3 Click Save ALG.


4 Configure DMZ.

5 Click Save DMZ.

6 STOP. This procedure is complete.

Procedure 31 Access control configuration

This procedure describes how to configure the access control level (ACL).

- **Note 1** — ACL takes precedence over the firewall policy.
- Note 2** — The trusted network object will be shared for all WAN connections; it is not applied individually to a WAN connection.

- 1 Select Security > Access Control from the top-level menu in the Ethernet Gateway window, as shown in Figure 43.

Figure 43 Access Control window

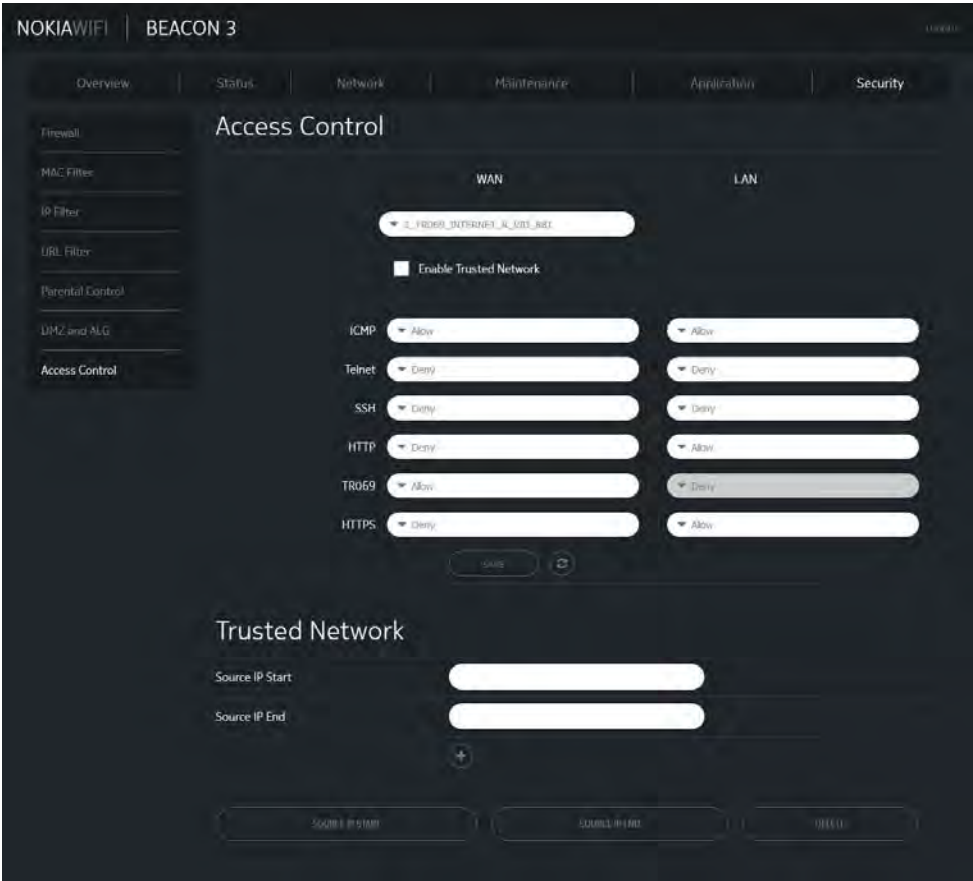


Table 36 describes the fields in the Access Control window.

Table 36 Access control parameters

Field	Description
-------	-------------

WAN	Choose a connection from the drop-down menu
Enable Trusted Network	Select the checkbox to enable or disable
ICMP, Telnet, SSH, HTTP, TR069, HTTPS	Select an access control level for each protocol: <ul style="list-style-type: none"> • WAN side—Allow, Deny, or Trusted Network Only • LAN side—Allow or Deny
Trusted Network	
Source IP Start	Enter a start IP address for the new subnet trusted network
Source IP End	Enter an end IP address for the new subnet trusted network

2 Select a WAN connection from the drop-down menu.

3 Click to enable or disable Trusted Network.

4 Select an access control level for each protocol: ICMP, Telnet, SSH, HTTP, TR-069, and HTTPS for the WAN side and the LAN side.

5 Click Save.

6 Optionally, add one or more subnet trusted networks.

The maximum number of entries is 32.

You can also use the Source IP fields to delete a previously created entry for a subnet trusted network.

7 STOP. This procedure is complete.

8.1.5 Application configuration

The Beacon 6 (HA-0336G-A) supports application configuration, including:

- port forwarding
- port triggering
- DDNS
- NTP
- UPnP and DLNA

Procedure 32 Port forwarding configuration

- 1 Select Application > Port forwarding from the top-level menu in the Ethernet Gateway window, as shown in Figure 44.

Figure 44 Port forwarding window

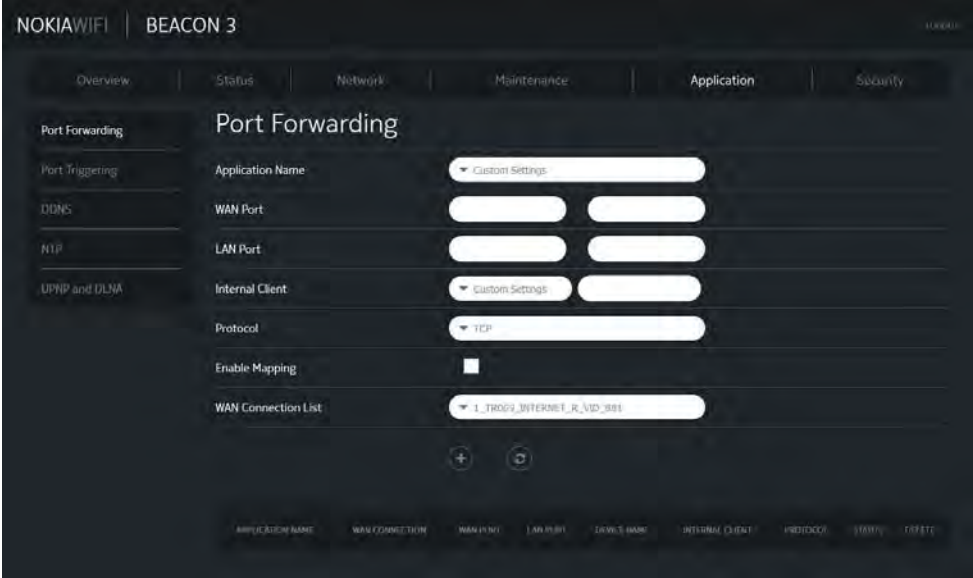


Table 37 describes the fields in the port forwarding window.

Table 37 Port forwarding parameters

Field	Description
Application Name	Choose an application name from the drop-down menu
WAN Port	WAN port range
LAN Port	LAN port range
Internal Client	Choose a connected device from the drop-down menu and enter the associated IP address
Protocol	Choose the port forwarding protocol from the drop-down menu: <ul style="list-style-type: none">• TCP• UDP• TCP/UDP
Enable Mapping	Select this checkbox to enable mapping
WAN Connection List	Choose a WAN connection from the drop-down menu Note—only active devices are shown on this menu

- 2
- Configure port forwarding.
- 3
- Click Add.
- 4
- STOP. This procedure is complete.

Procedure 33 Port triggering

- 1
- Select Application > Port Triggering from the top-level menu in the Ethernet Gateway window, as shown in Figure 45.

Figure 45 Port Triggering window

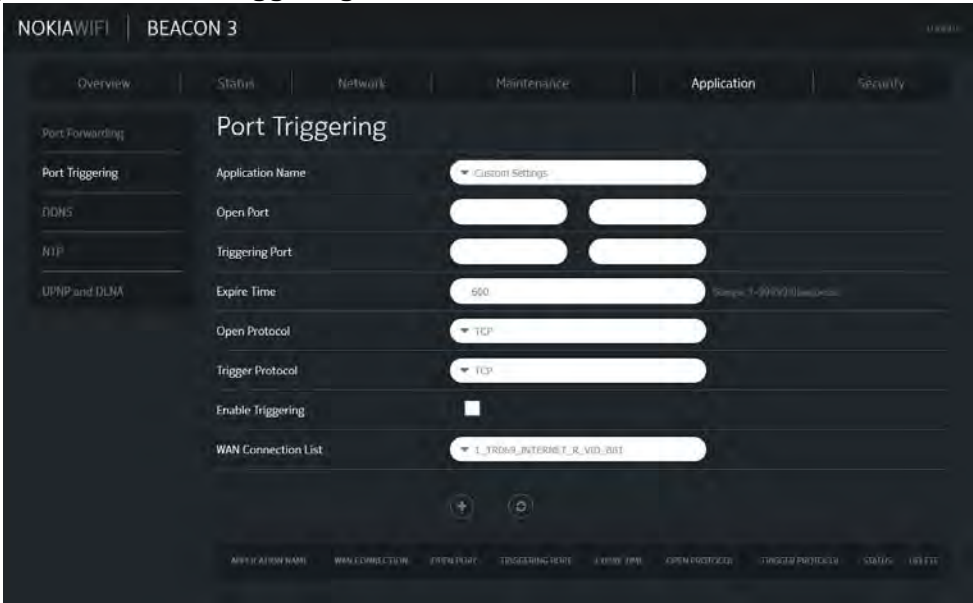


Table 38 describes the fields in the Port Triggering window.

Table 38 Port triggering parameters

Field	Description
Application Name	Choose an application name from the drop-down menu
Open Port	Enter the open port range

Triggering Port	Enter the triggering port range
(1 of 2)	
Field	Description
Expire Time	Enter the expiration time in seconds
Open Protocol	Choose the open port protocol from the drop-down menu: <ul style="list-style-type: none"> • TCP • UDP • TCP/UDP
Trigger Protocol	Choose the triggering port protocol from the drop-down menu: <ul style="list-style-type: none"> • TCP • UDP • TCP/UDP
Enable Triggering	Select this checkbox to enable port triggering
WAN Connection List	Choose a WAN connection from the drop-down menu Note—only active devices are shown on this menu

(2 of 2)

2 Configure port triggering.

3 Click Add.

4 STOP. This procedure is complete.

Procedure 34 DDNS configuration

- 1 Select Application > DDNS from the top-level menu in the Ethernet Gateway window, as shown in Figure 46.

Figure 46 DDNS window

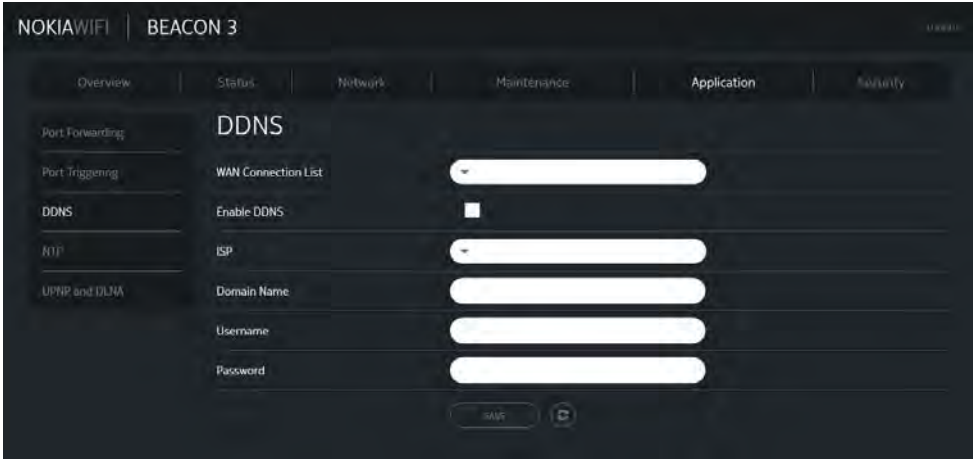


Table 39 describes the fields in the DDNS window.

Table 39 DDNS parameters

Field	Description
WAN Connection List	Choose a WAN connection from the drop-down menu
Enable DDNS	Select this checkbox to enable DDNS on the chosen WAN connection
ISP	Choose an ISP from the drop-down menu.
Domain Name	Enter the domain name for the DDNS server
Username	Enter the DDNS username
Password	Enter the DDNS password

2 Configure DDNS.

Procedure 35

4 STOP. This procedure is complete.

1


S
e
l

NTP configuration

t

Application > NTP from the top-level menu in the Ethernet Gateway window, as shown in Figure 47.

Figure 47 NTP window

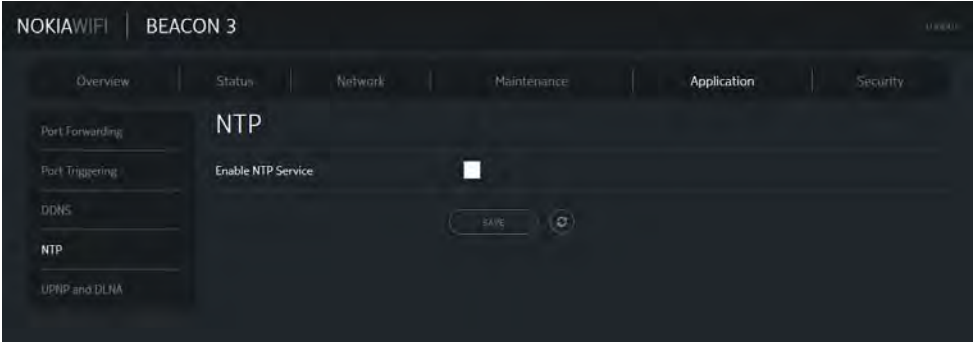

2 Select the Enable NTP Service checkbox.


3 Click Save.

4 STOP. This procedure is complete.

Procedure 36 UPnP and DLNA configuration

1 Select Application > UPnP and DLNA from the top-level menu in the Ethernet Gateway window, as shown in Figure 48.

Figure 48 UPnP and DLNA window

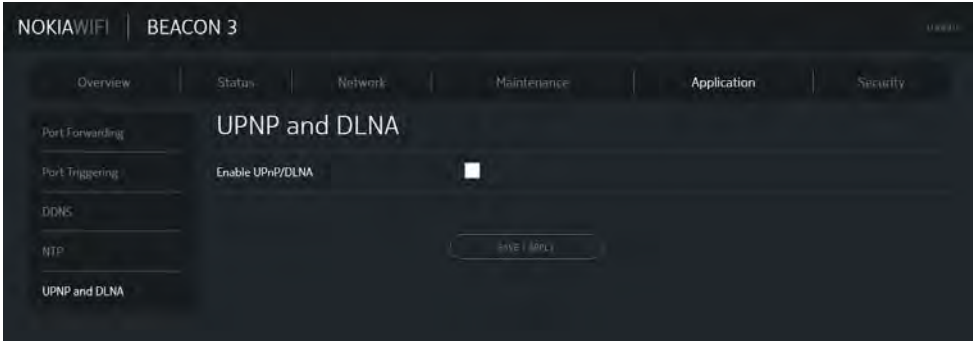

- 2 Select the Enable UPnP/DLNA checkbox to enable UPnP and DLNA.
- 3 Click Save/Apply.
- 4 STOP. This procedure is complete.

8.1.6 Maintenance

The Beacon 6 (HA-0336G-A) supports maintenance tasks, including:

- Password change
- Device Management
- Backup and Restore
- Firmware Upgrade
- Device Reboot
- Restore Factory Defaults
- Diagnostics
- View Logs

Procedure 37 Password configuration

A password must adhere to the following password rules:

- the password may consist of uppercase letters, lowercase letters, digital numbers, and the following special characters `! # + , - / @ _ : =]`

- the password length must be from 8 to 24 characters
- the first character must be a digital number or a letter
- the password must contain at least two types of characters: numbers, letters, or special characters
- the same character must not appear more than 8 times in a row

When the password meets the password rules, the application displays the message “Your password has been changed successfully”.

When the password does not meet the password rules, the application displays a message to indicate which password rule has not been followed, for example:

- the password is too short
- the password is too long
- the first character cannot be a special character
- there are not enough character classes

- 1 Select Maintenance > Password from the top-level menu in the GPON Home Gateway window, as shown in Figure 49.

Figure 49 Password window

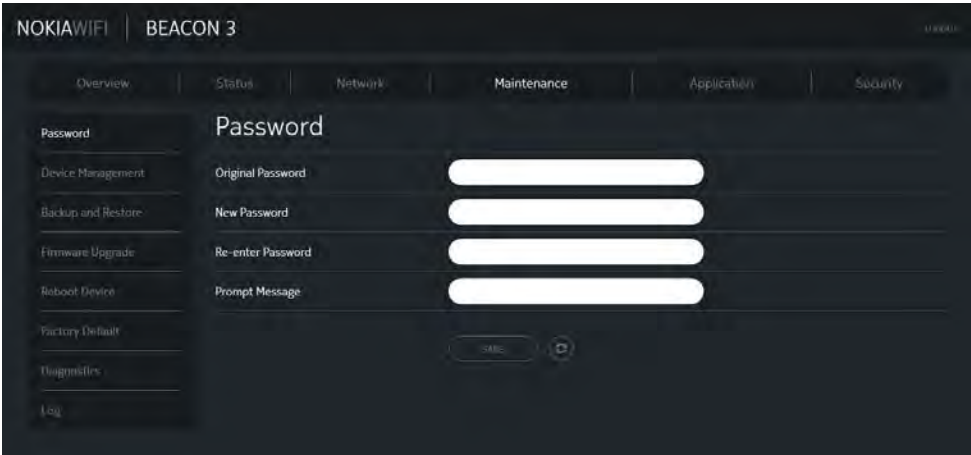


Table 40 describes the fields in the password window.

Table 40 Password parameters

Field	Description
Original Password	Enter the current password
New Password	New password (must adhere to the password rules described above)
Re enter Password	Must match the new password entered above exactly

Prompt Message	Password prompt message
----------------	-------------------------

- 2 Configure the new password.
- 3 Click Save.
- 4 STOP. This procedure is complete.

Procedure 38 Device management

- 1 Select Maintenance > Device Management from the top-level menu in the Ethernet Gateway window, as shown in Figure 50.

Figure 50 Device Management window

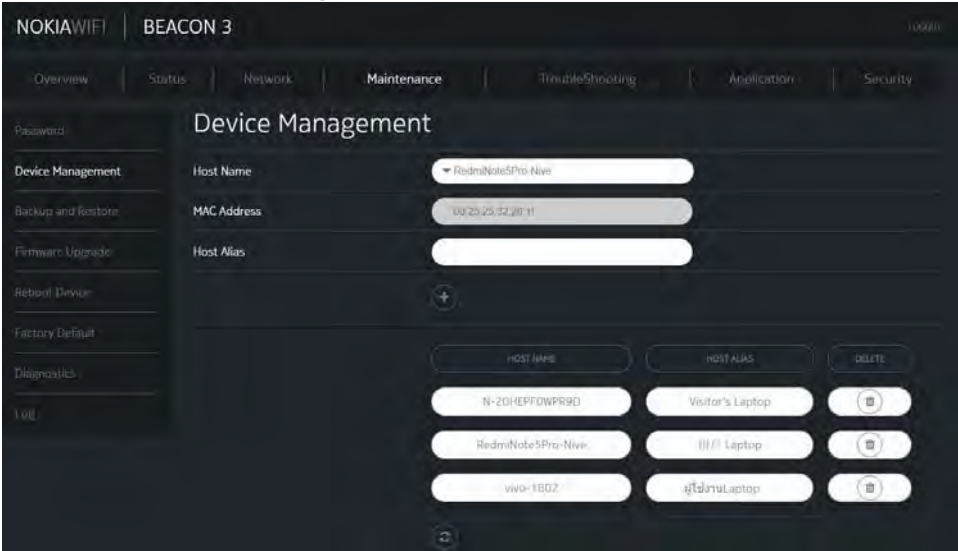


Table 41 describes the fields in the Device Management window.

Table 41 Device Management parameters

Field	Description
Host Name	Choose a host from the drop-down menu. Three multilingual host names can be listed.
Host Alias	Enter an alias for the chosen host. Three multilingual aliases can be listed.

2 Configure an alias for a specific host.

4 STOP. This procedure is complete.

Procedure 39


1

S
e
l
e
c
t

Backup and Restore

Maintenance > Backup and Restore from the top-level menu in the Ethernet Gateway window, as shown in Figure 51.

Figure 51 Backup and Restore window

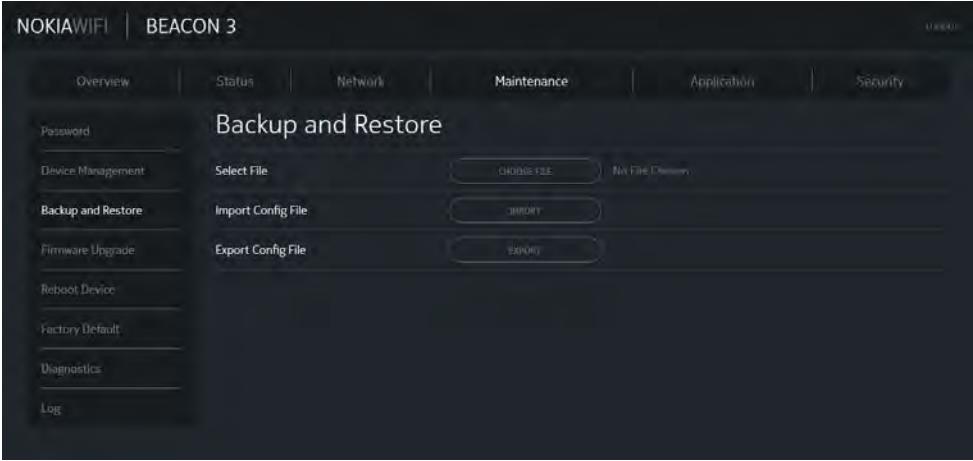

2 Click Select File and choose the backup file.


3 Click Import Config File to restore the Beacon 6 (HA-0336G-A) to the saved backup or click Export Config File to export the current configuration to the backup file.

4 STOP. This procedure is complete.

Procedure 40 Upgrade firmware

- 1 Select Maintenance > Firmware Upgrade from the top-level menu in the Ethernet Gateway window, as shown in Figure 52.

Figure 52 **Firmware Upgrade window**

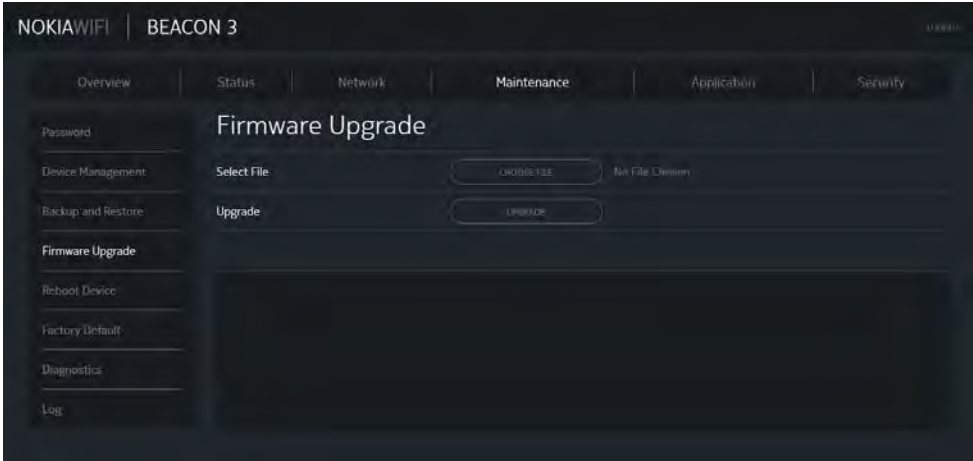


STOP. This procedure is complete.

Procedure 41 ¹ Reboot

Select Maintenance > Reboot Device from the top-level menu in the Ethernet Gateway window, as shown in Figure 53.

Figure 53 Reboot Device window

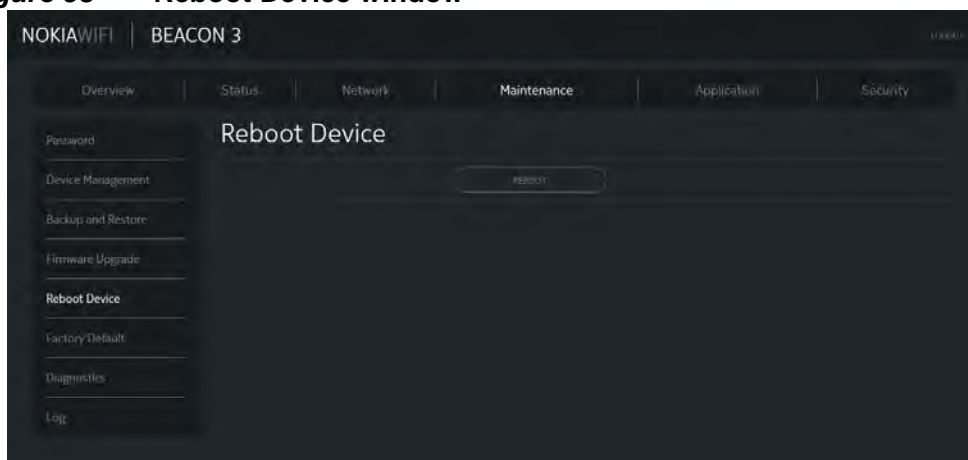


2 Click Reboot to reboot the Beacon 6 (HA-0336G-A).

3 STOP. This procedure is complete.

Procedure 42 Restore factory defaults

Select Maintenance > Factory Default from the top-level menu in the Ethernet Gateway window, as shown in Figure 54.

1
Figure 54 **Factory Default window**

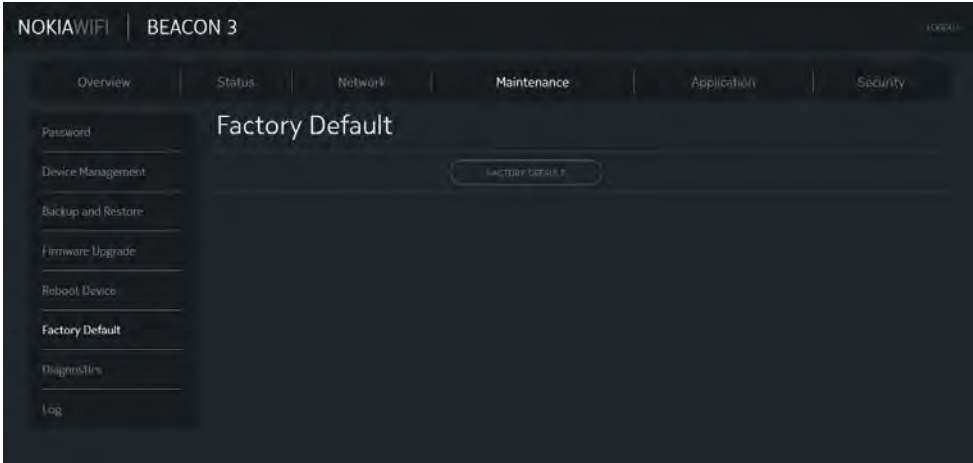

- 2 Click Factory Default to reset the Beacon 6 (HA-0336G-A) to its factory default settings.
- 3 STOP. This procedure is complete.

Procedure 43 Diagnose connections

Select Maintenance > Diagnostics from the top-level menu in the Ethernet Gateway window, as shown in Figure 55.

1
Figure 55 **Diagnostics window**

The screenshot shows the NOKIAWIFI BEACON 3 web interface. The top navigation bar includes tabs for Overview, Status, Network, Maintenance, Application, and Security. The left sidebar contains a menu with options: Password, Device Management, Backup and Restore, Firmware Upgrade, Reboot Device, Factory Default, Diagnostics (highlighted), and Log. The main content area is titled 'WAN' and contains the following fields and controls:

- WAN Connect List:** A drop-down menu with 'LAN/WAN Interface' selected.
- IP or Domain Name:** A text input field.
- Test:** Two checkboxes, 'Ping' and 'Traceroute', both of which are checked.
- Ping Try Times(1-1000):** A text input field with the value '4'.
- Packet Length(64-1500):** A text input field with the value '64'.
- Max Number of trace hops(1-255):** A text input field with the value '30'.
- Buttons:** 'start test' and 'cancel' buttons at the bottom right.

- 2 Choose a WAN connection to diagnose from the drop-down menu.
- 3 Enter the IP address or domain name.
- 4 Select the test type: ping, traceroute, or both.
- 5 Enter the number of ping attempts to perform (1 to 1000); the default is 4.
- 6 Enter a ping packet length (64 to 1500); the default is 64.
- 7 Enter the maximum number of trace hops (1 to 255); the default is 30.

1

8 Click Start Test. The results will be displayed at the bottom of the window.

-
- 9 Click Cancel to cancel the test.


- 10 STOP. This procedure is complete.

Procedure 44

View log files

- 1 Select Maintenance > Log from the top-level menu in the Ethernet Gateway window, as shown in Figure 56.

Figure 56 Log window

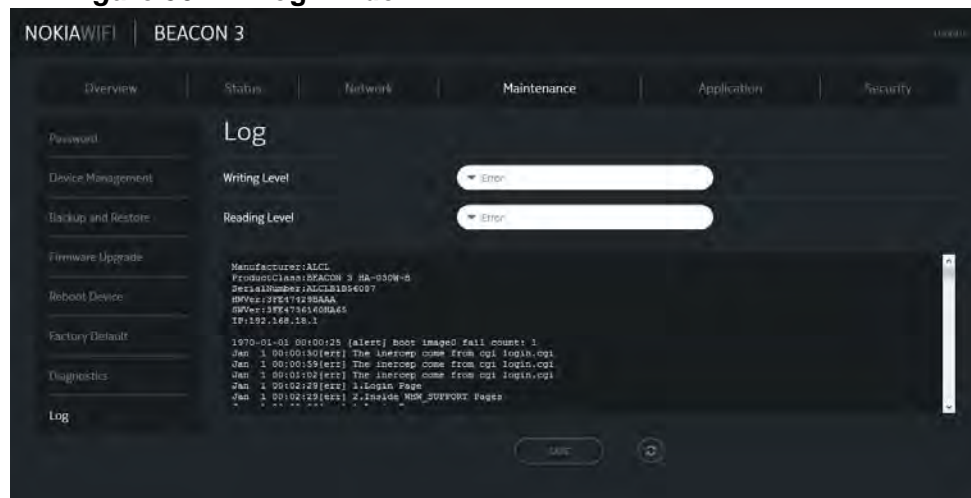

- 2 Choose a writing level from the drop-down menu to determine which types of the following events are recorded in the log file:
 - Emergency
 - Alert
 - Critical
 - Error
 - Warning
 - Notice
 - Informational
 - Debug

3 Choose a reading level from the drop-down menu to determine which types of events to display from the log file:

- Emergency
- Alert
- Critical
- Error
- Warning
- Notice
- Informational
- Debug

4 The log file is displayed at the bottom of the window.

5 STOP. This procedure is complete.

8.1.7 RG troubleshooting counters

The Troubleshooting Counters feature enables service providers and end users to monitor the performance of their broadband connection.

Tests are run to retrieve upstream and downstream throughput, latency, and DNS response time. The Troubleshooting Counters window also displays upstream and downstream packet loss and Internet status.



Note — The Troubleshooting Counters feature is not available in this release.

Customer document and product support

Customer documentation



[Customer Documentation Welcome Page](#)

Technical Support



[Customer Documentation Technical Support](#)

Documentation feedback



[Customer Documentation Feedback](#)

Copyright 2019 Nokia.
3FE-47429-AAAA-TCZZA