

**JETSON**

**Rhythm**

Folding Electric Scooter.

**A guide for your ride.**

IMPORTANT: READ CAREFULLY AND RETAIN FOR FUTURE REFERENCE.

MODEL: JRHYTM-BLK

Designed in Brooklyn | Made in China



**Jetson's top two riding rules:  
Be safe. Have fun!**



# Contents

<b>Safety Warnings</b>	4
<b>Product Overview</b>	8
<b>Specs &amp; Features</b>	11
<b>Attaching the Handlebar</b>	12
<b>Unfolding/Folding the Rhythm</b>	14
<b>Charging the Rhythm</b>	18
<b>Powering On and Off</b>	19
<b>Overview of the LCD Screen</b>	20
<b>Using the Headlight</b>	21
<b>Switching Speed Modes</b>	22
<b>Connecting with the Bluetooth Speaker</b>	22
<b>Checking the Battery Charge Level</b>	23
<b>Using the Bell</b>	24
<b>Using the Phone Holder</b>	25
<b>Using the Kickstand</b>	26
<b>Riding Position</b>	27
<b>Starting and Accelerating</b>	28
<b>Braking</b>	29
<b>Turning</b>	29
<b>Maximizing Riding Range</b>	30
<b>Helmet Safety</b>	31
<b>Care, Maintenance, &amp; Warranty</b>	32

# Safety Warnings

- Before use, please read the user manual and safety warnings carefully, and make sure you understand and accept all the safety instructions. The user will be responsible for any loss or damage caused by improper use.
- Please check the drive system and frame before riding to ensure safety.
- Before each cycle of operation, the operator shall perform the preoperation checks specified by the manufacturer:  
That all guards and pads originally supplied by the manufacturer are in proper place and in serviceable condition;  
That the braking system is functioning properly; That any and all guards, chain guards, or other covers or guards supplied by the manufacturer are in place and in serviceable condition; That tires are in good condition, inflated properly, and have sufficient tread remaining; The area that the product is to be operated should be safe and suitable for safe operation.
- Components shall be maintained and repaired in accordance with the manufacturer's specifications and using only the manufacturer's authorized replacement parts with installation performed by dealers or other skilled persons.
- Don't allow hands, feet, hair, body parts, clothing, or similar articles to come in contact with moving parts, wheels, or drive train, while the scooter is in use.
- This product should not be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction (IEC 60335-1/A2:2006).
- Unsupervised children should not play with the product (IEC 60335-1/A2:2006).
- Adult supervision is required.
- The rider should not exceed 220 lb.
- Never use near motor vehicle.
- Units shall not be operated to perform racing, stunt riding, or other maneuvers, which may cause loss of control, or may cause uncontrolled operator/passenger actions or reactions.
- Avoid sharp bumps, drainage grates, and sudden surface changes. Scooter may suddenly stop.
- Avoid streets and surfaces with water, sand, gravel, dirt, leaves, and other debris. Wet weather impairs traction, braking, and visibility.
- Avoid riding around flammable gas, steam, liquid, or dust that could cause fire.
- Operators shall adhere to all of the manufacturer's recommendations and instructions, as well as comply with all laws and ordinances: Units without headlights shall be operated only with adequate daylight conditions of visibility, and; Owners shall be encouraged to highlight (for conspicuity) using lighting, reflectors, and for low-riding units, signal flags on flexible poles.
- Do not ride at night.
- Only ride the product with adequate daylight conditions for visibility.
- Persons with the following conditions shall be cautioned not to operate: Those with heart conditions; Pregnant women; Persons with head, back, or neck ailments, or prior surgeries to those areas of the body; and persons with any mental or physical conditions that may make them susceptible to injury or impair their physical dexterity or mental capabilities to recognize, understand, and perform all of the safety instructions and to be able to assume the hazards inherent in unit use.
- Do not ride after drinking or taking prescription medication.
- Do not carry items when riding.

- Never operate the product while barefoot.
- Always wear shoes and keep shoelaces tied.
- Make sure your feet are always placed securely on the deck/pedal.
- Operators shall always use appropriate protective equipment, including but not limited to: a helmet with appropriate certification, protective clothing, knee pads, and elbow pads.
- Always give way to pedestrians.
- Be alert to things in front and far away from you.
- Do not allow distractions when riding, such as answering the phone or engaging in any other activities.
- The product cannot be ridden by more than one person.
- When riding the product along with other riders, always keep a safe distance to avoid a collision.
- When turning, be sure to maintain your balance.
- Riding with improperly adjusted brakes is dangerous and can result in serious injury or death.
- Applying brakes too hard or too suddenly can lock up a wheel, which could cause you to lose control and fall. Sudden or excessive application of the brake may result in injury or death.
- If the brake loosens, please adjust with a hexagonal wrench, or please contact the Jetson Care Team.
- Replace worn or broken parts immediately.
- The area that the product is to be operated should be safe and suitable for safe operation.
- Check whether all safety labels are in place and understood before riding.
- The owner shall allow the use and operation of the unit after a demonstration that such operators can understand and operate all components of the unit before use.
- Use caution when changing the batteries. Do not change batteries near flammable materials. Remove batteries from the scooter when not in use for long periods of time.
- Prolonged exposure to UV rays, rain, and the elements may damage the enclosure materials. Store indoors when not in use.

## **MODIFICATIONS**

Do not attempt to disassemble, modify, repair, or replace the product or any components of the unit without instruction from the Jetson Care Team. This will void any warranty, and can lead to malfunctions which may cause injury.

## **ADDITIONAL OPERATION PRECAUTIONS**

- Do not lift the product off the ground while it is on and the wheels are in motion. This can result in freely spinning wheels, which may cause injury to yourself or others nearby.
- Do not jump on or off the product, and do not jump while using it.
- Always keep your feet firmly planted on the deck while in operation.
- The Consumer Product Safety Commission advises that the riding of small wheel diameter bicycles and scooters at excessive speeds can lead to instability and is not recommended.
- Always wear a properly fitted helmet when you ride your bicycle. Do not ride at night. Avoid riding in wet conditions.

## MAINTENANCE PRECAUTIONS

For all maintenance repairs and needs beyond the capability of the consumer, which may include but not be limited to: such as proper maintenance of brakes, control cables, bearing adjustments, wheel adjustments, lubrication, reflectors, tires and handlebar and seat adjustments, please contact the Jetson Care Team for assistance at:

ridejetson.com/support  
US & Canada 1-(888) 976-9904

## DISPOSAL OF USED BATTERY



Battery may contain hazardous substances which could endanger the environment and human health. This symbol marked on the battery and/or packaging indicates that used battery shall not be treated as municipal waste. Batteries should be disposed of at an appropriate collection point for recycling. By ensuring the used batteries are disposed of correctly, you will help prevent potential negative consequences for the environment and human health. The recycling of materials will help to conserve natural resources. For more information about recycling of used batteries, please contact your local municipality waste disposal service.

## NOTICE OF COMPLIANCE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## California Proposition 65



This product can expose you to a chemical such as Cadmium that is known to the state of California to cause cancer or birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov/product](http://www.p65warnings.ca.gov/product)





# Product Overview

- |                                   |                                  |
|-----------------------------------|----------------------------------|
| 1. HANDLEBAR                      | 11. RELEASE LEVER                |
| 2. ACCELERATION THROTTLE          | 12. DECK                         |
| 3. E-BRAKE                        | 13. REAR WHEEL (WITH REFLECTORS) |
| 4. PHONE HOLDER                   | 14. REAR BRAKE LIGHT             |
| 5. BELL                           | 15. FOLDING LOOP                 |
| 6. LCD SCREEN                     | 16. CHARGING PORT                |
| 7. FOLDING HOOK                   | 17. KICKSTAND                    |
| 8. HEADLIGHT                      | 18. CHARGER                      |
| 9. BLUETOOTH SPEAKER              | 19. CHARGING CABLE               |
| 10. FRONT WHEEL (WITH REFLECTORS) |                                  |

## HARDWARE & TOOLS INCLUDED:

ALLEN KEY



SCREWS (x4)



\* FULLY CHARGE THE BATTERY PRIOR TO FIRST USE.

\* ADULTS MUST ASSIST CHILDREN IN THE ASSEMBLY AND INITIAL ADJUSTMENT PROCEDURES OF THE PRODUCT.



NOTE: IMAGES MAY NOT REFLECT EXACT APPEARANCE OF ACTUAL PRODUCT.



## Specs & Features

- **PRODUCT UNFOLDED:** 44"(L) × 18.5"(W) × 48"(H)
- **PRODUCT FOLDED:** 44"(L) × 18.5"(W) × 17"(H)
- **DECK SIZE:** 17.5"(L) × 5"(W)
- **WEIGHT LIMIT:** 220 LBS
- **PRODUCT WEIGHT:** 28 LBS
- **RECOMMENDED AGE:** 12+
- **TIRE SIZE:** 6.5"
- **MAX SPEED:** 15 MPH
- **MAX RANGE:** 12 MILES
- **BATTERY:** 36V, 6AH LITHIUM-ION
- **MOTOR:** 250W
- **CHARGER:** 42V, 1.5A
- **CHARGING TIME:** UP TO 6 HOURS
- **MAX CLIMBING ANGLE:** 10°



# 1. Getting Started

## 1.1 Attaching the Handlebar

1. SLIDE THE HANDLEBAR INTO THE STEM.  
TAKE CARE THAT:

- THE SIDE OF THE HANDLEBAR WITH THE LCD SCREEN IS POSITIONED ON THE SIDE OF THE SCOOTER ACCESSIBLE BY THE RIGHT HAND OF THE RIDER.
- THE WIRES ARE CAREFULLY TUCKED INTO THE STEM TUBE AND NOT PINCHED BY THE HANDLEBAR WHILE IT IS BEING INSERTED.
- THE FOUR HOLES AT THE BASE OF THE HANDLEBAR ALIGN WITH THE FOUR HOLES IN THE SIDES OF THE STEM.



2. INSERT ONE SCREW THROUGH EACH HOLE IN THE STEM.  
USE THE ALLEN KEY TO TIGHTEN EACH SCREW.  
CHECK THAT THE HANDLEBAR IS SECURE.




## 1.2 Unfolding/Folding the Rhythm

**WHEN TO UNFOLD:** FOR INITIAL HANDLEBAR ATTACHMENT AND RIDING

**WHEN TO FOLD:** FOR STORAGE, CARRYING, AND TRANSPORT

### **TO UNFOLD:**

1. PUSH THE FOLDING LOOP TOWARDS THE REAR OF THE SCOOTER TO RELEASE THE FOLDING HOOK.
2. GENTLY RAISE THE HANDLEBAR UPWARDS UNTIL YOU HEAR A “CLICK,” INDICATING THAT IT IS FULLY UPRIGHT.
3. PRESS THE RELEASE LEVER IN TOWARDS THE FRAME TO LOCK THE HANDLEBAR IN POSITION.

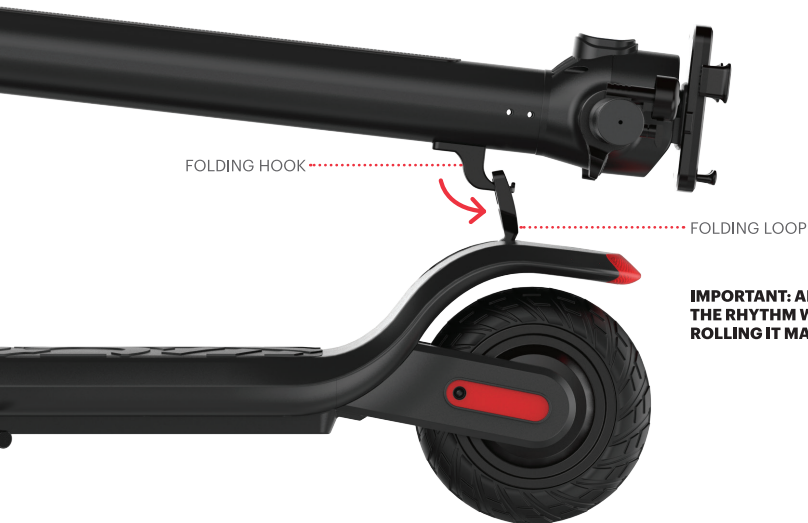

**IMPORTANT: ALWAYS CARRY  
THE RHYTHM WHEN NOT IN USE.  
ROLLING IT MAY CAUSE DAMAGE.**





LOCK THE RELEASE LEVER BY  
LIFTING IT UP UNTIL IT CLICKS.






RELEASE LEVER

SLIDE

**TO FOLD:**

1. PUSH THE SLIDE ON THE RELEASE LEVER UPWARDS AND PULL THE LEVER OPEN AND AWAY FROM THE HANDLEBAR STEM.
2. GENTLY LOWER THE HANDLEBAR DOWN TOWARDS THE REAR WHEEL.
3. PUSH THE FOLDING LOOP FORWARD AND LOOP IT ONTO THE FOLDING HOOK, LOCKING THE HANDLEBAR INTO THE FOLDED POSITION.

### 1.3 Charging the Rhythm

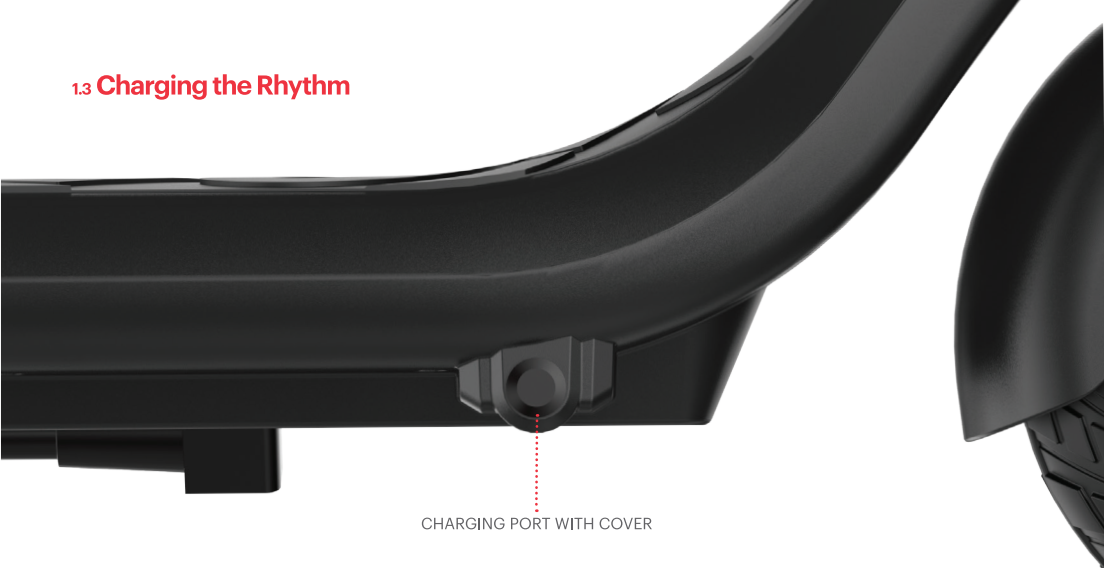

CHARGING PORT WITH COVER

1. WITH YOUR SCOOTER POWERED OFF, OPEN THE RUBBER COVER ON THE CHARGING PORT BELOW THE SCOOTER DECK.
2. PLUG THE CHARGER INTO THE WALL OUTLET AND CONNECT IT WITH THE CHARGING PORT ON THE SCOOTER.
3. WHILE CHARGING, THE INDICATOR LIGHT ON THE CHARGER WILL ILLUMINATE IN RED; WHEN CHARGING IS COMPLETE, THE ILLUMINATION WILL TURN GREEN.
4. CHARGE THE BATTERY UNTIL IT IS FULLY CHARGED—ABOUT 6 HOURS.
5. UNPLUG THE CHARGER FROM THE CHARGING PORT.
6. REPLACE THE RUBBER COVER ON THE CHARGING PORT.


**IMPORTANT CHARGING NOTES:**

- ONLY USE THE CHARGER INCLUDED WITH YOUR SCOOTER.
- NEVER POWER ON THE SCOOTER WHILE IT IS CHARGING.
- CHARGE YOUR SCOOTER INDOORS AND IN A DRY ENVIRONMENT WITH AN AIR TEMPERATURE OF AT LEAST 50°F.
- DO NOT LEAVE YOUR SCOOTER CHARGING OVERNIGHT OR FOR EXTENDED PERIODS OF TIME.
- CHARGE THE BATTERY TO 100%—ABOUT 6 HOURS.

**CHARGER INDICATOR LIGHT ON THE CHARGER:**

- - CHARGING
- - CHARGING COMPLETE

INDICATOR LIGHT

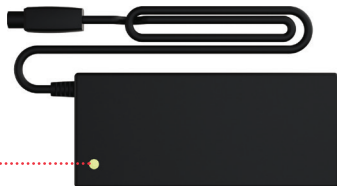

## 1.4 Powering On and Off

LONG-PRESS THE POWER BUTTON TO TURN THE RHYTHM ON AND OFF.

POWER BUTTON



## 2. Features and Functions

### 2.1 Overview of the LCD Screen



**IMPORTANT: IF AN ERROR CODE (E0-E8) APPEARS ON YOUR RHYTHM'S LCD SCREEN, CONTACT THE JETSON CARE TEAM FOR ASSISTANCE.**

## 2.2 Using the Headlight

QUICK-PRESS THE LIGHT BUTTON TO TURN THE HEADLIGHT ON OR OFF.



## 2.3 Switching Speed Modes

THERE ARE 3 DIFFERENT SPEED MODES: E, N, AND S. WITHIN EACH SPEED MODE, THE RHYTHM CAN ONLY TRAVEL UP TO A DESIGNATED SPEED.

- **E (BEGINNER/SLOW):** MAXIMUM SPEED OF 4 MPH
- **N (INTERMEDIATE):** MAXIMUM SPEED OF 9 MPH
- **S (ADVANCED/FAST):** MAXIMUM SPEED OF 15 MPH

TO CHANGE TO ANOTHER SPEED MODE, QUICK-PRESS THE POWER BUTTON UNTIL YOU SEE THAT SPEED MODE DISPLAYED ON THE LCD SCREEN.

**NOTE: TO SWITCH THE DISPLAYED PACE MEASUREMENT FROM MPH TO KM/H, QUICK-PRESS THE POWER BUTTON TWO CONSECUTIVE TIMES.**

## 2.4 Connecting with the Bluetooth® Speaker

1. USE THE POWER BUTTON TO TURN ON THE RHYTHM.
2. IN THE SETTINGS SECTION OF YOUR PHONE OR HANDHELD DEVICE, MAKE SURE THAT BLUETOOTH® IS ENABLED.
3. FIND THE RHYTHM IN THE LIST OF RECOGNIZED DEVICES AND SELECT IT. YOU WILL HEAR THIS ANNOUNCEMENT: "BLUETOOTH® PAIRED."
4. STREAM MUSIC. RIDE. ENJOY!
5. WHEN YOU DISABLE BLUETOOTH® OR UNPAIR THE RHYTHM WITH YOUR HANDHELD DEVICE, YOU WILL HEAR THIS ANNOUNCEMENT: "BLUETOOTH® DISCONNECTED."


**NOTE: TO CHANGE THE VOLUME, USE THE VOLUME CONTROLS ON YOUR PHONE.**



## 2.5 Checking the Battery Charge Level

KEEP TABS ON YOUR RHYTHM'S CHARGE LEVEL WITH THE BATTERY INDICATOR ON THE LCD SCREEN.

- **4 BARS:** 76 - 100%
- **3 BARS:** 50 - 75%
- **2 BARS:** 25 - 49%
- **1 BAR:** 0 - 25%; TIME TO PLUG IN AND POWER UP!

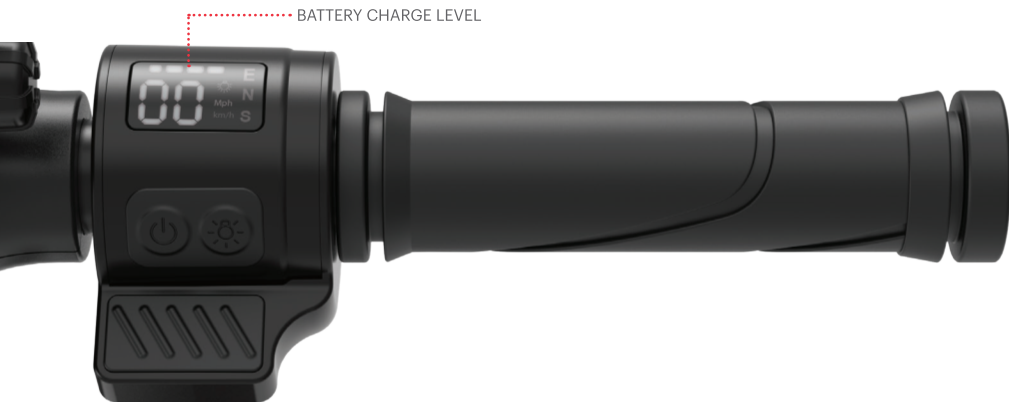

## 2.6 Using the Bell

USE THE BELL TO ALERT OTHER RIDERS AND PEDESTRIANS THAT YOU ARE NEAR.  
RING THE BELL BY FLICKING THE TAB DOWN FORCEFULLY WITH YOUR LEFT THUMB.



## 2.7 Using the Phone Holder

### TO INSERT YOUR PHONE IN THE PHONE HOLDER:

1. WIDEN THE SIDE ARMS OF THE PHONE HOLDER BY PUSHING IN THE TABS UNDERNEATH THEM.
2. SLIDE PHONE INTO THE HOLDER FROM THE TOP SO THAT THE BOTTOM OF THE PHONE IS GRIPPED BY THE FEET OF THE HOLDER.
3. PUSH THE FEET OF THE HOLDER DOWN TO CLOSE THE ARMS AROUND THE PHONE, SECURING IT INTO PLACE.
4. SET YOUR PHONE AT AN IDEAL VIEWING ANGLE BY TILTING THE PHONE HOLDER UP OR DOWN.


### TO RELEASE YOUR PHONE FROM THE PHONE HOLDER:

1. WIDEN THE ARMS BY PUSHING THE SIDE TABS.
2. SLIDE THE PHONE UP AND OUT OF THE HOLDER.



## 2.8 Using the Kickstand

- **TO LOWER THE KICKSTAND:** PIVOT IT DOWN FROM THE SIDE OF THE SCOOTER DECK. TILT THE SCOOTER TO REST IT ON THE KICKSTAND.
- **TO RAISE THE KICKSTAND:** PIVOT THE KICKSTAND UPWARDS TOWARDS THE REAR WHEEL OF THE SCOOTER DECK.

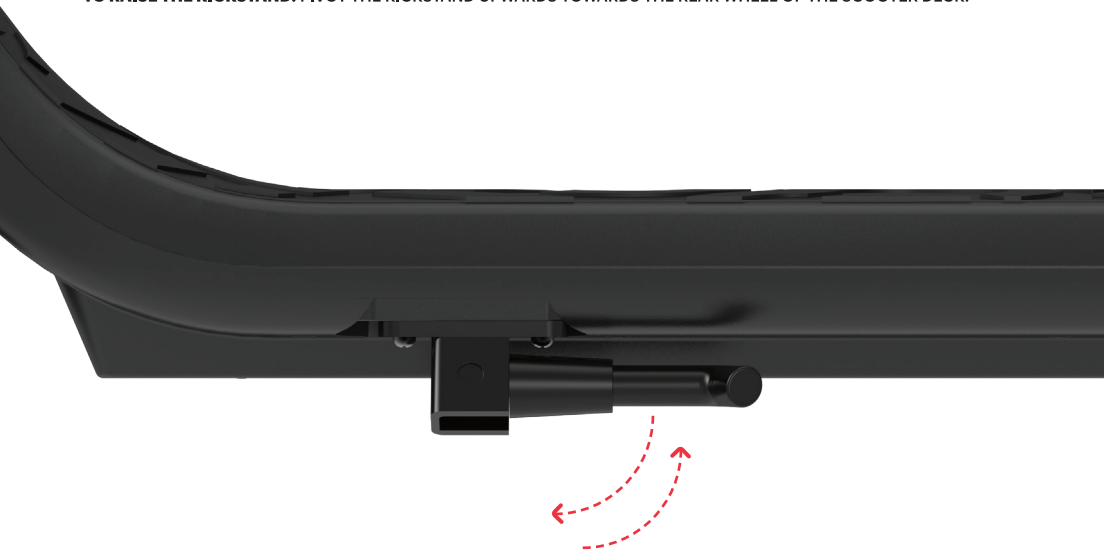


**IMPORTANT: ALWAYS RAISE THE KICKSTAND BEFORE RIDING.**

## 3. Making Moves

### 3.1 Riding Position

FOR THE BEST BALANCE AND STABILITY, RIDE WITH THE FRONT FOOT ON THE DECK POINTING DIRECTLY FORWARD AND THE BACK FOOT POINTING TO THE SIDE AT AN ANGLE (ILLUSTRATED BELOW).

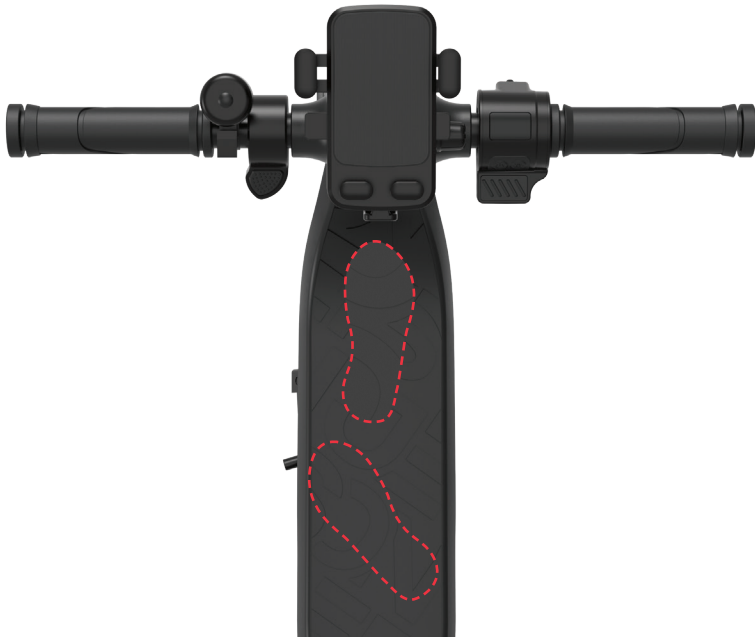

## 3.2 Starting and Accelerating




THE RHYTHM REQUIRES MOTION ACTIVATION TO START. PRIOR TO ENGAGING THE ACCELERATION THUMB THROTTLE, PLACE ONE FOOT ON THE GROUND AND PUSH TO PROPEL THE SCOOTER FORWARDS WITH TWO KICKS.

### **IMPORTANT ACCELERATION NOTES:**

- TO AVOID SUDDEN BURSTS OF SPEED, PUSH GENTLY ON THE THROTTLE TO ACCELERATE.
- THE MORE YOU ENGAGE THE THROTTLE, THE FASTER THE RHYTHM WILL TRAVEL. THE MAXIMUM ACHIEVABLE SPEED AT ANY POINT WILL BE DETERMINED BY THE SPEED MODE IN WHICH THE SCOOTER IS SET.

### 3.3 Braking

THE REAR BRAKE LIGHT WILL ILLUMINATE WHENEVER THE E-BRAKE IS ENGAGED TO ALERT OTHERS THAT YOU ARE DECELERATING.

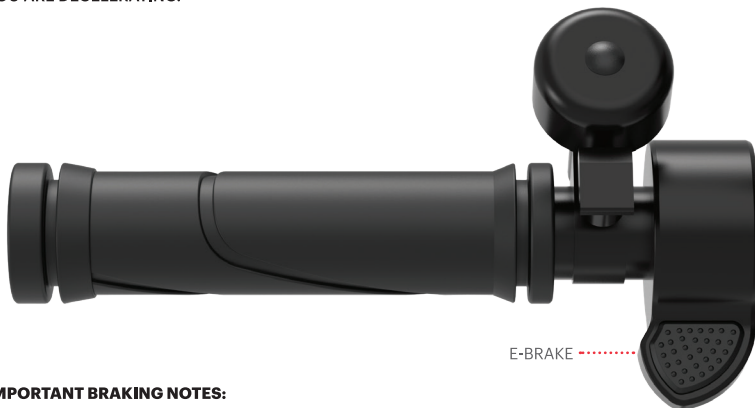

#### **IMPORTANT BRAKING NOTES:**

- THE MORE YOU ENGAGE THE E-BRAKE, THE FASTER YOU WILL DECELERATE.
- TO AVOID ABRUPT STOPS, PRESS DOWN ON THE E-BRAKE GENTLY.

### 3.4 Turning

WHILE THE SCOOTER IS IN MOTION, ROTATE THE HANDLEBAR TO THE LEFT OR THE RIGHT.

#### **IMPORTANT TURNING NOTES:**

- ADJUST POSTURE AND SHIFT BODY WEIGHT WHILE MAKING TURNS TO MAINTAIN GOOD BALANCE.
- THE MORE YOU ROTATE THE HANDLEBAR, THE MORE THE FRONT WHEEL WILL SWIVEL AND THE SHARPER THE TURN WILL BE.

### 3.5 Maximizing Riding Range

THE MAXIMUM RANGE THAT THE RHYTHM CAN GO ON A SINGLE BATTERY CHARGE IS 12 MILES. SEVERAL FACTORS WILL AFFECT THE MOTOR'S ABILITY TO ATTAIN THAT DISTANCE.

- **RIDING SURFACE:** YOU WILL GET MORE MILEAGE WHEN RIDING ON A SMOOTH, FLAT SURFACE.
- **WEIGHT:** THE MORE WEIGHT THE SCOOTER IS CARRYING, THE LESS DISTANCE THAT CAN BE ACHIEVED.
- **TEMPERATURE:** RIDING, CHARGING, AND STORING THE SCOOTER AT TEMPERATURES ABOVE 50°F WILL CONTRIBUTE TO LONGER-LASTING POWER.
- **TIMELY BATTERY CHARGING:** TO MAINTAIN BATTERY CAPACITY, CHARGE THE SCOOTER AFTER EACH RIDE.
- **RIDING STYLE:** FREQUENT STARTING AND STOPPING WILL HASTEN BATTERY CHARGE DEPLETION.





## 3.6 Helmet Safety



**PROPER POSITIONING:  
THE FOREHEAD IS COVERED  
BY THE HELMET.**



**IMPROPER POSITIONING:  
THE FOREHEAD IS EXPOSED.  
A FALL COULD RESULT IN SERIOUS INJURY.**

\* WEAR A HELMET, APPROPRIATE CLOTHING, SHOES, AND SAFETY GEAR. AVOID CLOTHING THAT CAN GET CAUGHT INTO OR UNDER THE WHEELS. CLOSED-TOE, FLAT SHOES ARE RECOMMENDED. WEAR AN ASTM F1492 APPROVED HELMET AND PROTECTIVE GEAR TO PREVENT INJURY IN THE EVENT OF AN ACCIDENT.

# Care, Maintenance, & Warranty

TAKE GOOD CARE OF YOUR SCOOTER TO KEEP IT RIDING SMOOTHLY AND SAFELY. HERE'S HOW:

## **CLEANING YOUR SCOOTER**

TO CLEAN THE RHYTHM, CAREFULLY WIPE WITH A DAMP CLOTH AND THEN DRY WITH A DRY CLOTH. DO NOT APPLY WATER DIRECTLY TO THE RHYTHM, AS THE ELECTRICAL AND ELECTRONIC SYSTEMS MAY GET WET, RESULTING IN A MALFUNCTION THAT COULD LEAD TO PERSONAL INJURY. IF THE ELECTRIC PARTS OR BATTERY GET WET, DO NOT POWER ON THE RHYTHM. PLEASE CONTACT THE JETSON CARE TEAM FOR ASSISTANCE.

## **HANDLING YOUR SCOOTER**

- KEEP AWAY FROM FIRE AND EXCESSIVE HEAT.
- AVOID INTENSE, DIRECT PHYSICAL IMPACT AND/OR SEVERE VIBRATION.
- PROTECT FROM WATER OR MOISTURE.
- DO NOT DISASSEMBLE THE RHYTHM OR ITS BATTERY.
- CONTACT THE JETSON CARE TEAM IF THERE ARE ANY ISSUES WITH THE BATTERY.

## **STORING YOUR SCOOTER**

- FULLY CHARGE THE BATTERY BEFORE STORING.
- THE BATTERY SHOULD BE FULLY CHARGED ONCE A MONTH DURING EXTENDED PERIODS OF NON-USE.
- COVER THE RHYTHM TO PROTECT AGAINST DUST.
- STORE THE RHYTHM INDOORS AND IN A DRY PLACE.

## **ONE-YEAR GENERAL LIMITED WARRANTY**

All new Jetson products, excluding parts and accessories, are warranted against defects in materials and workmanship for a period of one year from the date of original retail purchase when used in accordance with Jetson's user manuals (refer to [ridejetson.com/support](https://ridejetson.com/support)).

**Under this warranty, you will be able to direct your claims to Jetson even in situations where you purchased the Jetson Product from one of our authorized retailers.**

To read the full terms of our warranty, visit [ridejetson.com/warranty](https://ridejetson.com/warranty)

## Stay connected.

Be sure to follow **@ridejetson**  
on social media to learn about fantastic offers,  
giveaways, and all the latest Jetson news.



## Loving your ride?

Then be sure to leave a review at [ridejetson.com/reviews](https://ridejetson.com/reviews).  
We can't wait to hear from you!

# JETSON

## #MakeMoves

## Questions? Let us know.

[ridejetson.com/support](https://ridejetson.com/support)  
[ridejetson.com/chat](https://ridejetson.com/chat)

To exercise your product's  
1-year limited warranty  
or inquire about warranty  
coverage, contact us directly.

US/CANADA: 1-888-976-9904  
MEX: +001 888 976 9904  
UK: +44 (0)33 0838 2551

Manufactured in Shenzhen, China  
Imported by Jetson Electric Bikes LLC.  
P.O. Box 320149, 775 4th Ave #2,  
Brooklyn, NY 11232

[www.ridejetson.com](https://www.ridejetson.com)



Made in China  
Date Code: 07/2022

# JETSON

**CONFIDENTIAL FILE INFORMATION  
THIS PAGE NOT FOR PRINT**

DATE: 05/25/2022

FILE NAME: Rhythm-manual.indd

PAGE SIZE: L5.5" \* H4.25" | L13.97cm \* H10.795cm

BOOKLET FORMAT; SADDLE STITCHED BINDING


BLEED: .125" on all sides

## PRINTER SPECIFICATIONS

SCALE: 100%

MATERIALS:

- 250g C2S
- Printed double sided: 4C

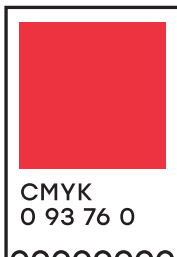

**DO NOT PRINT COMMENT, SCORING  
OR DIE LINES LAYERS!**

Physical sample according to specs must be approved  
by JETSON Bike before proceeding to production.

COMMENTS (Internal reference only)

File created by Eitan Adika, Jangmu Lama  
& Angelina Zavilevich