

# INSTALLATION INSTRUCTIONS

---

## About the 6128RF

---

The 6128RF is a combination unit that contains:

- A 6128 Fixed Addressable Keypad
- A 5881M RF Receiver
- A 5800TM Transmitter Module
- A normally-open relay output.

The 6128RF Keypad/Transceiver may be used on any control panel that supports the 6128 Keypad (i.e., VISTA-10SE, VISTA-20SE, VISTA-40, VISTA-50P, 4110DL, 4110XM, 4140XMP, VISTA-20HWSE).

### Features of the 6128RF

#### Wireless Features

- Supports up to 8 wireless keys locally (programmed directly into 6128RF) without occupying any zones supported by the control panel.
- Supports button-type transmitters (5804, 5804BD) for local operation.
- Supports a maximum of 16 transmitters programmed into any 5800 Series supported control panel.
- Provides low battery indications for the local wireless keys.
- Supports wireless keys with Signal Sentry (high security) (5804E).
- Provides a nominal range of 200' for the RF transmitters (some transmitters have a shorter range).
- Supports RF Jam detection when the receiver is enabled.
- Provides wireless key support for control panels that do not support RF themselves (such as 4110DL).



The following transmitters are not intended for use in UL installations:  
5804, 5804BD, 5804E and 5827BD.

---

#### Programming Features

- Provides an "Auto Enroll" mode for programming of the wireless keys.
- Provides a method for deleting a serial number and re-enrolling a new one in its place.
- Is shipped with default settings for the functions of the wireless keys.

#### Additional Features

- Can send status signals (Armed, Ready, etc.), to bi-directional units such as 5804BD and 5827BD.
- Can operate the on-board relay in conjunction with the receiver (trip a garage door opener).
- Can activate relays programmed into the control panel.
- Provides an "End User" mode to enable/disable local wireless keys (i.e., if a user accidentally loses a wireless key). See the 6128RF User Guide for this procedure.

### Application Guidelines for the 6128RF

Use the following guidelines when planning an installation:

- Local wireless keys are programmed directly into the 6128RF and may be used regardless of whether the RF receiver is enabled or disabled.
- If using bi-directional devices, be sure to enable the transmitter module in the 6128RF.
- If transmitters are programmed into the control panel, be sure to enable the receiver. (Make sure you do not exceed the number of receivers supported by the control panel).
- If a local wireless key is programmed to arm/disarm or to trigger a relay on the control panel, a user code must be entered into the 6128RF. This user code must also be programmed into the control panel.
- You must set the House ID only if you are using RF keypads and/or Bi-directional devices **AND** the House ID Source is the 6128RF (Local).

## 6128RF Application Guide

Below is a guide that outlines the possible applications for the 6128RF. Use this guide to see how to program the wireless keys, RF receiver and the House ID in the 6128RF for your particular installation.

Control Panel	Are you using			Program Wireless Keys As	Program RF Receiver	House ID Source*** As
	RF keys beyond system's capacity?	RF receivers beyond system's capacity?	RF keypads and/or Bi-directional devices on more than 1 partition?			
4110DL, 4110XM, 4140XMP, VISTA-20HWSE	N/A	N/A	N/A	Local	Disable	Local [0]
VISTA-10SE, VIA-30PSE	NO	NO	N/A	Use Programming Without Local Wireless Keys		
	YES	NO	N/A	Local	Enable [1]	System [1]
	YES	YES	N/A	Local	Disable [0]	Local [0]
VISTA-20SE	NO	NO	NO	Use Programming Without Local Wireless Keys		
	YES	NO	NO	Local	Enable [1]	System [1]
	YES	YES	NO	Local	Disable [0]	Local [0]
	NO	YES	YES*	System	Disable [0]	Local [0]
	YES	YES	YES*	Local	Disable [0]	Local [0]
VISTA-40, VISTA-50P	NO	NO	NO**	Use Programming Without Local Wireless Keys		
	YES	NO	NO**	Local	Enable [1]	System [1]
	YES	YES	NO**	Local	Disable [0]	Local [0]
	NO	YES	YES	System	Disable [0]	Local [0]
	YES	YES	YES	Local	Disable [0]	Local [0]


\* Two 6128RFs are needed for this application; one connected to partition 1's keypad terminals, and one connected to partition 2's.

\*\* If using an RF keypad on only one partition, the 6128RF's partition assignment must match the partition set in field 1\*48.

\*\*\* If set for Local on a partition control, the 6128RF's partition assignment must match the one programmed in the BD device.

## Installing the 6128RF

Locate the 6128RF in an area and at a height where it is convenient for user operation. The 6128RF must be at least 10' from the control panel to ensure proper operation of the RF receiver.

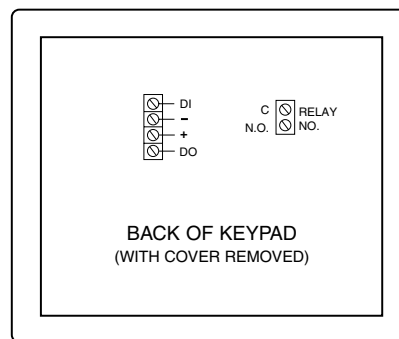

**Figure 1: 6128RF Wiring Connections**

To install the 6128RF, refer to *Figure 1* for wiring connections and perform the following steps:

Step	Action
1	Remove the case back by pushing down the two snaps along the 6128RF's upper edge and pulling the case apart.
2	Route the wiring from the control panel through the opening in the case back. (See the control panel's instructions for proper wire run lengths).
3	Mount the case back directly to a wall or electrical gang box. <b>Note: Do not use the center screw hole of the top mounting holes.</b>
4	Connect the power and data wires from the control panel to the terminals on the 6128RF.
5	Connect the wires for the relay output (if being used) to the terminals on the 6128RF's PC board.
6	Reattach the keypad to its case back.
7	Remove the clear protective films from the LCD display and keypad labels.

NOTE: Upon power up or exiting of the Program Mode, the 6128RF will alternately flash "Ad" and the 2-digit keypad address and the 2-digit receiver address on the display. Press any key to display the system status.

## 6128RF Programming

The 6128RF is shipped with preprogrammed default values. Below is a chart showing these values and also, diagrams showing the wireless keys' loops and their default function. Regardless of which wireless key you use (even if it is one not shown), loops 1-4 are defaulted for all 8 devices as shown. These values may be changed to suit the installation.

### Entering Program Mode

Press the [1] and [3] keys simultaneously for a few seconds within 30 seconds of applying power or within 30 seconds of removing the case back. The keypad will beep 3 times, and two dashes and two zeroes will flash alternately in the upper left-hand corner of the display. If any other numbers or letters are flashing in the display, press the [\*] key.



Pressing the [1] and [3] keys 30 seconds **after** applying power will allow you to enter the **User Mode**. This mode provides a means to enable and disable individual local wireless keys (i.e., if a user accidentally loses a wireless key). See the User Guide for the procedure.

### Programming Operations

Once you have entered the program mode, you may move to any program address simply by entering the program address number. The 6128RF will automatically exit the program mode if no keys are pressed for 30 seconds. While in the program mode:

- The [\*] key stores the information, then moves you to the next prompt. (The keypad will beep twice.)
- The [#] key erases the current information, and moves you back so you may enter the correct information.

Enter a Program Address (e.g., press [1] for Keypad Address; [2] for Receiver Address) to set the parameters in the 6128RF. The following chart lists the program addresses, the keypad display and the choices.

Program Address	Description	Display	Choices	Default
1	Keypad Address	cA	01-31	31
2	Receiver Address	rA	00-30	00
3	House ID	hI	01-31	
4	House ID Source	hS	1 = System 0 = Local	1 System
5	Wireless Key Editing	d-	Enter Existing Device Number	
6	Receiver Enable	r-	1 = On 0 = Off	1 Enable
7	Transmitter Module Enable	tE	1 = On 0 = Off	1 Enable
8	Wireless Key Auto Enroll	d-	Enter Serial Number	
8 then 2	Wireless Key User Code	u4	Enter 4-Digit User Code	
8 then 4	Wireless Key Loop Function	Ln	Enter Loop Number then Function (See <i>Wireless Key Function Chart</i> )	Loop 2 1 (Disarm) Loop 3 2 (Arm Away) Loop 4 3 (Arm Stay)
8 then 5	Wireless Key On-Board Relay Assignment	o-	Enter Loop Number then Relay Action	Loop 1 Close for 2 Seconds
9	Restore Defaults	EE	1 = Restores Defaults Any Other Key = Does Not Restore Defaults	
0	High Security Mode *	En	1 = Enable; 0 = Disable	0 Disable

\* When the High Security mode is enabled, only encrypted wireless keys will function regardless of whether they are programmed into the 6128RF or the control panel. All other wireless keys will be disabled.

## Defaulting the 6128RF

To restore the 6128RF to the default values, perform the following steps:

Step	Action
1	Enter the program mode by pressing the [1] and [3] keys simultaneously for a few seconds within 30 seconds of applying power. The keypad will alternately flash 00 and two dashes.
2	Press the [9] key. The display will flash EE.
3	Press the [1] key to restore the default values, or press any other key to exit without restoring the default values.  If [1] was pressed the keypad will beep 3 times and return to alternately flashing 00 and two dashes. If any other key was pressed the keypad will not beep and return to the alternately flashing the 00 and two dashes.
4	Press [*] to exit the 6128RF Program Mode.

## Programming Procedure

This section is divided into two parts.

- **Programming for an installation WITHOUT local wireless keys.**
- **Programming for an installation WITH local wireless keys.**

Using this programming procedure is necessary only if you plan to use wireless keys beyond the control panel's capacity, or on a system that does not support 5800 Series wireless. Refer to the 6128RF Application Guide on page 2 for installations that require these settings.

**Note:** See the control panel's installation instructions for the acceptable keypad and receiver addresses.



If you are using a wireless key in high security mode (5804E) in the control panel, it will occupy one of the devices in the 6128RF.

## Programming for an Installation WITHOUT Local Wireless Keys.

To program the 6128RF for an installation without any local wireless keys, perform the following steps:

Step	Action	Display
1	Enter the program mode by pressing the [1] and [3] keys simultaneously for a few seconds within 30 seconds of applying power or within 30 seconds of removing the case back.	Alternately flashes "oo" and two dashes.
2	Enter [1] (Keypad Address). Enter the 2-digit keypad address (01-31). Press the [*] key to continue.	Alternately flashes "cA" and the 2-digit keypad address.
3	Enter [2] (Receiver Address). Enter the 2-digit receiver address (00-30). Press the [*] key to continue.	Alternately flashes "rA" and the 2-digit receiver address.
4	Enter [4] (House ID Source). Enter (1) System to use the House ID programmed into the control panel, if RF keypad(s) and/or Bi-directional device(s): <ul style="list-style-type: none"><li>• Are used on the control panel.</li></ul> OR <ul style="list-style-type: none"><li>• Neither is used.</li></ul> Enter 0 (Local) to use the House ID programmed into the 6128RF (Program Address 3). <b>Note:</b> If the House ID Source is: <ul style="list-style-type: none"><li>• <b>System (1)</b>, RF keypad and bi-directional units <b>MUST</b> match the House ID programmed into the control panel.</li><li>• <b>Local (0)</b>, RF keypad and bi-directional units <b>MUST</b> match the House ID programmed into the 6128RF.</li></ul> Press the [*] key to continue.	Alternately flashes "hI" and either a "1" or "0."

Step	Action	Display
5	Enter [6] (Receiver Enable). Enter [1] to enable, or [0] to disable. Enable the receiver, if RF transmitters or wireless keypads are programmed into the control. <b>Note:</b> Make sure the number of receivers set for Enable (1) does not exceed the capacity of the control panel. Press the [*] key to continue.	Alternately flashes "r-" and either a "1" or "0."
6	Enter [7] (Transmitter Module Enable). Enter [1] to enable, or [0] to disable. Enter (1) if Bi-directional devices are being used. <b>Note:</b> If the House ID Source is System and more than one 6128RF is used, make sure only one has the Transmitter Module enabled. See the Note under <b>House ID Source</b> step 4. Press the [*] key.	Alternately flashes "tE" and either a "1" or "0."
7	Enter [0] (High Security Mode). If you desire to put the system into High Security mode, enter [1]. Enter [0] to disable	En
8	Press the [*] key to exit the 6128RF Program Mode.	"READY" or "NOT READY"

**Note:** This is all the 6128RF programming necessary for this application. Upon exiting of the Program Mode, the 6128RF will alternately flash "Ad," the 2-digit keypad address, and the 2-digit receiver address. If either of these is incorrect, repeat steps 1 through 3.

### Programming for an Installation WITH Local Wireless Keys



- The 6128RF is supplied with default settings for the functions of the wireless keys. See page 3.
- If, during the programming of the wireless keys, you make a wrong entry and want to reprogram a wireless key, simply press the [\*] key until (d-) is showing. Then just enter the correct information.

Perform steps 1-6 under *Programming for an Installation Without Local Wireless Keys*. Then perform the following steps:

Step	Action	Display
1	Enter [3] (House ID). Enter the 2-digit House ID for the 6128RF (01-31). <b>Note:</b> The House ID is needed only if an RF keypad and/or bi-directional units is used and House ID source is set for Local. The House ID entered here <b>MUST</b> match the House ID programmed in the RF keypad and the bi-directional unit. Press the [*] key to continue.	Alternately flashes "hI" and a 2-digit number.
2	Enter [8] (Wireless Key Auto Enroll). The 6128RF automatically advances to first available device number. <b>Note:</b> If all 8 devices have been enrolled, the 6128RF will beep three times and will continue to alternately flash "oo" and "-."	Alternately flashes "d" with the device number and "-."
3	Press any button on the wireless key to enroll the serial number. <b>Note:</b> If enrolling a wireless key (5804E) in high security mode, press all four buttons on the wireless key simultaneously.	Alternately flashes "d" with the device number and the serial number.
4	Press the [*] key to accept the serial number OR press the [#] key to reject the serial number. If you accept the serial number, the 6128RF beeps twice. If you reject the serial number, the 6128RF returns to the enroll serial number prompt. <b>Note:</b> A maximum of 8 wireless keys may be enrolled into the 6128RF. These wireless keys <b>DO NOT</b> occupy any zones supported by the control. If no other programming will be done at this time, press [*] to exit. Otherwise, continue with step 5.	If the serial is been accepted, the display will flash the device number and a hyphen.  If the serial number is rejected, the display will alternately flash "d" with the device number and "-."
5	Enter [2] (User Code). Enter the 4-digit user code for the wireless key. <b>Note:</b> The user code must be a valid code that is programmed in the control panel. Press the [*] key to accept the user code. If no other programming will be done at this time, press [*] to exit. Otherwise, continue with step 6.	Flashing "u4." Once the 4-digit user code is entered, the display flashes "u4," the first two digits and then the last two digits of the user code.

Step	Action	Display																								
6	<p>Enter [4] (Loop Functions). Enter the loop number (1-4).</p> <p><b>Note:</b> The 6128RF is shipped with the loop functions preprogrammed. Perform steps 6 through 10 only if it is necessary to change any of the loop functions.</p> <p>Loop 1   Close the 6128RF On-Board Relay for 2 sec.</p> <p>Loop 2    1 (Disarm)</p> <p>Loop 3    2 (Arm Away)</p> <p>Loop 4    3 (Arm Stay)</p> <p>See the Wireless Key Function Chart below for the choices:</p> <p style="text-align: center;"><b>Wireless Key Function Chart</b></p> <table><thead><tr><th>Function</th><th>Entry</th></tr></thead><tbody><tr><td>Disarming</td><td>1</td></tr><tr><td>Arming Away</td><td>2</td></tr><tr><td>Arming Stay</td><td>3</td></tr><tr><td>Arming Maximum (Away Instant)</td><td>4</td></tr><tr><td>Arming Instant</td><td>7</td></tr><tr><td>Panic Alarm Produces type of alarm [* &amp; #] programmed in control panel.</td><td># + 99</td></tr><tr><td>Manually Start a Relay Action</td><td># + 7 (VISTA-10SE, VIA-30PSE) # + 7 + n (VISTA-20SE(HW))</td></tr><tr><td>Manually Stop a Relay Action</td><td># + 8 (VISTA-10SE, VIA-30PSE) # + 8 + n (VISTA-20SE(HW))</td></tr><tr><td>Activate Relay as Programmed in Control</td><td># + 71 (VISTA-40, VISTA-50P)</td></tr><tr><td>Activate Relay as Programmed in Control</td><td># + 72 (VISTA-40, VISTA-50P)</td></tr><tr><td>Activate Access Control Relay for Partition</td><td>0 (VISTA-40, VISTA-50P)</td></tr></tbody></table> <p>n = Device Number programmed in VISTA-20SE(HW) to be Controlled Press the [*] key.</p>	Function	Entry	Disarming	1	Arming Away	2	Arming Stay	3	Arming Maximum (Away Instant)	4	Arming Instant	7	Panic Alarm Produces type of alarm [* & #] programmed in control panel.	# + 99	Manually Start a Relay Action	# + 7 (VISTA-10SE, VIA-30PSE) # + 7 + n (VISTA-20SE(HW))	Manually Stop a Relay Action	# + 8 (VISTA-10SE, VIA-30PSE) # + 8 + n (VISTA-20SE(HW))	Activate Relay as Programmed in Control	# + 71 (VISTA-40, VISTA-50P)	Activate Relay as Programmed in Control	# + 72 (VISTA-40, VISTA-50P)	Activate Access Control Relay for Partition	0 (VISTA-40, VISTA-50P)	<p>Flashing "Ln."</p> <p>Once the loop number is entered, alternately flashes "L" with the loop number and the present function.</p> <p style="text-align: center;"><b>Default Loop Functions</b></p> <div><p>5804 5804-002-V0</p></div> <div><p>5804BD 5804BD-002-V0</p></div>
Function	Entry																									
Disarming	1																									
Arming Away	2																									
Arming Stay	3																									
Arming Maximum (Away Instant)	4																									
Arming Instant	7																									
Panic Alarm Produces type of alarm [* & #] programmed in control panel.	# + 99																									
Manually Start a Relay Action	# + 7 (VISTA-10SE, VIA-30PSE) # + 7 + n (VISTA-20SE(HW))																									
Manually Stop a Relay Action	# + 8 (VISTA-10SE, VIA-30PSE) # + 8 + n (VISTA-20SE(HW))																									
Activate Relay as Programmed in Control	# + 71 (VISTA-40, VISTA-50P)																									
Activate Relay as Programmed in Control	# + 72 (VISTA-40, VISTA-50P)																									
Activate Access Control Relay for Partition	0 (VISTA-40, VISTA-50P)																									
7	Repeat step 6 for the rest of the loops of the wireless key.																									
8	To program a button on the wireless key to control the on-board relay, enter [5] (On -Board Relay Assignment).	Flashing "o-."																								
9	<p>Enter the loop number of the wireless key (1-4). Enter the relay action (0 = no action; 1 = relay off; 2 = relay on; 3 = relay toggles on &amp; off; 4 = relay closes for 2 seconds).</p> <p><b>Note:</b> The relay action must be "0" for UL installations.</p> <p>Press the [*] key.</p>	<p>Flashing "o" and the loop number.</p> <p>Once the action is entered, the display will show "o" and alternately flash the loop number and the relay action.</p>																								
10	Repeat step 9 for the rest of the loops.																									
11	When all loops have been programmed for the wireless key, press the [*] key.	Flashing "d" followed by the device number.																								
12	<p>The 6128RF will automatically display the next available device number (one that does not have a serial number).</p> <p>If you desire to program additional wireless keys, repeat steps 3 through 10. Otherwise, press the [#] key. This will take you back to the main display, which will alternately flash "oo" and "- ."</p> <p>Press the [*] to exit the 6128RF Program Mode.</p>																									

**Note:** Upon exiting of the Program Mode, the 6128RF will alternately flash "Ad," the 2-digit keypad address, and the 2-digit receiver address. If either of these is incorrect, repeat steps 1 through 3 under *Programming for an Installation Without Local Wireless Keys*.

## Deleting, Replacing or Editing Wireless Keys

Use the following procedure to delete, replace, or change any of the programming for a wireless key.

Step	Action	Display
1	Enter the program mode by pressing the [1] and [3] keys simultaneously for a few seconds within 30 seconds of applying power.	Alternately flashes "oo" and two dashes.
2	Enter [5] (Wireless Key Editing). Enter the device number for the wireless key you desire to edit. This must be a device that has its serial number programmed in the 6128RF already. To delete the serial number, press [*] then press [9], then press [*] again. To exit without deleting the serial number, press the [#] key Press the [*] key to continue.	Flashes the device number and a hyphen.  Once the device number is entered, alternately flashes "d" with the device number and the serial number.
3	To change any of the programming for the wireless key, perform the following step(s) in the <i>Programming for an Installation WITH Local Wireless Keys</i> . For the user code, perform step 5 For the loop functions, perform steps 6 and 7. For the on-board relay assignment, perform steps 8 to 9.	Alternately flashes "d" with the device number and "..."
4	When you have completed editing the wireless keys, press the [*] key twice to exit the program mode.	

**Note:** Upon exiting of the Program Mode, the 6128RF will alternately flash "Ad," the 2-digit keypad address, and the 2-digit receiver address. If either of these is incorrect, repeat steps 1 through 3 under *Programming for an Installation Without Local Wireless Keys*.

## Troubleshooting

The following error messages will cause the 6128RF to produce rapid beeps for 5 seconds. The table below describes the error messages and the corrective actions.

Display	Probable Cause	Corrective Action
<b>Lb</b>	Low battery in the wireless key	1. Replace the battery if the wireless key has a replaceable battery. 2. Replace the transmitter if the wireless key does not have a replaceable battery.
<b>OC</b>	Open circuit	Verify the Data Out (DO) wire is connected properly.
<b>1C</b>	Incompatible connection	Verify that the control panel is not a First Alert type control panel.
<b>Check 09</b>	1. 6128RF Receiver is not communicating 2. Another device on the keypad terminals is not communicating to the control panel	1. Verify the Data In (DI) wire is connected properly. 2. Verify the wiring between the control and all other devices.

## Specifications

**Physical:** 4-3/4" H x 5-3/4" W x 1" D (121mm x 146mm x 25.4mm)

**Wiring:** (+) +12VDC  
(-) Ground  
DO Data to Control Panel  
DI Data from Control Panel

**Range:** 200' nominal

**Frequency** 345 MHz

**Current:** Standby 90ma  
Transmitting and/or Relay Activated 120ma

**Relay:** Normally Open, 1A, 28VDC

**Sounder:** Piezo-electric (fire alarm is loud pulsing tone; burglary/audible panic alarm is continuous tone)

**FOR DETAILS ON THE LIMITATIONS OF THE ENTIRE ALARM SYSTEM, REFER TO THE INSTALLATION INSTRUCTIONS FOR THE CONTROL PANEL WITH WHICH THIS DEVICE IS USED.**

**FCC STATEMENT**

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

**FEDERAL COMMUNICATIONS COMMISSION (FCC) Part 15 STATEMENT**

This equipment has been tested to FCC requirements and has been found acceptable for use. The FCC requires the following statement for your information:

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for a Class B computing device in accordance with the specifications in Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- If using an indoor antenna, have a quality outdoor antenna installed.
- Reorient the receiving antenna until interference is reduced or eliminated.
- Move the radio or television receiver away from the receiver/control.
- Move the antenna leads away from any wire runs to the receiver/control.
- Plug the receiver/control into a different outlet so that it and the radio or television receiver are on different branch circuits.

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The user or installer may find the following booklet prepared by the Federal Communications Commission helpful: "Interference Handbook"

This booklet is available from the U.S. Government Printing Office, Washington, DC 20402.

*The user shall not make any changes or modifications to the equipment unless authorized by the Installation Instructions or User's Manual. Unauthorized changes or modifications could void the user's authority to operate the equipment.*

**ADEMCO LIMITED WARRANTY**

Alarm Device Manufacturing Company, a Division of Pittway Corporation, and its divisions, subsidiaries and affiliates ("Seller"), 165 Eileen Way, Syosset, New York 11791, warrants its products to be in conformance with its own plans and specifications and to be free from defects in materials and workmanship under normal use and service for 24 months from the date stamp control on the product or, for products not having an Ademco date stamp, for 12 months from date of original purchase unless the installation instructions or catalog sets forth a shorter period, in which case the shorter period shall apply. Seller's obligation shall be limited to repairing or replacing, at its option, free of charge for materials or labor, any product which is proved not in compliance with Seller's specifications or proves defective in materials or workmanship under normal use and service. Seller shall have no obligation under this Limited Warranty or otherwise if the product is altered or improperly repaired or serviced by anyone other than Ademco factory service. For warranty service, return product transportation prepaid, to Ademco Factory Service, 170 Michael Drive, Syosset, New York 11791.

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE, WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. IN NO CASE SHALL SELLER BE LIABLE TO ANYONE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, OR UPON ANY OTHER BASIS OF LIABILITY WHATSOEVER, EVEN IF THE LOSS OR DAMAGE IS CAUSED BY THE SELLER'S OWN NEGLIGENCE OR FAULT.

Seller does not represent that the products it sells may not be compromised or circumvented; that the products will prevent any personal injury or property loss by burglary, robbery, fire or otherwise; or that the products will in all cases provide adequate warning or protection. Customer understands that a properly installed and maintained alarm may only reduce the risk of a burglary, robbery, fire or other events occurring without providing an alarm, but it is not insurance or a guarantee that such will not occur or that there will be no personal injury or property loss as a result. CONSEQUENTLY, SELLER SHALL HAVE NO LIABILITY FOR ANY PERSONAL INJURY, PROPERTY DAMAGE OR OTHER LOSS BASED ON A CLAIM THE PRODUCT FAILED TO GIVE WARNING. HOWEVER, IF SELLER IS HELD LIABLE, WHETHER DIRECTLY OR INDIRECTLY, FOR ANY LOSS OR DAMAGE ARISING UNDER THIS LIMITED WARRANTY OR OTHERWISE, REGARDLESS OF CAUSE OR ORIGIN, SELLER'S MAXIMUM LIABILITY SHALL NOT IN ANY CASE EXCEED THE PURCHASE PRICE OF THE PRODUCT, WHICH SHALL BE THE COMPLETE AND EXCLUSIVE REMEDY AGAINST SELLER. This warranty replaces any previous warranties and is the only warranty made by Seller on this product. No increase or alteration, written or verbal, of the obligations of this Limited Warranty is authorized.

**ADEMCO  
GROUP**

165 Eileen Way, Syosset, NY 11791  
Copyright © 1999 PITTWAY CORPORATION

