



MODEL BTC-DWC-ATT



PLEASE READ THIS MANUAL BEFORE USE

INSTRUCTION MANUAL



Thank you for purchasing a Browning Trail Camera. Our trail cameras are constructed of the finest workmanship and materials available. As hunters ourselves, we have designed our products to help you get the most of your time in the field. We hope you enjoy scouting game for years to come with your new Browning Trail Camera.

Our customer service team is here to help you with any questions you may have operating or setting up your new trail camera. Our representatives are available Monday through Friday from 9am to 5pm CST.

**Toll Free Customer Service: 1.888.618.4496
Customer Service email: service@browningtrailcams.com**

QUICK START GUIDE

STEP 1

Insert 8 AA Alkaline Batteries and an SD card into the camera. Power on the camera using the ON/OFF switch.



STEP 2

Press the **MODE** button to enter the programming screen. Select **CAMERA SETUP** and then set the time and date.



STEP 3

Return to the home screen. Camera will countdown a 30 second delay and then be ready to capture images.



TABLE OF CONTENTS

Package Contents	1
Batteries and SD Cards	1
Camera Diagram	2
Battery Installation	3
Main Screen	4
Time and Date	5
Capture Mode	6
Photo Quality / Video Length	7
Video Quality / Picture Delay	8
Multi Shot Modes	9
Temperature Units / Camera Name	10
Picture Data Strip / Motion Test	11
Motion Detection, Battery Type, Trigger Speed	12
Delete Images	13
Software Upgrade	13
Smart IR / IR LED Power	14
SD Card Management / Onscreen Playback	15
Image Retrieval	16
Warranty	17
Accessories	18
Camera Specifications / SD Card Size Chart	19



Getting Started

Package contents:


- 1- Trail Camera**
- 1- 6' Tree Strap**
- 1- Instruction Manual**
- 1- Cellular Antenna**

SD Card Selection

Install a good quality SD card That is a minimum of 4GB and class 4. The best brands of SD cards are Browning branded cards, Sandisk or Kingston branded cards. Please see page 23 for a graph showing how many photos, videos and timelapse segments can be stored on SD cards. Based on your intended camera usage, this table will help you determine what size SD card you need to use in your camera.



Camera Diagram

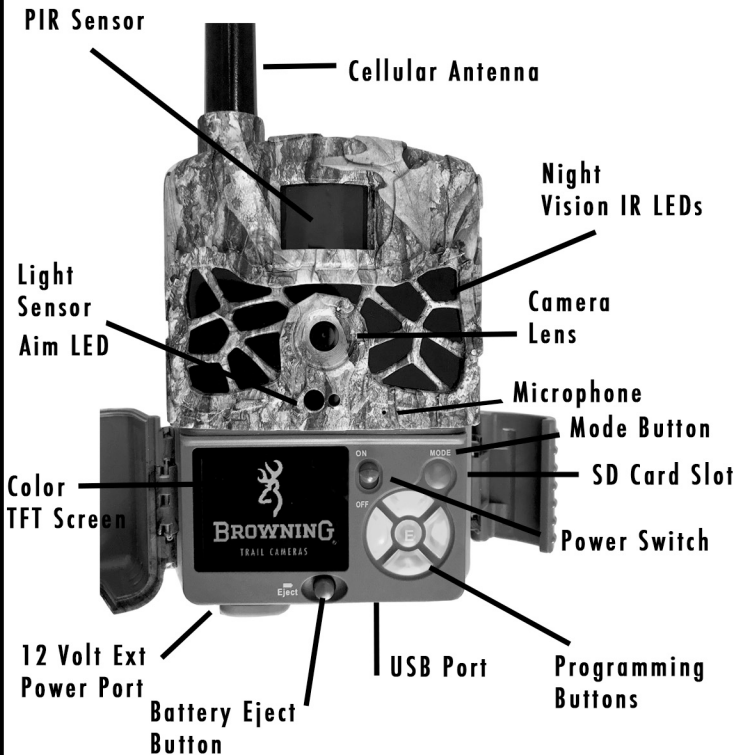



Battery Installation

Release the battery tray by pressing the Battery Eject button. The tray will eject about 1/2". With a slight pull, the battery tray will completely eject.

Install 16 AA Alkaline or Lithium batteries in the battery tray. Make sure you install the batteries with the correct polarity, following the markings on the battery tray. For optimal performance we recommend using Browning branded batteries, Energizer™ or Duracell™.

Slide the battery tray into the closed position.



Battery Eject Button



Cellular Setup

To View the Camera's cellular setup, navigate to the **LTE SETUP** menu item.


LTE FEATURE: This function will Enable / Disable cellular functions. Switch this to **ENABLE** to enable cellular functions.

DEVICE INFO: This menu item will display the camera ICCID and IMEI identification numbers.

LTE STATUS: By selecting the **LTE STATUS** option, the camera will connect to the cellular network and connect to the Strike Force Wireless website manually.

Main Screen

The main screen displays the camera operation mode, pictures or videos taken, pictures or videos possible on the SD card, camera delay countdown and battery life percentage. The background will show a live image from the camera. This can be used to help position the camera in the field.

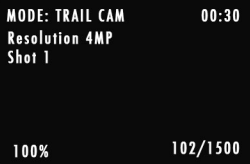



Set Time and Date

SETUP DATE / TIME

DATE

1 / 05 / 2018

TIME

12 : 21 PM

To set the time and date:

From the HOME screen, press the MODE button once. Select the CAMERA SETUP option by pressing the Enter (E) button. Highlight the SETUP DATE/TIME option and press the Enter button. This will take you to the SET TIME AND DATE screen.

The month selection is highlighted. Use the UP and DOWN arrows to select the correct month.

When finished setting the month, press the RIGHT ARROW key to advance to set the correct day. Continue through all settings in this manner until the correct time and date appear.

Press the ENTER button once after you have made your selection for AM/PM. This will lock in your settings and return you to the CAMERA SETUP SCREEN.



Capture Mode

To set the camera's capture Mode, Highlight the **OPERATION MODE** option in the **SETUP MENU**, and press **ENTER**..

CAMERA SETUP

SETUP DATE/TIME
OPERATION MODE
PHOTO QUALITY
VIDEO QUALITY

Using the **UP** or **DOWN** arrow keys, select the operation mode for your camera. Press the **ENTER** key when finished.

CAPTURE MODE OPTIONS:

- **STILL PICTURES** This setting will take still pictures of game in daytime and nighttime. This is the setting most people use for trails and feeding areas.
- **VIDEO** This setting will take HD video clips of game in daytime and nighttime.

Photo Quality

To set the PHOTO QUALITY, highlight the PHOTO QUALITY option and press ENTER. Use the UP and DOWN arrow keys to make your selection.

OPTIONS:

LOW 4 MP, MEDIUM 8 MP, HIGH 12 MP, ULTRA 20 MP
Press ENTER button to save.

Video Length

VIDEO LENGTH

You can select the length of your video clip as well in the VIDEO LENGTH window. Your options are: 5, 10, 20, 30 seconds, 1 minute or 2 minute lengths.

NOTES:

To conserve battery power, your night videos are limited to a maximum time of 20 seconds. For example, if your video length is set at 30 seconds, your camera will take 30 second videos during the day, and your night videos will be limited to 20 seconds. Your video clips automatically record sound. Make sure your computer's sound volume is turned up when playing back video clips.

CAMERA SETUP

SETUP DATE/TIME
OPERATION MODE
PHOTO QUALITY
VIDEO QUALITY

CAMERA SETUP

SETUP DATE/TIME
OPERATION MODE
PHOTO QUALITY
VIDEO LENGTH





Video Quality

VIDEO RESOLUTION

Both video settings capture in 1920x1080 resolution. HIGH resolution takes videos at 30 frames per second. ULTRA resolution takes videos at 60 frames per second.

CAMERA SETUP

VIDEO QUALITY

PICTURE DELAY

SHOT MODE

TEMP UNITS

Picture Delay

To set PHOTO DELAY, highlight the PHOTO DELAY option. Use the UP and DOWN arrow keys to make your selection.

DELAY OPTIONS:

1, 5, 10, 20, 30 seconds

1, 5, 10, 30, 60 minutes.

Press the ENTER button to save selection.

The PHOTO DELAY option allows you to choose how much of a "timeout" there is between taking still pictures or videos.

CAMERA SETUP

VIDEO LENGTH

PICTURE DELAY

SHOT MODE

TEMP UNITS