

FRS TWO WAY RADIO

OWNER'S MANUAL





ATTENTION! The radio is a multitask FRS transceiver. Combining the latest technology in radio communication along with a sturdy mechanical frame, the radio is the ideal and effective solution for the professionals who need to stay in touch with the working team (in construction sites, buildings, shows, trade fairs or hotels) or for leisure users that just want to keep up with friends and family.

To help you ward off bodily injury or property loss that may arise from improper operation, please read all the information carefully before using our products.

Before operating the radio, please read all safety and operating instructions. Save all instructions in a safe place for future reference.

FCC Part 15.21 Warning Statement



NOTE: THE GRANTEE IS NOT RESPONSIBLE FOR ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

Content of the packaging

Package Content	General	Extreme	Excellence	Honorable
Radio	2	2	4	6
Li-ion Battery	2	2	4	6
Belt Clip	2	2	4	6
Lanyard	2	2	4	6
Power Adapter	1	1	2	1
Desktop Charger	0	1	2	0

Note: The number of the above materials may be depending on the number of packages.

1

2

3


4

5

6



S Scan



- | | |
|-------------------------|------------------------|
| 1. Channel(1-22) | 7. VOX (Off,1,2,3) |
| 2. Keypad Lock | 8. Battery Indicator |
| 3. Transmit Status | 9. CTC/DCS |
| 4. Receive Status | 10. NC |
| 5. Power High/Low | 11. Emergency(Off,1,2) |
| 6. Dual Channel Monitor | 12. Sub-Code(1-105) |

Main features

- 22 FRS Channels
- 2 Channels Watch
- Channel Monitor
- 155 Sub-Codes (50 CTCSS codes/ 105 DCS codes)
- Hands-Free Operation (VOX)
- Roger Beep Tone
- Battery Level Meter
- Battery/Power Saver
- Low Battery Audible Alert
- 2pin Kenwood headset jack
- Keystroke Tones
- Battery Life: up to 18 hours (under typical use conditions)

LCD DISPLAY



- Output power: ≤2W (channels 1-7 and 15-22)
- Sub-Codes Scan and Store
- 10 Selectable Call Alerts
- Call Alert
- Keypad Lock
- Emergency Strobe Light
- Backlit LCD Display
- TOT (Time out timer)
- Li-Ion 1200mAh battery pack
- Up to 5 km range*

****Range may vary depending on environmental and/or topographical conditions.***

Installation of Accessories

1. Install the Li-ion Battery

Install the battery pack:

1. With the back of the radio facing you, insert the head of the **Li-ion battery pack** into the head of the radio.
2. Lower the **Li-ion battery pack** into the radio until the battery lock tab locks in place.

Remove the battery pack:

1. Press the battery locking tab upwards until the Li-ion battery pack is unlocked from the radio.
2. Pull out the **Li-ion battery pack** from the radio

2. Installing the Belt Clip

To install the **Belt Clip**, slide the clip down into the slot on the back of the radio until the **Belt Clip-latch** clicks. To remove the **Belt Clip**, press the Lock-tab down, and then gently pull the belt clip up toward the top of the radio.

3. External Speaker/Microphone Jack

Each radio can be used with an optional external speaker/microphone or headset, freeing your hands for other tasks. To use an optional speaker / microphone or headset:

- (1) Open the rubber cap on the side of the radio.
- (2) Insert the plug(s) into the SPK/MIC jacks.
- (3) Place the ear bud into your ear, and adjust the Microphone into your desired position.

4. Using a Headset

You can use a headset (#480_5R) for more private communications. To use a headset, lift the rubber cover from over the headset jack, and then plug in the headset.



Important: Your radio is not submersible or waterproof when using a headset jack. When you remove the headset, be sure to fully press the jack cover into place to restore its waterproof capability.

Charging the Battery

MP88 is equipped for using a 3.7V Li-ion rechargeable battery pack which can be recharged connecting the socket of the AC/DC wall adaptor to a mains power socket and inserting the jack of the wall adaptor into the desktop charger plug. It takes 4-5 hours to fully recharge the radio. For maximum battery life, we recommend charging the battery pack when the BF-88A is off and the battery pack is fully discharged.

Using a different battery charger other than the one specified can cause damage to your device or may even cause explosions and personal injuries.

Using the Radio Battery Level and Low Battery Alert

This radio has a **Battery Level Meter**  that shows the battery power level. The greater the number of bars visible, the stronger the battery level. When the battery level is low, the **Battery Shell**  icon will flash in the display indicating your batteries should be replaced or recharged if using a rechargeable battery pack.

Warning! To avoid the risk of personal injury or property damage from fire or electrical shock, only use accessories specifically designated for this product.

Basic Operations






In order to get the most out of your new radio, read this reference guide completely before attempting to operate the unit.



1. Power on/off and volume adjustment

Rotate the Power/Volume knob clockwise to turn the radio on. Rotate the control clockwise /counter-clockwise to adjust the volume level as you prefer. To turn the radio off, rotate the control counter-clockwise till hearing a mechanical “click”.

2. Choosing a Channel

Your radio has 22 channels and 155 Sub-Codes you can use to talk to others. In order to speak to someone, both your radios must be set to the same channel and Privacy code.

If the  or  button is locked, please press and hold the  button for 2 seconds to unlock. Press the  or  buttons to select one of the 22 FRS channels.

Note: You can check the FRS channel transmission activity status through the icon. On 1-7 and 15-22 channels, it is high-power transmission and  icon is displayed. On 8-14 channels, it is low-power transmission and  icon is displayed.

3. Keypad Lock



To avoid accidentally changing the radio settings, press the  button for 2 seconds. The  icon will appear on the display. **[PTT]**, **[MOIN]** and **[CALL]** will still be active. Repeat the same procedure to unlock the keypad.

4. Talking on Your Radio

To talk to others using the radio:



- (1) Press and hold the **[PTT]** button and speak in a clear, normal voice about 2-3 inches away from the microphone. While you are transmitting, the **TX→** icon appears on the display. To avoid cutting off the first part of your transmission, pause slightly after pressing the **[PTT]** button before you start talking.
- (2) When you have finished speaking, release the **[PTT]** button. You can now receive incoming calls. While receiving, **RX←** displays.

5. Monitor Mode Feature

Your radio allows you to listen for weak signals on the current channel at the press of a key. To turn ON Monitor mode: Press and hold  button for 2 seconds until two beeps sound. The receiver circuit stays open, and both noise and weak signals can be heard. The **RX←** icon blinks. To turn OFF Monitor mode: Press and hold  button for 2 seconds to return to "Normal" mode; two beeps sound and the **RX←** icon stops blinking and disappears.

6. Channel Scanning

Your radio can scan all 22 channels for activity. To enter, quickly press the **[SCAN]** button. Repeat the same procedure to exit.

Your radio will rapidly scan each of the 22 channels and stop on any active channel. Your radio will resume scanning after 5 seconds when the channel is no longer active. When you press the **[PTT]** button to transmit on an active channel, the scanning function will stop and remain on the active channel for 10 seconds before resuming scan when **[PTT]** button is no longer pressed. To resume scanning, quickly press the  or  button.

7. Scanning Sub-Codes

Press and holding **[SCAN]** button to enter the Sub-Codes scanning.

A flashing "CTC/DCS" will be in the left status display to indicate the radio is in Sub-Codes scanning mode.

In this mode, the lower display will cycle through the Sub-Codes as they are being tested. Once the bits of the received Privacy code are determined, the "CTC/DCS" indicator will stop flashing.

Press the **[PTT]** button to save the scanned tone into memory.

8. Using the Flashlight

You can use this radio in an emergency. If you press **[LAMP/Weather]** button, the radio turns on the high-intensity LED flashlight on your radio.

- Your radio operates normally when the **emergency** strobe is activated.

(1) Press **[LAMP/Weather]** button once, it will turn on continuously. (Always On mode)

(2) And then, press **[LAMP/Weather]** button once, the Strobe Light emits the **emergency** signal. (Strobe **emergency** mode)

(3) And then, press **[LAMP/Weather]** button once, the light will be turned off.

9. Emergency Alert

The Emergency Alert feature can be used to signal members in your group for help.


To activate the emergency alert function, press and hold the **[Emergency]** button on the top for 3 seconds. The radio will send out a loud siren sound and the flashlight will flash.

Press the **[Emergency]** button to exit the emergency alert function.

WARNING: The Emergency Alert feature should only be used in the even of an actual emergency.

Working the MENU System

Menu List

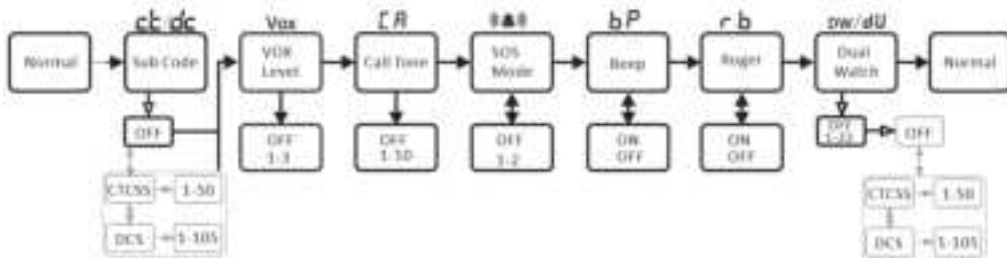


1. Sub-Codes

Your Radio incorporates two advanced coded squelch systems that can help to reduce interference from other users on any given channel. CTCSS (Continuous Tone Coded Squelch System) provides 50 Sub-Codes and DCS (Digitally Coded Squelch) provides 105 Sub-Codes. This provides a total of 155 Sub-Codes. Either system can be used on all channels, but both systems cannot be used on the same channel at the same time.

To successfully communicate using a privacy code, both the sending and receiving radios must be tuned to the same channel and to the same privacy code system (CTCSS or DCS) and privacy code number. Each channel will remember the last privacy code system and number you select.





To select a Privacy Code for the current channel press the  button once, and then the  or  buttons to select between "OF/CT/DC." Press the  button again and  or  buttons to select one of the 50 CTCSS Codes or one of





the 105 DCS Codes. The Privacy Code icon on the display will indicate whether you set your Privacy Code in CTCSS or DCS mode. To confirm the selection, press the **[PTT]** button or press the  button again to move to the next feature setting.

NOTE: If you select a CTCSS Privacy Code, any pre-selected DCS Privacy Code will be cancelled and vice-versa. Selecting a Privacy Code of "oF" will disable the Privacy feature. To communicate between two radios, all radios in your group must be set to the same channel and/or Privacy Code selections. The Privacy Code can only be set in channels 1~22.

2. VOX (Hands-Free Transmission)





Your radio has 3 VOX level settings: (oF/1/2/3).

To set VOX, press the  button until the display shows "VOX" blinking while on the right of the CHANNELNUMBER display, an "oF" icon appears. Select "1", "2" or "3" by pressing the  or  buttons and push the **[PTT]** key, or press the  button again to move to the next feature setting.

VOX will be more sensitive on the "1" setting than on the "3" setting. To turn VOX off, press the  button until the display shows "VOX" blinking while on the right of the CHANNELNUMBER display, a "1", "2" or "3" icon appears. Select "oF" by pressing the  or  buttons and push the **[PTT]** key, or press the  button again to move to the next feature setting.




3. Ten Call Tone Settings




Your radio has 10 selectable CALLALERTS.

To select, press the  button until a "CA" icon appears and to the right of the "CA" icon the current CALLALERT setting is displayed. Then press the  or  buttons to make the CALLALERT selections - the radio will emit a corresponding tone for each selection. To confirm, press the **[PTT]** button or press the  button to move to the next feature setting.

4. Emergency Alert Model

This function can set the off alert/ site alert/ tone alert of the radio. Keep pressed the **[Emergency]** button for 3 seconds to start the alarm tone.





To select, press the  button until a  icon appears and to the right of the  icon the current Emergency Alert

Model setting is displayed. Then press the  or  buttons to make the Emergency Alert Model selections. To confirm, press the [PTT] button or press the  button to move to the next feature setting.









NOTE: The following three options can be selected:

- OFF: means to close the alarm function;
- 1. Means local alarm, sounds alarm through your radio speaker only
- 2. Means broadcast alarm, transmits a cycling tone over-the air.











5. Keypad Silent Operation


Your radio has a keypad silent operation mode. In this mode, all “keypad beeps” and “tones” are disabled. To set the keypad silent operation, press the  button until the display shows a “bP” icon. Select “on” or “oF” by pressing the  or  buttons and push the [PTT] key or  button.

6. Roger Beep (end of transmission) TONE

When the [PTT] button is released, the radio will beep to confirm to other users that your transmission has finished. To turn the ROGER BEEP tone on, press the  button until the display shows a “rb” icon while on the right of the “rb” display, an “oF” icon appears. Select “on” by pressing the  or  buttons and push the [PTT] key, or press the  button to move to the next feature setting. To turn the ROGER BEEP tone off, press the  button until the display shows a “rb” icon while on the right of the “rb” display, an “on” icon appears. Select “oF” by pressing the  or  buttons and push the [PTT] key, or press the  button to move to the next feature setting.

7. Dual Watch Function

Your radio has a **DUAL WATCH** function, to enable user to scan 2 channels for any activity. The first channel will be the current channel setting and the second channel will be the selected channel on the . To turn the DUAL WATCH on, press the  button until the “oF” icon appears blinking on the left of the display, while the “dU” icon appears on the left. Select the second channel by pressing the  or  button. Press the  button again and the  or  buttons to choose the Privacy Code (oF/dc/ct). Then press the  button again and the  or  buttons to set the Privacy

Code. Pls. note that the Privacy Code can be set only on Ch 1~22. To confirm, press the **[PTT]** button or the  button. The **DW** icon appears, the current channel and the watch channel flash alternately, indicating that the DUAL WATCH function is turned on, and the radio will start scanning the currently used channel/code and watch channel/code, and stop on any active channel. Your radio will resume scanning after 4 seconds when the channel is no longer active. When you press the **[PTT]** button to transmit on an active channel, the scanning function will stop and remain on the active channel for 10 seconds before resuming scan when the **[PTT]** button is no longer pressed. To turn the DUAL WATCH function off, press the **[SCAN]** button.

Appendix A. – Technical Specifications

Channels	22 FRS/12 Weather
Sub-Codes	50 CTCSS Tones/ 105 DCS Codes
Frequency Range	FRS
Operation Voltage	DC 3.7 V $\pm 10\%$
RF Output Power	2W (FRS)
FM Modulation	11K0F3E@12.5KHz
Adjacent Channel Power	60dB @ 12.5KHz
Transmission current	$\leq 1000\text{mA}$

NOTE: All specifications may be modified without prior notice or liability.

Appendix B. – Trouble shooting guide

Phenomena	Analysis	Solution
You cannot turn on the radio.	The battery may be installed improperly.	Remove and reattach the battery.
	The battery power may run out.	Recharge or replace the battery.
	The battery may suffer from poor contact caused by dirty or damaged battery contacts.	Clean the battery contacts or replace the battery.
During receiving, the voice is weak or intermittent.	The battery voltage maybe low.	Recharge or replace the battery.
	The volume level may be low.	Increase the volume.
	The speaker maybe blocked.	Clean the surface of the speaker.
You cannot communicate with other group members.	The frequency or signaling type maybe inconsistent with that of other members.	Verify that your TX/RX frequency and signaling type are correct.
	You may be too far away from other members.	Move towards other members.
You hear unknown voices or noise.	You may be interrupted by radios using the same frequency.	Change the frequency, or adjust the squelch level.
	The radio in analog mode maybe set with no signaling.	Request your dealer to set signaling for the current channel to avoid interference
You are unable to hear anyone because of too much noise and hiss.	You may be too far away from other members.	Move towards other members.
	You may be in an unfavorable position. For example, your communication may be blocked by high buildings or blocked in an underground area.	Move to an open and flat area, restart the radio, and try again.
	It may be the result of external disturbance (such as electromagnetic interference).	Stay away from equipment that may cause interference.
The radio keeps transmitting.	VOX may be turned on or the headset is not installed in place	Turn off the VOX function. Check that the headphones are in place.

NOTE: If the above solutions cannot fix your problems, or you may have some other queries, please contact your dealer for more technical support.

Appendix C. –FRS Frequency Chart (MHz)

CH.No	CH.Freq.	RF Power	CH.No	CH.Freq.	RF Power
1	462.5625	High	12	467.6625	Low
2	462.5875	High	13	467.6875	Low
3	462.6125	High	14	467.7125	Low
4	462.6375	High	15	462.5500	High
5	462.6625	High	16	462.5750	High
6	462.6875	High	17	462.6000	High
7	462.7125	High	18	462.6250	High
8	467.5625	Low	19	462.6500	High
9	467.5875	Low	20	462.6750	High
10	467.6125	Low	21	462.7000	High
11	467.6375	Low	22	462.7250	High

Appendix E. - DCS Table

DCS CODE LIST

Number	Code	Number	Code	Number	Code	Number	Code	Number	Code
1	D023	2	D025	3	D026	4	D031	5	D032
6	D036	7	D043	8	D047	9	D051	10	D053
11	D054	12	D065	13	D071	14	D072	15	D073
16	D074	17	D114	18	D115	19	D116	20	D122
21	D125	22	D131	23	D132	24	D134	25	D143
26	D145	27	D152	28	D155	29	D156	30	D162
31	D165	32	D172	33	D174	34	D205	35	D212
36	D223	37	D225	38	D226	39	D243	40	D244
41	D245	42	D246	43	D251	44	D252	45	D255
46	D261	47	D263	48	D265	49	D266	50	D271
51	D274	52	D306	53	D311	54	D315	55	D325
56	D331	57	D332	58	D343	59	D346	60	D351
61	D356	62	D364	63	D365	64	D371	65	D411
66	D412	67	D413	68	D423	69	D431	70	D432
71	D445	72	D446	73	D452	74	D454	75	D455
76	D462	77	D464	78	D465	79	D466	80	D503
81	D506	82	D516	83	D523	84	D526	85	D532
86	D546	87	D565	88	D606	89	D612	90	D624
91	D627	92	D631	93	D632	94	D645	95	D654
96	D662	97	D664	98	D703	99	D712	100	D723
101	D731	102	D732	103	D734	104	D743	105	D754

Note: DCS codes can be programmed for use on Channels 1~22 only.

Appendix F. - CTCSS Table

CTCSS CHART (Hz)

Number	Frequency	Number	Frequency	Number	Frequency	Number	Frequency	Number	Frequency
1	67.0	2	69.3	3	71.9	4	74.4	5	77.0
6	79.7	7	82.5	8	85.4	9	88.5	10	91.5
11	94.8	12	97.4	13	100	14	103.5	15	107.2
16	110.9	17	114.8	18	118.8	19	123.0	20	127.3
21	131.8	22	136.5	23	141.3	24	146.2	25	151.4
26	156.7	27	159.8	28	162.2	29	165.5	30	167.9
31	171.3	32	173.8	33	177.3	34	179.9	35	183.5
36	186.2	37	189.9	38	192.8	39	196.6	40	199.5
41	203.5	42	206.5	43	210.7	44	218.1	45	225.7
46	229.1	47	233.6	48	241.8	49	250.3	50	254.1

Note: CTCSS Chart can be programmed for use on Channels 1~22 only

IMPORTANT NOTICE



WARNINGS: Replacement or substitution of transistors, regular diodes or other parts of a unique nature, with parts other than those recommended by PO FUNG COMPANY may cause a violation of the technical regulations of part 95 of the FCC rules, or violation of type acceptance requirements of part 2 of the rules. Your radio is set up to transmit a regulated signal on an assigned frequency. Any adjustment to your radio must be made by qualified technicians.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.



FCC & RSS WARNINGS:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SAR tests are conducted using standard operating positions accepted by the FCC/ISED with the device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. Before a new model is available for sale to the public, it must be tested and certified to the FCC/ISED that it does not exceed the exposure limit established by the FCC/ISED. Tests for each product are performed in positions and locations as required by the FCC/ISED. For body worn operation, this device has been tested and meets the FCC/ISED RF exposure guidelines when used with an accessory designated for this product or when used with and accessory that contains no metal.

To maintain compliance with the FCC/ISED's RF exposure guidelines, hold the transmitter and antenna at least 1 inch (2.5 centimeters) from your face and speak in a normal voice, with the antenna pointed up and away from the face.

This equipment complies with FCC/ISED radiation exposure limits set forth for an uncontrolled environment. In order to comply with the FCC/ISED RF exposure requirements, the antenna installation must comply with following:

Users must be fully aware of the hazards of the exposure and able to exercise control over their RF exposure to qualify for the higher exposure limits.

Your wireless hand-held portable transceiver contains a low power transmitter. This product sends out radio frequency (RF) signals when the Push-to-Talk (PTT) Button is pressed.

The device is authorized to operate at a duty factor not to exceed 50%.

This device complies with ISED licence-exempt RSS standard (s). Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent areil est conforme aux CNR d'ISED licables aux arels radio exemprs de licence.

L'exploitation est autorisée aux deux conditions suivantes:

(1) l'areil ne doit pas produire de brouillage,et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

ISED exposition aux radiations

Cet équipement est conforme avec ISED les limites d'exposition aux rayonnements definies pour un contrôle environnement.

Cet émetteur ne doit pas être co-localisés ou fonctionner en conjonction avec une autre antenne ou émetteur.

Cet équipement doit être installé et utilisé avec un minimum de 2.5cm de distance entre le radiateur et votre corps.

Electromagnetic Interference/Compatibility

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and

2. This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

Avis de conformité à la FCC : Ce dispositif a été testé et s'avère conforme à l'article 15 des règlements de la Commission fédérale des communications (FCC). Ce dispositif est soumis aux conditions suivantes: 1) Ce dispositif ne doit pas causer d'interférences nuisibles et; 2) Il doit pouvoir supporter les parasites qu'il reçoit, incluant les parasites pouvant nuire à son fonctionnement.

Tout changement ou modification non approuvé expressément par la partie responsable pourrait annuler le droit à l'utilisateur de faire fonctionner cet équipement.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference received, including interference that may cause undesired operation of the device.

Precautions for Portable Terminals

■ Operating Prohibitions

To protect you against any property loss, bodily injury or even death, be sure to observe the following safety instructions:

1. Do not operate the product in a location containing fuels, chemicals, explosive atmospheres and other flammable or explosive materials. In such location, only an approved Ex-protection model is allowed for use, but any attempt to assemble or disassemble it is strictly prohibited.
2. Do not operate the product near or in any blasting area.
3. Do not operate the product near any medical or electronic equipment that is vulnerable to RF signals.
4. Do not hold the product while driving.
5. Do not operate the product in any area where use of wireless communication equipment is completely prohibited.

■ Important Tips

To help you make better use of the product, be sure to observe the following instructions:

1. Do not use any unauthorized or damaged accessory.
2. Keep the product at least 2.5 centimeters away from your body during transmission.
3. Do not keep the product receiving at high volume for a long time.
4. For vehicles with an air bag, do not place the product in the area over the air bag or in the air bag deployment area.
5. Keep the product and its accessories out of reach of children and pets.
6. Please operate the product within the specified temperature range.
7. Continuous transmission for a long time may lead to heat accumulation within the product. In this case, please keep it at a proper location for cooling.
8. Handle the product with care.

9. Do not disassemble, modify or repair the product and its accessories without authorization.

■ Hazardous Environments

Do not operate the radio in hazardous environments. Explosion or fire may result. Do not operate the radio near unshielded electrical blasting caps.

Under certain conditions, radios can interfere with blasting operations and may cause an explosion. Turn your radio OFF to prevent accidental transmission when in a blasting area or in areas posted: "Turn off two-way radio." Construction crews often use remote control RF devices to set off explosives.

■ Precautions for Batteries

■ Charging Prohibitions

To protect you against any property loss, bodily injury or even death, be sure to observe the following safety instructions:

1. Do not charge or replace your battery in a location containing fuels, chemicals, explosive atmospheres and other flammable or explosive materials.
2. Do not charge your battery that is wet. Please dry it with a soft and clean cloth prior to charge.
3. Do not charge your battery suffering deformation, leakage and overheat.
4. Do not charge your battery with an unauthorized charger.
5. Do not charge your battery in a location where strong radiation is present.
6. Overcharge shall always be prohibited for it may shorten the life of your battery.

■ Maintenance Instructions

To help your battery work normally or prolong its life, be sure to observe the following instructions:

1. Accumulated dust on charging connector may affect normal charging. Please use a clean and dry cloth to wipe it on a regular basis.
2. It is recommended to charge the battery under 5°C~40°C. Violation of the said limit may cause battery life reduction or even battery leakage.
3. To charge a battery attached to the product, turn it off to ensure a full charge.
4. Do not remove the battery or unplug the power cord during charging to ensure a smooth charging process.
5. Do not dispose of the battery in fire.
6. Do not expose the battery to direct sunlight for a long time nor place it close to other heating sources.

7. Do not squeeze and penetrate the battery, nor remove its housing.

■ **Transportation Instructions**

1. Damaged batteries must not be transported.
 2. To avoid short circuit, separate the battery from metal parts or from each other if two or more batteries are transported in one packaging.
 3. The radio must be switched off and secured against switch-on, if the battery is attached.
- The content of the shipment must be declared in the shipping documents and by a Battery Shipping Label on the packaging. Contact your hauler for the local regulations and further information.

■ **Precautions for Disposal**

Once the service life of our products (including but not limited to radios and batteries) has ended, they shall not be disposed as household garbage. Their recycling and disposal shall satisfy your local regulations.

Disclaimer

The Company endeavors to achieve the accuracy and completeness of this manual, but no warranty of accuracy or reliability is given. All the specifications and designs are subject to change without notice due to continuous technological development. No part of this manual may be copied, modified, translated, or distributed in any manner without the prior written consent of the Company.

We do not guarantee, for any particular purpose, the accuracy, validity, timeliness, legitimacy or completeness of the third-party products and contents involved in this manual.



PO FUNG ELECTRONIC (HK) INTERNATIONAL GROUP COMPANY LIMITED

ADD: Room 1508, 15/F, Office Tower II, Grand Plaza, 625 Nathan Road, Kowloon, Hong Kong

Print version: A88(FCC)_Public_V1.0