

User Guide

Enterprise Wi-Fi 6 Router


EAI2326



1.	What's in the box	1
2.	Getting to know your Router	2
3.	Installation.....	4
	3.1 Setting up the Wi-Fi Router	5
	3.2 Setup requirements.....	5
4.	Configure your AP	6
	4.1 Login to the Web User Interface	6
	4.2 Quick Setup	7
5.	Technical Specification.....	13

1. What's in the box

Open the box and remove the Wi-Fi Router, power adapter, Quick Start Guide and Ethernet cable.

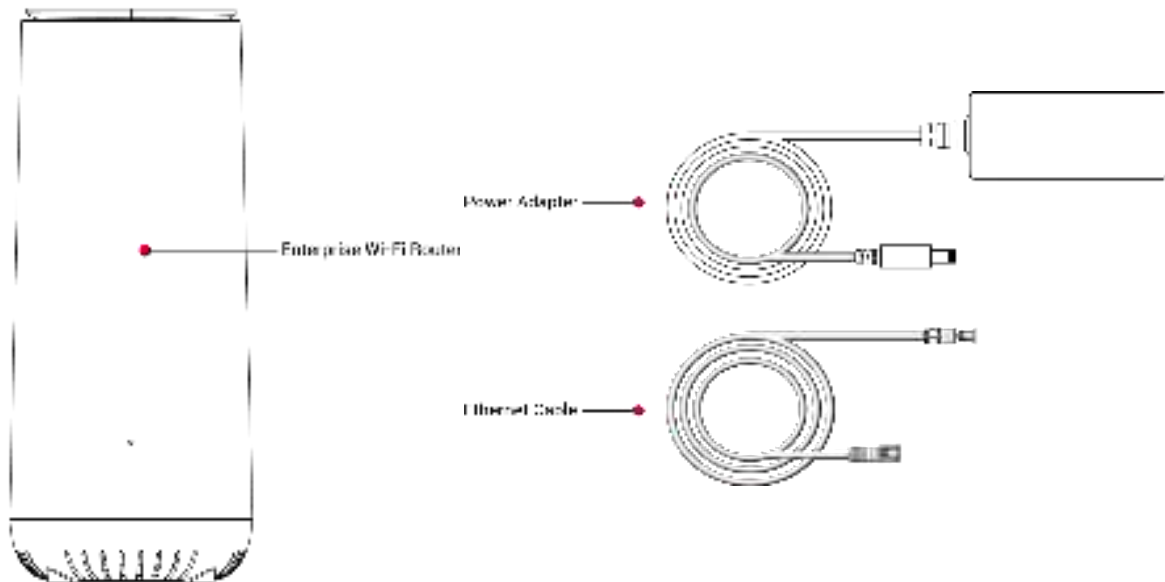


The box contains the following items:

- Wi-Fi Router.
- AC power adapter.
- Quick Start Guide.
- Ethernet cable

If any items are missing or damaged, please contact your dealer. Please keep original packing materials in case you need to return the product for repairing.

2. Getting to know your Router

Physical interfaces

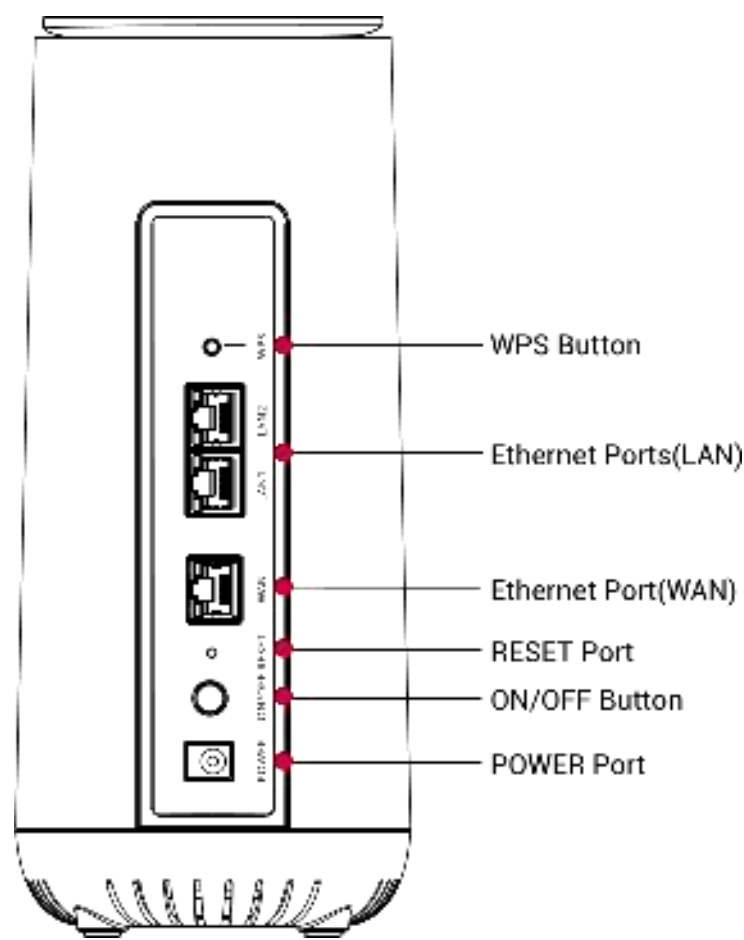


Button Behavior

Mode	Button	Activity	Description
Mesh Router / Extender	Power	Press down	Power on.
		Pop up	Power off.
	Reset	Press and release	System booting.
		Press and hold for 5 seconds	Reset to factory defaults.
	WPS	Press and release	WPS paring.
		Press and hold for 5 seconds	Mesh onboarding.
	Mixed	[WPS] Press and release, then [Reset] Press and hold for 5 seconds	Switch to Extender.

LEDs

The LEDs indicate the router's power and connection.

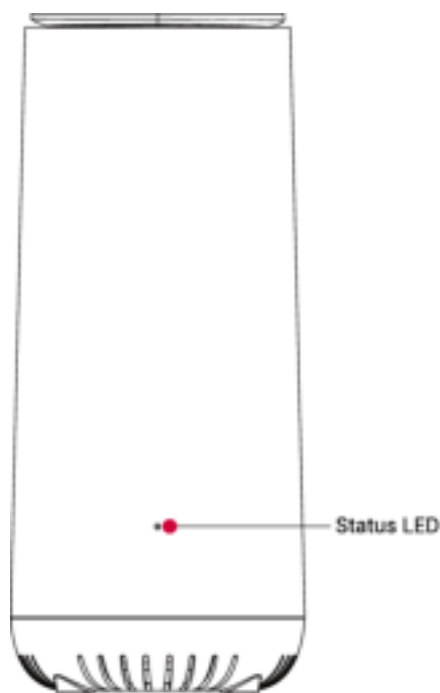


LED Behavior


Mode	LED	Activity	Description
Mesh Router / Extender	SYSTEM	OFF	Power off.
		Cycling between BLUE and RED	Firmware upgrading.
		Flashing GREEN	System booting.
		Flashing RED	Reset to factory defaults.
		Solid GREEN	Broadband connected.
		Solid BLUE	Mesh connected.
		Solid YELLOW	Poor Mesh signal.
		Solid RED	No Internet or Mesh disconnected.
		Cycling between BLUE and GREEN	WPS paring.
		Flashing BLUE	Mesh onboarding.

3. Installation

1. Plug the power cord into the POWER jack and the ISP network cable into the WAN port.

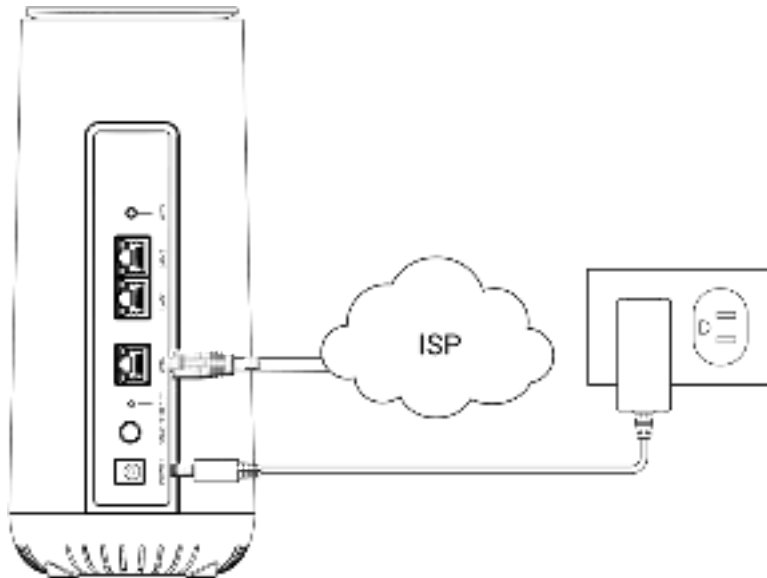

2. Press the router's power switch on, then head to **4. Configure your Router** to setup your Wi-Fi Router.

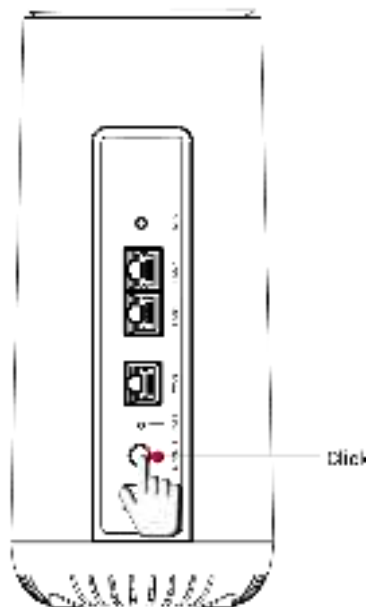

3.1 Setting up the Wi-Fi Router

You will start by identifying the ideal location for your router-that location will meet the following criteria:

- In an open space away from:
 - Walls or obstructions
 - Heavy-duty appliances or electronics such as microwave ovens and baby monitors
 - Metal fixtures, enclosures, cabinets, reinforced concrete, or pipes
- Near a power outlet
- On an upper floor of the home or at least 6 feet off the floor.

3.2 Setup requirements


To configure your wireless network via computer, you need a computer or mobile phone or tablet that meets the following system requirements:

- Ethernet RJ-45 (LAN) port
- Or IEEE 802.11a/b/g/n/ac/ax wireless capability
- An installed TCP/IP service
- Web browser such as Internet Explorer, Firefox, Safari, or Google Chrome

4. Configure your AP


4.1 Login to the Web User Interface

1. Connect an Ethernet cable directly between a local PC and device Port LAN.

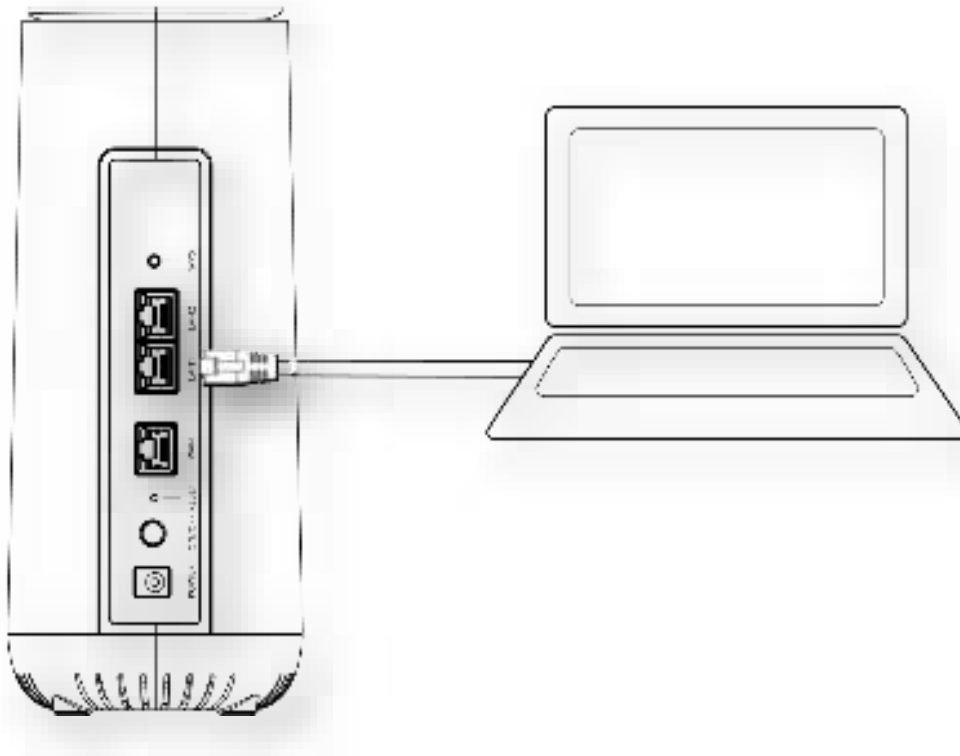

2. Open a web browser and enter the AP's default address **http://192.168.50.1** (mesh router mode) in the address bar.
3. Log into the Web UI using the default username: **admin** and password. The default password was printed on the label.


Please enter your account below

Username
Password 

4.2 Quick Setup

Operation Mode Setup

Please go to **Network > Operation Mode** page to setup operation mode.

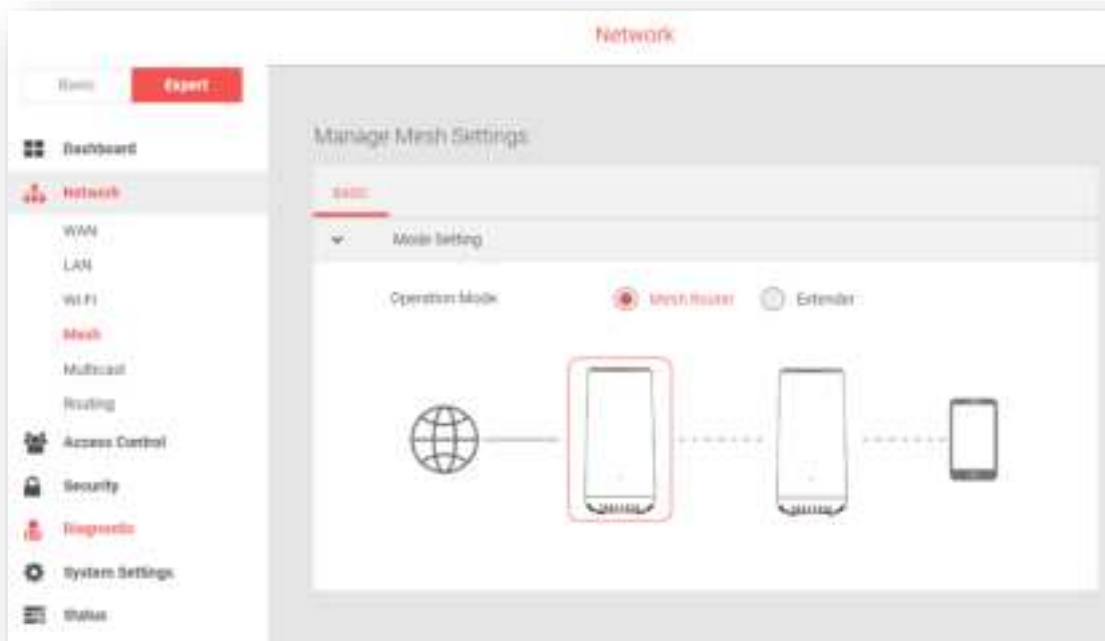


There are 2 kinds of Operation modes:

- Mesh Router mode: Mesh router mode have traditional routing functions and also support Mesh network interconnection.
- Extender mode: Extender mode expands the area of coverage of your Wi-Fi network without additional cables. In this mode, the device works as a wireless bridge with the ability to connect wireless clients and Ethernet network devices to its Wi-Fi network. This mode is ideal for extending an existing Wi-Fi network area.

Topology Setup

Configure one device as Mesh Router and other devices as Extender. Mesh Router connect WAN Port with Ethernet WAN. Mesh Router connect RE with Ethernet LAN cable. When Ethernet Mesh set up successful, the Extender will turn solid blue. Then you can remove the Ethernet cable of the Extender and Extender will set up Wi-Fi Mesh.

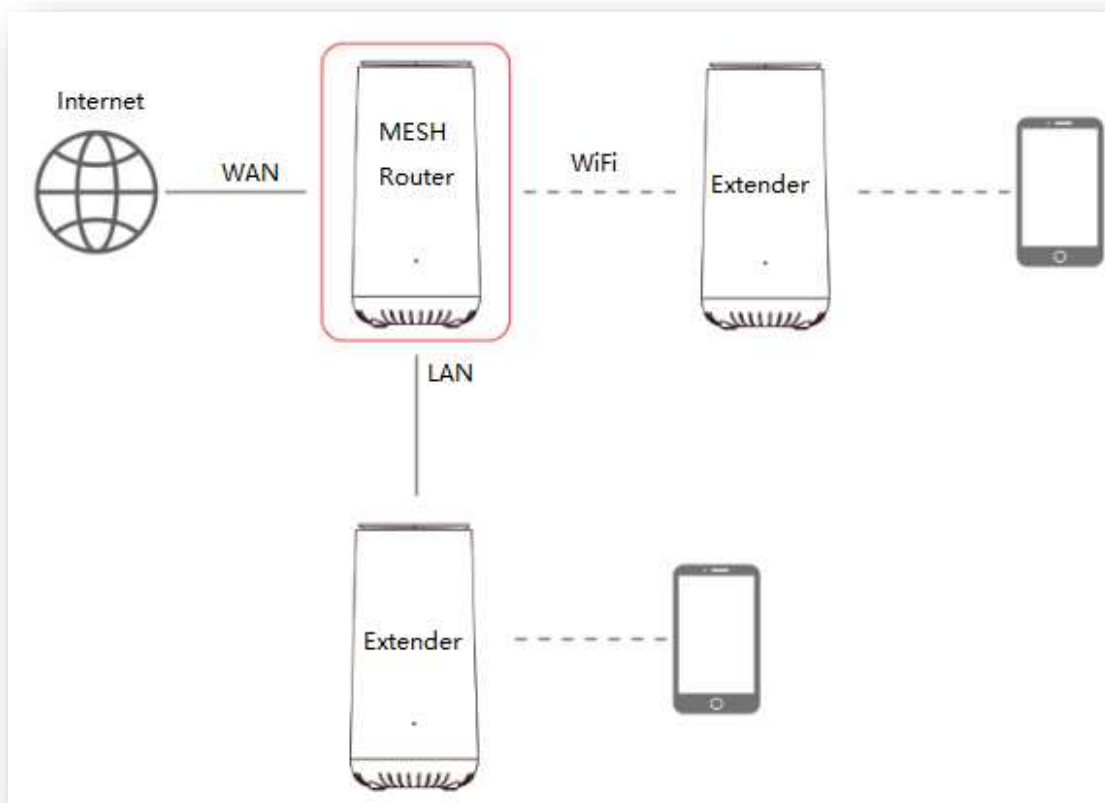


Connect Wi-Fi Clients to AP

Connect Smart Phone to Home SSID, scan Home SSID in Smart Phone and input the Home Room Password, the first device entered Home Room will be assigned as Administrator.

Connect Wi-Fi clients to Home SSID/Common SSID/Guest SSID, input Wi-Fi password, the Wi-Fi client will connect to device and get IP. All the devices will stay in common waiting room and can't get access to internet unless move them to rooms.

Connect Wi-Fi clients to Home SSID/Common SSID/Guest SSID, input Room password, the Wi-Fi client will connect to device and get IP. All the devices will stay in corresponding room waiting room and can't get access to internet unless move them to rooms.

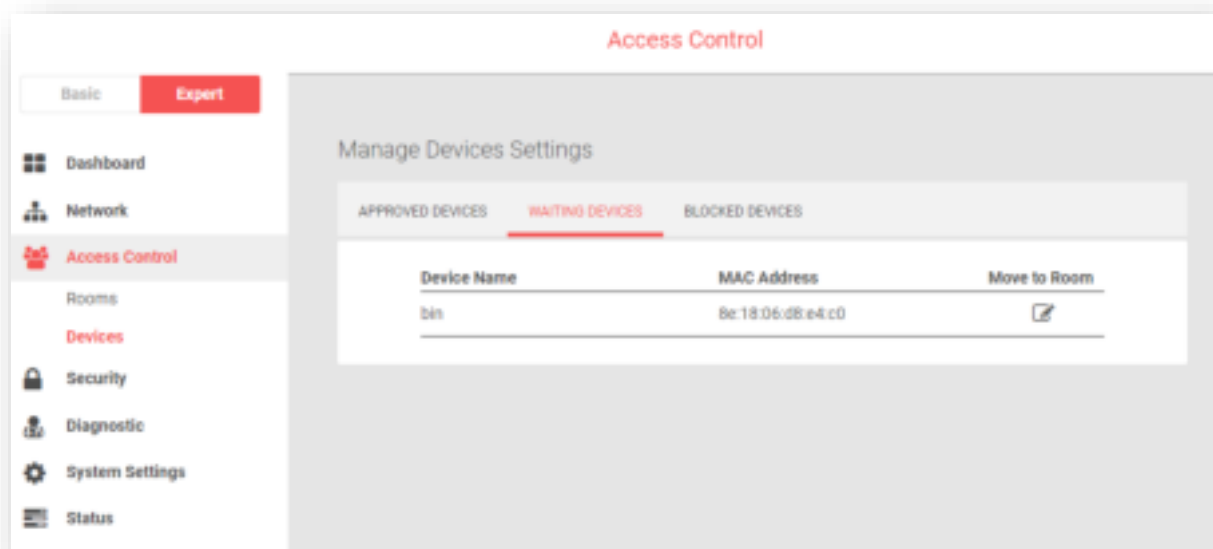

Move Wi-Fi Clients to Rooms

Administrator can move Wi-Fi clients in waiting room to rooms. After approved by administrator to rooms, the Wi-Fi clients will get room subnet IP and can get access to internet.

Move to Room

Device Name

bin

MAC Address

8e:18:06:d8:e4:c0

Available Room

Business

Cancel

Save

Access Control

Basic

Expert

Dashboard

Network

Access Control

Rooms

Devices

Security

Diagnostic

System Settings

Status

Manage Devices Settings

APPROVED DEVICES


PENDING DEVICES

BLOCKED DEVICES

Device Name	MAC Address	Status	Room	SSID	Blocked
bin	8e:18:06:d8:e4:c0	Online	Business	HO-G1299-Common	<input type="checkbox"/>


Block devices

Enable Blocked devices in Approved Devices, the device will be unable access to internet.

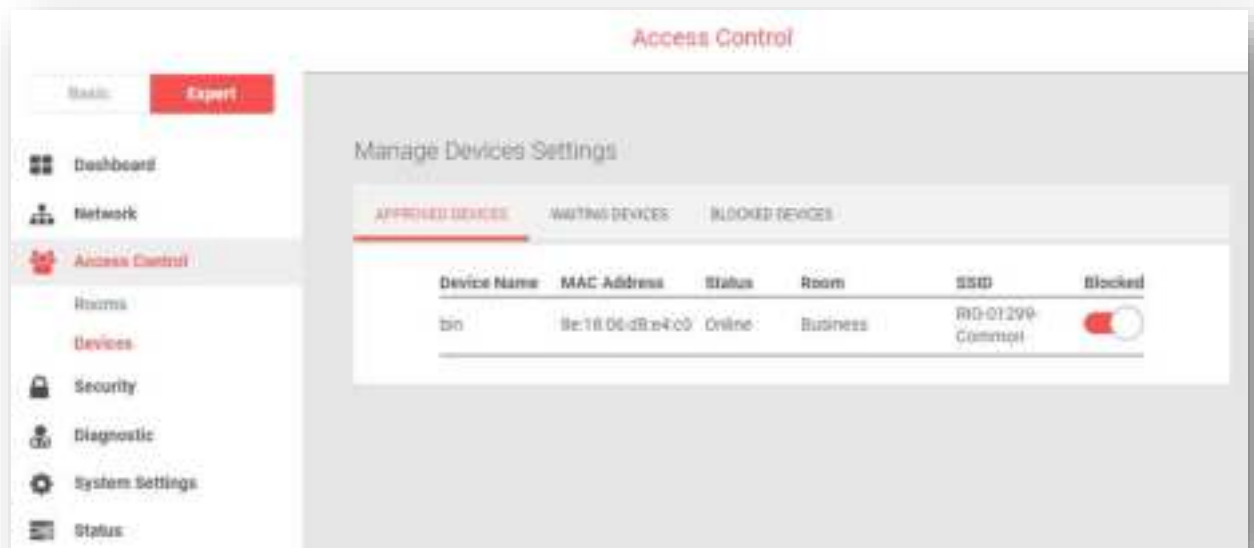


Configure parental control rules

Add parental control rules to rooms, all the devices in this room can only access the website (in specific time) as configured.

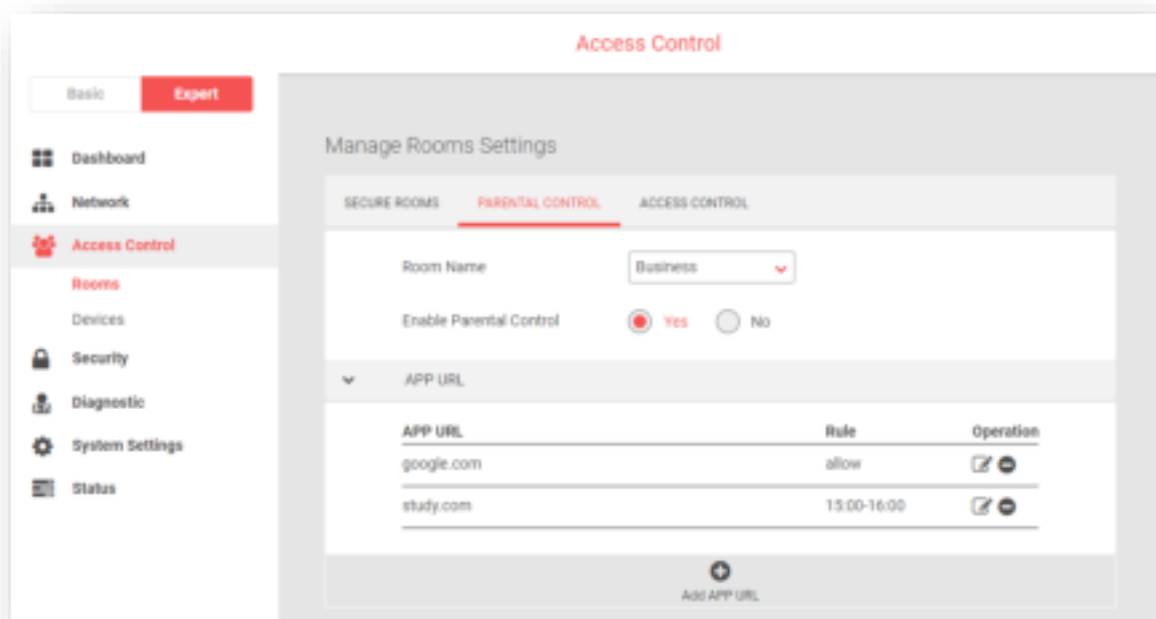

Configure Access Control Rules

Grant room authority to other rooms. For example, grant Business Room access to Printer Room, then all the devices in Business Room can get access to devices in Printer Room. But on the country, the devices in Printer Room can't get access to the devices in Business Room.

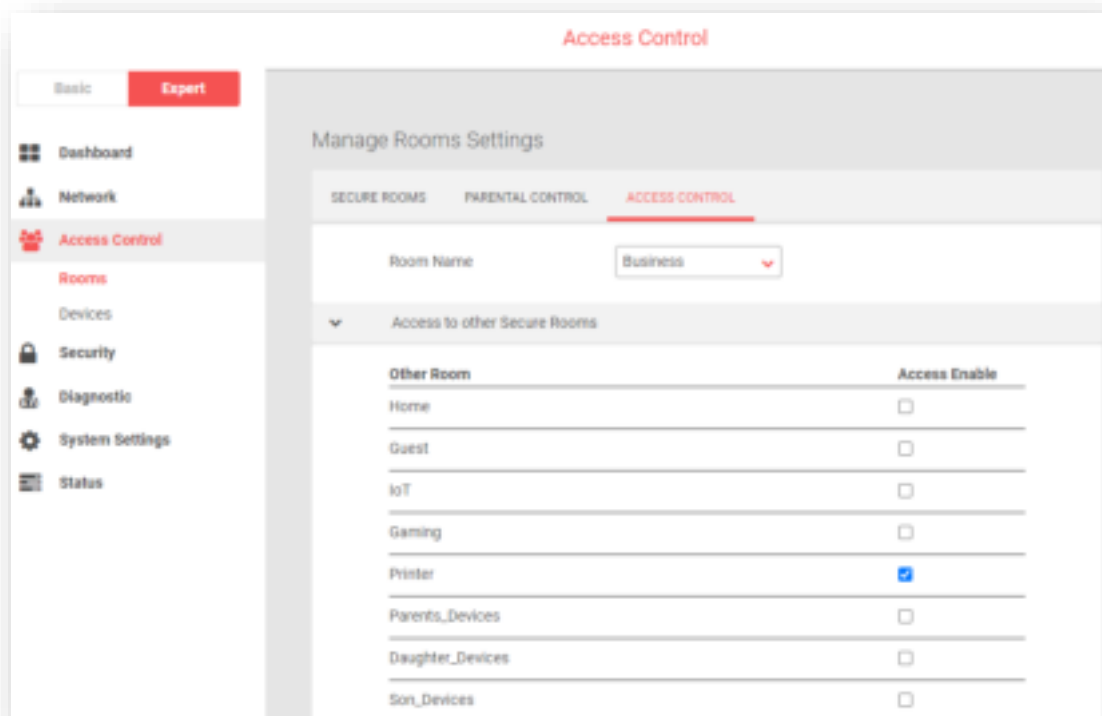

5. Technical Specification

Physical

CPU	<ul style="list-style-type: none">• Qualcomm IPQ8072A Quad ARM Cortex A53 64bit @2.2GHz
DRAM	<ul style="list-style-type: none">• DDR4 DRAM : 1GB
Flash	<ul style="list-style-type: none">• eMMC : 8GB
Power Input	<ul style="list-style-type: none">• DC input: 12V
Dimensions	<ul style="list-style-type: none">• 231 mm (H) x 150 mm (L) x 100mm (W)
Weight	<ul style="list-style-type: none">• 900 g
Interfaces	<ul style="list-style-type: none">• 3x100/1000 Base-T Ethernet, RJ-45
LED Indicator	<ul style="list-style-type: none">• 1x Tri-Color LED Indicator: Power/Status
Buttons	<ul style="list-style-type: none">• ON/OFF, Reset ,WPS
Max. Power Consumption	<ul style="list-style-type: none">• 20 W
Environmental Conditions	<ul style="list-style-type: none">• Operating Temperature: 0°C to 40°C• Operating Humidity: 10% to 95% non-condensing• Storage Temperature: -40°C to 80°C• Storage Humidity: 5% to 95% non-condensing
Antenna type	<ul style="list-style-type: none">• 4 x internal dual-band Wi-Fi antenna
Mounting	<ul style="list-style-type: none">• Desktop

Wi-Fi

Standards	<ul style="list-style-type: none"> • 2.4GHz 802.11b/g/n/ax • 5GHz 802.11a/n/ac/ax
Supported Rates	<ul style="list-style-type: none"> • 802.11ax: 4 to 2400 Mbps • 802.11ac: 6.5 to 1732 Mbps • 802.11n: 6.5 to 600 Mbps • 802.11a: 6 to 54 Mbps • 802.11g: 6 to 54 Mbps • 802.11b: 1 to 11 Mbps
Radio Chains	<ul style="list-style-type: none"> • 4 x 4:4
Spatial Streams	<ul style="list-style-type: none"> • 4 for both SU-MIMO & MU-MIMO
Antenna	<ul style="list-style-type: none"> • Up to 5.0 dBi
Max Phy Rate	<ul style="list-style-type: none"> • 2.4GHz: 1148 Mbps • 5GHz : 2400 Mbps
Maximum transmit power	<ul style="list-style-type: none"> • 2.4 GHz: Up to 27dBm (combined power) • 5 GHz: Up to 27dBm (combined power)
Minimum receiver sensitivity	<ul style="list-style-type: none"> • 2.4GHz HT20/VHT20/HE20: -93dBm @MCS0 • 2.4GHz HT40/VHT40/HE40: -94dBm @MCS0 • 5GHz VHT20/HE20: -95dBm @ MCS0 • 5GHz VHT40/HE40: -93dBm @ MCS0 • 5GHz VHT80/HE80 : -89dBm @ MCS0
Max Number of Clients	<ul style="list-style-type: none"> • Up to 128 per radio
SSIDs	<ul style="list-style-type: none"> • Up to 4 per radio

6. FCC Statement

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For product available in the USA/Canada market, only channel 1~11 can be operated. Selection of other channels is not possible.

This device operates in the 2.4GHz and 5GHz frequency and is restricted for indoor use.

The device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 21 cm between the radiator & your body.

ASKEY INTERNATIONAL CORPORATION (AIC)

4017 Clipper Court, Fremont CA 94538, USA TEL:+1-510-415-2767