

TCG220-E27

USER MANUAL

SAFETY INSTRUCTIONS AND REGULATORY NOTICES	4
Chapter 1: Connections and Setup.....	9
Cable Modem Overview	9
Front Panel	9
Rear Panel	11
Top Side Panel for WPS	12
Relationship among the Devices	13
What the Modem Does	13
What the Modem Needs to Do Its Job.....	13
Contact Your Local Cable Company	14
Connecting the Wireless Voice Gateway to a Single Computer	14
Attaching the Cable TV Wire to the Wireless Voice Gateway	15
Installation procedure for connecting to the Ethernet interface	16
Chapter 2: WEB Configuration	17
Accessing the Web Configuration	17
Overview Web Page Group.....	19
Overview	19
Internet Web Page Group	20
Advanced	20
Port Mapping	22
Parental Control.....	23
Firewall	24
Firewal event log	25
DMZ Host	26
Dynamic DNS.....	27
UPnP	28
MAC base Passthrough	29
Bridge Mode	30
Diagnostic	31
eRouter Reset	32




Wi-Fi Web Page Group	33
General	33
Schedule	36
WPS	37
MAC Filter.....	38
Guest Network	39
Wi-Fi Clients.....	42
Reset	43
Wi-Fi insight.....	44
Settings Web Page Group	45
Language	45
Password.....	46
Initial Scan	47
Configuration	48
LAN	49
Remote Access	50
Status Web Page Group.....	51
Status	51
Voice Status.....	52
Upstream	53
Downstream	54
Event log	55
Chapter 3: Additional Information.....	56
Frequently Asked Questions	56
General Troubleshooting	57
Service Information	58
Federal Communication Commission Interference Statement.....	59

SAFETY INSTRUCTIONS AND REGULATORY NOTICES




Product Safety Notice

Before installing or using the product, read these instructions carefully. Be sure to comply strictly precautions.

● Explanation of risk levels

 DANGER	This indication is given where there is an immediate danger of death or serious injury if the person in charge or any third party mishandles the machine or does not avoid the dangerous situation when operating or maintaining the machine.
 WARNING	This indication is given where there is a potentiality for death or serious injury if the person in charge or any third party mishandles the machine or does not avoid the dangerous situation when operating or maintaining the machine.
 CAUTION	This indication is given where there is a danger of medium to minor injury if the person in charge or any third party mishandles the machine or does not avoid the dangerous situation when operating or maintaining the machine.

● Explanation of pictorial warning indications and warning labels

 Prohibited	It is used to prohibit its conduct in handling products. Specific prohibited contents are indicated by pictures and sentences in or near the figure symbol.
 Caution	It is used to call attention to ignition, electric shock, high temperature, etc. in the handling of products. Specific notes content is indicated by a picture or sentence in or near the figure symbol.
 Instruction	Used to force actions based on instructions in the handling of products. Specific instruction content is indicated by a picture or sentence in or near the figure symbol.

● LIMITATIONS OF LIABILITY

This equipment has been designed for domestic use inside a building. In some environments or circumstances, the use of wireless devices may be prohibited by the owner of the building or responsible representatives of the organization. If in doubt about the policy applying to the use of wireless devices in an organization where a specific environment (e.g. airports), you should ask for permission to use the device before turn it on. ASKEY assumes no liability for non-compliance with regulations on the installation site, and radio interference created vis-à-vis third parties and due to non-compliance with national regulations for this application.



Instruction

Do not overload wall outlet or extension cords as this may increase the risk of electric shock or fire. If the power cord is frayed, replace it with a new one.



Instruction

Do not attempt to connect with any computer accessory or electronic product without instructions from qualified service personnel. This may result in risk of electronic shock or fire.



Instruction

Proper ventilation is necessary to prevent the product overheating. Do not block or cover the slots and openings on the product, which are intended for ventilation and proper operation.



Unplug the
power plug

When the product is expected to be not in use for a period of time, unplug the power cord of the product to prevent it from the damage of storm or sudden increases in rating.



Unplug the

Accidental penetrations of small metal objects (such as pins, paper clips, etc.) disconnect the equipment from the mains as soon as possible (risk of electric shock) and contact your Customer Service to find out how to proceed. Do not reconnect the product as a foreign object has not been eliminated. Unplug the product immediately if you notice it exudes a smell

power plug of burning or smoke. You should never open the unit yourself because you could be electrocuted.



Prohibited

Do not place the product near any source of heat or expose it to direct sunlight.



Water wet prohibition

Do not expose the product to moisture. Never spill any liquid on the product.



Instruction

Avoid connecting or using this product during a lightning storm. Disturbances transmitted through the grid and / or telephone can cause electric shock in the product and people.

CAUTION



Instruction

Use only power adapter supplied with the product. This appliance is designed to operate in the rated voltage 100~240 VAC.



Instruction

Do not place this product on unstable stand or table.



Instruction

This product is designed for stationary use in an office or a room in the home for a maximum ambient temperature of 45 ° C (113 ° F).



Instruction

To allow the disconnection of the device in case of problems, make sure the base of the outlet you plug the power cord is easily accessible and is located as close as possible to the equipment.



Instruction

Leave 7cm to 10cm around the appliance to ensure that proper ventilation gets to it.



Be sure to connect the ground wire

The screen of the coaxial cable is intended to be connected to earth in the building installation.



Disassembly prohibited

Do not attempt to disassemble or open covers of this unit by yourself. Nor should you attempt to service the product by yourself, which may void the user's authority to operate it. Contact qualified service personnel under the following conditions:

1. If the power cord or plug is damaged or frayed.
2. If liquid has been spilled into the product.
3. If the product has been exposed to rain or water.
4. If the product does not operate normally when the operating instructions are followed.
5. If the product has been dropped or the cabinet has been damaged.
6. If the product exhibits a distinct change in performance.
7. If a cable is damaged or frayed provided.
8. If the unit is dropped or damaged in any way.
9. If there is a noticeable signs of overheating



Unplug the power plug

Power off and unplug this product from the wall outlet when it is not in use or before cleaning. Pay attention to the temperature of the power adapter. The temperature might be high.



Instruction

Do not store the Cable Modem product in excessively hot, cold or damp conditions. Operation Environmental:

- Operation Temperature: 0°C ~ 45°C
- Storage Temperature: -20°C ~ +70°C



To clean the appliance, use a dry, clean soft cloth with no cleaning solvent or abrasive products. Clean the ventilation openings regularly.

Instruction



Under normal use condition the user shall keep at least 20cm from the Cable Modem product.

Instruction

CHAPTER 1: CONNECTIONS AND SETUP

Cable Modem Overview

Front Panel

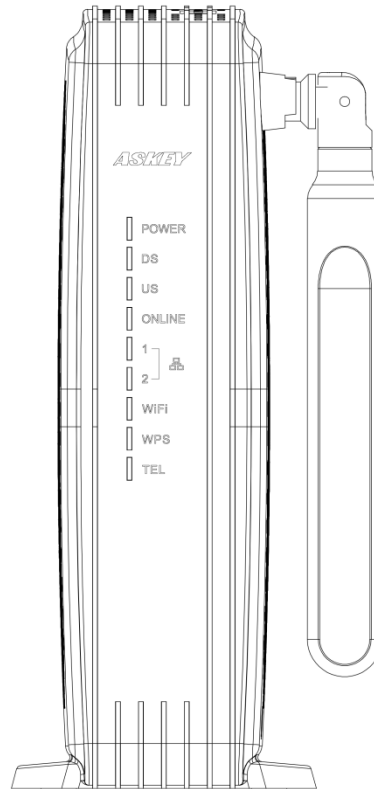


Fig.1-1 Front Panel

The following illustration shows the front panel of the TCG220-E27:

POWER	Indicates the power status.
DS	Indicates the status of data reception by the cable modem from the network (downstream traffic)
US	Indicates the status of data transmission by the cable modem to the network (upstream traffic)
ONLINE	Displays the status of your cable connection. The light is off when no cable connection is detected and fully lit when the modem has established a connection with the network and data can be transferred
LAN1 / 2	Indicates the state of Ethernet ports
WI-FI	Indicates the traffic on the wireless network
WPS	Indicates the status of the WPS.
TEL	Indicates the status of the telephone.

LED from top to bottom.

LED	Status	Description
-----	--------	-------------

POWER	ON	The device is on.
	OFF	The device boot fail or no power.
DS	Flash	Scanning Downstream and trying to link.
	ON	Downstream link OK.
	OFF	Downstream is not linked.
US	Flash	Scanning Upstream and trying to link.
	ON	Upstream link OK.
	OFF	Upstream is not linked.
ONLINE	ON	The device is ready for use. Now you can link to the internet.
	OFF	The device is not link to the internet yet or not registration.
	FLASH	The device is in registration process.
LAN	ON	LAN port is connected to the PC.
	OFF	LAN port is not connected to the PC.
	FLASH	Traffic on the LAN is working.
WI-FI	ON	Wi-Fi is enabled.
	OFF	Wi-Fi is disabled.
	FLASH	Wi-Fi traffic is working.
WPS	Flash	WPS process is running or connects fail.
	ON	WPS connect success.
	OFF	WPS is not running.
TEL	ON	Phone is ready registration for use.
	OFF	Phone is not able to use.
	FLASH	Phone interface is in registration process.

Table1-1 LED behavior

Rear Panel

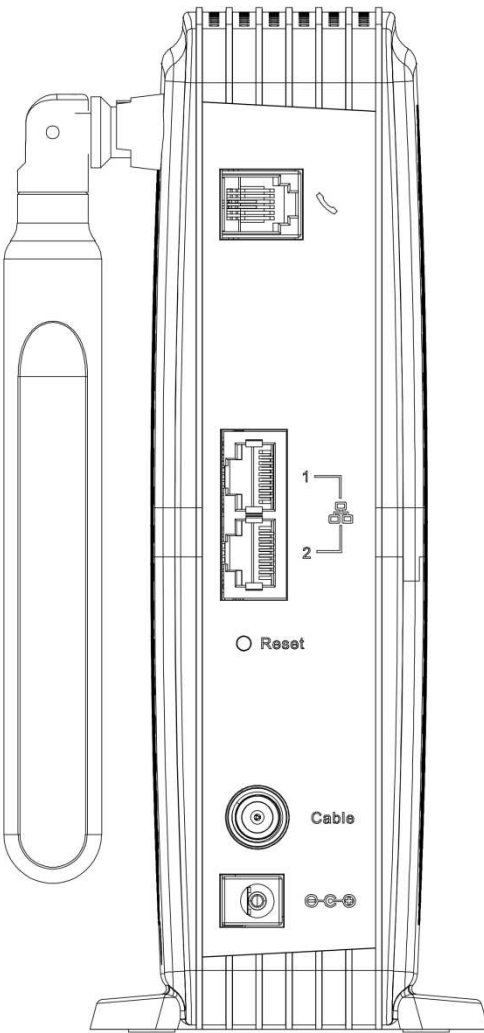


Fig.1-2 Rear Panel

Slot	Description
TEL	Telephony RJ-11 connector
LAN1 / 2	Ethernet 10/100/1000 Base-T RJ-45 connector
Reset	Reset/Reboot this Cable modem
Cable	F-Connector
12VDC	12V DC-IN Power connector.

Table1-2 Rear Panel description

Top Side Panel for WPS

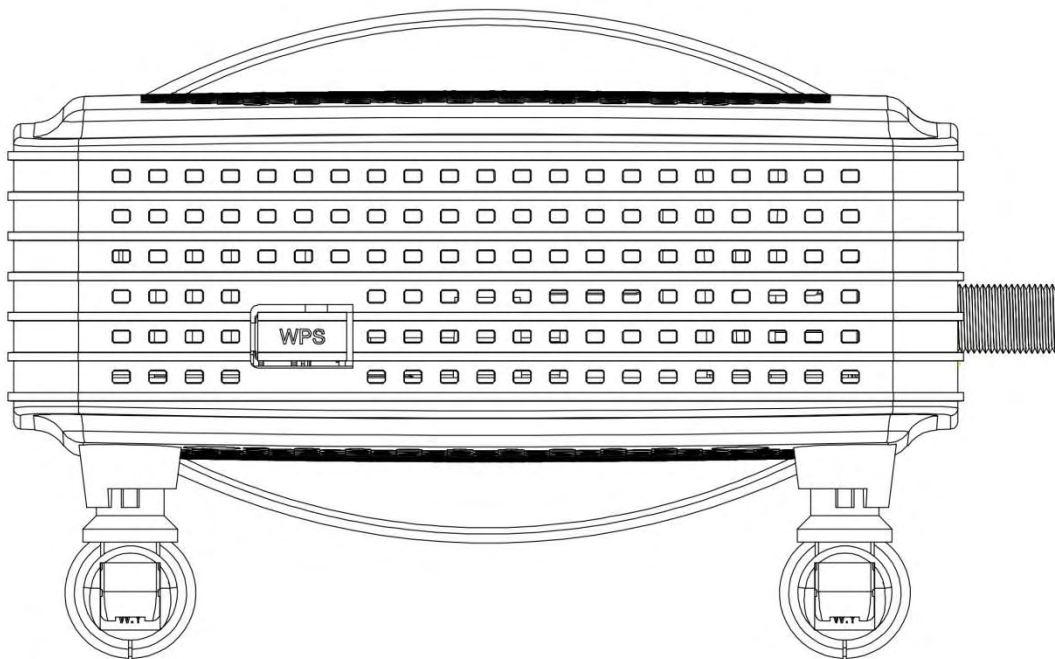



Fig.1-3 Top Side Panel



The  button is on the Top Side panel of TCG220-E27, you can long press button (more than 5 sec) enables scanning for available WPS client device.

Relationship among the Devices

This illustration shows a cable company that offers DOCSIS/Euro-DOCSIS and PacketCable/Euro-PacketCable compliant voice/data services.

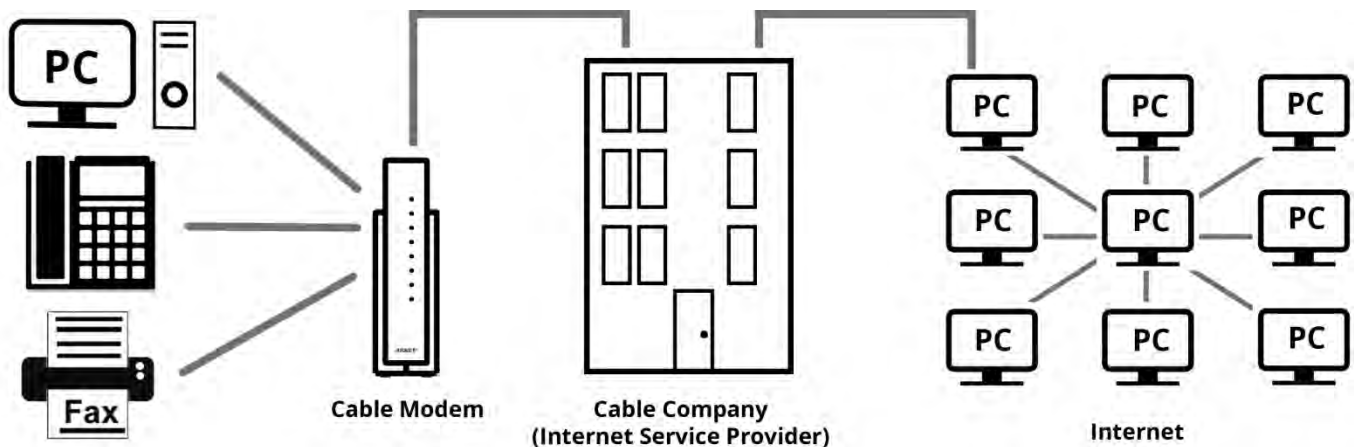


Fig.1-4 Connection overview

What the Modem Does

The Wireless Voice Gateway provides high-speed Internet access as well as cost-effective, toll-quality telephone voice and fax/modem services over residential, commercial, and education subscribers on public and private networks via an existing CATV infrastructure. It can inter-operate with the PacketCable compliant head-end equipment and provide the IP-based voice communications. The IP traffic can transfer between the Wireless Voice Gateway and DOCSIS/Euro-DOCSIS compliant head-end equipment. The data security secures upstream and downstream communications.

What the Modem Needs to Do Its Job

- **The Right Cable Company:** Make sure your local cable company provides data services that use cable TV industry-standard DOCSIS/Euro-DOCSIS compliant technology.
- **The Internet/Telephony Service Provider (ISP/TSP):** Your cable company provides you access to an Internet Service Provider (ISP) and Telephony Service Provider (TSP). The ISP is your gateway to the Internet and provides you with a pipeline to access Internet content on the World Wide Web (WWW). The TSP provides you with telephony access to other modems or other telephony services over the Public Switched Telephone Network (PSTN).

Check with your cable company to make sure you have everything you need to begin; they'll know if you need to install special software or re-configure your computer to make your cable internet service work for you.

Contact Your Local Cable Company

You will need to contact your cable company to establish an Internet account before you can use your gateway. You should have the following information ready (which you will find on the sticker on the gateway):

- The serial number
- The model number
- The Cable Modem (CM) Media Access Control (MAC) address
- The Terminal Adapter (EMTA) MAC address
- Security information: Service Set Identifier (SSID), Encryption key / passphrase (WPA2/PSK by default), channel number. Default values are indicated underneath the modem on the sticker.

Please check the following with the cable company

- The cable service to your home supports DOCSIS/Euro-DOCSIS compliant two-way modem access.
- Your internet account has been set up. (The Media Terminal Adapter will provide data service if the cable account is set up but no telephony service is available.)
- You have a cable outlet near your PC and it is ready for Cable Modem service.

Note: It is important to supply power to the modem at all times. Keeping your modem plugged in will keep it connected to the Internet. This means that it will always be ready whenever you need.

Important Information

Your cable company should always be consulted before installing a new cable outlet. Do not attempt any rewiring without contacting your cable company first.

Please verify the following on the Wireless Voice Gateway

The Power LED should be lighted when plug-in the power supply.

Connecting the Wireless Voice Gateway to a Single Computer

This section of the manual explains how to connect your Wireless Voice Gateway to the Ethernet port on your computer and install the necessary software. Please refer to Figure 1-6 to help you connect your Digital Cable Modem for the best possible connection.

Attaching the Cable TV Wire to the Wireless Voice Gateway

1. Locate the Cable TV wire. You may find it one of three ways:
 - a. Connected directly to a TV, a Cable TV converter box, or VCR. The line will be connected to the jack, which should be labeled either IN, CABLE IN, CATV, CATV IN, etc.
 - b. Connected to a wall-mounted cable outlet.
 - c. Coming out from under a baseboard heater or other location. See Figure 1-5 for the wiring example.

Notes:For optimum performance, be sure to connect your Wireless Voice Gateway to the first point the cable enters your home. The splitter must be rated for at least 1GHz.

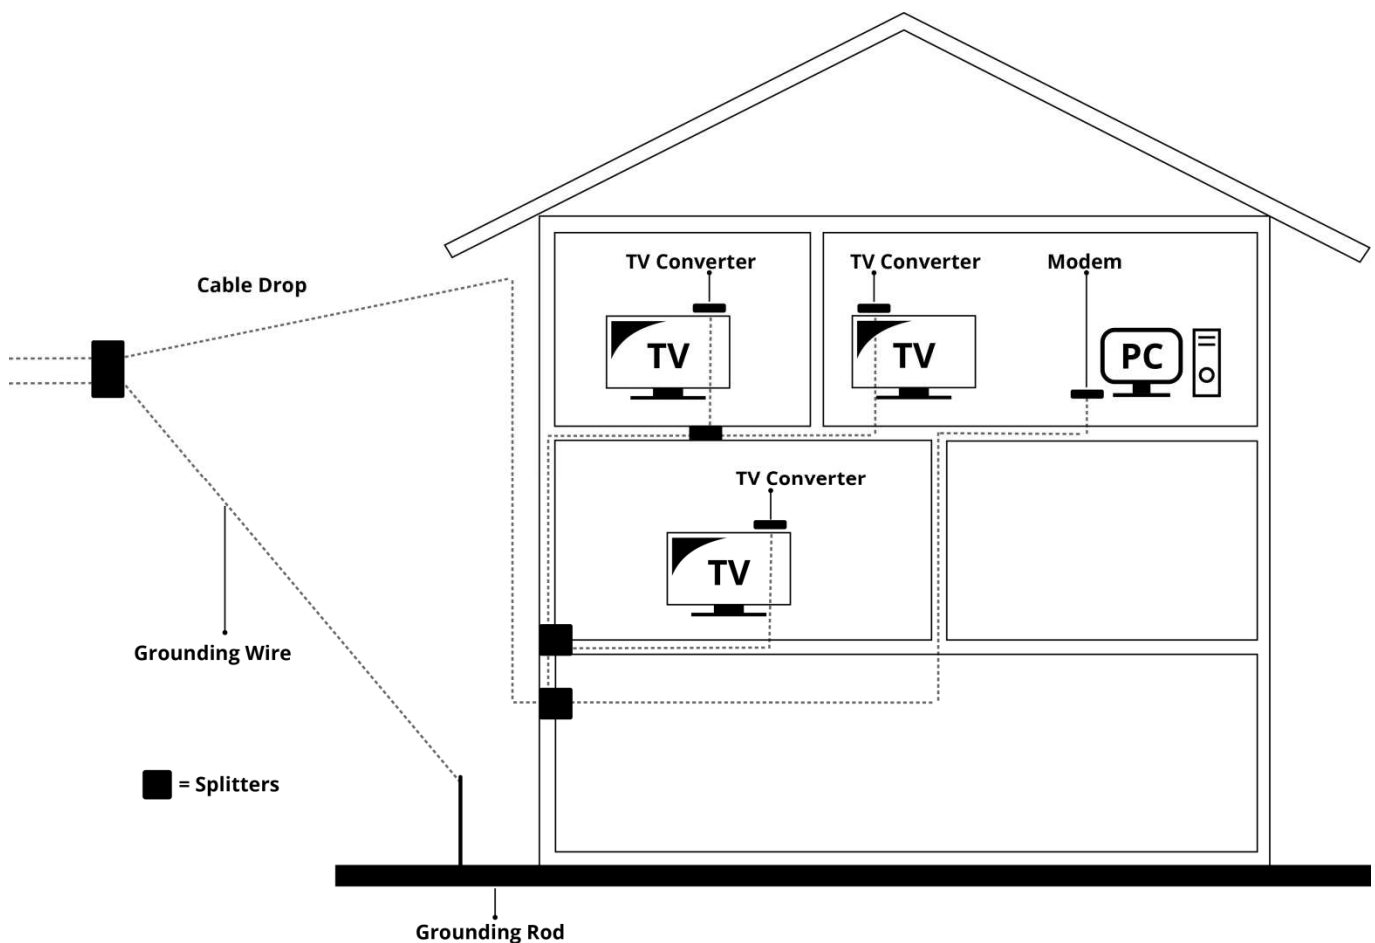


Fig.1-5Basic Home Wiring

Installation procedure for connecting to the Ethernet interface

Follow these steps for proper installation.(Please refer to Fig. 1-6)

Plug the coaxial cable to the cable wall outlet and the other end to the modem's cable connector.

Note: To ensure a fast registration of the modem, the coaxial cable must be connected to the modem before it is powered on.

Plug the power adapter into the socket of the cable modem and two-pin plug in the AC outlet to power on the modem.

Note: Only use the power adapter that comes with the modem. Using another power adapter can cause damage to the product, and will void the warranty.

Connect an Ethernet cable (direct connection, see below) to the Ethernet port at the back of the computer, and the other end to the ETHERNET port on the rear panel of the cable modem. The modem will seek the appropriate cable signal on the cable television network and go through the initial registration process on its own. The modem is ready for data transfer after the green LED "Online" is lit continuously.

Note: the button "Reset" at the back of the modem is used primarily for maintenance.

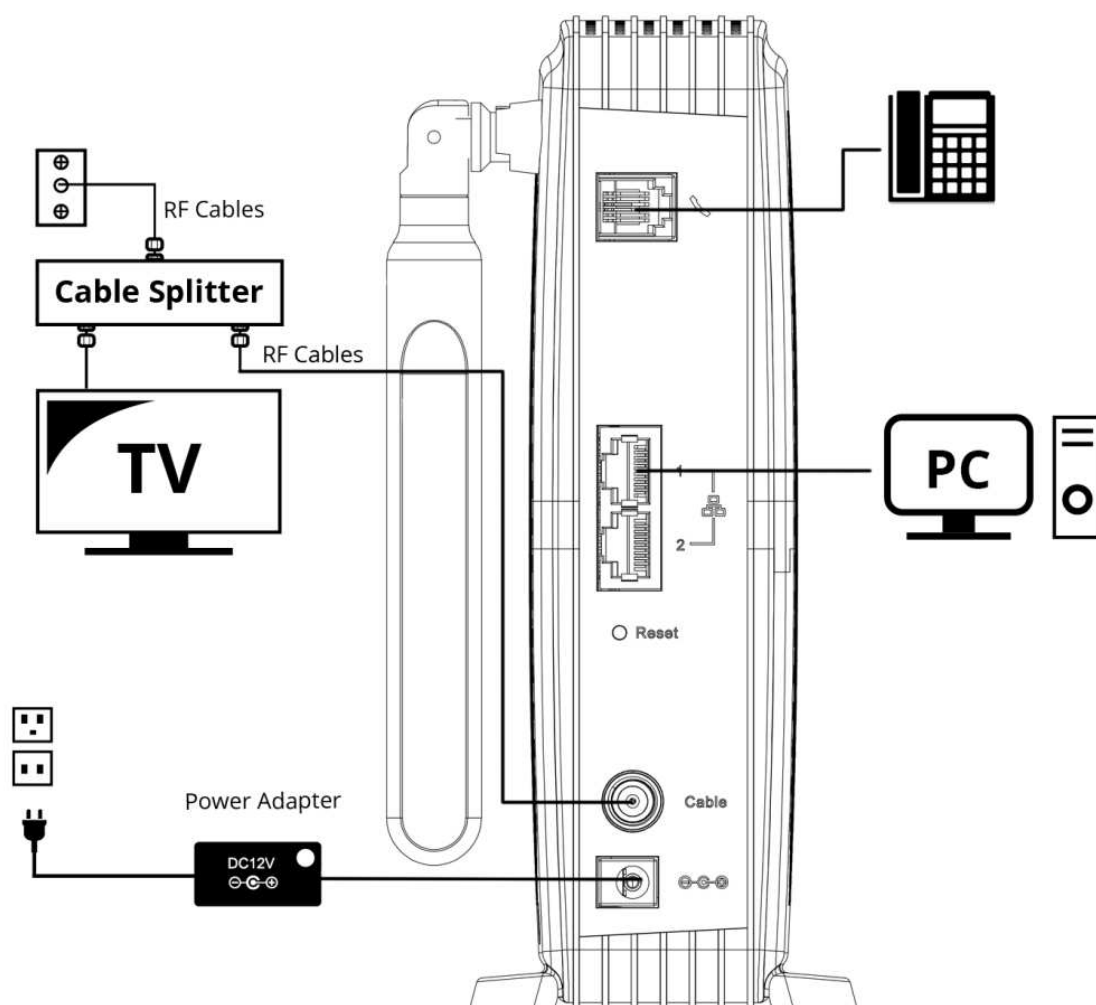


Fig.1-6 Connect to the Modem

CHAPTER 2: WEB CONFIGURATION

To make sure that you can access the Internet successfully, please check the following first.

1. Make sure the connection (through Ethernet) between the Wireless Voice Gateway and your computer is OK.
2. Make sure the TCP/IP protocol is set properly.
3. Subscribe to a Cable Company.

Accessing the Web Configuration

The **Wireless Voice Gateway** offers local management capability through a built-in HTTP server and a number of diagnostic and configuration web pages. You can configure the settings on the web page and apply them to the device.

Once your host PC is properly configured; please proceed as follows:

1. Start your web browser and type the private IP address of the Wireless Voice Gateway on the URL field: **192.168.100.1 or 192.168.1.1**
2. After connecting to the device, you will be prompted to enter username and password. By default, the username is "**admin**" and password is "**Cl@r0**".

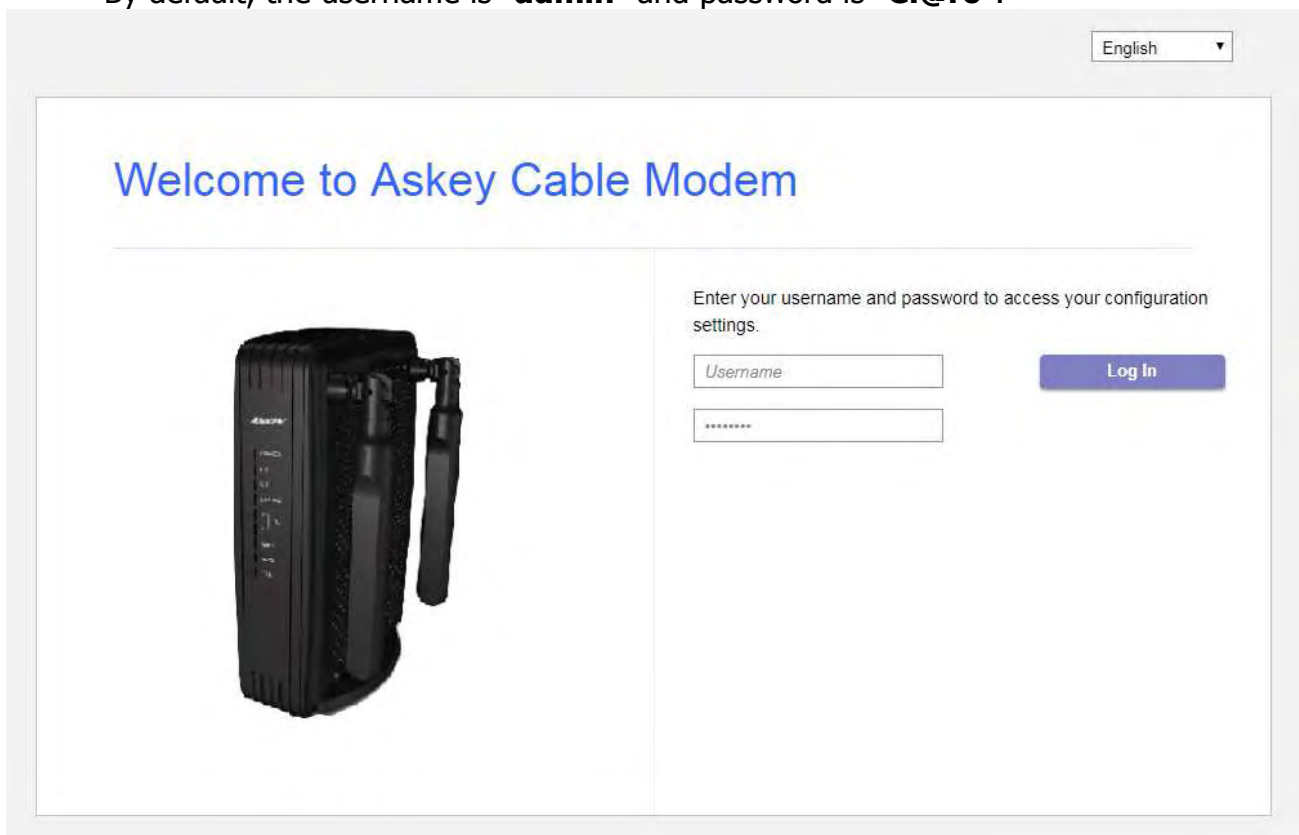


Fig.2-1 Login dialogue

Note: If forget your username and password, you may Press "Reset" button on the rear panel more than 5seconds to restore the username and password to default.

If you login successfully, the main page will appear. "

You can change the display language to "English" or "Español" on the top of the page.

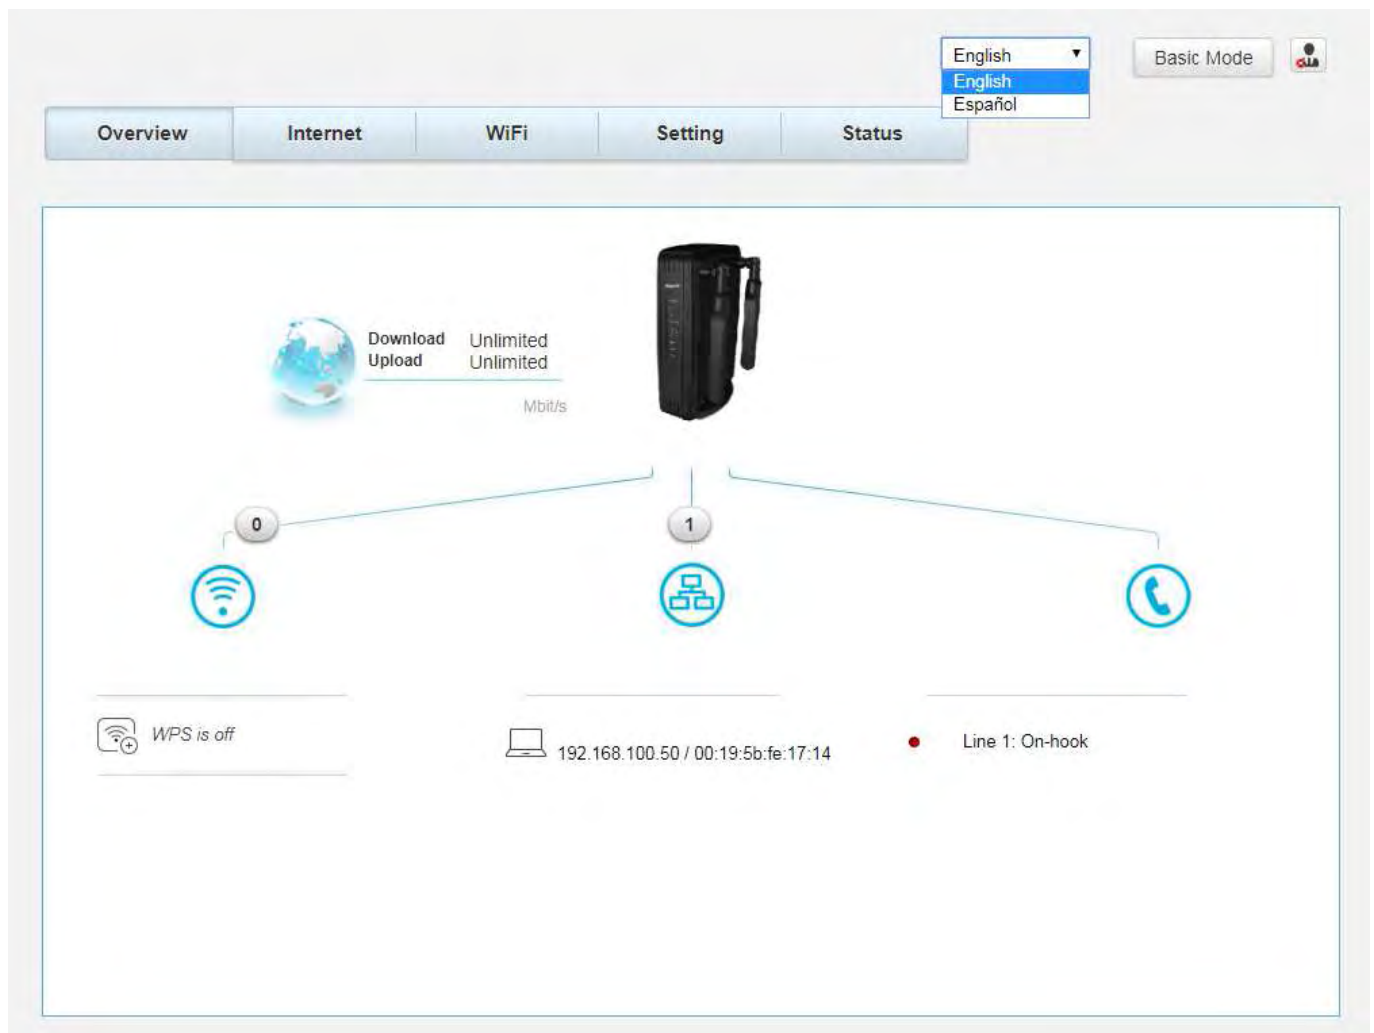


Fig. 2-2 Switch Language

Overview Web Page Group

Overview

The Overview page is the start page. You could switch to other pages. (e.g., Internet, Wi-Fi, Setting, Status)

This page display Wi-Fi, ETHERNET and VoIP connection status. You could click the icons

 ,  and  will lead to Wi-Fi, LAN and VoIP status pages.

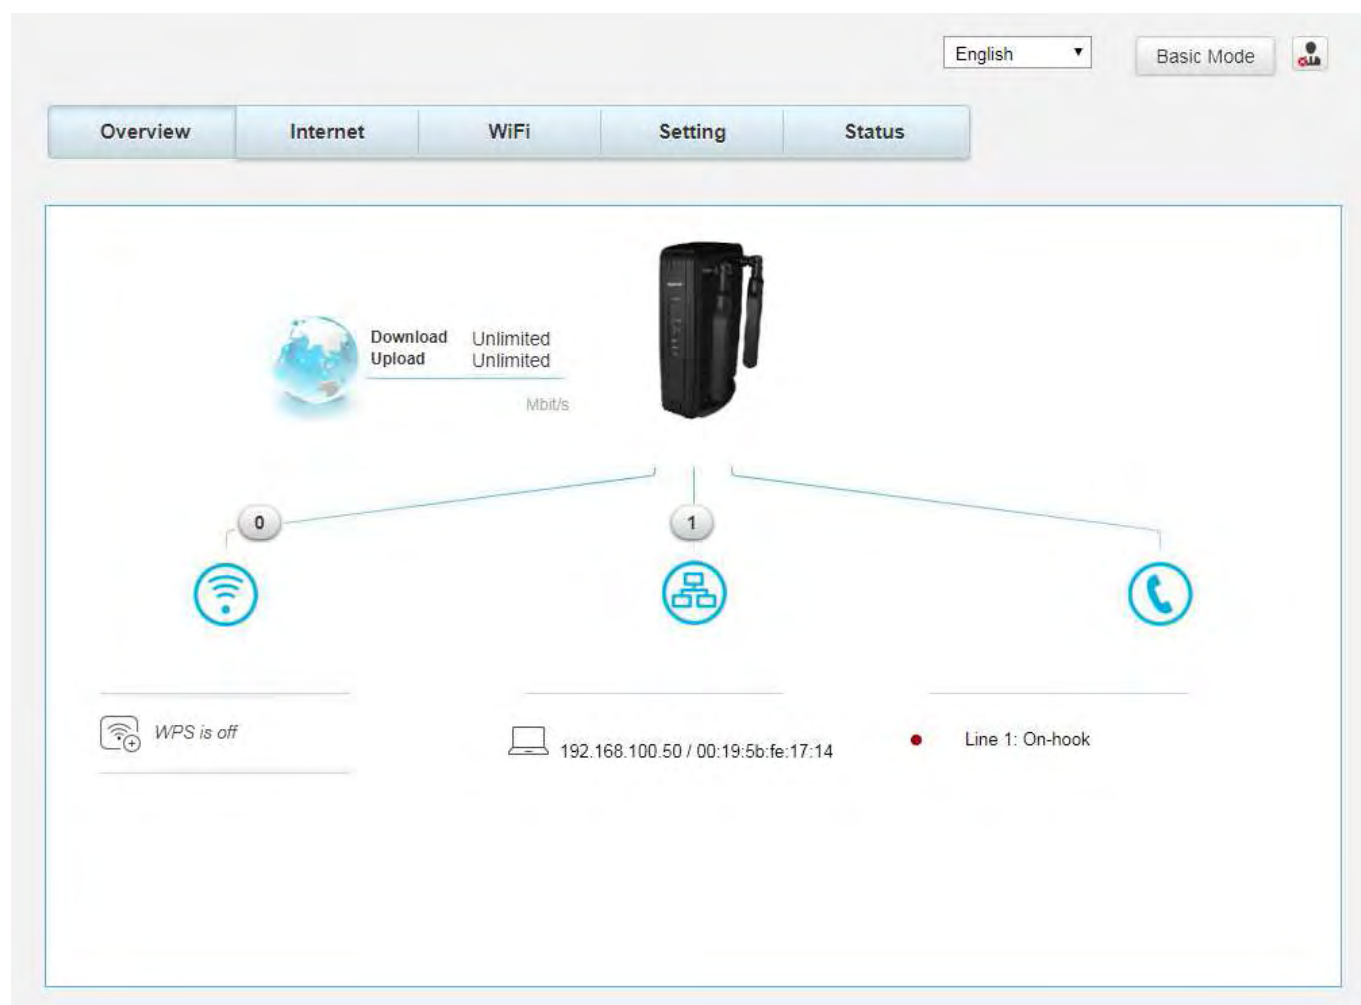


Fig.2-3 Overview

Internet Web Page Group

Advanced

This page allows you to configuration of advanced features of the Wireless Voice Gateway.

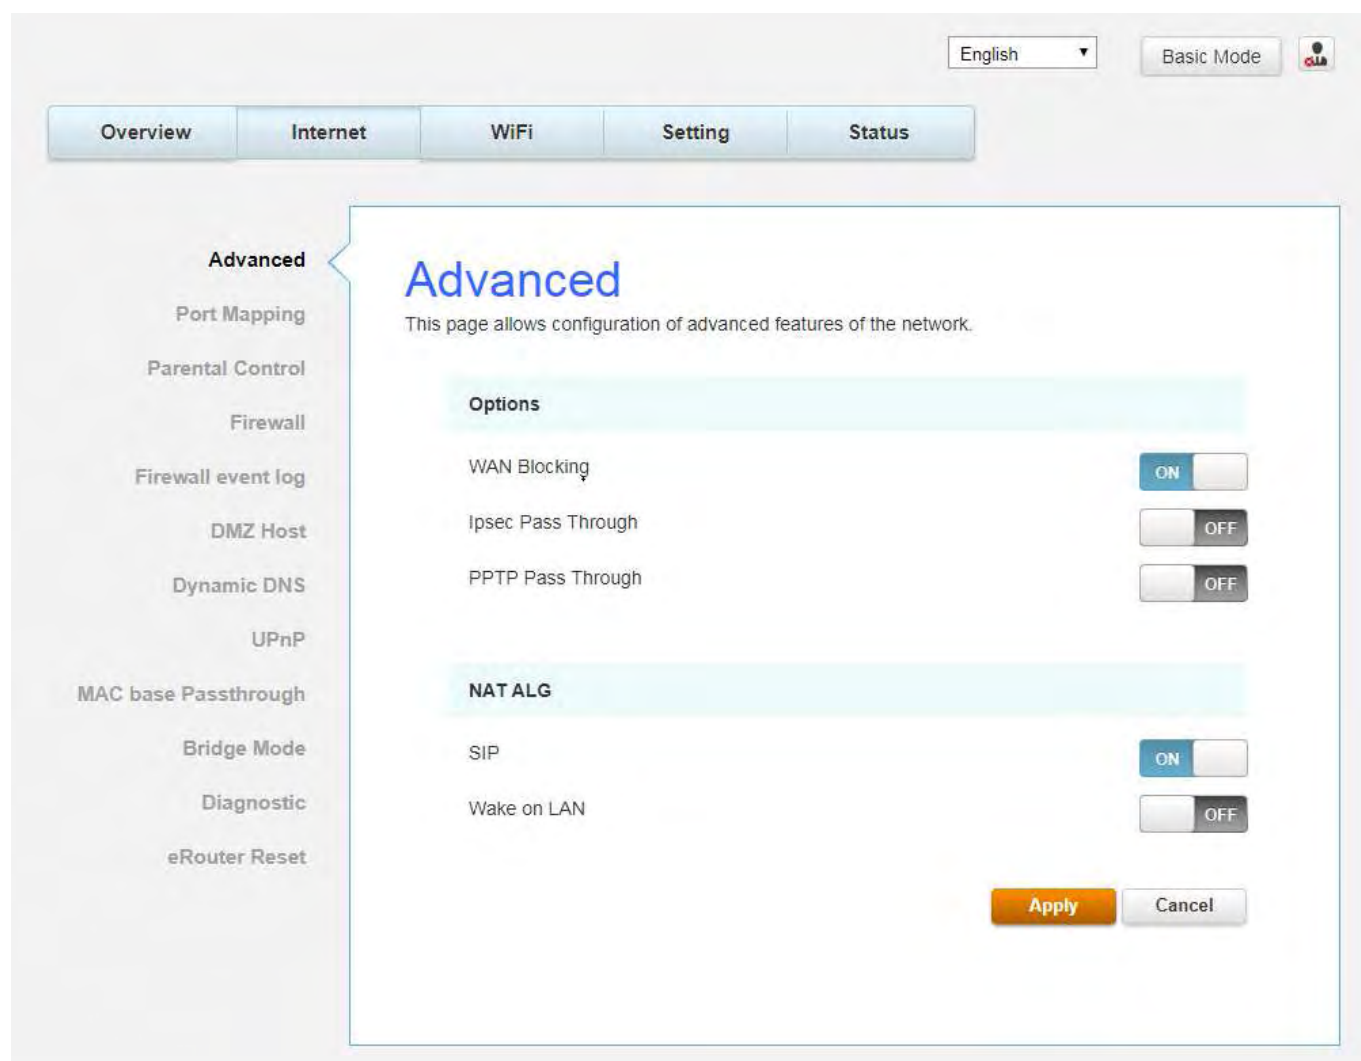


Fig.2-4 Internet\Advanced

- **WAN Blocking** prevents others on the WAN side from being able to ping your gateway. With WAN Blocking enabled, your gateway will not respond to pings it receives, effectively “hiding” your gateway.
- **Ipsec PassThrough** enables IpSec type packets to pass WAN ⇔ LAN. IpSec (IP Security) is a security mechanism used in Virtual Private Networks (VPNs).
- **PPTP PassThrough** enables PPTP type packets to pass WAN ⇔ LAN. PPTP (Point to Point Tunneling Protocol) is another mechanism sometimes used in VPNs.

- **NAT ALG**enable NAT ALG (application layer gateways) allows customized NAT traversal filters to be plugged into the gateway to support address and port translation for certain application layer "control/data" protocols such as SIP , Wake on LAN file transfer in IM applications etc. In order for these protocols to work through NAT or a firewall, either the application has to know about an address/port number combination that allows incoming packets, or the NAT has to monitor the control traffic and open up port mappings (firewall pinhole) dynamically as required. Legitimate application data can thus be passed through the security checks of the firewall or NAT that would have otherwise restricted the traffic for not meeting its limited filter criteria.

Port Mapping

This page allows configuration of Port Forwarding and Port Triggering.

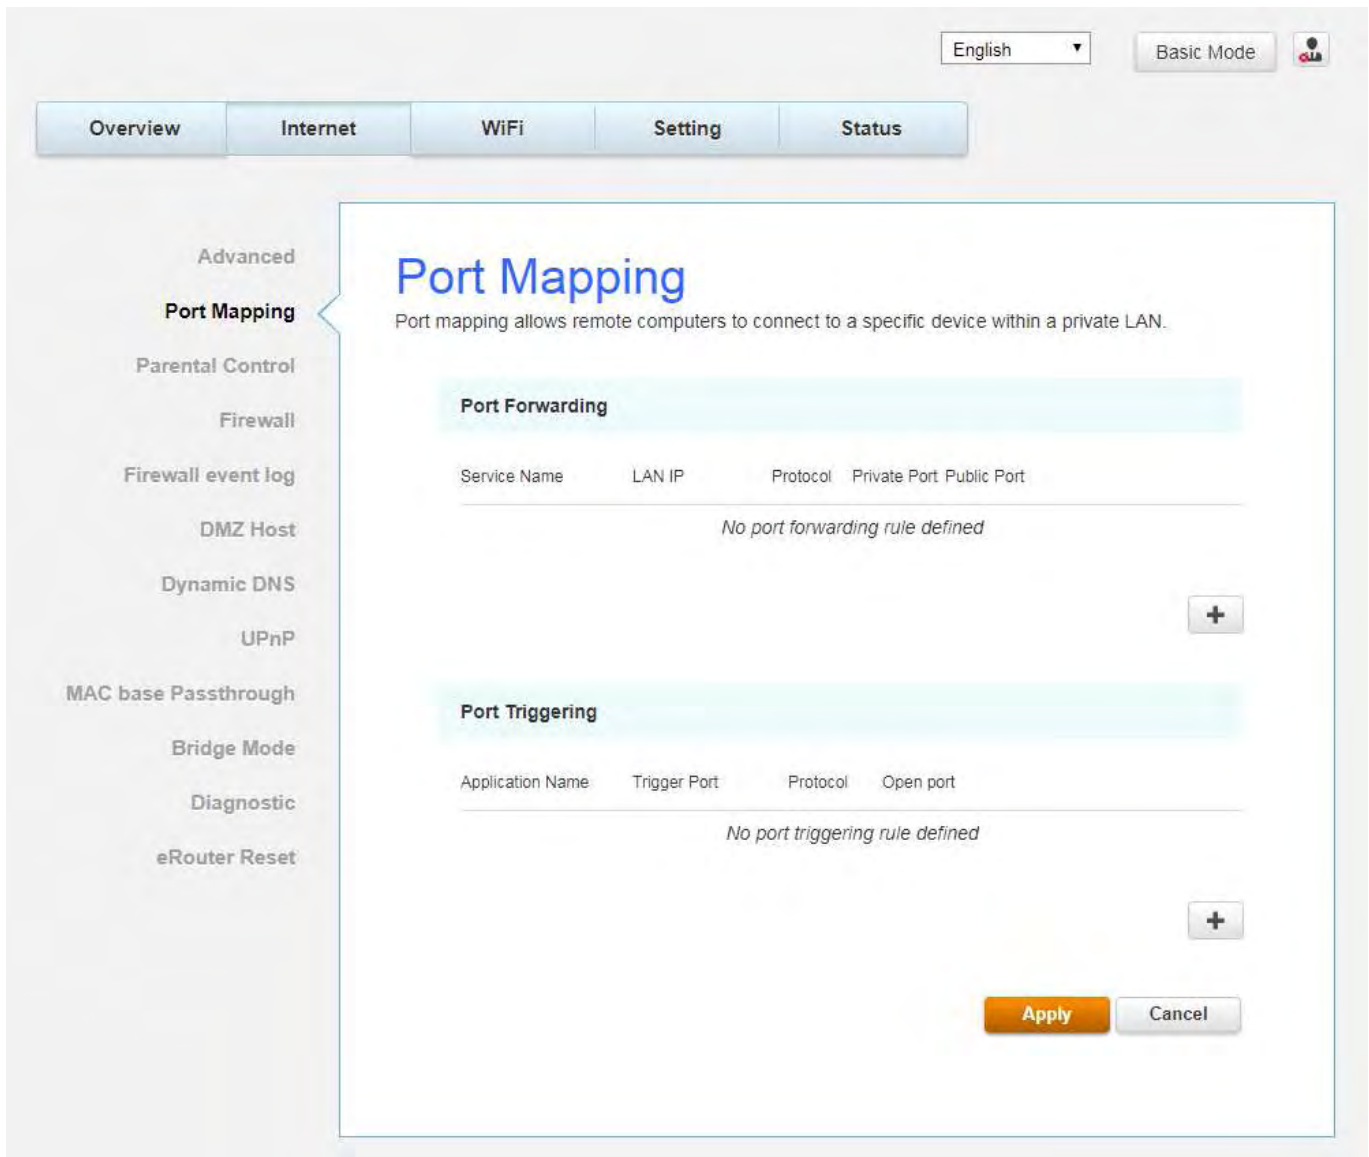


Fig.2-5 Internet\Port Mapping

- **Port Forwarding**For LAN ⇔ WAN communications, the gateway normally only allows you to originate an IP connection with a PC on the WAN; it will ignore attempts of the WAN PC to originate a connection onto your PC. This protects you from malicious attacks from outsiders. However, sometimes you may wish for anyone outside to be able to originate a connection to a particular PC on your LAN if the destination port (application) matches one you specify.
- **Port Triggering**Some Internet activities, such as interactive gaming, require that a PC on the WAN side of your gateway be able to originate connections during the game with your game playing PC on the LAN side. Port triggering is an elegant mechanism that does this work for you, each time you play the game.

Parental Control

This page allows you to set the time limit for a client's network usage.

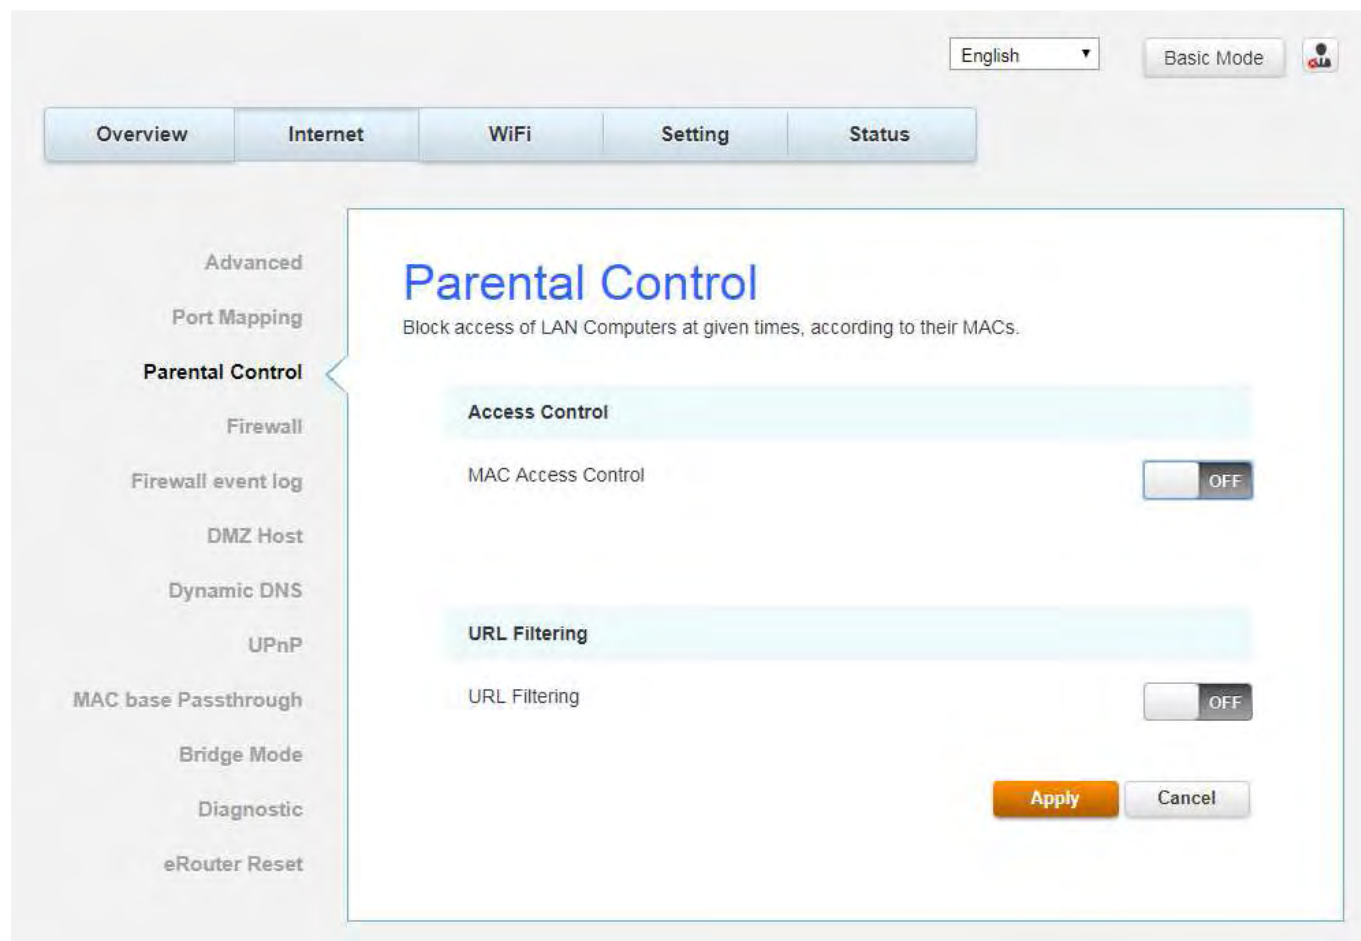


Fig.2-6 Internet\Parental Control

Firewall

This page allows you to enable/disable, and you can choose “Off”, “Low”, “Medium”, “High” firewall protection.

The **Low** setting does not block any services/ports, however it does protect against invalid packets and well known attacks. The **Medium** setting will cause the firewall to drop a packet unless it is on a specific port of allowed services. The **High** setting is similar to medium, but allows access to even fewer services. The **Off** setting allows all traffic to pass.

IP Flood Detection if you switch this button to **ON**, cm will show the attack of IP flood on the “firewall event log” page.

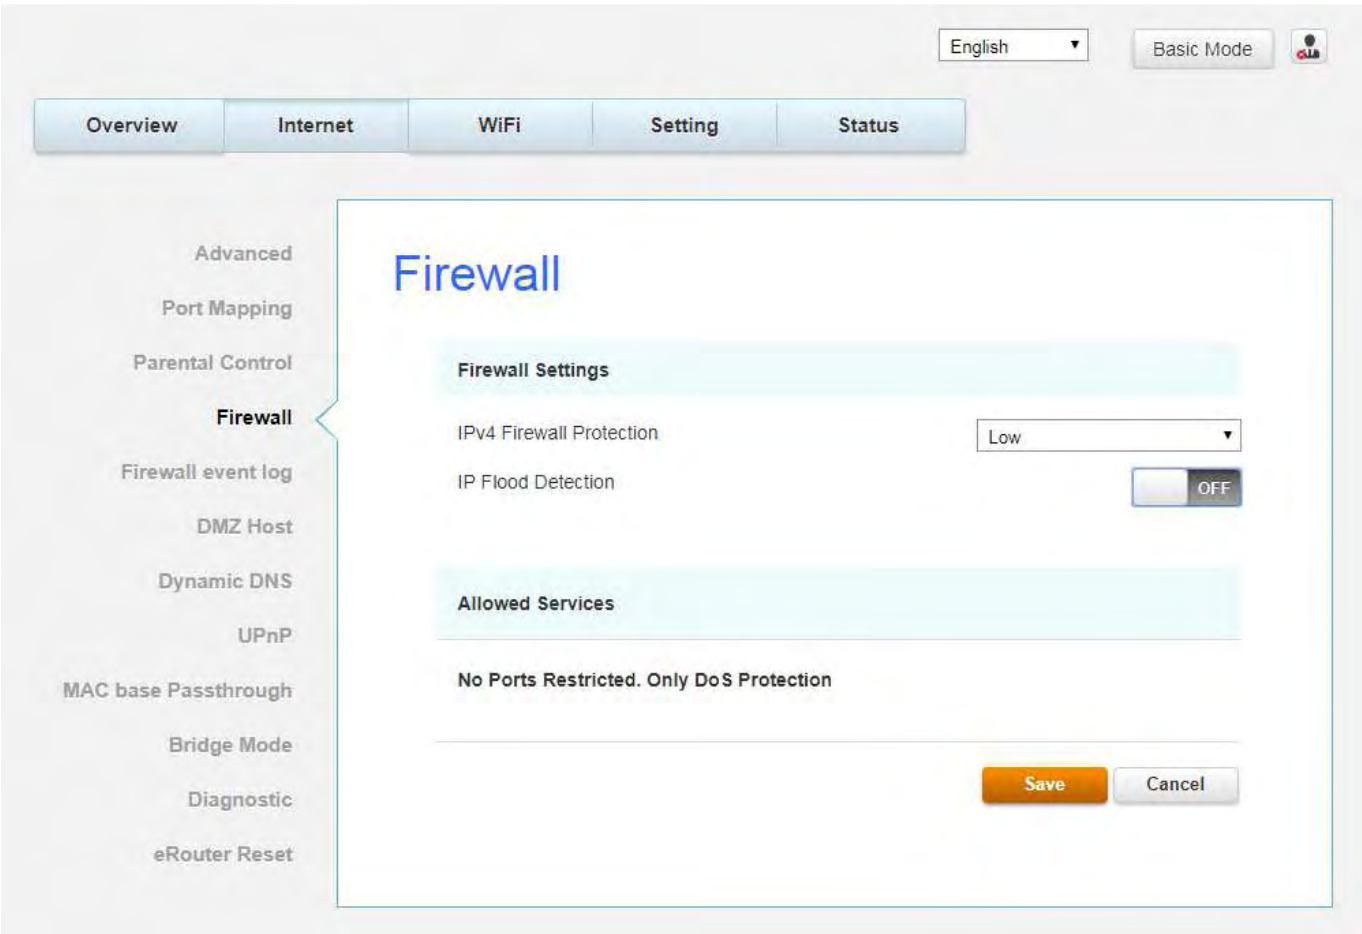


Fig.2-7 Internet\Firewall

Firewal event log

This page displays all Firewall event logs.

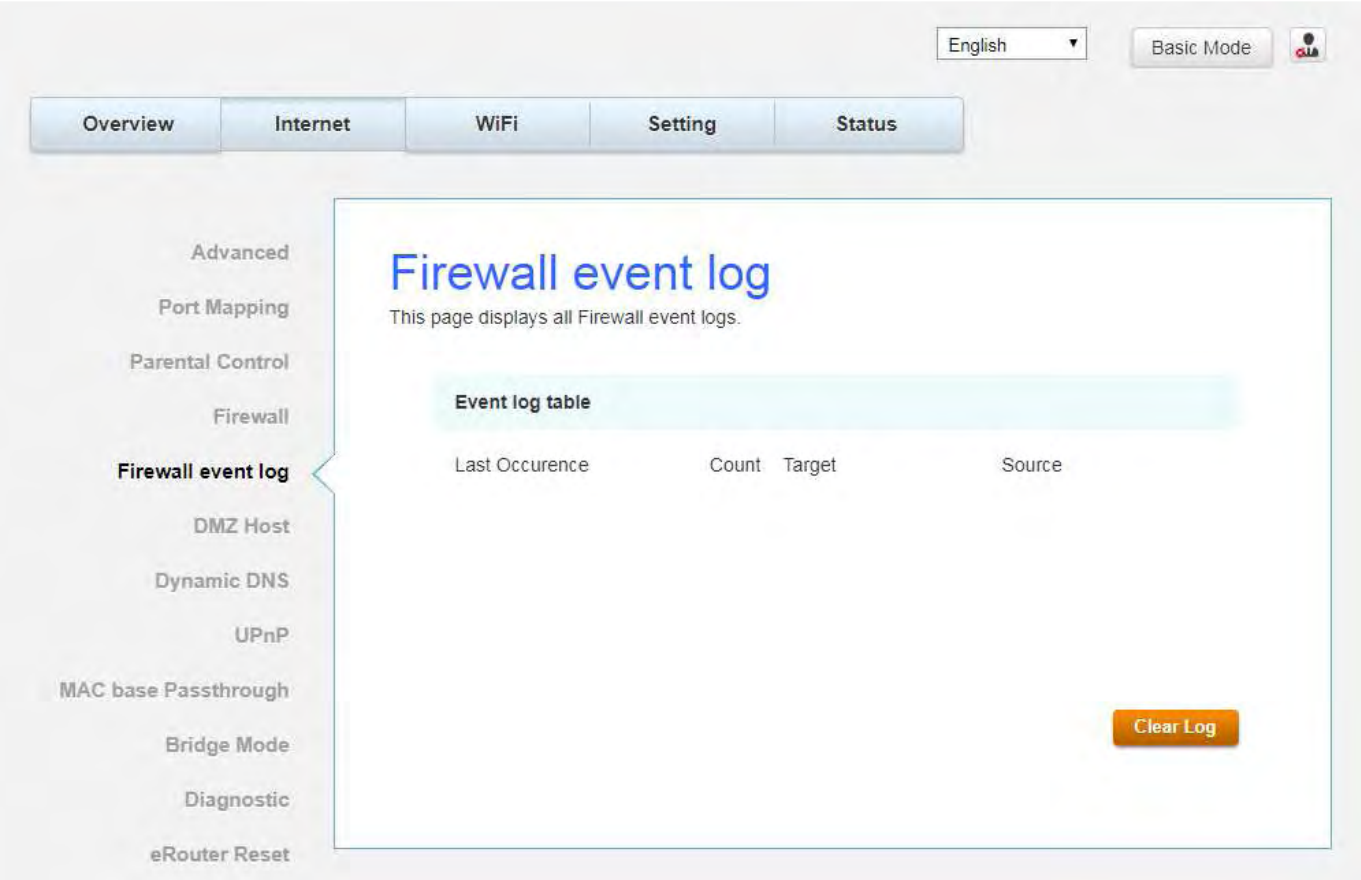


Fig.2-8 Internet\Firewall event log

DMZ Host

Use this page to designate one PC on your LAN that should be left accessible to all PCs from the WAN side, for all ports. e.g., if you put an HTTP server on this machine, anyone will be able to access that HTTP server by using your gateway IP address as the destination.

English

Basic Mode

Overview

Internet

WiFi

Setting

Status

Advanced

Port Mapping

Parental Control

Firewall

Firewall event log

DMZ Host

Dynamic DNS

UPnP

MAC base Passthrough

Bridge Mode

Diagnostic

eRouter Reset

DMZ

If you have a local client PC that cannot run an Internet application properly from behind the NAT firewall, you can open the client to unrestricted two-way Internet access by defining a Virtual Exposed Host.

DMZ Function

ON

Warning: By using the exposed host function you bypass the firewall of your router. Please make sure that your computer is protected against attacks from internet.

One PC can be exposed to the Internet for two-way communications e.g. Internet gaming, video conferencing, or VPN connections. To use the Exposed Host, you must set a static IP address for that PC.

Connect Devices

IP Address

MAC Address

Public IP Address

10.10.144.50

IP Address

192.168.1.0

Apply

Cancel

Fig.2-9 Internet\DMZ Host

Dynamic DNS

This page allows to setup for Dynamic DNS server.

The screenshot shows a router's web interface with the 'Setting' tab selected. On the left, a sidebar lists various settings: Advanced, Port Mapping, Parental Control, Firewall, Firewall event log, DMZ Host, Dynamic DNS (highlighted), UPnP, MAC base Passthrough, Bridge Mode, Diagnostic, and eRouter Reset. The main content area is titled 'DynDNS' and includes a sub-header 'This page allows setup of Dynamic DNS service.' Below this, there are several configuration fields: 'Dynamic DNS' with an 'ON' toggle switch, 'Provider' with a dropdown menu showing 'www.DynDNS.org', 'Domain Name' with a text input field, 'Account / Email' with a text input field, 'Password' with a text input field, and 'DDNS Status' which currently displays 'DDNS service is not enabled.' At the bottom right of the form are 'Apply' and 'Cancel' buttons.

Fig.2-10 Internet\Dynamic DNS

- **Dynamic DNS-** Turn "ON" to enable the dynamic DNS function.
- **Provider-** Choose Provider to enable the basic setting.
- **Domain Name-** The domain name that you registered with your DDNS provider.
- **Account / Email-** The account that is registered with your DDNS provider.
- **Password-** The password that you registered with your DDNS provider
- **DDNS Status-** It shows the DDNS service status whether it is enabled or disabled.

Click **Apply** to save the changes.

UPnP

Enable IGD UPnP to allow any local UPnP control point to perform a variety of actions, include retrieving the external IP address of the device, enumerate existing port mappings, and add or remove port mappings.

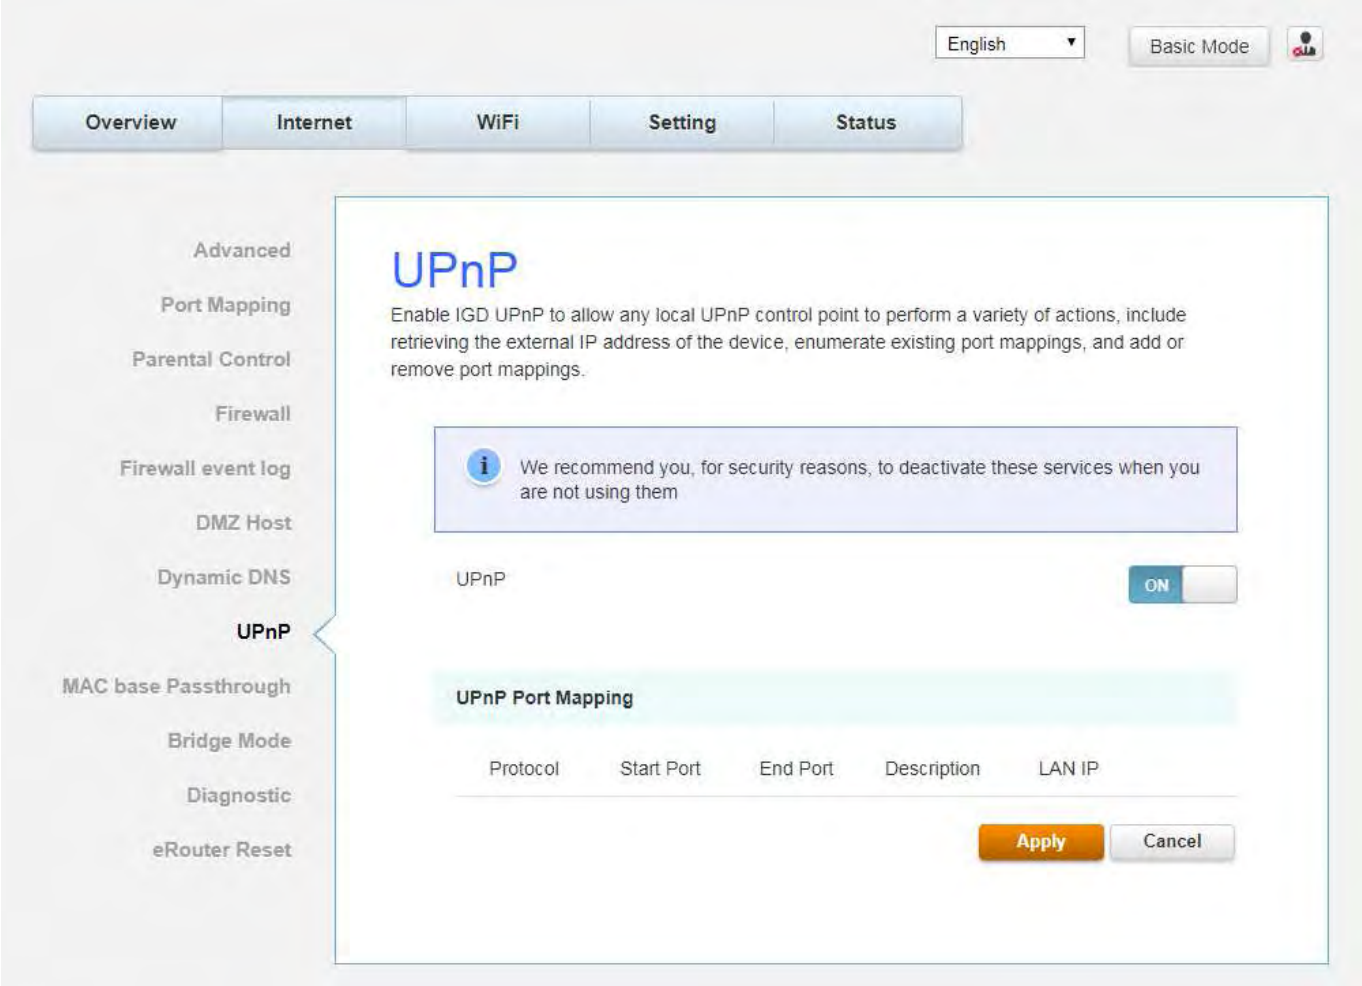


Fig.2-11 Internet\UPnP

MAC base Passthrough

This page allows you configure passthrough CPEs via MAC address. (bypass NAT)

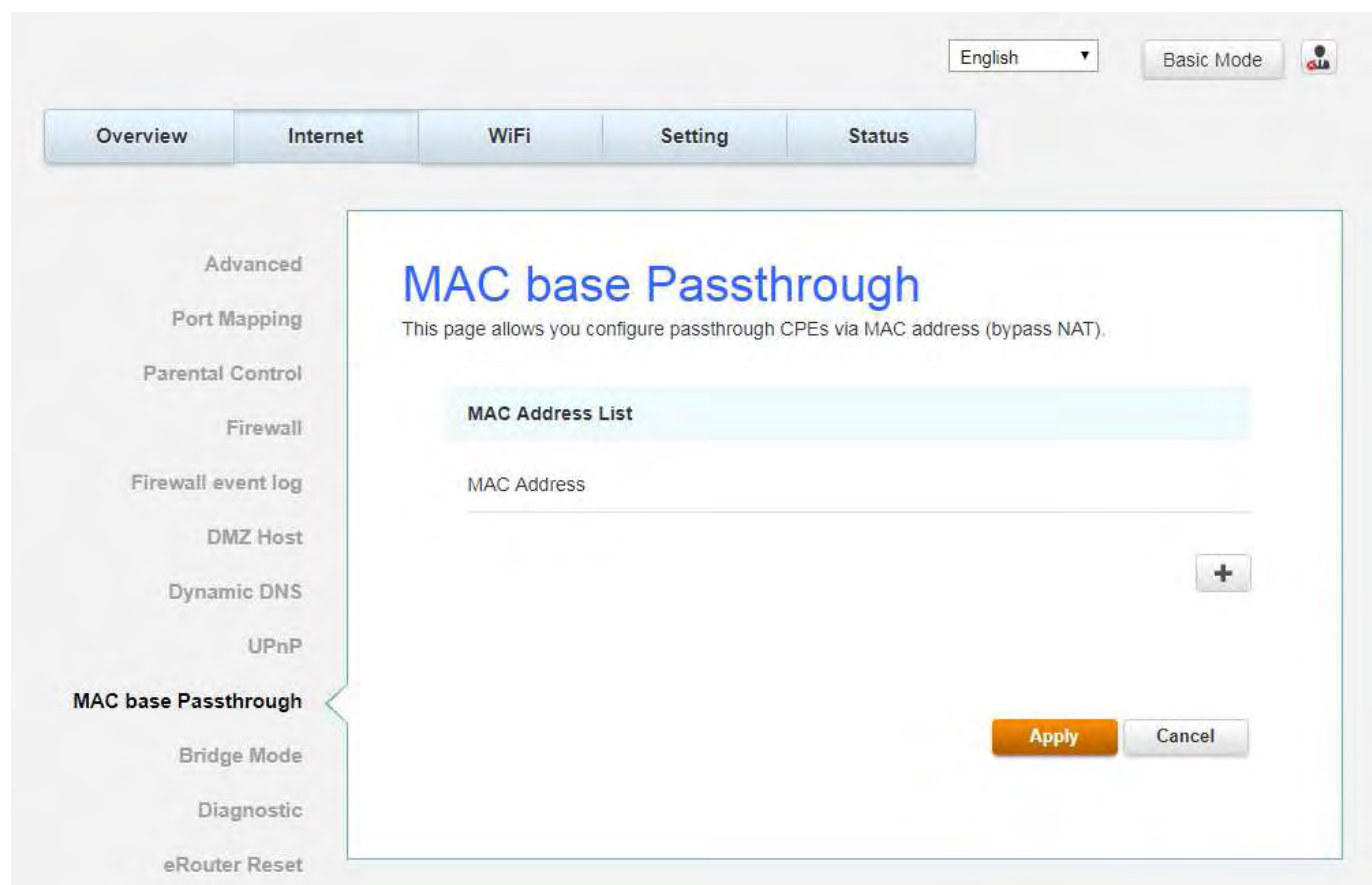


Fig.2-12 Internet\MAC base Passthrough

Bridge Mode

Switch this to ON, DHCP is disabled and all ip addresses are given out by Headend server.

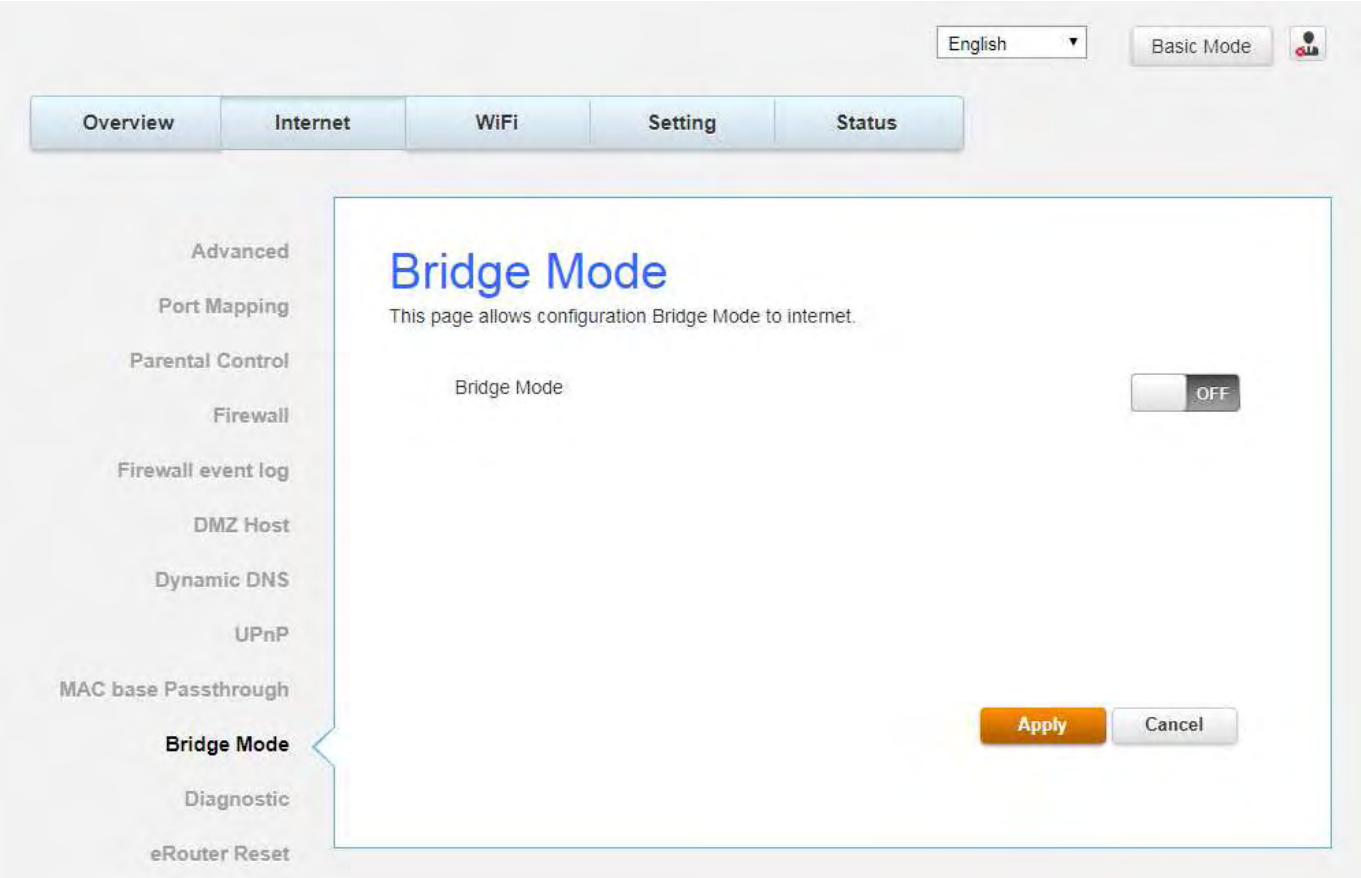


Fig.2-13 Internet\Bridge Mode

Diagnostic

This page offers basic diagnostic tools for you to use when connectivity problems occur. When you ping an Internet device, you send a packet to its TCP/IP stack, and it sends one back to yours. To use the ping Test, enter the information needed and press Start Test; the Result will be displayed in the lower part of the window. Press Abort Test to stop, and Clear Results to clear the result contents.

Note: Firewalls may cause pings to fail but still provide you TCP/IP access to selected devices behind them. Keep this in mind when ping a device that may be behind a firewall. Ping is most useful to verify connectivity with PCs which do not have firewalls, such as the PCs on your LAN side.

English

Basic Mode

Overview

Internet

WiFi

Setting

Status

Advanced

Port Mapping

Parental Control

Firewall

Firewall event log

DMZ Host

Dynamic DNS

UPnP

MAC base Passthrough

Bridge Mode

Diagnostic

eRouter Reset

Diagnostic

This page provides diagnostic tools to help with IP connectivity problems.

Diagnostic Utility

Ping

Ping Test Parameters

Target

Ping Size

64

Number of Pings

3

Ping Interval

1000

Ping Test Results

Waiting for input...

Start Test

Abort Test

Clear Results

Fig.2-14 Internet\Diagnostic

eRouter Reset

This page allows resetting eRouter.

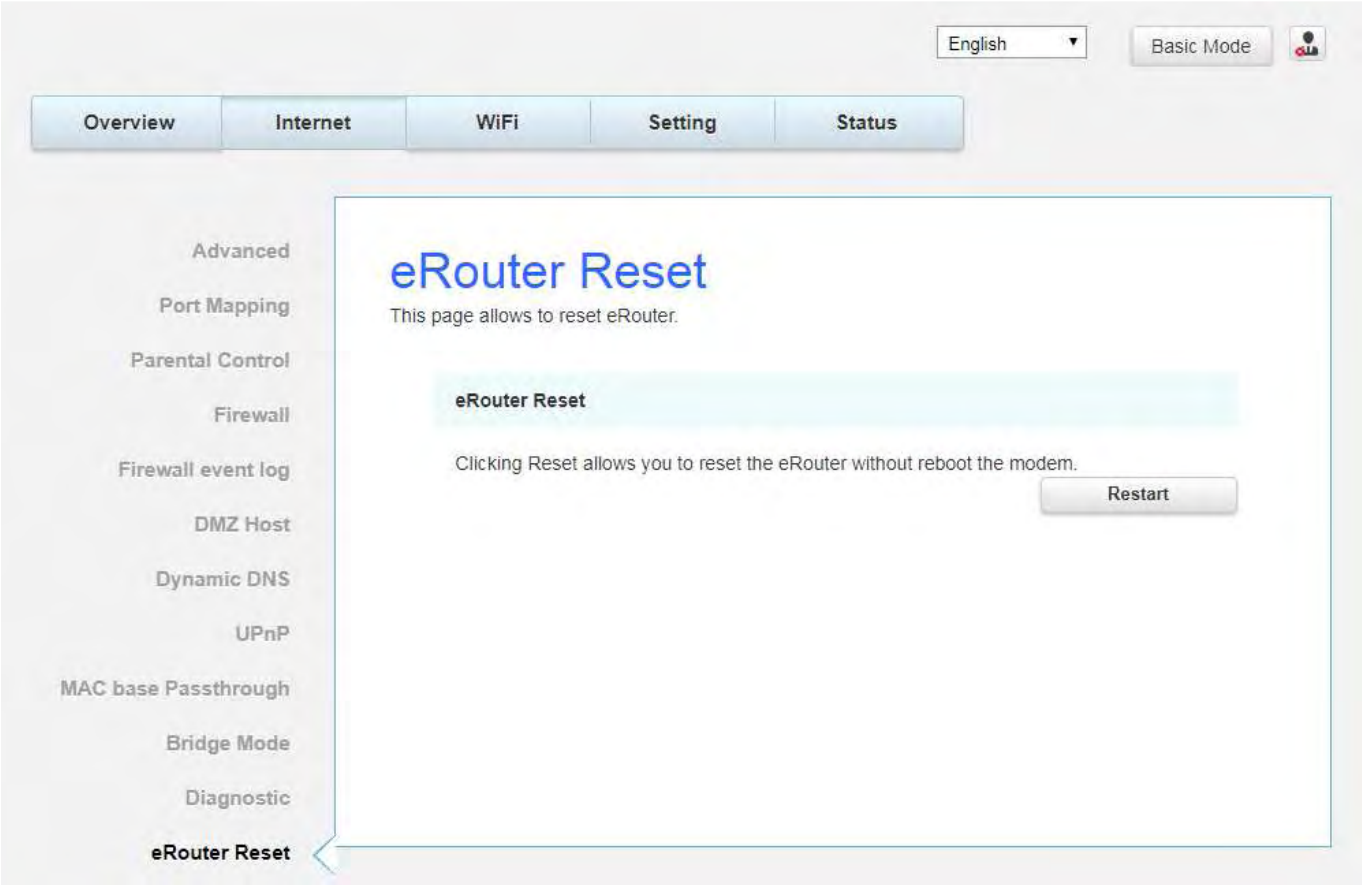


Fig.2-15 Internet\eRouter Reset

Wi-Fi Web Page Group

General

This page allows configuration of the 2.4GHz and 5GHz wireless features. These must match the settings you make on your wireless-equipped PC on the LAN side.

EnglishBasic Mode

OverviewInternetWiFiSettingStatus

General

Schedule

WPS

MAC Filter

Guest Network

WiFi Clients

Reset

WiFi Insight

General

This page allows configuration of basic features of the wireless broadband gateway.

OBSS Coexistence function is enforced when channel is auto select.

2.4G Setup

2.4G WiFi NetworkON

Current Channel1

Current Bandwidth20 MHz

WiFi

WiFi Name (SSID)CLARO_ESF6B6

Interface Type802.11 b/g/n

Sideband(40MHz only)Lower

ChannelAuto

Bandwidth20/40 MHz

OBSS CoexistenceON

Output Power100%

Broadcast SSIDON

WiFi ProtectionWPA2/AES

Network Key

Display Characters

Change Key

5G Setup

5G WiFi NetworkON

Current Channel161

Current Bandwidth40 MHz

Current SidebandLower

WiFi

WiFi Name (SSID)CLARO_ESF6B6

Interface Type802.11 a/n

Sideband(40MHz only)Lower

ChannelAuto

Bandwidth20/40 MHz

OBSS CoexistenceON

Output Power100%

Broadcast SSIDON

WiFi ProtectionWPA2/AES

Network Key

Display Characters

Change Key

ApplyCancel

Fig. 2-16 Wi-Fi\General

- **2.4GWi-Fi Network / 5GWi-Fi Network:**It may help you to **Enable** or **Disable** the 2.4GHz / 5GHz wireless function.
- **Current Channel:** The channel that you choose will be displayed in this field.
- **Current Bandwidth:**The bandwidth that you choose will be displayed in this field.
- **Wi-Fi Name (SSID):**The SSID for 2.4GHz / 5GHz wireless function.
- **Interface Type:** There are three different modes can be selected. 2.4GHz can be selected 802.11b/g, 802.11b/g/n and 802.11n only; 5GHz can be selected 802.11a, 802.11a/n/ac and 802.11n/ac only.
- **Sideband (40MHz only):**There is“Lower” and “Upper” can be selected if Bandwidth 40 MHz was enabled.
- **Channel:** In 802.11 Band 2.4GHz, there are 1 to 11 channels. In 802.11 Band 5GHz, there are 36, 44, 52, 60, 64, 100, 104, 108, 116, 124, 128, 132, 149, 157channels for all country. Choose the one that is suitable for this device.
- **Bandwidth:** Select wireless channel width **20/40 MHz** is for 2.4GHz Wi-Fi default value, and **20/40/80 MHz** is for 5GHz Wi-Fi default value. (Bandwidth taken by wireless signals of this access point.)
- **OBSS Coexistence:**Overlapping BBS coexistence, here to control this function Enable or Disable, default is enabled.
- **Output Power:** This setting decides the output power of this device. You may use it to economize on electricity by selecting lower percentage of power output. Control the range of the AP by adjusting the radio output power.
- **Broadcast SSID:** Broadcasting the SSID causes the name of your network to appear in the list of available networks.
- **Wi-Fi Protection:** ThemethodofWi-Fi protectioncanbeOFF, WEP-64, WEP-128,WPA/TKIP, WPA/TKIP+AES, WPA2/AES, WPA2/TKIP+AESorWPA+WPA2/TKIP+AES.
- **Network key:** The network key is the password that you use to authenticate with your router.

802.11x Authentication introduction

If you enable the **802.11x authentication** function, you will have to offer the following information-

- **WEP-64 / WEP-128**(Wired Equivalent Privacy):

WEP-64/ WEP-128 is a simple security protocol for wireless networks that encrypts transmitted data. The WEP key can be entered as a string of 10 hexadecimal characters (0–9 and A–F).

- **WPA** (Wi-Fi Protected Access)/**WPA2**:

It must be used in conjunction with an authentication server such as RADIUS to provide centralized access control and management. It can provide stronger encryption and authentication solution than none WPA modes. **WPA2** is the second generation of **WPA** security.

- **WPA/WPA2 Encryption:**

There are two types that you can choose, **AES**, **TKIP+AES**.

TKIP takes the original master key only as a starting point and derives its encryption keys mathematically from this master key. Then it regularly changes and rotates the encryption keys so that the same encryption key will never be used twice

AES provides security between client workstations operating in ad hoc mode. It uses a mathematical ciphering algorithm that employs variable key sizes of 128, 192 or 256 bits.

Schedule

Schedule the times when you want the Wi-Fi of your router to be turned on or off. When it is turned back on, you return to your chosen Wi-Fi settings.

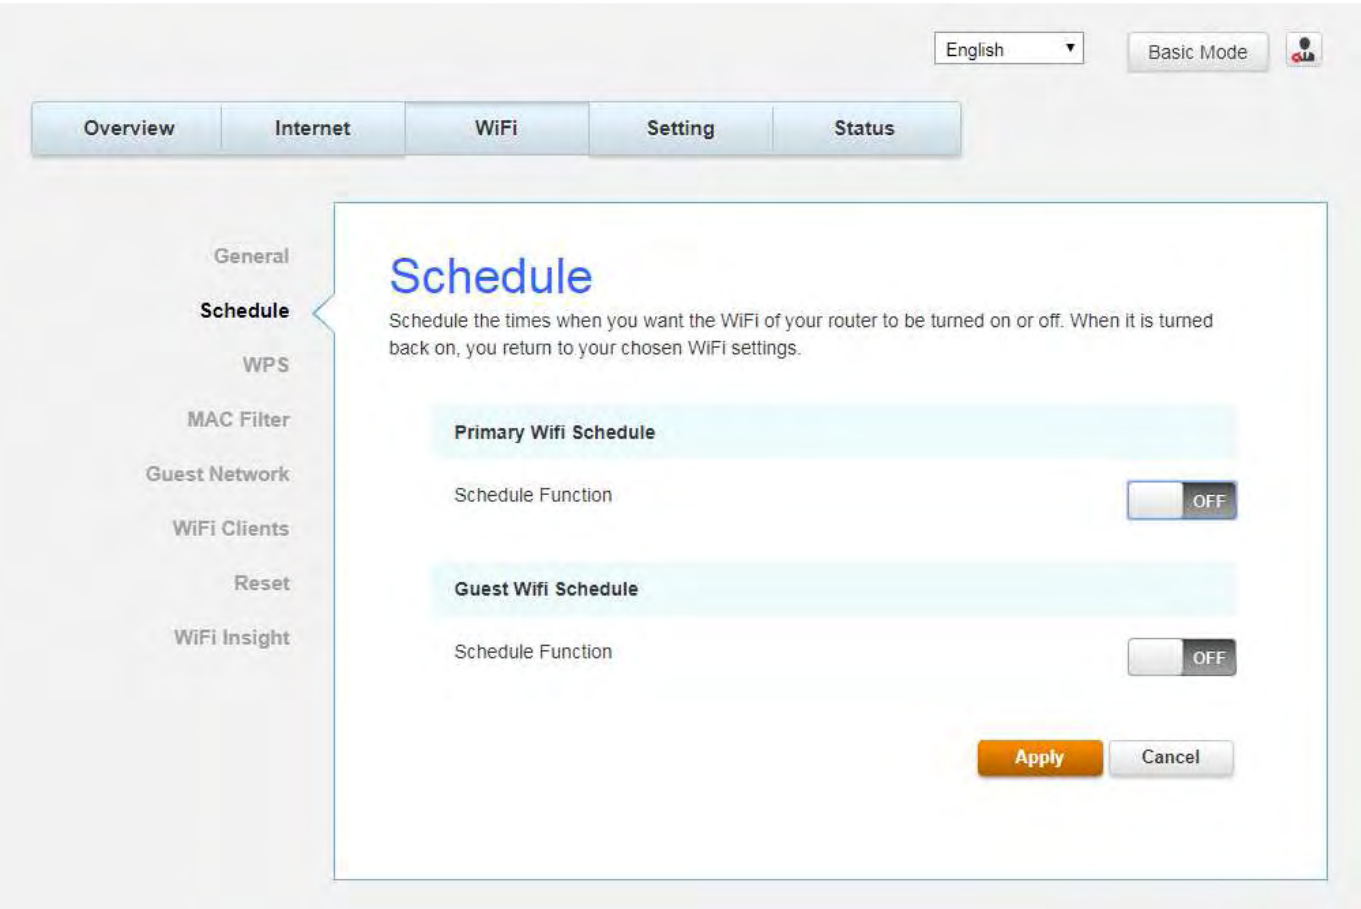


Fig.2-17 Wi-Fi\Schedule

WPS

This page allows you to configure WPS setting. Wi-Fi Protected Setup™ (WPS) is an easy and secure way of configuring and connecting your Wireless access point. In this case, the Wireless Voice Gateway is the Access Point (AP), and Your PC (or Wireless Device) is called the STA. When configuring your Wireless Network via WPS, Messages are exchanged between the STA and AP in order to configure the Security Settings on both devices.

English

Basic Mode

Overview

Internet

WiFi

Setting

Status

General

Schedule

WPS

MAC Filter

Guest Network

WiFi Clients

Reset

WiFi Insight

WPS

The WPS functions help you securely pair your WiFi devices automatically with the router. You can choose and configure the allowed security mechanisms below.

2.4G WPS Function

ON

5G WPS Function

ON

WPS-PBC: Push button on devices

To pair your devices press Pair on this page and then on your other device(s). Your router will be open for pairing for 2 minutes after you press Pair.

Pair

WPS-PIN: It is the customer's PIN WPS.

With the PIN Number method, you have to enter the client's PIN here. You have to start the client WPS process at the same time, and you can find the client's PIN on the client's utility GUI.

Pin Code

Pair

Apply

Cancel

Fig.2-18 Wi-Fi\WPS

MAC Filter

By entering MAC Address, you can configure which local PCs are allowed access to the WAN. Besides the list of MAC filter, any local PCs else would be blocked to the WAN.

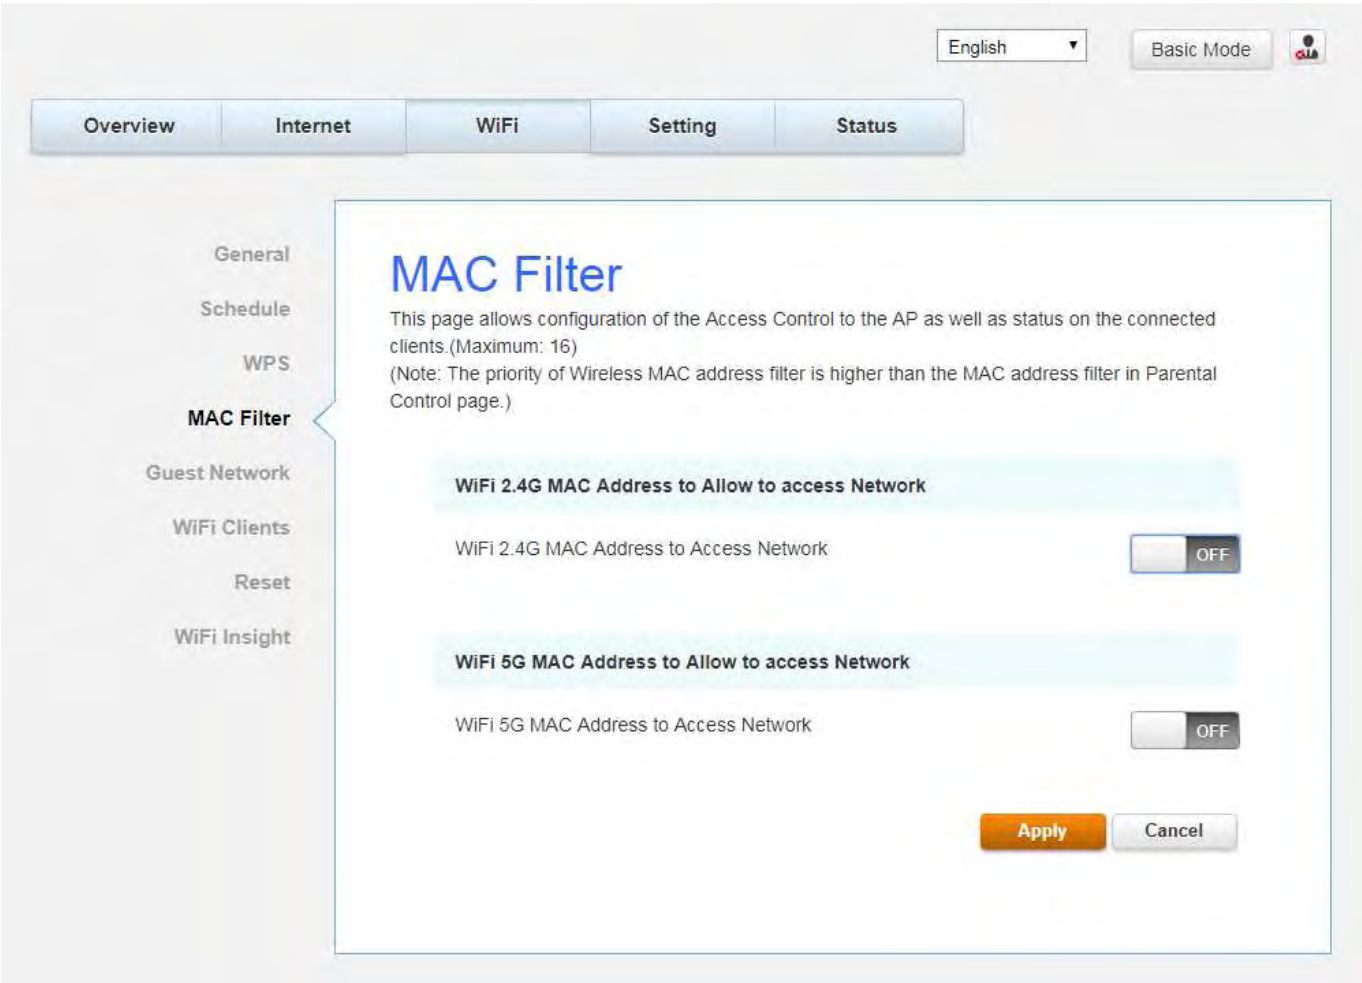


Fig.2-19 Wi-Fi\MAC Filter

Guest Network

This page allows configuration of the 2.4GHz and 5GHz guest network.

English

Basic Mode

Overview

Internet

WiFi

Setting

Status

General

Schedule

WPS

MAC Filter

Guest Network

WiFi Clients

Reset

WiFi Insight

Guest Network

This page allows configuration of a guest network.

2.4G Setup

Select WiFi Guest Interface Index

CLARO_GUEST_1

2.4G Guest Network

ON

WiFi

WiFi Name (SSID)

CLARO_GUEST_1

Broadcast SSID

ON

WiFi Protection

OFF

Network Key

Display Characters

Change Key

Guest LAN Settings

IP Address

192.168.22.1

Subnet Mask

255.255.255.0

Lease Pool Start

192.168.22.10

Lease Pool End

192.168.22.99

Lease Time

86400

5G Setup

Select WiFi Guest Interface Index

CLARO_GUEST_1

5G Guest Network

ON

WiFi

WiFi Name (SSID)

CLARO_GUEST_1

Broadcast SSID

ON

WiFi Protection

OFF

Network Key

Display Characters

Change Key

Guest LAN Settings

IP Address

192.168.2.1

Subnet Mask

255.255.255.0

Lease Pool Start

192.168.2.10

Lease Pool End

192.168.2.99

Lease Time

86400

Apply

Cancel

Fig.2-20Wi-Fi\Guest Network

- **Select Wi-Fi Guest Interface Index:**Select wireless guest interface index **CLARO_GUS_1** is for Wi-Fi guest interface default value.
- **2.4G Guest Network / 5G Guest Network:**It may help you to **Enable** or **Disable** the 2.4GHz / 5GHz wireless function.
- **Wi-Fi Name (SSID):**The SSID for 2.4GHz / 5GHz Guest wireless function.
- **Broadcast SSID:**Broadcasting the SSID causes the name of your network to appear in the list of available networks.
- **Wi-Fi Protection:** ThemethodofWi-Fi protectioncanbeOFF, WEP-64, WEP-128, WPA/TKIP, WPA/TKIP+AES, WPA2/AES, WPA2/TKIP+AESorWPA+WPA2/TKIP+AES.
- **Network key:** The network key is the password that you use to authenticate with your router.

Guest LAN Settings

A private IP address and Subnet Mask for LAN sub netting.

For example 192.168.2.1./ 255.255.255.0.

- Configure the IP address numbers for the DHCP server with "**Lease pool start**" and "**Lease pool end**".
- Configure the IP address lease time with "**Lease time**" for DHCP server.

802.11x Authentication introduction

If you enable the **802.11x authentication** function, you will have to offer the following information-

- **WEP-64 / WEP-128**(Wired Equivalent Privacy):

WEP-64/ WEP-128 is a simple security protocol for wireless networks that encrypts transmitted data. The WEP key can be entered as a string of 10 hexadecimal characters (0–9 and A–F).

- **WPA** (Wi-Fi Protected Access)/**WPA2**:

It must be used in conjunction with an authentication server such as RADIUS to provide centralized access control and management. It can provide stronger encryption and authentication solution than none WPA modes. **WPA2** is the second generation of **WPA** security.

- **WPA/WPA2 Encryption:**

There are two types that you can choose, **AES**, **TKIP+AES**.

TKIP takes the original master key only as a starting point and derives its encryption keys mathematically from this master key. Then it regularly changes and rotates the encryption keys so that the same encryption key will never be used twice

AES provides security between client workstations operating in ad hoc mode. It uses a mathematical ciphering algorithm that employs variable key sizes of 128, 192 or 256 bits.

Wi-Fi Clients

This page shows all Wi-Fi clients.

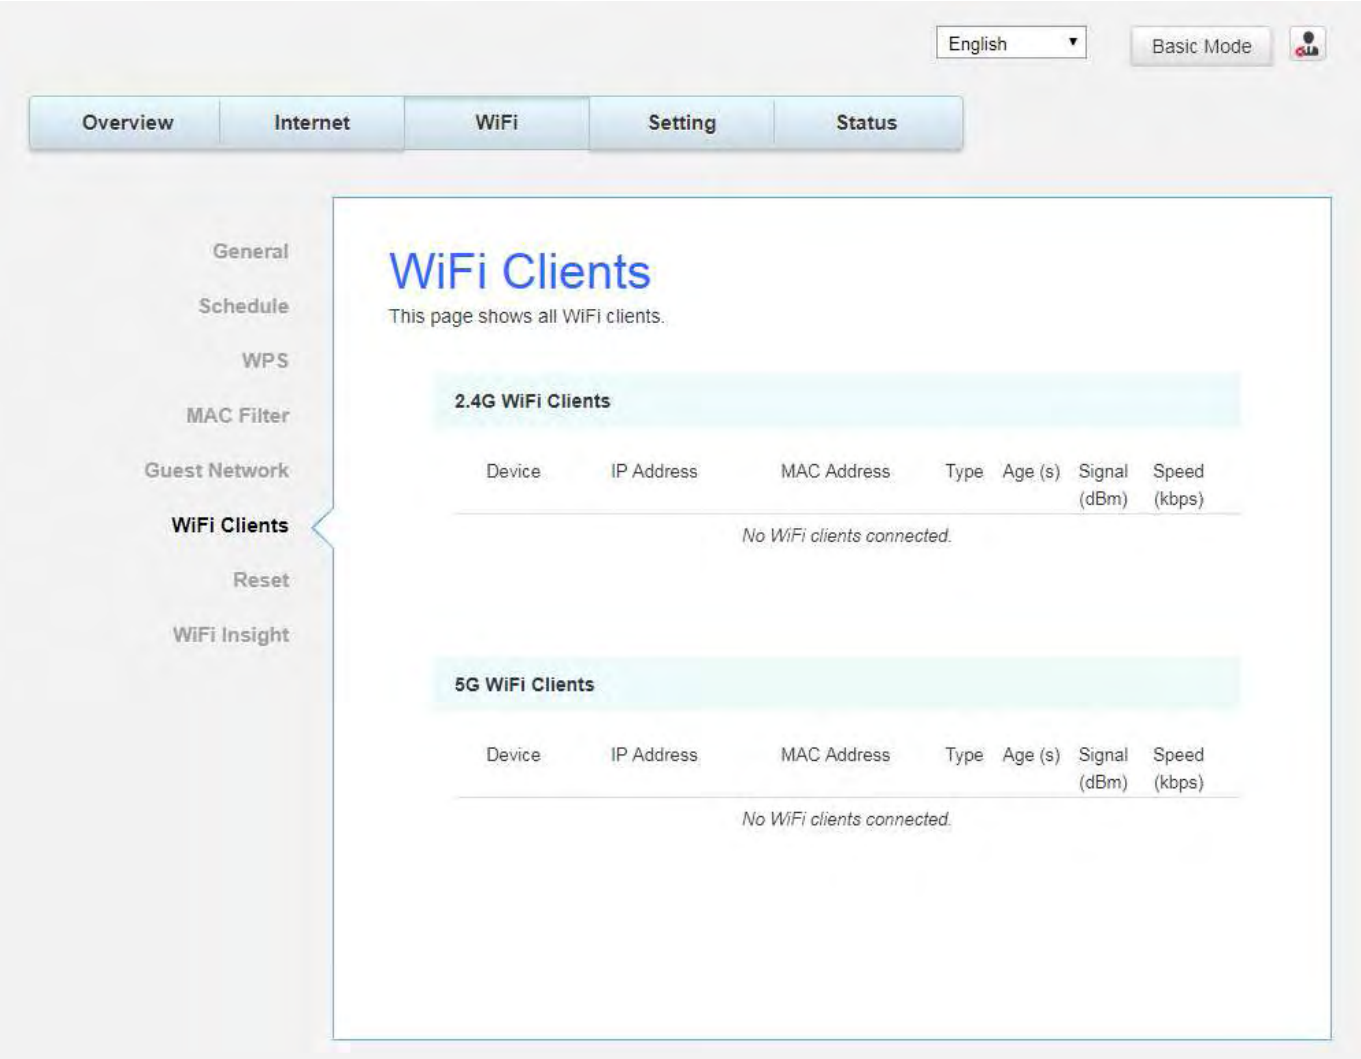


Fig.2-21 Wi-Fi\Wi-Fi Clients

Reset

This page allows you to restore the Wi-Fi settings to factory default values.

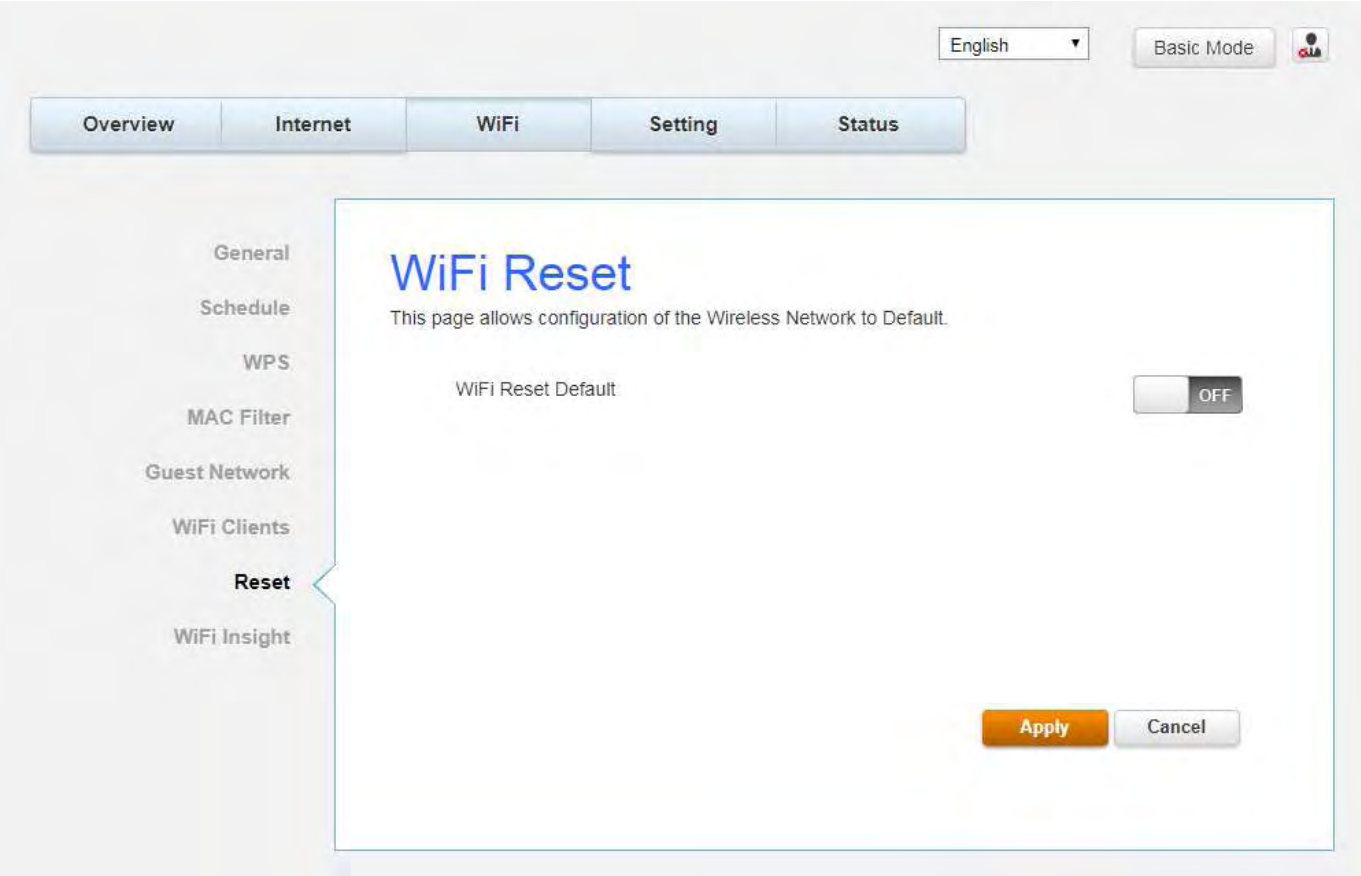


Fig.2-22 Wi-Fi\Reset

Wi-Fi insight

On this page, Users can view real-time wireless networks in your area and extensive information about them, including: Network Name (SSID), Strength, and Status (Security mode).

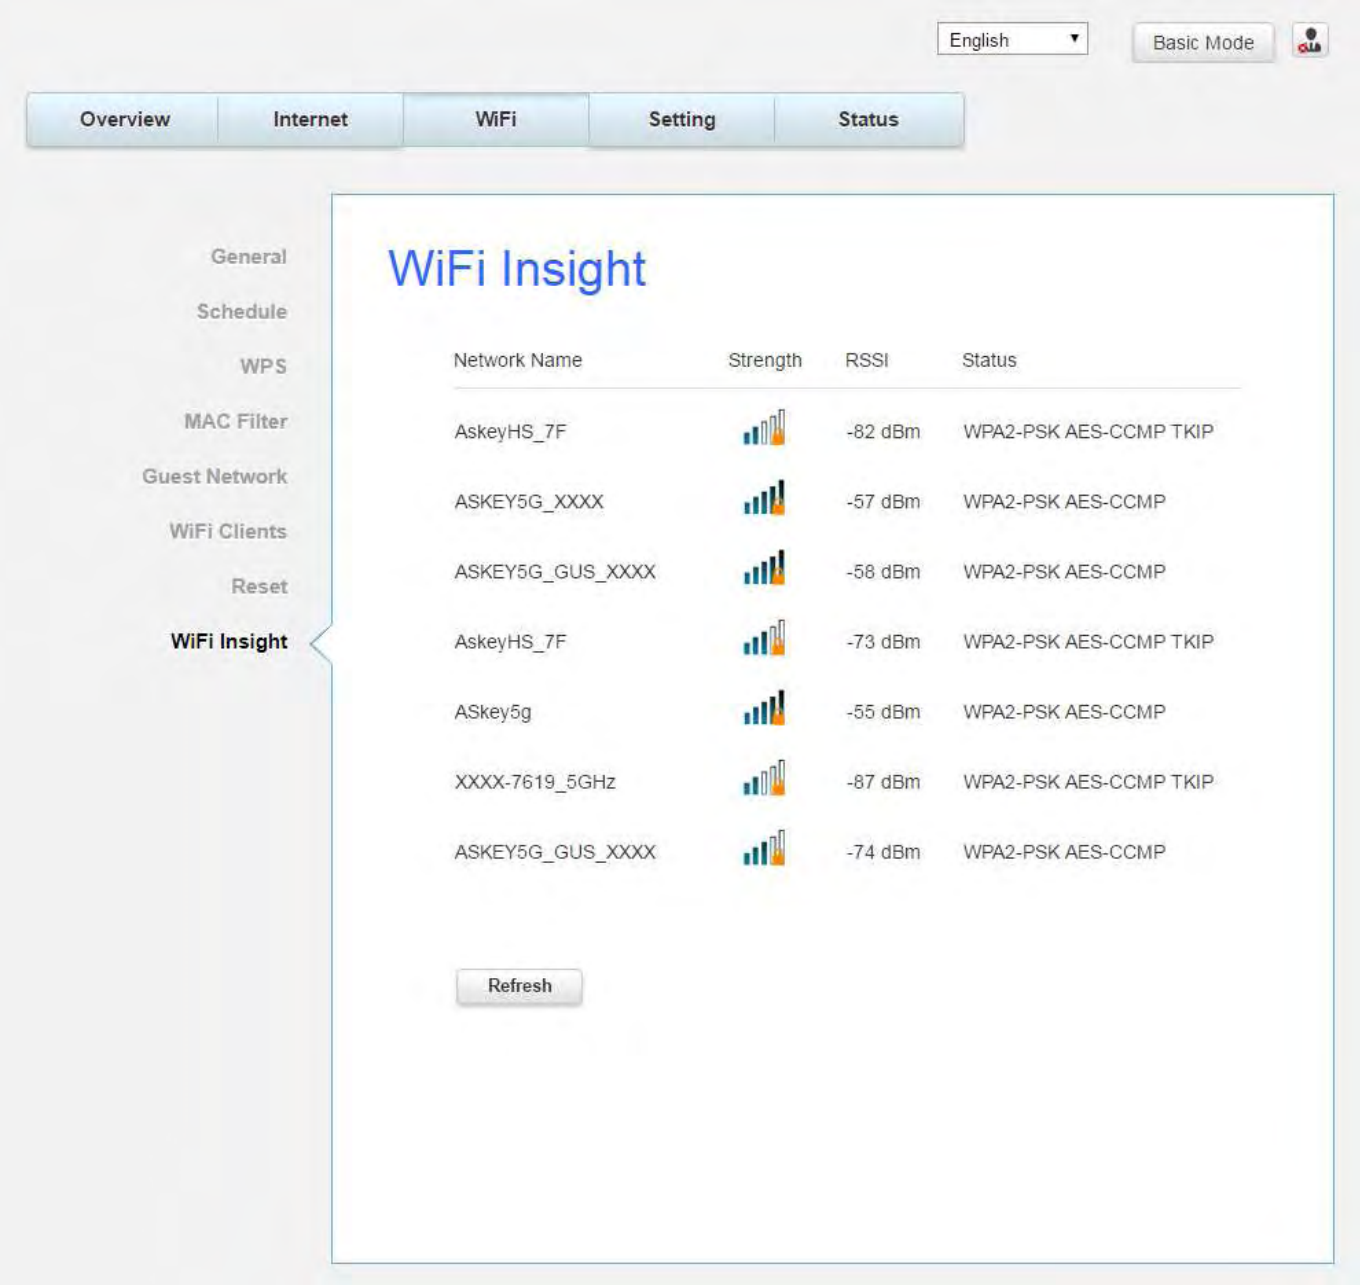


Fig.2-23Wi-Fi\Wi-Fi insight

Settings Web Page Group

Language

This page allows configuration of language. Or you can choose specific language via drop-down menu in the top of the page.

You can change the display language to "English" or "Español" on the top of the page.

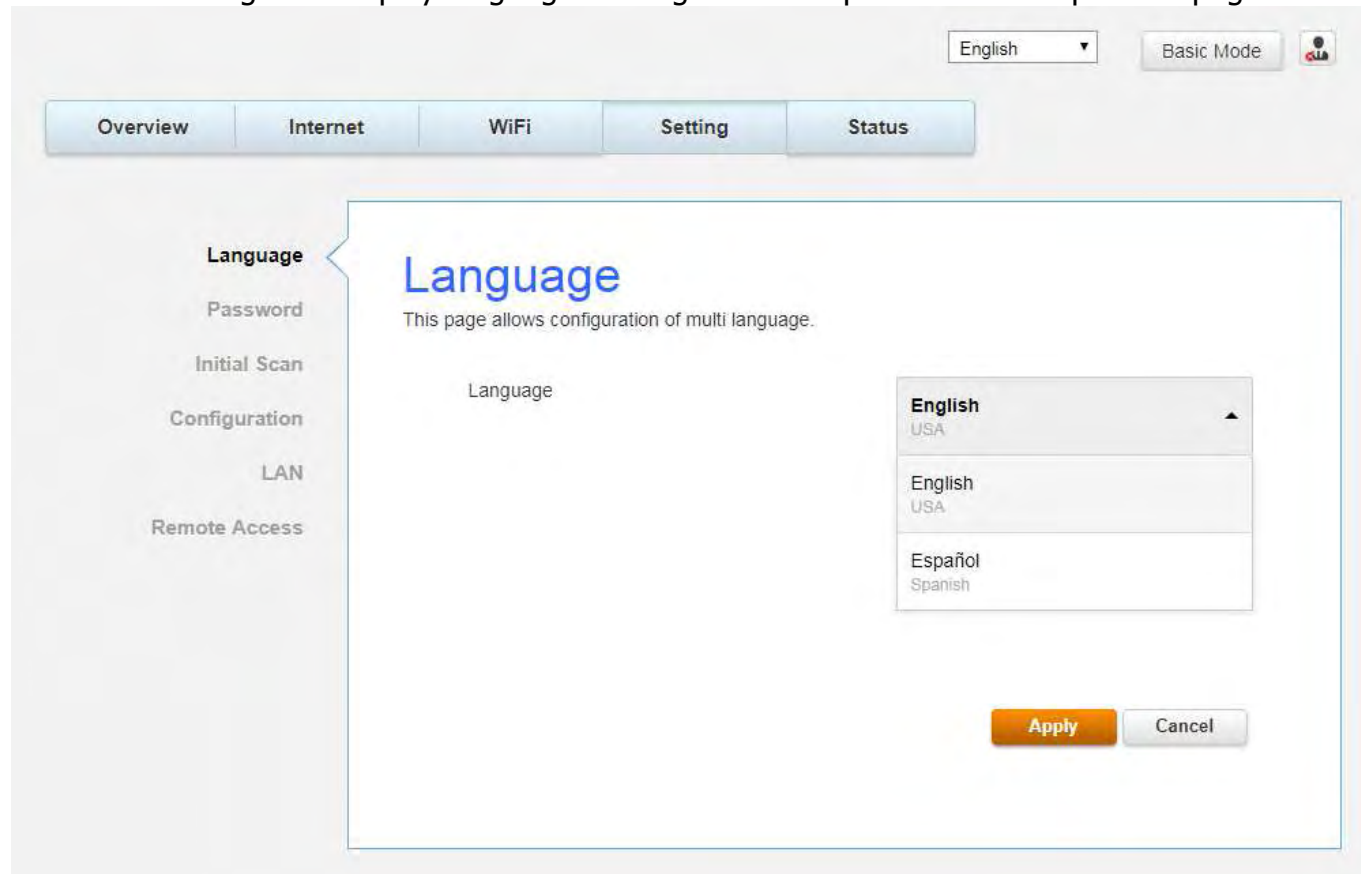


Fig.2-24Setting\Language

Password

By default, the username is "**admin**" and password is "**Cl@r0**".

When the current password is the default one, the user is strongly encouraged to change the default web password.

The password can be a minimum of 8 characters, maximum of 20 characters and is case sensitive. If forget your username and password, you may Press "Reset" button on the rear panel more than 5seconds to restore the username and password to default.

Note: We are always suggesting you to modify the password. This is a basic protection against wrongful access to the Gateway Web pages.

The screenshot shows a web interface for setting up an account and password. At the top, there is a language dropdown set to 'English', a 'Basic Mode' button, and a user icon. Below this is a navigation bar with tabs: 'Overview', 'Internet', 'WiFi', 'Setting' (which is active), and 'Status'. On the left side of the 'Setting' tab, there is a sidebar menu with options: 'Language', 'Password' (which is selected), 'Initial Scan', 'Configuration', 'LAN', and 'Remote Access'. The main content area is titled 'Setup Account and Password' in blue text, with a subtitle 'This page allows configuration of administration access privileges.' Below the title, there are two sections: 'Login Account' and 'Account Security'. The 'Login Account' section has a 'Current Password' field with a masked password '*****' and a 'Display Characters' checkbox. There is a 'Change Key' button next to the password field. The 'Account Security' section has an 'Automatic Logout' dropdown menu currently set to 'Never'. At the bottom right of the main content area, there are 'Apply' and 'Cancel' buttons.

Fig.2-25Setting>Password

Initial Scan

To speed up the modem’s first time connection, enter known downstream frequency and/or upstream channel ID information here. Then click “**Apply**” button to start scanning the cable network beginning with the values supplied here.

The value is provided in Hertz. So, for 603 MHz, you must type: 603000000

The screenshot shows a web interface for a modem's configuration. At the top right, there is a language dropdown menu set to "English", a "Basic Mode" button, and a small icon. Below this is a horizontal navigation bar with tabs: "Overview", "Internet", "WiFi", "Setting", and "Status". The "Setting" tab is selected. On the left side, there is a vertical sidebar with links: "Language", "Password", "Initial Scan" (which is highlighted with a blue bracket), "Configuration", "LAN", and "Remote Access". The main content area is titled "Initial Scan" in blue. Below the title, it says "To speed up the modem's first time startup, enter DS frequency and/or US channel ID here." There are two input fields: "Initial DS frequency:" with the value "603000000" and "hz", and "Upstream Channel ID:" with the value "2". At the bottom right of the main content area, there are two buttons: "Apply" (orange) and "Cancel" (grey).

Fig.2-26Setting\Initial Scan

Configuration

This page allows you to save your current settings locally on your PC, or restore settings previously saved.

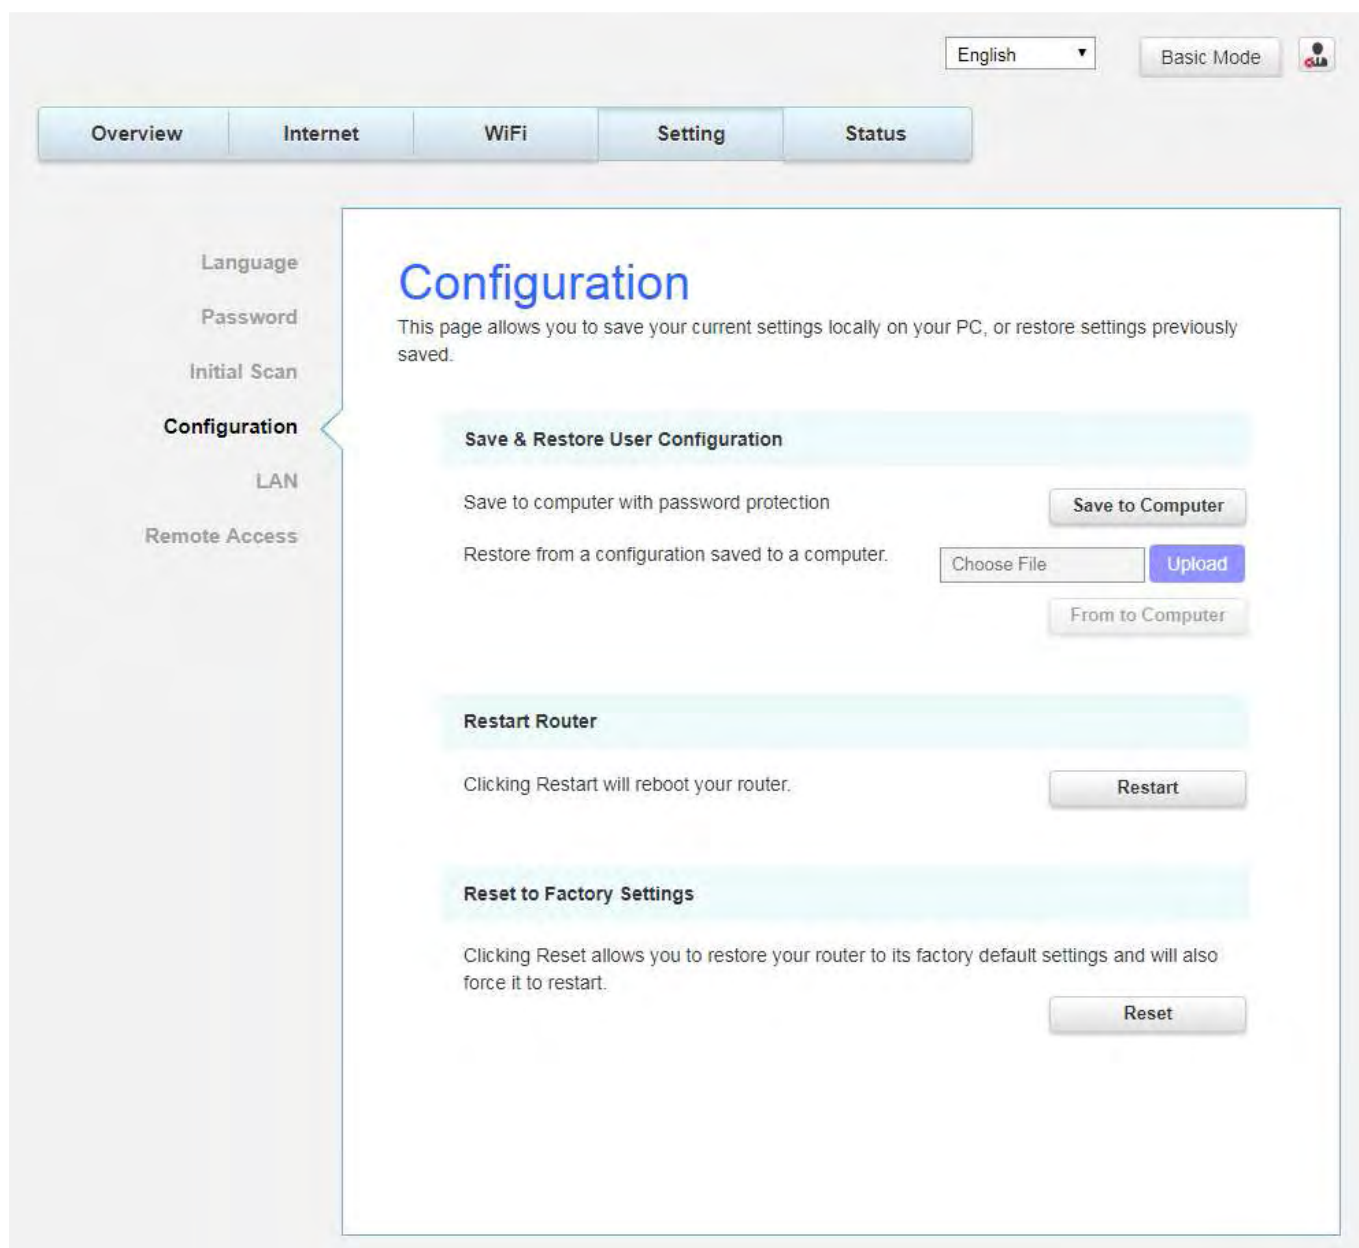


Fig.2-27 Setting\Configuration

- **Save & Restore User Configuration:** To back up the current configuration, click **Save to Computer** and follow the prompts.

To restore a previous configuration, click **Upload** and use the navigation window to locate the file (usually GatewaySettings.bin.) Once the file has been located, click **From to Computer** to restore the settings. Once the settings are restored, the device will reboot.

- **Restart Router:** Clicking **Restart** will reboot your router.
- **Reset to Factory Settings:** Click **Reset** allows you to restore your router to factory default settings and will also force it to restart.

LAN

This page allows configuration of IP addressing for all the equipment connected to your modem.

English

Basic Mode

Overview

Internet

WiFi

Setting

Status

Language

Password

Initial Scan

Configuration

LAN

Remote Access

LAN

This page allows configuration of IP addressing for all the equipment connected to your modem.

LAN Settings

Home Network

IP Address Router19216811

IP Subnet Mask2552552550

DHCP ServerON

DHCP Server Parameters

Home Network

Address Pool Start IP19216812

Address Pool End IP1921681250

Lease Time(Seconds)86400

DHCP WLAN Clients

Reserved for WLAN ClientsOFF

WLAN Clients Counts50

Start WLAN IP Address1921681100

DHCP Static IP Lease

DHCP Address Lease Reservations: (A maximum 32 entries can be configured).
Enter Mac address and Static IP address then click Apply/Save

MAC Address

IP Address

No rules set

IPv6 LAN Settings

Stateful-Autoconfiguration (DHCPv6)

DHCPv6 ServerON

DHCPv6 Server TypeStateful

Start IPv6 Address

IPv6 Lease Time (Seconds)3600

DNS Settings

Static DNSOFF

Apply

Cancel

Fig.2-28Setting\LAN

Remote Access

This page allows configuration of the Remote Access.

The screenshot shows a web interface for configuring Remote Access. At the top, there is a language dropdown set to 'English', a 'Basic Mode' button, and a user icon. Below this is a navigation bar with tabs: 'Overview', 'Internet', 'WiFi', 'Setting' (selected), and 'Status'. On the left side, there is a sidebar menu with options: 'Language', 'Password', 'Initial Scan', 'Configuration', 'LAN', and 'Remote Access' (selected). The main content area is titled 'Remote Access' and contains the following fields and controls:

- Allow Remote Management:** A toggle switch currently set to 'ON'.
- Remote User Name:** A text input field containing 'remote'.
- Port Number:** A text input field containing '8080'.
- Remote Password:** A text input field with masked characters '*****'. Below it is a 'Display Characters' checkbox and a 'Change Key' button.
- IP Address:** A text input field containing 'http://10.10.144.50:8080/'. Below it is another text input field containing 'http://[]:8080/'.
- At the bottom right, there are 'Apply' and 'Cancel' buttons.

Fig.2-29Setting\Remote Access

- **Allow Remote Management:** It may help you to **Enable** or **Disable** the remote access function.
- **Remote User Name:** The user name that when you remote access able to login.
- **Port Number:** Configure specific port number when you remote access to GUI.
- **Remote Password:** The remote password that when you remote access able to login.
- **IP Address:** The IP address that you can use to remote access.

Status Web Page Group

Status

This page can find an overview of all your router parameters. This may help you in optimizing or trouble shooting your router.

The screenshot displays the 'Status' web page of a router. At the top, there is a navigation bar with tabs for 'Overview', 'Internet', 'WiFi', 'Setting', and 'Status'. The 'Status' tab is selected. In the top right corner, there is a language dropdown set to 'English', a 'Basic Mode' button, and a user profile icon. On the left side, there is a sidebar with links for 'Status', 'Voice Status', 'Upstream', 'Downstream', and 'Event Log'. The main content area is titled 'Status' and contains the text: 'This page displays information on the current system software.' Below this, there is a section titled 'System' which contains a table of system parameters.

System	
Serial Number	111103
CM MAC Address	00:90:00:11:11:03
Model Vendor	Askey
Model Name	TCG220-E
Model Type	WiFi EMTA
Firmware version	D279.UUN42.C14.180319.01
Bootloader Version	2.4.0mp1
Hardware Type & Version	1.0
Uptime since last reboot	0 days 19h:08m:48s
Reboot Cause	MTA Reset due to a CM state change to 'Operational' while MTA state is 'Non-operational'
CPU Usage	6%
Memory Usage	31.77%
Wireless Driver Version	WI Ver 7.14.89.22.571.266.10+CL17
Date & Time	Tue Mar 20 11:05:20 2018

Fig.2-30Status\Status

Voice Status

This page displays the initialization status of the MTA containing Telephony DHCP, Security, TFTP and Provisioning Status. The information can be useful to your cable company's support technician if you're having problems.

The screenshot shows a web interface for network management. At the top right, there is a language dropdown set to 'English' and a 'Basic Mode' button. Below these are navigation tabs: 'Overview', 'Internet', 'WiFi', 'Setting', and 'Status'. The 'Status' tab is selected. On the left side of the 'Status' tab, there is a sub-menu with 'Voice Status' highlighted, along with 'Upstream', 'Downstream', and 'Event Log'. The main content area is titled 'Voice Status' and includes a description: 'This page displays initialization status of the MTA.' Below this, there are two sections: 'Provision Status' and 'MTA Line State'. The 'Provision Status' section contains a table with two columns: 'Task' and 'Status'. The 'MTA Line State' section contains a table with three columns: 'Lines', 'Telephony Call Server Registration', and 'Hook State'.

Task	Status
Telephony DHCP	Completed
Telephony Security	Disabled
Telephony TFTP	Completed
Telephony Prov Result	Pass With Warnings
Telephony Prov Method	BASIC.1
Telephony Prov MTA IP	10.10.144.72 / 255.255.255.0
Telephony Prov CMS FQDN	L1: lilian.qostek.com
Hook Flash Time (Min/Max)	L1: 220 (ms) - 320 (ms)

Lines	Telephony Call Server Registration	Hook State
Line 1	● Disconnected	On-hook

Fig.2-31Status\Voice Status

Upstream

This page reports current CM's upstream information containing Transmitter #, Channel ID, Lock Status, Frequency, Modulation, Symbol Rate, Channel Type and Power. The information can be useful to your cable company's support technician if you're having problems.

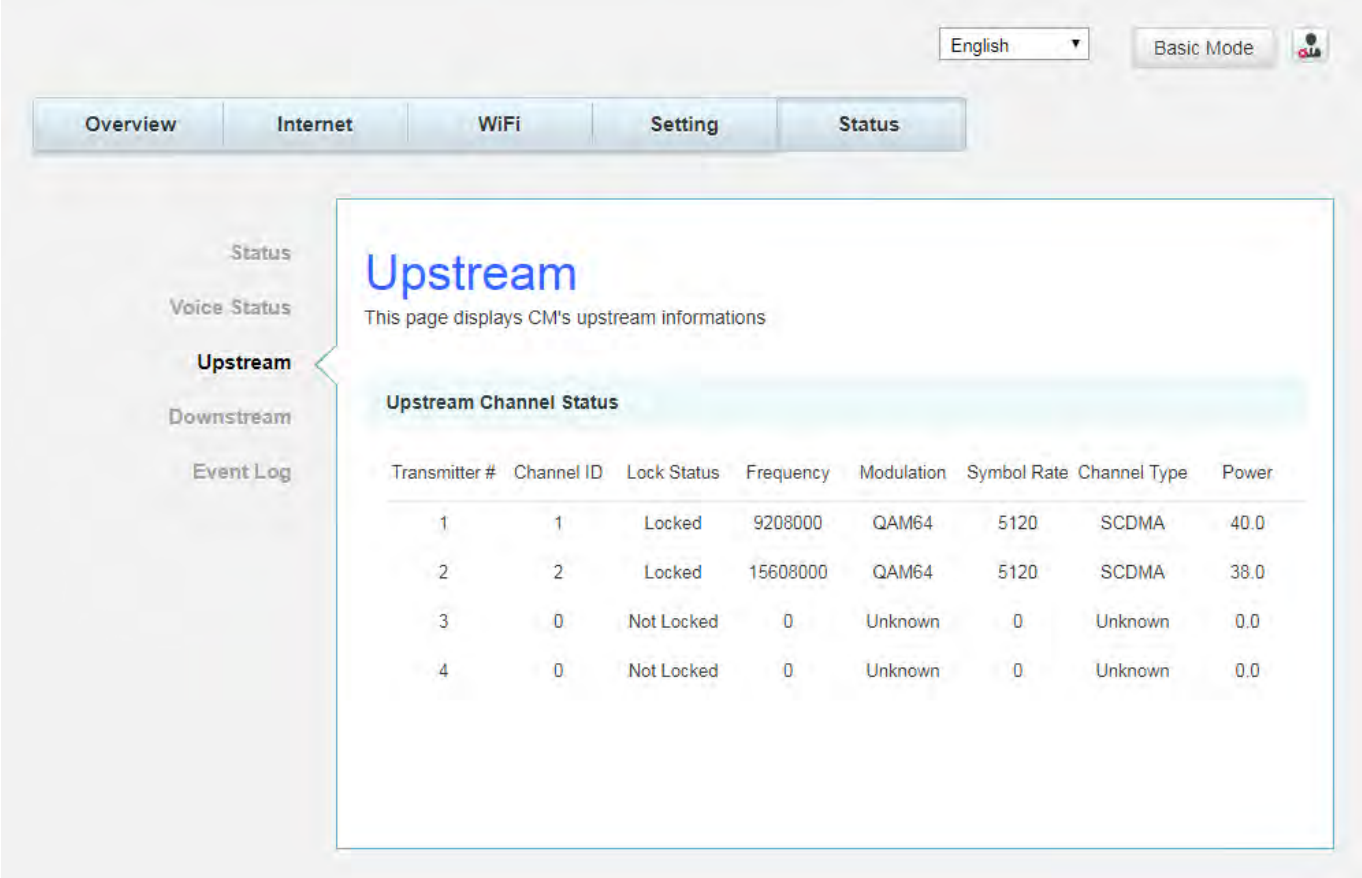


Fig.2-32 Status\Upstream

Downstream

This page reports current CM's downstream information containing Receiver #, Channel ID, Lock Status, Frequency, Modulation, SNR, and Power. The information can be useful to your cable company's support technician if you're having problems.

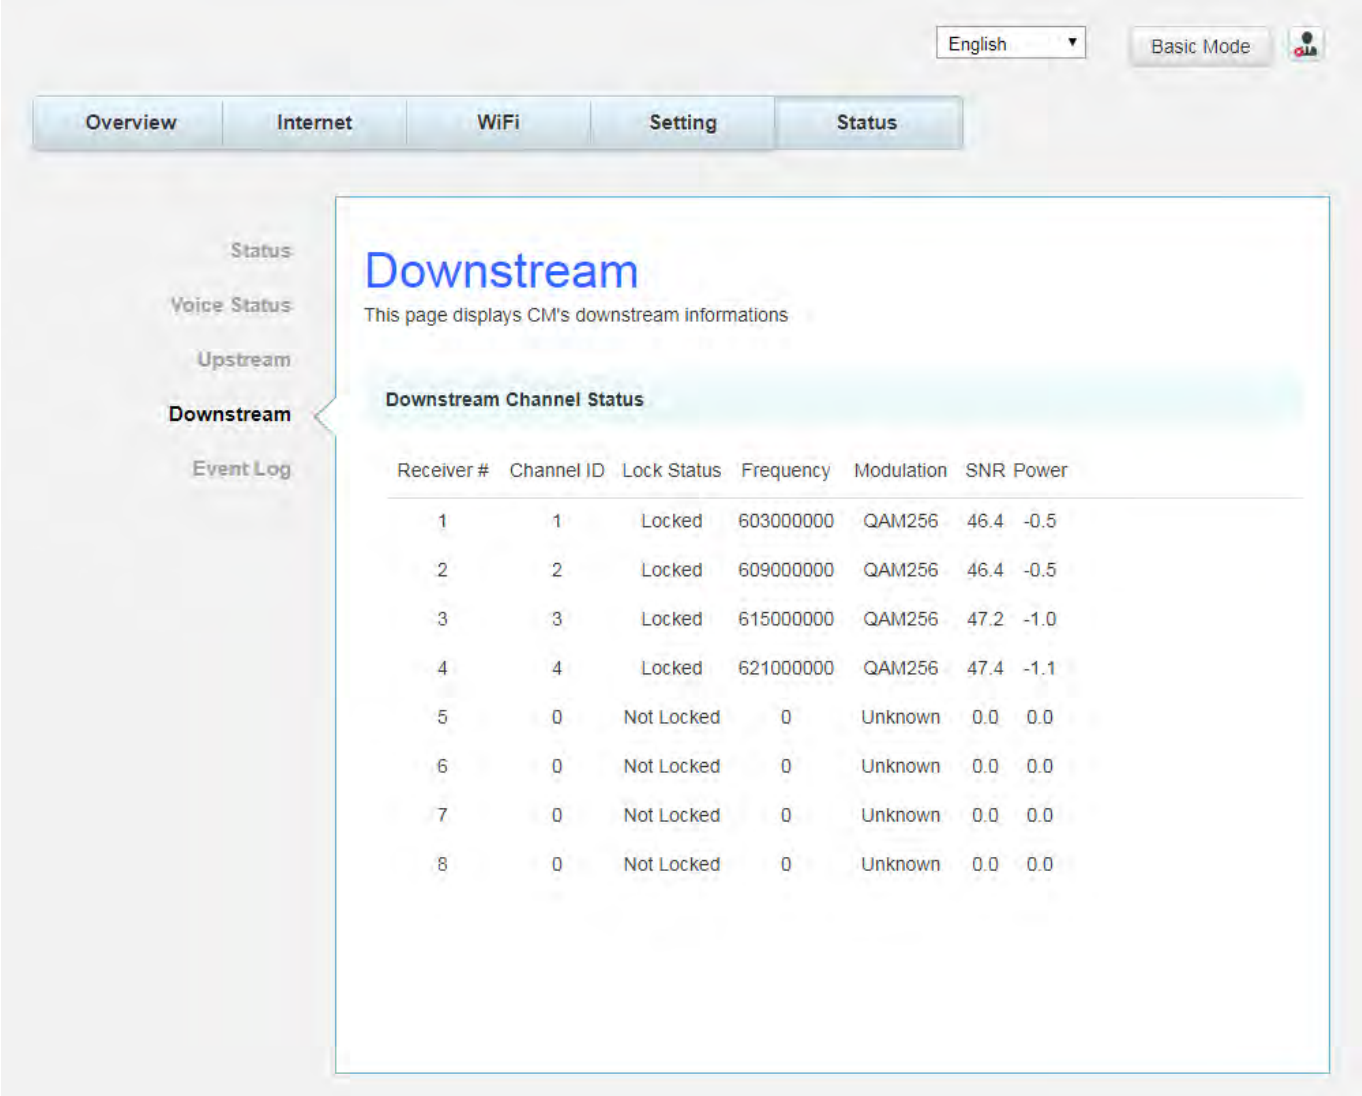


Fig.2-33 Status\Downstream

Event log

This page displays the contents of the modem's event log.

English

Basic Mode

Overview

Internet

WiFi

Setting

Status

Status

Voice Status

Upstream

Downstream

Event Log

SNMP Event Log

This page displays the contents of the modem's event log.

Date	Description
Mon Mar 19 15:56:15 2018	Resetting the cable modem due to console command
Time Not Established	Honoring MDD; IP provisioning mode = IPv4
Time Not Established	DHCP WARNING - Non-critical field invalid in response ;CM-MAC=00:90:00:11:11:03;CMTS-MAC=00:17:10:02:98:c7;CM-QOS=1.0;CM-VER=3.0;
Mon Mar 19 15:57:18 2018	REGISTRATION COMPLETE - Waiting for Operational status;CM-MAC=00:90:00:11:11:03;CMTS-MAC=00:17:10:02:98:c7;CM-QOS=1.1;CM-VER=3.0;
Mon Mar 19 15:57:21 2018	CM State is Operational;CM-MAC=00:90:00:11:11:03;CMTS-MAC=00:17:10:02:98:c7;CM-QOS=1.1;CM-VER=3.0;
Mon Mar 19 21:19:39 2018	Started Unicast Maintenance Ranging - No Response received - T3 time-out;CM-MAC=00:90:00:11:11:03;CMTS-MAC=00:17:10:02:98:c7;CM-QOS=1.1;CM-VER=3.0;
Tue Mar 20 10:21:26 2018	DHCP RENEW sent - No response for IPv4;CM-MAC=00:90:00:11:11:03;CMTS-MAC=00:17:10:02:98:c7;CM-QOS=1.1;CM-VER=3.0;
Tue Mar 20 10:21:41 2018	Honoring MDD; IP provisioning mode = IPv4
Tue Mar 20 10:21:43 2018	DHCP WARNING - Non-critical field invalid in response ;CM-MAC=00:90:00:11:11:03;CMTS-MAC=00:17:10:02:98:c7;CM-QOS=1.0;CM-VER=3.0;
Tue Mar 20 10:21:49 2018	REGISTRATION COMPLETE - Waiting for Operational status;CM-MAC=00:90:00:11:11:03;CMTS-MAC=00:17:10:02:98:c7;CM-QOS=1.1;CM-VER=3.0;
Tue Mar 20 10:21:52 2018	CM State is Operational;CM-MAC=00:90:00:11:11:03;CMTS-MAC=00:17:10:02:98:c7;CM-QOS=1.1;CM-VER=3.0;

Clear Log

Refresh

Fig.2-34 Status\Event log

CHAPTER 3: ADDITIONAL INFORMATION

Frequently Asked Questions

Q. How do I get the system installed?

- A. Installation from your cable provider is recommended. They will ensure proper cable connection to the modem and your computer. However, your retailer may have offered a self- installation kit, including the necessary software to communicate with your cable ISP.

Q. Once my Cable Modem is connected, how do I get access to the Internet?

- A. Your local cable company provides your internet service*, offering a wide range of services including email, chat, and news and information services, and a connection to the World Wide Web.

Q. What do you mean by "Broadband?"

- A. Simply put, it means you'll be getting information through a "bigger pipe," with more bandwidth, than a standard phone line can offer. A wider, "broader" band means more information, more quickly.

Q. What is DOCSIS and what does it mean?

- A. "Data over Cable Service Interface Specifications" is the industry standard that most cable companies are adopting as they upgrade their systems. Should you ever decide to move, the Cable Modem will work with all upgraded cable systems that are DOCSIS-compliant.

* Monthly subscription fee applies.

** Additional equipment required. Contact your Cable Company and ISP for any restrictions or additional fees.

General Troubleshooting

You can correct most problems you have with your product by consulting the troubleshooting list that follows.

I can't access the internet.

- Check all of the connections to your Cable Modem.
- Your Ethernet card may not be working. Check each product's documentation for more information.
- The Network Properties of your operating system may not be installed correctly or the settings may be incorrect. Check with your ISP or cable company.

I can't get the modem to establish an Ethernet connection.

- Even new computers don't always have Ethernet capabilities – be sure to verify that your computer has a properly installed Ethernet card and the driver software to support it.
- Check to see that you are using the right type of Ethernet cable.

The modem won't register a cable connection.

- If the modem is in Initialization Mode, the INTERNET light will be flashing. Call your Cable Company if it has not completed this 5-step process within 30 minutes, and note which step it is getting stuck on.
- The modem should work with a standard RG-6 coaxial cable, but if you're using a cable other than the one your Cable Company recommends, or if the terminal connections are loose, it may not work. Check with your Cable Company to determine whether you're using the correct cable.
- If you subscribe to video service over cable, the cable signal may not be reaching the modem. Confirm that good quality cable television pictures are available to the coaxial connector you are using by connecting a television to it. If your cable outlet is "dead", call your Cable Company.
- Verify that the Cable Modem service is DOCSIS compliant by calling your cable provider.

Service Information

If you purchased or leased your Cable Modem directly from your cable company, then warranty service for the Digital Cable Modem may be provided through your cable provider or its authorized representative. For information on 1) Ordering Service, 2) Obtaining Customer Support, or 3) Additional Service Information, please contact your cable company. If you purchased your Cable Modem from a retailer, see the enclosed warranty card.

Federal Communication Commission Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Operations in the 5.15-5.25GHzband are restricted to indoor usage only.

Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.