

Owner's Manual

RAPID[®] VAULT

With patented RFID technology.

Item No. 97432



Instructional videos for Hornady Security[®]
products are available at hornady.com.



READ THIS FIRST

Warning: **NEVER** store a loaded firearm in a Hornady Security® RAPiD® Safe under any circumstances. The risks associated with storage of a loaded firearm include, but are not limited to, unintentional discharge upon insertion or removal of the firearm. Unintentional discharge may result in bullet and safe fragments dispersing in multiple directions, which may cause serious injury or death. Hornady Security® is not liable for any misuse of the RAPiD® Safe.

Warning: No safe is entirely secure. The RAPiD® Safe is only as secure as your maintenance of the keys, code and RFID tags. You are solely responsible for maintaining your keys, code and RFID tags. Keep your keys and RFID tags in a secure location at all times. Store your RAPiD® Safe in a secure location away from your keys and RFID tags. Hornady Security® is not liable for unauthorized access, including damage to, or loss of property, or personal injury. Again, **NEVER** store a loaded firearm in your Hornady® RAPiD® Safe, as this may result in unauthorized access to the loaded firearm.

Warning: Except as expressly provided in the RAPiD® Safe Limited Warranty, Hornady Security® is not liable for any expense or damage associated with your inability to open the RAPiD® Safe. Electronic systems may fail. Verify that the keys furnished operate the lock. Keep your keys in a secure location at all times. For your security, Hornady Security® **WILL NOT** send replacement keys.

Warning: Hornady Security® is not liable for any loss, theft, or damage to personal property. The RAPiD® Safe is not intended to protect the contents from fire, water, humidity, or other environmental conditions. Do not, under any circumstances, return the RAPiD® Safe to Hornady Security® with any personal property inside.

Important Information

- **RFID Tag** refers to the chip in any of the RFID “keys” included with the RAPiD® Safe (RFID watchband tag, key fob or decals). You may also purchase additional RFID tags.
- **For trouble-free operation of your RAPiD® Safe, please read and understand all instructions before use.**
- **Questions? Call our tech line at 800-338-3220.**
- **Never store loaded firearms in the RAPiD® Safe. Follow local laws for firearm storage.**

Table of Contents

Warnings and Important Information	Page 1
Items Included	Page 2
Setup and Operation.....	Page 3
Securing Your Safe	Page 5
Frequently Asked Questions.....	Page 5
Warranty	Page 6
Product Registration and Service	Page 7

Items included with your RAPiD® Safe

1. RAPiD® Vault
2. One (1) RFID Watchband Tag (No. 98159)
3. One (1) RFID Adhesive Decal (No. 98168)
4. Two (2) Circular Barrel Keys



RAPiD® Vault

Item No: 97432

Exterior: 12.0"W x 8.3"D x 2.6"H

Interior: 11.5"W x 6.0"D x 2.4"H

Weight: 5.5 lbs.

Input Power: Four (4) AA batteries
(not included)

Not Pictured:

- Owner's Manual
- Warranty Card

U.S. Patent No. 9,530,266
U.S. Patent No. 10,233,687

RAPiD® Safe Setup and Operation

To achieve the best experience with your RAPiD® Safe, please read all instructions carefully, and understand its operation before securing valuables inside the safe.

Open Safe with Key

Before setting up your safe please verify both circular barrel keys fit and unlock your safe. Contact Hornady® at 800-338-3220 if the keys do not work. Store keys in a secure location outside the safe.

Batteries

Open the safe with the mechanical override key. Remove the battery cover inside the door. Insert 4 AA batteries and replace the battery cover. Do not close the door before testing digital lock.

NOTE: Replace all batteries at the same time.

Low Battery Warning

To check the battery level, press any button to illuminate the keypad. If the battery level is lower than 25%, the keypad will illuminate yellow. The batteries should be replaced immediately to ensure proper functioning.

How to Program Your RFID Tags

Your RAPiD® Safe includes two (2) styles of RFID tags, including one Watchband Tag and one Decal

**Additional styles can be purchased separately.*


The RAPiD® Safe can store up to five tags.

To program these tags:

1. Open the RAPiD® Safe with the key, a previously programmed RFID tag or key code. The safe does not ship with pre-programmed RFID tags. A RFID tag must be programmed to work with this safe.
2. Locate the program button inside the safe near. Press and release the button to begin programming a RFID tag. The internal light will blink during program mode.
3. **Hold the RFID tag within 1-inch** of the RFID reader area on the keypad front. If the programming was successful, the safe should blink and beep two times.

NOTE: If the user attempts to program a RFID tag that is already stored in the safe, it will beep three times and exit program mode.

4. Verify the RFID tag is programmed by holding the tag over the RFID reader with the door open. The motor should cycle after each scan.

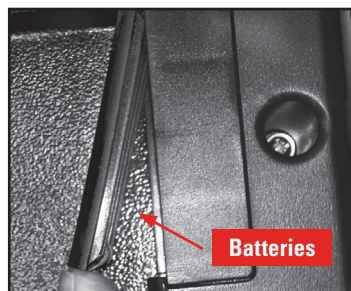

5. If the RFID tag is not programmed, the program function will time out after ten seconds and the safe will return to normal operation. If multiple attempts to program a RFID tag fail, please contact Hornady® at 800-338-3220.
6. One to five RFID tags can be programmed into the safe.

NOTE: Due to potential interference from the body (attenuation), the RFID watchband tag should be worn on the outside or bottom of the wrist and may need to be brought within 1-inch of the reader to activate the safe. The RFID reader will likely not read through the wrist.

NOTE: The RFID decal can be placed on a variety of objects. However, metal surfaces may cause interference and reduce the read distance. The integrated metal housing on some cell phones combined with potential interference from other wireless signals such as Bluetooth, NFC, etc., may reduce the read distance of the RFID decal.

Before adhering the RFID decal to a mobile phone, we recommend trying different locations on the back of the device to find the optimum read distance. Placing the decal on the outside of an accessory cover will improve the read distance, but may result in excessive wear and shorten the life of the decal. When placing the decal on the inside of an accessory cover, DO NOT face it toward the mobile phone. The decal must face outward (away from the phone) to work optimally.

Before placing the RAPId Safe into service, verify the decal works properly under various conditions (i.e. the wireless apps on your mobile phone are on).

How to Program Your Key Code

A single user-defined 4 to 6 digit code can be entered into the RAPId® Safe..

1. Open the RAPId Safe with either the key, a previously programmed RFID tag, or key code. The safe ships with a default code and should be reprogrammed before first use.
2. Locate the program button inside the safe to begin programming your key code. Press and release the program button to begin the program mode.
3. Enter a 4 to 6 digit code on the keypad. Press the program button after entering your code to confirm. Verify your code is correct by reentering your code and waiting for the motor to cycle.
4. Your key code can now be used to open the safe.

NOTE: Only one key code can be entered into the safe. If a second code is entered, it will override the previous code. ****A total of five RFID tags and one key code can be entered into the safe.**



How to Remove All Tags From Safe

Open the RAPiD® Safe with either the key, a previously programmed RFID tag, or key code. Locate the program button. Press and hold the button for five seconds to erase all previously programmed tags. The interior light will rapidly blink.

NOTE: *The safe does not allow individual tags to be removed. They must all be erased at one time. The intended RFID tags can then be reprogrammed with the “How to Program Your RFID Tags” section.*

NOTE: *To abort the erase procedure, do not touch anything and the erase procedure will automatically abort after 10 seconds and return to normal operation. Test RFID tags and the key code to confirm they are operational.*

To confirm erasing procedure, press and release the program button again. The interior light will blink three times to visually confirm all RFID tags have been removed. The RFID tags will no longer work until they are reprogrammed according to the instructions in the “How to Program Your RFID Tags” section.

Keypad Tones On/Off

To toggle sound on and off, press and hold the “1” button on keypad for 3 seconds until the light turns off.

Securing Your Safe

To maintain the security of the safe, bolt the safe to a secure structure.

Record the serial number and key number in the space provided in this user manual before securing the safe.

Bolting Down the Safe

- Open the safe and remove the foam liner from the bottom of the safe.
- Mark and pre-drill holes before installing the appropriate fasteners for your application.
- Reinstall foam liner.

Frequently Asked Questions

I've lost my keys. Can I get a replacement?

Contact Hornady Security® at 800-338-3220 and one of our technicians will assist you. Have the safe serial number and key number found on the face of the lock available so the correct key can be matched to your safe.

Where can I find the serial number?

The serial number is located on the bottom of the safe. Prior to mounting the safe, record the serial number for future reference.

How long should the batteries last?

Quality batteries should last approximately 12 months, depending on use.

How do I return my RAPiD® Safe for warranty work?

Call Hornady® at 800-338-3220 and one of our technicians will assist you.

Why isn't my RFID watchband tag, key fob, or decals opening the safe?

- Be sure the RFID tag is programmed to your safe. The RAPiD® Safe allows five (5) RFID tags to be programmed for use.
- Check batteries and replace all batteries with new quality batteries.

RAPiD® Safe Limited Warranty

Hornady Security® warrants the RAPiD® Safe will, in normal use and service, be free from defects in workmanship or materials for one (1) year from date of purchase.

This Limited Warranty does not cover any of the following:

- (a) Damage, deterioration, or malfunction resulting from accident, negligence, misuse, improper installation, or lack of maintenance;
- (b) Any defects not discovered and reported to Hornady Security® during the one (1) year warranty period;
- (c) Usual and customary deterioration or wear resulting from normal use.

This Limited Warranty is not transferable and is enforceable by the original owner only. In the event that Hornady Security® receives notice from the original purchase of a warranty claim in conformity herewith, Hornady Security® will promptly undertake an investigation of such claim. If the warranty claim is covered by the Limited Warranty, Hornady Security® will, in its sole discretion, repair the defect(s) or replace RAPiD® Safe at the expense of Hornady Security®.

Disclaimer of Implied Warranties. EXCEPT AS IS OTHERWISE EXPRESSLY SET FORTH IN THE ABOVE LIMITED WARRANTY, HORNADY SECURITY® MAKES NO OTHER REPRESENTATIONS OR WARRANTIES OF ANY KIND, WHETHER EXPRESSED OR IMPLIED, BY OPERATION OF LAW OR OTHERWISE WITH RESPECT TO THE KEYPAD SAFE OR ANY COMPONENT PART THEREOF, INCLUDING WITHOUT LIMITATION ANY REPRESENTATION OR WARRANTY WITH RESPECT TO MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE OR USE.

Limitation on Liability. THE OBLIGATION OF HORNADY SECURITY® TO REPAIR OR REPLACE AS PROVIDED ABOVE SHALL BE THE SOLE AND ONLY REMEDY RESPECTING ANY DEFECT IN THE KEYPAD SAFE, OR ANY COMPONENT PART THEREOF. IN THE EVENT THAT THE FOREGOING REMEDY FAILS OF ITS ESSENTIAL PURPOSE, THE LIABILITY OF HORNADY SECURITY® TO PURCHASER SHALL NOT, IN ANY EVENT, EXCEED THE ACTUAL PURCHASE PRICE OF THE NON-CONFORMING GOODS; AND

Limitation on the Nature of Damages. HORNADY SECURITY® SHALL NOT, UNDER ANY CIRCUMSTANCES, BE LIABLE TO THE PURCHASER OR ANY THIRD PARTY FOR ANY SPECIAL, INDIRECT, INCIDENTAL, CONSEQUENTIAL, LIQUIDATED OR PUNITIVE DAMAGES OF ANY NAME, NATURE OR DESCRIPTION. HORNADY SECURITY® IS NOT RESPONSIBLE FOR DAMAGE TO OR THEFT OF THE KEYPAD SAFE, OR ITS CONTENTS.

Product Registration and Service

You must register your product to obtain Warranty Service. Complete the registration form at hornady.com/warranties.

To Receive Warranty Service

To report a warranty claim, call Hornady® at 800-338-3220 to request a return authorization number. Returns will not be accepted without prior return authorization by Hornady®. When a return authorization number has been obtained, be sure all contents have been removed from the RAPID® Safe before sending it for service. Hornady® is not liable for any loss, theft, or damage to personal property.

Post-Warranty Service Information

For issues concerning service after the Limited Warranty expires, contact Hornady® at 800-338-3220.



Scan to register your product to receive the full benefit of its warranty.

Product Serial Number and Key Number Reference

You must register your RAPID® Safe in order to obtain warranty service. In the event you should need service for your product, please note the following information:

Serial Number _____

(see the back or bottom of safe)

Key Number _____

(see the face of the lock)

After recording the information, store user manual and spare keys in a secure location outside the safe.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.



P.O. Box 1848, Grand Island, Nebraska 68802-1848

hornady.com/contact