



Nokia BBD Release 20.03a

Nokia FastMile 4G Receiver Product Overview

3TG-01505-AAAB-TCZZA

Issue: 01

November 2020

Nokia — Proprietary and confidential
Use pursuant to applicable agreements

Nokia is committed to diversity and inclusion. We are continuously reviewing our customer documentation and consulting with standards bodies to ensure that terminology is inclusive and aligned with the industry. Our future customer documentation will be updated accordingly.

Nokia is a registered trademark of Nokia Corporation. Other products and company names mentioned herein may be trademarks or tradenames of their respective owners.

The information presented is subject to change without notice. No responsibility is assumed for inaccuracies contained herein.

© 2020 Nokia.

Contains proprietary/trade secret information which is the property of Nokia and must not be made available to, or copied or used by anyone outside Nokia without its written authorization. Not to be used or disclosed except in accordance with applicable agreements.

1 Preface

This preface provides general information about the Product Overview for the Nokia FastMile 4G Receiver.

1.1 Summary of document issue changes

Changes between document issues are cumulative. Therefore, the latest document issue contains all changes made to previous issues.

Issue 01: first issue of the document for this release of the FastMile 4G Receiver

1.2 Scope

This document provides an overview of the Nokia FastMile 4G Receiver along with information about safety and troubleshooting the Nokia FastMile 4G Receiver.

1.3 Audience

This document is intended for planners, administrators, operators, and maintenance personnel involved in installing, upgrading, or maintaining the Nokia FastMile 4G Receiver.

1.4 Required knowledge

The reader must be familiar with general telecommunications principles.

1.5 Acronyms and initialisms

The expansions and optional descriptions of most acronyms and initialisms used in this document appear in the glossary at the back of the document.

1.6 Assistance and ordering phone numbers

Nokia provides global technical support through the following URL:
<https://customer.nokia.com/support/s/>.

For ordering information, contact your Nokia sales representative.

1.7 Nokia quality processes

Nokia's FastMile 4G Receiver quality practices are in compliance with TL 9000 requirements. These requirements are documented in the Fixed Networks Quality Manual 3FQ-30146-6000-QRZZA. The quality practices adequately ensure that technical requirements and customer end-point requirements are met. The customer or its representatives may be allowed to perform on-site quality surveillance audits, as agreed upon during contract negotiations.

1.8 Safety information

For safety information, see the appropriate safety guideline chapters.

1.9 Documents

Documents are available at the Nokia Documentation Center.

Procedure 1 To access a document on the Nokia Documentation Center

Individual PDFs of customer documents are accessible through the Nokia Documentation Center.

-
- 1 Go to <https://documentation.nokia.com>
Log in as required.

 - 2 Enter FastMile 4G Receiver in the Product box.

 - 3 Select the search criteria as needed (Release, Content Type, Sort by, etc.) and Click on Search.

 - 4 Click on the PDF icon to access a document.
-

1.10 Special information

The following are examples of how special information is presented in this document.



Danger — Danger indicates that the described activity or situation may result in serious personal injury or death; for example, high voltage or electric shock hazards.



Warning — Warning indicates that the described activity or situation may, or will, cause equipment damage or serious performance problems.



Caution — Caution indicates that the described activity or situation may, or will, cause service interruption.



Note — A note provides information that is, or may be, of special interest.

1.10.1 Steps with options or substeps

When there are options in a step, they are identified by letters. When there are required substeps in a step, they are identified by roman numerals.

Procedure 2 Example of options in a step

At step 1, you must choose option a or b.

1 This step offers two options. You must choose one of the following:

- a** This is one option.
- b** This is another option.

2 You must perform this step.

Procedure 3 Example of required substeps in a step

At step 1, you must perform a series of substeps within the step.

-
- | | |
|-----|---|
| 1 | This step has a series of substeps that you must perform to complete the step. You must perform the following substeps: |
| i | This is the first substep. |
| ii | This is the second substep. |
| iii | This is the third substep. |
-
- | | |
|---|-----------------------------|
| 2 | You must perform this step. |
|---|-----------------------------|
-

1.11 Multiple PDF document search

You can use Adobe Reader Release 6.0 and later to search multiple PDF files for a common term. Adobe Reader displays the results in a single display panel. The results are grouped by PDF file, and you can expand the entry for each file.



Note — The PDF files in which you search must be in the same folder.

Procedure 4 To search multiple PDF files for a common term

-
- | | |
|---|----------------------------|
| 1 | Open Adobe Acrobat Reader. |
|---|----------------------------|
-
- | | |
|---|---|
| 2 | Choose Edit→Search from the Acrobat Reader main menu. The Search PDF panel appears. |
|---|---|
-
- | | |
|---|----------------------------|
| 3 | Enter the search criteria. |
|---|----------------------------|
-
- | | |
|---|---|
| 4 | Click on the All PDF Documents In radio button. |
|---|---|
-
- | | |
|---|--|
| 5 | Select the folder in which to search using the drop-down menu. |
|---|--|
-
- | | |
|---|-----------------------------|
| 6 | Click on the Search button. |
|---|-----------------------------|
-

Acrobat Reader displays the search results. You can expand the entries for each document by clicking on the + symbol.

Table of contents

| | | |
|----------|---|-----------|
| 1 | Preface | 3 |
| 1.1 | Summary of document issue changes | 3 |
| 1.2 | Scope | 3 |
| 1.3 | Audience..... | 3 |
| 1.4 | Required knowledge..... | 3 |
| 1.5 | Acronyms and initialisms | 3 |
| 1.6 | Assistance and ordering phone numbers | 3 |
| 1.7 | Nokia quality processes..... | 4 |
| 1.8 | Safety information..... | 4 |
| 1.9 | Documents | 4 |
| 1.10 | Special information | 5 |
| 1.10.1 | Steps with options or substeps..... | 5 |
| 1.11 | Multiple PDF document search | 6 |
| 2 | ETSI environmental and CRoHS guidelines..... | 19 |
| 2.1 | Environmental labels | 19 |
| 2.1.1 | Overview..... | 19 |
| 2.1.2 | Environmental related labels | 19 |
| 2.1.2.1 | Products below Maximum Concentration Value (MCV) label..... | 19 |
| 2.1.2.2 | Products containing hazardous substances above Maximum Concentration Value (MCV) label | 20 |
| 2.2 | Hazardous Substances Table (HST)..... | 21 |
| 2.3 | Other environmental requirements | 21 |
| 2.3.1 | Environmental requirements..... | 22 |
| 2.3.2 | Storage | 22 |
| 2.3.3 | Transportation | 22 |
| 2.3.4 | Stationary use..... | 22 |
| 2.3.5 | Thermal limitations | 22 |
| 2.3.6 | Material content compliance..... | 23 |
| 2.3.7 | End-of-life collection and treatment | 23 |
| 2.4 | Additional information | 24 |
| 3 | ETSI safety guidelines..... | 25 |
| 3.1 | Safety instructions | 25 |
| 3.1.1 | Safety instruction boxes | 25 |
| 3.1.2 | Safety-related labels..... | 26 |
| 3.2 | Safety standards compliance | 26 |
| 3.2.1 | EMC compliance | 27 |
| 3.2.2 | Equipment safety standard compliance..... | 27 |
| 3.2.3 | Environmental standard compliance | 27 |
| 3.2.4 | Laser product standard compliance | 27 |
| 3.3 | Electrical safety guidelines | 28 |
| 3.3.1 | Power supplies | 28 |
| 3.3.2 | Cabling | 28 |
| 3.3.3 | Protective earth | 28 |
| 3.4 | ESD safety guidelines | 29 |

| | | |
|-----------|--|-----------|
| 3.5 | Environmental requirements..... | 29 |
| 3.6 | Additional information | 29 |
| 4 | ANSI safety guidelines | 31 |
| 4.1 | Safety instructions | 31 |
| 4.1.1 | Safety instruction boxes in customer documentation | 31 |
| 4.1.2 | Safety-related labels..... | 32 |
| 4.2 | Safety standards compliance | 33 |
| 4.2.1 | EMC, EMI, and ESD compliance..... | 34 |
| 4.2.2 | Equipment safety standard compliance..... | 34 |
| 4.3 | Electrical safety guidelines | 35 |
| 4.3.1 | Power supplies | 35 |
| 4.3.2 | Cabling | 35 |
| 4.3.3 | Protective earth | 35 |
| 4.4 | ESD safety guidelines | 36 |
| 4.5 | Environmental requirements..... | 36 |
| 4.6 | Additional information | 36 |
| 5 | Product overview | 37 |
| 5.1 | Overview of the Nokia FastMile 4G Receiver..... | 37 |
| 5.2 | End-to-end example | 39 |
| 5.3 | Installing the Nokia FastMile 4G Receiver..... | 40 |
| 6 | Functional overview | 41 |
| 6.1 | Overview..... | 41 |
| 6.1.1 | Nokia Wireless app..... | 41 |
| 6.1.2 | Web UI..... | 42 |
| 6.1.3 | Remote management..... | 43 |
| 6.2 | LTE characteristics | 43 |
| 6.3 | Data forwarding | 44 |
| 6.4 | Ethernet characteristics | 44 |
| 6.5 | Power supply characteristics | 45 |
| 6.6 | Remote management protocols | 45 |
| 7 | Model overview | 49 |
| 7.1 | Models of the Nokia FastMile 4G Receiver | 49 |
| 7.1.1 | Label information | 51 |
| 8 | Physical interfaces | 53 |
| 8.1 | Physical interfaces of the Compact mono-band and ABA models | 53 |
| 8.2 | Physical interfaces of the Compact multi-band models..... | 54 |
| 8.3 | Physical interfaces of the High gain CBRS model..... | 57 |
| 9 | SIM cards | 61 |
| 9.1 | SIM card information for the Compact mono-band and ABA models..... | 61 |
| 9.2 | SIM card information for the Compact multi-band models | 62 |
| 9.3 | SIM card information for the High gain CBRS model | 62 |
| 10 | LEDs..... | 65 |
| 10.1 | Status LED | 65 |
| 10.2 | Signal strength LEDs | 67 |
| 10.2.1 | Signal strength LEDs on the Compact multi-band models | 67 |
| 10.2.2 | Signal strength LEDs on the High gain CBRS model..... | 69 |

| | | |
|-----------|--|------------|
| 11 | Power information | 71 |
| 11.1 | Power information for the Nokia FastMile 4G Receiver | 71 |
| 11.2 | Available PoE injectors..... | 71 |
| 12 | Performance information | 75 |
| 12.1 | Performance overview..... | 75 |
| 12.2 | Throughput information | 75 |
| 12.3 | Carrier aggregation information..... | 76 |
| 12.4 | Power consumption information | 91 |
| 13 | Management using the Nokia Wireless app | 93 |
| 13.1 | Using the Nokia Wireless app to manage the Nokia FastMile 4G Receiver | 93 |
| 13.2 | Using the Nokia Wireless app to manage a unit managed by the Nokia Altiplano FastMile Controller | 96 |
| 13.3 | Using the Nokia Wireless app to manage a unit managed by an ACS | 114 |
| 14 | Management using the Web UI..... | 135 |
| 14.1 | Using the Web UI to manage the Nokia FastMile 4G Receiver..... | 135 |
| 14.2 | Using the Web UI status screen | 136 |
| 14.3 | Using the Web UI network screen | 142 |
| 14.4 | Using the Web UI CBRS screen..... | 151 |
| 14.5 | Using the Web UI system screen | 152 |
| 15 | Standards certification | 159 |
| 15.1 | Standards certification for the Nokia FastMile 4G Receiver | 159 |
| 16 | Appendix A: Specifications | 161 |
| 16.1 | Specifications | 161 |
| 17 | Appendix B: RF exposure | 163 |
| 17.1 | RF exposure | 163 |
| 18 | Appendix C: FCC statements and label instructions | 165 |
| 18.1 | FCC compliance statement | 165 |
| 18.2 | FCC radiation exposure statement..... | 165 |
| 18.3 | FCC label instructions | 166 |
| 19 | Glossary | 167 |

List of figures

| | | |
|-----------|---|-----------|
| 2 | ETSI environmental and CRoHS guidelines..... | 19 |
| Figure 1 | Products below MCV value label..... | 20 |
| Figure 2 | Products above MCV value label | 21 |
| Figure 3 | Recycling/take back/disposal of product symbol | 23 |
| 4 | ANSI safety guidelines | 31 |
| Figure 4 | Sample safety label for FCC..... | 33 |
| Figure 5 | Sample safety label for ETL | 33 |
| 5 | Product overview | 37 |
| Figure 6 | Application example of the Nokia FastMile 4G Receiver..... | 38 |
| Figure 7 | Examples of model types of the Nokia FastMile 4G Receiver..... | 39 |
| Figure 8 | End-to-end example featuring the Nokia FastMile 4G Receiver with a residential gateway and PoE injector | 40 |
| 6 | Functional overview | 41 |
| Figure 9 | Remote management of the Nokia FastMile 4G Receiver through the Nokia Altiplano FastMile Controller | 46 |
| Figure 10 | Remote management of the Nokia FastMile 4G Receiver through an ACS | 47 |
| 8 | Physical interfaces | 53 |
| Figure 11 | Location of physical interfaces on the Compact mono-band and ABA models of the Nokia FastMile 4G Receiver | 54 |
| Figure 12 | Location of the ground point for the Compact multi-band models of the Nokia FastMile 4G Receiver..... | 56 |
| Figure 13 | Location of physical interfaces on the underside of the Compact multi-band models of the Nokia FastMile 4G Receiver | 56 |
| Figure 14 | Location of the ground point for High gain CBRS model of the Nokia FastMile 4G Receiver..... | 58 |
| Figure 15 | Location of physical interfaces on the underside of the High gain CBRS model type of the Nokia FastMile 4G Receiver | 59 |
| 9 | SIM cards | 61 |
| Figure 16 | Detailed view of SIM card slot on the Compact mono-band and ABA models..... | 61 |
| Figure 17 | Detailed view of SIM card slot on the Compact multi-band models | 62 |
| Figure 18 | Detailed view of SIM card slot on the High gain CBRS model | 63 |
| 10 | LEDs..... | 65 |
| Figure 19 | Location of the status LED on the Compact mono-band and ABA models of the Nokia FastMile 4G Receiver | 65 |
| Figure 20 | Location of the status LED on the Compact multi-band models of the Nokia FastMile 4G Receiver..... | 65 |
| Figure 21 | Location of the status LED on the High gain CBRS model of the Nokia FastMile 4G Receiver..... | 66 |
| Figure 22 | Location of the signal strength LEDs on the Compact multi-band models..... | 67 |

| | | |
|-----------|--|-----------|
| Figure 23 | Location of the measurement button on the Compact multi-band models | 68 |
| Figure 24 | Location of the signal strength LEDs on the High gain CBRS model | 69 |
| Figure 25 | Location of the measurement button on the High gain CBRS model | 69 |
| 11 | Power information | 71 |
| Figure 26 | PoE injectors available from Nokia | 74 |
| 13 | Management using the Nokia Wireless app | 93 |
| Figure 27 | Before we begin screen | 94 |
| Figure 28 | Terms of Service screen | 95 |
| Figure 29 | Introductory screen for unit managed by the Nokia Altiplano FastMile Controller through NETCONF | 97 |
| Figure 30 | Screen with prompt to scan the QR code for unit managed by the Nokia Altiplano FastMile Controller through NETCONF | 98 |
| Figure 31 | QR code screen for unit managed by the Nokia Altiplano FastMile Controller through NETCONF | 99 |
| Figure 32 | Screen showing the Already Installed option for unit managed by the Nokia Altiplano FastMile Controller through NETCONF | 100 |
| Figure 33 | Screen for connecting to the Nokia FastMile 4G Receiver | 101 |
| Figure 34 | Screen for enabling the VPN profile | 102 |
| Figure 35 | Prompt for accepting the connection request | 103 |
| Figure 36 | Screen to log in to a Nokia FastMile 4G Receiver managed by the Nokia Altiplano FastMile Controller | 104 |
| Figure 37 | System state screen example for a Nokia FastMile 4G Receiver managed by the Nokia Altiplano FastMile Controller | 106 |
| Figure 38 | System state screen with Beam Angle information for a Nokia FastMile 4G Receiver managed by the Nokia Altiplano FastMile Controller . | 107 |
| Figure 39 | Screen that has the “Upload CA certificates” option for a Nokia FastMile 4G Receiver managed by the Nokia Altiplano FastMile Controller . | 108 |
| Figure 40 | Screen that lists the CA certificates for a Nokia FastMile 4G Receiver managed by the Nokia Altiplano FastMile Controller | 109 |
| Figure 41 | Screen indicating that uploading of the CA certificates was successful for a Nokia FastMile 4G Receiver managed by the Nokia Altiplano FastMile Controller | 110 |
| Figure 42 | Screen showing the “Reboot Device” option for a Nokia FastMile 4G Receiver managed by the Nokia Altiplano FastMile Controller | 111 |
| Figure 43 | Screen showing the reboot message for a Nokia FastMile 4G Receiver managed by the Nokia Altiplano FastMile Controller | 112 |
| Figure 44 | Screen showing the “Perform Factory Reset” option for a Nokia FastMile 4G Receiver managed by the Nokia Altiplano FastMile Controller . | 113 |
| Figure 45 | Screen showing the factory reset message for a Nokia FastMile 4G Receiver managed by the Nokia Altiplano FastMile Controller | 114 |
| Figure 46 | Introductory screen for unit managed by an ACS through TR-069 | 116 |
| Figure 47 | Screen with prompt to scan the QR code for unit managed by an ACS through TR-069 | 117 |
| Figure 48 | QR code screen for unit managed by an ACS through TR-069 | 118 |

| | | |
|-----------|--|------------|
| Figure 49 | Screen showing the Already Installed option for unit managed by an ACS through TR-069 | 119 |
| Figure 50 | Screen for connecting to the Nokia FastMile 4G Receiver | 120 |
| Figure 51 | Screen for enabling the VPN profile | 121 |
| Figure 52 | Prompt for accepting the connection request | 122 |
| Figure 53 | Screen to log in to a Nokia FastMile 4G Receiver managed by an ACS through TR-069 | 123 |
| Figure 54 | System state screen example for a Nokia FastMile 4G Receiver managed by an ACS through TR-069 | 125 |
| Figure 55 | System state screen with Beam Angle information for a Nokia FastMile 4G Receiver managed by an ACS through TR-069 | 126 |
| Figure 56 | Screen that has the "Upload CA certificates" option for a Nokia FastMile 4G Receiver managed by an ACS through TR-069 | 127 |
| Figure 57 | Upload CA Certificates screen for a Nokia FastMile 4G Receiver managed by an ACS through TR-069 | 128 |
| Figure 58 | List of CA certificates displayed on the Upload CA Certificates screen for a Nokia FastMile 4G Receiver managed by an ACS through TR-069 | 129 |
| Figure 59 | Screen showing that upload of CA certificates was successful for a Nokia FastMile 4G Receiver managed by an ACS through TR-069 | 131 |
| Figure 60 | Screen showing the "Reboot Device" option for a Nokia FastMile 4G Receiver managed by an ACS through TR-069 | 132 |
| Figure 61 | Screen showing the "Perform Factory Reset" option for a Nokia FastMile 4G Receiver managed by ACS through TR-069 | 133 |
| Figure 62 | Screen showing the factory reset message for a Nokia FastMile 4G Receiver managed by ACS through TR-069 | 134 |
| 14 | Management using the Web UI | 135 |
| Figure 63 | Example of the top part of the Status screen when the FastMile 4G Receiver is not connected to a cell | 137 |
| Figure 64 | Example of the lower part of the Status screen without available cells when the FastMile 4G Receiver is not connected to a cell | 138 |
| Figure 65 | Example of the lower part of the Status screen with available cells when the FastMile 4G Receiver is not connected to a cell | 138 |
| Figure 66 | Example of the top part of the Status screen when the FastMile 4G Receiver is connected to a cell | 139 |
| Figure 67 | Example of a lower part of the Status screen when the FastMile 4G Receiver is connected to a cell | 139 |
| Figure 68 | Example of the Trigger Measurement pop up window | 140 |
| Figure 69 | Example of ongoing Trigger Measurement | 140 |
| Figure 70 | Example of Trigger Measurement completed and FastMile 4G Receiver is detached | 141 |
| Figure 71 | Example of Trigger Measurement completed and FastMile 4G Receiver is reattached | 141 |
| Figure 72 | Example of the lowest part of the Status screen when the FastMile 4G Receiver is connected to a cell | 141 |
| Figure 73 | Example of the Login screen | 143 |
| Figure 74 | Example of the Network screen | 144 |
| Figure 75 | Example of scroll down for the Network screen | 144 |
| Figure 76 | Example of the Add Access Point window | 145 |

| | | |
|-----------|---|-----|
| Figure 77 | Example of the Delete Access Point window | 146 |
| Figure 78 | Example of the Edit Location window | 147 |
| Figure 79 | Example of the Edit Controller window | 147 |
| Figure 80 | Example of the Edit Connection Request window | 148 |
| Figure 81 | Example of the Edit DHCP window | 149 |
| Figure 82 | Example of the Certificates information window | 150 |
| Figure 83 | Example of the Add Cell window | 150 |
| Figure 84 | Example of the Delete Cell window | 151 |
| Figure 85 | Example of the Web UI CBRS screen with no CBSD Grants | 152 |
| Figure 86 | Example of the Web UI CBRS screen with three CBSD Grants | 152 |
| Figure 87 | Example of the System screen | 153 |
| Figure 88 | Example of the Restart Device confirmation window | 154 |
| Figure 89 | Example of the Restore Device confirmation window | 155 |
| Figure 90 | Example of the screen that displays while firmware is being uploaded | 156 |
| Figure 91 | Example of the screen that displays while firmware is being upgraded | 157 |
| Figure 92 | Example of the screen that displays while the system is being rebooted | 158 |

List of tables

| | | |
|-----------|---|-----------|
| 3 | ETSI safety guidelines | 25 |
| Table 1 | Safety labels | 26 |
| 4 | ANSI safety guidelines | 31 |
| Table 2 | Safety labels | 32 |
| 6 | Functional overview | 41 |
| Table 3 | E-UTRA bands supported by the Nokia FastMile 4G Receiver | 43 |
| Table 4 | Data forwarding methods supported by the Nokia FastMile 4G Receiver | 44 |
| 7 | Model overview | 49 |
| Table 5 | Models of the Nokia FastMile 4G Receiver | 49 |
| Table 6 | Label information for the Nokia FastMile 4G Receiver | 51 |
| 8 | Physical interfaces | 53 |
| Table 7 | Physical interfaces of the Compact mono-band and ABA models of the Nokia FastMile 4G Receiver | 53 |
| Table 8 | Physical interfaces of the Compact multi-band models of the Nokia FastMile 4G Receiver | 54 |
| Table 9 | Physical interfaces of the High gain CBRS model of the Nokia FastMile 4G Receiver | 57 |
| 10 | LEDs | 65 |
| Table 10 | Status LED behavior for Nokia FastMile 4G Receiver managed from the Nokia Altiplano FastMile Controller | 66 |
| Table 11 | Status LED behavior for Nokia FastMile 4G Receiver managed from an ACS | 67 |
| Table 12 | Signal strength LED threshold values | 68 |
| Table 13 | Signal strength LED threshold values | 70 |
| 11 | Power information | 71 |
| Table 14 | Available PoE injectors for Model 4G17-A | 72 |
| Table 15 | Available PoE injectors for models other than Model 4G17-A..... | 73 |
| Table 16 | LED information for PoE injectors available from Nokia | 74 |
| 12 | Performance information | 75 |
| Table 17 | LTE throughput information | 75 |
| Table 18 | Carrier aggregation support for Model 4G01-A and Model 4G01-B (2*2 MIMO downlink with SISO uplink)..... | 77 |
| Table 19 | Carrier aggregation support for Model 4G01-C (2*2 MIMO downlink with SISO uplink) | 79 |
| Table 20 | Carrier aggregation support for Model 4G02-A (2*2 MIMO downlink with SISO uplink) | 80 |
| Table 21 | Carrier aggregation support for Model 4G03-A (2*2 MIMO downlink with SISO uplink) | 80 |
| Table 22 | Carrier aggregation support for Model 4G04-A (2*2 MIMO downlink with SISO uplink) | 82 |

| | | |
|-----------|---|------------|
| Table 23 | Carrier aggregation support for Model 4G05-A and Model 4G05-B (2*2 MIMO downlink) | 83 |
| Table 24 | Carrier aggregation support for Model 4G06-A (2*2 MIMO downlink) | 86 |
| Table 25 | Carrier aggregation support for Model 4G17-A (2*2 MIMO downlink with SISO uplink) | 90 |
| Table 26 | Power consumption information for all models | 92 |
| 15 | Standards certification | 159 |
| Table 27 | Standards certifications for the Nokia FastMile 4G Receiver | 159 |
| 16 | Appendix A: Specifications | 161 |
| Table 28 | Specifications for the Nokia FastMile 4G Receiver | 161 |
| 17 | Appendix B: RF exposure | 163 |
| Table 29 | RF exposure distances | 163 |
| 18 | Appendix C: FCC statements and label instructions | 165 |
| Table 30 | FCC ID for applicable models of the Nokia FastMile 4G Receiver | 165 |

2 ETSI environmental and CRoHS guidelines

This chapter provides information about the ETSI environmental China Restriction of Hazardous Substances (CRoHS) regulations that govern the installation and operation of Nokia FastMile 4G Receiver equipment. This chapter also includes environmental operation parameters of general interest.

2.1 Environmental labels

This section describes the environmental instructions that are provided with the customer documentation, equipment, and location where the equipment resides.

2.1.1 Overview

CRoHS is applicable to Electronic Information Products (EIP) manufactured or sold and imported in the territory of the mainland of the People's Republic of China. EIP refers to products and their accessories manufactured by using electronic information technology, including electronic communications products and such subcomponents as batteries and cables.

2.1.2 Environmental related labels

Environmental labels are located on appropriate equipment. The following are sample labels.

2.1.2.1 Products below Maximum Concentration Value (MCV) label

Figure 1 shows the label that indicates a product is below the maximum concentration value, as defined by standard SJ/T11363-2006 (Requirements for Concentration Limits for Certain Hazardous Substances in Electronic Information Products). Products with this label are recyclable. The label may be found in this documentation or on the product.

Figure 1 **Products below MCV value label**



18986

2.1.2.2 Products containing hazardous substances above Maximum Concentration Value (MCV) label

Figure 2 shows the label that indicates a product is above the maximum concentration value, as defined by standard SJ/T11363-2006 (Requirements for Concentration Limits for Certain Hazardous Substances in Electronic Information Products). The number contained inside the label indicates the Environment-Friendly User Period (EFUP) value. The label may be found in this documentation or on the product.

Figure 2 **Products above MCV value label**

18985

Together with major international telecommunications equipment companies, Nokia has determined it is appropriate to use an EFUP of 50 years for network infrastructure equipment and an EFUP of 20 years for handsets and accessories. These values are based on manufacturers' extensive practical experience of the design, manufacturing, maintenance, usage conditions, operating environments, and physical condition of infrastructure and handsets after years of service. The values reflect minimum values and refer to products operated according to the intended use conditions. See "[Hazardous Substances Table \(HST\)](#)" for more information.

2.2 Hazardous Substances Table (HST)

This section describes the compliance of the Nokia FastMile 4G Receiver equipment to the CRoHS standard when the product and subassemblies contain hazardous substances beyond the MCV value. This information is found in this user documentation where part numbers for the product and subassemblies are listed. It may be referenced in other documentation that describes the Nokia FastMile 4G Receiver equipment.

In accordance with the People's Republic of China Electronic Industry Standard Marking for the Control of Pollution Caused by Electronic Information Products (SJ/T11364-2006), customers may access the Nokia Hazardous Substance Table, in Chinese, by contacting their Nokia representative.

2.3 Other environmental requirements

Observe the following environmental requirements when handling Nokia FastMile 4G Receiver equipment.

2.3.1 Environmental requirements

See chapter 16 in this document for more information about temperature ranges for the Nokia FastMile 4G Receiver equipment and other Nokia FastMile 4G Receiver specifications.

2.3.2 Storage

According to ETS 300-019-1-1 - Class 1.1, storage of Nokia FastMile 4G Receiver equipment must be in Class 1.1, weather-protected, temperature-controlled locations.

2.3.3 Transportation

According to EN 300-019-1-2 - Class 2.3, transportation of Nokia FastMile 4G Receiver equipment must be in packed, public transportation.

2.3.4 Stationary use

According to EN 300-019-1-3 - Class 3.1/3.2/3.E, stationary use of Nokia FastMile 4G Receiver equipment must be in a temperature-controlled location with no condensation allowed.

2.3.5 Thermal limitations

The thermal limitations for the Nokia FastMile 4G Receiver equipment are:

- operating temperature (ambient):
 - Compact mono-band and ABA models: –30°C to 65°C (–22°F to 149°F)
 - Compact multi-band models and High gain CBRS model: –30°C to 55°C (–22°F to 131°F); Model 4G05-B: –40°C to 55°C (–40°F to 131°F)
- Humidity: 5% to 95% non condensing

2.3.6 Material content compliance

European Union (EU) Directive 2002/95/EC, "Restriction of the use of certain Hazardous Substances" (RoHS), restricts the use of lead, mercury, cadmium, hexavalent chromium, and certain flame retardants in electrical and electronic equipment. This Directive applies to electrical and electronic products placed on the EU market after 1 July 2006, with various exemptions, including an exemption for lead solder in network infrastructure equipment. Nokia products shipped to the EU after 1 July 2006 comply with the EU RoHS Directive.

Nokia has implemented a material/substance content management process. The process is described in: Nokia process for ensuring RoHS Compliance (1AA002660031ASZZA). This ensures compliance with the European Union Directive 2011/65/EU on the Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment (RoHS2). With the process equipment is assessed in accordance with the Harmonised Standard EN50581:2012 (CENELEC) on Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances.

2.3.7 End-of-life collection and treatment

Electronic products bearing or referencing the symbol shown in Figure 3, when put on the market within the European Union (EU), shall be collected and treated at the end of their useful life, in compliance with applicable EU and local legislation. They shall not be disposed of as part of unsorted municipal waste. Due to materials that may be contained in the product, such as heavy metals or batteries, the environment and human health may be negatively impacted as a result of inappropriate disposal.

Figure 3 Recycling/take back/disposal of product symbol



At the end of its life, Nokia FastMile 4G Receiver equipment is subject to the applicable local legislations that implement the European Directive 2012/19EU on waste electrical and electronic equipment (WEEE).

There can be different requirements for collection and treatment in different member states of the European Union.

In compliance with legal requirements and contractual agreements, where applicable, Nokia will offer to provide for the collection and treatment of Nokia products bearing the logo shown in Figure 3 at the end of their useful life, or products displaced by Nokia equipment offers. For information regarding take-back of equipment by Nokia, or for more information regarding the requirements for recycling/disposal of product, contact your Nokia account manager or Nokia take back support at sustainability.global@nokia.com.

2.4 Additional information

See chapter 17 for RF exposure information.

3 ETSI safety guidelines

This chapter provides information about the mandatory regulations that govern the installation and operation of Nokia FastMile 4G Receiver equipment in the ETSI market.

3.1 Safety instructions

This section describes the safety instructions that are provided in the customer documentation and on the Nokia FastMile 4G Receiver equipment.

3.1.1 Safety instruction boxes

The safety instruction boxes are provided in the Nokia FastMile 4G Receiver customer documentation. Observe the instructions to meet safety requirements.

The following is an example of the Danger box.



Danger — Possibility of personal injury.

The Danger box indicates that the described activity or situation may pose a threat to personal safety. It calls attention to a situation or procedure which, if not correctly performed or adhered to, may result in death or serious physical harm.

Do not proceed beyond a Danger box until the indicated conditions are fully understood and met.

The following is an example of the Warning box.



Warning 1 — Possibility of equipment damage.

Warning 2 — Possibility of data loss.

The Warning box indicates that the described activity or situation may, or will, cause equipment damage, loss of data, or serious performance problems. It identifies a possible equipment-damaging situation or provides essential information to avoid the degradation of system operations or data.

Do not proceed beyond a warning until the indicated conditions are fully understood and met.

The following is an example of the Caution box.



Caution 1 — Possibility of service interruption.

Caution 2 — Service interruption.

The Caution box indicates that the described activity or situation may, or will, cause service interruption.

Do not proceed beyond a caution until the indicated conditions are fully understood and met.

The following is an example of the Note box.



Note — Information of special interest.

The Note box provides information that assists the personnel working with Nokia FastMile 4G Receiver equipment. It does not provide safety-related instructions.

3.1.2 Safety-related labels

The Nokia FastMile 4G Receiver equipment is labeled with the specific safety instructions and compliance information that is related to a product, or product variant or model, of the equipment. Observe the instructions on the safety labels.

Table 1 provides sample safety labels on Nokia FastMile 4G Receiver equipment.

Table 1 **Safety labels**

| Description | Label text |
|-------------|--|
| ESD warning | Caution: This assembly contains an electrostatic sensitive device. |

3.2 Safety standards compliance

This section describes Nokia FastMile 4G Receiver equipment compliance with the European safety standards.

3.2.1 EMC compliance

The Nokia FastMile 4G Receiver equipment complies with the following EMC requirements:

- Electromagnetic Compatibility (EMC) standard for radio equipment and services; Part 52: Specific conditions for Cellular Communication Mobile and portable (UE) radio and ancillary equipment; Harmonised Standard covering the essential requirements of article 3.1(b) of Directive 2014/53/EU
- Electromagnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements; Harmonized Standard covering the essential requirements of article 3.1(b) of Directive 2014/53/EU and the essential requirements of article 6 of Directive 2014/30/EU EN 301489-1
- Electromagnetic Compatibility (EMC) standard for radio equipment and services; Part 17: Specific conditions for Broadband Data Transmission Systems; Harmonized Standard covering the essential requirements of article 3.1(b) of Directive 2014/53/EU EN 301489-17

3.2.2 Equipment safety standard compliance

The Nokia FastMile 4G Receiver equipment complies with the requirements of the following:

- EN 60950-1, Safety of Information Technology Equipment for use in a restricted location (per R-269)
- IEC 60950-22, EN 60950-22: Information Technology Equipment- Safety - Part 22 Equipment to be installed Outdoors
- IEC 62368 Audio/video, information and communication technology equipment- Part 1: Safety requirements
- IEC 60529 Degrees of protection provided by enclosures (IP Code)

3.2.3 Environmental standard compliance

The Nokia FastMile 4G Receiver equipment complies with the EN 300 019 European environmental standards.

3.2.4 Laser product standard compliance

The Nokia FastMile 4G Receiver equipment is not a laser product.

3.3 Electrical safety guidelines

This section provides the electrical safety guidelines for the Nokia FastMile 4G Receiver equipment.



Note 1 — The Nokia FastMile 4G Receiver equipment complies with the U.S. National Electrical Code. However, local electrical authorities have jurisdiction when there are differences between the local and U.S. standards.

Note 2 — The Nokia FastMile 4G Receiver equipment complies with BS EN 61140.

3.3.1 Power supplies

The use of any non-Nokia approved power supplies or power adapters is not supported or endorsed by Nokia. Such use will void any warranty or support contract with Nokia. Such use greatly increases the danger of damage to equipment or property.

3.3.2 Cabling

The following are the guidelines regarding cables used for the Nokia FastMile 4G Receiver equipment:

- All cables must be approved by the relevant national electrical code.
- Cables for outdoor connection to the Nokia FastMile 4G Receiver equipment must be suitable for outdoor use.
- The Nokia FastMile 4G Receiver equipment must be used with the cabling supplied with the equipment.

3.3.3 Protective earth

Earthing and bonding of the Nokia FastMile 4G Receiver equipment must comply with the requirements of local electrical codes.

3.4 ESD safety guidelines

The Nokia FastMile 4G Receiver equipment is sensitive to ESD if opened. Operations personnel must observe the following ESD instructions when they handle the Nokia FastMile 4G Receiver equipment.



Caution — This equipment is ESD sensitive if opened. Proper ESD protections should be used if you open the Nokia FastMile 4G Receiver.

Service personnel are not required to wear wrist straps when performing normal installation or maintenance activities.

3.5 Environmental requirements

See chapter 16 in this document for information about temperature ranges for the Nokia FastMile 4G Receiver equipment and other Nokia FastMile 4G Receiver specifications.

During operation in the supported temperature range, condensation inside the Nokia FastMile 4G Receiver equipment caused by humidity is not an issue because the Nokia FastMile 4G Receiver is a sealed unit.

3.6 Additional information

See chapter 17 for RF exposure information.

4 ANSI safety guidelines

This chapter provides information about the mandatory regulations that govern the installation and operation of the Nokia FastMile 4G Receiver equipment in the North American or ANSI market.

4.1 Safety instructions

This section describes the safety instructions that are provided in the customer documentation and on the Nokia FastMile 4G Receiver equipment.

4.1.1 Safety instruction boxes in customer documentation

The safety instruction boxes are provided in the Nokia FastMile 4G Receiver customer documentation. Observe the instructions to meet safety requirements.

The following is an example of the Danger box.



Danger — Possibility of personal injury.

The Danger box indicates that the described activity or situation may pose a threat to personal safety. It calls attention to a situation or procedure which, if not correctly performed or adhered to, may result in death or serious physical harm.

Do not proceed beyond a Danger box until the indicated conditions are fully understood and met.

The following is an example of the Warning box.



Warning 1 — Possibility of equipment damage.

Warning 2 — Possibility of data loss.

The Warning box indicates that the described activity or situation may, or will, cause equipment damage, loss of data, or serious performance problems. It identifies a possible equipment-damaging situation or provides essential information to avoid the degradation of system operations or data.

Do not proceed beyond a warning until the indicated conditions are fully understood and met.

The following is an example of the Caution box.



Caution 1 — Possibility of service interruption.

Caution 2 — Service interruption.

The Caution box indicates that the described activity or situation may, or will, cause service interruption.

Do not proceed beyond a caution until the indicated conditions are fully understood and met.

The following is an example of the Note box.



Note — Information of special interest.

The Note box provides information that assists the personnel working with Nokia FastMile 4G Receiver equipment. It does not provide safety-related instructions.

4.1.2 Safety-related labels

The Nokia FastMile 4G Receiver equipment is labeled with specific safety compliance information and instructions that are related to a product, or product model, of the equipment. Observe the instructions on the safety labels.


Table 2 provides examples of the text in the various Nokia FastMile 4G Receiver equipment safety labels.

Table 2 **Safety labels**

| Description | Label text |
|--------------------------|---|
| UL compliance | ETL/cETL |
| UL50E compliance | Type 3 |
| ESD warning | Caution: This assembly contains electrostatic sensitive device. |
| FCC standards compliance | Tested to comply with FCC standards for home or office use. |
| Operation conditions | This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. |
| CE marking | There are various CE symbols for CE compliance. |

Figure 4 shows a sample safety label for FCC and Figure 5 shows a sample safety label for ETL.

Figure 4 Sample safety label for FCC

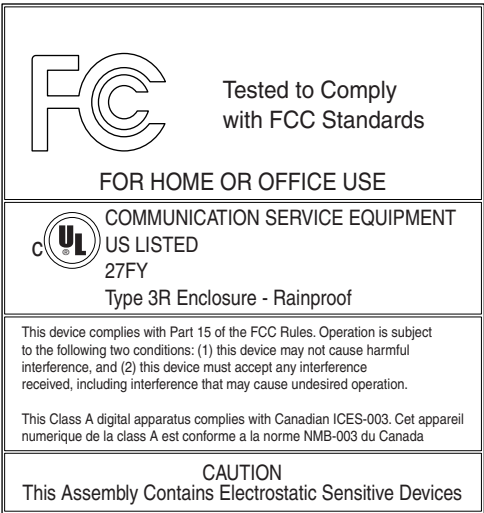

18533

Figure 5 Sample safety label for ETL



27799

4.2 Safety standards compliance

This section describes the Nokia FastMile 4G Receiver equipment compliance with North American safety standards.



Warning — Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

4.2.1 EMC, EMI, and ESD compliance

The Nokia FastMile 4G Receiver equipment complies with the following EMC, EMI, and ESD requirements:

- Federal Communications Commission PART 15-RADIO FREQUENCY DEVICES Subpart C-INTENTIONAL RADIATORS Title 47 CFR Part 15. Part 15.247, Part 15.255

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

4.2.2 Equipment safety standard compliance

The Nokia FastMile 4G Receiver equipment complies with the requirements of:

- UL 62368-1 Audio/Video, Information And Communication Technology Equipment - Part 1: Safety Requirements
- CSA C22.2#62368-1 Audio/Video, Information And Communication Technology Equipment - Part 1: Safety Requirements
- UL 60950-22 Information Technology Equipment - Safety - Part 22: Equipment to be Installed Outdoors

4.3 Electrical safety guidelines

This section provides the electrical safety guidelines for the Nokia FastMile 4G Receiver equipment.



Note — The Nokia FastMile 4G Receiver equipment complies with the U.S. National Electrical Code. However, local electrical authorities have jurisdiction when there are differences between the local and U.S. standards.

4.3.1 Power supplies

The use of any non-Nokia approved power supplies or power adapters is not supported or endorsed by Nokia. Such use will void any warranty or support contract with Nokia. Such use greatly increases the danger of damage to equipment or property.

4.3.2 Cabling

The following are the guidelines regarding cables used for the Nokia FastMile 4G Receiver equipment:

- All cables must be approved by the relevant national electrical code.
- Cables for outdoor connection to the Nokia FastMile 4G Receiver equipment must be suitable for outdoor use.
- If cabling is supplied with the Nokia FastMile 4G Receiver, the supplied cabling must be used with the equipment.

4.3.3 Protective earth

Earthing and bonding of the Nokia FastMile 4G Receiver equipment must comply with the requirements of NEC article 250 or local electrical codes.

4.4 ESD safety guidelines

The Nokia FastMile 4G Receiver equipment is sensitive to ESD if opened. Operations personnel must observe the following ESD instructions when they handle the Nokia FastMile 4G Receiver equipment.



Caution — This equipment is ESD sensitive if opened. Proper ESD protections should be used if you open the Nokia FastMile 4G Receiver.

Service personnel are not required to wear wrist straps when performing normal installation or maintenance activities.

4.5 Environmental requirements

See chapter 16 in this document for information about temperature ranges for the Nokia FastMile 4G Receiver equipment and other Nokia FastMile 4G Receiver specifications.

During operation in the supported temperature range, condensation inside the Nokia FastMile 4G Receiver equipment caused by humidity is not an issue because the Nokia FastMile 4G Receiver is a sealed unit.

4.6 Additional information

See chapter 17 for RF exposure information.

See chapter 18 for additional FCC compliance information.

5 Product overview

5.1 Overview of the Nokia FastMile 4G Receiver

5.2 End-to-end example

5.3 Installing the Nokia FastMile 4G Receiver

5.1 Overview of the Nokia FastMile 4G Receiver

The Nokia FastMile 4G Receiver is an outdoor device used in the Nokia FastMile 4G solution.

The Nokia FastMile 4G solution uses 3GPP based LTE radio technology to provide indoor and outdoor broadband connectivity with guaranteed high bitrates in larger service areas in a more cost-efficient manner than is possible with other existing solutions. The Nokia FastMile 4G solution can overcome network performance challenges faced by today's mobile networks by optimizing all of the following:

- intra site interference due to neighbor sectors in same LTE base station
- inter site interference due to neighbor base stations
- link performance due to wall penetration loss and several miles path loss


The Nokia FastMile 4G Receiver provides high-performing, outdoor wireless broadband access over LTE to meet residential users' total home connectivity needs for urban, suburban, rural, and deep rural spots.

The Nokia FastMile 4G Receiver supports LTE connectivity to an LTE base station in the network, and provides 1 Gbps Ethernet connectivity through an Ethernet cable connected to a residential gateway such as the following in the home:

- Nokia 7368 ISAM CPE A-020W-A
- Nokia 7368 ISAM CPE A-240Z-A

The Nokia FastMile 4G Receiver can be installed on the side of a house or on a pole close to the house. A pole mount kit that includes a pole adapter can be ordered from Nokia.

Figure 6 shows an application example where the Nokia FastMile 4G Receiver is mounted on the side of a house.

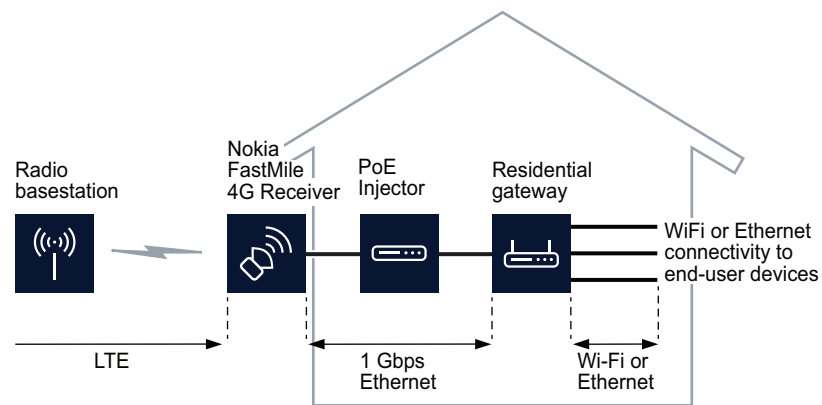
Figure 6 Application example of the Nokia FastMile 4G Receiver

28814

The Nokia FastMile 4G Receiver is available in the following model types:

- Compact multi-band; this model type has the following features:
 - fixed beamforming antennas
 - multi-band transmission
- Compact mono-band; this model type has the following features:
 - fixed beamforming antennas
 - mono-band transmission
- ABA; this model type has the following features:
 - high gain beam steering antenna
 - automated beam alignment
- High gain CBRS band; this model type has the following features:
 - high gain fixed beamforming antenna
 - CBRS band (B48) transmission

Figure 7 shows examples of the model types of the Nokia FastMile 4G Receiver.

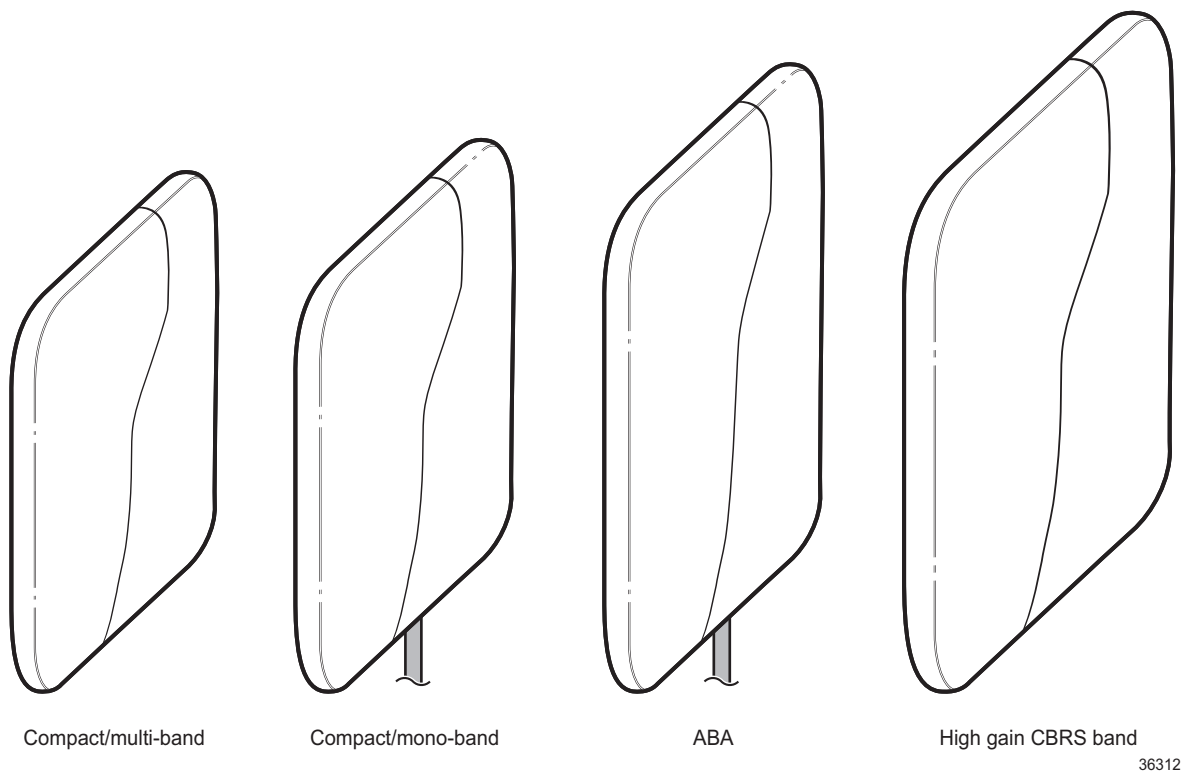Figure 7 Examples of model types of the Nokia FastMile 4G Receiver

The Nokia FastMile 4G Receiver has built-in antenna and LTE modem that provide the LTE broadband access to the network.

The Nokia FastMile 4G Receiver is capable of withstanding outdoor environmental conditions. It has an IP rating of IP66 TYPE3 and can operate in the following temperature ranges:

- compact mono-band and ABA models can operate in a temperature of -30°C to 65°C (-22°F to 149°F)
- compact multi-band models and the high gain CBRS model can operate in a temperature of -30°C to 55°C (-22°F to 131°F); the Model 4G05-B can operate in a temperature of -40°C to 55°C (-40°F to 131°F)

See chapter 16 for additional specifications of the Nokia FastMile 4G Receiver.


5.2 End-to-end example

The Nokia FastMile 4G Receiver can be used to provide IPTV, Internet, and VoIP services to end-users that are connected to the Nokia FastMile 4G Receiver through a Nokia-approved residential gateway or a Nokia-approved PoE injector. The Nokia FastMile 4G Receiver can also connect directly to a video monitor, personal computer, and so on rather than using a residential gateway and PoE injector.

Due to the independence between the Nokia FastMile 4G Receiver and the gateway, the Nokia FastMile 4G Receiver also addresses the business market. The business customer can seamlessly re-use their existing business gateway. The Nokia FastMile 4G Receiver supports extended QCI and multiple APNs that can be mapped on VLANs to support QoS for different services.

Figure 8 shows an end-to-end example that features the Nokia FastMile 4G Receiver with a residential gateway and PoE injector.

Figure 8 End-to-end example featuring the Nokia FastMile 4G Receiver with a residential gateway and PoE injector

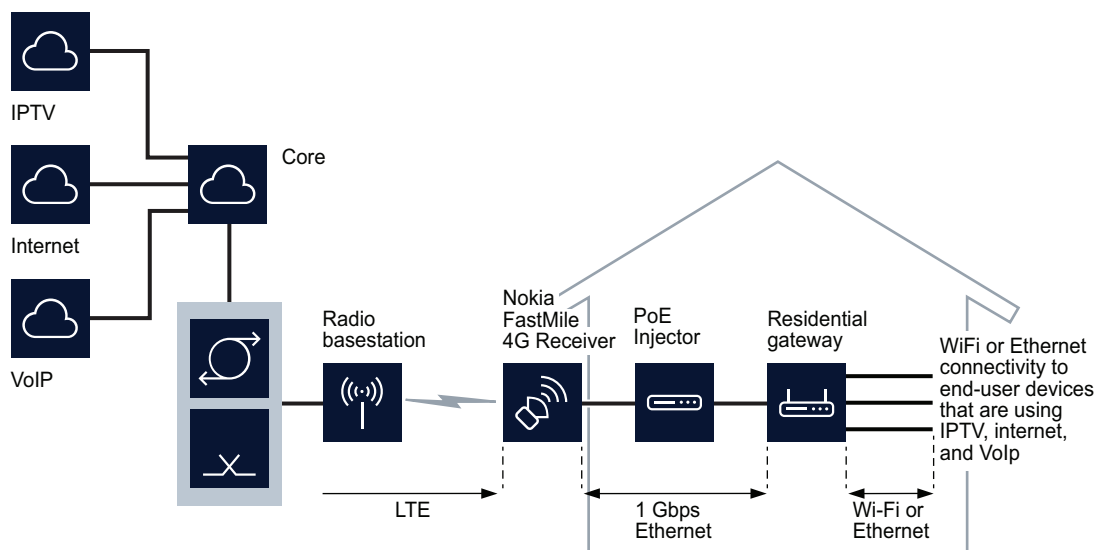

28815

5.3 Installing the Nokia FastMile 4G Receiver

As part of installing the Nokia FastMile 4G Receiver, you can use the Nokia Wireless app (described in section 6.1.1) to help in determining the mounting location for the Nokia FastMile 4G Receiver with either of the following:

- an ACS through TR-069 with help from the Nokia Altiplano FastMile Controller
- an ACS through TR-069 without help from the Nokia Altiplano FastMile Controller

The *Nokia FastMile 4G Receiver Installation Guide* provides steps on how to use the Nokia Wireless app to help in determining the mounting location, and how to install the Nokia FastMile 4G Receiver on the side of a house or on a pole close to the house.

6 Functional overview

6.1 Overview

6.2 LTE characteristics

6.3 Data forwarding

6.4 Ethernet characteristics

6.5 Power supply characteristics

6.6 Remote management protocols

6.1 Overview

The Nokia FastMile 4G Receiver provides wireless broadband access in the form of LTE to meet the ever growing network needs of end users. The Nokia FastMile 4G Receiver is an outdoor device that lets operators use LTE to offer fixed wireless broadband to their customers.

The Nokia FastMile 4G Receiver is easy to install and is user-friendly to operate.

6.1.1 Nokia Wireless app

The Nokia FastMile 4G Receiver can be installed with the assistance of an Android application, known as Nokia Wireless app, installed on a mobile phone. The app in general lets you scan the QR code of the receiver, identify the best location to install the receiver by measuring the signal strength and connect to the receiver over a Bluetooth connection in order to apply configuration.

The Nokia Wireless app also provides management and troubleshooting capabilities for the Nokia FastMile 4G Receiver such as the following:

- viewing information that includes:
 - LTE cell info such as connection state, status, EARFCN, and PCI
 - current and average signal stats for RSRP, RSRQ, RSSI, and SINR
 - other stats (for example, bytes sent and bytes received)
- uploading CA certificates to the Nokia FastMile 4G Receiver
- resetting the 4G Receiver to factory settings
- rebooting the 4G Receiver

See the Installation guide for more information about how the Nokia Wireless app is used in the installation process. See chapter 13 in this document for more information about how Nokia Wireless app can be used for management of the Nokia FastMile 4G Receiver.

6.1.2 Web UI

The Nokia FastMile 4G Receiver supports local management capability, allowing status view and configuration operations, through a Web UI for a Nokia FastMile 4G Receiver managed by an ACS through TR-069.

The Web UI can be accessed directly from a laptop through the Ethernet port of the Nokia FastMile 4G Receiver via the dedicated static IP address 192.168.0.1 (<https://192.168.0.1>). Alternatively, it is possible to access the Web UI from behind a Nokia-approved residential gateway which is appropriately configured.

It is recommended not to change or reconfigure the Nokia FastMile 4G Receiver static IP for the Web UI interface, since changing the default IP address (that is, 192.168.0.1) would impede access from the Web UI.

Web UI functionality is optimized for the following browsers:

- Google Chrome (version 76.0.3809.132 or greater)
- Mozilla Firefox (version 69.0 or greater)
- Microsoft Edge (version 44.18362.267.0 or greater)



Note — Internet Explorer is not supported since it will be replaced by Edge and will not be updated from Microsoft any more.

The Web UI design is optimized for a resolution of 1920x1080 pixels, but is not restricted to it.



Note — The Web UI is based on https. The client browser will indicate an unknown certificate warning because a Nokia signed certificate is used; this does not constitute a security issue or threat. It is safe to accept the certificate.

See chapter 14 in this document for information about using the Web UI to manage the Nokia FastMile 4G Receiver.

6.1.3 Remote management

The Nokia FastMile 4G Receiver supports remote management capability, allowing management and health monitoring of it from the Nokia Altiplano FastMile Controller (through NETCONF) or from an ACS (through TR-069).



Note 1 — The NETCONF version of the FastMile 4G Receiver for remote management from the Nokia Altiplano FastMile Controller is not supported from FastMile 4G Release 2.0.03a onwards.

Note 2 — The Nokia FastMile 4G Receiver supports DHCP option 43 when it works as a DHCP server for the gateway by providing information about the ACS to the gateway. The relevant DHCP option 43 parameters must be configured in the preconfig.xml file.

See the documentation for the Nokia Altiplano FastMile Controller for information about managing and monitoring the Nokia FastMile 4G Receiver through the Nokia Altiplano FastMile Controller.

See section [6.6](#) for information about the remote management protocols.

6.2 LTE characteristics

The following are some of the key LTE characteristics of the Nokia FastMile 4G Receiver:

- LTE 3GPP Release 12 Compliant, UE Category 12
- transmit power: max +23 dBm +/- 2 dBm
- supports the E-UTRA bands listed in [Table 3](#)

Table 3 E-UTRA bands supported by the Nokia FastMile 4G Receiver

| E-UTRA bands | Model |
|---|-------------------|
| Band 42/43/48 (mono-band support) | 4G01-A |
| Band 42/43/48 ⁽¹⁾ (ABA support) | 4G01-B |
| Band 48 (high gain CBRS support) | 4G01-C |
| Band 3 (mono-band support) | 4G02-A |
| Band 7/38/40/41 (mono-band support) | 4G03-A |
| Band 3/7/20/32 (multi-band support) | 4G04-A |
| Band 1/3/7/38/40/41/20/28 (multi-band support) | 4G05-A and 4G05-B |
| Band 2/25/4/66/7/42/43/48/28 (multi-band support) | 4G06-A |
| Band 1/3/7/20/32 (multi-band support) | 4G17-A |

Notes

(1) Note that B48 for the 4G01-B has not been FCC CBRS Part96 certified and is not ready for commercial use.

6.3 Data forwarding

The Nokia FastMile 4G Receiver supports the following data forwarding methods:

Table 4 Data forwarding methods supported by the Nokia FastMile 4G Receiver

| Forwarding mode | Typical use |
|---|---|
| Single APN with multi-bearers for route mode | Recommended for using only one APN specific for Nokia FastMile 4G Receiver |
| Single APN with multi-bearers for bridge mode | Could be used for WAN of the Nokia FastMile 4G Receiver with VLAN tag |
| Multiple APNs with bridge mode | Used as multi-APN, separated service with APNs: each APN is for each service. Note in this case, a specific port should be reserved for service traffic. |
| Multiple APNs with mixed mode | Can be used for separated APNs on OAM and also other APNs for separated services: <ul style="list-style-type: none"> Only default APN is in route mode which could be OAM Besides APN, each APN is for each service |
| Tunnel mode | Can be used for using tunnel for L2 forwarding such as PPPoE |

6.4 Ethernet characteristics

The following are some of the key Ethernet characteristics of the Nokia FastMile 4G Receiver:

- provides a 1 Gbps Ethernet LAN Interface that, depending on the model of the Nokia FastMile 4G Receiver, has the following:
 - the Compact mono-band and ABA models have a pre-attached 3 m (9.8 ft) Cat5e shielded UV resistant twisted pair Ethernet cable with a male RJ 45 connector at the free end; the 4G01-A and 4G03-A Compact mono-band models are also available with a pre-attached 20 m (65.6 ft) Cat5e shielded UV resistant twisted pair Ethernet cable with a male RJ 45 connector at the free end
 - the Compact multi-band models and the High gain CBRS model have a female RJ 45 connector that supports connection of a customer-supplied Ethernet cable:
 - the Model 4G17-A requires a Cat5e non-shielded or shielded twisted pair Ethernet cable with standard pinouts that is up to a maximum of 80 m (262 ft) in length
 - all other Compact multi-band models and the High gain CBRS model require a Cat5e shielded twisted pair Ethernet cable with standard pinouts that is up to a maximum of 80 m (262 ft) in length
- supports IEEE802.3 1000BASE-T

- supports IEEE802.3az energy efficient Ethernet
- the Ethernet cable for all models is also used for power over Ethernet (PoE) as per IEEE802.3 at type-2

6.5 Power supply characteristics

The following are some of the key power supply characteristics of the Nokia FastMile 4G Receiver:

- powered through PoE from a Nokia-approved residential gateway, or through a Nokia-approved PoE injector (see section 11.2 for information about PoE injectors for use with the FastMile 4G Receiver)
- supports PoE+ as per IEEE802.3 at type-2
- rating: 53 VDC at 600 mA

See section 11.1 for power information.

6.6 Remote management protocols

Remote management of the Nokia FastMile 4G Receiver can be done from the Nokia Altiplano FastMile Controller through NETCONF or from an ACS through TR-069/TR181 depending on the installed SIM card.



Note — The NETCONF version of the FastMile 4G Receiver for remote management from the Nokia Altiplano FastMile Controller is not supported from FastMile 4G Release 2.0.03a onwards.

For the first startup, the Nokia FastMile 4G Receiver starts from the NETCONF version. The Nokia FastMile 4G Receiver will automatically detect the remote management protocol through information that is on the SIM card installed in the unit. If the Nokia FastMile 4G Receiver detects that the remote management protocol on the SIM card is TR-069/TR181, it restarts and starts up with TR-069/TR181 management.

If the remote management protocol is NETCONF, the Nokia FastMile 4G Receiver can be managed remotely from the Nokia Altiplano FastMile Controller.

If the remote management protocol is TR-069, the Nokia FastMile 4G Receiver can be managed remotely from an ACS.

Figure 9 shows the Nokia Altiplano FastMile Controller being used for remote management of the Nokia FastMile 4G Receiver. Note that NETCONF is used by the Nokia Altiplano FastMile Controller to manage the Nokia FastMile 4G Receiver, and that an ACS manages the residential gateway through TR-069.

Figure 9 Remote management of the Nokia FastMile 4G Receiver through the Nokia Altiplano FastMile Controller


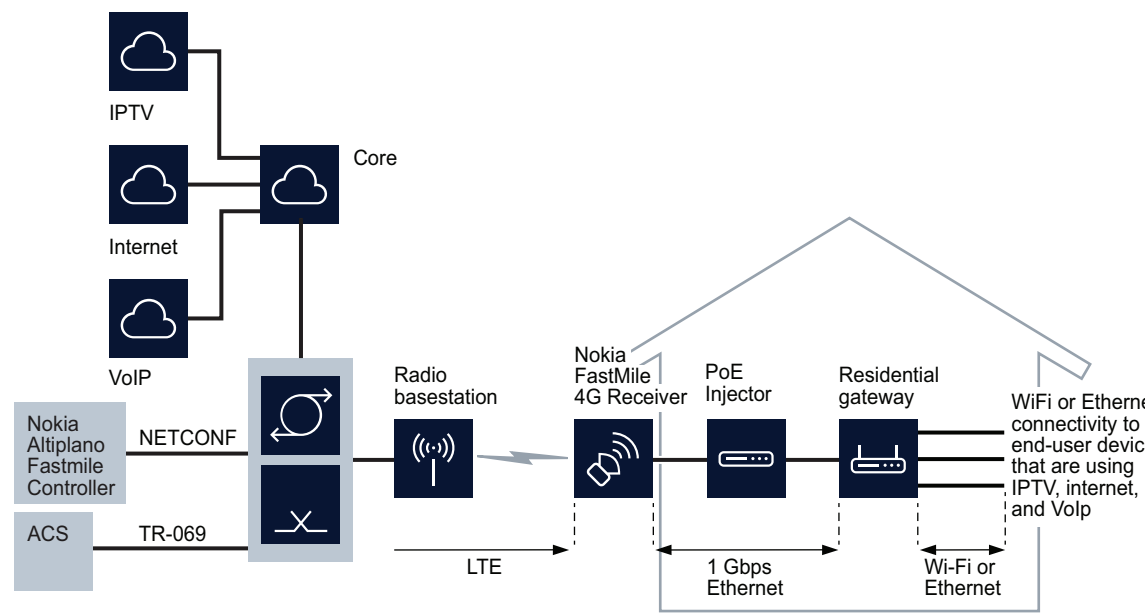


Figure 10 shows an ACS being used for remote management of the Nokia FastMile 4G Receiver. Note that the ACS uses TR-069 to manage both the Nokia FastMile 4G Receiver and the residential gateway.

Figure 10 Remote management of the Nokia FastMile 4G Receiver through an ACS

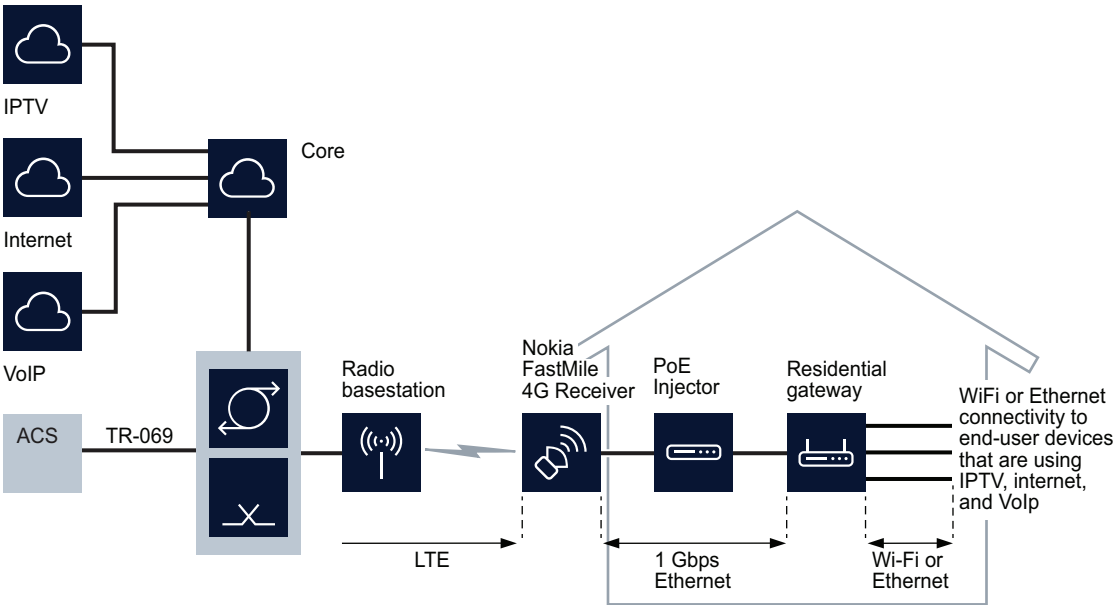

28817

7 Model overview

7.1 Models of the Nokia FastMile 4G Receiver

7.1 Models of the Nokia FastMile 4G Receiver

A wide range of models are available for the Nokia FastMile 4G Receiver to support different E-UTRA bands and band combinations for LTE, including the capability to limit the bands to be used among the bands physically supported, to support network resource planning, and to speed up the cell attach speed.

All models can be wall-mounted or pole-mounted. If you will be mounting the Nokia FastMile 4G Receiver on a pole, you will need kit 3TG-00291-AA that contains the pole adapter for the Nokia FastMile 4G Receiver. Note that pole strapping and wall fasteners are not provided by Nokia.

Table 5 describes the E-UTRA band and frequency support and the antenna configurations and model type for each model of the Nokia FastMile 4G Receiver.

Table 5 Models of the Nokia FastMile 4G Receiver

| Model | E-UTRA band support and frequencies | Antenna configuration | Model type |
|--------|---|--|--|
| 4G01-A | <ul style="list-style-type: none"> Band 42: TDD, 3400 MHz – 3600 MHz Band 43: TDD, 3600 MHz – 3800 MHz Band 48: TDD, 3550 MHz – 3700 MHz | Integrated with 15 dBi fixed beamforming antenna | Compact mono-band Two types: one with 3m attached Ethernet cable and one with 20m attached Ethernet cable with CPE-CBSD (Cat.B) certificate |
| 4G01-B | <ul style="list-style-type: none"> Band 42: TDD, 3400 MHz – 3600 MHz Band 43: TDD, 3600 MHz – 3800 MHz Band 48⁽¹⁾: TDD, 3550 MHz – 3700 MHz | Integrated with 3x4 dual polarized antenna array, electronic beam steering +/- 45° horizontally, and up to 17 dBi peak antenna gain with beam steering | ABA |
| 4G01-C | <ul style="list-style-type: none"> Band 48: TDD, 3550 MHz - 3700 MHz | Integrated with 19 dBi fixed beamforming antenna | High gain CBRS (CPE-CBSD (Cat.B) certified) |
| 4G02-A | <ul style="list-style-type: none"> Band 3: FDD, Tx 1710 MHz – 1785 MHz, Rx 1805 MHz – 1880 MHz | Integrated with 10.5 dBi fixed beamforming antenna | Compact mono-band |

(1 of 3)

| Model | E-UTRA band support and frequencies | Antenna configuration | Model type |
|--------|--|---|--|
| 4G03-A | <ul style="list-style-type: none"> Band 7: FDD, Tx 2500 MHz – 2570 MHz, Rx 2620 MHz – 2690 MHz Band 38: TDD, 2570 MHz – 2620 MHz Band 40: TDD, 2300 MHz – 2400 MHz Band 41: TDD, 2496 MHz – 2690 MHz | Integrated with 12.5 dBi fixed beamforming antenna | Compact mono-band Two types: one with 3m attached Ethernet cable and one with 20m attached Ethernet cable |
| 4G04-A | <ul style="list-style-type: none"> Band 3: FDD, Tx 1710 MHz – 1785 MHz, Rx 1805 MHz – 1880 MHz Band 7: FDD, Tx 2500 MHz – 2570 MHz, Rx 2620 MHz – 2690 MHz Band 20: FDD, Tx 832 MHz – 862 MHz, Rx 791 MHz – 821 MHz Band 32: FDD, Rx 1452 MHz – 1496 MHz | Band 7 is integrated with > 11 dBi fixed beamforming antenna Band 3 is integrated with > 10 dBi fixed beamforming antenna Band 32 is integrated with > 8.3 dBi fixed beamforming antenna Band 20 is integrated with > 2.5dBi fixed beamforming antenna | Compact multi-band |
| 4G05-A | <ul style="list-style-type: none"> Band 1: FDD, Tx 1920 MHz – 1980 MHz, Rx 2110 MHz – 2170 MHz Band 3: FDD, Tx 1710 MHz – 1785 MHz, Rx 1805 MHz – 1880 MHz Band 7: FDD, Tx 2500 MHz – 2570 MHz, Rx 2620 MHz – 2690 MHz Band 38: TDD, 2570 MHz – 2620 MHz Band 40: TDD, 2300 MHz – 2400 MHz Band 41: TDD, 2496 MHz – 2690 MHz Band 20: FDD, Tx 832 MHz – 862 MHz, Rx 791 MHz – 821 MHz Band 28: FDD, Tx 703 MHz – 748 MHz, Rx 758 MHz – 803 MHz | Bands 7, 38, 40, and 41 are integrated with > 11 dBi fixed beamforming antenna Bands 1 and 3 are integrated with > 10 dBi fixed beamforming antenna Bands 20 and 28 are integrated with > 2.5 dBi fixed beamforming antenna | Compact multi-band |
| 4G05-B | <ul style="list-style-type: none"> Band 1: FDD, Tx 1920 MHz – 1980 MHz, Rx 2110 MHz – 2170 MHz Band 3: FDD, Tx 1710 MHz – 1785 MHz, Rx 1805 MHz – 1880 MHz Band 7: FDD, Tx 2500 MHz – 2570 MHz, Rx 2620 MHz – 2690 MHz Band 38: TDD, 2570 MHz – 2620 MHz Band 40: TDD, 2300 MHz – 2400 MHz Band 41: TDD, 2496 MHz – 2690 MHz Band 20: FDD, Tx 832 MHz – 862 MHz, Rx 791 MHz – 821 MHz Band 28: FDD, Tx 703 MHz – 748 MHz, Rx 758 MHz – 803 MHz | Bands 7, 38, 40, and 41 are integrated with > 11 dBi fixed beamforming antenna Bands 1 and 3 are integrated with > 10 dBi fixed beamforming antenna Bands 20 and 28 are integrated with > 2.5 dBi fixed beamforming antenna | Compact multi-band similar to Model 4G05-A but for use in colder temperatures |

(2 of 3)

| Model | E-UTRA band support and frequencies | Antenna configuration | Model type |
|--------|--|--|--|
| 4G06-A | <ul style="list-style-type: none"> Band 2: FDD, Tx 1850 MHz - 1910 MHz, Rx 1930 MHz - 1990 MHz Band 25: FDD, Tx 1850 MHz - 1915 MHz, Rx 1930 MHz - 1995 MHz Band 4: FDD, Tx 1710 MHz - 1755 MHz, Rx 2110 MHz - 2155 MHz Band 66: FDD, Tx 1710 MHz - 1780 MHz, Rx 2110 MHz - 2200 MHz Band 7: FDD, Tx 2500 MHz - 2570 MHz, Rx 2620 MHz - 2690 MHz Band 42: TDD, 3400 MHz - 3600 MHz Band 43: TDD, 3600 MHz - 3800 MHz Band 48: TDD, 3550 MHz - 3700 MHz; Band 28: FDD, Tx 703 MHz - 748 MHz, Rx 758 MHz -- 803 MHz | <p>Bands 2, 25, 4, and 66 are integrated with > 9.3 dBi fixed beamforming antenna</p> <p>Bands 7 is integrated with > 11 dBi fixed beamforming antenna</p> <p>Bands 42, 43 and 48 are integrated with > 11 dBi fixed beamforming antenna</p> <p>Band 28 is integrated with > 2.5 dBi fixed beamforming antenna</p> | <p>Compact multi-band</p> <p>Two types: one with CPE-CBSD (Cat.B) certificate for US CBRS market, and one without certificate for the rest of the market</p> |
| 4G17-A | <ul style="list-style-type: none"> Band 1: FDD, Tx 1920 MHz -1980 MHz, Rx 2110 MHz -2170 MHz Band 3: FDD, Tx 1710 MHz -1785 MHz, Rx 1805 MHz - 1880 MHz Band 7: FDD, Tx 2500 MHz - 2570 MHz, Rx 2620 MHz - 2690 MHz Band 20: FDD, Tx 832 MHz - 862 MHz, Rx 791 MHz - 821 MHz Band 32: FDD, Rx 1452 MHz - 1496 MHz | <p>Band 7 is integrated with > 11 dBi fixed beamforming antenna</p> <p>Bands 1 and 3 are integrated with > 10 dBi fixed beamforming antenna</p> <p>Band 32 is integrated with > 8.3 dBi fixed beamforming antenna</p> <p>Band 20 is integrated with > 2.5dBi fixed beamforming antenna</p> | <p>Compact multi-band</p> |

(3 of 3)

Notes

(1) Note that B48 for the 4G01-B has not been FCC CBRS Part96 certified and is not ready for commercial use

7.1.1 Label information

Table 6 describes the label information for the Nokia FastMile 4G Receiver.

Table 6 Label information for the Nokia FastMile 4G Receiver

| Model | Product details |
|--------|-------------------------|
| 4G01-A | Nokia FM compact |
| 4G01-B | Nokia FM ABA |
| 4G01-C | Nokia FM high gain CBRS |
| 4G02-A | Nokia FM compact |
| 4G03-A | Nokia FM compact |
| 4G04-A | Nokia FM compact |
| 4G05-A | Nokia FM compact |
| 4G05-B | Nokia FM compact |

(1 of 2)

| Model | Product details |
|--------|------------------|
| 4G06-A | Nokia FM compact |
| 4G17-A | Nokia FM compact |

(2 of 2)

8 Physical interfaces

8.1 Physical interfaces of the Compact mono-band and ABA models

8.2 Physical interfaces of the Compact multi-band models

8.3 Physical interfaces of the High gain CBRS model

8.1 Physical interfaces of the Compact mono-band and ABA models

Table 7 describes the physical interfaces of the Compact mono-band and ABA models of the Nokia FastMile 4G Receiver.

Table 7 Physical interfaces of the Compact mono-band and ABA models of the Nokia FastMile 4G Receiver

| Interface | Description |
|----------------|---|
| Ground point | Point for connecting to external ground. Connection to the ground point is not required. Located on the underside of the unit; see Figure 11. |
| Ethernet cable | Ethernet connectivity for the Compact mono-band and ABA models is through a pre-attached 3 m (9.8 ft) cat5e shielded UV resistant Ethernet cable; the same cable is also used for power (PoE as per IEEE802.3 at type-2). PoE must be provided by a Nokia-approved residential gateway or a Nokia-approved PoE injector (see section 11.2 for information about PoE injectors for use with the FastMile 4G Receiver). The 4G01-A and 4G03-A Compact mono-band models are also available with a pre-attached 20 m (65.6 ft) Cat5e shielded UV resistant twisted pair Ethernet cable. Located on the underside of the unit; see Figure 11. The pre-attached Ethernet cable has a male RJ 45 connector at the free end. An additional length of cat5e shielded Ethernet cabling can be attached to the Ethernet cable up to a maximum of 80 m (262 ft) in combined length. A waterproof IP67 female RJ 45 plug is needed to connect the Ethernet cabling to the Ethernet cable of the Nokia FastMile 4G Receiver. |
| Status LED | Single multifunction LED that indicates status information for the Nokia FastMile 4G Receiver. Located on the underside of the unit; see Figure 11. See section 10.1 for the behavior of the status LED of the Compact mono-band and ABA models. |
| Reset button | Button to reset the Nokia FastMile 4G Receiver. Located on the underside of the unit; see Figure 11. |


(1 of 2)

| Interface | Description |
|-----------|---|
| SIM slot | Slot for Nano/4FF SIM card for a Compact mono-band model or ABA model of the Nokia FastMile 4G Receiver. Located on the underside of the unit; see Figure 11. If the SIM card needs to be replaced, the Nokia FastMile 4G Receiver needs to be put in a powered off state before the SIM card can be removed and the new one inserted See section 9.1 for SIM card information for the Compact mono-band and ABA models of the Nokia FastMile 4G Receiver. |

(2 of 2)

Figure 11 shows the location of the physical interfaces on the Compact mono-band and ABA models of the Nokia FastMile 4G Receiver.

Figure 11 Location of physical interfaces on the Compact mono-band and ABA models of the Nokia FastMile 4G Receiver

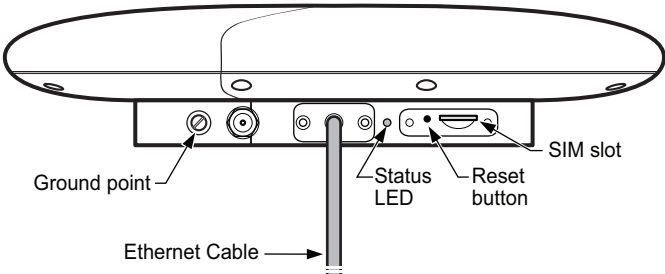

28797

8.2 Physical interfaces of the Compact multi-band models

Table 8 describes the physical interfaces of Compact multi-band models of the Nokia FastMile 4G Receiver.

Table 8 Physical interfaces of the Compact multi-band models of the Nokia FastMile 4G Receiver

| Interface | Description |
|--------------|--|
| Ground point | Point for connecting to external ground. Connection to the ground point is not required. Located on the back of the unit; see Figure 12. |


(1 of 2)

| Interface | Description |
|----------------------|--|
| Ethernet port | <p>Female RJ 45 connector for attaching a customer-supplied Ethernet cable:</p> <ul style="list-style-type: none"> the Model 4G17-A has a floating ground design that supports a Cat5e non-shielded or shielded twisted pair Ethernet cable with standard pinouts that is up to a maximum of 80 m (262 ft) in length all other Compact multi-band models require a cat5e shielded Ethernet cable with standard pinouts that is a maximum of 80 m (262 ft) in length <p>The same Ethernet cable is also used for power (PoE as per IEEE802.3 at type-2). PoE must be provided by a Nokia-approved residential gateway or a Nokia-approved PoE injector (see section 11.2 for information about PoE injectors for use with the FastMile 4G Receiver).</p> <p>The Ethernet port is located on the underside of the unit; see Figure 13.</p> |
| Reset button | <p>Button to reset the Nokia FastMile 4G Receiver.</p> <p>Located on the underside of the unit; see Figure 13.</p> |
| SIM slot | <p>Slot for Nano/4FF SIM card for a Compact multi-band model of the Nokia FastMile 4G Receiver.</p> <p>Located on the underside of the unit; see Figure 13.</p> <p>See section 9.2 for SIM card information for the Compact multi-band models of the Nokia FastMile 4G Receiver.</p> |
| Status LED | <p>Single multifunction LED that indicates status information for the Nokia FastMile 4G Receiver.</p> <p>Located on the top of the unit.</p> <p>See section 10.1 for a figure showing the location of the status LED of the Compact multi-band models and information about its behavior.</p> |
| Signal strength LEDs | <p>Set of five LEDs that work together to indicate the LTE signal strength detected by the Nokia FastMile 4G Receiver.</p> <p>Located on the top of the unit.</p> <p>See section 10.2 for a figure showing the location of the signal strength LEDs and information about their behavior.</p> |
| Measurement button | <p>Button to activate the signal strength LEDs.</p> <p>Located on the side of the unit.</p> <p>See section 10.2 for a figure showing the location of the measurement button and information about using it to activate the signal strength LEDs.</p> |

(2 of 2)

Figure 12 shows the location of the ground point for the Compact multi-band models of the Nokia FastMile 4G Receiver.


Figure 12 Location of the ground point for the Compact multi-band models of the Nokia FastMile 4G Receiver

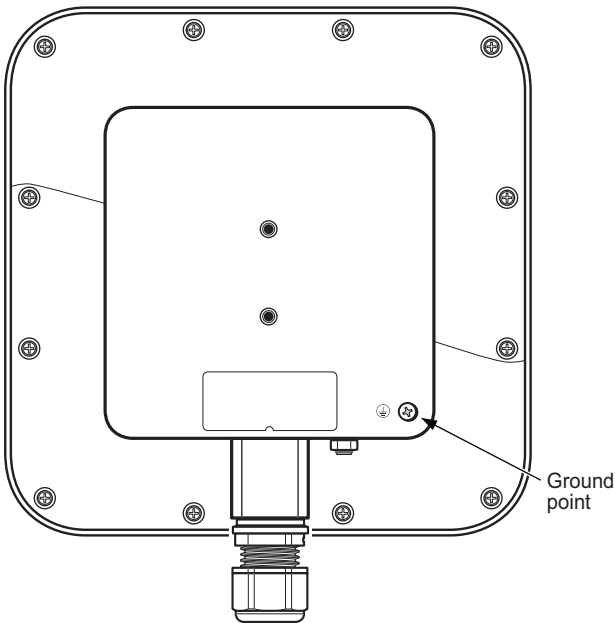

28798

Figure 13 shows the location of the physical interfaces that are on the underside of the Compact multi-band models of the Nokia FastMile 4G Receiver.

Figure 13 Location of physical interfaces on the underside of the Compact multi-band models of the Nokia FastMile 4G Receiver

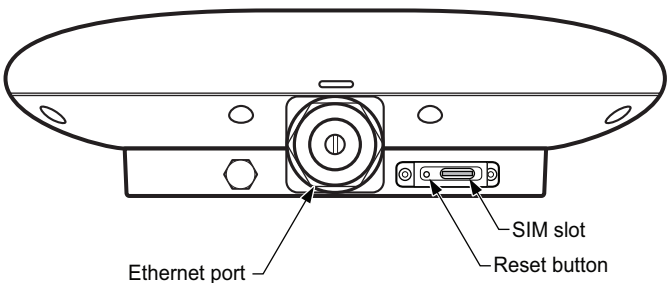

28771

8.3 Physical interfaces of the High gain CBRS model


Table 9 describes the physical interfaces of the High gain CBRS model of the Nokia FastMile 4G Receiver.

Table 9 Physical interfaces of the High gain CBRS model of the Nokia FastMile 4G Receiver

| Interface | Description |
|----------------------|---|
| Ground point | Point for connecting to external ground. Connection to the ground point is not required. Located on the back of the unit; see Figure 14. |
| Measurement button | Button to activate the signal strength LEDs. Located on the underside of the unit; see Figure 15. See section 10.2 for information about using the measurement button to activate the signal strength LEDs. |
| Signal strength LEDs | Set of five LEDs that work together to indicate the LTE signal strength detected by the Nokia FastMile 4G Receiver. Located on the underside of the unit; see Figure 15. See section 10.2 for the behavior of the signal strength LEDs. |
| Ethernet port | Female RJ 45 connector for attaching a customer-supplied cat5e shielded Ethernet cable with standard pinouts that is a maximum of 80 m (262 ft) in length. The same Ethernet cable is also used for power (PoE as per IEEE802.3 at type-2). PoE must be provided by a Nokia-approved residential gateway or a Nokia-approved PoE injector (see section 11.2 for information about PoE injectors for use with the FastMile 4G Receiver). The Ethernet port is located on the underside of the unit; see Figure 15. |
| Status LED | Single multifunction LED that indicates status information for the Nokia FastMile 4G Receiver. Located on the underside of the unit; see Figure 15. See section 10.1 for the behavior of the status LED. |
| SIM slot | Slot for Nano/4FF SIM card for the High gain CBRS model of the Nokia FastMile 4G Receiver. Located on the underside of the unit; see Figure 15. See section 9.3 for SIM card information for the High gain CBRS model of the Nokia FastMile 4G Receiver. |
| Reset button | Button to reset the Nokia FastMile 4G Receiver. Located on the underside of the unit; see Figure 15. |

Figure 14 shows the location of the ground point for the High gain CBRS model of the Nokia FastMile 4G Receiver.


Figure 14 Location of the ground point for High gain CBRS model of the Nokia FastMile 4G Receiver

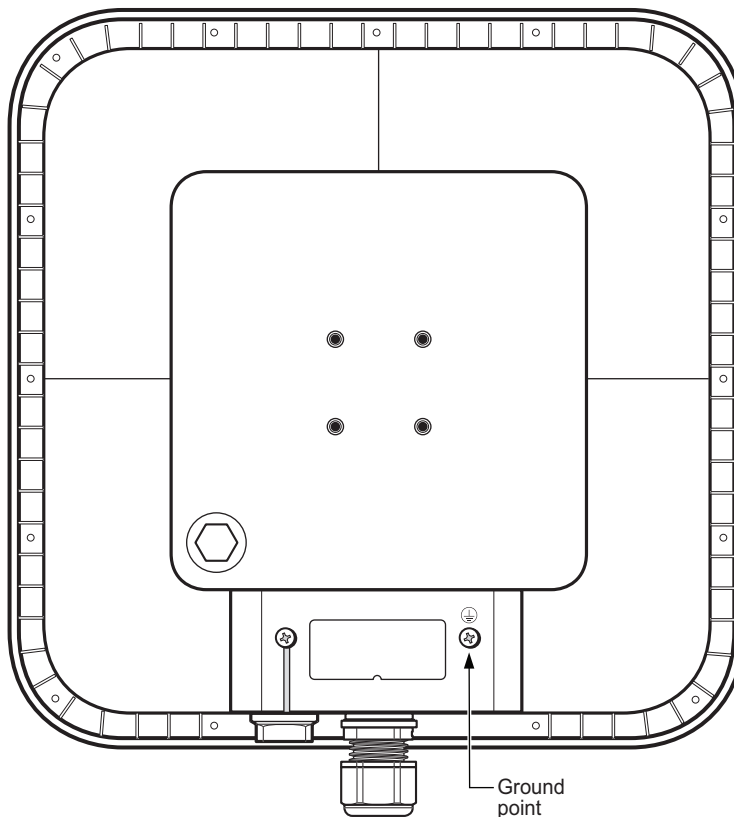

36313

Figure 15 shows the location of the physical interfaces that are on the underside of the High gain CBRS model of the Nokia FastMile 4G Receiver.

Figure 15 **Location of physical interfaces on the underside of the High gain CBRS model type of the Nokia FastMile 4G Receiver**

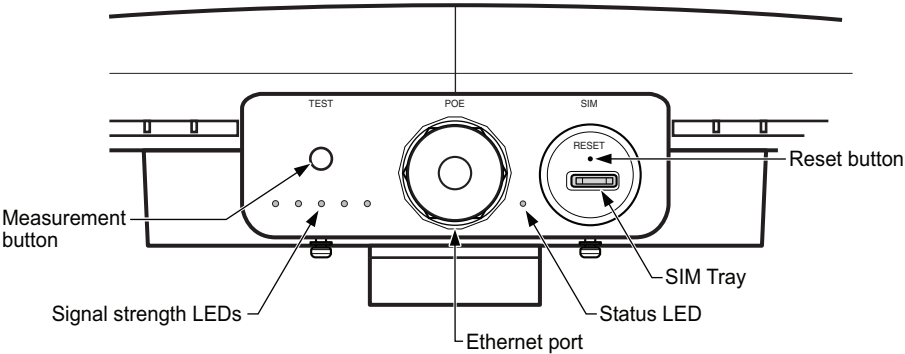

36314

9 SIM cards

9.1 SIM card information for the Compact mono-band and ABA models

9.2 SIM card information for the Compact multi-band models


9.3 SIM card information for the High gain CBRs model

9.1 SIM card information for the Compact mono-band and ABA models

The SIM card installed in the Nokia FastMile 4G Receiver allows the Nokia FastMile 4G Receiver to connect to the LTE network and determines the remote management protocol supported for the Nokia FastMile 4G Receiver; see section 6.6 for more information about remote management.

Figure 16 shows a detailed view of the SIM card slot on the Compact mono-band and ABA models of the Nokia FastMile 4G Receiver.

Figure 16 Detailed view of SIM card slot on the Compact mono-band and ABA models

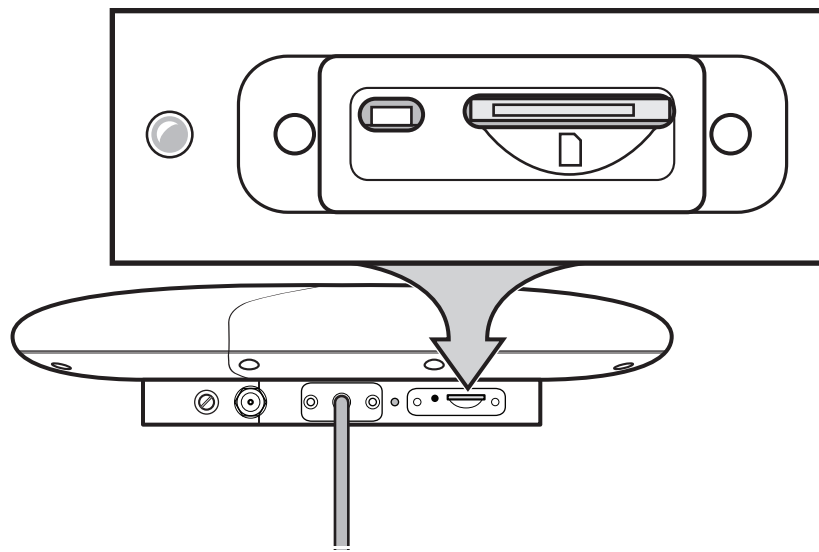

28642


The Nokia FastMile 4G Receiver Installation Guide provides detailed steps for inserting the SIM card. The SIM card must be appropriate for the remote management protocol to be used for the Nokia FastMile 4G Receiver.

9.2 SIM card information for the Compact multi-band models

The SIM card installed in the Nokia FastMile 4G Receiver allows the Nokia FastMile 4G Receiver to connect to the LTE network and determines the remote management protocol supported for the Nokia FastMile 4G Receiver; see section 6.6 for more information about remote management.

Figure 17 shows a detailed view of the SIM card slot on the Compact multi-band models of the Nokia FastMile 4G Receiver.

Figure 17 Detailed view of SIM card slot on the Compact multi-band models

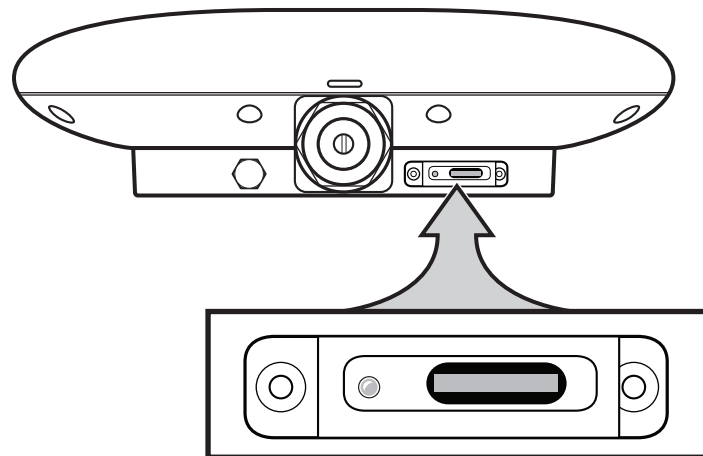


28802

The Nokia FastMile 4G Receiver Installation Guide provides detailed steps for inserting the SIM card. The SIM card must be appropriate for the remote management protocol to be used for the Nokia FastMile 4G Receiver.

9.3 SIM card information for the High gain CBRs model

The SIM card installed in the Nokia FastMile 4G Receiver allows the Nokia FastMile 4G Receiver to connect to the LTE network and determines the remote management protocol supported for the Nokia FastMile 4G Receiver; see section 6.6 for more information about remote management.

Figure 18 shows a detailed view of the SIM card slot on the High gain CBRs model of the Nokia FastMile 4G Receiver.

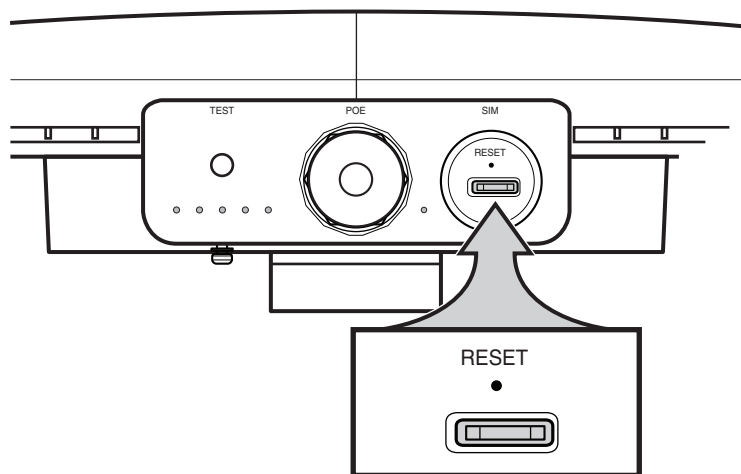Figure 18 Detailed view of SIM card slot on the High gain CBRS model

36315

The Nokia FastMile 4G Receiver Installation Guide provides detailed steps for inserting the SIM card. The SIM card must be appropriate for the remote management protocol to be used for the Nokia FastMile 4G Receiver.

10 LEDs

10.1 Status LED


10.2 Signal strength LEDs

10.1 Status LED

All models of the Nokia FastMile 4G Receiver have a status LED:


- Figure 19 shows the location of the status LED on the Compact mono-band and ABA models
- Figure 20 shows the location of the status LED on the Compact multi-band models
- Figure 21 shows the location of the status LED on the High gain CBRS model

Figure 19 Location of the status LED on the Compact mono-band and ABA models of the Nokia FastMile 4G Receiver

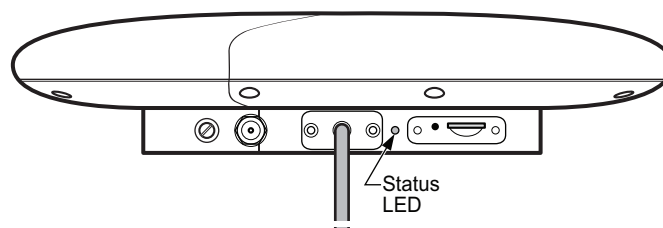


28799

Figure 20 Location of the status LED on the Compact multi-band models of the Nokia FastMile 4G Receiver

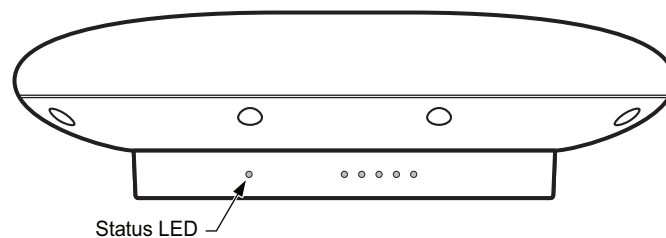

28772

Figure 21 Location of the status LED on the High gain CBRs model of the Nokia FastMile 4G Receiver

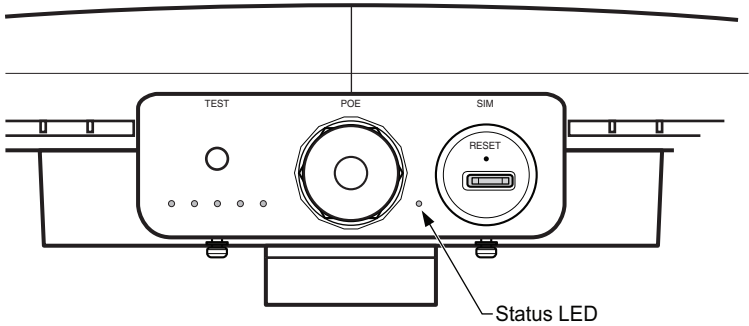

36316

The status LED behaves differently depending on whether the Nokia FastMile 4G Receiver is managed from:

- the Nokia Altiplano FastMile Controller (through NETCONF): see Table 10
- an ACS (through TR-069): see Table 11



Note — The NETCONF version of the FastMile 4G Receiver for remote management from the Nokia Altiplano FastMile Controller is not supported from FastMile 4G Release 2.0.03a onwards

Table 10 Status LED behavior for Nokia FastMile 4G Receiver managed from the Nokia Altiplano FastMile Controller

| LED color | LED priority | LED behavior | Status information |
|-----------|-----------------|---------------------------|----------------------------------|
| Blue | First priority | Blinking | Bluetooth connection in progress |
| | | Solid | Bluetooth connection established |
| | | Off | No Bluetooth connection |
| Red | Second priority | Blinking | Critical alarm |
| | | Solid | Major or minor alarm |
| | | Off | No alarm |
| Green | Third priority | Blinking twice per second | Kernel and application start up |
| | | Blinking one per second | Application start up |
| | | Solid | Start up |
| | | Off | OAM link is established |

Table 11 **Status LED behavior for Nokia FastMile 4G Receiver managed from an ACS**

| LED color | LED priority | LED behavior | Status information |
|-----------|-----------------|---------------------------|----------------------------------|
| Blue | First priority | Blinking | Bluetooth connection in progress |
| | | Solid | Bluetooth connection established |
| | | Off | No Bluetooth connection |
| Green | Second priority | Blinking twice per second | Kernel and application start up |
| | | Blinking one per second | Application start up |
| | | Solid | Start up |
| | | Off | Software is stable |

10.2 Signal strength LEDs


Signal strength LEDs are provided on the following model types of the Nokia FastMile 4G Receiver:

- Compact multi-band models (see section [10.2.1](#))
- High gain CBRS model (see section [10.2.2](#))

10.2.1 Signal strength LEDs on the Compact multi-band models

Five signal strength LEDs are provided on the Compact multi-band models of the Nokia FastMile 4G Receiver as shown in Figure 22.


Figure 22 **Location of the signal strength LEDs on the Compact multi-band models**

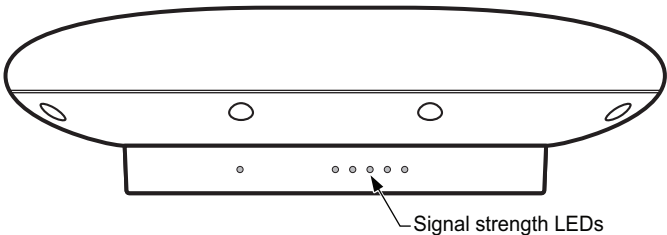

28773

The signal strength LEDs can be activated by pressing the measurement button on the side of the Compact multi-band models of the Nokia FastMile 4G Receiver. Figure 23 shows the location of the measurement button.

Figure 23 Location of the measurement button on the Compact multi-band models

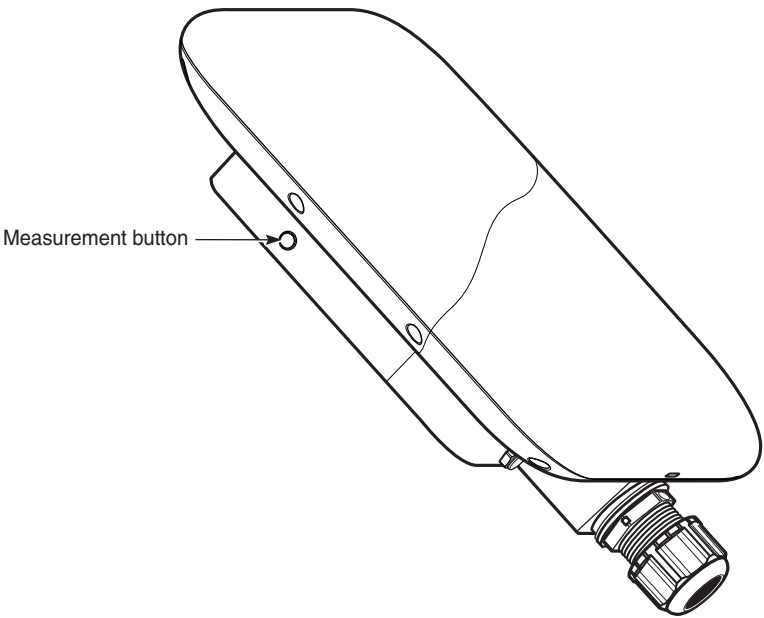

28885

The signal strength LEDs act as a set to indicate the LTE signal strength detected by the Nokia FastMile 4G Receiver. For example, if the signal strength is fourth level, then LEDs 1, 2, 3, and 4 are lit. Table 12 lists the threshold values for the signal strength LEDs, but note that the threshold values can be changed through an ACS.


Table 12 Signal strength LED threshold values

| Number of lit LEDs | Threshold |
|--------------------|------------------|
| None | <-110dBm |
| One | -110 to -106 dBm |
| Two | -105 to -101dBm |
| Three | -100 to -96dBm |
| Four | -95 to -91dBm |
| Five | >=-90dBm |

10.2.2 Signal strength LEDs on the High gain CBRS model

Five signal strength LEDs are provided on the underside of the High gain CBRS model of the Nokia FastMile 4G Receiver as shown in Figure 24.


Figure 24 Location of the signal strength LEDs on the High gain CBRS model

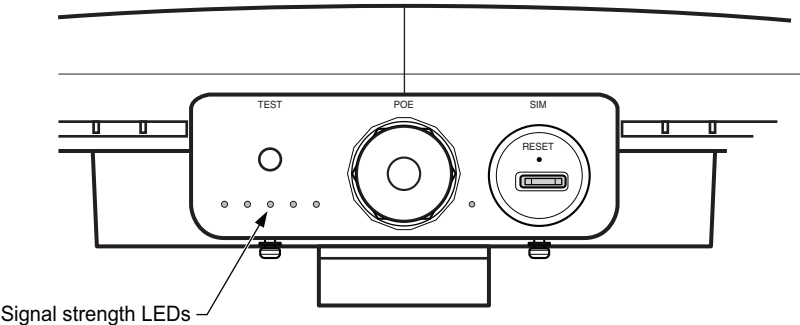

36317

The signal strength LEDs can be activated by pressing the measurement button on the underside of the High gain CBRS model of the Nokia FastMile 4G Receiver. Figure 25 shows the location of the measurement button.

Figure 25 Location of the measurement button on the High gain CBRS model

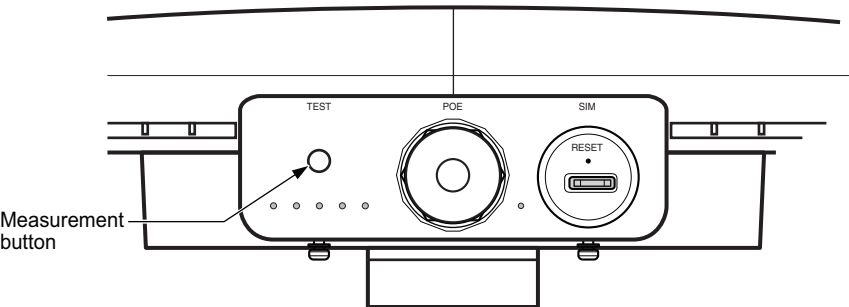

36318

The signal strength LEDs act as a set to indicate the LTE signal strength detected by the Nokia FastMile 4G Receiver. For example, if the signal strength is fourth level, then LEDs 1, 2, 3, and 4 are lit. Table 13 lists the threshold values for the signal strength LEDs, but note that the threshold values can be changed through an ACS.

Table 13 **Signal strength LED threshold values**

| Number of lit LEDs | Threshold |
|--------------------|------------------|
| None | <-110dBm |
| One | -110 to -106 dBm |
| Two | -105 to -101dBm |
| Three | -100 to -96dBm |
| Four | -95 to -91dBm |
| Five | >=-90dBm |

11 Power information

11.1 Power information for the Nokia FastMile 4G Receiver

11.2 Available PoE injectors

11.1 Power information for the Nokia FastMile 4G Receiver

The Nokia FastMile 4G Receiver receives power through a Cat5e shielded Ethernet cable (or through a non-shielded Ethernet cable for the Model 4G17-A only) that must be connected to a Nokia-approved residential gateway or to a Nokia-approved PoE injector (see section 11.2 for information about PoE injectors available from Nokia for use with the FastMile 4G Receiver).

- Compact mono-band and ABA models have a pre-attached Cat5e shielded twisted pair Ethernet cable with a male RJ 45 connector at the free end. An additional length of cat5e shielded Ethernet cabling can be attached to the Ethernet cable up to a maximum of 80 m (262 ft) in combined length. A waterproof IP67 female RJ 45 plug is needed to connect the Ethernet cabling to the Ethernet cable of the Nokia FastMile 4G Receiver. See section 8.1 for more information about the pre-attached Ethernet cable.
- Compact multi-band models and the High gain CBRS model have an Ethernet port that has a female RJ 45 connector, and require a customer-supplied Ethernet cable (See section 8.2 for more information about the Ethernet port):
 - the Model 4G17-A has a floating ground design that supports a cat5e non-shielded or shielded twisted pair Ethernet cable with standard pinouts that is up to a maximum of 80 m (262 ft) in length
 - all other Compact multi-band models and the High gain CBRS model require a cat5e shielded Ethernet cable with standard pinouts that is a maximum of 80 m (262 ft) in length

See section 12.4 for power consumption information.

11.2 Available PoE injectors

If the Nokia FastMile 4G Receiver is going to be powered through a PoE injector, the PoE injector must be a Nokia-approved PoE injector.

The following classes of PoE injectors are available from Nokia for use with the FastMile 4G Receiver:

- Class I: can comply with EN 60950-1 if grounding is provided on the wall socket; should be put as close as possible to the place where the Ethernet cable enters the home
- Class II: can comply with EN 60950-1 if no grounding is provided on the wall socket; can also be used if grounding is provided on the wall socket

The following tables list the PoE injectors that are available from Nokia for use with the FastMile 4G Receiver:

- Table 14 lists the PoE injectors that are available from Nokia for use with the Model 4G17-A
- Table 15 lists the PoE injectors that are available from Nokia for use with all other models of the FastMile 4G Receiver

Table 14 Available PoE injectors for Model 4G17-A

| Class | Model | Description | Color | Nokia part number | Vendor part number |
|----------|---------------------|---|-------|-------------------|--|
| Class II | 15w FWAPoE2-CC-EU-W | 15w G1344B 50V 0.3A, MAINS CORD TYPE C-EU | White | 3TG-01541-BB | G1344B-530-030-PSE1000, CH-221+CH-705,White,EU |

Table 15 Available PoE injectors for models other than Model 4G17-A

| Class | Model | Description | Color | Nokia part number | Vendor part number |
|----------|----------------------|---|-------|-------------------|--|
| Class I | 15w FWAPoE2-CB-US-W | 15w G1344A 50V 0.3A, MAINS CORD TYPE B-US | White | 3TG-01541-AA | G1344A-530-030-PSE1000, CH-331C+CH-706,White,US |
| | 15w FWAPoE2-CEF-EU-W | 15w G1344A 50V 0.3A, MAINS CORD TYPE E&F-EU | White | 3TG-01541-AB | G1344A-530-030-PSE1000, CH-231+CH-706,White,EU |
| | 30w FWAPoE1-CB-US-W | 30w G0545 53V0.6A, MAINS CORD TYPE B-US | White | 3TG-00041-AA | G0545-530-060-PSE1000, CH-331C+CH-706,White,US |
| | 30w FWAPoE1-CEF-EU-W | 30w G0545 53V0.6A, MAINS CORD TYPE E&F-EU | White | 3TG-00041-AB | G0545-530-060-PSE1000, CH-231+CH-706,White,EU |
| | 30w FWAPoE1-CG-UK-W | 30w G0545 53V0.6A, MAINS CORD TYPE G-UK | White | 3TG-00041-AC | G0545-530-060-PSE1000, CH-1601+CH-706,White,UK |
| | 30w FWAPoE1-CI-CCC-W | 30w G0545 53V0.6A, MAINS CORD TYPE I-CCC | White | 3TG-00041-AD | G0545-530-060-PSE1000, CH-133+CH-706,White,CCC |
| | 30w FWAPoE1-CI-AU-W | 30w G0545 53V0.6A, MAINS CORD TYPE I-AU | White | 3TG-00041-AE | G0545-530-060-PSE1000, CH-1231+CH-706,White,AU |
| | 30w FWAPoE1-CB-PSE-W | 30w G0545 53V0.6A, MAINS CORD TYPE B-PSE | White | 3TG-00041-AF | G0545-530-060-PSE1000, CH-1131+CH-1106,White,PSE |
| | 30w FWAPoE1-CD-BIS-W | 30w G0545 53V0.6A, MAINS CORD TYPE D-BIS | White | 3TG-00041-AG | G0545-530-060-PSE1000, CH-2002+CH-706,White,BIS |
| Class II | 30w FWAPoE1-CC-EU-W | 30w G0545 53V0.6A, MAINS CORD TYPE C-EU | White | 3TG-00041-BB | G0545N-530-060-PSE1000, CH-221+CH-706,White,EU |

Figure 26 shows the PoE injectors available from Nokia.

Figure 26 PoE injectors available from Nokia

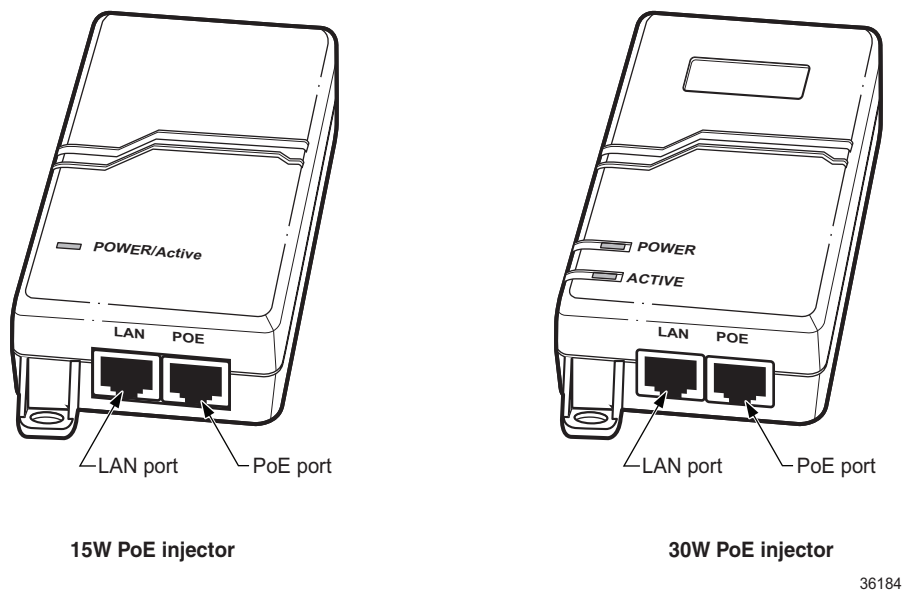


Table 16 provides LED information for the PoE injectors available from Nokia.

Table 16 LED information for PoE injectors available from Nokia

| PoE injector | LED information |
|--------------|---|
| 15W | Power/Active LED: <ul style="list-style-type: none">Green solid: PoE power on and legal device connectedYellow solid: PoE power on and no device or illegal device connectedGreen and yellow flashing alternately: PoE power on but short circuited |
| 30W | Power LED and Active LED: <ul style="list-style-type: none">Both LEDs green solid: PoE power on and legal device connectedPower LED green solid and Active LED off: PoE power on and no device or illegal device connectedPower LED green solid and Active LED green flashing: PoE power on but short circuited |

12 Performance information

12.1 Performance overview

12.2 Throughput information

12.3 Carrier aggregation information

12.4 Power consumption information

12.1 Performance overview

This chapter provides the following performance information for the Nokia FastMile 4G Receiver:

- throughput information: see section [12.2](#)
- carrier aggregation information: see section [12.3](#)
- power consumption information: section [12.4](#)

Some performance metrics for the Nokia FastMile 4G Receiver can be viewed through the Nokia Wireless app or Web UI or accessed through the Nokia Altiplano FastMile Controller:

- see chapter [13](#) for more information about viewing information for the Nokia FastMile 4G Receiver through the Nokia Wireless app
- see chapter [14](#) for more information about viewing information for the Nokia FastMile 4G Receiver through the Web UI
- see the documentation for the Nokia Altiplano FastMile Controller for more information about accessing information for the Nokia FastMile 4G Receiver through the Nokia Altiplano FastMile Controller

12.2 Throughput information

Table [17](#) provides LTE throughput information for the Nokia FastMile 4G Receiver.

Table 17 LTE throughput information

| Mode | UDP DL (3CA) | TCP DL (3CA) | UDP UL | TCP UL |
|------|--------------|--------------|--------|--------|
| FDD | 560M | 360M | 73M | 73M |
| TDD | 415M | 360M | 14M | 18M |

The results in the above table are based on the following:

- Downlink: DL 3xCA 2x2MIMO 256 QAM
- Uplink: single carrier 64 QAM
- FDD inter-band 3CA
- TDD Band 41 intra-Band 2CA, configuration is configuration 2, subframe 7
- Base Bandwidth 20M
- Data rates can have a margin of 2%
- Packet length is 1470B for UDP
- Window is 1000k for TCP
- Data rates are for IPv4 cases
- Data forwarding working on router model

The end-to-end throughput is achieved in the conductive mode with cable connected.

Ethernet throughput for the Nokia FastMile 4G Receiver is as per standard Ethernet 1000BASE-T, with a maximum of 1000 Mbps. The Ethernet link gets negotiated at 1000 Mbps when a residential gateway or a PoE injector is connected to the Nokia FastMile 4G Receiver.

12.3 Carrier aggregation information

The following tables provide carrier aggregation support information for the Nokia FastMile 4G Receiver:

- Model 4G01-A and 4G01-B (2*2 MIMO downlink with SISO uplink): Table [18](#)
- Model 4G01-C (2*2 MIMO downlink with SISO uplink): Table [19](#)
- Model 4G02-A (2*2 MIMO downlink with SISO uplink): Table [20](#)
- Model 4G03-A (2*2 MIMO downlink with SISO uplink): Table [21](#)
- Model 4G04-A (2*2 MIMO downlink with SISO uplink): Table [22](#)
- Model 4G05-A and 4G05-B (2*2 MIMO downlink): Table [23](#)
- Model 4G06-A (2*2 MIMO downlink): Table [24](#)
- Model 4G17-A (2*2 MIMO downlink with SISO uplink): Table [25](#)



Note — B48 for the 4G01-B has not been FCC CBRS Part96 certified and is not ready for commercial use.

Table 18 Carrier aggregation support for Model 4G01-A and Model 4G01-B
(2*2 MIMO downlink with SISO uplink)

| Index | Downlink | | | | Upload | |
|-------|----------|------|------|------|--------|-----|
| | PCC | SCC1 | SCC2 | SCC3 | PCC | SCC |
| 1 | 42A | 43A | | | | |
| 2 | 43A | 42A | | | | |
| 3 | 42C | | | | | |
| 4 | 43C | | | | | |
| 5 | 48C | | | | | |
| 6 | 42A | 42A | | | | |
| 7 | 43A | 43A | | | | |
| 8 | 48A | 48A | | | | |
| 9 | 42A | 43A | | | 42A | 43A |
| 10 | 43A | 42A | | | 43A | 42A |
| 11 | 42C | | | | 42C | |
| 12 | 43C | | | | 43C | |
| 13 | 48C | | | | 48C | |
| 14 | 42A | 42A | | | 42A | 42A |
| 15 | 43A | 43A | | | 43A | 43A |
| 16 | 48A | 48A | | | 48A | 48A |
| 17 | 42A | 43C | | | | |
| 18 | 43A | 42C | | | | |
| 19 | 48A | 48C | | | | |
| 20 | 42A | 42A | 43A | | | |
| 21 | 42A | 43A | 43A | | | |
| 22 | 43A | 43A | 42A | | | |
| 23 | 43A | 42A | 42A | | | |
| 24 | 42D | | | | | |
| 25 | 43D | | | | | |
| 26 | 48D | | | | | |
| 27 | 42A | 42A | 42A | | | |
| 28 | 43A | 43A | 43A | | | |
| 29 | 48A | 48A | 48A | | | |
| 30 | 42A | 43C | | | 42A | 43A |
| 31 | 43A | 42C | | | 43A | 42A |

(1 of 3)

| Index | Downlink | | | | Upload | |
|-------|----------|------|------|------|--------|-----|
| | PCC | SCC1 | SCC2 | SCC3 | PCC | SCC |
| 32 | 48A | 48C | | | 48A | 48A |
| 33 | 42A | 42A | 43A | | 42A | 42A |
| 34 | 42A | 43A | 43A | | 42A | 43A |
| 35 | 43A | 43A | 42A | | 43A | 43A |
| 36 | 43A | 42A | 42A | | 43A | 42A |
| 37 | 42D | | | | 42C | |
| 38 | 43D | | | | 43C | |
| 39 | 48D | | | | 48C | |
| 40 | 42A | 42A | 42A | | 42A | 42A |
| 41 | 43A | 43A | 43A | | 43A | 43A |
| 42 | 48A | 48A | 48A | | 48A | 48A |
| 43 | 42A | 43D | | | | |
| 44 | 43A | 42D | | | | |
| 45 | 48A | 48D | | | | |
| 46 | 42A | 42A | 42A | 43A | | |
| 47 | 42A | 42A | 43A | 43A | | |
| 48 | 42A | 43A | 43A | 43A | | |
| 49 | 43A | 42A | 42A | 42A | | |
| 50 | 43A | 43A | 42A | 42A | | |
| 51 | 43A | 43A | 43A | 42A | | |
| 52 | 42E | | | | | |
| 53 | 43E | | | | | |
| 54 | 48E | | | | | |
| 55 | 48A | 48A | 48C | | | |
| 56 | 42A | 42A | 42A | 42A | | |
| 57 | 43A | 43A | 43A | 43A | | |
| 58 | 48A | 48A | 48A | 48A | | |
| 59 | 42A | 43D | | | 42A | 43A |
| 60 | 43A | 42D | | | 43A | 42A |
| 61 | 48A | 48D | | | 48A | 48A |
| 62 | 42A | 42A | 42A | 43A | 42A | 42A |
| 63 | 42A | 42A | 43A | 43A | 42A | 42A |
| 64 | 42A | 43A | 43A | 43A | 42A | 43A |

(2 of 3)

| Index | Downlink | | | | Upload | |
|-------|----------|------|------|------|--------|-----|
| | PCC | SCC1 | SCC2 | SCC3 | PCC | SCC |
| 65 | 43A | 42A | 42A | 42A | 43A | 42A |
| 66 | 43A | 43A | 42A | 42A | 43A | 43A |
| 67 | 43A | 43A | 43A | 42A | 43A | 43A |
| 68 | 42E | | | | 42C | |
| 69 | 43E | | | | 43C | |
| 70 | 48E | | | | 48C | |
| 71 | 48A | 48A | 48C | | 48A | 48A |
| 72 | 42A | 42A | 42A | 42A | 42A | 42A |
| 73 | 43A | 43A | 43A | 43A | 43A | 43A |
| 74 | 48A | 48A | 48A | 48A | 48A | 48A |

(3 of 3)

Table 19 Carrier aggregation support for Model 4G01-C (2*2 MIMO downlink with SISO uplink)

| Index | Downlink | | | | Uplink | |
|-------|----------|------|------|------|--------|------|
| | PCC | SCC1 | SCC2 | SCC3 | PCC | SCC1 |
| 1 | 48A | 48A | | | | |
| 2 | 48C | | | | | |
| 3 | 48A | 48A | | | 48A | 48A |
| 4 | 48C | | | | 48C | |
| 5 | 48A | 48A | 48A | | | |
| 6 | 48C | 48A | | | | |
| 7 | 48D | | | | | |
| 8 | 48A | 48A | 48A | | 48A | 48A |
| 9 | 48C | 48A | | | 48A | 48A |
| 10 | 48D | | | | 48C | |
| 11 | 48A | 48A | 48A | 48A | | |
| 12 | 48C | 48A | 48A | | | |
| 13 | 48D | 48A | | | | |
| 14 | 48E | | | | | |
| 15 | 48A | 48A | 48A | 48A | 48A | 48A |
| 16 | 48C | 48A | 48A | | 48A | 48A |
| 17 | 48D | 48A | | | 48A | 48A |

Table 20 Carrier aggregation support for Model 4G02-A (2*2 MIMO downlink with SISO uplink)

| Index | Downlink | | | | Uplink | |
|-------|----------|------|------|------|--------|------|
| | PCC | SCC1 | SCC2 | SCC3 | PCC | SCC1 |
| 1 | 3C | | | | | |
| 2 | 3A | 3A | | | | |
| 3 | 3C | | | | 3C | |
| 4 | 3A | 3A | | | 3A | 3A |
| 5 | 3D | | | | | |
| 6 | 3A | 3A | 3A | | | |
| 7 | 3D | | | | 3C | |
| 8 | 3A | 3A | 3A | | 3A | 3A |
| 9 | 3E | | | | | |
| 10 | 3A | 3A | 3A | 3A | | |
| 11 | 3E | | | | 3C | |
| 12 | 3A | 3A | 3A | 3A | 3A | 3A |

Table 21 Carrier aggregation support for Model 4G03-A (2*2 MIMO downlink with SISO uplink)

| index | Downlink | | Uplink | |
|-------|----------|-----|--------|-----|
| | PCC | SCC | PCC | SCC |
| 1 | 7C | | | |
| 2 | 38C | | | |
| 3 | 40C | | | |
| 4 | 41C | | | |
| 5 | 7A | 7A | | |
| 6 | 38A | 38A | | |
| 7 | 40A | 40A | | |
| 8 | 41A | 41A | | |
| 9 | 7C | | 7C | |
| 10 | 38C | | 38C | |
| 11 | 40C | | 40C | |
| 12 | 41C | | 41C | |
| 13 | 7A | 7A | 7A | 7A |

(1 of 3)

| index | Downlink | | Uplink | |
|-------|----------|-----|--------|-----|
| | PCC | SCC | PCC | SCC |
| 14 | 38A | 38A | 38A | 38A |
| 15 | 40A | 40A | 40A | 40A |
| 16 | 41A | 41A | 41A | 41A |
| 17 | 7D | | | |
| 18 | 38D | | | |
| 19 | 40D | | | |
| 20 | 41D | | | |
| 21 | 7C | 7A | | |
| 22 | 38C | 38A | | |
| 23 | 40C | 40A | | |
| 24 | 41C | 41A | | |
| 25 | 7D | | 7C | |
| 26 | 38D | | 38C | |
| 27 | 40D | | 40C | |
| 28 | 41D | | 41C | |
| 29 | 7C | 7A | 7A | 7A |
| 30 | 38C | 38A | 38A | 38A |
| 31 | 40C | 40A | 40A | 40A |
| 32 | 41C | 41A | 41A | 41A |
| 33 | 7E | | | |
| 34 | 38E | | | |
| 35 | 40E | | | |
| 36 | 41E | | | |
| 37 | 7C | 7C | | |
| 38 | 38C | 38C | | |
| 39 | 40C | 40C | | |
| 40 | 41C | 41C | | |
| 41 | 7E | | 7C | |
| 42 | 38E | | 38C | |
| 43 | 40E | | 40C | |
| 44 | 41E | | 41C | |
| 45 | 7C | 7C | 7A | 7A |
| 46 | 38C | 38C | 38A | 38A |

(2 of 3)

| index | Downlink | | Uplink | |
|-------|----------|-----|--------|-----|
| | PCC | SCC | PCC | SCC |
| 47 | 40C | 40C | 40A | 40A |
| 48 | 41C | 41C | 41A | 41A |

(3 of 3)

Table 22 Carrier aggregation support for Model 4G04-A (2*2 MIMO downlink with SISO uplink)

| Index | Downlink | | | Uplink | |
|-------|----------|------|------|--------|------|
| | PCC | SCC1 | SCC2 | PCC | SCC1 |
| 1 | 3A | 7A | | | |
| 2 | 3A | 20A | | | |
| 3 | 3A | 32A | | | |
| 4 | 7A | 3A | | | |
| 5 | 20A | 3A | | | |
| 6 | 7A | 20A | | | |
| 7 | 7A | 32A | | | |
| 8 | 20A | 7A | | | |
| 9 | 20A | 32A | | | |
| 10 | 3A | 7A | | 3A | 7A |
| 11 | 3A | 20A | | 3A | 20A |
| 12 | 7A | 3A | | 7A | 3A |
| 13 | 20A | 3A | | 20A | 3A |
| 14 | 7A | 20A | | 7A | 20A |
| 15 | 20A | 7A | | 20A | 7A |
| 16 | 3A | 7A | 20A | | |
| 17 | 7A | 3A | 20A | | |
| 18 | 20A | 7A | 3A | | |
| 19 | 3A | 20A | 32A | | |
| 20 | 20A | 3A | 32A | | |

Table 23 Carrier aggregation support for Model 4G05-A and Model 4G05-B (2*2 MIMO downlink)

| Index | Downlink | | |
|-------|----------|------|------|
| | PCC | SCC1 | SCC2 |
| 1 | 1A | 3A | |
| 2 | 3A | 1A | |
| 3 | 1A | 7A | |
| 4 | 7A | 1A | |
| 5 | 1A | 38A | |
| 6 | 38A | 1A | |
| 7 | 1A | 41A | |
| 8 | 41A | 1A | |
| 9 | 3A | 7A | |
| 10 | 7A | 3A | |
| 11 | 3A | 20A | |
| 12 | 20A | 3A | |
| 13 | 3A | 28A | |
| 14 | 28A | 3A | |
| 15 | 3A | 38A | |
| 16 | 38A | 3A | |
| 17 | 3A | 40A | |
| 18 | 40A | 3A | |
| 19 | 3A | 41A | |
| 20 | 41A | 3A | |
| 21 | 28A | 40A | |
| 22 | 40A | 28A | |
| 23 | 28A | 41A | |
| 24 | 41A | 28A | |
| 25 | 3C | | |
| 26 | 28C | | |
| 27 | 40C | | |
| 28 | 41C | | |
| 29 | 1A | 3C | |
| 30 | 3C | 1A | |
| 31 | 1C | 7A | |

(1 of 4)

| Index | Downlink | | |
|-------|----------|------|------|
| | PCC | SCC1 | SCC2 |
| 32 | 7A | 1C | |
| 33 | 3A | 7C | |
| 34 | 7C | 3A | |
| 35 | 3A | 38C | |
| 36 | 38C | 3A | |
| 37 | 3A | 40C | |
| 38 | 40C | 3A | |
| 39 | 3A | 41C | |
| 40 | 41C | 3A | |
| 41 | 28A | 40C | |
| 42 | 40C | 28A | |
| 43 | 28A | 41C | |
| 44 | 41C | 28A | |
| 45 | 1A | 3A | 7A |
| 46 | 3A | 1A | 7A |
| 47 | 7A | 3A | 1A |
| 48 | 1A | 3A | 38A |
| 49 | 3A | 1A | 38A |
| 50 | 38A | 3A | 1A |
| 51 | 1A | 3A | 41A |
| 52 | 3A | 1A | 41A |
| 53 | 41A | 3A | 1A |
| 54 | 3A | 28A | 40A |
| 55 | 28A | 3A | 40A |
| 56 | 40A | 28A | 3A |
| 57 | 3A | 28A | 41A |
| 58 | 28A | 3A | 41A |
| 59 | 41A | 28A | 3A |
| 60 | 41D | | |
| 61 | 1C | 3C | |
| 62 | 3C | 1C | |
| 63 | 1A | 3D | |
| 64 | 3D | 1A | |

(2 of 4)

| Index | Downlink | | |
|-------|----------|------|------|
| | PCC | SCC1 | SCC2 |
| 65 | 3C | 7C | |
| 66 | 7C | 3C | |
| 67 | 3A | 7D | |
| 68 | 7D | 3A | |
| 69 | 3C | 38C | |
| 70 | 38C | 3C | |
| 71 | 3A | 38D | |
| 72 | 38D | 3A | |
| 73 | 3C | 40C | |
| 74 | 40C | 3C | |
| 75 | 3A | 40D | |
| 76 | 40D | 3A | |
| 77 | 3C | 41C | |
| 78 | 41C | 3C | |
| 79 | 3A | 41D | |
| 80 | 41D | 3A | |
| 81 | 28C | 40C | |
| 82 | 40C | 28C | |
| 83 | 28A | 40D | |
| 84 | 40D | 28A | |
| 85 | 28C | 41C | |
| 86 | 41C | 28C | |
| 87 | 28A | 41D | |
| 88 | 41D | 28A | |
| 89 | 1A | 3A | 7C |
| 90 | 3A | 1A | 7C |
| 91 | 7C | 3A | 1A |
| 92 | 1A | 3C | 7A |
| 93 | 3C | 1A | 7A |
| 94 | 7A | 3C | 1A |
| 95 | 1A | 3A | 38C |
| 96 | 3A | 1A | 38C |
| 97 | 38C | 3A | 1A |

(3 of 4)

| Index | Downlink | | |
|-------|----------|------|------|
| | PCC | SCC1 | SCC2 |
| 98 | 1A | 3C | 38A |
| 99 | 3C | 1A | 38A |
| 100 | 38A | 3C | 1A |
| 101 | 1A | 3A | 41C |
| 102 | 3A | 1A | 41C |
| 103 | 41C | 3A | 1A |
| 104 | 1A | 3C | 41A |
| 105 | 3C | 1A | 41A |
| 106 | 41A | 3C | 1A |
| 107 | 3A | 28A | 40C |
| 108 | 28A | 3A | 40C |
| 109 | 40C | 28A | 3A |
| 110 | 3A | 28C | 40A |
| 111 | 28C | 3A | 40A |
| 112 | 40A | 28C | 3A |
| 113 | 3A | 28A | 41C |
| 114 | 28A | 3A | 41C |
| 115 | 41C | 28A | 3A |
| 116 | 3A | 28C | 41A |
| 117 | 28C | 3A | 41A |
| 118 | 41A | 28C | 3A |

(4 of 4)

Table 24 Carrier aggregation support for Model 4G06-A (2*2 MIMO downlink)

| Index | Downlink | | | |
|-------|----------|------|------|------|
| | PCC | SCC1 | SCC2 | SCC3 |
| 1 | 2A | 4A | | |
| 2 | 4A | 2A | | |
| 3 | 2A | 7A | | |
| 4 | 7A | 2A | | |
| 5 | 2A | 28A | | |
| 6 | 28A | 2A | | |

(1 of 5)

| Index | Downlink | | | |
|-------|----------|------|------|------|
| | PCC | SCC1 | SCC2 | SCC3 |
| 7 | 2A | 42A | | |
| 8 | 42A | 2A | | |
| 9 | 2A | 48A | | |
| 10 | 48A | 2A | | |
| 11 | 2A | 66A | | |
| 12 | 66A | 2A | | |
| 13 | 4A | 7A | | |
| 14 | 7A | 4A | | |
| 15 | 4A | 28A | | |
| 16 | 28A | 4A | | |
| 17 | 4A | 42A | | |
| 18 | 42A | 4A | | |
| 19 | 4A | 43A | | |
| 20 | 43A | 4A | | |
| 21 | 7A | 28A | | |
| 22 | 28A | 7A | | |
| 23 | 7A | 42A | | |
| 24 | 42A | 7A | | |
| 25 | 7A | 43A | | |
| 26 | 43A | 7A | | |
| 27 | 7A | 66A | | |
| 28 | 66A | 7A | | |
| 28 | 28A | 42A | | |
| 30 | 42A | 28A | | |
| 31 | 28A | 43A | | |
| 32 | 43A | 28A | | |
| 33 | 28A | 66A | | |
| 34 | 66A | 28A | | |
| 35 | 42A | 66A | | |
| 36 | 66A | 42A | | |
| 37 | 43A | 66A | | |
| 38 | 66A | 43A | | |
| 39 | 2C | | | |

(2 of 5)

| Index | Downlink | | | |
|-------|----------|------|------|------|
| | PCC | SCC1 | SCC2 | SCC3 |
| 40 | 4C | | | |
| 41 | 7C | | | |
| 42 | 25C | | | |
| 43 | 28C | | | |
| 44 | 42C | | | |
| 45 | 43C | | | |
| 46 | 48C | | | |
| 47 | 66C | | | |
| 48 | 2A | 4A | 28A | |
| 49 | 4A | 2A | 28A | |
| 50 | 28A | 2A | 4A | |
| 51 | 2A | 4A | 48A | |
| 52 | 4A | 2A | 48A | |
| 53 | 48A | 2A | 4A | |
| 54 | 2A | 7A | 42A | |
| 55 | 7A | 2A | 42A | |
| 56 | 42A | 2A | 7A | |
| 57 | 2A | 28A | 42A | |
| 58 | 28A | 2A | 42A | |
| 59 | 42A | 2A | 28A | |
| 60 | 2A | 28A | 43A | |
| 61 | 28A | 2A | 43A | |
| 62 | 43A | 2A | 28A | |
| 63 | 2A | 28A | 66A | |
| 64 | 28A | 2A | 66A | |
| 65 | 66A | 2A | 28A | |
| 66 | 2A | 48A | 66A | |
| 67 | 48A | 2A | 66A | |
| 68 | 66A | 2A | 48A | |
| 69 | 4A | 7A | 28A | |
| 70 | 7A | 4A | 28A | |
| 71 | 28A | 4A | 7A | |
| 72 | 4A | 7A | 42A | |

(3 of 5)

| Index | Downlink | | | |
|-------|----------|------|------|------|
| | PCC | SCC1 | SCC2 | SCC3 |
| 73 | 7A | 4A | 42A | |
| 74 | 42A | 4A | 7A | |
| 75 | 4A | 7A | 43A | |
| 76 | 7A | 4A | 43A | |
| 77 | 43A | 4A | 7A | |
| 78 | 4A | 28A | 42A | |
| 79 | 28A | 4A | 42A | |
| 80 | 42A | 4A | 28A | |
| 81 | 4A | 28A | 43A | |
| 82 | 28A | 4A | 43A | |
| 83 | 43A | 4A | 28A | |
| 84 | 7A | 28A | 66A | |
| 85 | 28A | 7A | 66A | |
| 86 | 66A | 7A | 28A | |
| 87 | 7A | 42A | 66A | |
| 88 | 42A | 7A | 66A | |
| 89 | 66A | 7A | 42A | |
| 90 | 7A | 43A | 66A | |
| 91 | 43A | 7A | 66A | |
| 92 | 66A | 7A | 43A | |
| 93 | 28A | 42A | 66A | |
| 94 | 42A | 28A | 66A | |
| 95 | 66A | 28A | 42A | |
| 96 | 28A | 43A | 66A | |
| 97 | 43A | 28A | 66A | |
| 98 | 66A | 28A | 43A | |
| 99 | 4A | 7A | 28A | 42A |
| 100 | 7A | 4A | 28A | 42A |
| 101 | 28A | 7A | 4A | 42A |
| 102 | 42A | 7A | 28A | 4A |
| 103 | 4A | 7A | 28A | 43A |
| 104 | 7A | 4A | 28A | 43A |
| 105 | 28A | 7A | 4A | 43A |

(4 of 5)

| Index | Downlink | | | |
|-------|----------|------|------|------|
| | PCC | SCC1 | SCC2 | SCC3 |
| 106 | 43A | 7A | 28A | 4A |
| 107 | 7A | 28A | 42A | 66A |
| 108 | 28A | 7A | 42A | 66A |
| 109 | 42A | 28A | 7A | 66A |
| 110 | 66A | 28A | 42A | 7A |
| 111 | 7A | 28A | 43A | 66A |
| 112 | 28A | 7A | 43A | 66A |
| 113 | 43A | 28A | 7A | 66A |
| 114 | 66A | 28A | 43A | 7A |

(5 of 5)

Table 25 Carrier aggregation support for Model 4G17-A (2*2 MIMO downlink with SISO uplink)

| Index | Downlink | | | | Uplink | | |
|-------|----------|------|------|------|--------|------|------|
| | PCC | SCC1 | SCC2 | SCC3 | PCC | SCC1 | SCC2 |
| 1 | 1A | 3A | | | | | |
| 2 | 3A | 1A | | | | | |
| 3 | 1A | 7A | | | | | |
| 4 | 7A | 1A | | | | | |
| 5 | 3A | 7A | | | | | |
| 6 | 7A | 3A | | | | | |
| 7 | 1A | 32A | | | | | |
| 8 | 3A | 32A | | | | | |
| 9 | 7A | 32A | | | | | |
| 10 | 1A | 3A | | | 1A | 3A | |
| 11 | 3A | 1A | | | 3A | 1A | |
| 12 | 1A | 7A | | | 1A | 7A | |
| 13 | 7A | 1A | | | 7A | 1A | |
| 14 | 3A | 7A | | | 3A | 7A | |
| 15 | 1A | 3A | 7A | | | | |
| 16 | 3A | 1A | 7A | | | | |
| 17 | 7A | 3A | 1A | | | | |
| 18 | 1A | 3A | 32A | | | | |

(1 of 2)

| Index | Downlink | | | | Uplink | | |
|-------|----------|------|------|------|--------|------|------|
| | PCC | SCC1 | SCC2 | SCC3 | PCC | SCC1 | SCC2 |
| 19 | 3A | 1A | 32A | | | | |
| 20 | 3A | 7A | 32A | | | | |
| 21 | 7A | 3A | 32A | | | | |
| 22 | 1A | 7A | 32A | | | | |
| 23 | 7A | 1A | 32A | | | | |
| 24 | 1A | 3A | 7A | | 1A | 3A | |
| 25 | 3A | 1A | 7A | | 3A | 1A | |
| 26 | 1A | 3A | 7A | | 1A | | 7A |
| 27 | 7A | 3A | 1A | | 7A | | 1A |
| 28 | 3A | 1A | 7A | | 3A | | 7A |
| 29 | 7A | 3A | 1A | | 7A | 3A | |
| 30 | 1A | 3A | 32A | | 1A | 3A | |
| 31 | 3A | 1A | 32A | | 3A | 1A | |
| 32 | 3A | 7A | 32A | | 3A | 7A | |
| 33 | 7A | 3A | 32A | | | 3A | |
| 34 | 1A | 7A | 32A | | 1A | 7A | |
| 35 | 7A | 1A | 32A | | | 1A | |
| 36 | 1A | 3A | 7A | 32A | | | |
| 37 | 3A | 1A | 7A | 32A | | | |
| 38 | 7A | 3A | 1A | 32A | | | |
| 39 | 1A | 3A | 7A | 32A | 1A | 3A | |
| 40 | 3A | 1A | 7A | 32A | 3A | 1A | |
| 41 | 1A | 3A | 7A | 32A | 1A | | 7A |
| 42 | 7A | 3A | 1A | 32A | 7A | | 1A |
| 43 | 3A | 1A | 7A | 32A | 3A | | 7A |
| 44 | 7A | 1A | 3A | 32A | 7A | | 3A |

(2 of 2)

12.4 Power consumption information

Table 26 provides power consumption information for all models of the Nokia FastMile 4G Receiver.

Table 26 Power consumption information for all models

| Condition | Power consumption |
|---------------------------|-------------------|
| Maximum power consumption | 10 W |
| Idle power | 1.6 W |

13 Management using the Nokia Wireless app

13.1 Using the Nokia Wireless app to manage the Nokia FastMile 4G Receiver

13.2 Using the Nokia Wireless app to manage a unit managed by the Nokia Altiplano FastMile Controller

13.3 Using the Nokia Wireless app to manage a unit managed by an ACS

13.1 Using the Nokia Wireless app to manage the Nokia FastMile 4G Receiver

After the Nokia FastMile 4G Receiver has been installed as described in the installation guide, you can use the Nokia Wireless app to perform management activities on it, such as viewing information, uploading CA certificates, rebooting the Nokia FastMile 4G Receiver, or resetting to factory settings.

The user of the Nokia Wireless app has to agree with the “Terms of Service” and the “Nokia Privacy Policy” that define the app. This is a mandatory step during the first start up of the app. Terms of Service can be found inside the Nokia Wireless app whereas a link is provided to the Nokia Privacy Policy, which is described in the Nokia public webpage. The user can find this information later on by visiting the “About” screen of the app.

Figure 27 shows the “Before we begin” screen that provides access to the Terms of Service and the Nokia Privacy Policy.

Figure 27 Before we begin screen

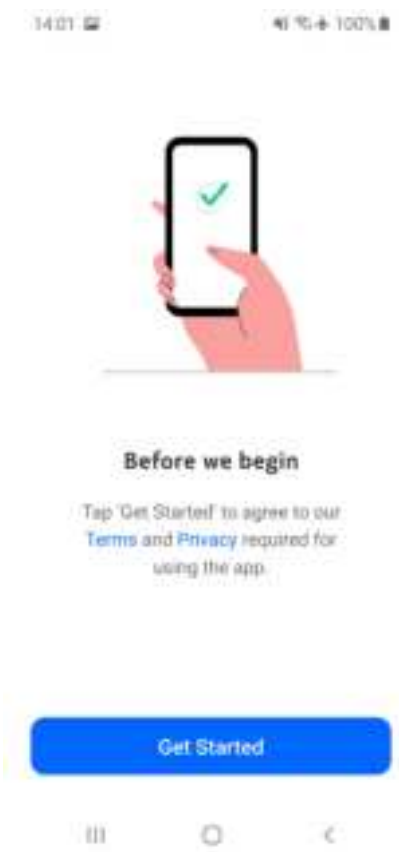
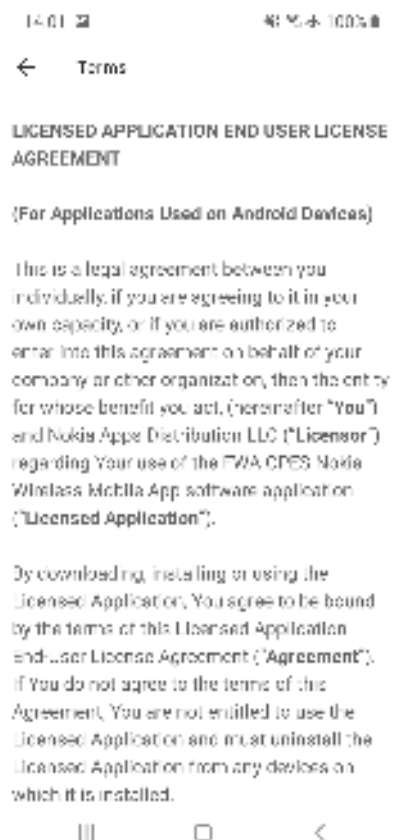


Figure 28 shows the “Terms of Service” screen that is accessed through the “Before we begin” screen.

Figure 28 Terms of Service screen

The Nokia Wireless app is protected as much as possible against malicious users. Tools like obfuscation and encryption used by the Nokia Wireless app, as well as runtime checks and tamper detection, make it hard for malicious users to understand the code flow or to hack the application.

There are some differences in managing the Nokia FastMile 4G Receiver through the Nokia Wireless app depending on whether the Nokia FastMile 4G Receiver is managed remotely by the Nokia Altiplano FastMile Controller (through NETCONF) or by an ACS (through TR-069):

- if the Nokia Altiplano FastMile Controller is being used for remote management of the Nokia FastMile 4G Receiver (through NETCONF), see section [13.2](#)
- if an ACS is being used for remote management of the Nokia FastMile 4G Receiver (through TR-069), see section [13.3](#)

13.2 Using the Nokia Wireless app to manage a unit managed by the Nokia Altiplano FastMile Controller

If the Nokia Altiplano FastMile Controller is being used for remote management of the Nokia FastMile 4G Receiver (through NETCONF), you can use the Nokia Wireless app to perform management activities on it, such as viewing information, uploading CA certificates, rebooting the Nokia FastMile 4G Receiver, or resetting to factory settings, as described in the following procedure.



Note — The NETCONF version of the FastMile 4G Receiver for remote management from the Nokia Altiplano FastMile Controller is not supported from FastMile 4G Release 2.0.03a onwards.

You will need the QR code that was saved as described during installation the Nokia FastMile 4G Receiver in order to scan it when logging in to it through the Nokia Wireless app. Logging in to the Nokia FastMile 4G Receiver also includes the following:

- initiating a Bluetooth connection
- enabling Bluetooth
- allowing the Bluetooth pairing request
- establishing the VPN connection
- entering the username and password



Note — The Bluetooth connection from the Nokia Wireless app towards the Nokia FastMile 4G Receiver is closed after one hour of inactivity in order to preserve Nokia Wireless phone resources. There is a mechanism in place that enables the user to re-establish the Bluetooth connection when he or she re-enters the app.

Procedure 5 To perform management activities

Use the following procedure to perform management activities through the Nokia Wireless app for a Nokia FastMile 4G Receiver that is managed remotely by the Nokia Altiplano FastMile Controller through NETCONF.

- 1 When you are close to the Nokia FastMile 4G Receiver, connect the mobile phone to the Internet and open the Nokia Wireless app on the phone.

An introductory screen with a video appears.

Figure 29 shows the introductory screen.

Figure 29 **Introductory screen for unit managed by the Nokia Altiplano FastMile Controller through NETCONF**




Continue by tapping on “Get started”.

- 2 After the introductory screen has cleared, the Nokia Wireless app shows an animation of how to scan the QR code of the Nokia FastMile 4G Receiver so that the app can obtain the Bluetooth MAC address, unique device identifier, enterprise id, and device type of the Nokia FastMile 4G Receiver.

The QR code was provided on a sheet of paper in the shipping package of the Nokia FastMile 4G Receiver. The sheet of paper, or a photograph of it, should have been saved and made available for anyone who later needs to scan the QR code when accessing the Nokia FastMile 4G Receiver.

Figure 30 shows the screen for the prompt to scan the QR code.

Figure 30 Screen with prompt to scan the QR code for unit managed by the Nokia Altiplano FastMile Controller through NETCONF

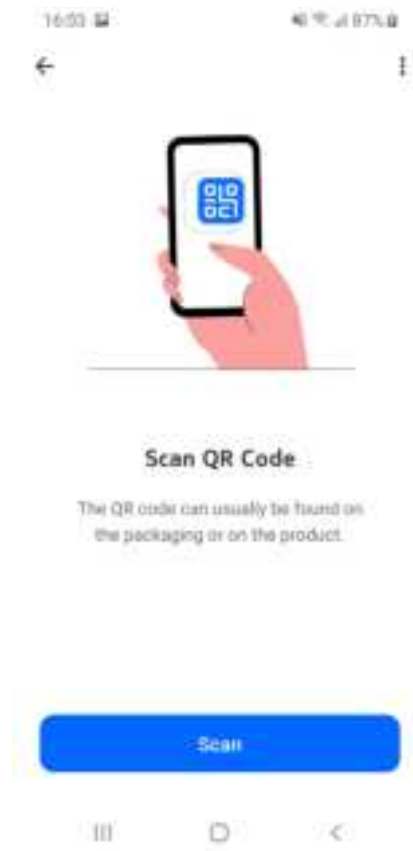

Tap on “Scan” to start the scan of the QR code.

Use the viewfinder of the phone to align with the QR code.

Figure 31 shows the QR code screen.

Figure 31 QR code screen for unit managed by the Nokia Altiplano FastMile Controller through NETCONF



-
- 3** The Nokia Wireless app displays the screen to install the Nokia FastMile 4G Receiver. Tap on the "Already Installed?" option. Figure 32 shows the Already Installed option.

Figure 32 Screen showing the Already Installed option for unit managed by the Nokia Altiplano FastMile Controller through NETCONF



- 4 The Nokia Wireless app prompts you to connect to the Nokia FastMile 4G Receiver. The connection will be done through Bluetooth in conjunction with a VPN. You will need to be close to the Nokia FastMile 4G Receiver and you will need to have Bluetooth enabled on the mobile phone and accept the pairing request when it appears.

Figure 33 shows the screen to connect to the Nokia FastMile 4G Receiver.

Figure 33 Screen for connecting to the Nokia FastMile 4G Receiver



Connect to the Nokia FastMile 4G Receiver by tapping on "Connect".

- 5 The Nokia Wireless app prompts you to enable the VPN profile for a secure method to communicate with the Nokia FastMile 4G Receiver.

Figure 34 shows the screen to enable the VPN profile.

Figure 34 Screen for enabling the VPN profile

Enable the VPN profile by tapping on “Connect”.

-
- 6** The android system of the mobile phone prompts you to accept the connection request.

Figure 35 shows the prompt to accept the connection request.

Figure 35 Prompt for accepting the connection request

Accept the connection request by tapping on “OK”.

- 7 The Nokia Wireless app prompts you to log in to the Nokia FastMile 4G Receiver. You will need to input the username and password for the Nokia FastMile 4G Receiver.

Figure 36 shows the screen to log in to the Nokia FastMile 4G Receiver.

Figure 36 Screen to log in to a Nokia FastMile 4G Receiver managed by the Nokia Altiplano FastMile Controller



Log in to the Nokia FastMile 4G Receiver by tapping on “Log in”.

After you have logged in, you can:

- view information for the Nokia FastMile 4G Receiver: see step [8](#)
- upload updated certificates to the Nokia FastMile 4G Receiver: see step [9](#)
- reboot the Nokia FastMile 4G Receiver: see step [10](#)
- change the configuration settings to the default factory load settings (Perform Factory Reset); see step [11](#)

-
- 8 You can view the following information for a Nokia FastMile 4G Receiver managed by the Nokia Altiplano FastMile Controller by selecting the Connection Status option of the main screen and scrolling through the screen by swiping up or down:
- LTE cell info:
 - connection state: Does the Nokia FastMile 4G Receiver connect to this cell
 - status: The current operational state of the PDN connection
 - EARFCN: The carrier frequency in the uplink and downlink is designated by the E-UTRA. Absolute Radio Frequency Channel Number (EARFCN) in the range 0 - 65535.
 - PCI: The physical cellid of cell
 - Current signal stats:
 - RSRP: RSRP (Reference Signals Received Power) is a measurement of the received power level in an LTE cell network in dBm
 - RSRQ: RSRQ (Reference Signals Received Quality) is a measurement of the received power quality in an LTE cell network in dB
 - RSSI: RSSI (Received Signal Strength Indicator) is a measurement of the power present in a received radio signal by the Nokia FastMile 4G Receiver
 - SINR: SINR (the Signal-to-Interference-plus-Noise ratio) is used in the LTE network from the Nokia FastMile 4G Receiver side to measure the quality of wireless connections in dB
 - Average signal stats:
 - RSRP: average value of Reference Signal Received Power (dBm) in the measured interval, resolution 1dBm
 - RSRQ: average value of Reference Signal Received Quality (dB) in the measured interval, resolution 1dB
 - RSSI: average value of Received Signal Strength indicator (dBm) in the measured interval, resolution 1
 - SINR: average value of Signal-to-Interference-plus-Noise Ratio (dB) in the measured interval, resolution 1dB
 - Other stats:
 - bytes sent: the total number of bytes sent on the interface
 - bytes received: the total number of bytes received on the interface

Figure 37 shows an example of the System state screen.

Figure 37 System state screen example for a Nokia FastMile 4G Receiver managed by the Nokia Altiplano FastMile Controller



Note — The Nokia Wireless app will display a value of “N/A” for parameters that are not supported by the installed Home 4G Receiver Software version.

The following additional Beam Angle information is displayed only for an ABA version as shown in Figure 38:

- Antenna mode: wide or narrow
- Horizontal angle: the horizontal angle is expressed as a degree if the Antenna mode is narrow or as N/A if the antenna mode is wide

Figure 38 System state screen with Beam Angle information for a Nokia FastMile 4G Receiver managed by the Nokia Altiplano FastMile Controller

| | |
|------------------------|----------|
| ← System State | |
| SSID | 4G |
| Average Signal State | |
| RSRP | 10 |
| RSSD | 11 |
| RSS | 12 |
| SINR | 13 |
| Other State | |
| Power State | 101 |
| Power Boosted | 100 |
| Beam Angle Information | |
| Antenna mode | 10110101 |
| Horizontal angle | 20 |

- 9 You can upload updated certificates (stored under downloads in the mobile phone's directory) to the Nokia FastMile 4G Receiver.
- i Tap on the “Upload CA certificates” option.
- Figure 39 shows the screen that has the “Upload CA certificates” option.


Figure 39 Screen that has the “Upload CA certificates” option for a Nokia FastMile 4G Receiver managed by the Nokia Altiplano FastMile Controller



- ii Select the required CA certificates and tap on “Ok”. Note that the certificates must be in the download folder of the mobile phone before you can upload them to the Nokia FastMile 4G Receiver.

Figure 40 shows the screen that lists the CA certificates.

Figure 40 Screen that lists the CA certificates for a Nokia FastMile 4G Receiver managed by the Nokia Altiplano FastMile Controller

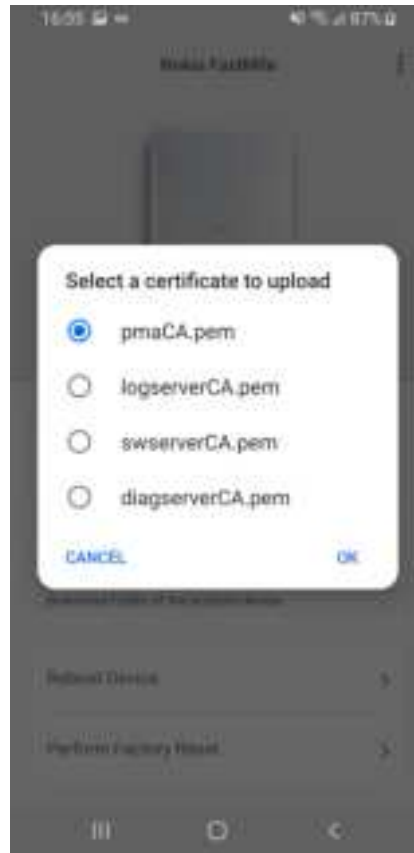

The following CA certificates are supported for a Nokia FastMile 4G Receiver managed by the Nokia Altiplano FastMile Controller:

- pmaCA.pem (used for authenticating the Nokia Altiplano FastMile Controller)
- logserverCA.pem (used for authenticating the log server)
- swserverCA.pem (used for authenticating the software upgrade server)
- diagserverCA.pem (used for authenticating the optional diagnostics server)

iii Figure 41 shows the screen that indicates that uploading of the CA certificates was successful.

Figure 41 Screen indicating that uploading of the CA certificates was successful for a Nokia FastMile 4G Receiver managed by the Nokia Altiplano FastMile Controller



Tap on "Ok" to clear the message.

-
- 10** You can reboot a Nokia FastMile 4G Receiver managed by the Nokia Altiplano FastMile Controller through NETCONF by tapping on the "Reboot Device" option.

Figure 42 shows the "Reboot Device" option.


Figure 42 Screen showing the “Reboot Device” option for a Nokia FastMile 4G Receiver managed by the Nokia Altiplano FastMile Controller



The screen shows the reboot message indicating that the Bluetooth connection will be interrupted and that you will be disconnected.

Figure 43 shows the screen that has the reboot message.

Figure 43 Screen showing the reboot message for a Nokia FastMile 4G Receiver managed by the Nokia Altiplano FastMile Controller

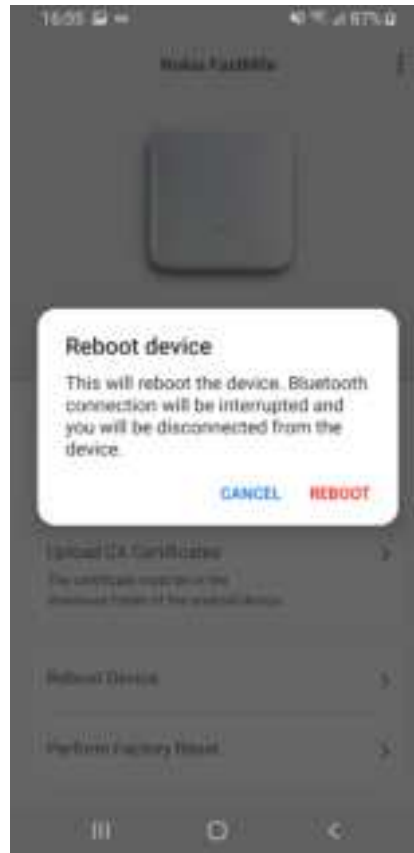

Press the Reboot option if you want to proceed with the reboot, or press the Cancel option.

If you pressed the Reboot option, press OK.

-
- 11** You can change the configuration settings for a Nokia FastMile 4G Receiver managed by the Nokia Altiplano FastMile Controller through NETCONF to the default factory load settings by tapping on the “Perform Factory Reset” option.

Figure 44 shows the “Perform Factory Reset” option.


Figure 44 Screen showing the “Perform Factory Reset” option for a Nokia FastMile 4G Receiver managed by the Nokia Altiplano FastMile Controller



The screen shows the factory reset message indicating that the factory reset will reset the device back to factory settings and that all changes will be lost and that you will be disconnected.

Figure 45 shows the screen that has the factory reset message.

Figure 45 Screen showing the factory reset message for a Nokia FastMile 4G Receiver managed by the Nokia Altiplano FastMile Controller

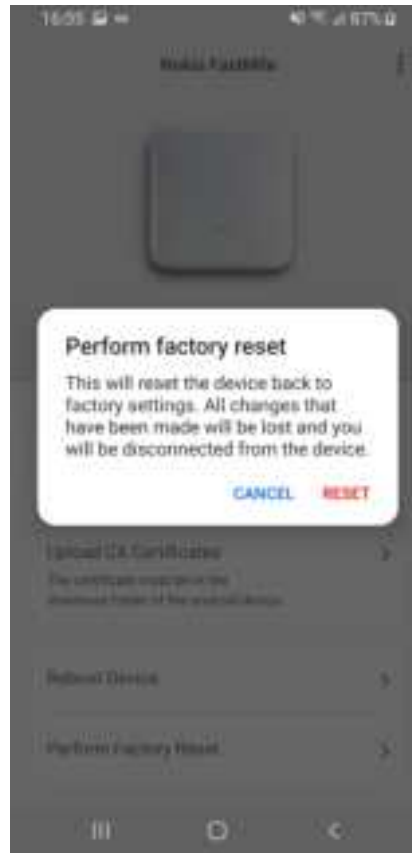

Press the Reset option if you want to proceed with the reset to factory settings, or press the Cancel option.

If you pressed the Reset option, press OK.

13.3 Using the Nokia Wireless app to manage a unit managed by an ACS

If an ACS is being used for remote management of the Nokia FastMile 4G Receiver (through TR-069), you can use the Nokia Wireless app to perform management activities on the Nokia FastMile 4G Receiver after it has been installed, such as viewing information, uploading CA certificates, rebooting, or resetting to factory settings, as described in the following procedure.

This procedure does not involve use of the Nokia Altiplano FastMile Controller.

You will need the QR code that was saved as described during installation of the Nokia FastMile 4G Receiver in order to scan it when logging in to the 4G Receiver through the Nokia Wireless app. Logging in to the Nokia FastMile 4G Receiver also includes the following:

- initiating a Bluetooth connection
- enabling Bluetooth
- allowing the Bluetooth pairing request
- establishing the VPN connection
- entering the username and password



Note — The Bluetooth connection from the Nokia Wireless app towards the Nokia FastMile 4G Receiver is closed after one hour of inactivity in order to preserve Nokia Wireless phone resources. There is a mechanism in place that enables the user to re-establish the Bluetooth connection when he or she re-enters the app.

Procedure 6 To perform management activities

Use the following procedure to use the Nokia Wireless app to perform management activities for a Nokia FastMile 4G Receiver that is managed remotely by an ACS through TR-069.

-
- 1 When you are close to the Nokia FastMile 4G Receiver, connect the mobile phone to the Internet and open the Nokia Wireless app on the phone.

An introductory screen with a video appears.

Figure 46 shows the introductory screen.

Figure 46 **Introductory screen for unit managed by an ACS through TR-069**




Continue by tapping on “Get started”.

- 2 After the introductory screen has cleared, the Nokia Wireless app shows an animation of how to scan the QR code of the Nokia FastMile 4G Receiver so that the app can obtain the Bluetooth MAC address, unique device identifier, enterprise id, and device type of the Nokia FastMile 4G Receiver.

The QR code was provided on a sheet of paper in the shipping package of the Nokia FastMile 4G Receiver. The sheet of paper, or a photograph of it, should have been saved and made available for anyone who later needs to scan the QR code when accessing the Nokia FastMile 4G Receiver.

Figure 47 shows the screen for the prompt to scan the QR code.

Figure 47 Screen with prompt to scan the QR code for unit managed by an ACS through TR-069

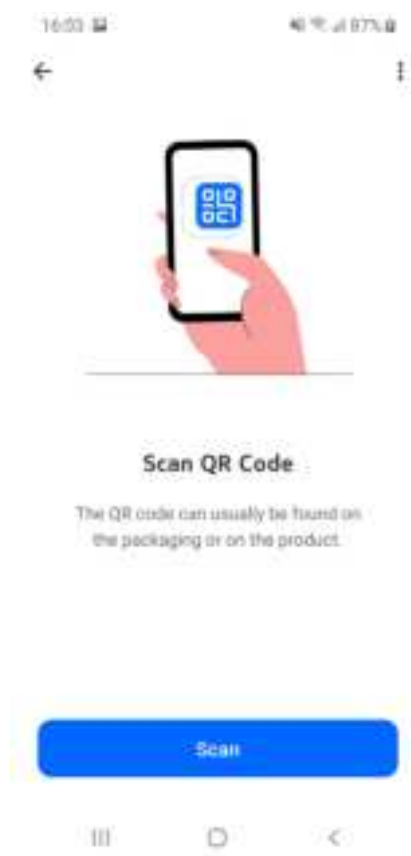

The Nokia Wireless app also provides a way to manually enter all the needed information in order to proceed with the installation without scanning a QR code.

Tap on “Scan” to start the scan of the QR code.

Use the viewfinder of the phone to align with the QR code.

Figure 48 shows the QR code screen.

Figure 48 QR code screen for unit managed by an ACS through TR-069



-
- 3** The Nokia Wireless app displays the screen to install the Nokia FastMile 4G Receiver.
Tap on the "Already Installed?" option.
Figure 49 shows the Already Installed option.

Figure 49 Screen showing the Already Installed option for unit managed by an ACS through TR-069



- 4 The Nokia Wireless app prompts you to connect to the Nokia FastMile 4G Receiver. The connection will be done through Bluetooth in conjunction with a VPN. You will need to be close to the Nokia FastMile 4G Receiver and you will need to have Bluetooth enabled on the mobile phone and accept the pairing request when it appears.

Figure 50 shows the screen to connect to the Nokia FastMile 4G Receiver.


Figure 50 Screen for connecting to the Nokia FastMile 4G Receiver

Connect to the Nokia FastMile 4G Receiver by tapping on "Connect".

-
- 5** The Nokia Wireless app prompts you to enable the VPN profile for a secure method to communicate with the Nokia FastMile 4G Receiver.

Figure 51 shows the screen to enable the VPN profile.


Figure 51 Screen for enabling the VPN profile

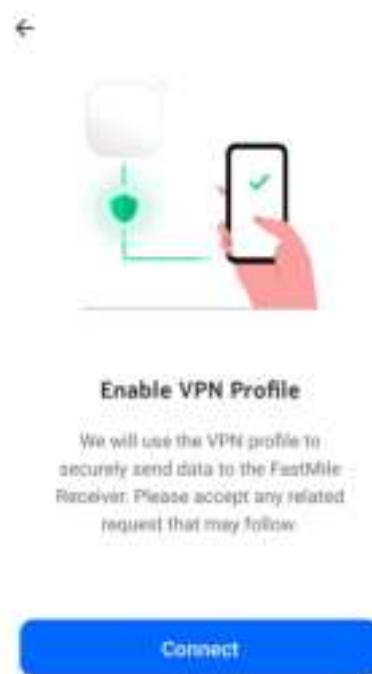

Enable the VPN profile by tapping on “Connect”.

-
- 6** The android system of the mobile phone prompts you to accept the connection request.

Figure 52 shows the prompt to accept the connection request.

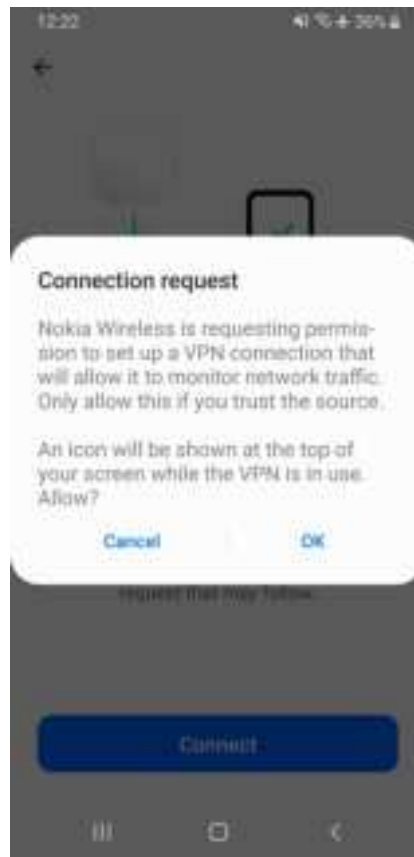Figure 52 Prompt for accepting the connection request

Accept the connection request by tapping on “OK”.

- 7 The Nokia Wireless app prompts you to log in to the Nokia FastMile 4G Receiver. You will need to input the username and password for the Nokia FastMile 4G Receiver.

Figure 53 shows the screen to log in to the Nokia FastMile 4G Receiver.

Figure 53 Screen to log in to a Nokia FastMile 4G Receiver managed by an ACS through TR-069



Log in to the Nokia FastMile 4G Receiver by tapping on “Log in”.

After you have logged in, you can:

- view information for the Nokia FastMile 4G Receiver: see step [8](#)
- upload updated certificates to the Nokia FastMile 4G Receiver: see step [9](#)
- reboot the Nokia FastMile 4G Receiver: see step [10](#)
- change the configuration settings to the default factory load settings (Perform Factory Reset); see step [11](#)

-
- 8 You can view the following information for a Nokia FastMile 4G Receiver managed by an ACS by selecting the Connection Status option of the main screen and scrolling through the screen by swiping up or down:
- LTE cell info:
 - connection state: Does the Nokia FastMile 4G Receiver connect to this cell
 - status: The current operational state of the PDN connection
 - EARFCN: The carrier frequency in the uplink and downlink is designated by the E-UTRA. Absolute Radio Frequency Channel Number (EARFCN) in the range 0 - 65535.
 - PCI: The physical cellid of cell
 - Current signal stats:
 - RSRP: RSRP (Reference Signals Received Power) is a measurement of the received power level in an LTE cell network in dBm
 - RSRQ: RSRQ (Reference Signals Received Quality) is a measurement of the received power quality in an LTE cell network expressed as a ratio
 - RSSI: RSSI (Received Signal Strength Indicator) is a measurement of the power present in a received radio signal by the Nokia FastMile 4G Receiver in dBm
 - SINR: SINR (the Signal-to-Interference-plus-Noise ratio) is used in the LTE network from the Nokia FastMile 4G Receiver side to measure the quality of wireless connections in dB
 - Other stats:
 - bytes sent: the total number of bytes sent on the interface
 - bytes received: the total number of bytes received on the interface

Figure 54 shows an example of the System state screen.

Figure 54 System state screen example for a Nokia FastMile 4G Receiver managed by an ACS through TR-069

| | |
|----------------------|----------|
| ← System State | |
| LTE Cell Info | |
| Connection state | true |
| Service | Attached |
| Signal | 100% |
| PLMN | 150 |
| Current Signal Stats | |
| RSCP | 10 |
| RSRQ | 20 |
| RSS | 30 |
| SINR | 40 |
| Other Stats | |
| Dynamic State | 100 |



Note — The Nokia Wireless app will display a value of “N/A” for parameters that are not supported by the installed Home 4G Receiver Software version.

The following additional Beam Angle information is displayed only for an ABA version as shown in Figure 55:

- Antenna mode: wide or narrow
- Horizontal angle: the horizontal angle is expressed as a degree if the Antenna mode is narrow or as N/A if the antenna mode is wide

Figure 55 System state screen with Beam Angle information for a Nokia FastMile 4G Receiver managed by an ACS through TR-069



-
- 9 You can upload updated certificates (stored under downloads in the mobile phone's directory) to the Nokia FastMile 4G Receiver.


i Tap on the “Upload CA certificates” option, as shown in Figure 56.

Figure 56 Screen that has the “Upload CA certificates” option for a Nokia FastMile 4G Receiver managed by an ACS through TR-069




ii Tap on “Upload” on the Upload CA Certificates screen, as shown in Figure 57.

Figure 57 Upload CA Certificates screen for a Nokia FastMile 4G Receiver managed by an ACS through TR-069

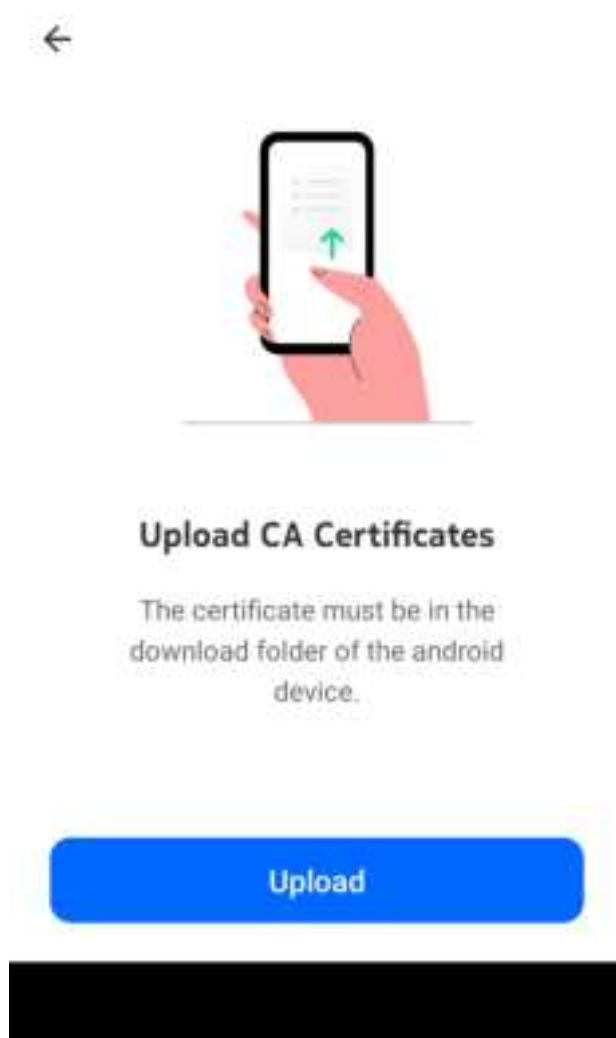

A list of CA certificates appears, as shown in [Figure 58](#).

Figure 58 List of CA certificates displayed on the Upload CA Certificates screen for a Nokia FastMile 4G Receiver managed by an ACS through TR-069

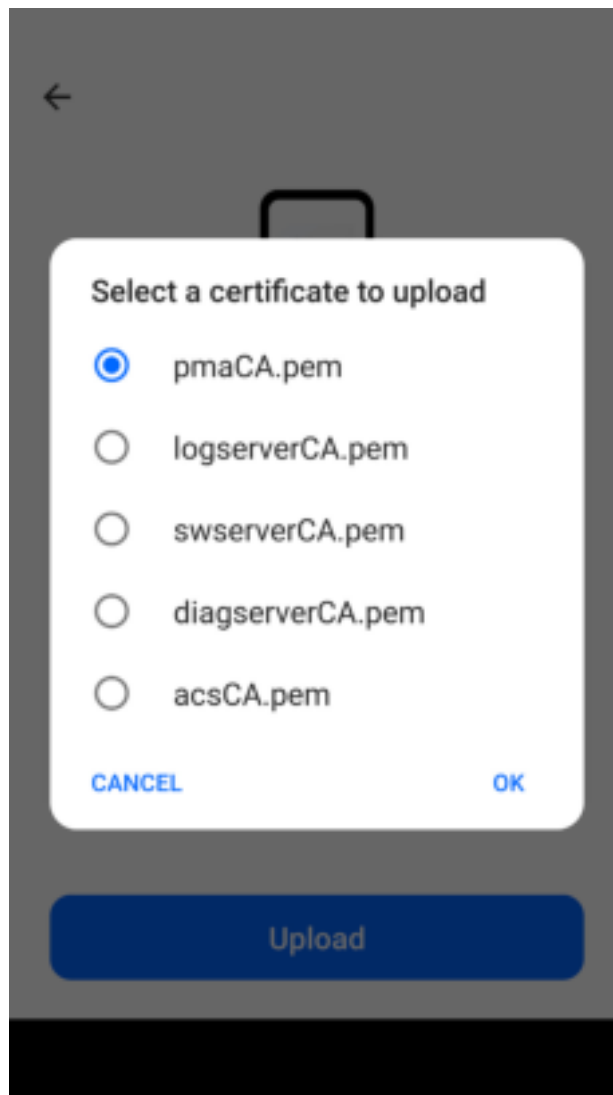

- iii Select the required CA certificates and tap on “Ok”. Note that the certificates must be in the download folder of the mobile phone before you can upload them to the Nokia FastMile 4G Receiver.

The following CA certificates are supported for a Nokia FastMile 4G Receiver Nokia FastMile 4G Receiver managed by an ACS:

- pmaCA.pem (used for authenticating the Nokia Altiplano FastMile Controller)
- logserverCA.pem (used for authenticating the log server)
- swserverCA.pem (used for authenticating the software upgrade server)
- diagserverCA.pem (used for authenticating the optional diagnostics server)
- acsCA.pem (used for authenticating the ACS)

- iv The screen indicates when uploading of the CA certificates was successful, as shown in Figure 59.