

ECOLINK Zigbee 3.0 Door/Window Sensor DWZB1-ECO

INTRODUCTION

Door/Window sensors are designed to secure the perimeter of the residential premise, and provide the ability to add various automation services. The Door/Window sensor, which consists of a magnet that attaches to a door or window, will communicate door events to the home security system. When the magnet is moved away from the sensor, a signal will be sent to the control panel that communicates the changed state to the security system. Signals can also be used to activate a chime or convenience lighting based on system settings.

SPECIFICATIONS

Frequency: 2.4GHz

Battery Type: CR123A Battery

Operating Temperature: 0° C to 50° C (32°F - 122°F)

Storage Temperature: -20° C to 60° C (-4°F - 140°F)

Battery Life: 5 Years

Dimension:

Sensor: 70 x 21 x 22 mm (2.73" x 0.83" x 0.86")



Magnet: 30 x 10 x 11 mm (1.19" x 0.39" x 0.43")

Magnet Spacer: 30 x 10 x 6 mm (1.19" x 0.39" x 0.25")

PAIRING SENSOR




This Door/Window sensor needs to be paired before installation.

1. Pull the exposed plastic tab from the sensor. (Figure 1)
2. The LED indicator will be lit for two seconds to indicate a successful booting.
3. It will blink three times approximately every 30 seconds while scanning the network.
4. If network is not found after 10 minutes, the sensor will go into sleep mode. To wake the sensor again, you need to use magnet or tamper (Figure 2) to trigger a pairing process, and then sensor will repeat steps from 3 to 4.

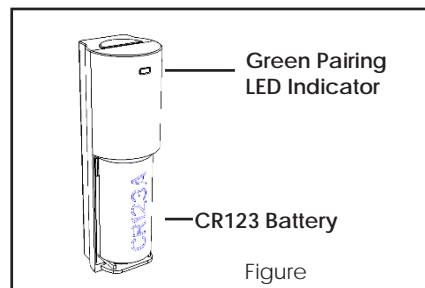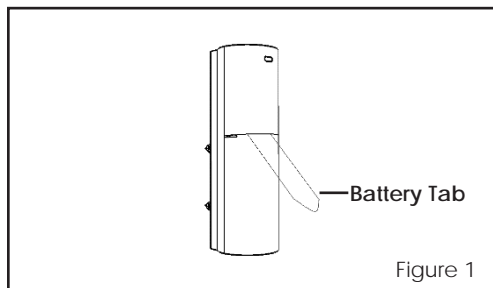

INSTALLATION

1. Please make sure that the sensor and magnet is located less than 0.25 inch from each other. For optimal performance, it is highly recommended to install the Door/Window sensor on the fixed frame and the magnet on the moving part of the door/window. Place the sensor near the top of the door that close to the opening edge of the door. This is the mounting location for the sensor.
2. Use the provided double-sided tape on the sensor. Attach the sensor to the door/window frame. Press firmly and hold in place for a few seconds (Figure 3). Secure it with silicone if needed. For mounting with screws, please use the screw holes located in the battery compartment. (Figure 3)
3. Use provided double-sided tape on the magnet. Make sure the alignment of both sensor and magnet is correct (Figure 4). The magnet aligns from the top of the sensor case. Press firmly and hold in place for a few seconds. Secure it with silicone if needed.
4. Spacers are used to raise the level of the magnet to be level/closer to sensor. Install spacers as shown in Figure 5. The spacers are 1/4" thick.

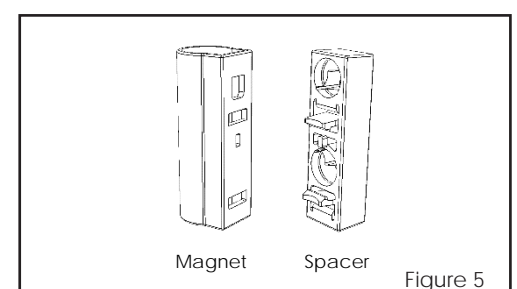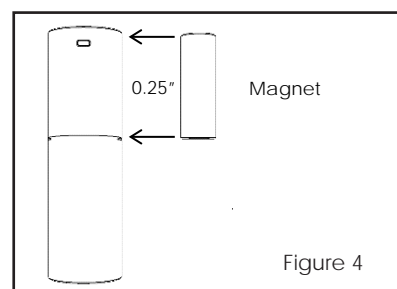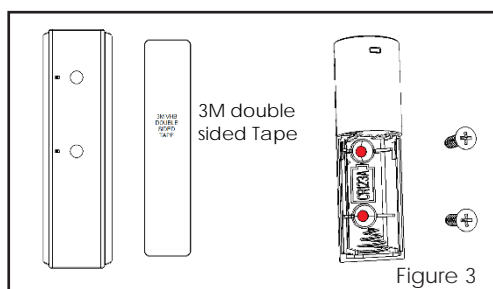

OPERATION

1. The Green Pairing LED will stay off during the normal operation.
2. The sensor is equipped with a tamper switch. If the cover of sensor is removed, the sensor will send an alarm to the home controller or security system.
3. A separation gap of 1.25" to 2" between the sensor and the magnet will report open/close events to your security system during normal operation.

RESET TO FACTORY DEFAULTS & REBOOT

If sensor needs to be factory defaulted (for example, to prepare it for joining with a home controller or security system).

1. Remove sensor cover.
2. Remove the battery from sensor.
3. Depress the tamper switch for three seconds before inserting the battery.
4. Insert the battery. The sensor should illuminate the LED once when boot-up/initialization tasks are complete.
5. Release the tamper switch while the LED is illuminated (it will be lit for 4 seconds). The sensor should then reset to factory default settings and begin searching for any available home controller or security system. If you need to reboot the device, remove the battery for at least 5 seconds, then re-insert the battery.
6. Place the cover back on sensor.

NOTE: Replace Battery with Panasonic CR123A or Sony CR123A only. Use of another battery may negatively impact the performance of the product.

TROUBLESHOOTING

If device has trouble with pairing to the home controller or security system:

1. Separate the sensor and magnet or trigger tamper. The sensor will re-attempt to pair.
2. If device continues to have trouble pairing, remove the battery for 5 seconds and then re-insert it.
3. If device continues to have trouble pairing, use "Reset to Factory Defaults" procedure to attempt pairing again.

If device was communicating with the home controller or security system but is no longer communicating:

1. Move the device to a location closer to the controller. Separate and close the magnet or trigger tamper from the sensor. If the controller successfully shows the sensor's status, then install a repeater so the system's range can reach the desired location for the sensor.
2. If the device has been in use for months or years and the failure is sudden, check the controller to see if the device has a low battery. Follow the instructions provided to replace the battery.

FCC COMPLIANCE STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To satisfy RF exposure requirements, this device and its antenna must operate with a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment to an outlet on a different circuit from the receiver
- Consult the dealer or an experienced radio/TV contractor for help

WARNING: Changes or modifications not expressly approved by Ecolink Intelligent Technology Inc. could void the user's authority to operate the equipment.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme la norme d'Industrie Canada exempts de licence RSS. Son fonctionnement est soumis aux deux conditions suivantes: (1) c'est cet appareil ne peut pas provoquer d'interférences, et (2) c'est cet appareil doit accepter toute interférence, y compris les interférences qui peuvent causer un mauvais fonctionnement de la dispositif.

FCC ID: XQC-DWZB1ECO

IC: 9863B-DWZB1ECO



Ecolink Intelligent Technology Inc.
2055 Corte Del Nogal
Carlsbad, CA 92011
855-432-6546