Nokia 6590 User Guide 2nd Draft The wireless phone described in this guide is approved for use in GSM networks.

LEGAL INFORMATION

Part No. _____, Issue No. 1 ©2002 Nokia Mobile Phones. All rights reserved. Nokia is a registered trademark of Nokia Corporation. Printed in Canada __/2002

Nokia, Nokia Connecting People and the Original Accessories logos are trademarks of Nokia Corporation and/or its affiliates.

US Patent No 5818437 and other pending patents. T9 text input software Copyright ©1999-2002. Tegic Communications, Inc. All rights reserved.

Includes RSA BSAFE cryptographic or security protocol software from RSA Security.

The information contained in this user guide was written for Nokia 6590 phone. Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

UNDER NO CIRCUMSTANCES SHALL NOKIA BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, AND CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED.

THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS." EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY AND RELIABILITY OR CONTENTS OF THIS DOCUMENT. NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.

EXPORT CONTROLS

This product contains commodities, technology or software exported from the United States in accordance with the Export Administration regulations. Diversion contrary to U.S. law is prohibited.

FCC/INDUSTRY CANADA NOTICE

Your phone may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility. This device complies with part 15 of the FCC rules. Operation is subject to the condition that this device does not cause harmful interference.

Contents

1.	Safety first1
	Safety guidelines1
	Road safety comes first1
	Switch off in hospitals1
	Switch off while aboard aircraft1
	Switch off when refueling1
	Switch off near blasting1
	Observe infrared precautions1
	Emergency calls
	Be aware of interference2
	Use your phone sensibly2
	Use only qualified service personnel
	Use approved accessories and batteries
	Read instructions before you connect to other devices2
	Make sure the phone is on2
2.	Welcome
	Get the most out of this guide
	Understand the terms
	Notice text conventions4
	Follow graphic clues4
	Look for updates
	Understand wireless network services
	Sign up with a service provider5
	Note differences among service providers5
	Learn about accessibility solutions
	Alternate format user guides
	LPS-3 Mobile Inductive Loopset
	Accessible features
	Find information about your phone7
	Contact Nokia
	Have the right information available
	Have the phone or accessory handy
	Contact your service provider8

[i]

3.	Before you begin	
	Install the SIM card	
	Notes about SIM cards	
	Install the battery	
	Charge the battery	
	Important battery information	
	Remove the battery	
	Set up your headset	
	Use the headset.	
	Use the carrying case	
	5 0	
4.	About your phone.	14
	Keys and features	
	Front	
	BottomLeft side and right side	
	Back	
	Switch on your phone	
	About the antenna	
	About the Start screen	
	About indicators and icons	.17
	Indicators	.17
	Icons	.18
5.	Make and answer calls	19
	Make a call	
	Check the signal strength.	
	Use the keypad	.19
	Use the phone book	.19
	Adjust the earpiece volume during a call	
	End a call	
	Answer a call	
	Caller ID	
	Reject a call.	.20

[ii]

	Redial the last-dialed number Dial any of the 10 last-dialed numbers	
6.	The menu Use the menus Selection keys Scroll keys Scroll bar Help text About menu shortcuts List of menu shortcuts Phone book menu	.21 .21 .21 .22 .22 .22 .23
7.	Enter letters and numbers	.34 .35 .35 .36 .36 .36 .37 .37 .38 .38 .38 .38 .39 .40 .40
8.	Use the phone book. Save names, numbers, and e-mail addresses Save a name, number, and e-mail address Save a number only Save a name and number while in a call Save an E-mail address If your phone book is full. Find names in the phone book.	.41 .41 .41 .42 .42 .42

[iii]

	At the Start screen	
	While in a call	
	Edit numbers	
	Erase names and numbers	
	Erase a stored number	
	Erase your entire phone book	
	About phone book memory	45
	Switch between internal memory and SIM memory	45
9.	Check call history	46
	Check dialed calls	
	Check received calls	46
	Check for missed calls	
	After missing a call	
	At any time	47
	Choose options in call lists	
	Clear call lists	
	Use call timers.	
	View the call duration	
	Show call timer during calls	
	Manage call costs	
	View call costs.	
	Clear call cost counters	
	Show costs in units or currency.	
	Check data calls	
	Check the data counter	52
	Clear the data counter	
	Check the connection timer	
	Clear the connection timer	
10.		53
	Active call options	
	Use call waiting	
	Use in-call options	
	Put a call on hold	
	Make a new call	55

[iv]

	Send touch tones End all calls Access the phone book Access menus Mute/unmute the microphone	56 56 56
	Make a conference call	
	Transfer a call	
	Use call forwarding.	58
	Activate call forwarding.	
	Cancel call forwarding	59
	Check call forwarding status	59
	Use anykey answer	60
	Turn on Anykey answer	60
	Turn off Anykey answer	60
	Use automatic redial	
	Activate automatic redial	
	Send your own number in caller ID	
	Use 1-touch dialing	
	Assign a number to a 1-touch dialing key	
	Activate 1-touch dialing	62
	Call a 1-touch dial number	
	Change 1-touch dialing numbers	
	Erase 1-touch dialing numbers	
	Make an international call	
	Use the phone book	63
11.	Use voice features	65
	About voice mail	65
	Voice mail indicators	65
	Save the voice mailbox number	66
	Automate Voicemail with dialing codes	66
	Write down some information.	
	Setup voicemail with dialing codes.	67
	Listen to your voice messages	68
	Use the voice recorder	68
	Record a memo	
	Record a phone conversation	68
	Listen to or edit a memo	69

[v]

	Set an alarm	.69
	Notes about voice memos	.69
	Use voice dialing	.70
	Add a voice tag to a phone book entry	.70
	Notes about voice tags	
	Make a call using voice recognition	
	Listen to a voice tag	. 72
	Change a voice tag.	
	Erase a voice tag	
	Use voice commands	.73
	View available functions	.73
	Add a voice tag for the command	.74
	Activate a voice command	
	Work with an existing voice command tag	.75
12.		
12.	What are profiles?	76
	What are profiles? Select a profile	.70
	Customize the profile	.70
	Customize the profile	.70
	About accessory profiles.	00.
	Set automatic answer.	00.
	Set up the loopset profile	.00 .00
	Set up car profile	.01 Q1
	Adjust volume control	.01 02
	Choose the display language	.02
	Set up the clock	.02
	Set the time.	
	Select the time format	
	Display the clock.	
	Set automatic update of date and time	.00
	Use caller groups.	
	Add names to a caller group	.00
	Remove names from a caller group	
	Assign a ringing tone to a caller group	.04
	Rename a caller group	.04
	Assign group graphics.	
	Download ringing tones	
	Download iniging tones	.00

[vi]

	Notification of received ringing tone86Listen to received ringing tones86Save received ringing tones86Discard received ringing tones86Restore factory settings86Change Xpress-on™ color covers87Remove the back cover87Remove the phone from the front cover87Change the keypad88Replace the new front cover88Replace the back cover89
13.	Manage phone security90Lock the keypad (Keyguard)90About security codes91PIN codes92Set PIN code request92Change your PIN or PIN2 code92PUK codes93Security code93Change the security code93Use Call Restrictions94Turn fixed dialing on or off94Add numbers to the fixed dialing list94Turn on call restrictions95About your restriction password95Set up a closed user group96Turn off closed user group96
14.	Select a system
15.	Messages98Before you can send and receive messages.98Save your message center number.98Set the message mode.99Choose other message settings.99

[vii]

	Write messages	100
	Compose and send text messages	100
	Save messages in the outbox.	
	Resend a message from the outbox	
	Send an e-mail message	
	Read text messages	
	Read new text messages	
	Read new text messages later	
	Choose text message options.	
	Store messages	
	Chat with other phone users	
	About the chat screen	
	Start a chat session	
	Use predictive text for quick replies	106
	View chat history	106
	Change your nickname	106
	End your chat session	
	Use picture messages	
	Notes about picture messages	107
	Send picture messages	107
	Send picture messages with text.	108
	Receive picture messages.	
	Use the info message service.	109
	Use the service command editor	
10		
16.	Your wireless Internet browser	
	Notes on wireless Internet access	
	Technology background	110
	The Service provider's role	
	Set up for browsing	
	Sign on to the Internet.	
	Use browser options	112
	Navigate the wireless Internet.	
	General guidelines for using the phone keys	113
	Examples of wireless Internet sites	113
	Use bookmarks	
	Disconnect from the Internet	
	Security issues.	114

[viii]

	Be sure to clear the cache memory.114About authority certificates.115Notes about GPRS115Set up an automatic connection116Receive a call while online.116Make a call while online117Make an emergency call while online.117
17.	Your personal digital assistant.118Use the calendar.118View the calendar.118Make a note118Choose options for calendar notes119Make a to-do list120Add a to-do note.120Choose other to-do options.121Use the alarm clock121Set the alarm clock.122Manage the alarm.122Turn off the alarm clock.122Use the countdown timer123Set the countdown timer123Stop the time123Stop the time124Measure time124Measure time124Measure split time124Stop the clock125Save the time125Choose other stopwatch options125Share business cards126Send a business card as a short text message126Use the calculator126Add, subtract, multiply and divide.127Convert currency.127
18.	Your phone and other devices

[ix]

	Prepare the devices for IR connection129Infrared basics130Check the status of an IR connection130Send and receive information130Send a business card to another device131Receive a business card from another device131Send calendar notes to another device132Receive calendar notes from another device132PC connectivity132Nokia PC Suite133Wireless modem setup133Download Nokia PC Suite and Modem Setup133GPRS dial-up connections134
19.	Fun and games 135 FM Radio 135 Tune in to a radio station 135 Recall a stored frequency 136 Game rules 136 Start a new game 136 Adjust game settings 136 Pass 'n Rush 137 Snake II 137 Space Impact 137 Bumper 137
20.	Reference information138Batteries, chargers, and accessories138Important safety information139Traffic safety139Operating environment140Electronic devices140Potentially explosive atmospheres142Vehicles142Emergency calls143Make an Emergency Call143Certification Information (SAR)144

[x]

Care and maintenance
Accessories
Battery information148
Charging Times
Standby and Talk Times148
Chargers and other accessories
Standard Travel Charger (ACP-7U)
Rapid Travel Charger (ACP-8U)
Rapid Cigarette Lighter Charger (LCH-9)
Desktop Charging Stand (DCD-1)
Headset Kit (HDC-5)150
21. Technical information157
22. Troubleshooting152
23. NOKIA One-Year Limited Warranty153

[xi]



1 Safety first



Read these simple guidelines before you use your phone. Failure to comply with these guidelines may be dangerous or illegal.

SAFETY GUIDELINES

Following are important safety precautions for phone use.



Road safety comes first

Do not use a hand-held phone while driving. Park the vehicle first.



Switch off in hospitals

Follow any regulations or rules. Switch your phone off near medical equipment.



Switch off while aboard aircraft

Mobile phones can cause interference. Using them on aircraft is illegal.



Switch off when refueling

Do not use your phone at a refueling point. Do not use it near fuel or chemicals.



Switch off near blasting

Do not use your phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.



Observe infrared precautions

Do not point the IR beam at anyone's eyes or allow it to interfere with other IR devices.

[1]





Emergency calls

Make sure the phone is switched on and in service. If the word **Clear** appears on the screen above the right selection key, press and hold it to clear the display. Enter the emergency number, then press $\mathbf{\hat{s}}$. Give your location. Do not end the call until told to do so.



Be aware of interference

All wireless phones may get interference that could affect performance.



Use your phone sensibly

Use your phone only in the normal position (next to the ear). Do not touch the antenna unnecessarily.



Use only qualified service personnel

Equipment must be installed or repaired only by qualified service personnel.



Use approved accessories and batteries

Use only approved accessories and batteries. Do not connect incompatible products.

	=
1	
1	
1	
- 4	

Read instructions before you connect to other devices

When you connect your phone to any other device, read the device's user guide for detailed safety instructions. Do not connect incompatible products. Remember to make backup copies of all important data.



Make sure the phone is on

Before you make a call, be sure your phone is switched on. To make and receive calls, you must sign up with a cellular service provider.

[2]

2 Welcome

You'll find that your Nokia 6590 mobile phone has many useful features for everyday use, such as an FM radio, calendar, to-do list, text messaging, and alarm clock. Before you get started, review this chapter to find out more about:

- How to use this guide
- Wireless network services
- Accessibility solutions
- How to contact Nokia

• GET THE MOST OUT OF THIS GUIDE

The tips that follow can help you get the most from this guide as you learn to use your phone.

Understand the terms

This guide uses certain terms for certain actions.

- Press means to briefly press and then release a key. For example, press means "Press the zero key."
- Press Menu means to press the key that is below the word Menu on the phone's screen.
- Press and hold means to press and hold a key for 1 to 3 seconds (depending on the feature you're using), and then release the key.
- You use the selection keys and to choose an option on a menu.
- **Highlighted** means that an option you see on the screen is enclosed in a dark bar. Choices you make with the two selection keys act on the highlighted option.







Notice text conventions

This user guide provides text clues to help make instructions clear and easy to follow. These clues are called **conventions**.

Convention		What it means	
bold		The word or phrase appears on the phone's screen.	
bold a	nd blue	The text refers to an address on the World Wide Web.	
italic		Italics indicate emphasis. Pay close attention to any information in italics.	

Follow graphic clues

This guide uses certain icons (small pictures) to alert you to important information.

Tip: Provides information about a shortcut or an alternate method of doing something.



Note: Explains a feature or points out an important concept.



Important: Alerts you to information critical to using a feature correctly.



Caution: Warns you when you may lose information.



Warning: Helps you avoid personal injury, damage to the phone, or property damage.

Look for updates

From time to time, Nokia updates this user guide to reflect changes or corrections. The latest version may be available at the Nokia site on the World Wide Web:

http://www.nokia.com



1 On the home page, click **Nokia Phones**, scroll to the section about your phone, and click **Phone details**.



(2)

2 Click an item to download the user guide or interactive guide (if available).

Also, an interactive tutorial is available online at:

www.nokiahowto.com

UNDERSTAND WIRELESS NETWORK SERVICES

A wireless network service provides the connections you need to use your mobile phone. The network also can give you access to special wireless services, including:

Voice mail and voice privacy Call waiting, call forwarding, and caller ID Text and picture messages Ability to send your own number News and information services Notifications on SIM update Cell info display Service command editor E-mail over SMS Selected Internet access services GPRS services

Sign up with a service provider

Before you can use any of the network services, you must sign up with a wireless service provider. Instructions for using network features will be given by your service provider.

Note differences among service providers

Wireless network providers differ from each other in certain ways. For example, some networks may not support all language-dependent characters. When you sign up for service, make sure your provider offers the services you need.

[5]



LEARN ABOUT ACCESSIBILITY SOLUTIONS

Nokia is committed to making mobile phones easy to use for all individuals, including those with disabilities. For more information, visit the Nokia World Wide Web site:

www.nokiaaccessibility.com

Alternate format user guides

This user guide is available in alternate formats, including:

- Braille
- Large print
- Audiocassette
- E-text (electronic documents on a 3.5-inch disk, in Microsoft Word or WordPerfect format)

To request any format, call Nokia Customer Care at (888) 665-4228. Hearing-impaired and other TTY users can contact Nokia at (800) 246-6542.

LPS-3 Mobile Inductive Loopset

The LPS-3 Mobile Loopset gives people with T-coil equipped hearing aids the ability to make and receive calls without noise interference.

Also compatible with the Nokia 3300, 8200 and 8800 series digital phones, the loopset gives hearing-impaired users clear access to digital telephony for the first time.



The loopset is easy to use. You wear the loopset around your neck, connect it to your phone, and

speak directly toward the microphone. For more information see "Set up the loopset profile (double check with a loopset)" on page 81.



Note: The loopset can be purchased separately as an accessory. For detailed user instructions, refer to the booklet that comes with the LPS-3.



Accessible features



The Nokia 6590 has many accessible features, including:

Nibs above and below the Sector key for quick reference to the keypad

Tactile feedback when you press a key

Ability to send and receive short text messages

Convenience of one-touch dialing

Ability to define ring tones for different caller groups

Voice dialing and voice commands for handsfree operation

Ability to compose own ring tones with PC Suite Software

• FIND INFORMATION ABOUT YOUR PHONE

If you ever need to call Nokia Customer Care or your service provider, you will need to provide specific information about your phone. This information is provided on the phone's label. The label is on the back of the phone (under the battery). It shows the following:

Model number

Phone type (a technical designation)

International Mobile Equipment Identification (IMEI)

Do not remove or deface the label.

CONTACT NOKIA

When you need help, Nokia Customer Care can provide information about Nokia products.

Have the right information available

We recommend that you have the following information available before you contact the Nokia Customer Care:

- The phone's model number (6590)
- Phone type (a technical designation)
- The IMEI (serial number)
- Your ZIP code

[7]



Have the phone or accessory handy

Whether you're calling about your phone or an accessory, have the equipment with you when you call. For example, if you're calling about a headset, please have it available. If a Nokia representative asks a specific question about the accessory, you will have it available for quick reference.

Nokia Customer Care Center, USA	Customer Care, Canada
Nokia Mobile Phones 7725 Woodland Center Boulevard, Suite #150 Tampa, Florida 33614 Tel: 1-888-NOKIA-2U (1-888-665-4228)	Nokia Products Ltd. 575 Westney Rd. South Ajax, Ontario L1S 4N7 Tel: 1-888-22-NOKIA (1-888-226-6542) Fax: 1-905-427-1070
Fax: 1-813-249-9619 TTY: 1-800-24-NOKIA (for the hearing impaired only) (1-800-246-6542)	

• CONTACT YOUR SERVICE PROVIDER

Some service providers program a one-key customer support number into the phone. This number can be useful if you're having trouble dialing a number, especially when you're traveling outside your home area.

This one-key feature may not be available on all systems. Contact your service provider for availability.

When you need to get in touch with your wireless service provider:

• Press and hold the wey (or the key that your service provider instructed you to use) for 2 seconds.

Your phone will automatically dial the provider's customer support number if your provider offers this feature.

If your service provider determines that the problem is Nokia-related, their representative will direct you to the Nokia Customer Care Center (USA) or Nokia Customer Service (Canada).

[8]

3 Before you begin

3

Before you begin, you need to prepare your phone for use by installing the SIM card, charging the battery and attaching the headset.

• INSTALL THE SIM CARD

Important: Switch off the phone before installing the SIM card.

- 1 With the back of the phone facing you, press and hold the back cover release button.
- 2 Slide the cover off.
- 3 Lift out the battery.

- 4 Grasp the front of the SIM card door.
- 5 Push the SIM card door *gently* towards the gold contacts.
- 6 Lift the SIM card door.

[9]



- 7 Install the SIM card: beveled corner on the left, gold contact area face down.
- 8 Lower SIM card door and gently slide to lock into place.

Notes about SIM cards

- Keep all miniature SIM cards out of the reach of small children.
- The SIM card and its contacts are easily damaged by scratches or bending, so be careful when handling, inserting, or removing the card.
- You must remove the battery to access the SIM card. Always make sure that the phone is switched off before you remove the battery.


• INSTALL THE BATTERY

- 1 Place the battery in the compartment with the label side facing up and the golden contact area aligned with the contact prongs.
- 2 Lower the battery into place.
- 3 Replace the back cover.

[10]

• CHARGE THE BATTERY

- 1 Connect the lead from the charger to the bottom of the phone.
- 2 Connect the charger to a standard wall outlet. The battery power indicator (or battery bar) appears on the screen and starts scrolling. If the phone is on, **Charging** appears also.

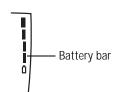

3

- 3 When the battery bar stops scrolling, the battery charge is complete. Battery full appears also, if the phone is on.
- 4 Disconnect the charger from the phone.

• IMPORTANT BATTERY INFORMATION

- Recharge your battery only with a charger approved by Nokia.
- You can switch the phone on and use it for calls while the battery is charging.
- If the battery is completely empty, it may take a few minutes before the battery indicator appears on the screen.
- If the battery is completely empty, it may take a few minutes before you can make or receive calls.
- The charging time depends on the charger and battery that you use. For more details, see "Battery information" on page 148.



REMOVE THE BATTERY

3

Important: Switch off the phone before removing the battery.

Important: Do not puncture or burn the battery. Please recycle or dispose of properly.


- 1 With the back of the phone facing you, press and hold the back cover release button.
- 2 Slide the cover off.
- 3 Lift out the battery.

• SET UP YOUR HEADSET

Your phone comes with a headset you can use while talking on your phone. The headset provides convenient handsfree use of the phone.

Connect the headset

- 1 Plug the headset jack into the bottom of your phone.
- 2 Put the round ear plug into one ear.

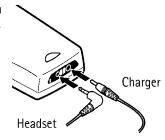

[12]

Use the headset

With the headset connected, you can make and answer calls as usual, using the keypad to press \Im and \checkmark or to enter numbers to call.



Note: The microphone for the headset hangs at the side of your head. Although the microphone may seem far from your mouth, you can speak at a normal volume.

• USE THE CARRYING CASE

Nokia carrying cases can be purchased separately as accessories. A carrying case can protect the phone against accidental key presses when you're not using it.

Nokia recommends that you keep the phone in its case when you're not actively using it for calls.



4 About your phone




• KEYS AND FEATURES

Front

- 1 Power key
- 2 Earpiece
- 3 Display
- 4 Selection keys and scroll keys
- 5 Talk key
- 6 End key
- 7 Number keys
- 8 Microphone

Note: When any key is pressed, the keypad and display lights stay on for up to 15 seconds.


Bottom

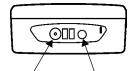


Charger connection Headset/car kit/loopset connection

[14]

Left side and right side

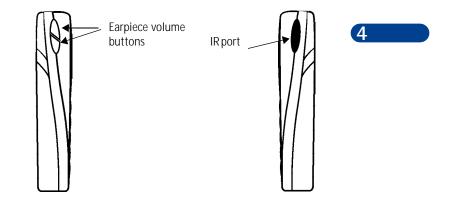



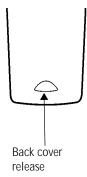



Antenna

[15]

• SWITCH ON YOUR PHONE

 Press and hold the power key for more than a second.

The phone may ask for a Personal Identification (PIN) code or a security code. See "About security codes" on page 91 for more information.





 \mathbb{A}

Warning: Do *not* switch on the phone in places where wireless phone use is prohibited or where the use of the phone could cause interference or danger.

Note: Your service provider supplies the PIN code.

• ABOUT THE ANTENNA



When you avoid touching the antenna during a call, you optimize the antenna performance and the talk-time of your phone.

Normal position: Hold the phone as you would any other telephone.

Your phone has a built-in antenna. As with any other radio transmitting device, do *not* touch the antenna unnecessarily when the phone is switched on.

Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than needed.



[16]



4

ABOUT THE START SCREEN

When you turn on your phone, the first screen that appears is the **Start** screen. In the middle of the **Start** screen, you may see information indicating which wireless network your phone uses. This information can vary between phones. Other indicators and icons appear on this



Start screen and are described in the next section.

ABOUT INDICATORS AND ICONS


Your phone has two types of identifiers: indicators and icons.

Indicators

Indicators show the status of something. The phone uses three types of indicators:



- Signal strength indicator: Shows the strength of the signal to your phone.
- Battery strength indicator: Shows how much power is left in your phone's battery.
- Volume indicator: Shows the earpiece volume level. Adjust the volume level with the earpiece volume buttons on the left side of

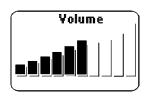

the phone (see "Adjust the earpiece volume during a call" on page 20).

[17]

Icons

4

Icons are graphical representations of a specific item or situation. For example, this icon $\Box \Box$ appears when you have a voice message waiting to be heard. (Some systems use a different method.)

The rest of this section shows examples of each icon that can appear on your phone and tells you what these icons indicate.



Line 1 is selected for outgoing calls.

You have an active call.

You have one or more new voice messages.

You have one or more new text messages.

(If the icon blinks, text message memory is full.)

Keyguard is on. Your phone will not accept any key presses.

The	alarm	clock	is set.

The Silent profile is selected.

Incoming voice calls are being forwarded to another number.

1

-

The phone is ready for you to enter a response.

Indicates the current call.

Indicates a call on hold.

[18]

5 Make and answer calls

This chapter tells you how to make and receive calls and how to adjust certain options.

MAKE A CALL

Check the signal strength

The signal indicator on the left side of your phone's screen shows the strength of the network radio signal. The indicator scrolls as the signal strength increases and decreases. To get the strongest signal, try moving your phone slightly. If you're inside a building, move toward a window.

Use the keypad

- 1 Enter the area code and phone number.
- 2 Press 🥆.

Hold the phone as you would any other telephone, with the antenna pointed up and over your shoulder.

Important: Do not touch the

antenna when the phone is switched on. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Warning: Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

Use the phone book

- 1 From the Start screen, press \land or \checkmark and scroll to the number you want.
- 2 Press 🥆 to make the call.
- **Tip:** To skip ahead quickly in the list, press the number key that matches the first letter of the name.



Calling.. 2145551212 G End Call O



Adjust the earpiece volume during a call

- To increase the volume of a call, press the top volume key.
- To decrease the volume, press the bottom volume key.

If an accessory with its own loudspeaker is connected to your phone, the volume keys adjust the volume for that accessory.

• END A CALL

Press 6.

5)

ANSWER A CALL

When someone calls you, the phone alerts you (see "Ringing options" on page 77) and **Calling** flashes on the display. You can press **Silence** to stop the ringing.

To answer, press any key except **Decline** or *C*.

Caller ID

When Caller ID is active, =tThis is a network service lets your phone display the caller's phone number. The caller's name may also appear, if their name and number are stored in the phone book (see "Use the phone book" on page 41). Contact your service provider for details.

• REJECT A CALL

Press 6.

REDIAL THE LAST-DIALED NUMBER
 Press twice.

Dial any of the 10 last-dialed numbers

- 1 Press 🥆 .
- 2 Scroll to the number you want to redial.
- 3 Press 🥆 again.





6 The menu

Your phone offers many functions that are grouped in menus and submenus. Access these menus with the selection keys and scroll keys, or by entering the appropriate shortcut number.

• USE THE MENUS

Selection keys

Below the screen, you will find two selection keys. Their functions depend on the text above the keys.

For example, in this screen, the word **Menu** appears above the selection key. Press the key to enter the menu function. Similarly, press the key under **Names** to access phone book functions.

Scroll keys



Use the scroll keys, located just below the screen, to scroll through your phone's menus and phone book.





Scroll bar

While you use your phone's menus, a scroll bar appears at the far right of the screen. This bar indicates where you are in the menu. Each numbered "tab" on the bar represents a different menu item.





For example, press **Menu** once. The scroll bar appears with the first (top) tab displayed. A different tab appears each time you press \land or \checkmark .

Help text

Many menu items have brief help text. To view the help text, scroll to the menu item and wait for about 15 seconds. Press **More** to see the next page of the text or **Back** to exit.

ABOUT MENU SHORTCUTS

When you scroll to a menu item, the menu number appears on the screen above the scroll bar. If you learn some of these menu numbers, you can use them to access different features quickly instead of scrolling through the menu.



- To use a shortcut, press Menu, then the menu number.
- For access to the Messages Menu, press Menu, then 0, then the menu number(s).



• LIST OF MENU SHORTCUTS

Here is an abbreviated list of menu items and their menu shortcuts. Later chapters tell you how to work with the menus and explain their functions.

Note: Some items may not appear due to the SIM card configuration and service availability.

 Write message Write e-mail Chat Note: If you do not have the chat feature, all options after 1-3 will be one level higher on the menu structure. Inbox Outbox 	
 3 Chat Note: If you do not have the chat feature, all options after 1–3 will be one level higher on the menu structure. 4 Inbox 5 Outbox 	
 be one level higher on the menu structure. Inbox Outbox 	
 be one level higher on the menu structure. 4 Inbox 5 Outbox 	
5 Outbox	
6 Archive	
7 Templates	
8 My folders	
9 Erase messages	
1 All read	
2 Inbox	
3 Outbox	
4 Archive	
5 Templates	
6 (Own folders?)	
10 Voice messages 1 Listen to voice messages	
2 Voice mailbox number	
11 Info messages	
1 Info service	
2 Topics	
3 Language	
4 Info topics saved on SIM card	
5 Read (appears when message received)	
[23]	

12 Service command editor

13 Message settings

6

1 Default profile

- 1 Message center number
 - 1 Messages sent as
 - 2 Message validity
 - 3 Default recipient number
 - 4 Delivery reports
 - 5 Use GPRS
 - 6 Reply via same center
 - 7 Rename sending profile (Determined by SIM card or service
 - provider)
- 2 Other settings
 - 1 Font size
 - 1 Small fonts
 - 2 Large fonts
 - 2 Overwriting in inbox
 - 3 Overwriting in outbox
- 2 Multimedia msg.
 - 1 Allow multimedia reception
 - 1 Yes
 - 2 In home system
 - 3 No
 - 2 Incoming multimedia messages
 - 1 Retrieve
 - 2 Reject
 - 3 Allow advertisements
 - 1 No
 - 2 Yes
 - 4 Connection settings
 - 1 Active multimedia settings
 - 2 Edit active multimedia settings



1 Missed calls

[24]

- 2 Received calls
- 3 Dialed numbers 4
 - Clear call lists
 - 1 All
 - 2 Missed
 - 3 Received
- 4 Dialed 5 Call timers

 - 1 Duration of last call 2 Duration of all calls
 - 3 Duration of received calls
 - 4 Duration of dialed calls
 - 5 Show call time on display
 - 1 On
 - 2 Off
 - 6 Clear timers
- 6 Call costs
 - 1 Last call units
 - 2 All calls units
 - 3 Call cost settings
 - 1 Clear counters
 - 2 Show costs in
 - 3 Call cost limit
- 7 GPRS data counter
- - 1 Data sent in last session
 - 2 Data received in last session
 - 3 All sent data
 - 4 All received data
- 5 Clear counters
- 8 GPRS connection timer
 - 1 Duration of last session
 - 2 Duration of all sessions
 - 3 Clear timers



[25]

	3	Profiles
6		 Normal Select Customize Ringing options Ringing tone Ringing volume Vibrating alert Message alert tone Keypad tones Warning tones Accepted caller groups
		Note: The Normal profile does not include the next item: 9) Profile name. The renaming option is not available in the Normal profile.
		3 Timed 2 Silent 3 Meeting 4 Outdoor 5 Pager
	4	Settings 🔤 🐼
		 Time settings CLock

[26]

- 2 Call settings
 - 1 Call Forwarding
 - 1 Forward all voice calls
 - 1 Activate
 - 2 Cancel
 - 3 Check status
 - 2 Forward if busy
 - 3 Forward if not answered
 - 1 Activate
 - 2 Cancel
 - 3 Check status
 - 4 Set delay time
 - 1 5 seconds
 - 2 10 seconds
 - 3 15 seconds4 20 seconds
 - 5 25 seconds
 - 6 30 seconds
 - 4 Forward if out of reach
 - 1 Activate
 - 2 Cancel
 - 3 Check status
 - 4 Set delay time
 - 1 5 seconds
 - 2 10 seconds
 - 3 15 seconds
 - 4 20 seconds
 - 5 25 seconds
 - 6 30 seconds
 - 5 Forward when not able to take calls
 - 6 Forward all fax calls
 - 7 Forward all data calls
 - 8 Cancel all call forwarding
 - 2 Anykey answer
 - 3 Automatic redial
 - 4 1-touch dialing
 - 5 Call waiting



6

- 6 Summary after call
- 7 Send own caller ID
- 3 Phone settings
 - 1 Language (Service provider determines which languages are available)

 - 1 Automatic
 - 2 American English 3 American Spanish
 - 4 Canadian French

 - 5 Brazilian Portuguese 6 Traditional Chinese

 - 2 Cell info display 3 Welcome note
 - 4 System selection
 - 5 Start-up tone
 - 6 Help text activation

6

- 4 Tone settings 1 Ringing options
 - 1 Ring
 - 2 Ascending
 - 3 Ring once
 - 4 Beep once
 - 5 Silent
 - 2 Ringing tone
 - 1 Product specific ringing tone
 - 2 Personal ringing tones
 - 3 Ringing volume
 - 4 Vibrating alert
 - 5 Message alert tone
 - 6 Keypad tones
 - 7 Warning tones
 - 8 Accepted caller groups
 - 1 All calls
 - 2 Family
 - 3 VIP
 - 4 Friends
 - 5 Business

[28]

- 6 Other
- 5 Accessory settings
 - 1 Headset
 - 1 Default profile
 - 1 Current profile
 - 2 Normal
 - 3 Silent
 - 4 Meeting
 - 5 Outdoor
 - 6 Pager
 - 2 Automatic answer
 - 1 On
 - 2 Off
 - 2 Handsfree
 - 1 Default profile
 - 1 Current profile
 - 2 Normal
 - 3 Silent
 - 4 Meeting 5 Outdoor
 - 6 Pager
 - 2 Automatic answer
 - 3 Lights
 - 3 Loopset
 - 1 Use loopset
 - 2 Default profile
 - 3 Automatic answer
 - 4 TTY/TDD
 - 1 Use TTY
 - 1 Yes
 - 2 No
- 6 GPRS modem settings
 - 1 Active access point
 - 2 Edit active access point
 - 1 Alias for access point
 - 2 GPRS access point



[29]

- 7 Security settings
 - 1 PIN code request
 - 2 Call restrictions
 - 1 Outgoing calls
 - 2 International calls
 - 3 International calls except to home country
 - 4 Incoming calls
 - 5 Incoming calls if roaming
 - 6 Cancel all call restrictions
 - 3 Fixed dialing
 - 4 Closed user group
 - 5 Security level
 - 6 Change access codes
 - 1 Change security code
 - 2 Change PIN code
 - 3 Change PIN2 code
 - 4 Change restriction password
- 8 Restore factory settings

5 Radio

6 Organizer

- Alarm clock
 Calendar
- 3 To-do list
- 7 Tools
 - 1 Calculator
 - 2 Voice recorder
 - 3 Voice commands
 - 4 Countdown timer
 - 5 Stopwatch

[30]

6

8 Games 1 Select game 1 Pass n' Rush 2 Snake II 3 Space impact 4 Bumper 2 Game services 6 3 Settings 1 Game sounds 2 Game lights 3 Shakes 4 Club Nokia ID]}⊘ • 9 Infrared \odot 10 Services

The following menu items depend on network availability. Contact your service provider for more information about network features.

1 Home

- 2 Bookmarks
- 3 Service inbox
- 4 Settings

 - Active service settings
 Edit active service settings
 Settings name

 - 2 Homepage
 - 3 Session mode
 - 4 Connection security

[31]

	Appearance settings 1 Font size	
6 Go	2 Text wrapping 3 Show images Download settings 1 Cookies ertificates o to address lear cache	

[32]

• PHONE BOOK MENU

- 1 For access to the phone book and its menus, press *𝔅* to return to the **Start** screen.
- 2 Press Names.

These options may be available, depending on your SIM card:

- 1 Find
- 2 Add entry
- 3 Edit name
- 4 Erase
- 5 Сору
- 6 Add number
- 7 Settings
 - 1 Memory in use
 - 2 Phone book view
 - 3 Memory status
- 8 1-touch dialing
- 9 Voice tags
- 10 Service numbers
- 11 Own numbers
- 12 Caller groups

6

I

I

[33]

7 Enter letters and numbers

You can enter letters and numbers into your phone for a person's name and phone number, writing a text message, and so on. There are two ways to do this:

- ABC mode, for making entries in the phone book, entering calendar notes, and renaming caller groups.
- Predictive text input, for writing text messages, adding notes to a
 picture message, adding notes to the To-Do list, and entering a web
 address using WAP services.

• ABC MODE

You can use the ABC mode to enter information into the phonebook. From the start screen, press **Names**, then scroll to **Add entry**.

The ABC icon appears in the left corner as visual confirmation.

Add letters


the screen.

1 Find the key that has the letter you want to enter.

2 Press the key as many times as needed for the letter to appear on

i vabc Name:	
John	
OK	Clear

For example, to enter the name John:

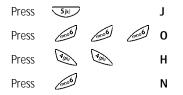

[34]

Depending on the selected display language, the following characters may be available.

Кеу	Characters	Кеу	Characters	
1	. ; ? ! - 1	7	PQRS7	
2	ABC2	8	TUV8	
3	DEF3	9	WXYZ9	7
4	GHI4	0	space, 0	
5	JKL5	*	(See page 36 for details.)	
6	MNO6	#	Changes letter case	

Note: Some networks may not support all language-dependent characters.

Enter spaces and punctuation

- To enter a space, press once.
- To enter punctuation, press 🔍 repeatedly until the character you want appears.

Erase mistakes

If you make a mistake:

- Press Clear to erase that character.
- Press **Clear** as needed to erase more than one character, or press and hold **Clear** to erase the entire field of characters.

Change letter case

To switch between uppercase and lowercase letters, press S. The **ABC** icon switches to **abc**, showing you are using lowercase letters.



Enter numbers

To enter numbers, you can:

Press and hold 🔗 and switch to 123 mode. Press the appropriate • number key to enter a number.

OR

While in ABC mode, press and hold the corresponding number key • until the number appears.

As with the ABC mode, if you make a mistake:

- Press Clear to erase that character.
- To switch back to the ABC mode, press and hold 🖉 again .

Use special characters

IN ABC MODE

1 Press and hold 📎 . A screen appears with the following special characters available:

.,'?!"-()@/:_;-+**&**% *****=<> £€\$¥ =¤[]{}\~^¿j§ #|-

2 Use scroll keys to select the character you want, then press Insert.

IN 123 MODE

You can access the following special characters only in 123 mode. There are two places you can use these characters:

- At the Start screen, when you dial a phone number
- At the number prompt, when you add a new entry to the phone book ٠

Press 🔪 to enter *

(*.) 📎 to enter + Press

(×) Press

 Image: style
 Image: style
 Image: style

 Image: style
 Image: style

 Image: st (×.) Press

Use this character to send command strings to the network. Contact * your service provider for details.

[36]

- + Use this character as a prefix for dialing international numbers.
- **p** Use this character to create a pause that occurs when dialing a number. Numbers entered to the right of this special character are automatically sent as touch tones after a 2.5-second pause.
- w This character creates a wait; digits to the right of the w are not sent until you press 5.


To automate dialing your voice mail with thesecharacters, see

• PREDICTIVE TEXT INPUT



Predictive text input allows you to write messages much faster than the ABC mode. With predictive text input, you only need to press each number key once for each letter. Your phone uses a built-in dictionary to predict or guess what you are writing. You can also add new words to the dictionary.

For example, to write *Nokia* with the English dictionary selected, press:

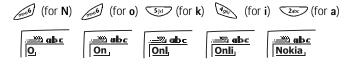

The display shows the above words for each key pressed.

Since the displayed word changes after each key stroke, disregard the word until you have keyed in all the characters.

Note: Predictive text input may not be available for all languages.

Select a language and turn on predictive text

- 1 Press Menu, then press Select. Write message appears.
- 2 Press Select, then press Options.
- 3 Scroll to **Predictive text**, then press **Select**.
- 4 Scroll to the language you want, then press Select.



T9 prediction on appears.

7

•

Turn off predictive text

- To switch from predictive text input to ABC mode, repeat steps 1 through 3 above, then select **Prediction off**.
 OR
- While writing the message, quickly press 🔊 twice to switch between predictive text input and ABC mode.
- Tip: Your key presses must be quick! Press $\cancel{5}$ two times in about 1.5 seconds.

Write words using predictive text

• Press the number key that corresponds to the letter you want to enter. For example to write "hello" press:

- If the displayed word is correct, press
 to accept the word and add a space.
 - If the displayed word is not correct, press to see the other possible matches.

یے: Hello	155
Options	Clear

- If the word you are trying to write is not in the dictionary, a question mark appears.
- To see how many characters you have left for your message, refer to the counter in the upper right corner of the screen.
- Refer to "Predictive text shortcuts" later in this chapter for more details.

Add a new word to the dictionary

If the word you are trying to enter does not show up as a possible match, you can add the word to the dictionary.

1 Press X repeatedly until **Spell** appears in place of **Options**.



- 2 Press **Spell**, then enter the word(s) using ABC mode.
- 3 Press **Save** to add the word to the dictionary.

Use predictive text shortcuts Press Menu 01 1 (Messages > Write message) to write messages using the following shortcuts.

7

Zabx - worth	Use letter keys for word entry. Press each key only once for each letter.	
(x)	Press to view the next matching word if the underlined word is not the word you intended.	
Spell	Press to add a new word to the dictionary.	
•_	Press once to accept a word and add a space.	
C?	Press and hold to enter a number.	
(** ?	Press to change the character case. ABC indicates uppercase. ABC indicates lowercase.	
(**)	Press twice to select predictive input or ABC mode.	
	Abc , and abc indicate predictive text input.	
Clear	Press once to delete the character to the left of the cursor.	
13	Press once to add a punctuation mark. To change the underlined symbol, press repeatedly until the desired symbol appears.	
160	The maximum number of characters available appears in the top right corner of the screen and counts down for each character added.	

[39]

Insert symbols

1 Press and 🕄 hold until the symbol screen appears.

OR

Press **Options** and scroll to **Insert** symbol.

2 Scroll to the desired symbol and press **Insert**.

Insert numbers

- 1 To add a number to the message, press and hold (*).
- 2 Key in the desired numbers, then press and hold 257 to return to ABC mode.

Write compound words

- 1 Write the first part of the word and press \checkmark to accept it.
- 2 Write the last part of the compound word and press to enter the word in memory.



[40]

8 Use the phone book

Use the phone book to store names, e-mail addresses and phone numbers.

- A phone book entry can consist of a number only, a name and number, or a name only.
- Names are saved in the phone book memory and/or SIM memory. If you try to save a name that already exists, the phone asks if you want to replace the existing name.

• SAVE NAMES, NUMBERS, AND E-MAIL ADDRESSES

Save a name, number, and e-mail address

1 Enter a phone number and press Options.

Note: For international dialing, see page 63.

- 2 Scroll to Save and press Select.
- 3 Enter a name, then press OK.
- 4 Press **Options**.
- **5** Scroll to **Add info** and press **Select**.
- 6 Scroll to E-mail and press Select.
- 7 Enter the e-mail address, then press **OK**.
- Note: All phone book entries that contain email addresses are automatically saved in phone memory. E-mail addresses cannot be saved in SIM memory.

Save a number only

- 1 Enter the phone number.
- 2 Press and hold **Options**.

The number is saved in your phone book. You can add a name or e-mail address to it later.



[41]

Save a name and number while in a call

- 1 Press Options.
- 2 Scroll to Phone book, then press Select.
- 3 Scroll to Add entry, then press Select.
- 4 Enter the name, then press **OK**.
- 5 Enter the phone number, then press **OK**.

Save an E-mail address

1 Press Names.

8

- 2 Scroll to Find, then press Select.
 - The Name box appears.
- 3 Enter the name you want to add an email address to and press OK. OR

Press List, or \checkmark or \checkmark to scroll through the name list until you find the name.

- 4 Press Details, then press Options.
- 5 Scroll to Add info, then press Select.
- 6 Scroll to E-mail and press Select.
- 7 Enter the email address, then press **OK**.
 - A confirmation message appears.

If your phone book is full

If your phone book is full, you can save the phone number to another memory or replace an existing entry.

Scroll to the entry you want to replace, then press OK.

[42]

• FIND NAMES IN THE PHONE BOOK

At the Start screen

- Press ∧ or ∨.
 - OR
- Press Names.

Find appears highlighted.

• Press the number key(s) that matches the first letter(s) of the name.

While in a call

- 1 Press Options.
- 2 Scroll to **Phone book** and press **Select**.

Find is highlighted.

- 3 Press the number key(s) that matches the first letter(s) of the name. OR
- 4 Press Select.
- 5 When the box appears, enter the name and press **Find**. You can enter just the first few letters of the name, then press **Find**. Your phone will show the closest matching name.

• EDIT NAMES

- 1 At the Start screen, recall the stored name, press **Details**, then press **Options**.
- 2 Scroll to Edit name, then press Select.
- 3 Edit the name, then press OK.



[43]

• EDIT NUMBERS

- 1 At the Start screen, recall the stored name, press **Details**, then press **Options**.
- 2 Scroll to Edit number, then press Select.
- 3 Edit the number, then press OK.

• ERASE NAMES AND NUMBERS

Erase a stored number

At the Start screen:

8

- 1 Recall a stored name.
- 2 Press Details, then Options.
- 3 Highlight Erase number, then press Select, then OK.

You can then add a different phone number for the name or you can erase the name.

Caution: You cannot undo Erase functions, so be careful!

Erase your entire phone book

Caution: This feature erases your entire phone book and can't be undone!

- 1 Press Names.
- 2 Scroll to Erase and press Select.
- 3 Scroll to Erase all and press Select.
- 4 Scroll to the memory (Phone or SIM card) you want to erase, then press **Erase**.
- 5 When you see Are you sure?, press OK.
- 6 When the **Security code:** prompt appears, enter your security code and press **OK**.

[44]

ABOUT PHONE BOOK MEMORY

Your phone has two types of memory: internal memory and SIM card memory. You can save names and numbers in either memory. The internal phone memory can store up to 500 names and numbers. The amount of names and numbers you can store in SIM card memory is dependent on SIM card capacity. Please check with your SIM card provider or carrier.

Switch between internal memory and SIM memory

- 1 At the Start screen, press Names.
- 2 Scroll to Settings, then press Select.
- **3** Scroll to **Memory in use**, then press **Select**.
- 4 Scroll to Phone and SIM, Phone, or SIM card then press OK.

Note: Whenever you insert a SIM card for the first time, or when you insert a different SIM card, SIM card memory is automatically selected.

8

[45]

9 Check call history

Your phone provides a call log that registers information about calls you make and receive. The call log keeps track of the following:

Missed calls.

9

- Numbers from which you've received calls.
- Numbers you've dialed.
- The amount of time you've spent on calls.
- The amount of data sent and received over GPRS.
- The amount of time you've spent online for data transfers over GPRS.

CHECK DIALED CALLS

Your phone saves the last 10 numbers you've dialed.

- 1 Press Menu 2 3 (Call log > Dialed numbers).
- 2 Scroll to the number you want to see.
- **3** To dial the number, press \uparrow ; for other options, press **Options** (see "Choose options in call lists" on page 47).

CHECK RECEIVED CALLS

Your phone saves the phone numbers of the 10 most recent calls you've answered, if the caller's number was available.

- 1 Press Menu 2 2 (Call log > Received calls).
- 2 Scroll to the number you want to see.
- 3 To dial the number, press \uparrow ; for other options, press **Options** (see "Choose options in call lists" on page 47).



[46]

CHECK FOR MISSED CALLS

Your phone saves the numbers and names (if available) of the last 10 callers that have tried unsuccessfully to reach you.

The screen tells you how many calls were missed. If the caller's name and number are stored in memory, that information appears on the display.

After missing a call

1 Press List.

If you have missed more than one call, you can scroll through the list of numbers.

9

- 2 To dial the displayed number, press 🥆 .
- 3 For other options, press **Options**.
- 4 To exit, press **Back**.

At any time

- 1 Press Menu 2 1 (Call log > Missed calls).
- 2 Scroll to the number you want to see.
- 3 To dial the number, press 🥆 .
- 4 For other options, press **Options**.

CHOOSE OPTIONS IN CALL LISTS

When you view the missed calls, received calls, or dialed calls list and press **Options**, the following choices appear on your phone's screen.

Choice	What it does
Call time	Shows the date and time of the last call. Use the scroll keys to view up to five recent call dates/time for the displayed phone number.

[47]

Choice	What it does
Send message	Allows you to write a short text message to the person who called you.
Edit number	Allows you to edit the displayed number and save it with a name to your phone book.
Save	Allows you to enter a name for the number and save both to your phone book.
Add to name	Allows you to save the number to an existing name in the phone book.
Erase	Allows you to delete the number from the call list.
View number	Displays the phone number is the caller's name is stored in the phonebook.

• CLEAR CALL LISTS

9)

This feature clears all the missed, received, and dialed call lists.

- Caution: You cannot undo this operation.
- 1 Press Menu 2 4 (Call log > Clear call lists).
- 2 Scroll to All, Missed, Dialed, or Received, then press Select.
- Caution: Missed, received, and dialed calls lists are also erased when you change the phone security setting, or if you use a SIM card that is not one of the five most recent cards used with the phone.

• USE CALL TIMERS

Your phone automatically tracks the amount of time you've spent on calls.

View the call duration

1 Press Menu 2 5 (Call log > Call timers).

[48]

2 Scroll to Duration of last call, Duration of dialed calls, Duration of received calls, or Duration of all calls.

Reset call timers to 0

- 1 Press Menu 2 5 (Call log > Call timers).
- 2 Scroll to Clear timers, then press Select.
- 3 Enter your security code, then press OK.

Show call timer during calls

- 1 Press Menu 2 5 (Call log > Call timers).
- 2 Scroll to Duration of last call, then press Details. Current call is displayed.
- 3 Press Select.
- 4 Scroll to **On**, then press **OK**.

During a call, the amount of time spent in that call is displayed.



Note: The actual time invoiced for calls by your service provider may vary, depending on network features, and rounding-off for billing.

MANAGE CALL COSTS

This network service allows you to check call costs. You can view the last call cost, or the total cost of all calls made or received since the counters were reset.

Note: The actual invoice for calls and services from your service provider may vary, depending upon network features, and taxes.

View call costs

- 1 Press Menu 2 6 (Call log > Call costs).
- 2 Scroll to Last call units (cost of last call, or current call if applicable) or All calls units (cost of all calls since counters were last reset).



(9

Clear call cost counters

- 1 Press Menu 2 6 3 (Call log > Call costs > Call cost settings).
- 2 Scroll to Clear counters, then press Select.
- 3 Enter your PIN2 code, then press OK.

Show costs in units or currency

This feature allows you to choose either units or currency when the phone shows call costs.

- You need a PIN2 code for this feature.
- If you choose charging units, contact your wireless service provider for information about the cost of a charging unit.
- This feature appears only if supported by your service provider and SIM card.
- 1 Press Menu 2 6 3 (Call log > Call costs > Call cost settings). Says Not allowed
- 2 Scroll to Show costs, then press Select.
- 3 Enter your PIN2 code, then press OK.
- 4 Scroll to Currency or Units, then press Select.
- 5 If you select Currency:

9

Your phone prompts you to enter a home unit price and a currency name.


If you select Units:

- A confirmation note appears.
- If you chose units, call costs and call cost limits are measured in charging units as agreed to by your service provider.

[50]

Limit your call costs

This feature allows you to set a limit for the cost of calls if this function is included in the SIM card. The functionality may vary depending on the network. When the limit you set is reached, no calls can be made except for emergency calls.

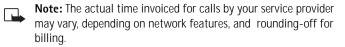

SET A LIMIT

- 1 Press Menu 2 6 3 (Call log > Call costs > Call cost settings).
- 2 Scroll to Call cost limit and press Select.
- 3 Enter your PIN2 code (see "About security codes" on page 91), then press **OK**.
- 4 Scroll to Set, then press OK.
- 5 Enter the number of charging units or dollars, then press **OK**.

Tip: Press # to insert a decimal point.

The number of remaining units is shown when the screen is clear.

REMOVE A LIMIT

- 1 Follow steps 1 and 2 above.
- 2 Scroll to Off, then press OK.

CHECK DATA CALLS

In addition to keeping track of voice calls, your phone's call log records information about data calls. You can check the amount of data transferred over the network via GPRS. You can also keep track of how much time you spend online.



(9

Check the data counter

Note: All data counters are displayed in bytes.

- 1 Press Menu 2 7 (Call log > GPRS data counter).
- 2 Scroll to the information you are interested in viewing. Your options include the following:
- Data sent in last session
- Data received in last session
- All sent data

9

All received data

Clear the data counter

- 1 Press Menu 2 7 (Call log > GPRS data counter).
- 2 Scroll to Clear counters, then press Select.
- 3 Enter your security code, then press OK.

Check the connection timer

Note: The time is displayed in hours:minutes:seconds format.

- 1 Press Menu 2 8 (Call log > GPRS connection timer).
- 2 Scroll to the information you are interested in viewing.

Your options include the following:

- Duration of last session
- Duration of all sessions

Clear the connection timer

- 1 Press Menu 2 8 (Call log > GPRS connection timer).
- 2 Scroll to Clear timers and press Select.
- 3 Enter your security code, then press OK.

[52]

10 Advanced calling features

ACTIVE CALL OPTIONS

Use call waiting

This network service lets you receive an incoming call when you're already in a call. (Contact your service provider for availability.) The phone beeps to let you know of the incoming call.

ACTIVATE/CANCEL CALL WAITING

- 1 Press Menu 4 2 5 (Settings > Call settings > Call waiting).
- 2 Scroll to Activate or Cancel.
- 3 Press OK.

CONFIRM CALL WAITING STATUS

- 1 Press Menu 4 2 5 (Settings > Call settings > Call waiting).
- 2 Scroll to Check status and press OK.

ANSWER A WAITING CALL

- 1 Your phone signals when you have a call waiting.
- 2 Press to put the current call on hold and answer the waiting call.
 - OR

Press Answer.

REJECT A WAITING CALL

You can just let the phone ring, or follow the steps below.

- 1 Press Options and scroll to Decline call.
- 2 Press Select.

SWITCH BETWEEN CALLS

Press 🥆 or Swap.

The \blacksquare icon represents the active call and the \blacksquare icon represents the call on hold.

[53]



END THE ACTIVE CALL

Press 6.

The held call becomes active.

OR

- 1 Press **Options** and scroll to **End call**.
- 2 Press Select.

THIRD CALL WAITING

If you have both an active and a held call and a third call is waiting, follow the following steps to answer the third call and end the other calls.

END THE ACTIVE CALL AND HELD CALL TO ANSWER THE WAITING CALL

- 1 Press Options.
- **10 2** Scroll to **End all calls**.
 - 3 Press Select.
 - 4 Press 🥆 to answer the third call.

Use in-call options

During a call, press **Options** to see the In-call menu. Your choices are:

Choice	What it does
Hold	Holds or releases a call.
New call	Makes a call when you have a call in progress.
Touch tones	Sends touch tones.
End call	Ends current call.
Phone book	Switches you to the phone book.
Menu	Switches you to the menu.
Mute	Mutes a call.
Record	Allows you to record the active call. For more information, see "Record a phone conversation" on page 68.



Put a call on hold

- 1 To put a call on hold, press Hold.
- 2 To return to the call, press Unhold.

Make a new call

- 1 Enter the second phone number, or recall it from the phone book.
- 2 Press 🥆 .

OR

- 1 Press Options.
- 2 Scroll to New call, then press Select.
- 3 Enter the second phone number, or recall it from the phone book.
- 4 Press Call.

(10

With either method, the first call is automatically put on hold.

SWITCH BETWEEN TWO CALLS IN PROGRESS

Press 🥆 or Swap. The 🖬 icon represents the active call and the 📋 icon represents the call on hold.

END THE ACTIVE CALL

Press 6.

The held call becomes the active call.

Send touch tones

When you press the keys during a call, your phone generates sounds known as touch tones. Use touch tones to access many automated, overthe-phone services such as voice mail, checking airline arrival/departure times, and bank balances.



Note: You must be on an active call to send touch tones.



SAVE TOUCH TONE STRINGS

Store touch tone strings the same way you save phone numbers (see "Save names, numbers, and e-mail addresses" on page 41).

For frequently used strings of numbers, you can save an entire sequence of digits in your phone book and send it as a touch tone string.

SEND A TOUCH TONE STRING

- 1 Press Options.
- 2 Scroll to Touch tones and press Select.
- 3 Enter a touch tone string or recall a touch tone string from the phone book and press **OK**.

End all calls

1 Press Options.

10)

2 Scroll to End all calls, then press Select.

Access the phone book

You can access the phone book while in a call.

This option appears in the menu as Phone book.

- 1 Press Options.
- 2 Scroll to Phone book and press Select. Now your phone book functions are available. See "Use the phone book" on page 41.

Access menus

Scroll to Menu and press Select to access any of your phone's menus.

Mute/unmute the microphone

You can mute and unmute your phone's microphone while a call is in progress. The difference between *mute* and *hold* is that mute lets you hear the other caller.

- 1 Press Options.
- 2 Scroll to Mute, then press Select.
- 3 To unmute the microphone, press **Unmute**.

[56]

Muting and unmuting also affects the microphones of any accessories connected to the phone.

Make a conference call

This network service allows you to make conference calls with your phone. Check with your service provider for details.

- 1 Place a call to the first person.
- 2 Press Options and scroll to New call.
- 3 Press Select, recall or dial the number of the next party you want to include, then press Call.
- 4 After the other party answers, press Options.
- 5 Scroll to **Conference**, then press **Select**.
- 6 To add other parties to the call, repeat steps 2 through 5.
- 7 To end the conference call, press *(*.

HAVE A PRIVATE CONVERSATION WITH A PARTICIPANT

- 1 While in a conference call, press **Options**.
- 2 Scroll to **Private**, then press **Select**.

A list of the participants appears.

- Scroll to the person you want to speak with, then press OK.
 The other participants can continue talking with each other.
- 4 To rejoin the conference call, press **Options**.
- **5** Scroll to **Conference**, then press **Select**.

DROP A PARTICIPANT FROM THE CONFERENCE CALL

- 1 While in a conference call, press **Options**.
- 2 Scroll to **Private**, then press **Select**.

A list of the participants appears.

Scroll to the person you want to drop, then press OK.
 The other participants can continue talking with each other.



[57]

- 4 Press Options.
- 5 Scroll to End active call, then press Select.

Transfer a call

10

When you have one active and one held call, you can connect the two calls and disconnect yourself from the call.

Note: Your network must support this feature. Contact your service provider for availability.

During a call, press **Options**, scroll to **Transfer**, then press **Select**.

USE CALL FORWARDING

This network service lets you forward your incoming calls to another phone number.

Note: If you subscribe to a second phone line, call forwarding works separately for each line. Make sure you have selected the line you want before you set up any call forwarding.

The following icons appear on your phone's screen:

- -* Incoming voice calls are being forwarded to another number.
- **1** You have forwarded all voice calls that are received on line 1.
- You have forwarded all voice calls that are received on line 2.


You have forwarded all voice calls that are received on lines 1 and 2.

Activate call forwarding

1 Press Menu 4 2 1 (Settings > Call settings > Call forwarding).

Scroll to one of the following options:

- Forward all voice calls
- Forward if busy
- Forward if not answered

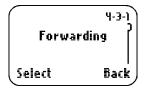

[58]

- Forward if out of reach
- Forward when not able to take calls
- · Forward all fax calls
- · Forward all data calls
- Cancel all call forwarding
- 2 Press Select.
- **3** Activate is highlighted; press OK.
- 4 Select To voice mailb.

OR

Select To other no.

5 If you choose **To other no.**, enter the phone number to which you want to forward calls, then press **OK**.



You can press **Number** to see if you entered the phone number correctly.

Cancel call forwarding

- 1 Press Menu 4 2 1 (Settings > Call settings > Call forwarding).
- 2 Scroll to Cancel all call forwarding and press Select.
- Note: Canceling all call forwarding may also cancel any automatic forwarding of calls to voice mail that your service provider has activated for you. Also, this option may cancel your call forwarding service. Contact your service provider for details.

Check call forwarding status

- 1 Press Menu 4 2 1 (Settings > Call settings > Call forwarding).
- 2 Scroll to the call forwarding option you want to check, press Select.
- 3 Scroll to Check status, then press OK.

Note: Status is not available for Forward when not able to take calls.



To see the phone number where the calls are being forwarded, press **Number**.

• USE ANYKEY ANSWER

This feature allows you to press any key to answer an incoming call.

Note: Anykey answer does NOT work with the Power button,

Turn on Anykey answer

- 1 Press Menu 4 2 2 (Settings > Call settings > Anykey answer).
- 2 Scroll to **On** and press **Select**.

10

Turn off Anykey answer

- 1 Press Menu 4 2 2 (Settings > Call settings > Anykey answer).
- 2 Scroll to Off and press OK.

• USE AUTOMATIC REDIAL


This feature redials the number you're trying to call up to ten times.

Note: Automatic redial will not work while you make or answer another call.

Activate automatic redial

- 1 Press Menu 4 2 3 (Settings > Call settings > Automatic redial).
- 2 Scroll to **On**, then press **Select**.
- 3 Press and hold **Back** to return to the Start screen.

If the number you dial is busy, your phone immediately redials the number. If it is still busy, your phone will redial the number up to nine more times.

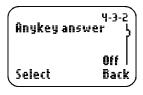

[60]

SEND YOUR OWN NUMBER IN CALLER ID

You can determine, for each call you make, whether your telephone number appears on another phone's caller ID.

In most service areas, when you call others, your name is presented to their caller ID (if they subscribe to this service). With **Send own caller ID**, you can block or send the display of your number when you make a call.



Note: This feature may not be available in all wireless systems. Contact your service provider for details and availability. Also note that this feature is effective only when you call a number that is equipped with caller ID.

Note: This feature may not be available in this version of this product. If there is no Send own caller ID option on the menu, this product version does not support this feature.



- 1 Press Menu 4 2 7 (Settings > Call settings > Send own caller ID).
- 2 Chose one of the following options:
- **Default**: your phone number is sent according to the network.
- Yes: your phone number is sent to the other person's caller ID.
- No: your phone number is not sent to the other person's caller ID.

USE 1-TOUCH DIALING

Assign a name and number to a 1-touch dialing location so that when you press this key, the phone automatically dials the associated number.

Key 1 is used to access your voice mail. Check with your service provider for details. Also, any key can be set up to dial emergency numbers such as 911.

Assign a number to a 1-touch dialing key

- 1 Press Names and scroll to 1-touch dialing.
- 2 Press Select.

2 (empty) appears.



If **Assign** appears, Key 2 does not have a phone number assigned to it. If **Options** appears, then the number shown is assigned to Key 2.

- 3 Press Assign. Enter a phone number OR
- 4 Press Find. Scroll to the phone book entry you want, then press Select twice.

Activate 1-touch dialing

- 1 Press Menu 4 2 4 (Settings > Call settings > 1-touch dialing).
- 2 Scroll to **On**, then press **Select**.

Call a 1-touch dial number

From the Start screen, press and hold the appropriate key, or press the key then press \checkmark .

10

The phone dials the number.

1-TOUCH DIALING FOR KEY 1

- If your phone is set up for voice mail, you can press and hold and your phone dials voice mail.
- If you assign a 1-touch number to key 1, press , then press .
 The phone dials the 1-touch number.

Change 1-touch dialing numbers

- 1 Press Names.
- 2 Scroll to 1-touch dialing and press Select.
- 3 Scroll to the key that you want to change, and press **Options**.
- 4 Scroll to Change and press Select.
- 5 Enter a phone number, then press **OK**.
- 6 Enter a name, then press OK.

Erase 1-touch dialing numbers

- 1 Press Names.
- 2 Scroll to 1-touch dialing and press Select.
- 3 Scroll to the key that you want to erase and press **Options**.
- 4 Scroll to Erase and press Select.
- 5 Press **OK** to confirm.

• MAKE AN INTERNATIONAL CALL

- 1 Press 🔪 twice to enter the international dialing prefix (+).
- 2 Enter the country code, area code, and phone number, and press 🥆 .

• USE THE PHONE BOOK

(10

To use phone book menus, begin at the Start screen and press **Names**. Then, scroll through the menus to select a particular menu or option.

Option	Action
Find	Searches for a specific name.
Add entry	Enters a new name and number.
Edit name	Allows you to change a name.
Erase	Erases names/numbers. You can choose to erase individual names/numbers, or you can erase all information at one time.
Сору	Copies names/numbers between your phone and SIM card.
Add number	Allows you to enter more than one number per name.

[63]

Settings	Chooses the memory source (SIM card or internal), phone book view, and shows the memory status.
1-touch dialing	Allows you to assigns a 1-touch dial location to the name. Refer to "Use 1-touch dialing" on page 61 for more information.
Voice tags	Programs voice-activated dialing
Info numbers	If your SIM card and network service supports this feature, you can access service numbers on different topics, such as weather and entertainment.
Service nos.	Includes phone number for service call.
Caller groups	Renames or changes the ringing tone for a caller group.

10

[64]

11 Use voice features

The voice features in your phone make communication more convenient. You can check messages from friends or business associates, record a voice memo, and use voice dialing and voice commands for handsfree operation.

ABOUT VOICE MAIL

Voice mail is a network feature that allows callers to leave a voice message for you when you are not able to take the call.

To use voice mail, you must have:

- A voice mail subscription
- A voice mailbox number
- A temporary password

These items are assigned by your service provider. Your service provider should also tell you how to record a greeting for your voice mailbox and how to change the temporary password.

After you obtain this information from your service provider, you must then save the voice mailbox number to your phone.

Voice mail indicators

When you receive a voice message, your phone lets you know by beeping, displaying an icon on the screen, or showing a text message. The method of notification depends upon your carrier.

Additionally, if you receive more than one voice mail message, your phone may display the number of messages that you have received. Finally, if you subscribe to two different phone lines, the message would indicate the line to which the message was addressed.

Note: If you have difficulty using the voice mail feature, contact your service provider.



[65]

SAVE THE VOICE MAILBOX NUMBER

- 1 Press Menu 01 10 2 (Messages > Voice messages > Voice mailbox number).
- 2 Enter your voice mailbox number, then press OK.

Note: The number can be up to 32 digits long.

AUTOMATE VOICEMAIL WITH DIALING CODES

You can insert special characters called "dialing codes" into phone numbers such as voice mail and then save the number to a 1-touch dialing location. Dialing codes instruct the receiving system to pause, wait, bypass, or accept the numbers that follow them in the dialing string. See "Use special characters" on page 36.

Note: Each voicemail service can vary. The examples and steps that follow are for clarification. Check with your wireless provider if you have specific questions about your voicemail service.

Write down some information

- 1 Write down your voice mailbox number.
- Call and check your voicemail as you normally would.
- 3 Write down your interaction with the recorded prompts. Keep in mind that each voice mail service may vary. However, it should look something like this:

Dial 2145551212.pause 5 seconds, press 1, pause 2 seconds, enter 1234, press (pound)

Important:: Be precise, you'll need this information in Setup voice-mail with dialing codes below.

INSERT DIALING CODES

11

Press (star) to cycle through available dialing codes. Once the desired code appears, pause briefly to insert the code into the dialing string.

[66]

Bypasses a set of insturctions

- + Preceeds an international tepephone number
- p Pauses for 2 1/2 seconds before sending any numbers that follow
- w **Wait** Your phone waits for you to press (call) before it saends any following numbers.

Setup voicemail with dialing codes

- 1 At the Start screen, press Names, scroll to 1-touch dialing, and press Select.
- 2 Scroll to an empty 1-touch dialing slot and press Assign.
- 3 Enter your voice mailbox number, including the area code.
- 4 Refer to the dialing codes table above and enter any codes as necessary along with the information that you wrote down earlier.

For example, if you have to pause for 5 seconds after connection to voicemail, enter \mathbf{p} twice (after the voice mailbox number).

Example: 2145551212pp

- 5 Enter any remaining pauses, PIN codes, and other information that allows you to listen to your messages and press **OK**.
- 6 Enter a name (such as Voicemail) and press OK. A message appears in the display confirming your 1-touch dialing location has been saved.

Now to dial and listen to your voicemail, just press and hold the assigned 1-touch dialing key at the Start screen. No other keypresses should be necessary.



11

• LISTEN TO YOUR VOICE MESSAGES

If there's a notification message on your screen, you can get your voice messages using one of the following methods:

- If you've saved your voice mailbox number in your phone, press and hold to call your voice mailbox.
- Press to call your voice mailbox and follow the directions provided.
- Call your voice mailbox number as you would any other telephone number, then follow the directions provided.

• USE THE VOICE RECORDER

You can use the voice recorder feature when you want to record personal notes or reminders, or when you want to record an active phone conversation.

Record a memo

11

- 1 Press Menu 7 2 (Tools > Voice recorder).
- 2 To begin recording, scroll to Record, then press Select.
- 3 Clearly state your note. When you are finished, press Stop. The Title: box appears on the screen with the word Recording.
- 4 Key in a name for the recording and press OK to save it. Recording saved appears on the screen.

If you do not want to save the recording, then follow these steps:

- Press Clear to erase the name. Then press Back.
 Recording will not be not saved. Continue? appears on the screen.
- 2 Press OK.

Record a phone conversation

Note: It may be illegal in some areas to record a phone conversation without the permission of all participants.

- 1 Place the call.
- 2 While in the call, press **Options**.
- 3 Scroll to Record, then press Select.

While you are recording, the screen shows the amount of time left.

- 4 When you are finished, press **Stop**.
- 5 **Recording saved** appears on the screen, and the conversation is automatically saved under the name "Recording." You can edit the name later.

Listen to or edit a memo

- 1 To listen to or edit a recorded memo, press Menu 7 2 2 (Tools > Voice recorder > Recordings list), then press Select.
- 2 Scroll to one of the following options:
- · Select Playback to listen to the memo.
- Select Edit title to change the name of a memo. Key in the new name and press OK.
- Select Erase to delete the memo.

Set an alarm

You can set an alarm for a voice memo as a reminder to yourself.


- **Note:** Voice memo alarms are played only when the phone is on. There is no snooze function.
- 1 Press Menu 7 2 2 (Tools > Voice recorder > Recordings list).
- 2 Press Options. Scroll to Add alarm and press Select.
- 3 Enter the date and time for the alarm, then press OK.

Alarm added appears on the display.

Notes about voice memos

• You have about 180 seconds, but the maximum length of the memo



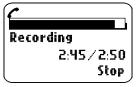

11

depends on available memory.

- There are three audio cues to indicate the recording status to both parties in an active phone conversation. The start tone plays when recording begins. A recording tone plays every 5 seconds while the conversation is being recorded. An ending tone signals the end of the recording.
- When the recording tone starts to beep every 2 seconds, you only have 10 seconds left for your voice memo.
- If the memory is full when you try to record a new voice memo, No space for new recording appears on the screen. You have the choice to erase an existing voice memo to free up space for the new recording.

• USE VOICE DIALING

Your phone's voice dialing feature allows handsfree operation while you place a call. Before using this feature, you need to create entries in the phone book so you can associate a "voice tag" with a name and number.

Add a voice tag to a phone book entry

To create entries in the phone book, see "Save names, numbers, and e-mail addresses" on page 41.

- 1 At the Start screen, scroll to the name you want to give a voice tag.
- 2 Press Details, then Options, and scroll to Add voice tag.
- 3 Press Select. The phone displays Press Start, then speak after tone.
- 4 Press Start.

11

You will hear several beeps, and **Please speak now** appears. If you're using the headset, release the button.

5 Speak clearly into the microphone.

Note: Do NOT press Quit unless you want to cancel the recording.

The phone automatically stops recording, then saves and replays the voice tag.

[70]

If the recording is not successful, your phone displays **Voice system error**. Press **Options**, scroll to **Add voice tag**, and repeat steps 3 - 5.



Warning: Do not rely only on a voice tag for dialing emergency numbers. In emergencies, stress causes changes in your voice, which may keep the phone from recognizing the command.

Notes about voice tags

- Voice tags are not language dependent. Any clearly spoken word or phrase can serve as a voice tag.
- It's easier for the phone to differentiate between long, unique voice tags. For example, you may want to record a person's first and last names rather than only the first name.
- Voice tags must be shorter than 2 seconds.
- Voice tags are sensitive to background noise. For best results, record them in a quiet environment.
- If you delete a name, any associated voice tag is also deleted.
- The recording process stops automatically. Pressing Quit cancels the recording.
- You can record voice tags while the headset is connected. Simply speak clearly into the headset microphone when prompted.
- You cannot use the voice tag or voice dialing feature if you are actively sending or receiving data using the GPRS connection.

Make a call using voice recognition

1 Hold the phone up to your ear, then press and hold **Names**.

You can also press the volume key down.

When you hear several beeps and **Please speak now** appears, release the button.

2 Pronounce the voice tag clearly into the microphone. **Searching** appears. When the



11



phone finds the voice tag, **Found** appears, and the phone automatically dials the number.

If the phone does not locate a number, **No match found. Try again?** appears.

3 Press Yes to try again or Exit to cancel and return to the Start screen.

If you're using the headset and the phone does not locate the number, you will hear an error tone and **No match found** appears. To start voice dialing again, press and hold the headset button immediately after the error tone.

Listen to a voice tag s/w says No voice tags saved

- 1 Press Names and scroll to Voice tags.
- 2 Press Select, then scroll to the name with the voice tag you want to hear.



3 Press Options, scroll to Playback, and press Select.

Change a voice tag

- 1 Press Names and scroll to Voice tags.
- 2 Press **Select**, then scroll to the name with the voice tag you want to change.
- 3 Press Options, scroll to Change, and press OK.

The phone displays Press Start, then speak after tone.

4 Press Start, then say the new name.

The phone repeats your voice tag, and Voice tag saved appears.

Erase a voice tag

- 1 Press Names and scroll to Voice tags.
- 2 Press Select, then scroll to the name with the voice tag you want to change.
- 3 Press Options, scroll to Erase and press Select.

[72]

Erase voice tag? appears.

4 Press **OK** to erase the voice tag.

• USE VOICE COMMANDS

The voice command feature allows access to handsfree operation for certain phone functions. Voice commands work similar to voice dialing. Before using voice commands, you must first associate a voice tag to the phone function.



Note: You do have to press a button to activate the command, see "Activate a voice command" on page 75

View available functions

To see which functions in your phone work with voice commands:



[73]

Phone feature	Use a voice tag to select a profile or activate a feature
	Normal
D C 1	Silent
Profiles	Meeting
	Outdoor
	Pager
Voice message	Call voice mailbox
Infrared	Activate infrared
Recorder	Record
FM Radio	Radio on
	Radio off

Press **Menu** 7 3 (**Tools** > **Voice commands**) and scroll through the list of functions. *Rewrite to reflect, tha although there are several functions*

Add a voice tag for the command

- 1 Press Menu 7 2 (Tools > Voice commands).
- 2 Scroll to the phone function, then press **Select**.
- 3 Press Options.

Add command appears on the display.

4 Press Select.

1

[74]

Press Start, then speak after tone appears on the display.

5 Press Start, then speak the voice tag clearly into the microphone.

Note: Do NOT press Quit unless you want to cancel the recording.

The phone replays then saves the recorded tag. The \mathfrak{D} icon appears next to commands which have voice tags assigned.

Activate a voice command

After you associate a voice tag with a phone function, you can issue a command by speaking the voice tag. There are three ways to activate a voice command:

1 If you have the headset attached, press and hold the headset button.

OR

Press and hold Names.

OR

Press and hold the volume down key.

2 When Please speak now appears, pronounce the voice tag clearly into the microphone. When the phone finds the tag, Found appears, and the command is issued. 11



Note: You cannot use voice commands if you are actively sending or receiving data using the GPRS connection.

Work with an existing voice command tag

After you have associated a voice tag to a command, you can choose one of the following options:

- Playback a tag
- Change a tag
- Erase a tag

For detailed instructions, refer to these sections in this chapter.



12 Personalize your phone

• WHAT ARE PROFILES?

Profiles let you set your phone's sound settings to your environment, whether it's a meeting or a soccer game. Each profile contains settings for your phone's ringing option, ringing tone, ringing volume, vibrating alert, message alert tone, keypad tones, and warning tones. Just pick the profile that suits your current environment: Normal, Silent, Outdoor, Meeting, or Pager.

Note: The Car and Headset profiles do not appear until you attach these accessories for the first time.

You can modify the settings in each profile, and (except for the Normal, Car, and Headset profiles) you can rename them.

Select a profile



- 1 Press Menu 3 (Profiles).
- 2 Scroll to the profile you want to use (for example, Normal) and press Select.
- 3 Scroll to Activate, then press Select.

Customize the profile

- 1 Press Menu 3 (Profiles).
- 2 Scroll to the profile you want to customize (for example, Normal).
- 3 Press Select.
- 4 Scroll to Customize, then press Select.

The customize options appear.



RINGING OPTIONS

Choose how a profile notifies you of an incoming call.

1 Scroll to one of the following, and press **OK**.

Ring: The phone rings.

Ascending: The ringing volume starts low and increases with successive rings.

Ring once: The phone rings once.

Beep once: The phone makes a short beep.

Silent: The phone sounds no tone. Keypad tones, warning tones, and message alert tones are turned off, and the \Rightarrow icon appears at the top of the screen.

2 Press Back, then Yes to save or No to ignore the changes.

RINGING TONE

Your phone comes programmed with 20 ringing tones. Also, there are slots available for downloading up to 10 more ringing tones (*Available in Hugo?*). See "Download ringing tones (available in Hugo?)" on page 85 for more information.



- 1 Press Menu 3 (Profiles).
- 2 Scroll to the profile for which you want to set the ringing tone, and press **Options**.
- 3 Highlight Customize and press OK.
- 4 Scroll to **Ringing tone**, then press **Select**.
- 5 Scroll to the tone you want, then pause to hear a sample of the tone.
- 6 Press **OK** to select the tone or continue scrolling to select a different tone.

RINGING VOLUME

This feature sets the ringing volume for incoming voice calls and message alert tones.

1 Press Menu 3 (Profiles).

[77]

- 2 Scroll to the profile whose ringing volume you want to set, then press **Select**.
- **3** Scroll to **Customize**, then press **Select**.
- 4 Scroll to Ringing volume, then press Select.
- **5** Scroll to the volume level you wish to use, then pause to hear a sample of the volume.
- 6 Press **OK** to select the volume or continue scrolling to select a different volume.

If you select Level 5, you see a note stating **Select maximum volume for ringing tone?**. Press **Select** to confirm the setting. Also when you select Level 5, the phone starts ringing at Level 4, then ascends to Level 5.

VIBRATING ALERT

12

Your phone has an internal vibrating mechanism. No special battery is needed to make the phone vibrate when someone calls you.

- 1 Press Menu 4 5(?) (Settings > Tone settings).
- 2 Scroll to Vibrating alert, then press Select.
- 3 Scroll to **On** or **Off** and press **Select**.

If you choose **On**, your phone vibrates even if you have set **Ringing options** (see page 77) to **Silent**.



MESSAGE ALERT TONE

This option sets the tone your phone makes when you get a text message.

- 1 Press Menu 3 (Profiles).
- 2 Scroll to the profile whose message alert tone you want to set, then press **Options**.
- 3 Scroll to Customize, then press OK.
- 4 Scroll to Message alert tone, then press Select.
- 5 Scroll through the tones until you hear one you like, then press **OK**.

KEYPAD TONES

This option sets the volume of the tone you hear when you press the phone's keys.

- 1 Press Menu 3 (Profiles).
- 2 Scroll to the profile whose keypad tones you want to set, then press **Options**.
- 3 Scroll to **Customize**, then press **OK**.
- 4 Scroll to Keypad tones, then press Select.
- 5 Scroll through the choices until you hear the level you want, then press **OK**.

WARNING TONES

Warning tones are sounds your phone makes for conditions such as errors, confirmations, power on, battery low, and recharge battery. Game tones sound while you are playing one of the phone's games.

- 1 Press Menu 3 (Profiles).
- 2 Scroll to the profile for which you want to set the warning tones, then press **Options**.
- 3 Scroll to Customize and press OK.
- 4 Scroll to Warning tones, then press Select.
- 5 Scroll to **On** or **Off**, then press **OK**.

[79]

12

ACCEPTED CALLER GROUPS

Sets the phone to ring only if the call is from a person who belongs to the selected group(s). Scroll to the group(s) you want and press **Mark** to select or **Unmark** to deselect them.

Rename a profile

- 1 Press Menu 3 (Profiles).
- 2 Scroll to the profile you want to rename and press Select.

Note: Remember, you cannot rename the Normal, Car, or Headset profiles.

- 3 Scroll to Customize and press Select.
- 4 Scroll to Rename and press Select.
- 5 Enter the new profile name, then press **OK**.

About accessory profiles

You can use your phone with one of these three Nokia-approved accessories:

Headset (HDC-5)

12

- Car kit (CARK130)
- Loopset (LPS-3)

When you connect your phone to a Nokia- approved accessory, the phone automatically selects the matching profile.

Note: The profile used with the car kit is called **Handsfree**.


The accessory profiles do not appear in the phone's menu until you connect the headset, car kit or loopset.

Accessory profile allows you to adjust settings related to the accessory, such as ring tone.

Set automatic answer

This profile lets your phone answer incoming calls after just one ring.

[80]

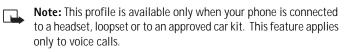


- 1 Press Menu 4 5 (Settings > Accessory settings).
- 2 Scroll to Headset, Handsfree, TTY or Loopset then press Select
- 3 Scroll to Automatic answer, then press Select.
- 4 Scroll to On and press OK.

Set up the loopset profile

The LPS-3 Loopset gives people with T-coil equipped hearing aids the ability to make and receive calls without noise interference.

- Important: Refer to the booklet that comes with the LPS-3 for complete instructions and safety information.
- 1 Plug the loopset jack into the bottom of your phone.

12

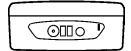

- 2 Press Menu 4 6 3 (Settings > Accessory settings > Loopset).
- 3 Scroll to Use loopset, then press Select.
- 4 Scroll to Yes, then press OK.

Note: The headset is the default accessory. If you follow steps 1 - 4 above, you set the loopset as the default accessory recognized by your phone.

Set up car profile

If you are using your phone with a Nokia-approved car kit, you can set lights to **On** (lights stay on) or **Automatic** (after 15 seconds, lights turn off until the next key is pressed or the phone rings).



ADJUST VOLUME CONTROL

You set your volume by adjusting the earpiece volume buttons. See "About your phone" for an illustration of volume control keys located on the left side of the Nokia 6590.

CHOOSE THE DISPLAY LANGUAGE

You can choose your phone's display language.

- 1 Press Menu 4 3 1 (Settings > Phone settings > Language)
- 2 Scroll to the language you want, then press Select.



12 • SET

• SET UP THE CLOCK

Your phone has an internal clock that can be displayed on the Start screen. It also features an alarm clock (see "Use the alarm clock" on page 121).

Set the time

- 1 Press Menu 4 1 1 (Settings > Time settings > Clock).
- 2 Scroll to Set the time, then press Select.
- 3 Enter the current time, using two digits for both hours and minutes. OR

Enter hours and minutes in 24-hour format.

- 4 Press OK.
- 5 Select am or pm and press Select.

Note: If you entered the time in the 24-hour format, **am** and **pm** do not appear.

If this is the first time you have set the clock, the phone asks you to enter the date. Enter the date in **mmddyyyy** format and press **OK**.

[82]

Select the time format

- 1 Press Menu 4 1 1 3 (Settings > Time settings > Clock > Time format).
- 2 Scroll to **24-hour** or **12-hour**.
- 3 Press Select.

Display the clock

This feature lets you continuously display the time on the Start screen.

- 1 Press Menu 4 1 1 (Settings > Time settings > Clock).
- 2 Scroll to **Hide clock** or **Display clock** (only one choice appears, depending on the current setting).
- 3 Press Select.

Set automatic update of date and time

If this feature is supported by your wireless service provider, it automatically updates the clock in your phone in accordance with the current time zone. This may be helpful if you are traveling from New York to California, for example, and want to receive the local time from the wireless network.

- 12
- 1 Press Menu 4 1 2 (Settings > Time settings > Auto update of date and time).
- 2 Scroll to one of the following options, then press Select:
- **On:** Updates the date and time automatically.
- Confirm first: Requires you to confirm that you want the update.
- Off: Prevents the date and time from being automatically updated.

• USE CALLER GROUPS

You can create groups of names in your phone book and give each group a different ringing tone. When someone from that group calls, you'll know because of the ringing tone.



Add names to a caller group

The name you add to a caller group must first be stored in the phone book.

- 1 From the Start screen, scroll to the name or number you want.
- 2 Press Details, then press Options.
- 3 Scroll to Caller groups and press Select.
- 4 Scroll to the group that will have this name and press Select.

Remove names from a caller group

- 1 Follow steps 1 through 3 above.
- 2 Scroll to No group and press Select.

Assign a ringing tone to a caller group

- 1 From the Start screen, press Names.
- 12 2 Scroll to Caller groups and press Select.
 - 3 Scroll to the group you want and press Select.
 - 4 Scroll to Group ringing tone and press Select.
 - 5 Scroll to the tone you want to hear when anyone from this group calls you and press **OK**.
 - **Tip:** You can set your phone to ring *only* when people from certain caller groups call you, and to be silent for all other call groups.

Rename a caller group

You can rename any call group with a name of your own.

- 1 Follow steps 1 through 3 above.
- 2 Scroll to Rename group and press Select.
- 3 Enter the group name, then press **OK**.

Assign group graphics

Each caller group has a graphic (picture) associated with it. When you get a call from someone whom you have assigned to a caller group, the graphic associated with that group flashes on the screen.

To turn the graphic on for a caller group:

- 1 Press Names, scroll to Caller groups, and press Select.
- 2 Scroll to the name of the group and press Select.
- 3 Scroll to Group graphic and press Select.

Note: To see the group graphic before you select it, scroll to **View** graphic and press **Select**. Press **Back** to return to the menu.

4 Scroll to **On** and press **Select**.

To turn the graphic off, follow the steps above, but scroll to **Off** in the last step.

SEND A GRAPHIC TO SOMEONE ELSE

- 1 Follow steps 1 through 3 above.
- 2 Scroll to Send graphic.
- 3 Enter the phone number or scroll to find it in your phone book, then press **OK**.

VIEW A RECEIVED GRAPHIC

- 1 When you receive a graphic from someone else, **Group graphic received** appears.
- 2 Press Options and then choose Show to see the graphic, Save to save it (you must choose which caller group gets the new graphic), or Discard to discard it.

DOWNLOAD RINGING TONES

You can download up to10 ringing tones to replace the **Personal** entries in your list of ringing tones. For details about this network service, contact your wireless service provider.

12

[85]

Notification of received ringing tone

When your phone receives a ringing tone, it displays Ringing tone received.

Listen to received ringing tones

- **Note:** If you press **Exit** at any time before saving the ringing tone, the ringing tone will be deleted!
- 1 When your phone displays Ringing tone received, press Options.
 - Playback appears highlighted selected.
- 2 Press Select.

The phone plays the ringing tone.

Save received ringing tones

- 1 After listening to the ringing tone, press **Quit**. **Playback** appears highlighted
- 2 Scroll to Save tone, then press Select.

The tone is saved to your list of ringing tones.

Discard received ringing tones

If you don't want to save the ringing tone, press **Exit** without saving it, or scroll to **Discard**, then press **Select**, confirm with **OK**.

RESTORE FACTORY SETTINGS

You can use **Menu** 4 9 (Settings > Restore factory settings) to reset some of the phone settings to their original values. You must enter the security code.



12

Caution: Restoring factory settings does not erase your phone book. However, it does erase all customized settings you may have entered.

[86]

• CHANGE XPRESS-ON[™] COLOR COVERS

To personalize your Nokia 6590, you can change the front and back covers. Nokia Xpress-on™ covers are available in several fashion colors. Extra covers may be purchased from your authorized Nokia dealer.

Important: Always store the phone with the cover attached.

Important: Before changing the cover, always switch off the phone and disconnect the phone from the charger or any other device.

Remove the back cover

- 1 With the back of the phone facing you, press and hold the back cover release button.
- 2 Slide the cover off.



Remove the phone from the front cover


- 1 With the back of the phone facing you, find the plastic tabs on the bottom of the phone.
- 2 Grasp the plastic tabs and gently separate the phone from the front cover.



[87]

Change the keypad


- 1 Lift the keypad from inside the old front cover.
- 2 Place the keypad into the new front cover.

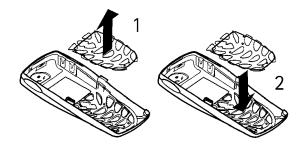

Replace the new front cover




- 1 To replace the front cover, align the top of the phone with the top of the front cover. Make sure both sets of plastic tabs line up with their slots, as shown at right.
- 2 Align the cover and snap it shut all the way around the edge of the phone.

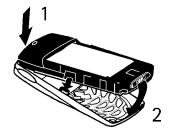

[88]

Replace the back cover

- 1 Direct the back cover towards the locking catches on the phone.
- 2 Slide the back cover until it locks into place.

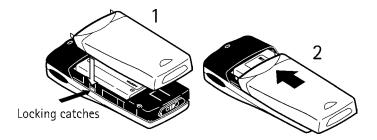



[89]

13 Manage phone security

Your phone is equipped with different security features that allow you to do the following:

- avoid making accidental calls,
- · prevent unauthorized use of your phone, and
- restrict outgoing or incoming calls.

LOCK THE KEYPAD (KEYGUARD)

The keypad lock (Keyguard) disables your keypad to prevent accidental key presses (for example, when your phone is in your pocket or purse).

- To lock the keys, press Menu, then \searrow
 - To unlock the keys, press **Unlock**, then $\overbrace{}^{\bullet}$.



If the phone rings with Keyguard on, press SEND to answer the call.



•

Important:You can still dial emergency numbers, such as 911, while keyguard is activated.



Note: Keyguard does not prevent unauthorized use of your phone.

Connecting your phone to a car kit automatically disables Keyguard.



• ABOUT SECURITY CODES

The following table summarizes how different types of security codes are used in your phone.

Code	Purpose	For more information
Security code	Required by several phone features. If phone security is on, the phone requests the security code the first time you use it after installing a new SIM card.	See "Clear call lists" on page 48, "Reset call timers to 0" on page 49, "Clear the data counter" on page 52, "Restore factory settings" on page 86 and "Erase your entire phone book" on page 44.
PIN code	If SIM card security is on, the phone requests the PIN code every time the phone is turned on.	See "PIN codes" on page 92.
PIN2 code	Required by several phone features.	See entries for show call costs, call cost limit, fixed dialing, and PIN and PIN2 codes.
Restriction password	Required by the restrict calls feature.	See "About your restriction password" on page 95.

[91]

• PIN CODES

The PIN (Personal Identity Number) and PIN2 codes are 4- to 8-digit numbers that usually come from your service provider along with the SIM card. Use the PIN code to protect your phone and SIM card against unauthorized use. The PIN2 code activates some of your phone's functions, such as Call cost limit. See "Manage call costs" on page 49.

When the phone requires the PIN or PIN2 code, it displays **Enter PIN code:** or **Enter PIN2 code:**.

Enter the code then press OK.

Set PIN code request

You can activate the PIN code request to prevent unauthorized use of your phone. If you set the PIN code request to **On**, your phone will ask for the code each time you turn the phone on.

- 1 Press Menu 4 7 1 (Settings > Security settings > PIN code request).
- 2 Enter the PIN code supplied by your service provider, and press OK.
- 3 Press (up or down) to highlight **On** and press **OK**.

To turn off this feature, repeat steps 1 through 3 above, but highlight **Off** in step 3.

Change your PIN or PIN2 code

You can change your PIN or PIN2 code to any 4- to 8-digit number.

- Press Menu 4 7 6 (Settings > Security settings > Change access codes), scroll to the PIN code you want to change, then press Select.
- 2 Enter the current PIN code and press **OK**.
- 3 Enter the new PIN code and press OK.
- 4 Enter the new PIN code again to verify, and press **OK**.

13

Note: If you make a mistake while entering the code, Code Error appears. Start again at step 2 and be careful to enter the correct code. If you enter the wrong code three times in a row, the PIN code is blocked. To unblock the PIN code, you need a Personal Unblocking Key (PUK).

• PUK CODES

The PUK (Personal Unblocking Key) and PUK2 codes are 4- to 8-digit codes that also usually come from your service provider along with the SIM card. The PUK code unblocks a blocked PIN code, and the PUK2 code unblocks a blocked PIN2 code.

If you block your phone, you may need to contact your service provider. When you enter the PUK code given by your service provider, the phone will ask you to enter and then confirm a new PIN code.

SECURITY CODE

Note: The default security code is 12345.

You need the security code to access some security features. When the phone requires the security code, it displays **Security code:**

Enter the code then press **OK**.

If you enter an incorrect security code five times in a row, the phone will not accept the correct code for 5 minutes.

Change the security code

- 1 Press Menu 4 7 6 (Settings > Security settings > Change access codes).
- 2 Scroll to Change security code and press Select.
- 3 Enter the current security code, then press **OK**.
- 4 Enter the new security code, then press OK.
- 5 Enter the security code again to verify, then press **OK**.

Important: Keep the code secret and in a safe place, separate from the phone.



(13

USE CALL RESTRICTIONS

If supported by your SIM card, this feature lets you restrict your outgoing calls to phone numbers included in the list or beginning with the same digit(s) as an entry in the list.

Note: If you turn fixed dialing on and don't have any numbers in the fixed dialing list, you can't make any calls!

Note: When fixed dialing is set to on, calls may be possible to certain emergency numbers in some networks (such as 911 or other official emergency numbers).

Turn fixed dialing on or off

- 1 Press Menu 4 7 3 (Settings > Security settings > Fixed dialing).
- 2 Scroll to On or Off, then press OK.
- 3 Enter your PIN2 code, then press OK.


Add numbers to the fixed dialing list

- 1 Press Menu 4 7 3 (Settings > Security settings > Fixed dialing).
- 2 Scroll to Number list, then press Select.
- 3 Scroll to Add, then press Select.
- 4 Enter your PIN2 code and press OK.
- 5 Enter a name to go with the restricted phone number, then press OK.
- 6 Enter the phone number you want to restrict, then press OK.

Repeat steps 3 through 6 for each number you want to add to the list.

RESTRICT CALLS

This network service lets you restrict the calls your phone can make and receive. Check with your service provider for details.

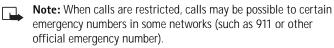



13

Turn on call restrictions

- 1 Press Menu 4 7 2 (Settings > Security settings > Call restrictions).
- 2 Scroll through the types of calls you can restrict, and press **Select** when you see the one you want.

Outgoing calls: Calls cannot be made.

International calls: Calls cannot be made to foreign countries.

International except to home country: When abroad, calls can be made only within the current country and to your home country (that is, the country where your home network operator is located).

Incoming calls: Calls cannot be received.

Incoming calls if roaming: Calls cannot be received outside your home area.

Cancel all call restrictions: Turns off all call restrictions. Calls can be made and received in the usual way.

- Note: If you selected **Cancel all call restrictions**, the following steps are not available. Also, you can cancel call restrictions on each option, allowing restrictions on other options to stay in force.
- 3 Scroll to one of the following options:

Activate: Enter the restriction password and press OK.

Cancel: Enter the restriction password and press OK.

Status: The phone lists the call types with call restriction active.

4 Press OK.

About your restriction password

Contact your service provider for the restriction password.

Change your restriction password

- 1 Press Menu 476 (Settings > Security settings > Change access codes).
- 2 Scroll to Change restriction password, then press Select.
- 3 Enter your new password, then press OK.



[95]

SET UP A CLOSED USER GROUP

This network service specifies the group of people to whom you can call and who can call you. **Default** resets the phone to use a user group that the SIM card owner has agreed upon with the service provider.

Note: When calls are limited to closed user groups, calls may be possible to certain emergency numbers in some networks (such as 911 or other official emergency number).

Turn on closed user group

- 1 Press Menu 4 7 4 (Settings > Security settings > Closed user group).
- 2 Scroll to On, enter the group number, then press OK.

Turn off closed user group

- 1 Press Menu 4 7 4 (Settings > Security settings > Closed user group).
- 2 Scroll to **Off**, then press **OK**.



[96]

14 Select a system

You can select how your phone chooses a wireless network, as there may be more than one available. The selection you make stays active until you change it or change the SIM card.

- 1 Press Menu 4 3 4 (Settings > Phone settings > System selection).
- 2 Scroll to Automatic or Manual, then press Select.
- Automatic: The phone automatically selects one of the available systems.
- Manual: The phone searches for available systems and then lists them. Scroll to the one you want, then press Select. The phone looks for a network and displays the result. If you lose connection while in Manual mode, the phone asks you to select a network again.

14

[97]

15 Messages

If you're subscribed to a message service, you can send and receive messages to compatible phones that also have a message service. You can also send and receive picture messages and e-mail if supported by your network. Composed messages can be up to 160 characters in length.

Before you can send and receive messages

You'll need the following to send and receive messages:

- A text messaging subscription through your service provider.
- Your message center number.
- A message center number saved in your phone.
- Other message settings, such as GPRS.

Save your message center number

Messages sent by your phone are routed through your wireless provider's message center. Normally, this number is saved to your phone by your wireless provider.

1 Press Menu, then press Select.)

5

- Scroll to Message settings and press Select . Message center number appears.
- 3 Press Select. The Center number box appears.
- 4 Enter your message center number, then press OK.



Set the message mode

You can choose the type of message sent by your phone. The message modes include Text, E-mail, Fax, and Page.	I
Note: The default message type is text. This feature must be supported by your service provider.	I
1 Press Menu, then press Select.	
2 Scroll to Message settings, then press Select.	
3 Scroll to Messages sent as, then press Select.	
4 Scroll to Text, E-mail, Page, or Fax, then press OK.	
Note: In order to receive a converted message, the recipient needs to have the appropriate terminal device, such as a fax machine, pager, or e-mail account.	

Choose other message settings You can modify the following message settings (see Chapter 6, "List of Menu Shortcuts" for menu numbers):

Choice	What it does
Message validity	Describes the amount of time that your message center will try to deliver a message. You can choose a time from 1 hour to 1 week.
Default recipient number	Allows you to specify a single recipient for all your messages.
Delivery reports	Allows you to ask the network for a report about message delivery.
Use GPRS ?????	Allows you to send your messages via the General Packet Radio System (GPRS).

15

I

[99]

Choice	What it does
Reply via same center	Choose this when you want your recipient to reply through the same message center. Note : Do not choose Yes unless you know the recipient has the same service provider.
Rename sending profileAllows you to name the profile. This op depends on SIM card.	

WRITE MESSAGES

You can use the text message feature to send a short text message to another phone or to send an e-mail message.

Tip: Review ABC mode and predictive text input from "Enter letters and numbers" on page 34 before reading this section.

Compose and send text messages

1 Press Menu and Select. (Messages > Write message).

Write messages appears briefly, followed by the message screen.

2 Enter a message of up to 160 characters.

The number of available characters appears in the top right corner of the screen.

- 3 Once you have finished writing, press **Options**. **Send** appears highlighted,
- 4 Press Select..
- Enter the recipient's phone number, or press Find to retrieve a number from your phone book, and press OK.
 Sending message appears. Then, when the message is successfully sent, Message sent appears.

.

15

[100]

Caution: If you need to exit while writing the message, press anytime. Later, press Menu 01 1 to return and finish writing the message. If you turn off the phone without saving the message, the message will be lost.

Save messages in the outbox

When you write a text message, it's a good idea to save it in the outbox. Then if there is a message delivery problem, you can easily resend the message.

- 1 While writing the message, press Options.
- 2 Scroll to Save message, then press Select.
- 3 Scroll to Outbox, then press OK.

Resend a message from the outbox

- 1 Press Menu, then press Select.
- 2 Scroll to Outbox, then press Open.
- 3 Scroll to the message you want to resend, then press Select. The message appears on the screen
- 4 Press Options and scroll to Send.
- 5 Enter the number and press **OK** to send the message.

Send an e-mail message

There are two ways of sending an e-mail message.

- You can send an e-mail message from the Messages menu.
- You can send an e-mail message from the phone book.



Tip: Be sure to set the message mode to e-mail before you write your message. See "Set the message mode" on page 99 for details.



[101]

FROM THE MESSAGES MENU

 Press Menu 01 2 (Messages > Write e-mail).
 Write e-mail appears briefly,

followed by the **Edit recipient** screen.

- 2 Enter the recipient's e-mail address, or press Find to retrieve an email address from your phone book, and press OK. The Edit recipient box appears again. Edit the recipient's e-mail address if needed and press OK. The Edit subject box appears.
- **3** Enter a subject for the e-mail and press **OK**.
 - The message screen appears. Compose your message using the keypad
- 4 Once you have finished writing, press **Options**. **Send e-mail** appears.
- 5 Press Select.

The email srever box appears. Enter the number for your service provider's email server (also known as "email gateway") and press OK.

6 Enter the E-mail server number and press OK.

Confirmation messages appear.

FROM THE PHONE BOOK

First you must have an e-mail address entered into the phone book. See Chapter 8 "Use the phone book" for more details.

- 2 Press Details, then press Options.
- **3** Scroll to **Send message**, then press **Select**.
- 4 Enter a message of up to 160 characters.

[102]

The number of available characters appears in the top right corner of the screen.

5 Once you have finished writing, press **Options**, then scroll to **Send**.

• READ TEXT MESSAGES

Read new text messages

When you receive a text message, the phone displays **Message received** and the indicator, and makes a sound (depending on the "Message alert tone"; see page 79).

To read the message now, press Show.

Read new text messages later

- 1 When you receive a text message, press **Exit**.
- 2 Later when you want to read the message, press Menu, then press Select.
- **3** Scroll to **Inbox**, then press **Open**.

A list of message headers is displayed. The icon in front of the header indicates that a message has been read. The $\boxdot{}$ icon indicates that a message has not yet been read.

15

- 4 Scroll to the message you want, then press **Select**.
- 5 If the message is long, use the scroll keys to scroll through the message.

Choose text message options

While reading or viewing a message, you can choose one of the following options:

Choice	What it does
Erase	Allows you to delete the message.



Choice	What it does
Reply	Allows you to choose templates, use standard replies "Yes," "No," "Thank you," or compose your own reply from a blank screen.
Chat	
Use number	Allows you to extract numbers from the current message. The phone goes through and gathers all phone numbers in the message, including the originating address.
Forward	Allows you to send the message to another recipient.
Forward options	Allows you to send your message to many recipients.
Edit	Allows you to modify the message.
Move	Allows you to move the message to the Outbox or Archive, for example.
Rename	Allows you to enter a new title for the message.
Copy to calendar	Copies the message to your phone's calendar as a reminder note.
Details	Shows, for example, the sender's name and phone number, message center used, reception date and time.
Font size	Allows you to choose a small or large font size.

STORE MESSAGES

|

15

The inbox and outbox share a given amount of memory in your SIM card. When this memory is full and there is no more room to store messages, the message indicator blinks. If you are sent a text message when the

[104]

memory is full, the phone displays the message **No space: message waiting**. You should delete one or more old messages to make room for the new message. The network waits and resends the message at a later time.



Note: The number of messages your phone can store in the inbox and outbox may vary, depending on the SIM card.

CHAT WITH OTHER PHONE USERS

You can have a conversation with another person using text messages. Chat is designed for fast message sending through a connection between the sender and receiver. You can start by using the Chat menu or by selecting the Chat option while you're reading a received message. Chat is a network feature. Contact your service provider for more information.

About the chat screen

On the chat screen, you'll see:

- your chat name, followed by a message
- your initial message appear at the bottom of the screen
- each reply appear above the last message

Start a chat session

- 1 Press Menu, then press Select.
- 2 Scroll to Chat, then press Select.
- 3 Enter the other party's phone number or recall it from the phone book and press **OK**.
- 4 Enter your chat name and press **OK**.
- 5 Write your chat message, press **Options**, then press **Send**.


The reply from the other party is shown above your original message.

6 Press OK to clear the screen and reply to the message.

[105]

<Sue: Dana's office. >Tom: Where? < Sue: Tom, we have a meeting at 3:00. . OK

15

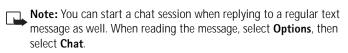

Use predictive text for quick replies

When you are in a chat session, you can use the phone's dictionary to help speed up text entry. For more information see "Predictive text input" on page 37".

- 1 From the message screen press Options.
- 2 Scroll to Dictionary, then press Select.
- 3 Scroll to the language you want, then press Select.

T9 Dictionary on appears on the screen.

View chat history

You can view messages sent and received during the active chat session.

- 1 From the message screen press Options.
- 2 Scroll to Chat history and press Select.

Change your nickname

- 1 From the message screen press **Options**.
- 2 Scroll to Chat name, press Select, then enter new nickname.

End your chat session

15

- **Note:** Once you exit your chat session, the messages are deleted automatically. There is no way to save the chat history.
- 1 From the message screen press **Options**.
- 2 Scroll to Quit and press Select.



USE PICTURE MESSAGES

Your phone offers you 10 picture message templates under Messages > Templates. You can use these templates to send pictures to your friends and family.

You can also save new pictures in the Templates folder.

Notes about picture messages

- You can send and receive pictures if this function is supported by your service provider.
- Only phones that offer picture messaging can receive and display the images.
- Each picture message is made up of several text messages. Therefore, sending one picture message may cost more than sending one text message. Contact your service provider for pricing information.
- Since pictures are saved in the phone's memory, you cannot view them if you use your SIM card with another phone.

Send picture messages

- 1 Press Menu, then Select.
- 2 Scroll to Templates, then press Select.
- 3 Scroll to the picture you want to send, and press Select.
- The picture appears. To choose a different picture, press **Back**, scroll **15** to another picture, then press **Select**.



- 4 Press Options, scroll to Send, then press Select.
- **5** Recall or enter the phone number to which you want to send the picture message.

Note: The phone number you choose must be able to receive picture messages.

6 Press OK.



Send picture messages with text

- 1 Press Menu 01 1 (Messages > Write messages).
- 2 Enter your message, then press **Options**.
- 3 Scroll to Attach picture, then press Select.
- 4 Scroll to the picture you want to send, then press View.
- 5 After viewing the picture, select **Attach**.
- 6 Select **Options**, scroll to **Send**,
- 7 Enter the phone number or recall a number from your phone book, then press **OK**.
- **Note:** The phone number you choose must be able to receive picture messages.





[108]

Receive picture messages

- 1 When your phone displays **Message received**, press **Show** and the message appears.
- 2 If the picture has a text message with it, scroll up or down to see the entire message.
- 3 Press Save picture to keep the picture message, or press Exit to delete it.

USE THE INFO MESSAGE SERVICE

With the info message network service, you can receive short text messages on various topics, such as weather and traffic conditions, from your service provider. Info message selections can be found under **Messages** > **Info messages**.

Note: For available topics and relevant topic numbers, contact your service provider.

USE THE SERVICE COMMAND EDITOR

Use the **Service command editor** to key in and send service requests (also known as USSD commands) to your service provider.

Note: For more information, contact your service provider.

15

[109]

16 Your wireless Internet browser

Your phone has a built-in browser you can use to connect to selected services on the Internet. You can view weather reports, check news or flight times, view financial information, and much more.



NOTES ON WIRELESS INTERNET ACCESS

This section gives a brief overview of wireless Internet technology.

Technology background

WAP

A technology called Wireless Application Protocol (WAP) is to mobile devices what the World Wide Web (WWW) is to personal computers. The mobile community began developing WAP several years ago to provide access to the Internet for mobile users.

Today, most WAP sites are made up of text and hyperlinks. Some pages even contain low-resolution graphics, or require data input. Your service provider and others are free to design WAP sites as they choose, so the sites are as variable as Web pages on the Internet.

Internet content on your personal computer is called a "web page." Internet content on your mobile phone is called a "page," or "WAP card."

GPRS

16

General Packet Radio Service (GPRS) is a technology used to send and receive data via short bursts or packets over the wireless network. GPRS allows you to stay connected to the Internet. This feature allows for faster downloads of information and no time spent completing a dial-up connection. Applications using GPRS include the WAP browser, text messaging and dial-up connections for making digital data calls.



- For information about how to track time spent online, see "Check data calls need to verify on network with GPRS" on page 51.
- For information about sending messages via GPRS, see "Choose other message settings" on page 99.
- For information about dial-up connections, refer to "GPRS dial-up connections" on page 134.
- For availability, pricing, and subscription to GPRS services, contact your service provider.

The Service provider's role

Because wireless Internet content is designed to be viewed from your phone, your wireless service provider now becomes your "wireless Internet service provider" as well.

It's likely that your service provider has created a home page and set up your browser to go to this page when you log on to the Internet. Once at your service provider's home page, you'll find links to a number of other sites.

• SET UP FOR BROWSING

You should not need to do anything to set up your phone for browsing. Your service provider usually modifies the appropriate settings when you subscribe to the feature. Contact your service provider if you have problems using the browser.



SIGN ON TO THE INTERNET

You use the Services menu to connect to the Internet.

- 1 Press Menu 11 (Services).
- 2 Scroll to Home, then press Select.

Your phone connects to the Internet and to your service provider's home page.

If you see the message **Check service settings**, the phone may not be set up for browsing. Contact your service provider to make sure that your phone is configured properly.



• USE BROWSER OPTIONS

The Services menu gives you the options shown in the following list.

Some service providers may have customized the options on the Services menu. Contact your service provider for more information if any of the options shown here are not available.

Choice	What it does
Home	Starts the browser and takes you to your service provider's home page.
Bookmarks	Shows a list of all saved bookmarks bookmarks help you find a WAP site quickly.
Service inbox	Allows you to receive notifications from your service provider. Notifications may be about new email messages, changes in stock prices or news headlines.
Settings	Provides options for changing connection settings, appearance settings, and authority certificate.
Go to address	Accepts an address you enter.
Clear cache	Empties the browser's temporary memory and frees up space. It's advisable to empty your cache at the end of each session.

• NAVIGATE THE WIRELESS INTERNET

16

Since your phone's screen is much smaller than a computer screen, Internet content is displayed in a different format than you may be used to seeing. This section shows simple guidelines for using the phone's keys to navigate a WAP site. Examples of how to read a WAP site follow the guidelines.

[112]

General guidelines for using the phone keys


- Use the scroll keys to browse the WAP site. $\bigstar\,\checkmark\,$
- To select a highlighted item, press 🔊.
- To enter letters and numbers, press the keys 🖭 to 🔊.
- To enter special characters, press the 🕅 key.

Examples of wireless Internet sites

The following illustrations show most of the elements you may find on a wireless Internet site. These are examples only.

Header line: shows the current Internet site.

Inactive link: appears as an underlined word.

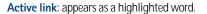



Main menu

Back

16

Welcome! Please choose from the following:

info [Timetables]

<u>News</u>

Options

Use \checkmark and \checkmark to scroll through the list of links.

Selection list: Brackets [] appear when you have the option to enter information.

Options: Press **Options** to go to the site's menu and/or browser page.

Back: Press Back to return to the previous page.

Data entry field: Brackets [] around three dots appear when you need to enter information. In this example, you can enter your zip code to receive the local weather forecast.

?	Find Weather Enter ZIP (ex. 12345)	
[]]
	ptions	Back

[113]

USE BOOKMARKS

You can save addresses for your favorite sites as bookmarks. A bookmark helps you find a site again, just as a slip of paper helps you find a page in a book.

Set a bookmark while browsing

You can add up to 25 bookmarks.

- 1 Press Menu 11 1 (Services > Home), then press Options.
- 2 Scroll to Bookmarks, then press Select.
- 3 Press Options.
- 4 Scroll to New bookmark, then press Select.
- 5 Enter address, then press **OK**.
- 6 Enter a title, then press OK.

DISCONNECT FROM THE INTERNET

To close your connection, simply press 🜈 .

• SECURITY ISSUES

Be sure to clear the cache memory

The information or services you access with the WAP browser are temporarily saved in the cache memory of the phone.

If you tried to access or have accessed confidential information requiring passwords (for example, your bank account), empty the cache of your phone after each use.

CLEAR THE CACHE

16

- 1 Press Menu 11 (Services).
- 2 Scroll to Clear cache, then press Select.



CLEAR THE CACHE WHILE BROWSING

- 1 Press Options.
- 2 Scroll to Clear cache, then press Select.

About authority certificates

To use some WAP services, such as banking services, you need an authority certificate. Using the certificate can help you to improve the security of connections between your phone and a WAP server.

You can download the certificate from a WAP page if the WAP service supports the use of authority certificates. After the download, you can view the certificate, then save or delete it. If you save the certificate, it is added to the list of certificates in the phone.

Your phone alerts you if the identity of the WAP server or WAP gateway cannot be verified or is not authentic.

VIEW THE LIST OF AUTHORITY CERTIFICATES

- 1 Press Menu 11 (Services).
- 2 Scroll to Settings, then press Select.
- 3 Scroll to Authority certificates, then press Select.

• NOTES ABOUT GPRS

When you use GPRS to connect to the Internet, you are making a data call. The following icons appear on the screen to show you the status of your connection.





Note: In order to use GPRS, you must first subscribe to the network service. Contact your service provider for details on availability and pricing.

[115]

G	Shows up in the left upper corner of the screen. Indicates an active GPRS connection, for example, when you are using the WAP browser.
G	Shows up in the left lower corner of the screen, under the signal strength bars. Indicates a continuous GPRS connection, if you chose the "always online" setting.
X	Indicates that circuit switched (CS) or voice calls are not possible when using GPRS for a data call.
z	Indicates that the GPRS connection has been interrupted by a voice call.

Set up an automatic connection

If the network supports an automatic connection, you can choose to have the GPRS context created as soon as you turn your phone on. The connection stays on in the background all the time, as long as you have network coverage. You can take advantage of this continuous connection when browsing the Internet. When you are finished browsing, the connection stays active for quick access the next time you need to download information. You can choose one of the following options from the **Services** settings menu:

- Always online: the connection is established when you turn your phone on. The connection continues in the background even after you are finished browsing, depending on network coverage.
- When needed: the connection is established when you use your WAP browser and is closed when you end the browsing session.

Receive a call while online

If you are using the WAP browser over GPRS, you can still receive a voice call. Your data call is put on hold and you can choose to answer the call.

- To answer the incoming call, press 3.
- To reject the incoming call, press 6.







Note: After you end your voice call, the GPRS connection automatically resumes.

Make a call while online

When you are browsing a WAP card and want to make a call, you can select Use number. Your phone then searches the information on the WAP card for a string of numbers. You can then choose from the number or numbers displayed to place the call.

An alternate way is to press *r* to disconnect from the Internet, then place your call by searching the phone book for a name and number or by keying in the phone number.

Make an emergency call while online

If you are using GPRS to connect to the Internet, you can end your data connection and then make an emergency call.

- 1 To close your Internet connection, simply press *c*.
- 2 Enter the emergency number for your present location (for example, 911 or any other official emergency number-emergency numbers vary by location).
- 3 Press 🥆 .

16

[117]

17 Your personal digital assistant

Your Nokia 6590 phone has many useful features for organizing your everyday life, including a calendar, to-do list, and alarm clock. In this chapter, you'll learn how to use your phone as a digital assistant.

• USE THE CALENDAR

The calendar keeps track of reminders, calls you need to make, meetings, and birthdays. It can even sound an alarm when it's time for you to make a call, go to a meeting, or celebrate a birthday.



17

Warning:Your phone must be switched on to use this function. Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

View the calendar

To see the current day's calendar screen, press Menu 6 2 (Organizer >Calendar).

The first time you view the calendar, your phone prompts you to enter today's date.

Make a note

When you make a note in your calendar, you can choose from four different types: meeting note, call note, birthday note and memo. Your phone asks you for more information depending on which one you choose.

- 1 Press Menu 6 2 (Tools > Calendar), then press Options.
- 2 Scroll to Make a note, then press Select.
- 3 Scroll to Meeting, Call, Birthday or Memo, then press OK.
- 4 Enter your note, then press **OK**.
- For a meeting note, the phone prompts you to enter a time.

[118]

- For a call note, the phone prompts you to enter a phone number, a name and the time.
- For a birthday note, the phone prompts you for the person's name, date and year of birth.
- 5 Set the alarm for a meeting note, call note or birthday note by choosing one of the following:
- Alarm on
- Alarm off

You may have other alarm options, depending on the type of calendar note you are working with. For example, you may set an alarm for a meeting note to alert you at the event time or up to 30 minutes before the event.

After you make a calendar note and return back to the day view, the appropriate icon appears in the lower right-hand corner of the calendar screen:

8	Birthday note
t⊊:i	Meeting note
T	Call note

Z Memo

Choose options for calendar notes

When viewing a calendar note, you can choose from the following options:



Choice	What it does
Erase	Allows you to delete the note from the calendar.
Edit	Allows you to modify your note.
Move	Allows you to change the date, time, and alarm of the note.

[119]

Choice	What it does
Repeat	Allows you to define whether the note should be repeated. You can repeat a note on a daily, weekly or yearly basis. Note: The birthday note can only be repeated on a yearly basis.
Go to date	Allows you to jump to a certain date.
Send note	Allows you to send the calendar note to another phone via IR, smart messaging or as a short text message. See "Send calendar note to another device" in chapter 18 for more information.
Сору	Allows you to copy the note to another location in the calendar.
Settings	Allows you to modify general settings, including date format, time format, auto erase and others.

• MAKE A TO-DO LIST

You can keep track of your tasks with the to-do list feature. You may be able to save up to 30 notes, depending on how long the notes are.

Add a to-do note

17

When you add a new note, the default priority is medium (2). You can change the priority to high (1) or low (3).

- 1 Press Menu 6 3 (Organizer > To-do list), then press Options.
- 2 Scroll to Add, then press Select.

Subject: appears on the display.

- 3 Enter your note, press **Options**, scroll to **Save**, then press **Select**.
- 4 Scroll to the priority you want, then press **Select**.



Choose other to-do options

When you view a to-do note, you have the following options:

Choice	What it does
View	Allows you to view the selected note.
Erase	Allows you to delete a note.
Edit	Allows you to modify the contents of a note.
Edit priority	Allows you to change the priority level of a note. Your choices are high, medium and low.
Go to priority	Allows you to view notes for a certain priority level. You can go to only the high priority notes, for example.
Save to calendar	Allows you to save the to-do note as a calendar note.
Send as text	Allows you to send the note as a text message to another phone.
Dictionary	Allows you to enter letters using predictive text input.

• USE THE ALARM CLOCK

The alarm clock feature is based on your phone's internal clock and sounds an alert at a time you specify. The alarm clock works even if you turn your phone off.

Alarm clo	۲-۱ ck
	12:00 pm
Select	Back

17

[121]

Set the alarm clock

- 1 Press Menu 6 1 (Organizer > Alarm clock).
- 2 Enter the alarm time in hhmm format.
- 3 Press OK.
- 4 Select either am or pm and press Select.

Note: Step 4 is necessary only if you have selected 12-hour format.

Manage the alarm

PHONE ON

• Press **Stop** to shut off the alarm.

OR

Press Snooze.

The alarm stops and sounds again in 5 minutes.

Note: If you let the alarm sound for 1 minute without pressing a key, it stops for 5 minutes, and then sounds again.

PHONE OFF

The phone switches itself on at alarm time, and then the alarm sounds. If you press **Stop**, the phone displays **Switch the phone on?** Press **Yes** to keep it on or **No** to switch it off.



Warning: Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

Turn off the alarm clock

- 1 Press Menu 6 1 (Organizer > Alarm clock).
- 2 Scroll to **Off** and press **Select**.

[122]

USE THE COUNTDOWN TIMER

The countdown timer is like an egg-timer or the timer on your microwave oven. You can enter a specified time, and when the time runs out, your phone sounds an alarm.

Note: The countdown timer only works when the phone is on. Once you turn off your phone, the timer is no longer active.

Set the countdown timer

- 1 Press Menu 7 4 (Tools > Countdown timer), then press Select.
- 2 Enter 2 digits for hours, 2 digits for minutes, then press **OK**.
- 3 Enter a note, then press OK.

Change the time

After you've set the timer, you can change the time.

- 1 Press Menu 7 4 (Tools > Countdown timer).
- 2 Scroll to Change time, then press Select.
- 3 Enter the time, then press **OK**.
- 4 Save the current note, or enter a new note and press OK.

Stop the timer

When the time runs out, the phone sounds an alarm, and flashes the light on the display.

• When the alarm sounds, press any key during the alarm to stop the timer.



• After 30 seconds the timer alert expires automatically.

BEFORE THE ALARM SOUNDS

- 1 Press Menu 7 4 (Tools > Countdown timer), then press Select.
- 2 Scroll to Stop timer, then press Select.

Timer stopped appears on the display.



• USE THE STOPWATCH

Your phone has a stopwatch that can be used to track time at sporting events or other occasions. The stopwatch displays time in hours, minutes, seconds and fractions of a second. 00:00:00:0

Measure time

- 1 Press Menu 10 4 (Extras > Stopwatch).
- 2 Scroll to **Split timing**, then press **Select**.
- 3 Press Start.

The running time appears on the display.

Measure split time

You can use the split time function at a long distance race when you need to pace yourself.

- 1 Press Menu 7 5 (Tools > Stopwatch).
- 2 Scroll to **Split timing**, then press **Select**.
- 3 Press Start.
- 4 Take an intermediate time by pressing Split.

The clock continues to run.

The split time appears below the running time.

If you split the time more than once, the new measured time appears at the beginning of the list. You can scroll to see previous measured times.

Measure lap time

17

You can use the lap time function when you want to track how long it takes to complete each cycle or lap.

- 1 Press Menu 7 5 (Tools > Stopwatch).
- 2 Scroll to Lap timing, then press Select.
- 3 Press Start.

The running time appears on the display.

[124]

- 4 Take a lap time by pressing Lap.
- The clock stops, then starts immediately from zero.

The lap time appears below the running time.

If you take more than one lap time, the new measured time appears at the beginning of the list. You can scroll to see previous measured times.

Stop the clock

Press Stop to end the time measurement.

Save the time

- 1 While the clock is running, press **Stop**, then **Options**.
- 2 Scroll to **Save**, enter a name for the measurement, then press **Select**. If a name is not entered, the total time is used as a title.

Choose other stopwatch options

You can choose the following options when using the Stopwatch.

Choice	What it does	
Continue	Shows up when the Stopwatch is working in the background.	
Show last time	Allows you to view the last measured time.	
View times	Allows you to browse the saved times.	
Erase times	Allows you to delete the saved times. You can delete the saved times one by one or all at once.	



[125]



- **Note:** If you press and return to the Start screen, the clock continues to run in the background. You can return to the Stopwatch menu by taking the following steps:
- 1 Press Menu 7 5 (Tools > Stopwatch), scroll to Continue.
- 2 Press Select.

• SHARE BUSINESS CARDS

Your phone can send or receive electronic business cards consisting of a name and phone number. You can save received business cards to your phone book.

There are two ways to send a business card:

- You can send the information via IR. See Chapter 18 "Your phone and other devices" for details.
- You can send the business card as a short text message.

Send a business card as a short text message

- 1 Recall the name from your phone book.
- 2 Press Details, if shown, or skip to Step 3.
- 3 Press Options.
- 4 Scroll to Send bus. card and press Select.
- 5 Scroll to Via SMS and press Select.
- 6 Enter or recall the phone number to which you want to send the business card.
- 7 Press OK.

17

Note: For information on receiving business cards, see "Receive a business card from another device" on page 131.

USE THE CALCULATOR

Your phone's calculator adds, subtracts, multiplies, divides, computes square roots, and converts currencies.





Warning: Your phone must be switched on to use this function. Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.


Add, subtract, multiply and divide

- 1 Press Menu 7 1 (Tools > Calculator).
- 2 Enter the first number in the calculation.
 - Press *for* to enter a decimal point and press **Clear** to erase any mistakes.
 - To add, press 📎 once (+ appears)
 - To subtract, press 📎 twice (- appears)
 - To multiply, press 📎 three times (* appears)
 - To divide, press 📎 four times (/ appears)
- 3 Enter the second number, repeating steps as needed.
- 4 Press Options. Equals is selected.
- 5 Press Select.

Convert currency

SET THE EXCHANGE RATE

- 1 Press Menu 7 1 (Tools > Calculator), then press Options.
- 2 Scroll to Exchange rate, then press Select.

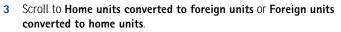

- 4 Press Select.
- 5 Enter the exchange rate (press 🔊 to enter a decimal point).

[127]

6 Press OK.



17



Note: The exchange rate remains in the phone's memory until you replace it.

CONVERT A CURRENCY AMOUNT

- 1 Enter the amount to be converted.
- 2 Press Options.
- 3 Scroll to To home to convert to domestic units or To foreign to convert to foreign units.
- 4 Press Select.



[128]

18 Your phone and other devices

Your phone can send and receive certain types of data by way of the infrared (IR) port. This is a wireless transfer, so you don't need a cable or additional software.

To connect using IR, the device with which you want to connect must be IrDA (Infrared Data Association) compliant. Transmission and reception must be to or from a compatible phone or device (for example, another phone, computer, or handheld device).

Your Nokia phone is a Class 1 Laser Product.



Note: The phone must be switched on to use this function. Do not switch on the phone when the use of a wireless phone is prohibited or when it may cause interference or danger.

• PREPARE THE DEVICES FOR IR CONNECTION

Before you can exchange information, you need to follow these steps:

- 1 Clear any obstructions between the two devices.
- 2 Point the IR ports at each other.
- 3 Make sure the two devices are no more than 3 feet apart.



18

[129]

INFRARED BASICS

You can use IR to send and receive phone book entries (business cards) and calendar notes.

- 1 Make sure the two devices are ready for the IR connection.
- 2 To receive information on your phone, press Menu 9 (Infrared) and then press Select.
- **3** Have the user of the sending device select the desired IR function to start data transfer.

If data transfer is not started within 30 seconds, the connection is cancelled and will have to be restarted.

Note: You do not have to "turn off" the IR function in your phone. After data transfer, the IR connection automatically drops after about 30 seconds.

Check the status of an IR connection

The status of an IR connection is indicated by p......

- When **b**--- is displayed continuously, there is an IR connection between your phone and the other device.
- When **b**--- blinks, your phone is trying to establish a connection with the other device or a connection has been lost.
- When **p**•••• is not displayed, no IR connection exists.

SEND AND RECEIVE INFORMATION

You can transmit information in your phone by IR using the industrystandard v.card format. You can send business cards (v.card) and calendar notes (v.cal) to another phone, to a PC running the appropriate software, or to other IR-equipped handheld devices running the Palm[™] operating system or Pocket PC[™] operating system.



[130]

Send a business card to another device

First, make sure that the other phone or device is set to receive data via its IR port. Refer to the user guide for the receiving device for more information on setting up IR communications.

- 1 Recall the name from your phone book.
- 2 Press **Details**, if shown, or skip to Step 3.
- 3 Press Options.
- 4 Scroll to Send bus. card and press Select.
- 5 Scroll to Via infrared and press OK.

Note: If you have more than one number or text information to send, choose **Primary no**. or **All details**, then press **Select**.

The phone sends the business card through its IR port.

Receive a business card from another device

You can receive business cards from another compatible phone. The user of the other phone or device sends you a card as described in the previous section.

- 1 Point the IR ports at each other.
- 2 Press Menu 9 (Infrared).
- 3 When you see the message Business card received, press Show.
- 4 Press Options, scroll to Save or Discard, then press OK.
- If you press Save, you see the confirmation message Business card saved.
- If you press Discard, you see the question Discard business card? Press OK to delete the card.

18

Caution: If you press Exit at any time before saving the business card, the business card will be deleted!

[131]

Send calendar notes to another device

First, make sure that the other phone or device is set to receive data via its IR port. Refer to the user guide for the receiving device for more information on setting up IR communications.

- 1 Select the calendar note you want to send, then press Options.
- 2 Scroll to Send note, then press Select.
- 3 Scroll to Send via IR, then press Select.

The phone sends the note to the other device.

Receive calendar notes from another device

You can receive calendar from another compatible phone. The user of the other phone or device sends you a card as described in the previous section.

- 1 Point the IR ports at each other.
- 2 Press Menu 9 (Infrared).
- 3 When you see the message Calendar note received, press Show.
- 4 Press Options, scroll to Save or Discard, then press OK.
- If you press Save, you see the confirmation message Calendar note saved.
- If you press **Discard**, you see the question **Discard calendar note?** Press **OK** to delete the note.

Caution: If you press Exit at any time before saving the calendar note, the calendar note will be deleted!

PC CONNECTIVITY



You can make a serial connection between your Nokia phone and your Infrared-equipped laptop or desktop PC. Once you establish this IR connection, you can access your phone's information from your PC, or use your phone as a wireless modem.

[132]

Nokia PC Suite

You can use the various components of Nokia PC Suite to do the following:

- Make a backup copy of personal data such as contacts and calendar information from your phone to another phone or PC (Content Copier).
- Note: If you already have a Nokia phone, you can copy your names and numbers to the Nokia 6590 with Content Copier. Compatible phones include the Nokia 5190, 6190, 8290, 8890, 7160, 7190, 3320 and 3360.
- Edit phone book names and numbers, profiles, and settings via your PC's keyboard (Phone editor).
- Create new ringing tones and send them to your phone (PC Composer).
- Synchronize your phone's contacts and calendar items with applications such as Microsoft Outlook, Outlook Express, and Lotus Notes (PC Sync).
- Compose new graphics and transfer from your PC to your phone (PC Graphics).

Instructions for PC Suite installation and setup, as well as the PC/PDA connectivity guide are available as part of the software download.

Wireless modem setup

You can use your Nokia phone as a wireless modem with your laptop computer, giving you access to the Internet (for email and Web browsing) or corporate networks wherever you are.

For more information on wireless modem setup, please refer to the PC/ PDA connectivity guide. This document can be downloaded from the Nokia website.

Download Nokia PC Suite and Modem Setup

Both of these applications are provided free of charge, and are available for download from:



http://www.nokia.com

[133]

• GPRS DIAL-UP CONNECTIONS

When you use your Nokia phone as a wireless modem, you have the option of enabling GPRS connectivity from your PC or laptop computer.



Note: Before you can use GPRS for dial-up connections you must first subscribe to the GPRS network service. Contact your service provider for details on pricing and availability.

Some service providers may have already set up information for your GPRS dial-up connection.

For more information, see the PC/PDA connectivity guide. This document can be downloaded from the Nokia website.



[134]

19 Fun and games

• FM RADIO

The Nokia 6590- can store up to 20 frequency for radio stations. Note: You must have a headset connected to the phone before using the radio.

Tune in to a radio station

- 1 Press Menu 5. Radio on appears.
- 2 Press options.

ENTER THE FREQUENCY

If you know the radio station's frequency, you can enter it manually

- 3 Scroll to Set frequency and press Select.
- 4 Enter the frequency. For example, to enter 103.7, press 1,0,3,7. The cursor automatically moves to the correct places and enters the numbers.
- 5 Press OK. Frequency set appears.

MANUAL TUNING

If you don't know the frewquency, you can search for a station manually

- 6 Scroll to Manual tuning and perss Select.
- 7 Press (up) or (down) until you heatr the station you want.
- 8 Press OK Frequency set appears.

SAVE FREQUENCIES IN THE PHONE'S MEMORY

When you have found a radio station, you can store it in the phone's memory for quick recall later.



[135]

- 1 With the frequency displayed in the screen, press **Options**.
- 2 Scroll to Save channel. and press Select. The Channel name box appears.
- Key in a name for the channel, and press OK.
 For example, KVIL.
 Select channel location appears followed by a numbered list.
- 4 Scroll to the number where you want the station to be stored and press **Select**. A confirmation message appears.

Recall a stored frequency

- 1 Press Menu 5> Radio on appears and you hear the last station you were tuned to.
- 2 Press (up) or (down) to select another station.

• GAME RULES

Challenge yourself or a friend to the four fun games in your phone.

Important: Your phone must be switched on to use this function. Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

Start a new game

- 1 Press Menu 8, scroll to Select game, then press Select.
- 2 Scroll to the desired game, and press Select.

Adjust game settings

- 1 To adjust sound, lights or vibra, press **Menu** 5, scroll to **Settings**, then press **Select**.
- 2 Scroll to the desired setting and press Select.



[136]

• PASS 'N RUSH

• SNAKE II

Feed the snake with as many goodies as possible and watch it grow. Use keys 2, 4, 6, and 8 to turn the snake toward food. The longer the snake's tail grows, the higher your score. You can choose to have a clear field, or select from five different mazes. If the snake runs into its own tail or the surrounding wall, the game is over.

Start a two-player game

Snake can be played as a two-player game using the IR ports of two phones.

Before starting a two-player game, make sure that the IR ports of the two devices are pointing at each other and that the IR connection is activated. Both players need to start the same game on their phones.

SPACE IMPACT

• **BUMPER**

Bumper is like the arcade game pinball. The object of the game is to get a high score by keeping your ball on the table for as long as you can by using the flippers. Press 5 to launch the ball. Hold down the 5 key to get more power. Use keys 1 and 3 to control the flippers. Use the keys 4 and 6 to nudge the table - but not too much or the game will tilt.



[137]

20 Reference information

BATTERIES, CHARGERS, AND ACCESSORIES

This section provides information about the phone's batteries, accessories, and chargers. Be aware that the information in this section is subject to change as the batteries, chargers, and accessories change.

This phone is intended for use when supplied with power from an ACP-7U, an ACP-8U, LCH-8 or an LCH-9 charger. Other usage could invalidate any approval given to this apparatus and may be dangerous.



Warning! When you purchase batteries, chargers, and accessories for your phone, use only batteries, chargers, and accessories that have received approval from the phone's manufacturer. The use of any other type of phone-related hardware may invalidate any approval or warranty applying to the phone, and could also be dangerous. For availability of approved batteries, chargers, and accessories, check with your dealer.



Note: For information on how to charge and recharge your battery, refer to "Charge the battery" on page 11.

When the battery is fully charged, the indicator will tell you that the battery is fully charged.

When you are not using a charger, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since prolonged maintenance charging could shorten its life span. If left unused, a fully-charged battery will discharge itself over time.

Temperature extremes can affect the ability of your battery to charge. Therefore, allow it to cool down or warm up before trying to charge it.



When the battery is running out of power and your phone only has a few minutes of talk time remaining, a warning tone sounds and the **Battery** low message appears briefly. When no more talk time is left, a warning tone is sounded and the phone switches itself off.



Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object, like a coin, a clip, or a pen causes a direct connection of the + and - terminals of the battery, which are metal strips on the back of the battery.

An example of short-circuiting could occur if you carry a spare battery in your pocket or purse, where the battery could come into contact with objects such as a coin. Short-circuiting could damage either the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in either summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15° C and 25° C (59°F and 77° F).

A phone with a hot or cold battery may not work temporarily, even if the battery is fully charged. The performance of Li-Ion batteries is particularly limited in temperatures below $0^{\circ}C$ (32°F).

The following list provides guidelines that you can follow:

- When the operating time (talk time and standby time) is noticeably shorter than normal, buy a new battery.
- Use the battery only for its intended purpose.
- Never use any charger or battery that is damaged and/or worn out.
- Batteries *must* be recycled or disposed of properly. Do *not* dispose of batteries by putting them in fire!
- When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.

IMPORTANT SAFETY INFORMATION

This section provides additional safety information. A brief overview of safety can be found in "Safety first" on page 1.



Traffic safety

Do not use a handheld telephone while driving a vehicle. Always park the vehicle before using the phone.

[139]

After completing your phone conversation, always secure the phone back into its holder; do *not* place the phone on the passenger seat or place it where it can break loose in a collision or during a sudden stop.



Note: The use of an alert device to operate a vehicle's lights or horn on public roads is not permitted.

Remember: Safety-Your most important call.

Operating environment

Remember to follow any special regulations that are in force in any area, and always switch off your phone wherever it is forbidden to use it. Otherwise, the use of your phone could cause interference or danger.

When connecting the phone or any accessory to another device, read the associated user guide first and obtain detailed safety instructions.



Note: Do not connect incompatible products.

As with other mobile radio transmitting equipment, you are advised that, for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the phone should *only* be used in the normal operating position. This position is when the phone is held to your ear with the antenna pointing over your shoulder.

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. The following four subsections provide more information about this topic.

PACEMAKERS



Pacemaker manufacturers recommend that a minimum separation of 6 inches (20 cm) should be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers:



- Should always keep the phone more than 6 inches (20 cm) from their pacemakers when the phone is switched on.
- · Should not carry the phone in a breast pocket.
- Should use the ear opposite the pacemaker to minimize the potential for interference.

Note: If you have any reason to suspect that interference is taking place, switch off your phone immediately.

HEARING AIDS

Some digital wireless phones could interfere with some hearing aids. In the event of such interference, you may want to consult your service provider.

OTHER MEDICAL DEVICES

Operation of any radio transmitting equipment, including cellular phones, could interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy. Also contact these authorities if you have any questions.

Switch off your phone in health care facilities or where any posted regulations instruct you to do so. Hospitals or health care facilities could be using equipment that is sensitive to external RF energy.

VEHICLES

RF signals could improperly affect installed or inadequately shielded electronic systems in motor vehicles. These could include electronic fuel injection systems, electronic anti-skid (anti-lock) braking systems, electronic speed control systems, or air bag systems.

Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.



POSTED FACILITIES

Switch your phone off in any facility where posted notices so require.

[141]

Potentially explosive atmospheres

Switch off your phone if you are in any area that has a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas could cause an explosion or fire, resulting in bodily injury or even death. You are advised to switch off the phone while at a refueling point (service station). And, you are reminded of the need to observe restrictions regarding the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often—but not always clearly marked. These areas include the following: below deck on boats; chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

Vehicles

Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service could be dangerous and may invalidate any warranty that could apply to the unit.

Regularly check that all wireless phone equipment in your vehicle is mounted and operating properly.

Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or its accessories.

For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both the installed or the portable wireless equipment, in the area over the air bag or in the air bag deployment area. If the in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.



Switch off your phone before boarding an aircraft. The use of wireless telephones in an aircraft may be dangerous to the operation of the aircraft, may disrupt the wireless telephone network, and may be illegal. Failure to observe these instructions could lead to the suspension or the denial of telephone services to the offender, or it could result in legal action, or both scenarios could apply.



• EMERGENCY CALLS IMPORTANT!

This phone, like any wireless phone, operates using radio signals, wireless and landline networks, and user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. Therefore, you should *never* rely solely on any wireless phone for essential communications (for example, medical emergencies).

Remember, to make or receive any calls, the phone must be switched on and be used in a service area that has adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

Always make sure that your phone is properly charged before attempting any emergency calls. If you allow your battery to become empty, you will be unable to receive or make calls, including emergency calls. You must then wait a few minutes after the charging begins to place any emergency calls.

Make an Emergency Call

1 If the phone is not on, switch it on.

Some networks may require that a valid SIM card is properly inserted in the phone.

- 2 Enter the emergency number for your present location (for example, 911 or any other official emergency number—emergency numbers vary by location).
- 3 Press 🥆 .

If certain features are in use (Keyguard, fixed dialing, restrict calls, and so on), you may first need to turn those features off before you can make an emergency call. Consult this document and your local cellular service provider.



[143]

When making an emergency call, remember to give all of the necessary information as accurately as possible. Remember that your wireless phone may be the only means of communication at the scene of an accident *do not* terminate the call until given permission to do so.

CERTIFICATION INFORMATION (SAR)

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg.* Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.



Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (for example, at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone as reported to the FCC when tested for use at the



ear is 1.13 W/kg, and when worn on the body, as described in this user guide, is 1.02 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements).

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of http://www.fcc.gov/oet/fccid after searching on FCC ID LJP NSM-9.

For body worn operation, to maintain compliance with FCC RF exposure guidelines, use only Nokia-approved accessories. When carrying the phone while it is on, use the specific Nokia belt-clip that has been tested for compliance.

Use of non-Nokia-approved accessories may violate FCC RF exposure guidelines and should be avoided.

*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band. For SAR information in other regions please look under product information at **www.nokia.com**.



[145]

CARE AND MAINTENANCE

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you to fulfill any warranty obligations and allow you to enjoy this product for many years.

When using your phone, battery, charger, or any accessory:

- Keep it and all its parts and accessories out of the reach of small children.
- Keep it dry. Precipitation, humidity, and liquids contain minerals that will corrode electronic circuits.
- Do not use or store it in dusty, dirty areas as its moving parts can be damaged.
- Do not store it in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store it in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which could damage the phone's electronic circuit boards.
- Do not attempt to open it. Non-expert handling of the device could damage it.
- Do not drop, knock or shake it. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean it. Wipe it with a soft cloth that has been slightly dampened in a mild soap-and-water solution.
- Do not paint it. Paint can clog the device's moving parts and prevent proper operation.

If the phone, battery, charger, or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.



[146]

ACCESSORIES

If you want to enhance your phone's functionality, a range of accessories is available for you. You can select any of these items to help accommodate your specific communication needs. For availability of these and other accessories, contact your service provider.



A FEW PRACTICAL RULES FOR ACCESSORY OPERATION

- Keep all accessories out of reach of small children.
- When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.
- Check regularly that any vehicle-installed accessories are mounted and are operating properly.
- Installation of any complex car accessories *must* be made by qualified personnel only.

Use only batteries, chargers, and accessories that have been approved by the phone manufacturer. The use of any other types could invalidate any approval or warranty applying to the phone, and could be dangerous. Refer to "Batteries, chargers, and accessories" on page 138 for important battery usage information.



[147]

BATTERY INFORMATION

This section provides information about the phone's battery. Be aware that the information in this section is subject to change.



Note: The phone has a lithium ion (Li-Ion) battery. Dispose of used batteries in accordance with any local regulations.

The tables shown in this section provide information about the battery that is available for your phone, charging times with the Rapid Travel Charger (ACP-8U), the Standard Travel Charger (ACP-7U), talk times, and standby times. Consult your service provider for more information.

Charging Times

Note: The charging times listed below are approximate.

Battery option	ACP-7U Charger	ACP-8U Charger
BLB-2 Li-ion Battery 750 mAh	3 hours	2 hr 10 min

Standby and Talk Times

Battery option	Talk time	Standby time
BLB-2 Li-ion Battery 750 mAh	Up to 4 hours	400 hours (radio off) 8 hours (radio on)

Note: The above times are approximate. Battery operation times vary according to signal conditions, network parameters that are set by the service provider, temperature, and the way you use your phone.

CHARGERS AND OTHER ACCESSORIES

This section provides information about the phone's chargers and accessories. Be aware that the information in this section is subject to change as the chargers and accessories change.



[148]

The chargers and accessories that are described in this section are available for your phone. Contact your dealer for details. Also, refer to the accessories brochure that was included in your sales package for the entire line of Nokia Original Accessories.



Note: When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for longer than a week, since prolonged maintenance charging of the battery could shorten its life span. If left unused, a fully charged battery will discharge itself over time.

Standard Travel Charger (ACP-7U)

This is a lightweight (187 g) and durable AC charger. To use the Standard Travel Charger, plug it into a standard 120 V AC wall outlet and connect the lead from the charger to the base of your phone.






Note: If the battery is completely empty, you cannot use the phone until it has enough charge to operate.

Rapid Travel Charger (ACP-8U)

This is a lightweight (100 g) and durable AC charger. Calls can be made during charging, even with a fully discharged battery.

To use the Rapid Travel Charger (ACP-8U), plug it into a standard 120 V or 220 V AC wall outlet, and connect the lead from the charger to the base of your phone.

The charger can also be used together with the optional Desktop Charging Stand. Approximate charging times for discharged batteries are shown in "Charging Times" on page 148.

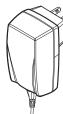

20

[149]

Rapid Cigarette Lighter Charger (LCH-9)

You can charge your phone's battery from your vehicle battery by using the Rapid Cigarette Lighter Charger (LCH-9).

Calls are possible during charging. A green light indicates that the charger is ready for charging (when not charging). The battery



charging times are the same as those for the Rapid Travel Charger (ACP-8U).

The input voltage range is from 11 V to 32 V DC, negative grounding. Avoid prolonged charging with the Rapid Cigarette Lighter Charger (LCH-9) when the car engine is not running; this could cause your car battery to drain. Note also, that in some cars, the cigarette lighter plug is not provided with electricity if the ignition is not switched on.

Desktop Charging Stand (DCD-1)

Used together with the Standard Travel Charger (ACP-7U) or the Rapid Travel Charger (ACP-8U), the Desktop Charging Stand is an stylish choice when you need your phone close at hand, always ready for calls.

This charging stand allows you to charge your phone's battery in an upright, obtainable position on your desk.



Headset Kit (HDC-5)

Small and lightweight, the headset kit allows easy and convenient handsfree operation. The headset has a foam earpiece cover for a comfortable fit and has a clip to hold it firmly in place. This headset's 4-wire 2.5 mm jack fits directly into the bottom of the phone, see "Set up your headset" on page 12 for more details. A remote control button located in the microphone makes the headset convenient to use while answering or receiving calls. You can use the headset with your phone's voice tag feature, see "Make a call using voice recognition" on page 71 for more information.



[150]

21 Technical information

Weight Size

Transmitting power Operating voltage

Networks Number of NAMS Frequency band

Memory locations

3.0 oz. Length 97mm Width 43 mm Depth 19 mm GSM 850 and 1900, 1 W nominal 3.6V DC 12V DC for car kit GSM 850 and 1900

GSM1900 1850 to 1910 MHz (TX) 1930 to 1990 MHz (RX) 500 in phone



[151]



22 Troubleshooting

This section provides a table that lists some of the most commonly encountered problems and provides possible causes and solutions.

Problem	Possible cause	Possible solution
My phone isn't charging.	The charger and the phone are not properly connected.	Securely connect the charger to the phone.
	The charger is not properly plugged in.	Make sure that the charger is plugged in correctly.
My phone isn't making/answering calls.	The battery is not charged.	Charge the battery.
	The signal strength is poor.	If you are indoors, move toward a window.
l can't listen to my voice messages.	You don't have voice mail service.	Call your wireless service provider.
	You have not set up your voice mailbox with your service provider.	Call your wireless service provider.
	You have not saved your voice mail number in your phone.	Refer to "Use voice features" on page 65.
	The voice mail number you have saved is incorrect.	Call your wireless service provider.
	You have forgotten your password or are entering it incorrectly.	Call your wireless service provider.

[152]

23 NOKIA One-Year Limited Warranty

Nokia Inc. ("Nokia") warrants that this cellular phone ("Product") is free from defects in material and workmanship that result in Product failure during normal usage, according to the following terms and conditions:

- 1 The limited warranty for the Product extends for ONE (1) year beginning on the date of the purchase of the Product. This one year period is extended by each whole day that the Product is out of your possession for repair under this warranty.
- 2 The limited warranty extends only to the original purchaser ("Consumer") of the Product and is not assignable or transferable to any subsequent purchaser/end- user.
- **3** The limited warranty extends only to Consumers who purchase the Product in the United States of America.
- 4 During the limited warranty period, Nokia will repair, or replace, at Nokia's sole option, any defective parts, or any parts that will not properly operate for their intended use with new or refurbished replacement items if such repair or replacement is needed because of product malfunction or failure during normal usage. No charge will be made to the Consumer for any such parts. Nokia will also pay for the labor charges incurred by Nokia in repairing or replacing the defective parts. The limited warranty does not cover defects in appearance, cosmetic, decorative or structural items, including framing, and any non-operative parts. Nokia's limit of liability under the limited warranty shall be the actual cash value of the Product at the time the Consumer returns the Product for repair, determined by the price paid by the Consumer for the Product less a reasonable amount for usage. Nokia shall not be liable for any other losses or damages. These remedies are the Consumer's exclusive remedies for breach of warranty.

[153]

23



- 5 Upon request from Nokia, the Consumer must prove the date of the original purchase of the Product by a dated bill of sale or dated itemized receipt.
- 6 The Consumer shall bear the cost of shipping the Product to Nokia in Melbourne, Florida. Nokia shall bear the cost of shipping the Product back to the Consumer after the completion of service under this limited warranty.
- **7** The Consumer shall have no coverage or benefits under this limited warranty if any of the following conditions are applicable:
 - a) The Product has been subjected to abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of Nokia, including damage caused by shipping.
 - b) The Product has been damaged from external causes such as collision with an object, or from fire, flooding, sand, dirt, windstorm, lightning, earthquake or damage from exposure to weather conditions, an Act of God, or battery leakage, theft, blown fuse, or improper use of any electrical source, damage caused by computer or internet viruses, bugs, worms, Trojan Horses, cancelbots or damage caused by the connection to other products not recommended for interconnection by Nokia.
 - c) Nokia was not advised in writing by the Consumer of the alleged defect or malfunction of the Product within fourteen (14) days after the expiration of the applicable limited warranty period.
 - **d)** The Product serial number plate or the accessory data code has been removed, defaced or altered.
 - e) The defect or damage was caused by the defective function of the cellular system or by inadequate signal reception by the external antenna, or viruses or other software problems introduced into the Product.

[154]

- 8 Nokia does not warrant uninterrupted or error-free operation of the Product. If a problem develops during the limited warranty period, the Consumer shall take the following step-by-step procedure:
 - a) The Consumer shall return the Product to the place of purchase for repair or replacement processing.
 - b) If "a" is not convenient because of distance (more than 50 miles) or for other good cause, the Consumer shall ship the Product prepaid and insured to: Nokia Inc., Attn: Repair Department 795 West Nasa Blvd. Melbourne, FL 32901
 - c) The Consumer shall include a return address, daytime phone number and/or fax number, complete description of the problem, proof of purchase and service agreement (if applicable). Expenses related to removing the Product from an installation are not covered under this limited warranty.
 - **d)** The Consumer will be billed for any parts or labor charges not covered by this limited warranty. The Consumer will be responsible for any expenses related to reinstallation of the Product.
 - e) Nokia will repair the Product under the limited warranty within 30 days after receipt of the Product. If Nokia cannot perform repairs covered under this limited warranty within 30 days, or after a reasonable number of attempts to repair the same defect, Nokia at its option, will provide a replacement Product or refund the purchase price of the Product less a reasonable amount for usage. In some states the Consumer may have the right to a loaner if the repair of the Product takes more than ten (10) days. Please contact the Customer Service Center at Nokia at the telephone number listed at the end of this warranty if you need a loaner and the repair of the Product has taken or is estimated to take more than ten (10) days.

[155]

23



- f) If the Product is returned during the limited warranty period, but the problem with the Product is not covered under the terms and conditions of this limited warranty, the Consumer will be notified and given an estimate of the charges the Consumer must pay to have the Product repaired, with all shipping charges billed to the Consumer. If the estimate is refused, the Product will be returned freight collect. If the Product is returned after the expiration of the limited warranty period, Nokia's normal service policies shall apply and the Consumer will be responsible for all shipping charges.
- 9 YOU (THE CONSUMER) UNDERSTAND THAT THE PRODUCT MAY CONSIST OF REFURBISHED EQUIPMENT THAT CONTAINS USED COMPONENTS, SOME OF WHICH HAVE BEEN REPROCESSED. The used components comply with Product performance and reliability specifications.
- 10 ANY IMPLIED WARRANTY OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE OR USE, SHALL BE LIMITED TO THE DURATION OF THE FOREGOING LIMITED WRITTEN WARRANTY. OTHERWISE, THE FOREGOING LIMITED WARRANTY IS THE CONSUMER'S SOLE AND EXCLUSIVE REMEDY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. NOKIA SHALL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF ANTICIPATED BENEFITS OR PROFITS, LOSS OF SAVINGS OR REVENUE, LOSS OF DATA, PUNITIVE DAMAGES, LOSS OF USE OF THE PRODUCT OR ANY ASSOCIATED EQUIPMENT, COST OF CAPITAL, COST OF ANY SUBSTITUTE EQUIPMENT OR FACILITIES, DOWNTIME, THE CLAIMS OF ANY THIRD PARTIES, INCLUDING CUSTOMERS, AND INJURY TO PROPERTY, RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM BREACH OF THE WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, STRICT TORT, OR ANY OTHER LEGAL OR EQUITABLE THEORY, EVEN IF NOKIA KNEW OF THE LIKELIHOOD OF SUCH DAMAGES. NOKIA SHALL NOT BE LIABLE FOR DELAY IN RENDERING SERVICE UNDER THE LIMITED WARRANTY, OR LOSS OF USE DURING THE PERIOD THAT THE PRODUCT IS BEING REPAIRED.

[156]

23

- 11 Some states do not allow limitation of how long an implied warranty lasts, so the one year warranty limitation may not apply to you (the Consumer). Some states do not allow the exclusion or limitation of incidental and consequential damages, so certain of the above limitations or exclusions may not apply to you (the Consumer). This limited warranty gives the Consumer specific legal rights and the Consumer may also have other rights which vary from state to state.
- 12 Nokia neither assumes nor authorizes any authorized service center or any other person or entity to assume for it any other obligation or liability beyond that which is expressly provided for in this limited warranty including the provider or seller of any extended warranty or service agreement.
- 13 This is the entire warranty between the Nokia and the Consumer, and supersedes all prior and contemporaneous agreements or understandings, oral or written, relating to the Product, and no representation, promise or condition not contained herein shall modify these terms.
- 14 This limited warranty allocates the risk of failure of the Product between the Consumer and Nokia. The allocation is recognized by the Consumer and is reflected in the purchase price.
- **15** Any action or lawsuit for breach of warranty must be commenced within eighteen (18) months following purchase of the Product.
- 16 Questions concerning this limited warranty may be directed to: Nokia Inc.
 - Attn: Customer Service 7725 Woodland Center Blvd., Ste. 150 Tampa, FL 33614 Telephone: 1-888-NOKIA-2U (1-888-665-4228) Facsimile: (813) 287-6612 TTY/TDD Users Only: 1-800-24-NOKIA (1-800-246-6452)
- 17 The limited warranty period for Nokia supplied attachments and accessories is specifically defined within their own warranty cards and packaging.

*Nokia is a registered trademark of Nokia Corporation.

[157]

Index

Numerics

1-touch dialing assigning a number 61 change a 1-touch number 62 erase a 1-touch number 63

A

ABC mode 34 accessibility solutions 6 accessibility website 6 accessible features 7 accessories 147 accessorv carrying case 13 charging stand 150 cigarette lighter charger 150 connection port 14 headset kit 150 loopset 6 rapid travel charger 149 standard travel charger 149 active call options activate/cancel call waiting 53 answer a waiting call 53 call waiting 53 end the active call 54 reject a waiting call 53 switch between calls 53 third call waiting 54 alarm clock 121 delay alarm 122 snooze 122 symbol 18 answer a call 20

answer call with any key 60 answer waiting call 53 antenna contact 16 how to hold the phone 16 location 15, 16 performance 16 anykey answer 60 audiocassette 6 authority certificates 115 automatic redial 60

B battery

avoid short-circuiting 139 charge 11 check strength 17 empty 11 indication on screen 17 install 10 power 17 prolonged charging 138 recycle 139 remove 12 temperature range 139 battery charger connection 14 battery charging 11 battery low indication 138 block international calls 95 bookmark set while browsing 114 bookmarks 114 Braille 6 browser use bookmarks 114 browser options 112

[158]

business cards 126 send as text message 126 send using IR 131 sending 126

С

cache memory 114 calculator 126 calendar 118 make a note 118 send note 120 set a reminder 119 calendar notes send via IR 132 set an alarm 119 call costs features 51 call forwarding 58 call log 46 call on hold symbol 18 call restrictions cancel 95 call timers 48 call waiting 53 caller groups add names 84 assign ringing tone 84 graphics 85 remove names 84 rename 84 caller ID 20 car kit plug in 14 car profile 81 care and maintenance 146 carrying case 13

certification information 144 chat 105 change nickname 106 view history 106 check volume 17 clock 12 hour 83 24 hour 83 alarm 121 display the clock 83 set the clock 82 closed user groups 96 code personal unblocking key 93 conference calls 57 connect battery charger 14 connection port 14 convert currency 127 countdown timer 123 covers, changing 87

D

Data call history 51 Desktop Charging Stand 150 dictionary add word 38 difference between mute and hold 56 disconnect from wireless Internet 114 display language 82 downloading ringing tones 85

E

e-mail enter in phone book 41 save address 41

[159]

e-mail address save 42 e-mail message send 101 emergency call make while using GPRS 117 emergency calls 2, 143 end a call 20 END key 20 enter characters 35 enter letters ABC mode 34 entering letters and numbers special characters 36 standard text input 34 erase phone book entries 44 explosive areas phone use 142

F

factory settings default settings 86 fixed dialing 94

G

games 136 bumper 137 snake 2 137 snowboarding 137 GPRS 110 call history 46 check data call history 46 dial-up connections 134 make a call while online 117 phone symbols 115 receive a call while online 116 graphics associate with caller group 85 H handsfree operation 73 headset connect 12 make and answer calls 13 plug in 14 set up 12 use 13 Headset Kit 150 hearing aids 141

help text 22

icons 18 idle screen 17 IMEI 7 in-call options access menus 56 access the phone book 56 conference calls 57 end all calls 56 make a new call 55 mute the microphone 56 put a call on hold 55 record a call 54 send touch tones 55 information message service 109 Infrared precautions 1 install SIM card 9 Interference 2 international call 63 international calls prefix 37 restrict access 95

[160]

International Mobile Equipment Identification 7 Internet connect with your phone 111 IR beam 1 IR connection between 2 phones 129 check status 130 phone symbols 130 phone to computer 132

Κ

keyguard 90 symbol 18 keypad avoid accidental keypresses 90 lock 90 keys and features antenna 15 back cover release 15 bottom 14 display 14 earpiece 14 end key 14 front 14 left side 15 microphone 14 number keys 14 scroll keys 14 selection keys 14 talk key 14 volume buttons 15

L

label 7 language 82 English 82

French 82 phone support 82 Spanish 82 Large print 6 lights car profile 81 keypad and display 14 lock codes PIN codes 92 PUK codes 93 loopset 6 plug in 14 profile 81 set as default 81 loopset connection 14 low battery 11 LPS-36

Μ

make a call 19 use the phone book 19 make an emergency call while online 117 make an international call 63 memory 45 menus list of items 23 selecting a menu 21 message settings message center number 98 message mode 99 messages check text messages 103 check voice mail 68 microphone mute 56

[161]

missed calls 47 model number 7 Modem setup download 133

Ν

Nokia Customer Care phone information 7 request alternate format 6 TTY number 6 Nokia PC Suite 133 Nokia website 133

0

online help 22 onscreen help 22

Ρ

pacemaker 140 PC Connectivity 132 PC Suite 133 Content Copier 133 download 133 instructions 133 PC Composer 133 PC Graphics 133 PC Sync 133 PC/PDA connectivity guide 133 Phone editor 133 transfer graphics from PC to phone 133 transfer phone book info 133 phone antenna 15 back cover 15 care and maintenance 146 carrying case 13

certification information 144 check signal 17 frequency bands 151 operating voltage 151 radio frequency signals 144 transmitting power 151 turn on 16 phone book add entry 34 erase names and numbers 44 features 33 find names 43 make a call 19 memory 45 menu 33 options 33 phone book menus 63 save names and numbers 41 phone label 7 phone size 151 phone symbols 18 phone usage and gas stations 142 phone usage and hearing aids 141 phone usage and medical devices 141 phone usage and pacemakers 140 phone usage and vehicles 141 phone weight 151 picture messages sending with text 108 viewing 109 PIN code 92 power button location 16 power key 14 predictive text input 37

[162]

add word 38 example 37 language support 37 shortcuts 39 turn off 38 turn on 37 use keys 39 profile handsfree 80 profiles car kit 81 customizing 76 for accessories 80 loopset 81 renaming 80 PUK code 93 punctuation how to enter 35

R

Radio 135 Rapid Cigarette Lighter Charger 150 Rapid Travel Charger 149 reception 17 record voice memo 68 redial a call 20 reject a call 20 remove battery 12 restore factory settings 86 restrict calls 94 ringing tones download 85 receive from network 85

S

Safety guidelines 1 SAR 144 scroll bar 22 scroll keys 21 security code 91 default 93 security features keyguard 90 personal unblocking key 93 PIN code 92 prevent unauthorized use 92 PUK code 93 require password 92 restrict calls 94 selection keys 21 serial number 7 service command editor 109 signal strength indicator 17 SIM card 9 avoid damage 10 handling 10 install 9 memory 45 SIM card feature fixed dialing 94 speed-dial 61 Standard Travel Charger 149 start screen 17 stopwatch 124 measure lap time 124 measure split time 124 stop the clock 125 swap between two calls 53 system select 97

Τ

T9 *38* talk key *19*

[163]

technical information 151 text conventions 4 text message copy to calendar 104 send e-mail 101 text messages chat 105 reading 103 resending 101 send to single recipient 99 sending 100 use GPRS 99 time receive network update 83 time format 83 to-do list send as text 121 to-do note 120 touch tones 55 send pause 37 track online usage 51 wireless internet usage 51 troubleshooting 152 TTY 6

U

update date and time 83 use in-call options 54 use two phone lines 53 user guide alternate formats 6 audiocassette 6 Braille 6 disk copy 6 e-text 6 interactive tutorial 5 Large print 6 PC/PDA connectivity guide 133 updates 4 user guide conventions 4

V

vibrating alert 78 voice commands 73 activate infrared 74 call voice mailbox 74 voice dialing add a voice tag 70 change a voice tag 72 erase a voice tag 72 make a call with voice recognition 71 play back a voice tag 72 voice mail listen to your messages 65 save the mailbox number 66 voice memo 68 audio cues 70 indicator 70 set alarm 69 start tone 70 voice recorder 68 volume 17 adjust 17 check level on screen 17 decrease 20 earpiece 17 increase 20 keypad tones 76 ringing 77

[164]

W

WAP 110 WAP broswer 112 use phone keys 113 WAP page active link 113 enter information 113 examples 113 header line 113 warning and game tones **79** wireless Internet clear the cache 114 security issues 114 sign off 114 sign on 111 wireless Internet site examples 113 how to read 113 wireless modem setup 133 wireless network services 5 write messages with built-in dictionary 37 www.nokia.com 133 www.nokiaaccessibility.com 6 www.nokiahowto.com 5

[165]