

**Annex acc. to FCC Title 47 CFR Part 15
relating to
Solcon Systemtechnik GmbH
EOS-RTLS-AT5200**

Annex no. 4 User Manual Functional Description

**Title 47 - Telecommunication
Part 15 - Radio Frequency Devices
Subpart C – Intentional Radiators
Measurement Procedure:
ANSI C63.4-2014
ANSI C63.10-2013**



User manual/ Functional description of the test equipment (EUT)



OPERATION MANUAL

ANCHOR TRANSPONDER

EOS-RTLS-AT5200

1.1

Solcon Systemtechnik GmbH
Niels-Bohr-Ring 3-5 23568 Lübeck
Telefon: +49 (0)451 40948 0
Telefax: +49 (0)451 40948 88

copyright

© Solcon Systemtechnik GmbH 2022

This documentation is protected by copyright. The resulting rights, in particular those of translation, reprinting, the removal of illustrations, radio transmission, reproduction by photomechanical or similar means and storage in data processing systems, are reserved, even if only used in extracts.

DOCUMENT DATA

Type of document:

Data sheet

Current version:

1.1

Status:

release

Date:

28.06.2023

Project name:

-

Project number:

XXXXX

Releases


Author(s)

Position	Name	Date	Signature
Projektingenieur	Heimes	28.06.2023	

Release authorised by

Position	Name	Date	Signature
Projektingenieur			

Position	Name	Date	Signature
Projektingenieur			


	Project number	Status	Version	Date	Page
	XXXXX	Release	1.0	28.06.2023	2/18

DOCUMENT HISTORY

Author(s)	Chapter	Topic	Version	Date
Heimes	1, 1.2	Added: „They are designed for indoor use only.“, Added declaration of conformity for FCC Part 15		

TABLE OF CONTENTS

1	Introduction.....	5
1.1	Subject to change	5
1.2	Declaration of Conformity	5
2	Safety and Use	6
3	Scope of delivery	7
4	Assembly	8
5	Connection schemes	12
5.1	TWR mode connection diagram	12
5.2	Connection diagram TDoA mode.....	13
6	Operation	14
6.1	Description of LEDs	14
6.2	Commissioning	15
7	Maintenance and care.....	16
8	Warranty	16
9	Device Specification	17

	Project number	Status	Version	Date	Page
	XXXXX	Release	1.0	28.06.2023	4/18

1 Introduction

The EOS RTLS anchor transponders are installed in a certain space as fixed reference points and thus enable the construction of a positioning field within the framework of the EOS RTLS system. They are designed for indoor use only.

Using UWB radio, it is possible to locate mobile RTLS transponders using both two-way ranging (TWR) and time-division-of-arrival (TDOA) methods.

These instructions contain general information on the installation, operation, handling and care of the device as well as information on the structure and its functions.

1.1 Subject to change

Solcon Systemtechnik reserves the right to make changes to these instructions or the products described from the current series.

Solcon Systemtechnik assumes no responsibility for technical or editorial omissions and/or errors in this manual.

1.2 Declaration of Conformity



This device can be expected to comply with part 15 of the FCC Rules provided it is assembled in exact accordance with the instructions provided with this kit. Operation is subject to the following conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference receiving including interference that may cause undesired operation.

You can request the appropriate declaration of conformity for your device by stating the device serial number at:

Solcon Systemtechnik GmbH

Niels-Bohr-Ring 3-5

23568 Lübeck

PHONE: +49(0)451-40948-0

FAX: +49(0)451-40948-88

E-MAIL: INFO@SOLCON-SYSTEMTECHNIK.DE

	Project number	Status	Version	Date	Page
	XXXXX	Release	1.0	28.06.2023	5/18

2 Safety and Use

Be sure to read this manual before operating the device.

These operating instructions are an important part of the scope of delivery and must also be handed over if the device is passed on.

Accident prevention regulations and safety rules must be observed!



ONLY AUTHORIZED PERSONS ARE ALLOWED TO OPEN THE DEVICE.



BEFORE SEALING, MAKE SURE THAT THERE ARE NO LOOSE PARTS IN THE DEVICE.



THE DEVICE MUST BE PROTECTED FROM WATER. DO NOT PLACE BEVERAGES OR LIQUIDS ON THE APPLIANCE.




KEEP METALLIC OR KEEP CONDUCTIVE MATERIALS INSIDE THE APPLIANCE.



BEFORE MOVING, MOUNTING OR OPENING THE APPLIANCE, DISCONNECT THE POWER CORD FROM THE MAINS SUPPLY.



DAMAGED CABLES, PROTECTIVE COVERS AND PLUG MUST BE REPLACED IMMEDIATELY.


	Project number	Status	Version	Date	Page
	XXXXX	Release	1.0	28.06.2023	6/18

3 Scope of delivery

1x EOS-RTLS-AT5200

with articulated arm and M8 threaded plug



	Project number	Status	Version	Date	Page
	XXXXX	Release	1.0	28.06.2023	7/18

4 Assembly

For mounting the EOS-RTLS-AT5200, it has an articulated arm with an integrated M8 thread. It can be attached to an M8 threaded rod or by screw. In addition, the inclination of the anchor can be adjusted using the articulated arm.



Figure 1: Articulated arm with threaded rod screwed in


	Project number	Status	Version	Date	Page
	XXXXX	Release	1.0	28.06.2023	8/18



Figure 2: Anchor side view

The anchor should be hung with the rear LAN port facing up.

To adjust the incline, the pivot screw (circled in red) must be loosened with a 5mm Allen key. After that, the inclination can be adjusted as desired. The position shown in Fig.2 is defined as the 0° position.

Solcon	Project number	Status	Version	Date	Page
	XXXXX	Release	1.0	28.06.2023	9/18



Figure 3: Anchor with tilt adjusted

Solcon	Project number	Status	Version	Date	Page
	XXXXX	Release	1.0	28.06.2023	10/18

The anchor must always be secured against falling. To do this, a steel cable is pulled through the gap on the articulated arm and fastened as a loop. (See Fig. 4)

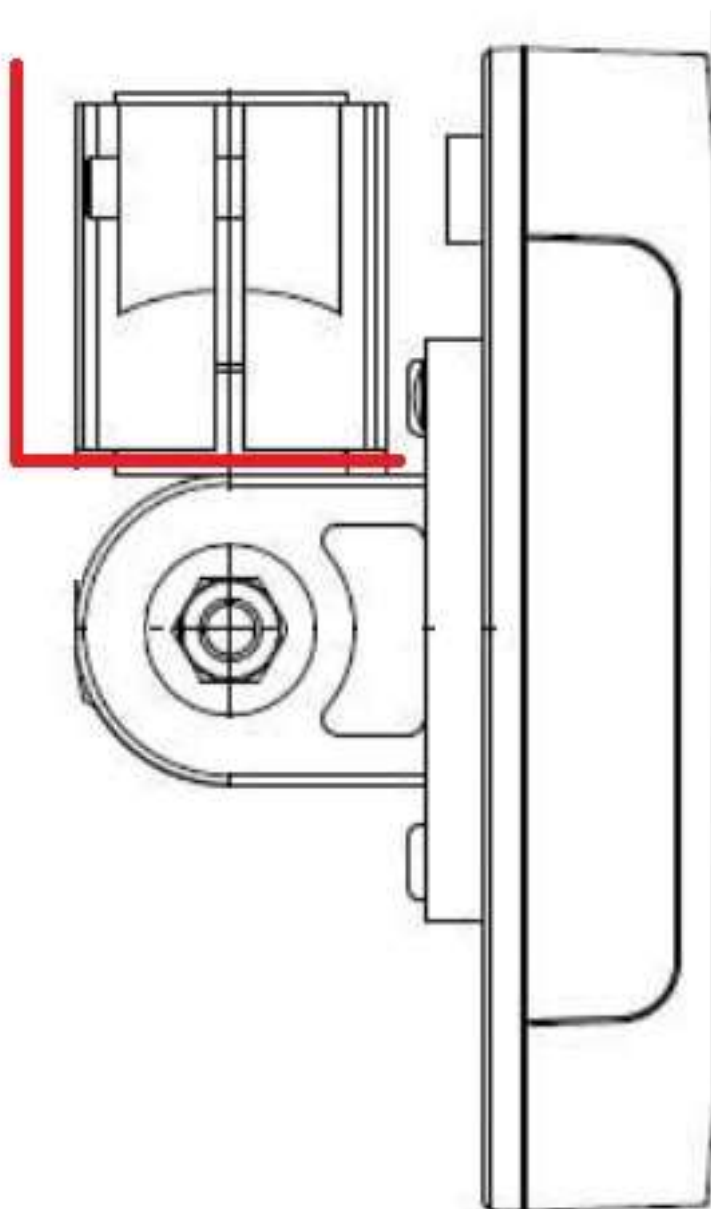



Figure 4: Anchor with indicated fall protection (red)

	Project number	Status	Version	Date	Page
	XXXXX	Release	1.0	28.06.2023	11/18

5 Connection schemes

The anchors can be used in two modes of operation, TWR or TDoA operation.

During installation, the connection diagram for the respective operating mode must be observed.

5.1 TWR mode connection diagram

In TWR mode, the anchor must be connected to a PoE switch using a CAT.7 Ethernet cable. This must ensure both the power supply and the connection to the EOS RTLS system.

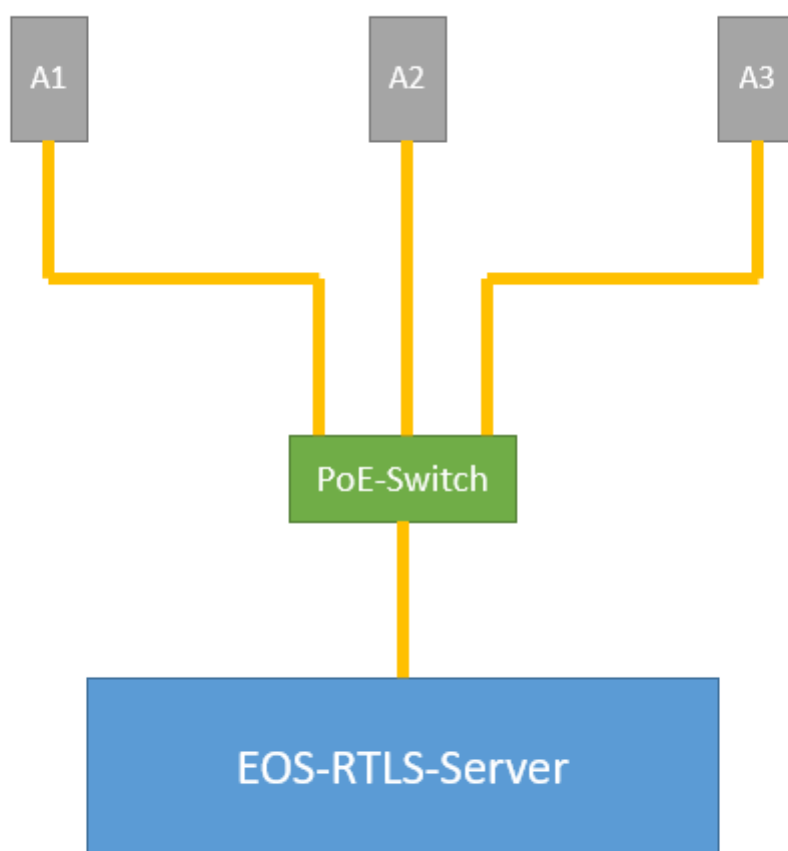



Figure 6: TWR mode connection diagram

	Project number	Status	Version	Date	Page
	XXXXX	Release	1.0	28.06.2023	12/18

5.2 Connection diagram TDoA mode

In TDoA mode, the anchor must also be supplied with a clock signal via an EOS RTLS timer box. To do this, the PoE switch is connected to the input side of the timer box. The output side of the timer box is then connected to the anchors.

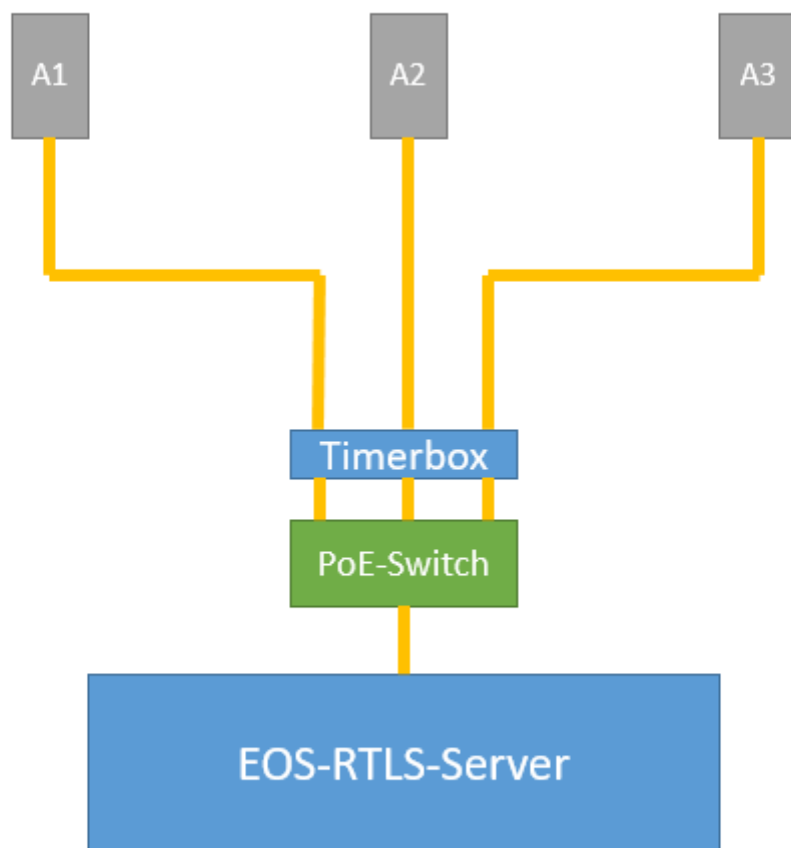



Figure 7: TDoA mode connection diagram

	Project number	Status	Version	Date	Page
	XXXXX	Release	1.0	28.06.2023	13/18

6 Operation

6.1 Description of LEDs

The anchor has three LEDs on the front. (See Fig. 6)

LED1

Color orange

Function: Indicates whether the armature is powered

Behavior: Solid orange when the armature is powered

LED2

Color green

Function: Signals a correct TCP connection to the server


Behavior: Lights up green, while a TCP connection ist established

LED3

Colour blue

Function: Indicates whether UWB communication is currently taking place

Behaviour: Lights up blue in the event of an existing UWB communication

	Project number	Status	Version	Date	Page
	XXXXX	Release	1.0	28.06.2023	14/18

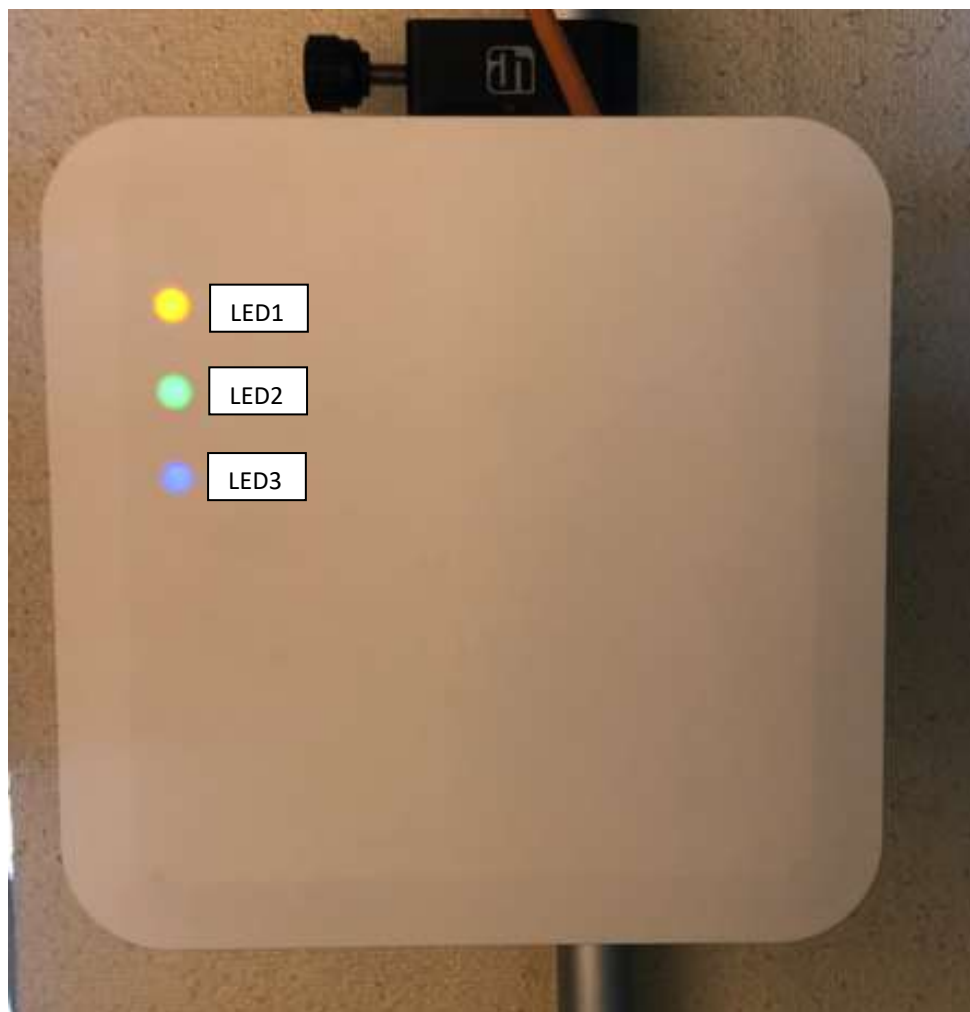



Figure 6: Frontside LEDs

6.2 Commissioning

The anchor is put into operation by plugging an Ethernet cable into the RJ45 socket on the back. All LEDs light up simultaneously for approx. one second. After the start-up process, only LED1 lights up permanently in orange. The anchor is now powered up and ready for use.

	Project number	Status	Version	Date	Page
	XXXXX	Release	1.0	28.06.2023	15/18

7 Maintenance and care


The anchor is maintenance-free.

8 Warranty

The anchor is guaranteed for 12 months. The warranty is limited to design and manufacturing defects. Wear parts and damage caused by incorrect handling or use outside of the environmental specifications are excluded from the warranty. The warranty also expires if the device is opened.

In addition, our general terms and conditions apply, which can be found under the following link:

<http://www.solcon-systemtechnik.de/agb/>

	Project number	Status	Version	Date	Page
	XXXXX	Release	1.0	28.06.2023	16/18

9 Device Specification

<i>Technical specifications</i>	
Dimensions in mm (L/W/H)	150 X 150 X 82,5
Weight	500 g
Input voltage	Power over Ethernet (PoE) nach IEEE 802.3at
Power consumption	4.5W
Temperature range	-10°C to 60°C

CONTACT

PHONE.: (0451)-40948-0

FAX.: (0451)-40948-88

EMAIL: INFO@SOLCON-SYSTEMTECHNIK.DE

WWW.SOLCON-SYSTEMTECHNIK.DE



D Note on environmental protection


At the end of its useful life, this product must not be disposed of with normal household waste, but must be taken to a collection point for the recycling of electrical and electronic equipment.

The symbol on the product, the instructions for use or the packaging indicates this.

The materials are recyclable according to their labeling. By reusing, material recycling or other forms of recycling old devices, you are making an important contribution to protecting our environment. Please ask the municipal administration for the responsible disposal point.

Note:

You are also welcome to contact us at info@solcon-systemtechnik.de with the subject disposal of old devices, we will be happy to help you.

	Project number	Status	Version	Date	Page
	XXXXX	Release	1.0	28.06.2023	17/18

Solcon Systemtechnik GmbH

Niels-Bohr-Ring 3-5

D-23568 Lübeck


Tel.: +49(0)451- 4094 8 - 0

Fax.: +49(0)451- 4094 8 - 88

info@solcon-systemtechnik.de

www.solcon-systemtechnik.de



	Project number	Status	Version	Date	Page
	XXXXX	Release	1.0	28.06.2023	18/18