



SONATA

User Manual

FCC ID: NTASONATA1

IC: 4732A-SONATA1

Rev 1.0

November 9, 2016



Table of contents

General Information		Page
1.	Introduction	3
2.	General Information	3
3.	Permissible Operating Conditions	3
4.	Package Contents	3
5.	Accessories (Optional)	3
6.	Unpacking and Handling	3
Safety		
7.	Transmitter Information	4
8.	FCC and Industry Canada Statements	4
Installation		
9.	Installation Requirements	5
10.	Installing the Sonata	5
Disposal		
11.	Disposal	5



1. Introduction

The Sonata is an ultrasonic water meter designed for accurate measurement of potable water for residential applications. The Sonata's unique design delivers precise flow measurement without any moving parts – for long life, sustained accuracy and exceptional performance. Sonata is a maintenance free device for up to 20 years of operation.

2. General Information

- Read the instructions below before installing the meter.
- To prevent injury or damage, do not install, operate or maintain the meter without following the instructions in this guide.
- Store the meter in a cool, dry place.
- Follow all warnings and instructions marked on the product.

3. Permissible Operating Conditions

AWWA Standard	Most recent revision of ANSI/AWWA Standard C700 and C708
NSF/ANSI Standard	NSF/ANSI 372, NSF/ANSI 61, & Safe Drinking Water Act (SDWA)
Max. Working Pressure	175 PSI
Liquid Temperature	32.1° to 122°F (0.1° to 50°C)
Ambient Temperature	-13° to 131°F (-25° to 55°C)
Environmental Protection	IP68

4. Package Contents

The following items are included in the package:

- Sonata Ultrasonic Water Meter (up to 12 depending on purchased quantity)
- Condensed Installation Manual

5. Accessories – Optional

- EDPM gaskets
- Non Return Valve
- Strainer
- Output extension cable, for specific installations.

6. Unpacking and handling

- Carefully unpack the meter and inspect all contents for shipping damage before attempting to install. If any indication of physical damage is found, immediately contact the responsible transportation service and your local Master Meter representative.
- Do not carry the Sonata by its lid.
- Avoid hard blows, jolts or impact to the meter.

7. Transmitter Information



CAUTION

The User and the Installer should be aware that changes and modifications to the equipment not expressly approved by Master Meter could void warranty and the user's authority to operate the equipment.

Professionally trained personnel should install the equipment.

The Sonata is equipped with an internal antenna/transmitter and 1) must be installed at a minimum separation distance of at least 20 cm from all persons, and 2) must not be co-located or operating in conjunction with any other antenna or transmitter.

8. FCC and Industry Canada Statements



ATTENTION

The digital portion of the transceiver has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1.) Reorient or relocate the receiving antenna.
- 2.) Increase the separation between the equipment and receiver.
- 3.) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4.) Consult the dealer or an experienced radio/TV technician for help.

FCC and Industry Canada statements

This device complies with Part 15 of FCC Rules and with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:


- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS-102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

9. Installation Requirements

1. Ensure that the connecting pipes are aligned (Figure 1).
2. Check for the proper distance between the pipe unions to avoid mechanical stress. (Figure 2)
3. The meter may be installed in any orientation. (Figure 3) There are no straight pipe requirements on the Sonata.
4. Always use new gaskets and ensure that the coupling nut surfaces are clean.


Figure 1

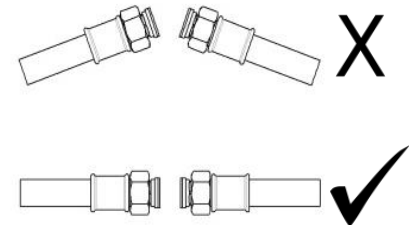

Installation Notes

- Do not install the meter on the suction side of a pipe.
- Avoid exposing the meter to excessive vibration.
- Support of the pipeline on both sides of the meter is recommended.


Figure 2

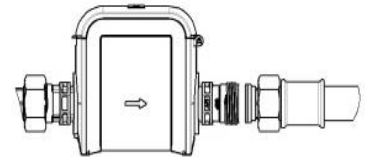

10. Installing the Sonata

1. Unpack the Sonata. Install/assemble accessories, as supplied, and as needed.
2. Note the proper flow direction as indicated on the meter. The Sonata is a bi-directional flow meter and will also measure reverse flow.
3. Install new gaskets in the coupling nut.
4. Place the meter in position and carefully tighten the coupling nuts by hand. Make sure each coupling nut is smoothly screwed onto the meter threads. Use a wrench to tighten the coupling nuts to a minimum torque setting of 10 lb-ft up to a maximum of 35 lb-ft. (Figure 4)
5. Once installed, open the upstream valve to allow water to fill the meter and piping.
6. Open a downstream valve to flush all air out of the pipeline.
7. Close the downstream valve and verify that there are no leaks at the coupling nuts.

Figure 3

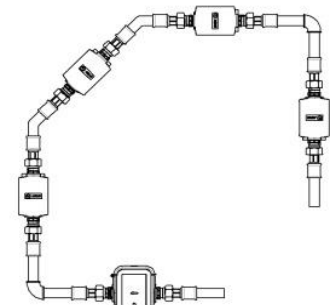

11. Disposal

This product contains Lithium Thionyl Chloride batteries. Local and national regulations for proper battery disposal should be followed.

Figure 4

