

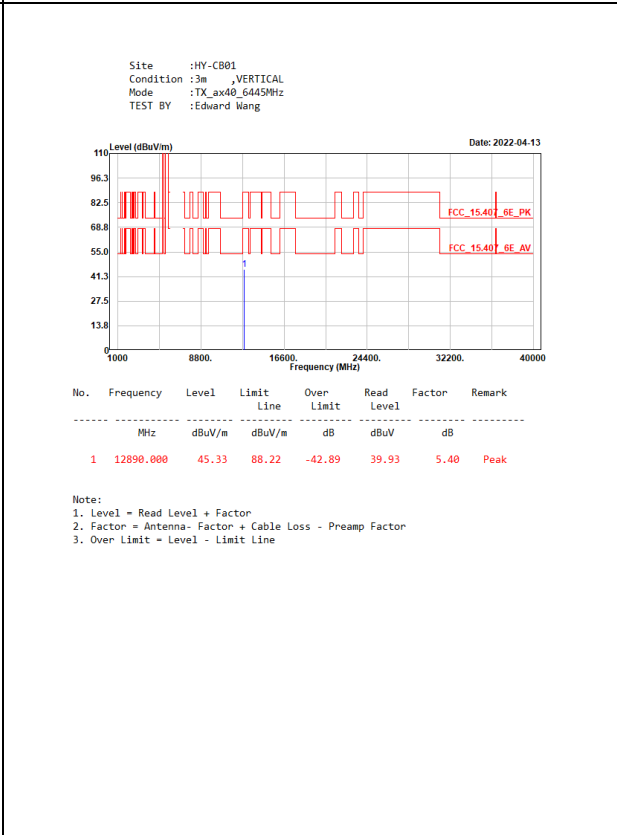
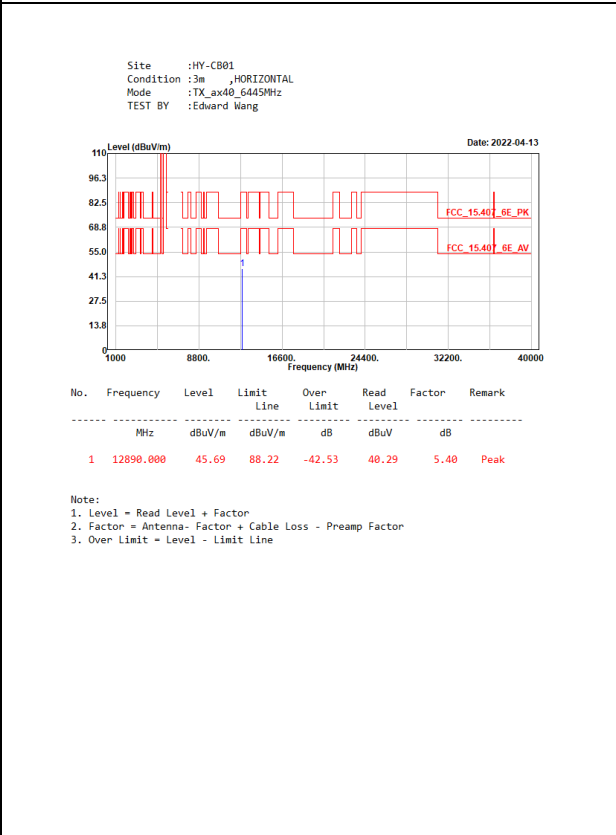


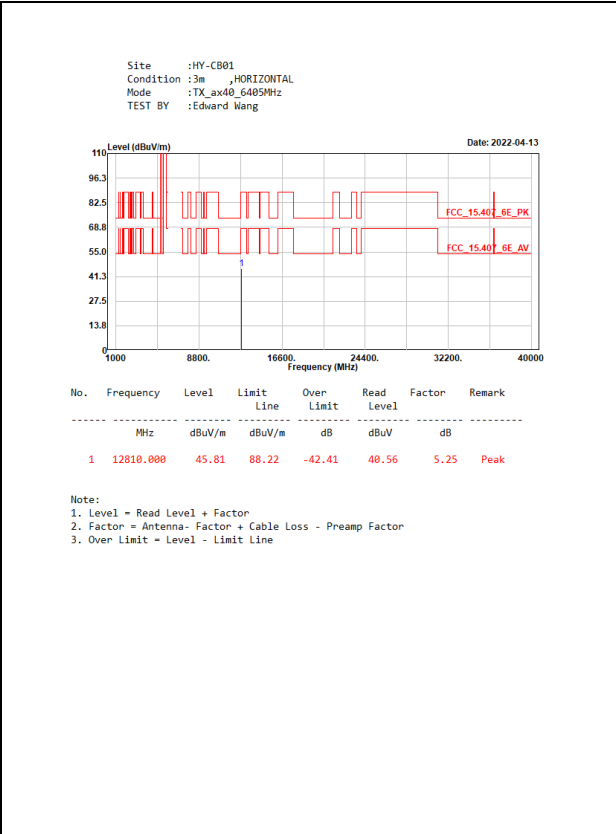

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_6485MHz
TEST BY :Edward Wang

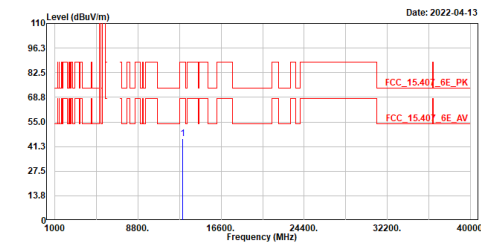


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	12978.000	45.54	88.22	-42.68	48.83	5.51	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_6485MHz
TEST BY :Edward Wang

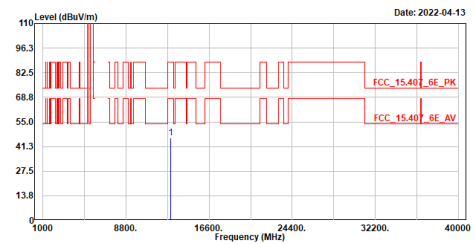


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	12978.000	46.00	88.22	-42.22	48.49	5.51	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_6525MHz
TEST BY :Johnny

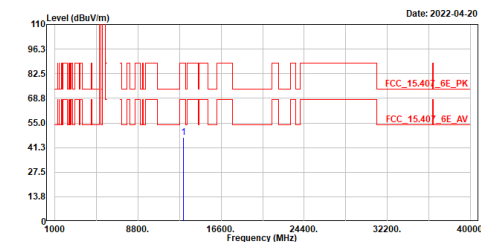


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	13050.000	46.74	88.22	-41.48	41.18	5.56	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_6525MHz
TEST BY :Johnny

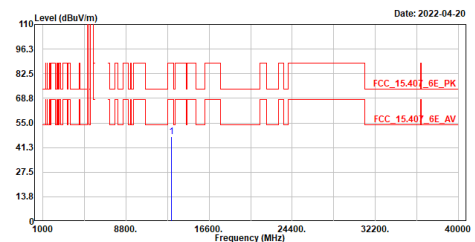


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	13050.000	47.13	88.22	-41.09	41.57	5.56	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_6565MHz
TEST BY :Edward Wang

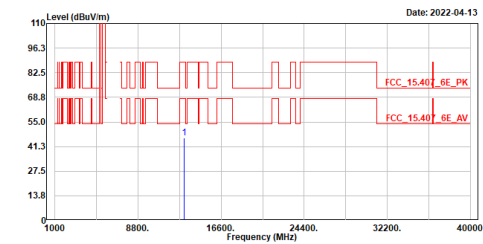


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13130.000	46.23	88.22	-41.99	48.81	5.42	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_6565MHz
TEST BY :Edward Wang

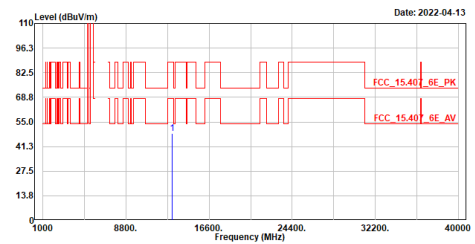


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13130.000	48.75	88.22	-39.47	43.33	5.42	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_6725MHz
TEST BY :Edward Wang

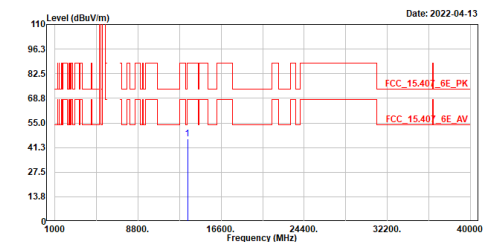


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13450.000	46.00	88.22	-42.22	48.47	5.53	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_6725MHz
TEST BY :Edward Wang

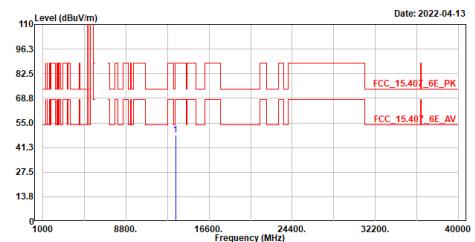


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13450.000	48.19	88.22	-40.03	42.66	5.53	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_6845MHz
TEST BY :Edward Wang

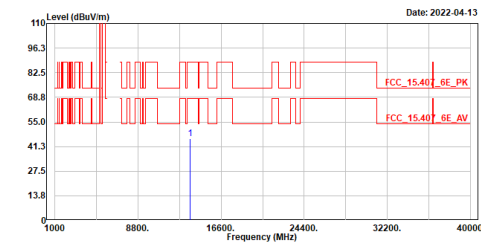


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13690.000	45.48	88.22	-42.74	40.27	5.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_6845MHz
TEST BY :Edward Wang

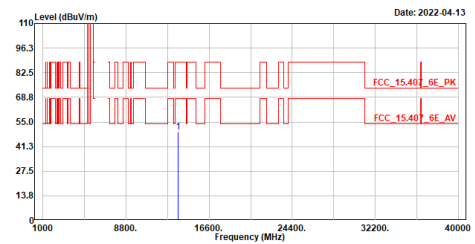


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13690.000	49.48	88.22	-38.74	44.27	5.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_6885MHz
TEST BY :Johnny

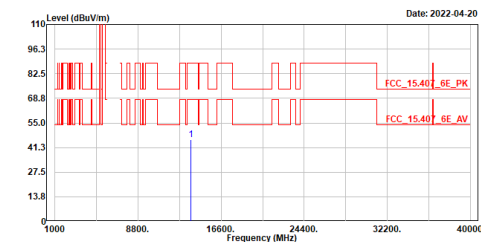


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13770.000	45.81	88.22	-42.41	40.71	5.10	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_6885MHz
TEST BY :Johnny

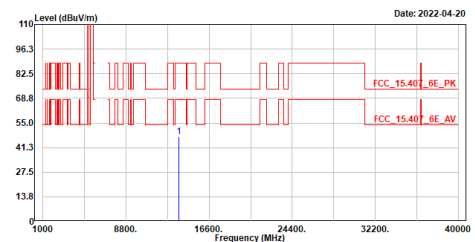


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13770.000	47.45	88.22	-40.77	42.35	5.10	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_6925MHz
TEST BY :Edward Wang

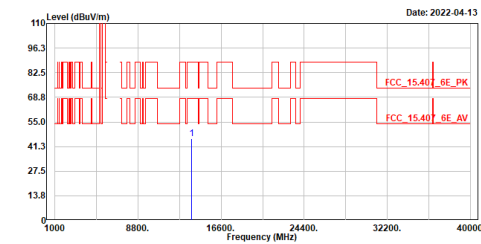


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13850.000	45.85	88.22	-42.37	40.51	5.34	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_6925MHz
TEST BY :Edward Wang

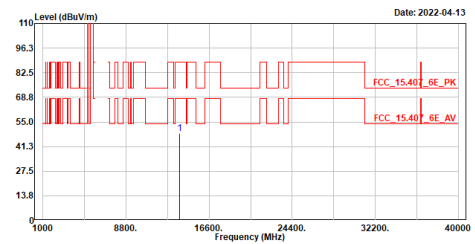


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13850.000	48.38	88.22	-39.84	43.04	5.34	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_7005MHz
TEST BY :Edward Wang

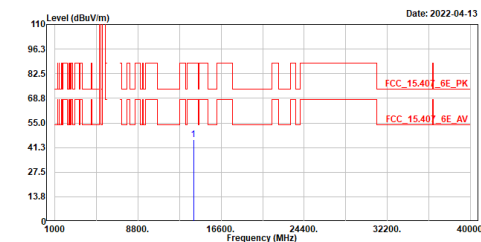


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	14010.000	45.75	88.22	-42.47	40.58	5.17	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_7005MHz
TEST BY :Edward Wang

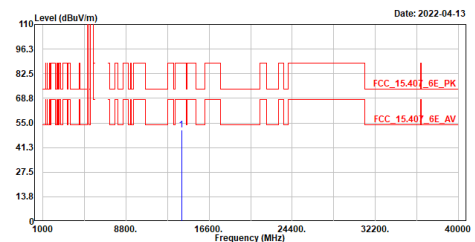


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	14010.000	51.20	88.22	-37.02	46.03	5.17	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_7885MHz
TEST BY :Edward Wang

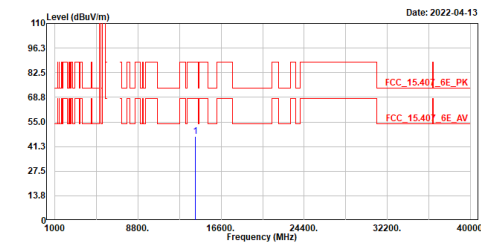


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	14178.000	46.93	88.22	-41.29	41.39	5.54	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_7885MHz
TEST BY :Edward Wang

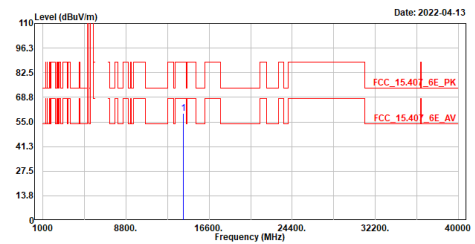


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	14178.000	59.69	88.22	-28.53	54.04	5.65	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_6145MHz
TEST BY :Johnny

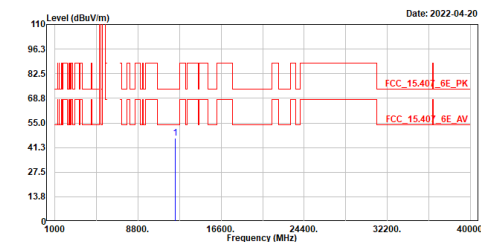


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12298.000	46.55	74.00	-27.45	41.81	4.74	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_6145MHz
TEST BY :Johnny

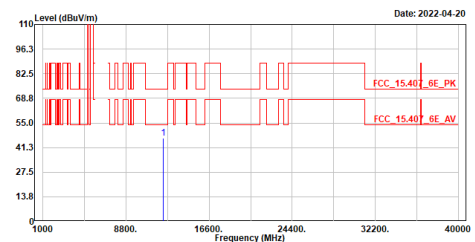


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12298.000	46.64	74.00	-27.36	41.90	4.74	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_6225MHz
TEST BY :Johnny

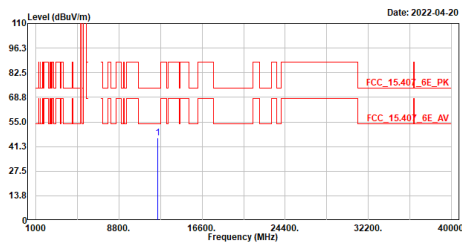


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12450.000	46.27	74.00	-27.73	41.55	4.72	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_6225MHz
TEST BY :Johnny

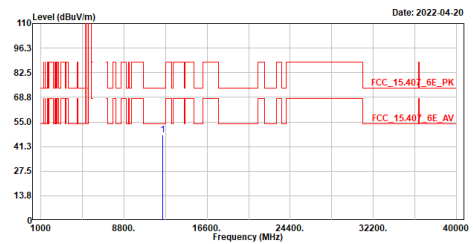


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12450.000	47.69	74.00	-26.31	42.97	4.72	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_6385MHz
TEST BY :Johnny

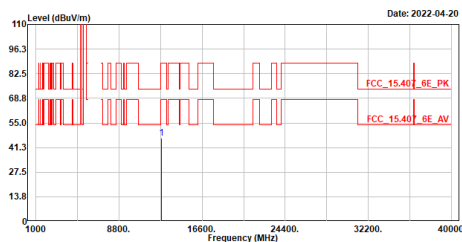


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12770.000	46.56	88.22	-41.66	41.37	5.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_6385MHz
TEST BY :Johnny

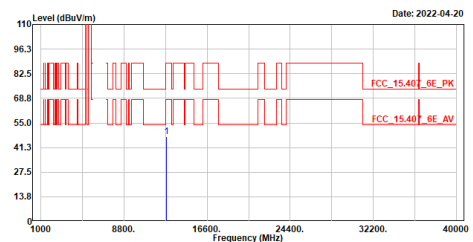

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12770.000	47.28	88.22	-40.94	42.09	5.19	Peak


Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_6465MHz
TEST BY :Johnny

Level (dBuV/m)

Date: 2022-04-20

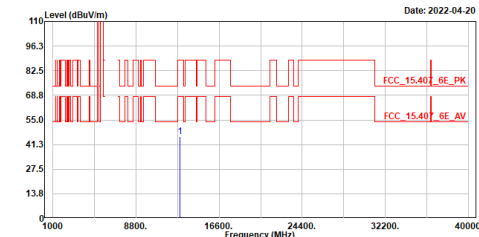

Frequency (MHz)

FCC 15.407.0E PK

FCC 15.407.0E AV

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12938.000	45.71	88.22	-42.51	48.25	5.46	Peak


Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_6465MHz
TEST BY :Johnny

Level (dBuV/m)

Date: 2022-04-20

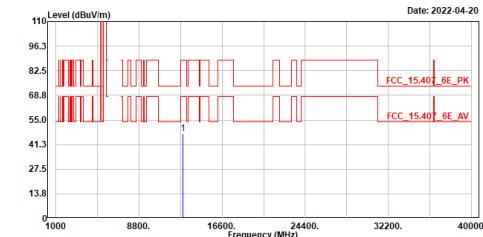

Frequency (MHz)

FCC 15.407.0E PK

FCC 15.407.0E AV

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12938.000	47.32	88.22	-40.90	41.86	5.46	Peak


Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_6545MHz
TEST BY :Johnny

Level (dBuV/m)

Date: 2022-04-20

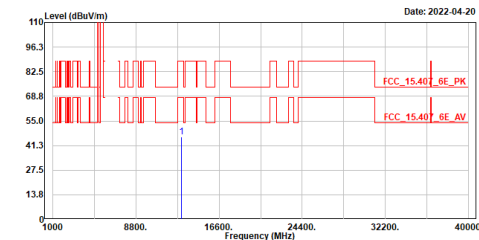

Frequency (MHz)

FCC 15.407.0E PK

FCC 15.407.0E AV

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13098.000	46.25	88.22	-41.97	48.73	5.52	Peak


Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_6545MHz
TEST BY :Johnny

Level (dBuV/m)

Date: 2022-04-20

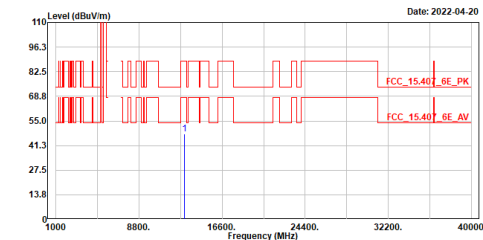

Frequency (MHz)

FCC 15.407.0E PK


FCC 15.407.0E AV

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13098.000	47.83	88.22	-40.39	42.31	5.52	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_6625MHz
TEST BY :Johnny

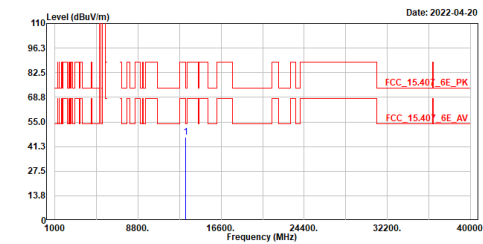


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13250.000	46.44	74.00	-27.56	41.12	5.32	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_6625MHz
TEST BY :Johnny

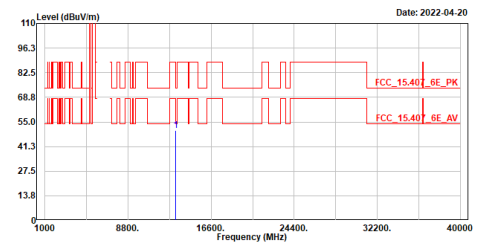


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13250.000	50.15	74.00	-23.85	44.83	5.32	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_6705MHz
TEST BY :Johnny

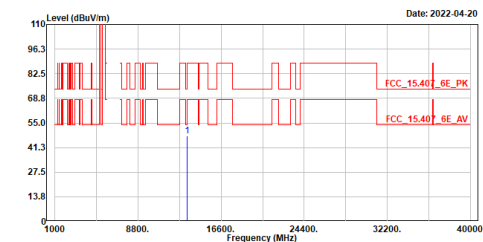


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13410.000	47.65	88.22	-40.57	42.02	5.63	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line





Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_6705MHz
TEST BY :Johnny




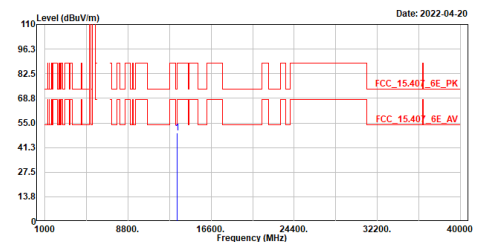


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13410.000	49.31	88.22	-38.91	43.68	5.63	Peak


Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

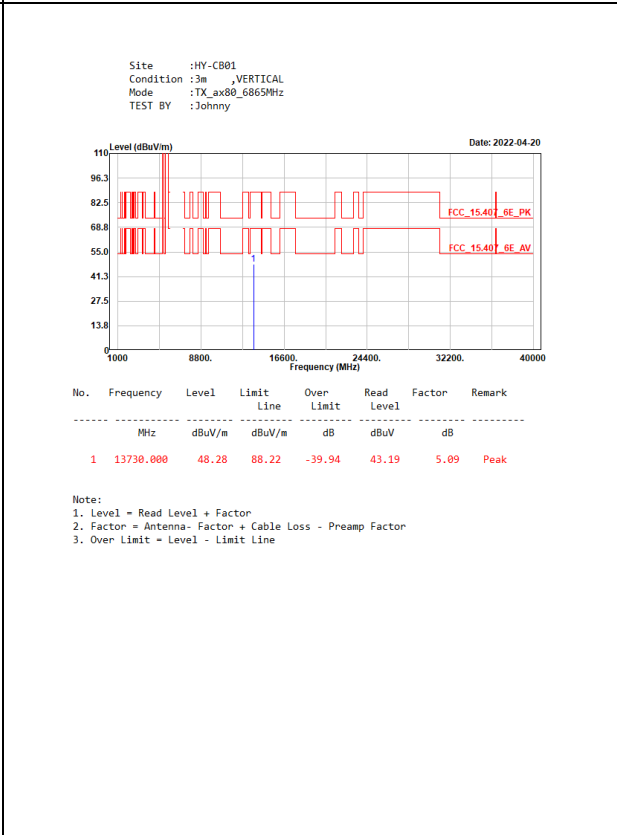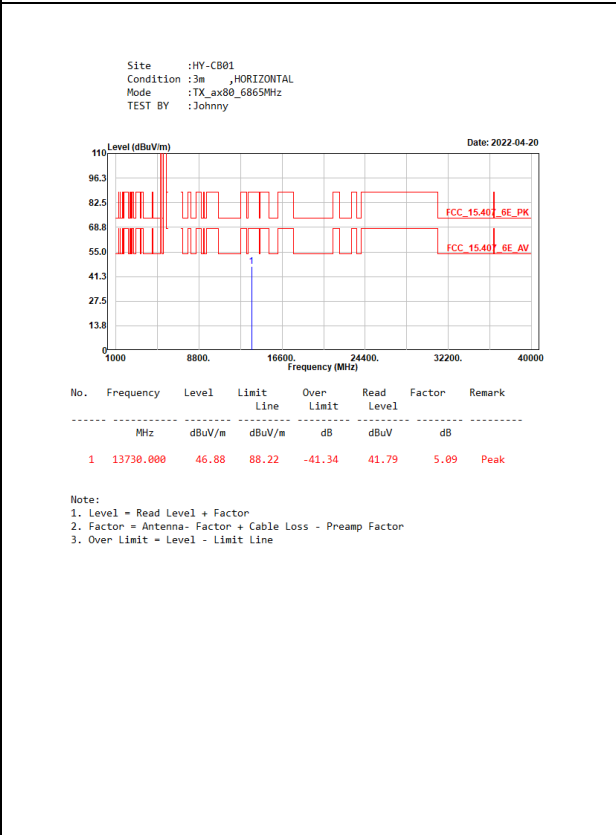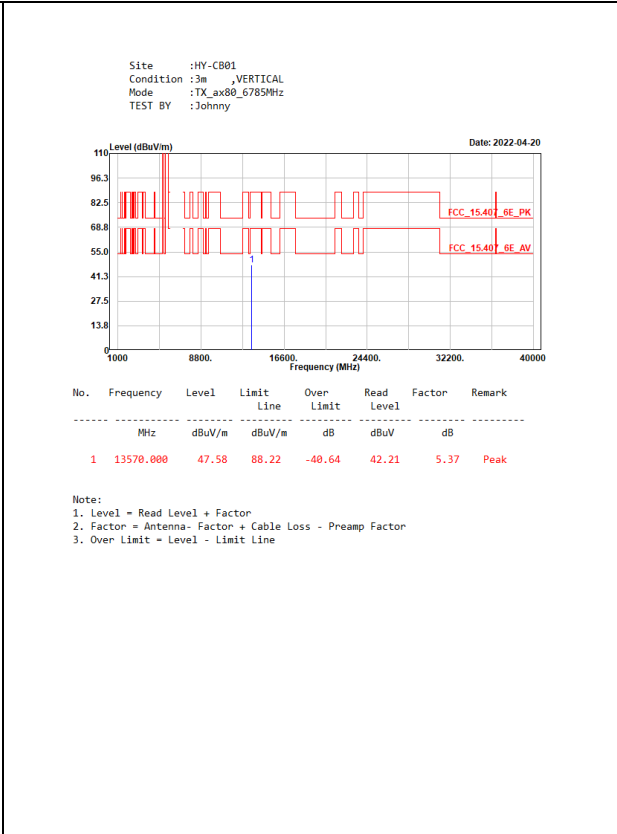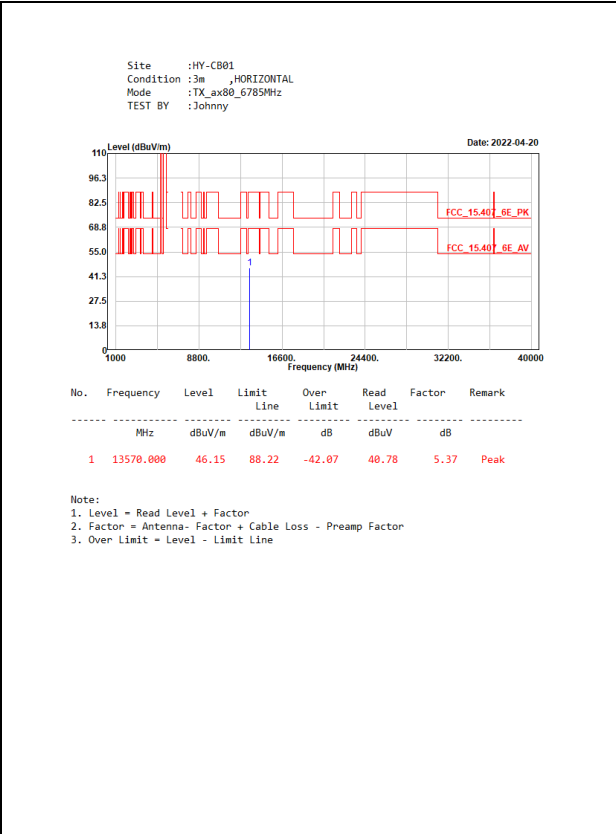

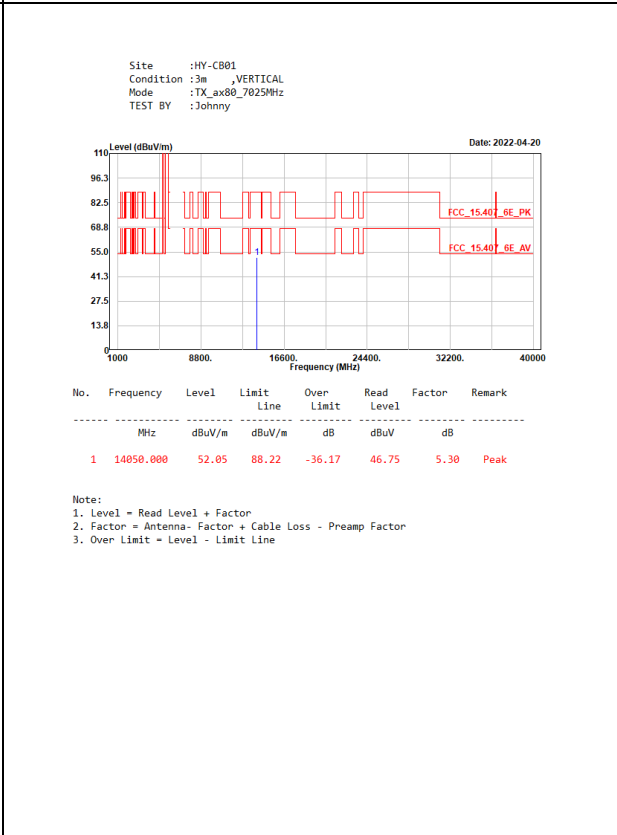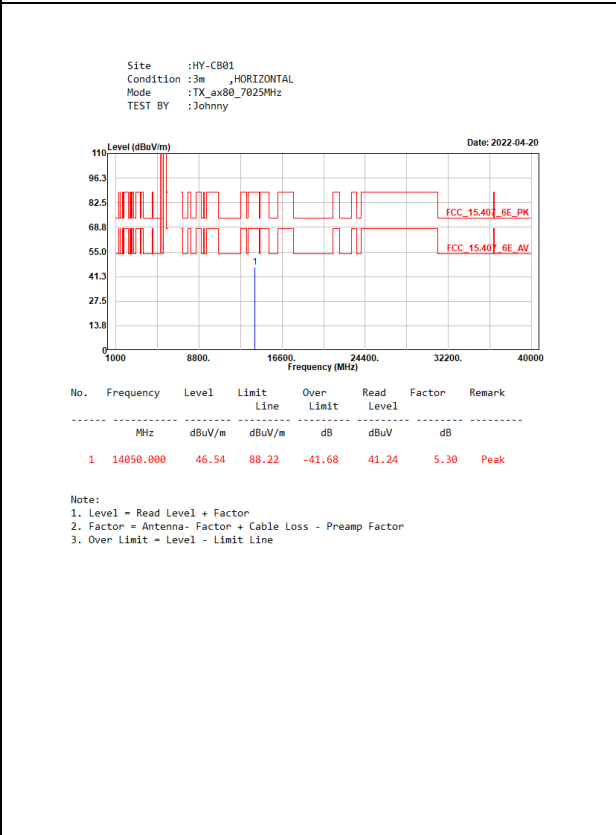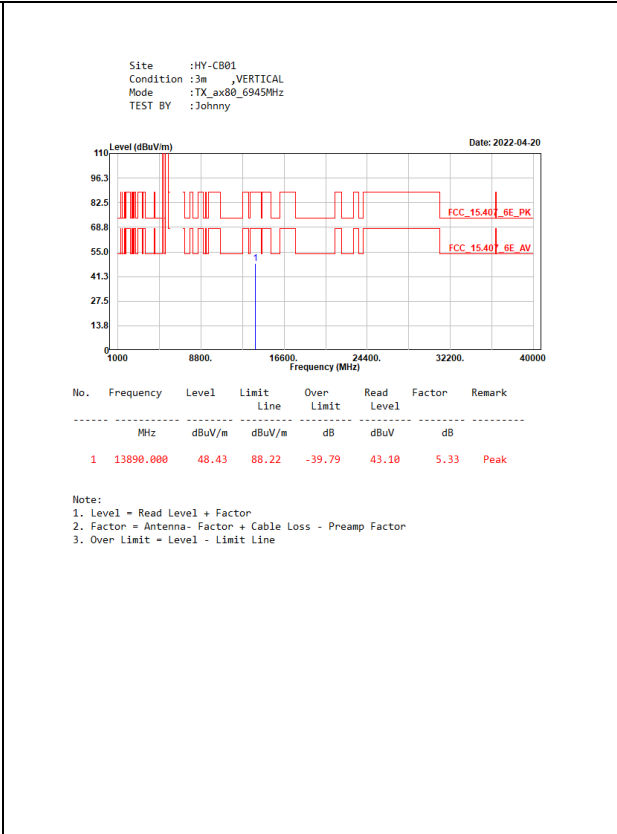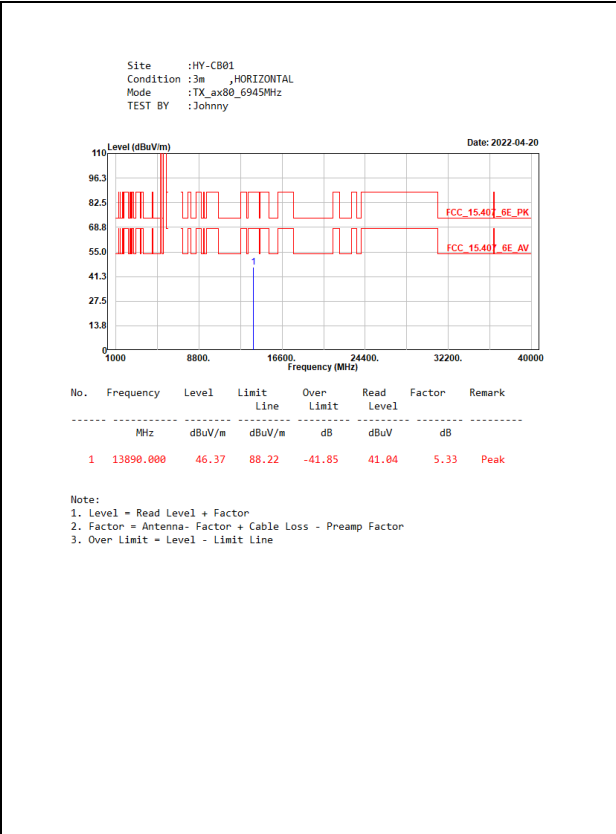

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax160_6185MHz
TEST BY :Johnny

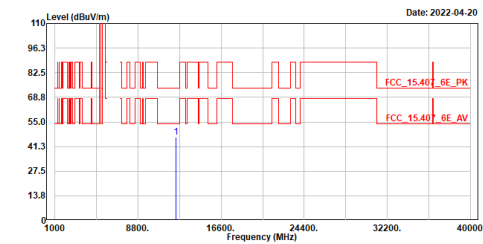


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12378.000	46.49	74.00	-27.51	41.71	4.78	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax160_6185MHz
TEST BY :Johnny

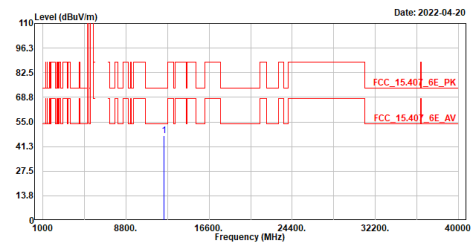


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12378.000	47.53	74.00	-26.47	42.75	4.78	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax160_6345MHz
TEST BY :Johnny

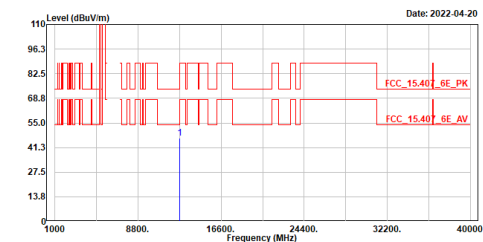


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12698.000	46.66	74.00	-27.34	41.54	5.12	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax160_6345MHz
TEST BY :Johnny

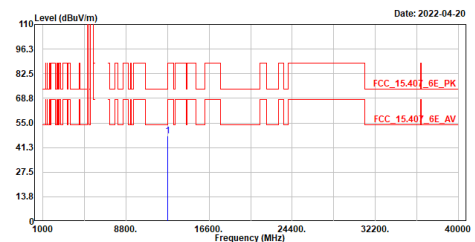

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12698.000	47.62	74.00	-26.38	42.50	5.12	Peak


Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax160_6505MHz
TEST BY :Johnny

Level (dBuV/m)

Date: 2022-04-20

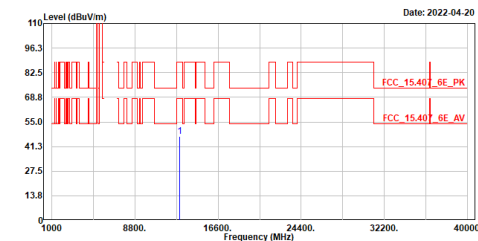

Frequency (MHz)

FCC_15.407_6E_PK

FCC_15.407_6E_AV


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13010.000	46.91	88.22	-41.31	41.35	5.56	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax160_6505MHz
TEST BY :Johnny

Level (dBuV/m)

Date: 2022-04-20

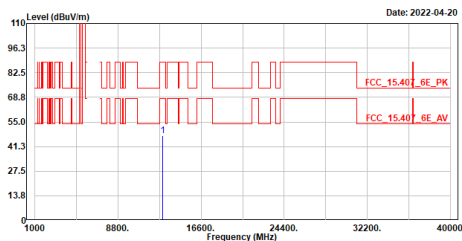

Frequency (MHz)

FCC_15.407_6E_PK

FCC_15.407_6E_AV


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13010.000	47.13	88.22	-41.09	41.57	5.56	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax160_6665MHz
TEST BY :Johnny

Level (dBuV/m)

Date: 2022-04-20

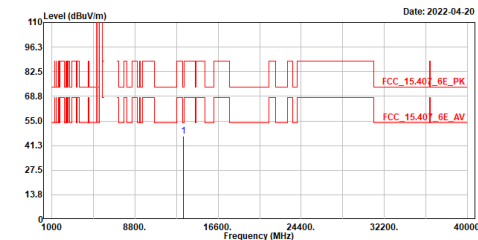

Frequency (MHz)

FCC_15.407_6E_PK

FCC_15.407_6E_AV


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13330.000	46.45	74.00	-27.55	40.98	5.47	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax160_6665MHz
TEST BY :Johnny

Level (dBuV/m)

Date: 2022-04-20

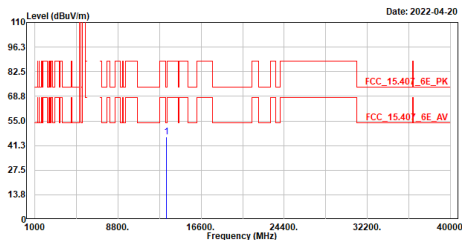





Frequency (MHz)

FCC_15.407_6E_PK

FCC_15.407_6E_AV


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13330.000	46.00	74.00	-28.00	40.53	5.47	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

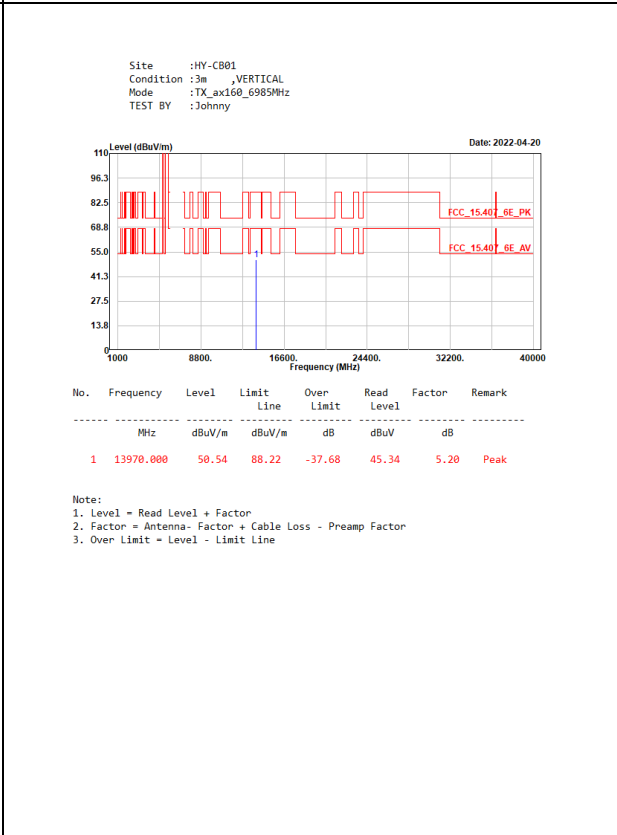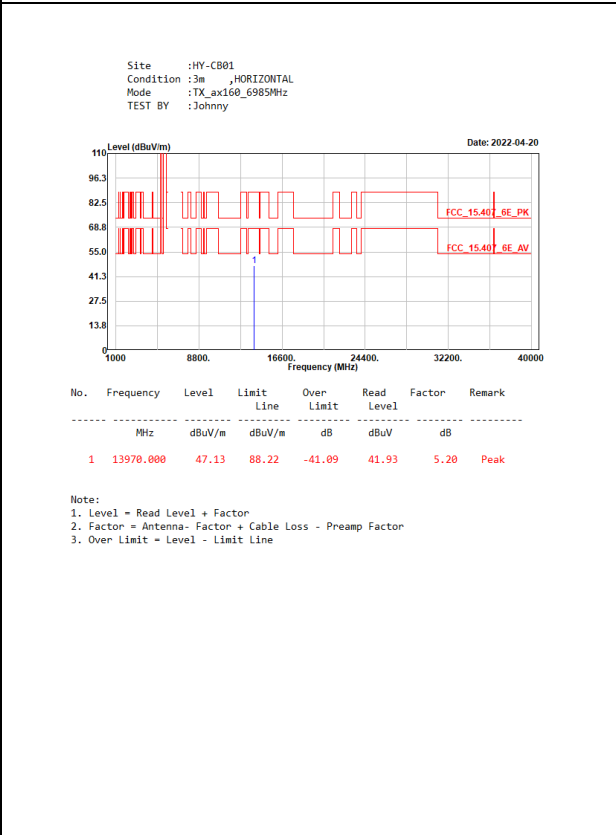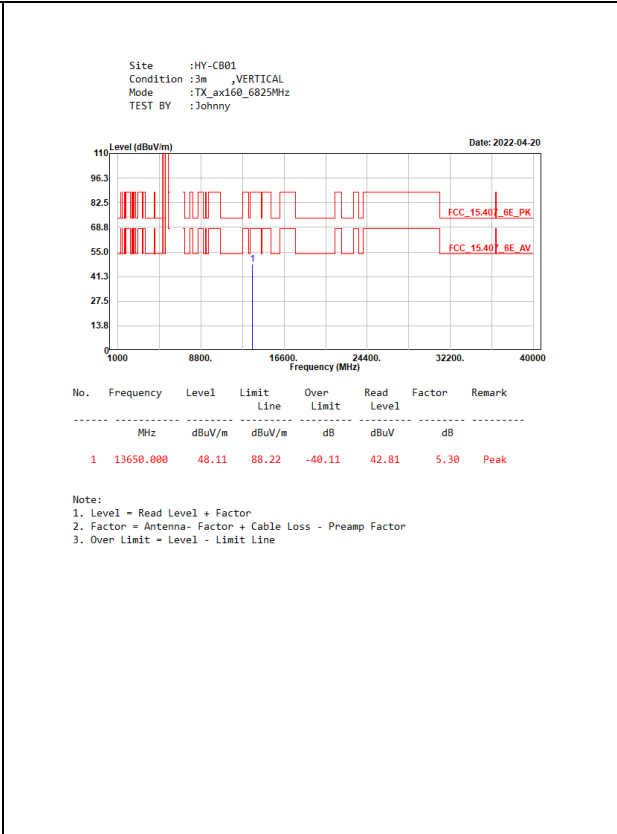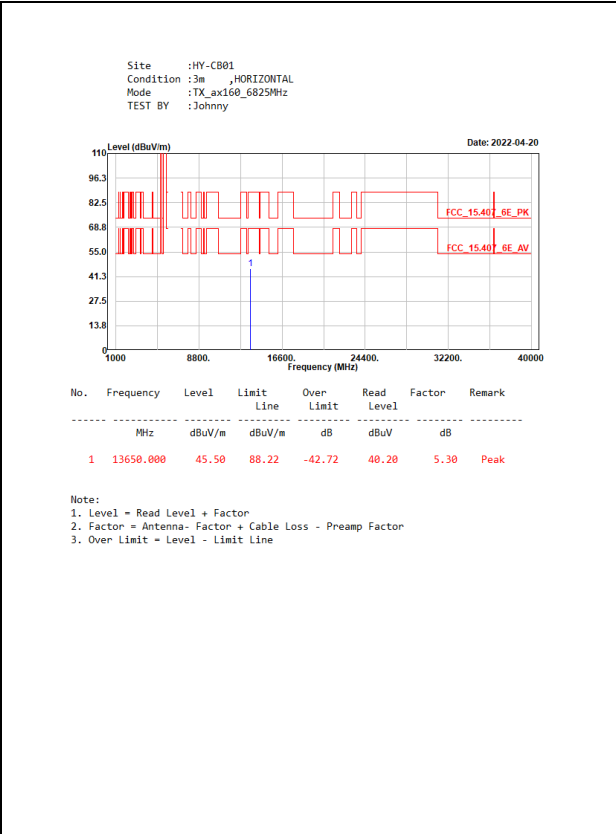

NSS-4

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_6115MHz
TEST BY :Caster

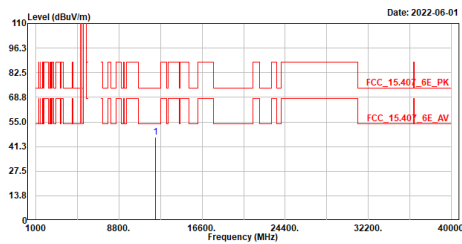


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12238.000	46.64	74.00	-27.36	41.76	4.88	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_6115MHz
TEST BY :Caster

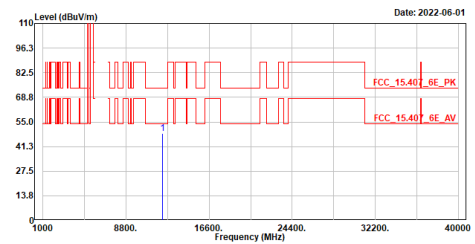


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12238.000	48.75	74.00	-25.25	43.87	4.88	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_6255MHz
TEST BY :Caster

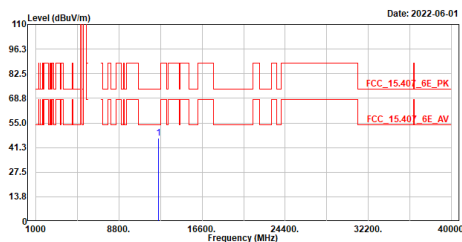


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12510.000	46.49	74.00	-27.51	41.74	4.75	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_6255MHz
TEST BY :Caster

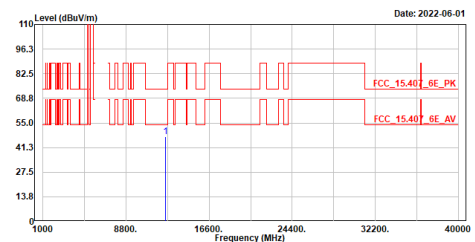


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12510.000	47.19	74.00	-26.81	42.44	4.75	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_6415MHz
TEST BY :Caster

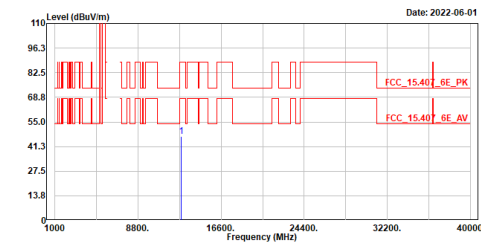


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12830.000	47.02	88.22	-41.20	41.74	5.28	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_6415MHz
TEST BY :Caster

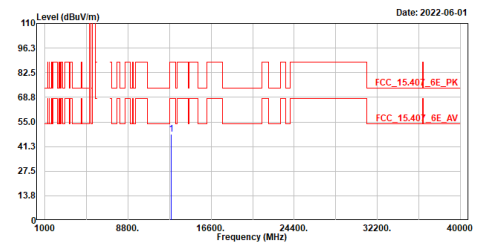


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12830.000	47.96	88.22	-40.26	42.68	5.28	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_6435MHz
TEST BY :Caster

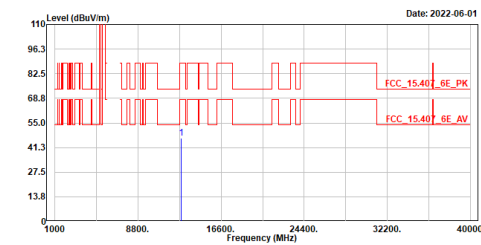


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12870.000	46.59	88.22	-41.63	41.23	5.36	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_6435MHz
TEST BY :Caster

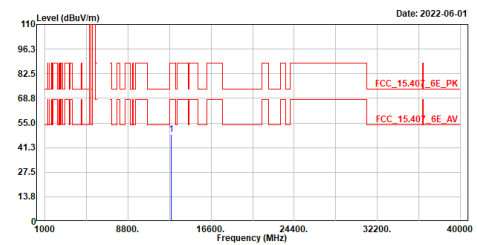


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12870.000	48.70	88.22	-39.52	43.34	5.36	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_6475MHz
TEST BY :Caster

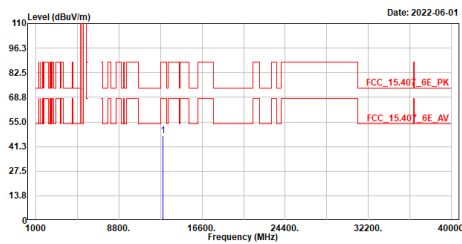


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12958.000	47.51	88.22	-40.71	42.02	5.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_6475MHz
TEST BY :Caster

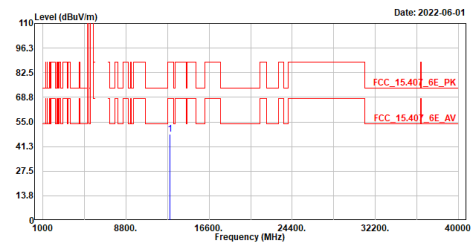


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12958.000	48.22	88.22	-40.00	42.73	5.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_6515MHz
TEST BY :Caster

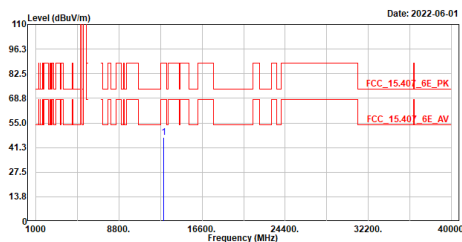


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13030.000	46.70	88.22	-41.52	41.14	5.56	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line





Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_6515MHz
TEST BY :Caster




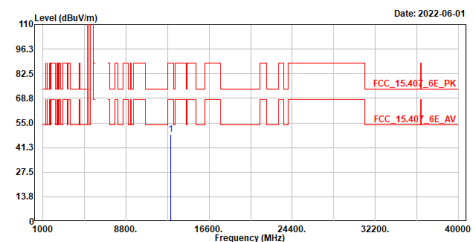


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13030.000	48.52	88.22	-39.70	42.96	5.56	Peak


Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

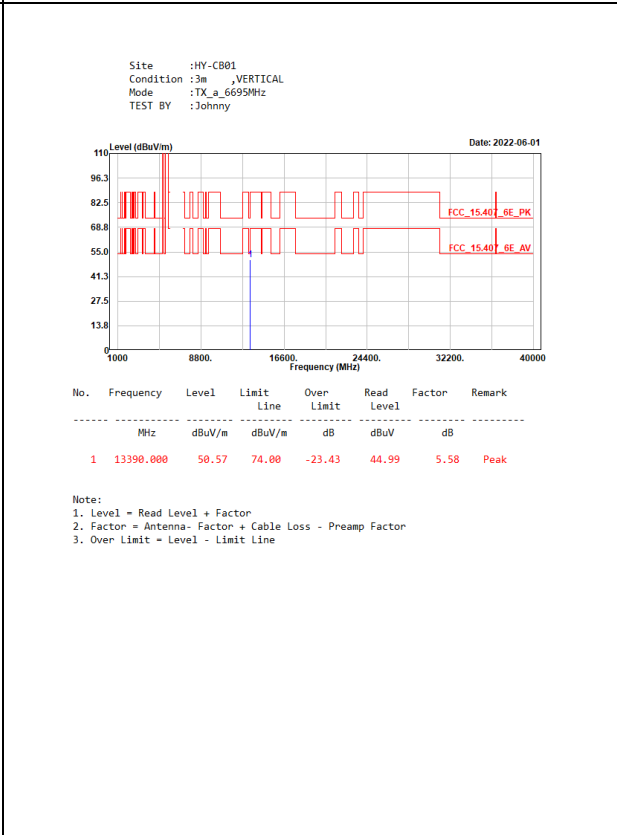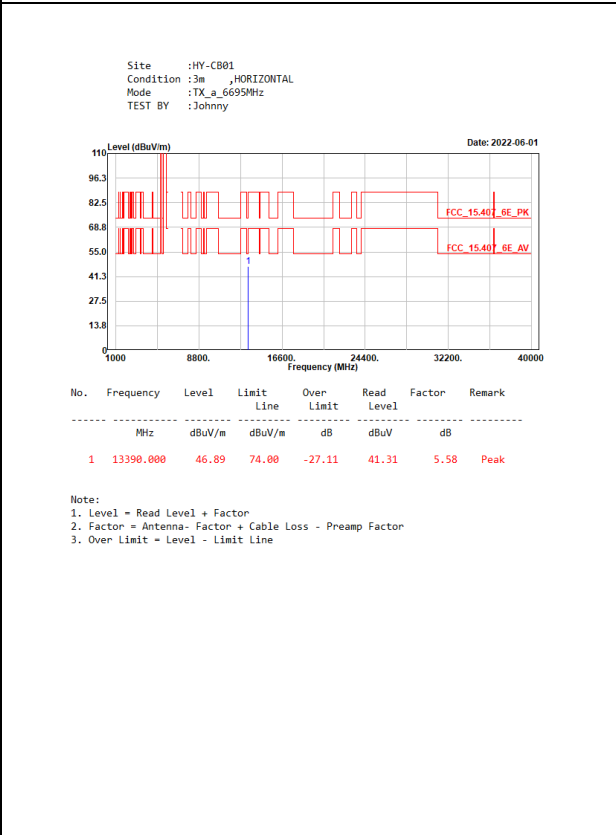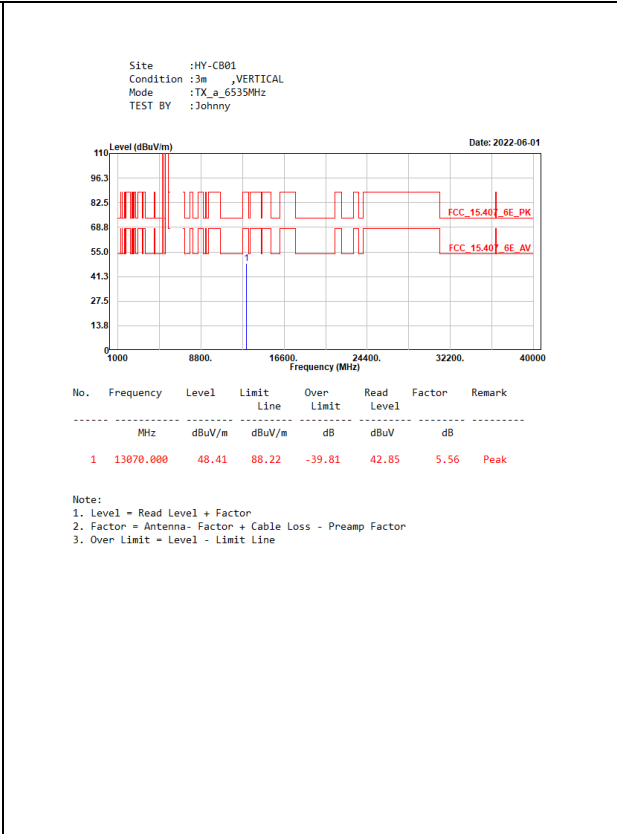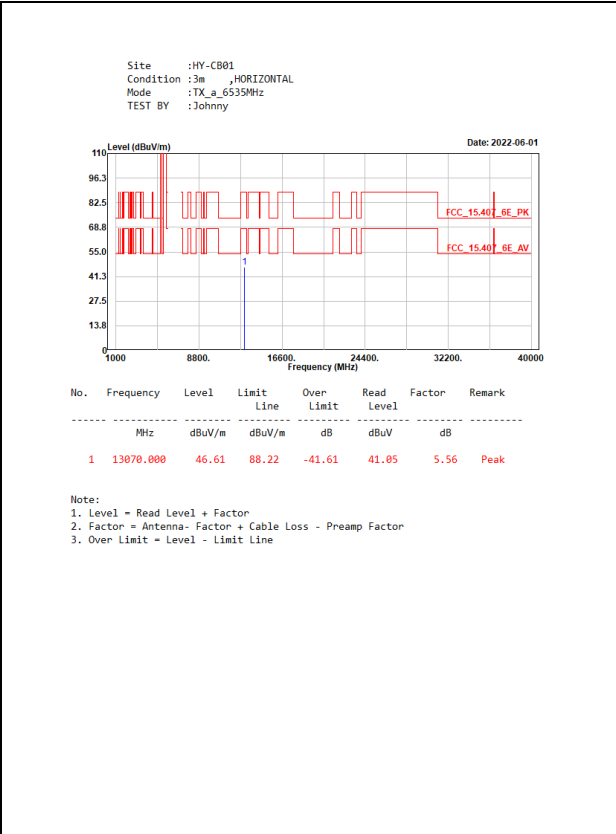

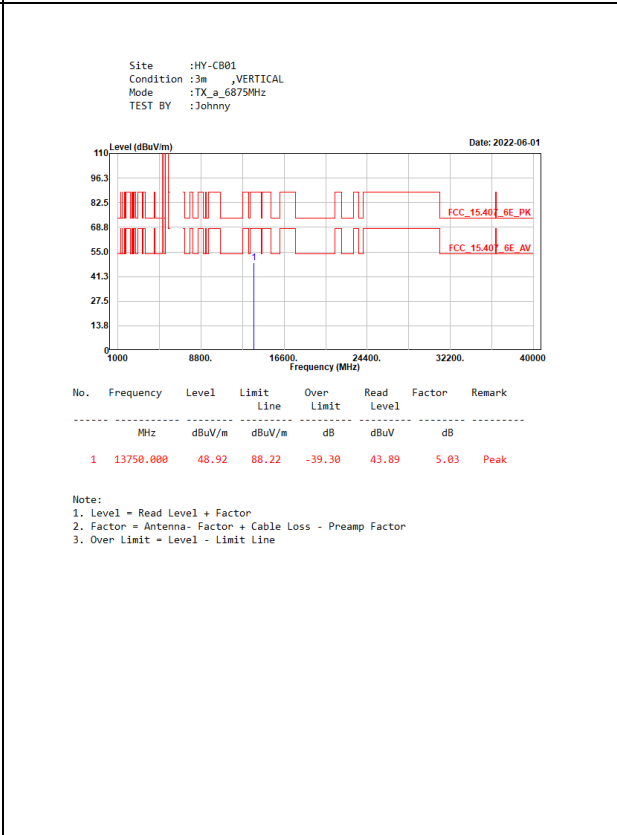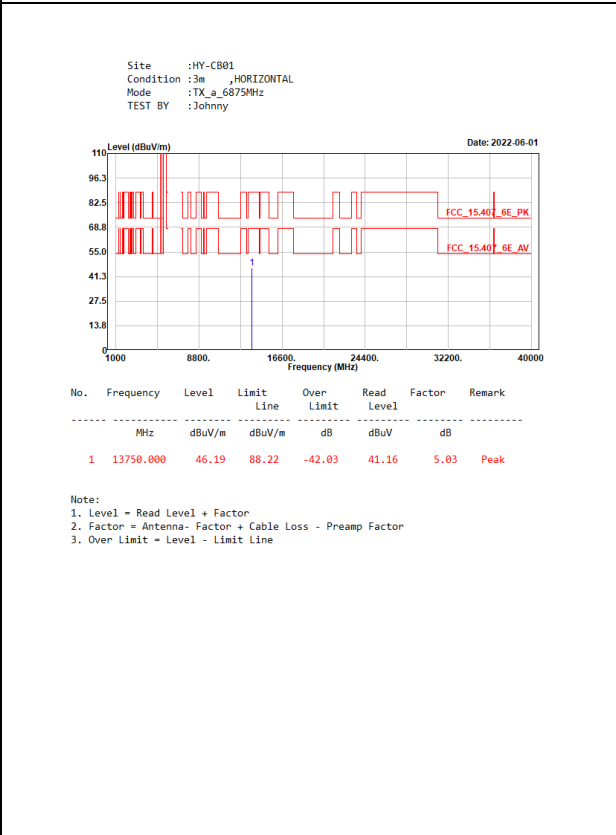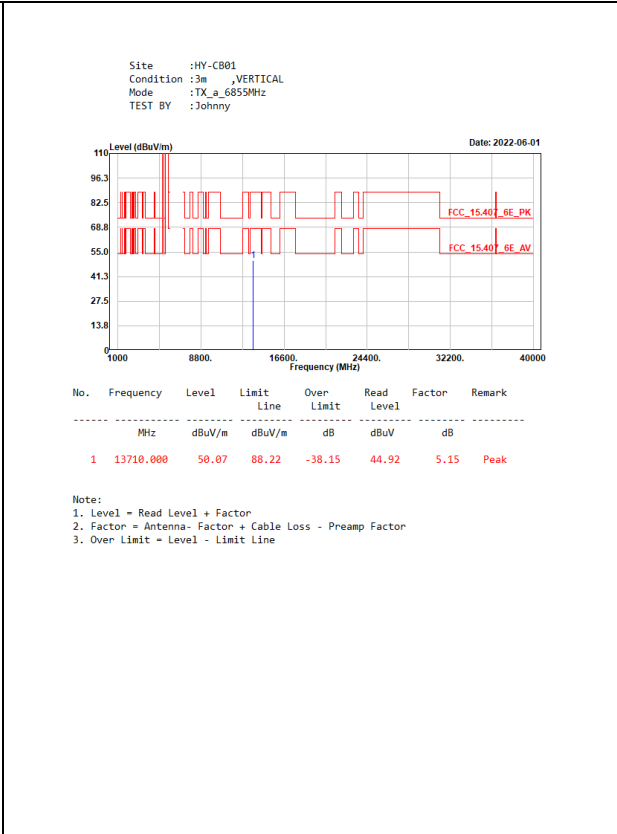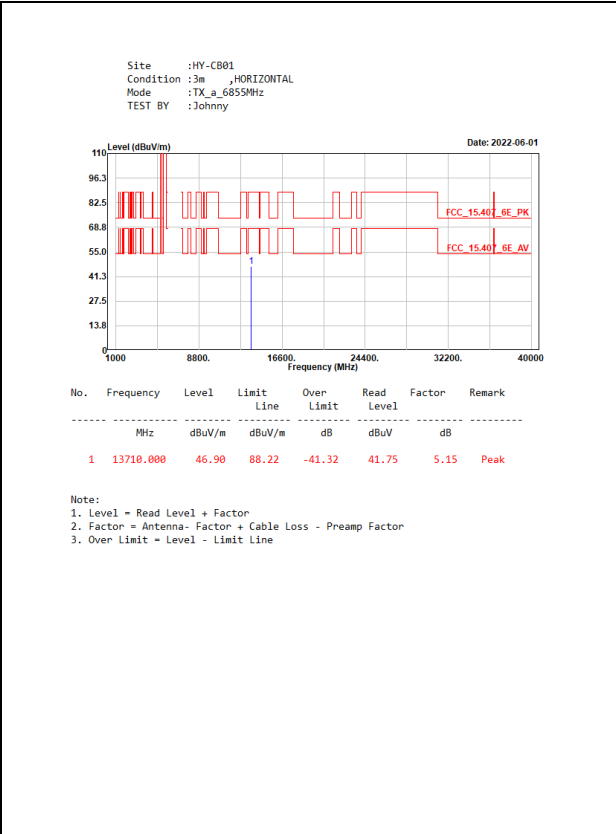

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_6895MHz
TEST BY :Johnny

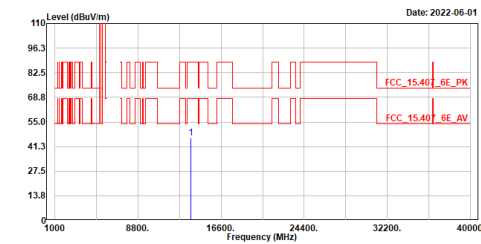


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13790.000	46.12	88.22	-42.10	48.97	5.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_6895MHz
TEST BY :Johnny

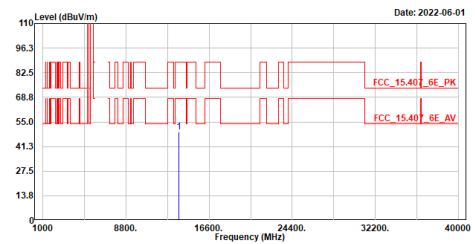


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13790.000	49.42	88.22	-38.80	44.27	5.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_7015MHz
TEST BY :Johnny

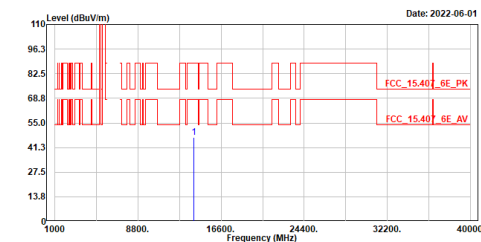


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	14030.000	46.75	88.22	-41.47	41.51	5.24	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_7015MHz
TEST BY :Johnny

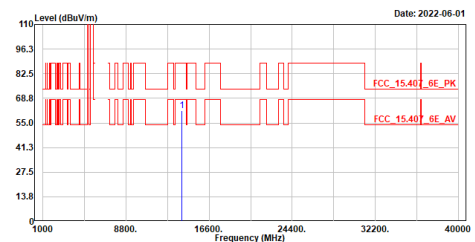


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	14030.000	61.92	88.22	-26.30	56.68	5.24	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_7095MHz
TEST BY :Johnny

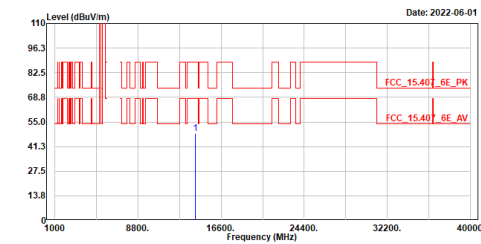

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	14190.000	48.40	88.22	-39.82	42.79	5.61	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_7095MHz
TEST BY :Johnny

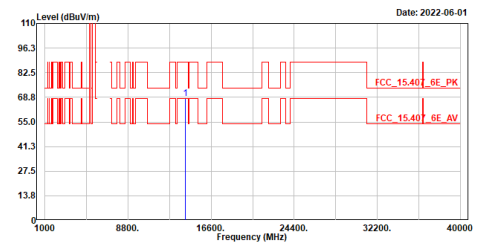

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	14190.000	68.16	88.22	-20.06	62.55	5.61	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_6115MHz
TEST BY :Johnny

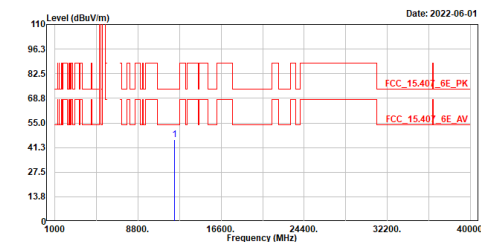

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	12230.000	45.76	74.00	-28.24	40.88	4.88	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_6115MHz
TEST BY :Johnny

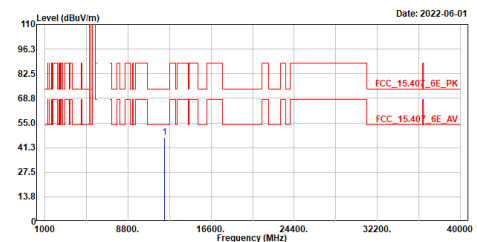

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	12230.000	46.98	74.00	-27.02	42.10	4.88	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_6255MHz
TEST BY :Johnny

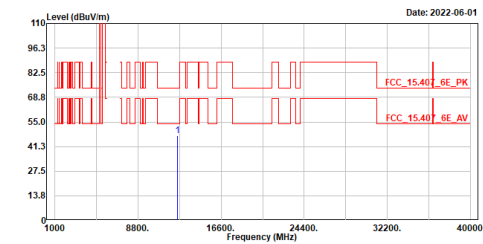

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12510.000	47.16	74.00	-26.84	42.41	4.75	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_6255MHz
TEST BY :Johnny

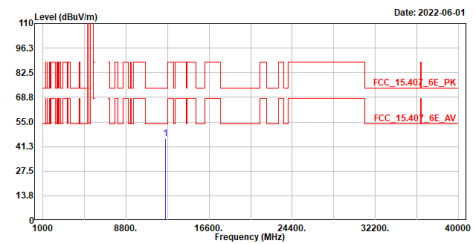

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12510.000	45.72	74.00	-28.28	48.97	4.75	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_6415MHz
TEST BY :Johnny

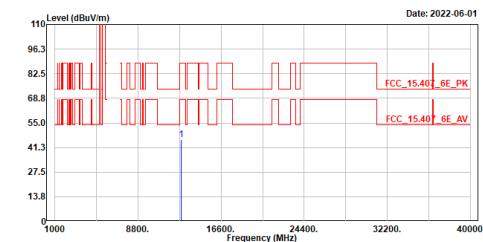

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12830.000	45.57	88.22	-42.65	48.29	5.28	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_6415MHz
TEST BY :Johnny

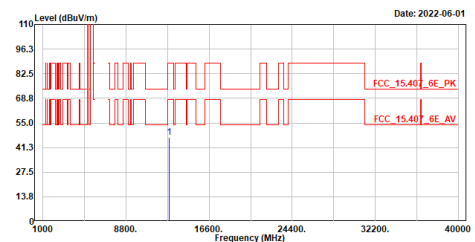

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12830.000	47.11	88.22	-41.11	41.83	5.28	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_6435MHz
TEST BY :Johnny

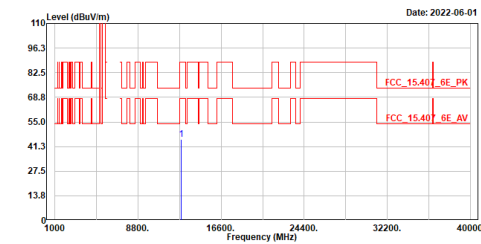


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12870.000	45.37	88.22	-42.85	48.01	5.36	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_6435MHz
TEST BY :Johnny

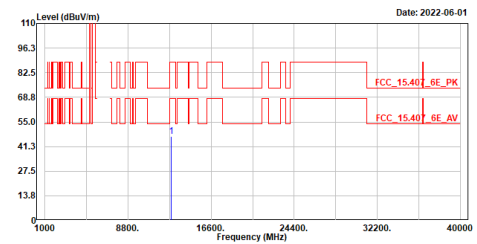


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12870.000	46.99	88.22	-41.23	41.63	5.36	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_6475MHz
TEST BY :Johnny

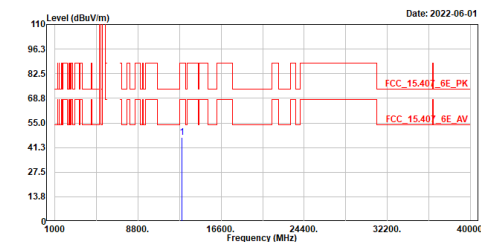


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12950.000	46.92	88.22	-41.30	41.43	5.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_6475MHz
TEST BY :Johnny

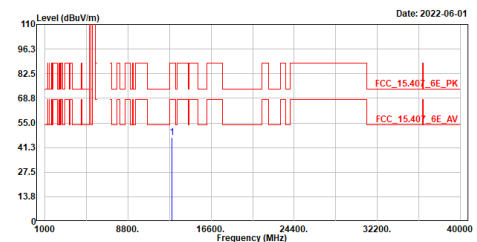


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12950.000	47.04	88.22	-41.18	41.55	5.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_6515MHz
TEST BY :Johnny

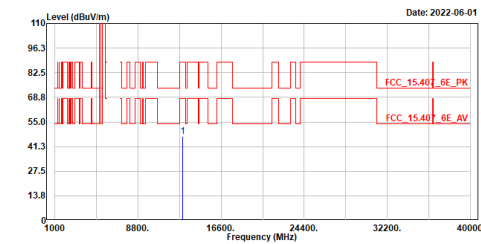

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	13030.000	46.93	88.22	-41.29	41.37	5.56	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_6515MHz
TEST BY :Johnny

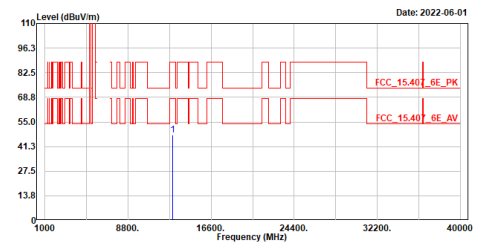

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	13030.000	47.76	88.22	-40.46	42.29	5.56	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_6535MHz
TEST BY :Johnny

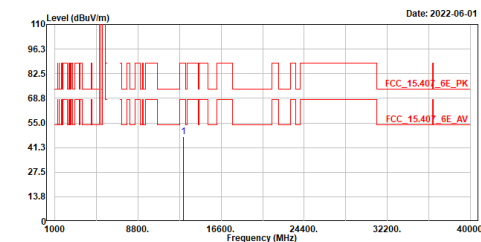

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	13070.000	47.16	88.22	-41.06	41.60	5.56	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_6535MHz
TEST BY :Johnny

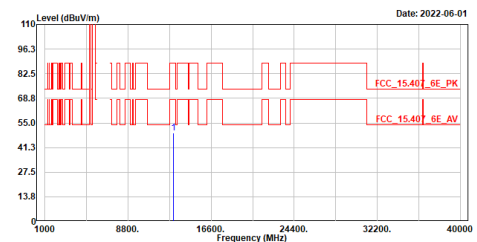

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	13070.000	49.28	88.22	-38.94	43.72	5.56	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_6695MHz
TEST BY :Johnny

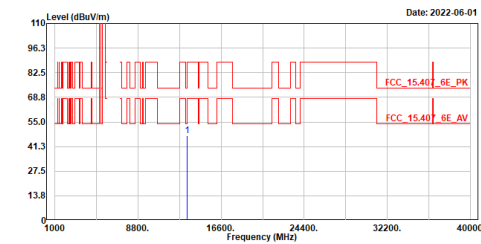


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13390.000	47.34	74.00	-26.66	41.76	5.58	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_6695MHz
TEST BY :Johnny

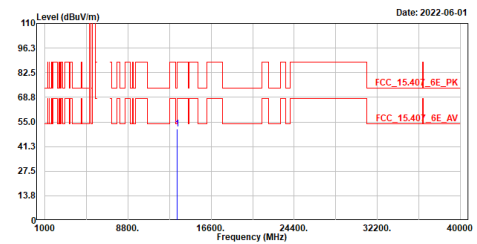


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13390.000	50.92	74.00	-23.08	45.34	5.58	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_6855MHz
TEST BY :Johnny

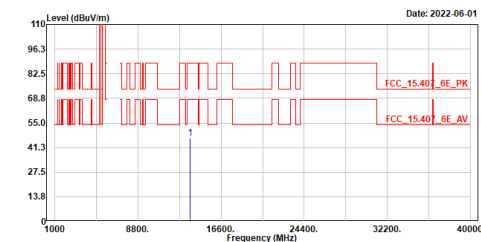


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13710.000	46.47	88.22	-41.75	41.32	5.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_6855MHz
TEST BY :Johnny

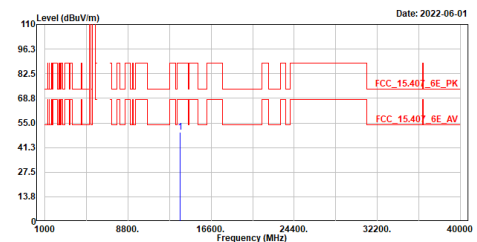


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13710.000	49.90	88.22	-38.32	44.75	5.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_6875MHz
TEST BY :Johnny

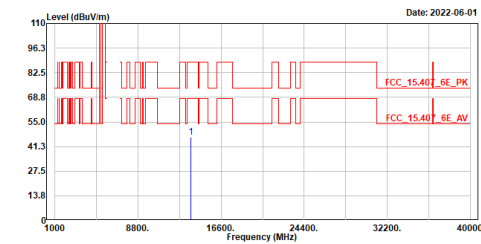


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13750.000	46.68	88.22	-41.54	41.65	5.03	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_6875MHz
TEST BY :Johnny

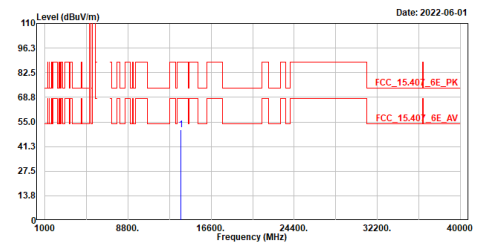


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13750.000	50.67	88.22	-37.55	45.64	5.03	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_6895MHz
TEST BY :Johnny

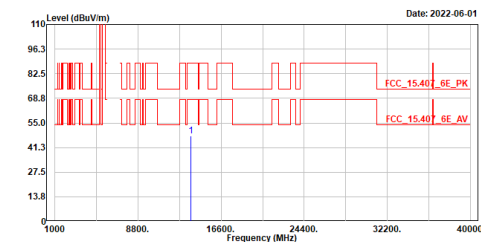


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13790.000	47.67	88.22	-40.55	42.52	5.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_6895MHz
TEST BY :Johnny

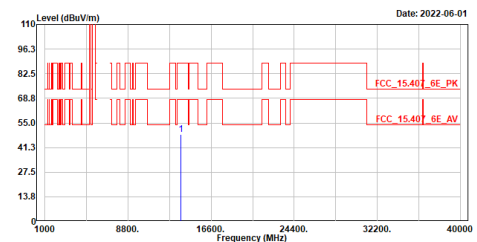


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13790.000	48.62	88.22	-39.60	43.47	5.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_7015MHz
TEST BY :Johnny

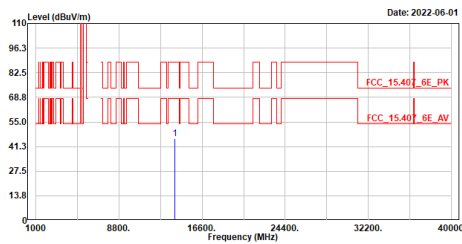

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	14030.000	45.68	88.22	-42.54	48.44	5.24	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_7015MHz
TEST BY :Johnny

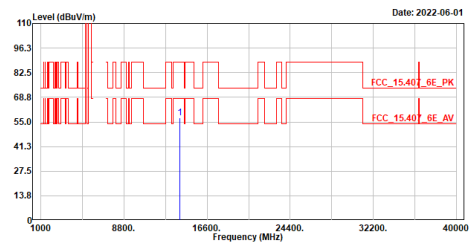

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	14030.000	57.34	88.22	-30.88	52.10	5.24	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_7095MHz
TEST BY :Johnny

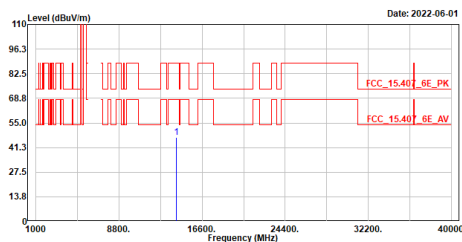

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	14190.000	46.79	88.22	-41.43	41.18	5.61	Peak





Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line





Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_7095MHz
TEST BY :Johnny




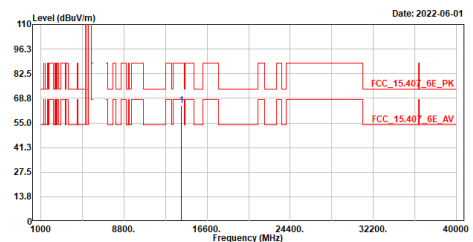


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	14190.000	64.80	88.22	-23.42	59.19	5.61	Peak


Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

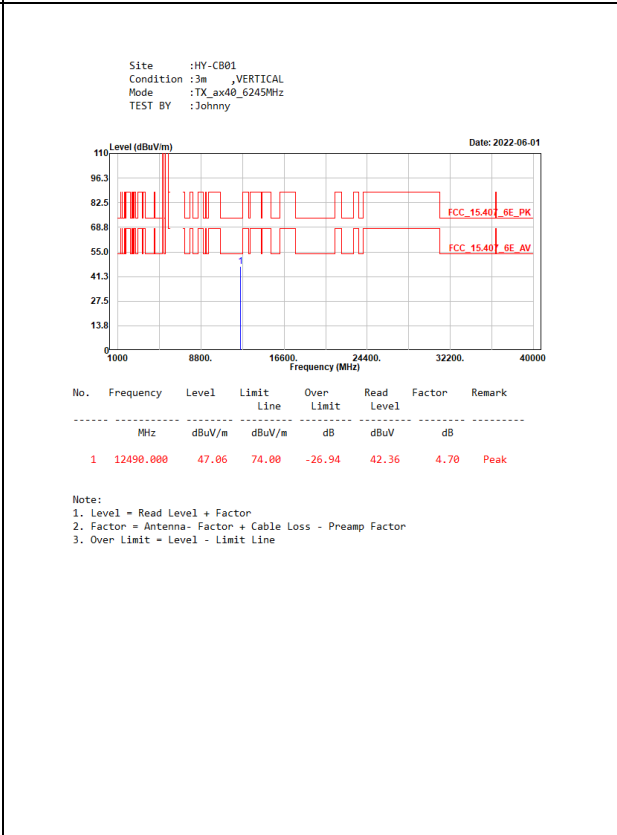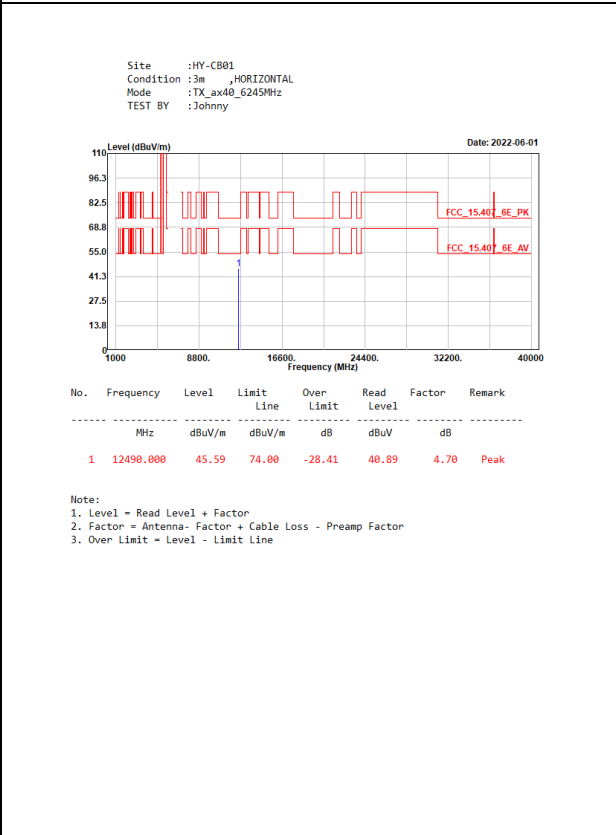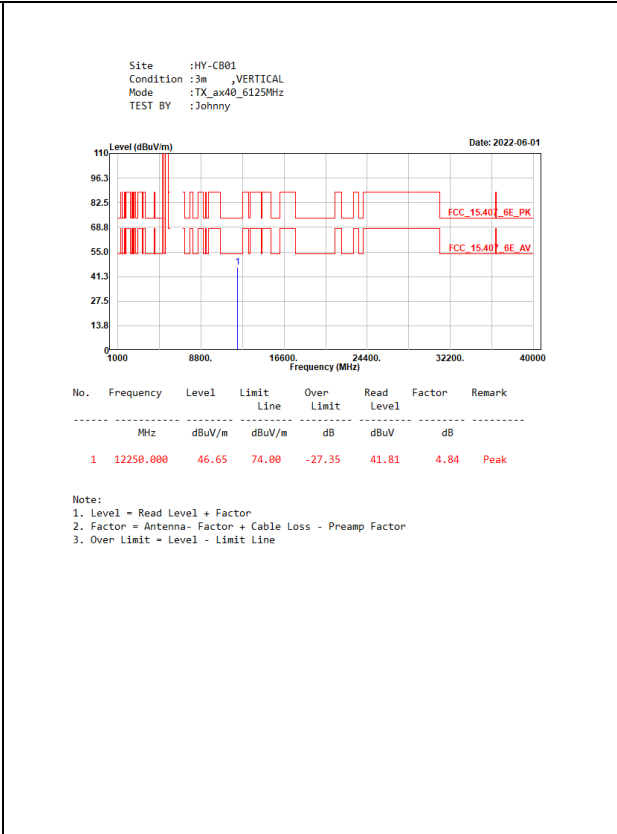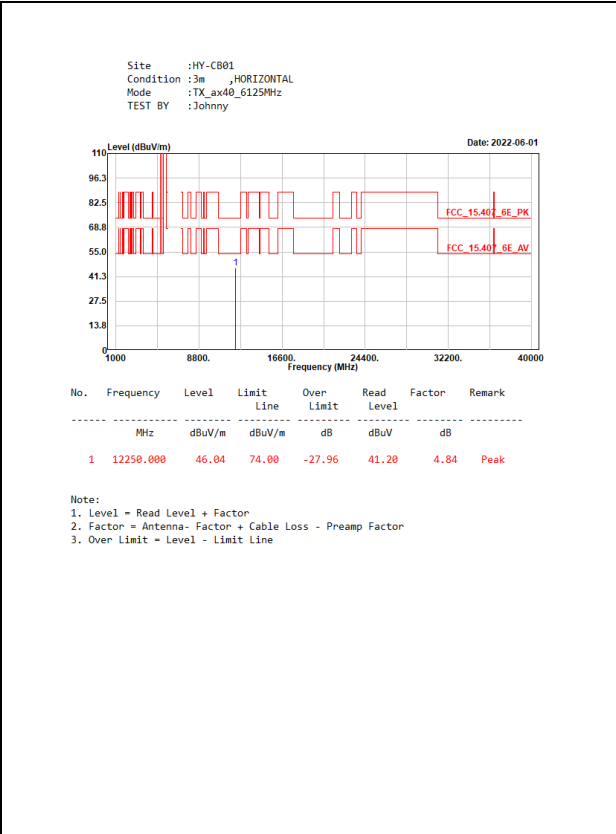

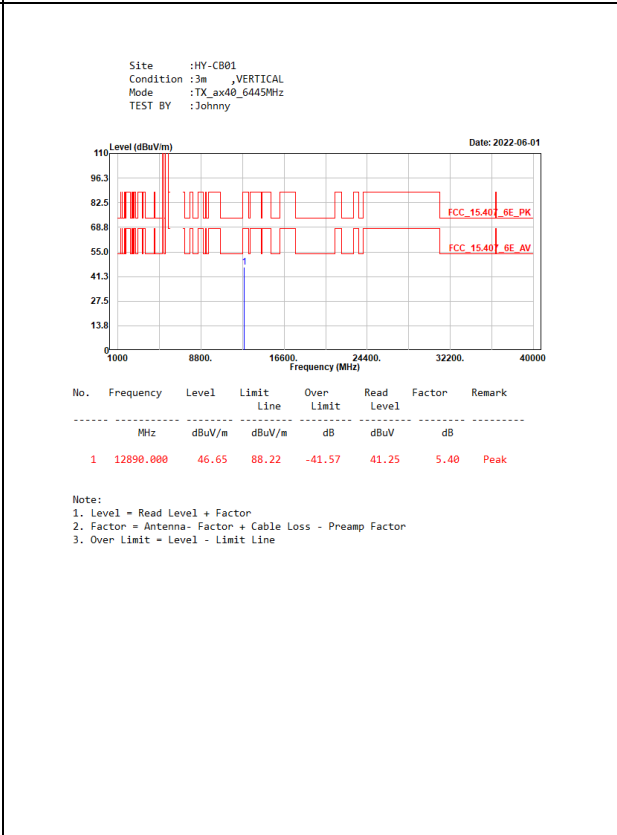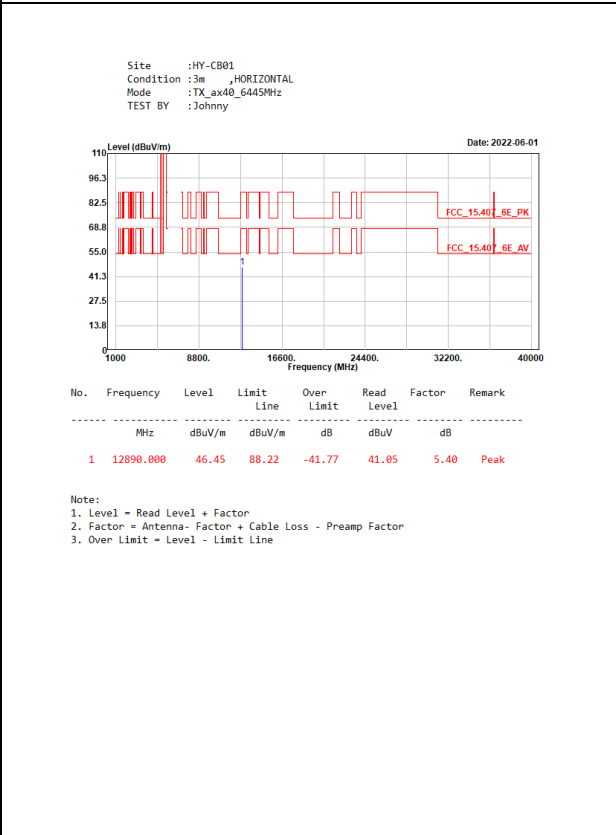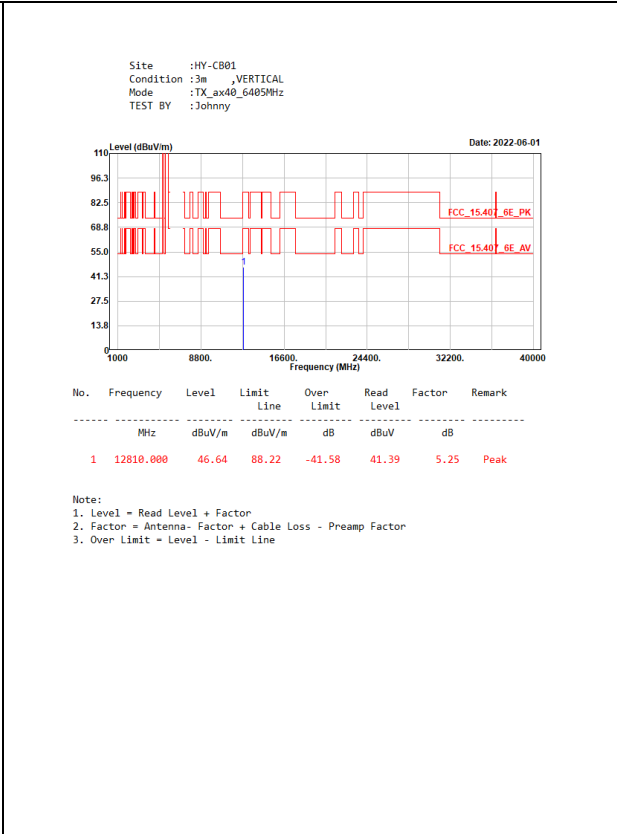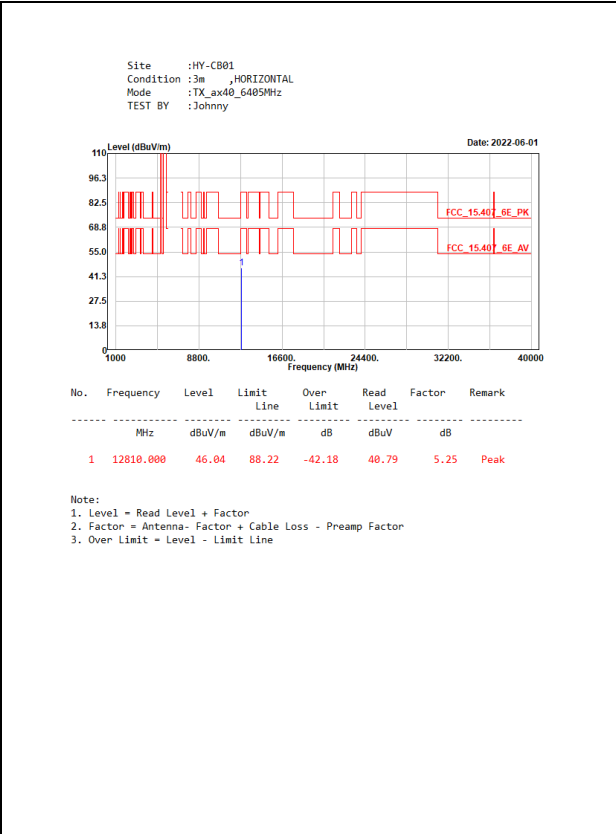

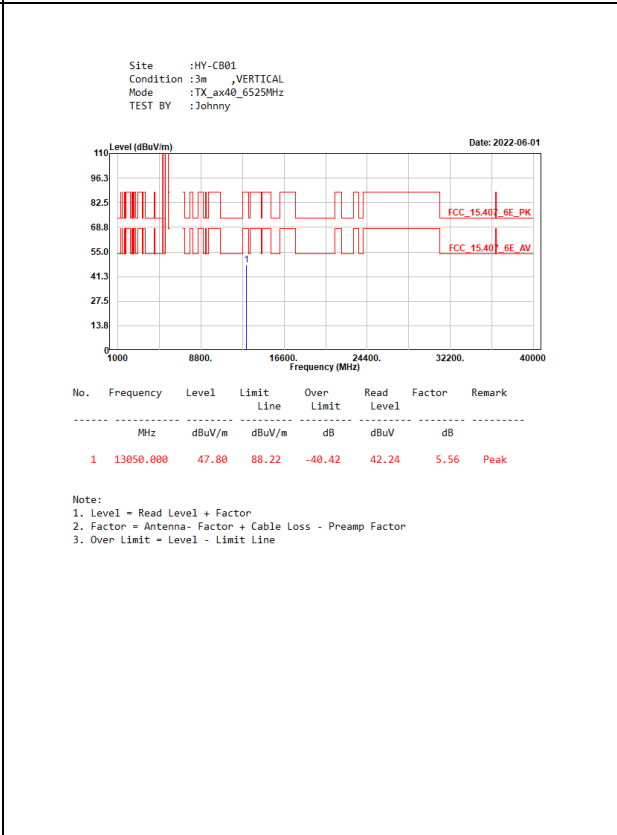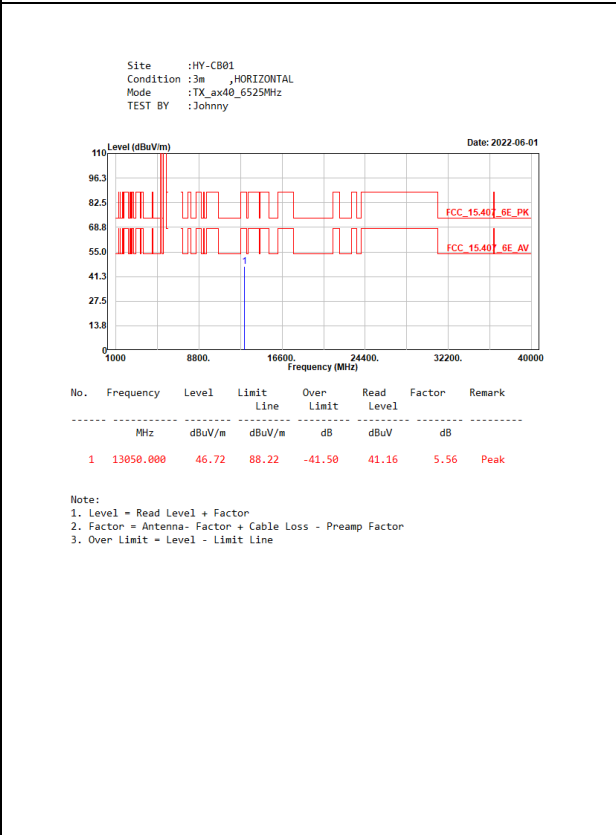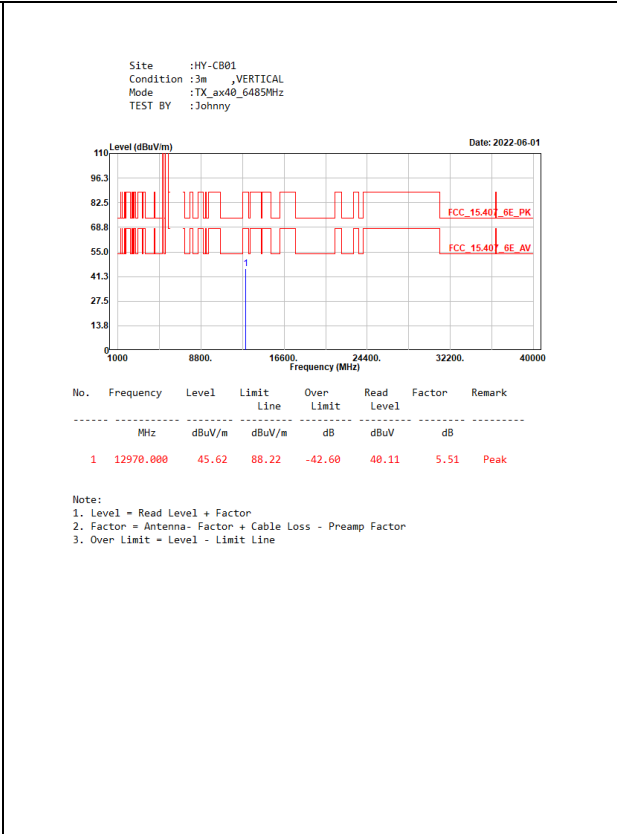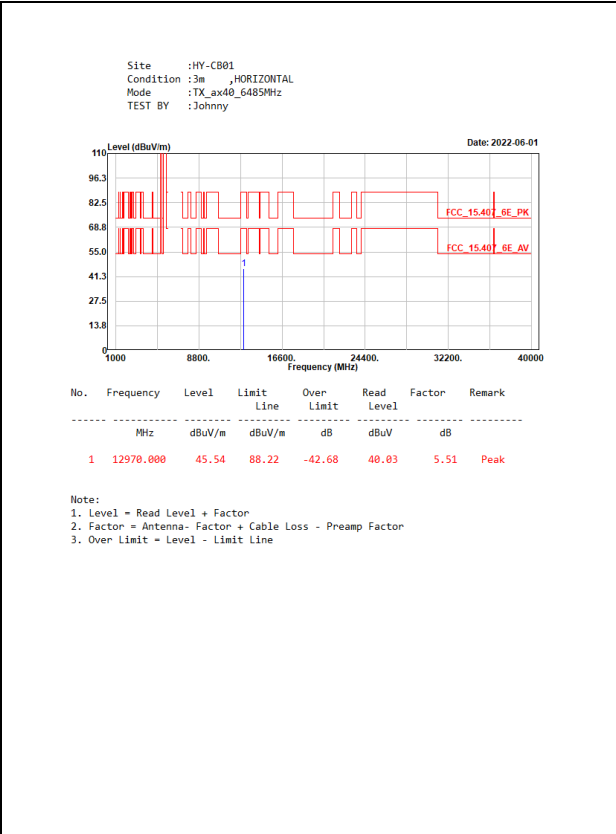

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_6565MHz
TEST BY :Johnny

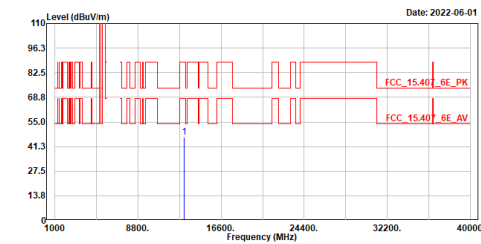


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	13130.000	46.39	88.22	-41.83	48.97	5.42	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_6565MHz
TEST BY :Johnny

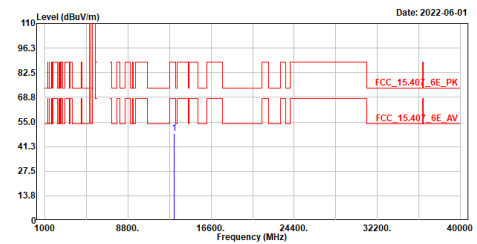


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	13130.000	48.50	88.22	-39.72	43.08	5.42	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_6725MHz
TEST BY :Johnny

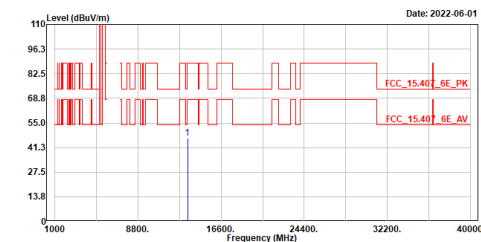


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	13450.000	46.45	88.22	-41.77	48.92	5.53	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_6725MHz
TEST BY :Johnny

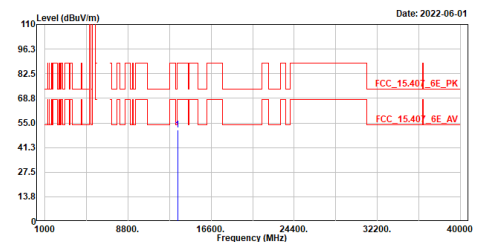


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	13450.000	50.92	88.22	-37.30	45.39	5.53	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_6845MHz
TEST BY :Johnny

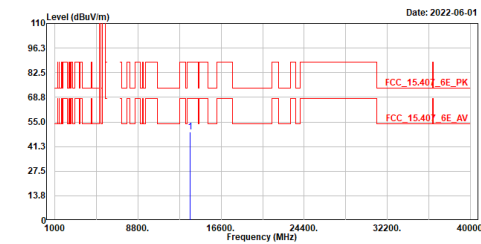


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13690.000	49.51	88.22	-38.71	44.30	5.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_6845MHz
TEST BY :Johnny

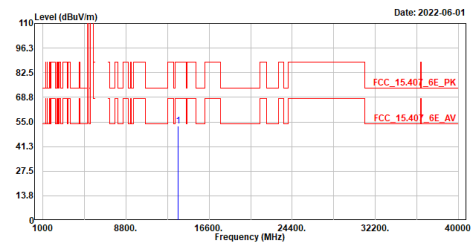


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13690.000	52.56	88.22	-35.66	47.35	5.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_6885MHz
TEST BY :Johnny

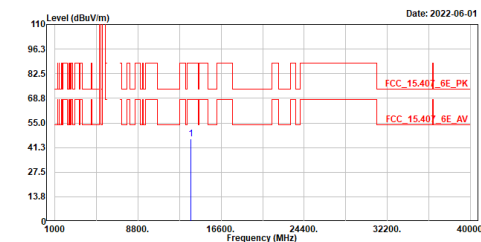


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13770.000	46.00	88.22	-42.22	40.90	5.10	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_6885MHz
TEST BY :Johnny

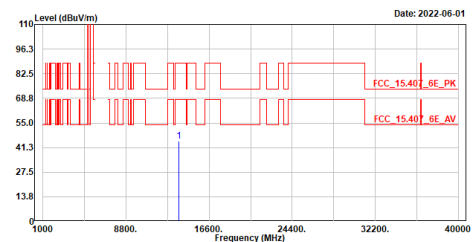


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13770.000	44.94	88.22	-43.28	39.84	5.10	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_6925MHz
TEST BY :Johnny

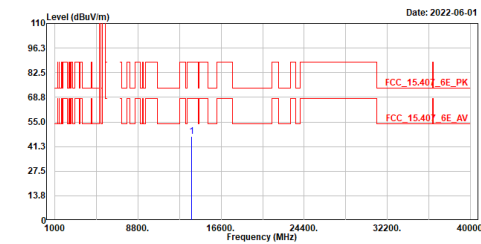


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	13850.000	47.11	88.22	-41.11	41.77	5.34	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_6925MHz
TEST BY :Johnny

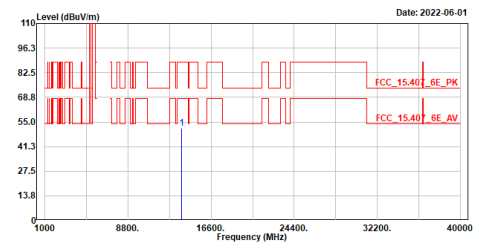


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	13850.000	51.47	88.22	-36.75	46.13	5.34	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_7005MHz
TEST BY :Johnny

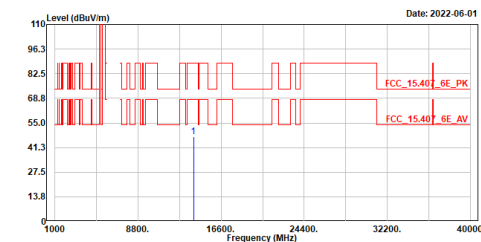


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	14010.000	47.23	88.22	-40.99	42.06	5.17	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_7005MHz
TEST BY :Johnny

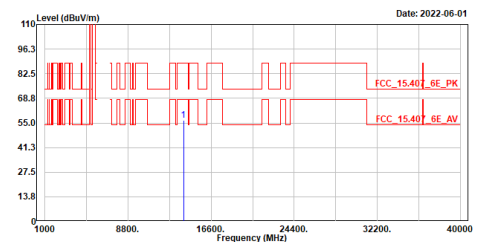


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	14010.000	56.39	88.22	-31.83	51.22	5.17	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_7885MHz
TEST BY :Johnny

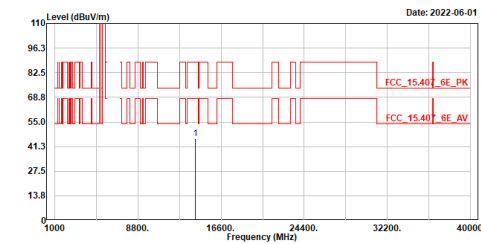


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	14178.000	45.62	88.22	-42.60	48.88	5.54	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax40_7885MHz
TEST BY :Johnny

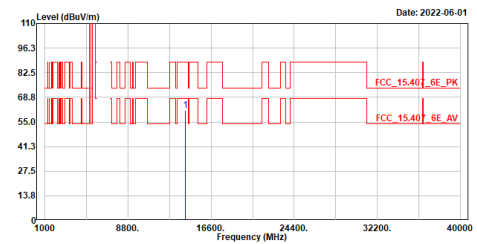


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	14178.000	61.55	88.22	-26.67	56.01	5.54	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_6145MHz
TEST BY :Johnny

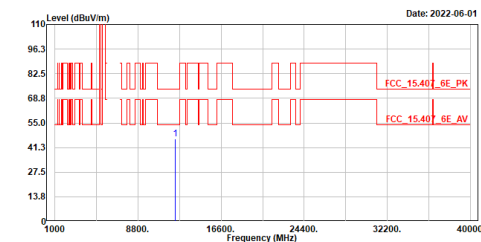


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12298.000	46.05	74.00	-27.95	41.31	4.74	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_6145MHz
TEST BY :Johnny

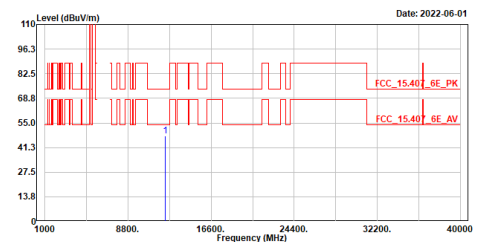


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12298.000	47.55	74.00	-26.45	42.81	4.74	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_6225MHz
TEST BY :Johnny

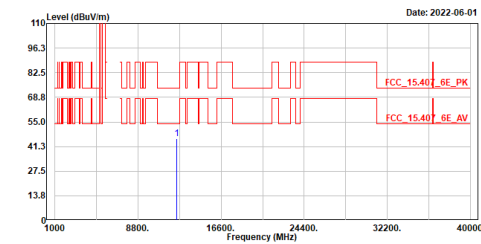


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12450.000	45.75	74.00	-28.25	41.03	4.72	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_6225MHz
TEST BY :Johnny

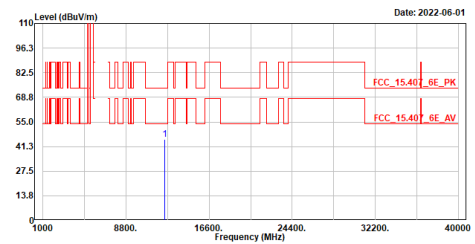


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12450.000	45.43	74.00	-28.57	40.71	4.72	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_6385MHz
TEST BY :Johnny

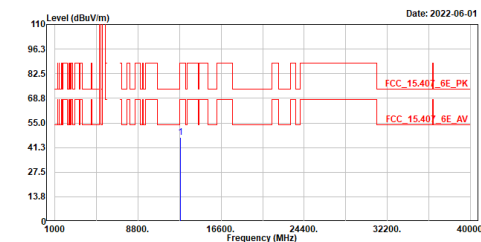


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12770.000	46.95	88.22	-41.27	41.76	5.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_6385MHz
TEST BY :Johnny

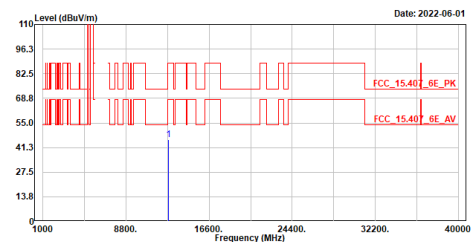


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	12770.000	45.71	88.22	-42.51	40.52	5.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_6465MHz
TEST BY :Johnny

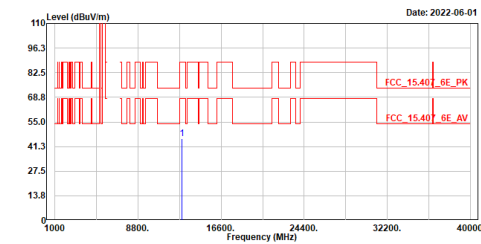


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	12938.000	45.52	88.22	-42.70	48.06	5.46	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax80_6465MHz
TEST BY :Johnny

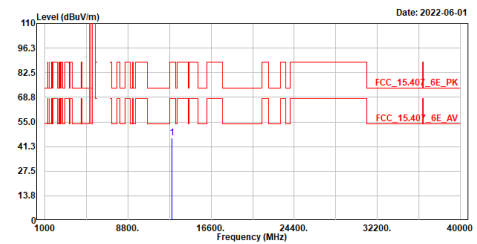


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	12938.000	46.11	88.22	-42.11	48.65	5.46	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_6545MHz
TEST BY :Johnny

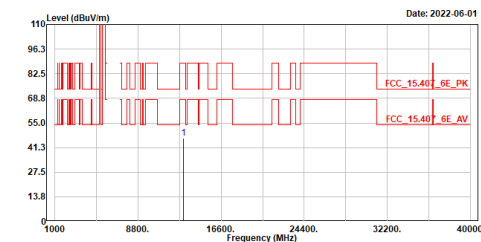


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	13098.000	46.63	88.22	-41.59	41.11	5.52	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_6545MHz
TEST BY :Johnny

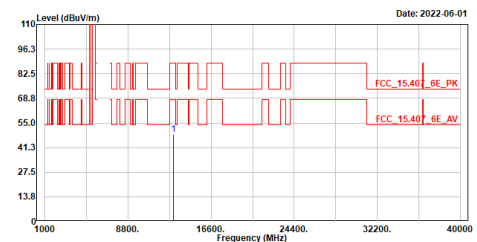


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	13098.000	48.58	88.22	-39.64	43.06	5.52	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_6625MHz
TEST BY :Johnny

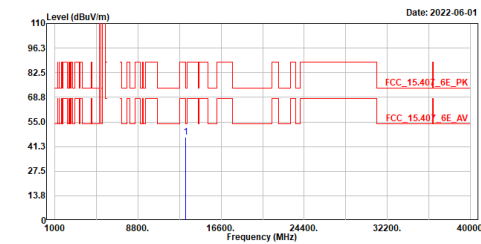


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	13250.000	46.34	74.00	-27.66	41.02	5.32	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax80_6625MHz
TEST BY :Johnny

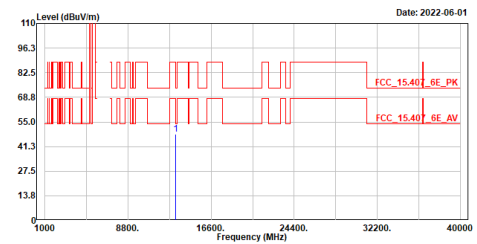


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	13250.000	48.14	74.00	-25.86	42.82	5.32	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_6705MHz
TEST BY :Johnny

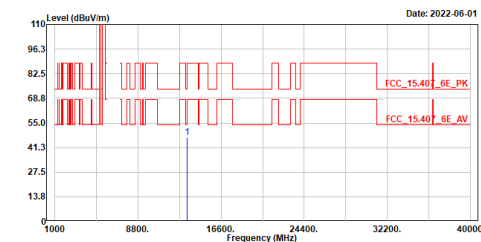


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	13410.000	46.89	88.22	-41.33	41.26	5.63	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax80_6705MHz
TEST BY :Johnny

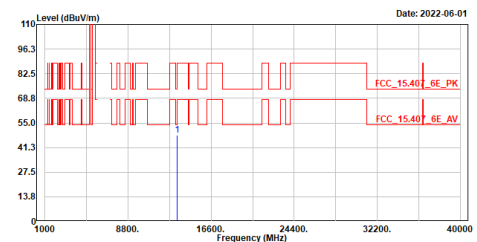


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	13410.000	48.03	88.22	-40.19	42.40	5.63	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_6785MHz
TEST BY :Johnny

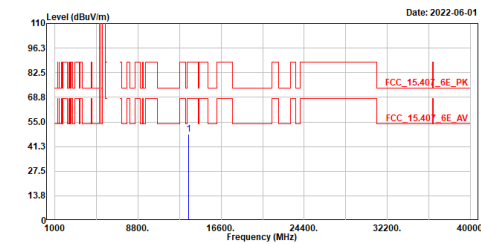


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13578.000	48.15	88.22	-40.07	42.78	5.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_6785MHz
TEST BY :Johnny

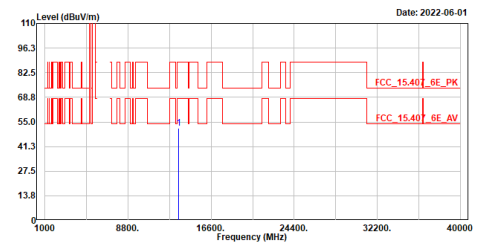


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13578.000	51.59	88.22	-36.63	46.22	5.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_6865MHz
TEST BY :Johnny

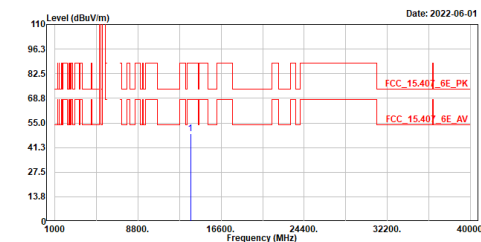


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13738.000	48.92	88.22	-39.30	43.83	5.09	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_6865MHz
TEST BY :Johnny

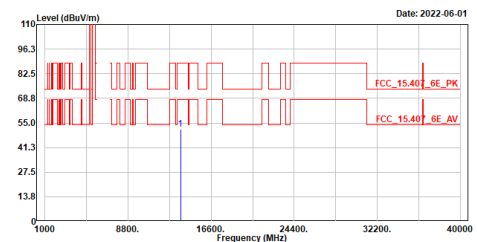


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13738.000	51.62	88.22	-36.60	46.53	5.09	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_6945MHz
TEST BY :Johnny

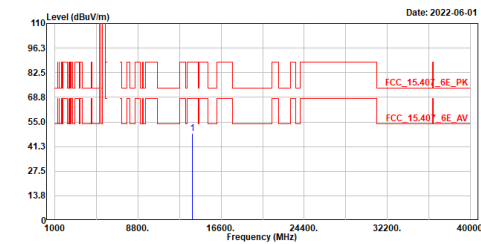

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13890.000	48.42	88.22	-39.80	43.09	5.33	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_6945MHz
TEST BY :Johnny

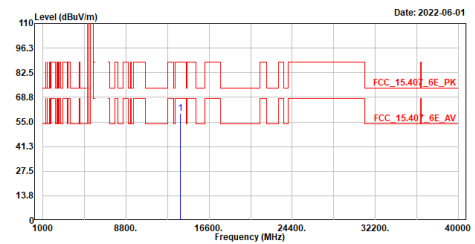

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	13890.000	59.95	88.22	-28.27	54.62	5.33	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_7025MHz
TEST BY :Johnny

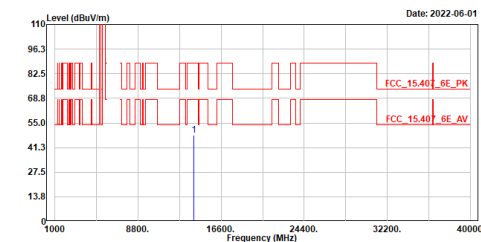

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	14050.000	48.01	88.22	-40.21	42.71	5.30	Peak





Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_7025MHz
TEST BY :Johnny

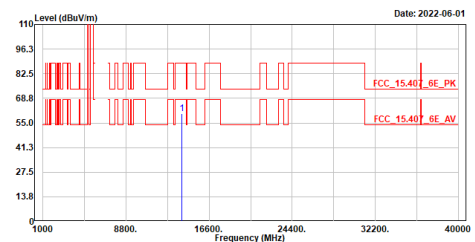


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	14050.000	60.27	88.22	-27.95	54.97	5.30	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

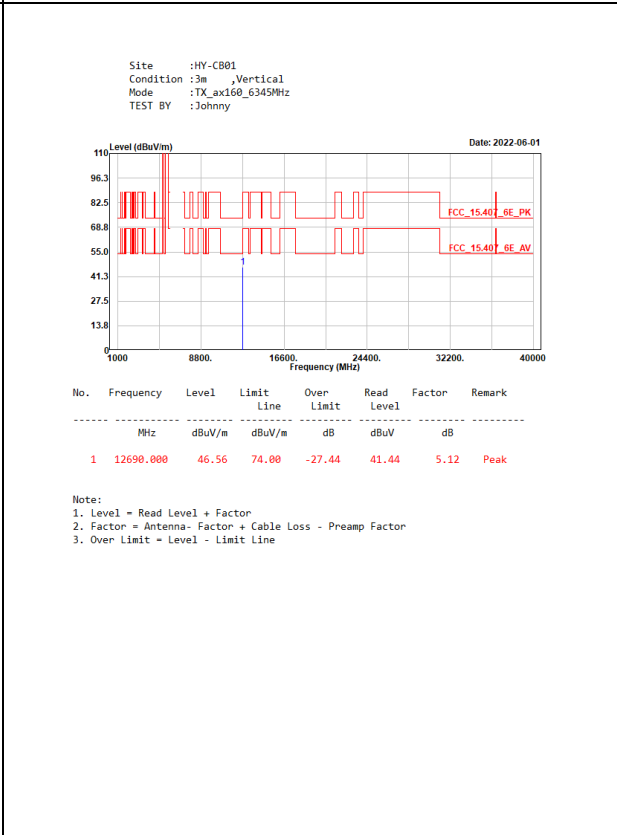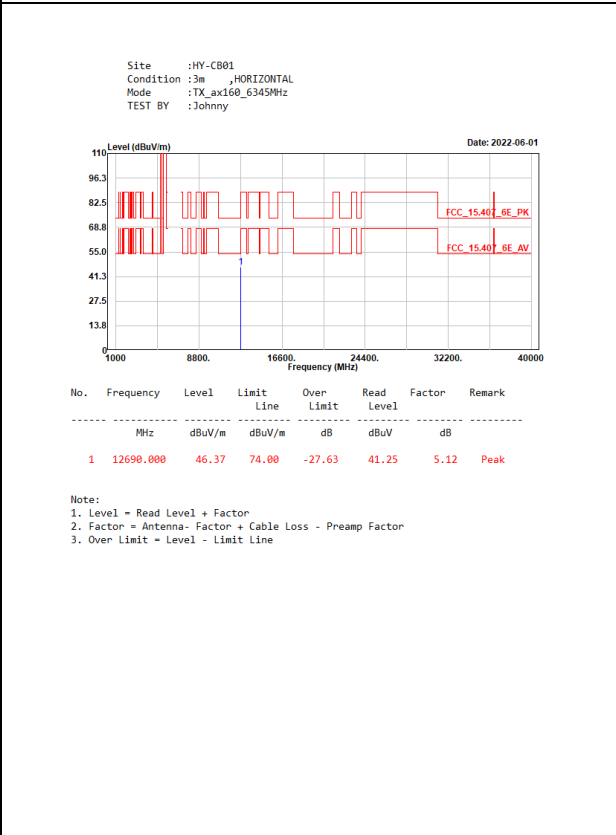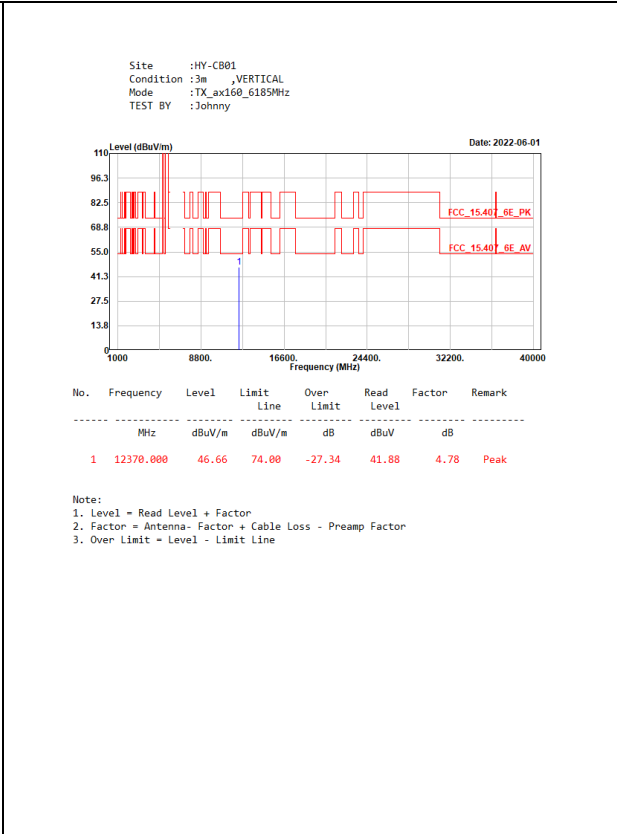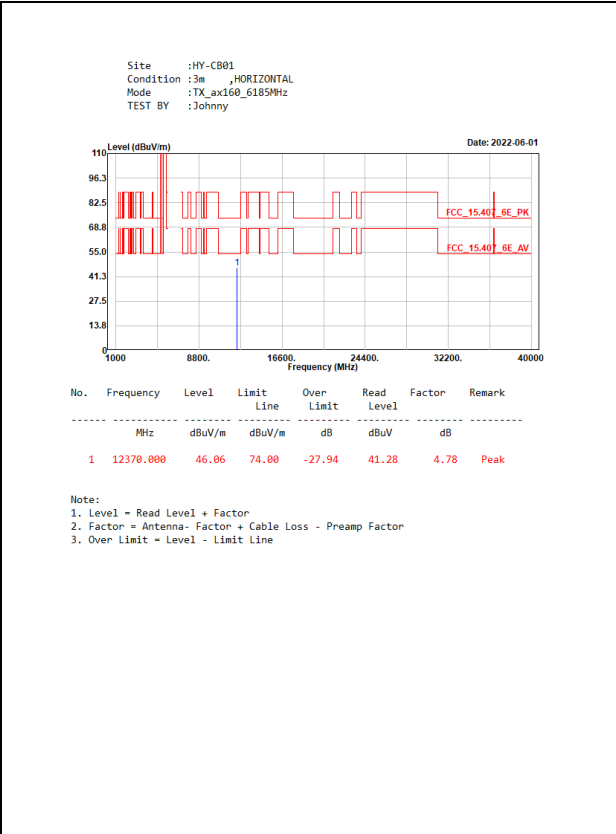


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax160_6505MHz
TEST BY :Johnny

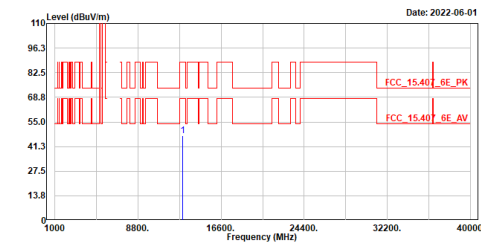

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	13010.000	47.38	88.22	-40.84	41.82	5.56	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax160_6505MHz
TEST BY :Johnny

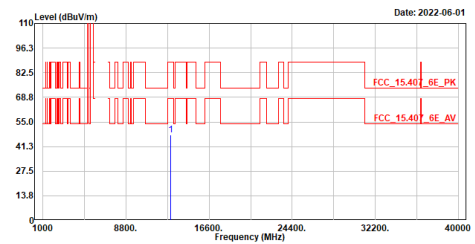

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	13010.000	47.74	88.22	-40.48	42.18	5.56	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax160_6665MHz
TEST BY :Johnny

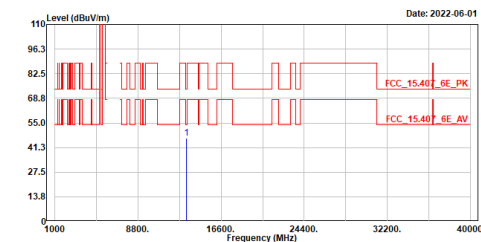

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	13330.000	46.66	74.00	-27.34	41.19	5.47	Peak





Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax160_6665MHz
TEST BY :Johnny

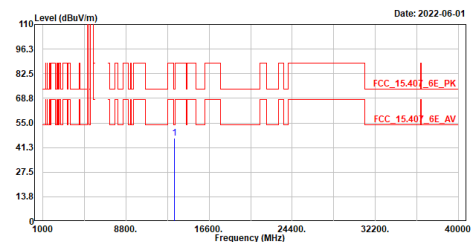

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	13330.000	46.35	74.00	-27.65	40.88	5.47	Peak


Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

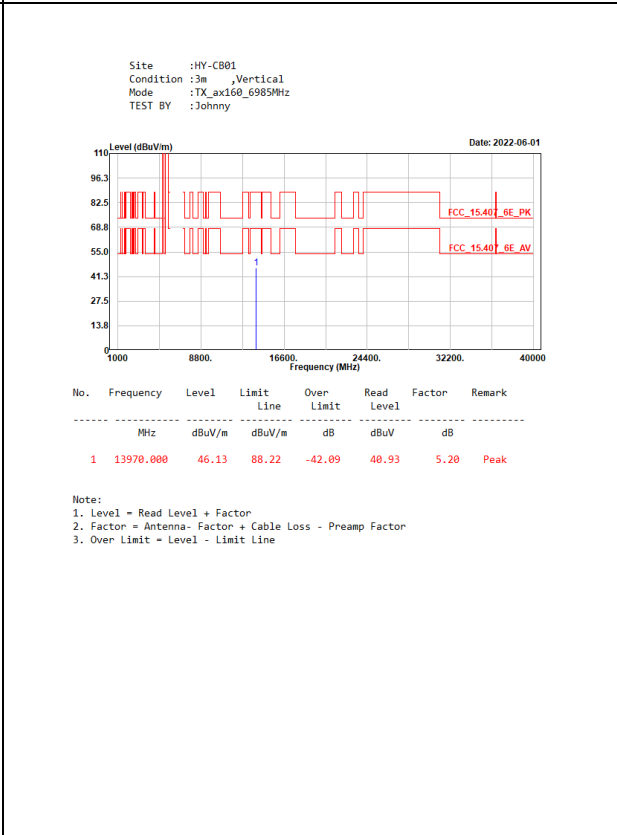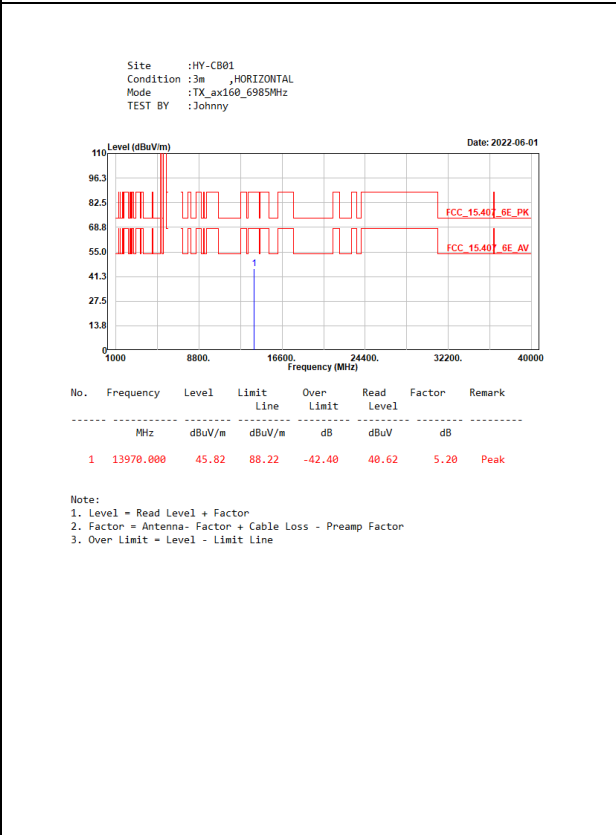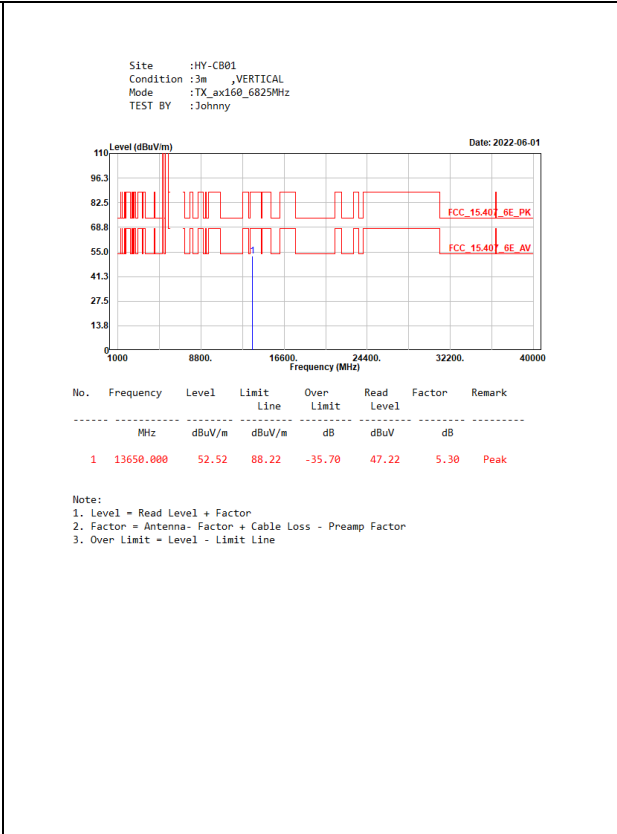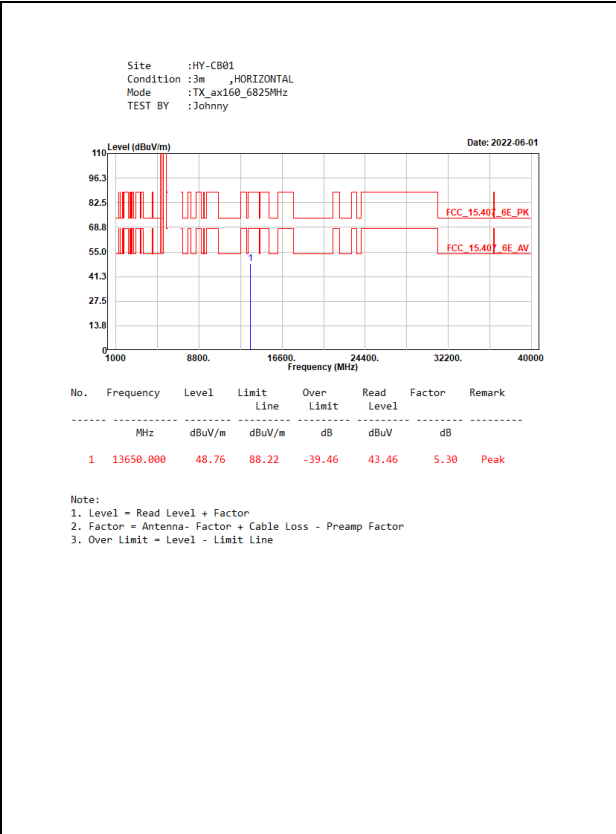

7. Band Edge

7.1. Test Setup

Radiated Emission Above 1GHz

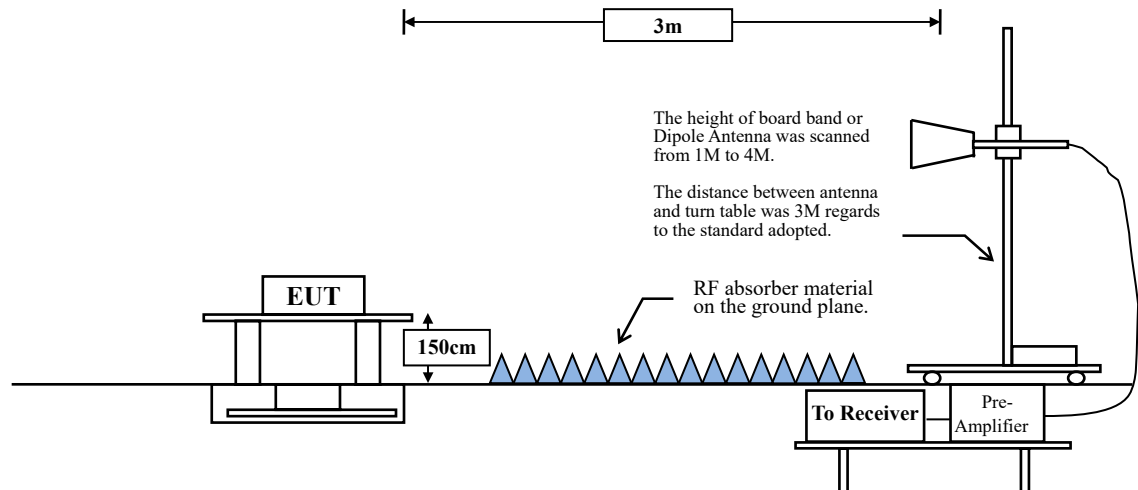

7.2. Limits

General Radiated Emission Limits

The provisions of Section 15.205 of this part apply to intentional radiators operating under this section. Radiated emissions which fall in the restricted bands, as defined in Section 15.205, must also comply with the radiated emission Limits specified in Section 15.209:

FCC CFR Title 47 Part 15 Subpart C Paragraph 15.209 Limits		
Frequency MHz	uV/m @3m	dBuV/m@3m
30 - 88	100	40
88 - 216	150	43.5
216 - 960	200	46
Above 960	500	54

Remark:

1. RF Voltage (dBuV) = $20 \log$ RF Voltage (uV)
2. In the Above Table, the tighter Limit applies at the band edges.
3. Distance refers to the distance in meters between the measuring instrument antenna and the closed point of any part of the device or system.

Unwanted Emission out of the restricted bands Limits

FCC CFR Title 47 Part 15 Subpart E Paragraph 15.407(b) Limits		
Frequency (MHz)	EIRP Limit (dBm/MHz)	Equivalent Field Strength (dBuV/m@3m)
5925 MHz > F 7125 MHz	Peak: -7	88.2
	Average: -27	68.2

Remark:

The following formula is used to convert the equipment isotropic radiated power (eirp) to field strength:

$$E = \frac{1000000\sqrt{30P}}{3} \text{ uV/m, where P is the eirp (Watts).}$$

7.3. Test Procedure

The EUT and its simulators are placed on a turn table which is 1.5 meter above ground. The turn table can rotate 360 degrees to determine the position of the maximum emission level. The EUT was positioned such that the distance from antenna to the EUT was 3 meters.


The antenna can move up and down between 1 meter and 4 meters to find out the maximum emission level.

Both horizontal and vertical polarization of the antenna are set on measurement. In order to find the maximum emission, all of the interface cables must be manipulated according to ANSI C63.10: 2013 on radiated measurement.


The bandwidth below 1GHz setting on the field strength meter is 120 KHz, above 1GHz are 1 MHz.

7.4. Test Result of Band Edge

NSS-1

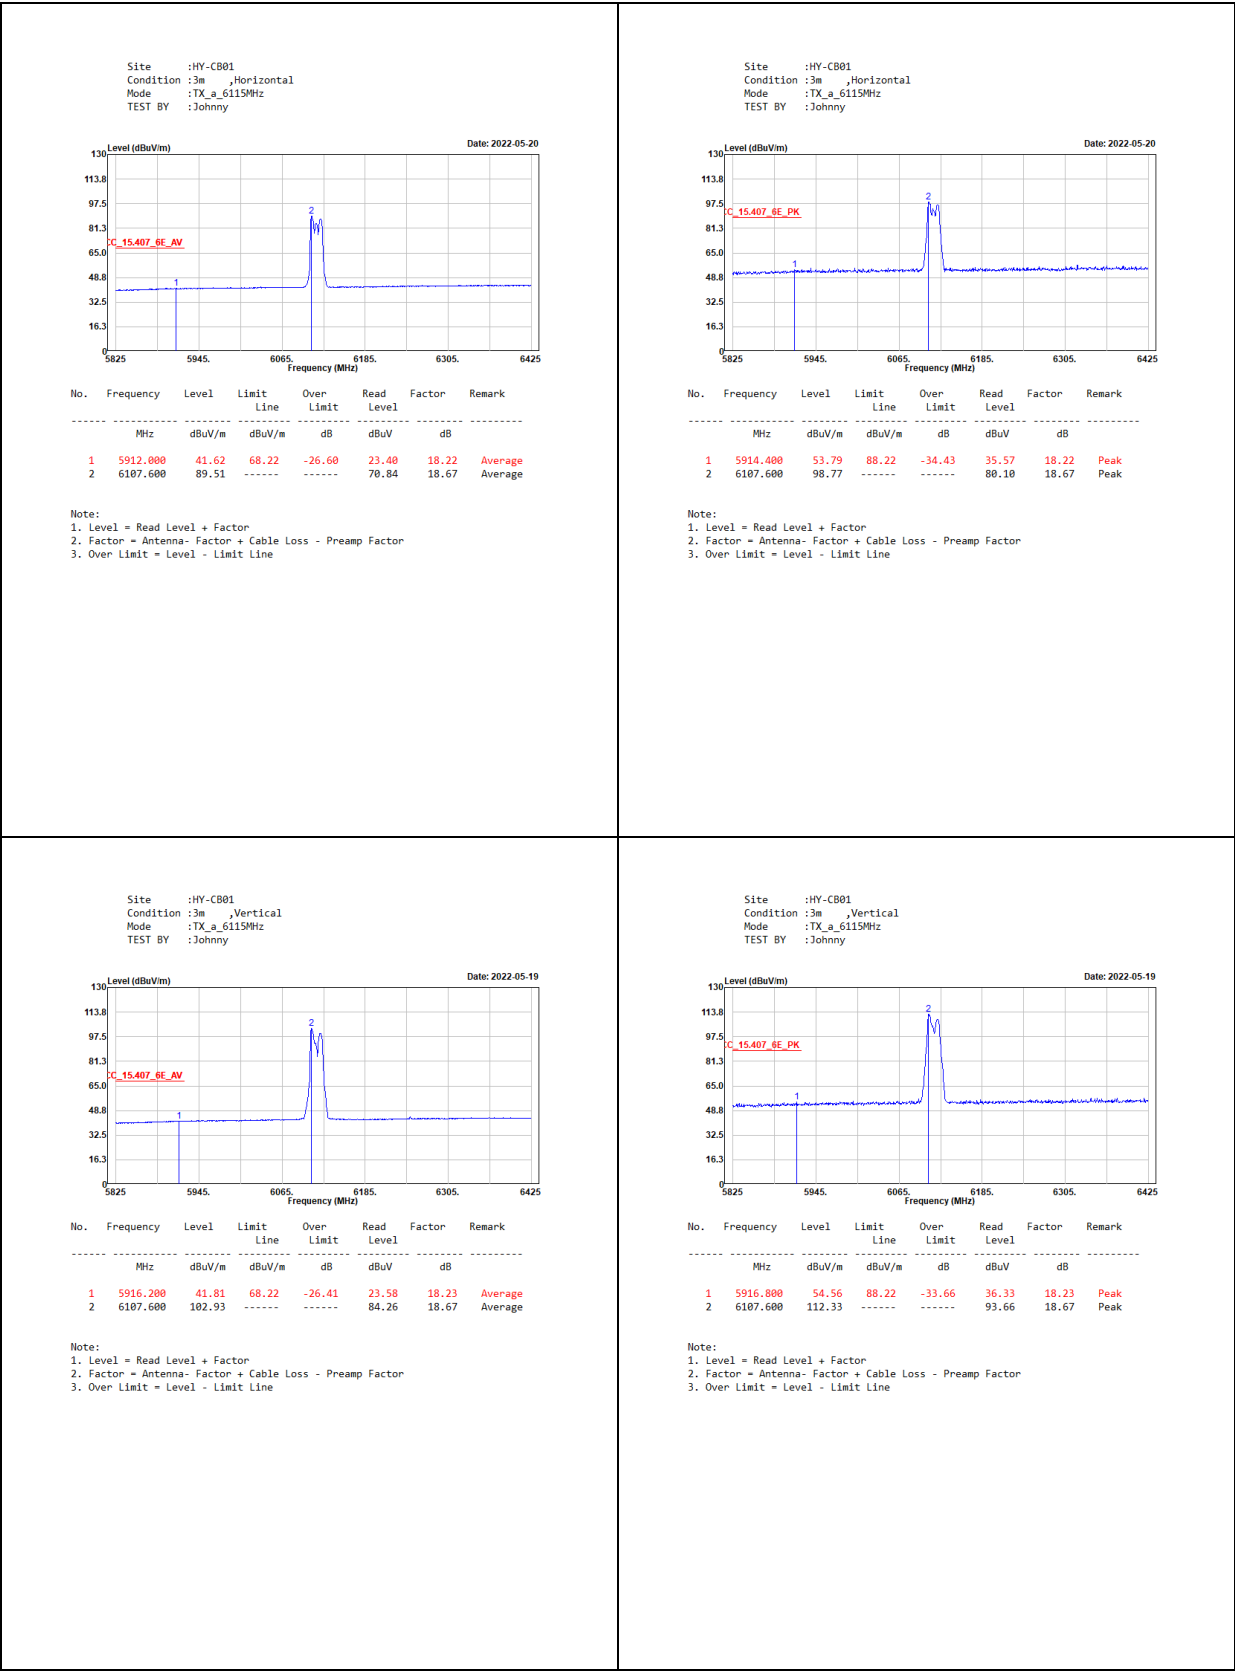

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_6435MHz
TEST BY :Johnny

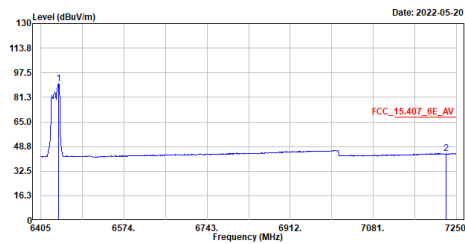


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	6441.335	90.47	-----	-----	71.26	19.21	Average
2	7229.720	44.14	68.22	-24.08	24.20	19.94	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_6435MHz
TEST BY :Johnny

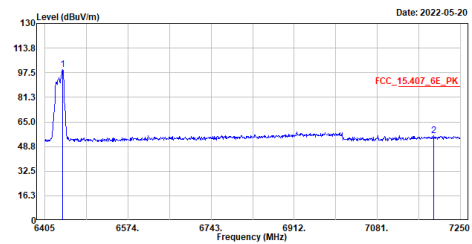


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	6441.335	99.46	-----	-----	80.25	19.21	Peak
2	7195.920	55.74	88.22	-32.48	35.72	20.02	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_6435MHz
TEST BY :Johnny

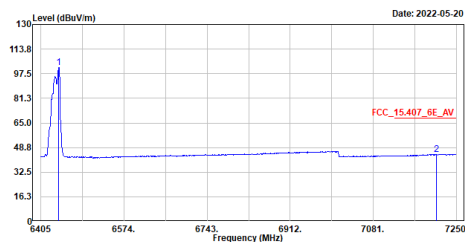


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	6441.335	101.45	-----	-----	82.24	19.21	Average
2	7209.440	44.27	68.22	-23.95	24.25	20.02	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_6435MHz
TEST BY :Johnny

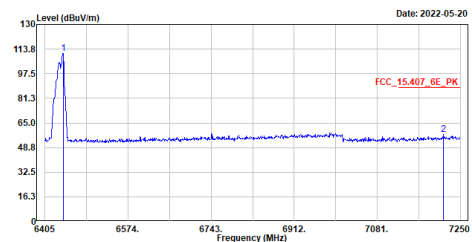


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	6442.180	110.67	-----	-----	91.46	19.21	Peak
2	7215.355	57.39	88.22	-30.83	37.39	20.00	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_6535MHz
TEST BY :Johnny

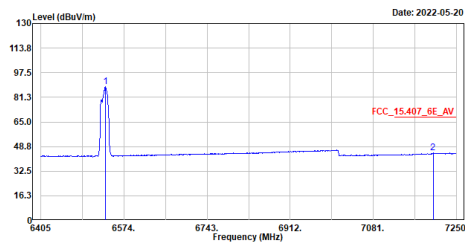

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	6536.820	88.20	-----	-----	68.98	19.22	Average
2	7202.680	44.43	68.22	-23.79	24.39	20.04	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_6535MHz
TEST BY :Johnny

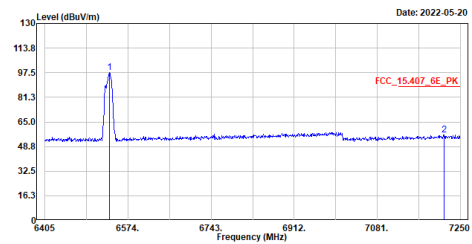

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	6536.820	97.80	-----	-----	78.58	19.22	Peak
2	7217.045	56.47	88.22	-31.75	36.48	19.99	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_6535MHz
TEST BY :Johnny

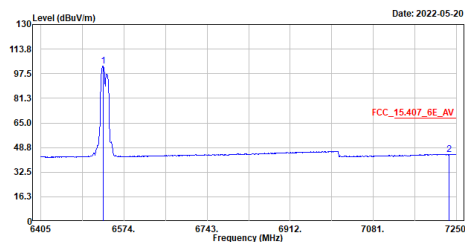

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	6531.750	102.51	-----	-----	83.31	19.20	Average
2	7234.798	44.35	68.22	-23.87	24.42	19.93	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_6535MHz
TEST BY :Johnny

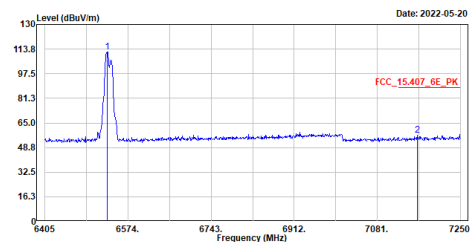

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	6531.750	111.80	-----	-----	92.60	19.20	Peak
2	7162.965	56.77	88.22	-31.45	36.90	19.87	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_7095MHz
TEST BY :Johnny

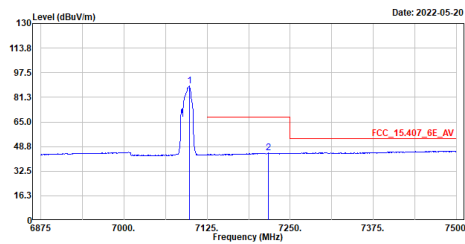


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	7098.125	88.64	-----	-----	68.68	19.96	Average
2	7216.875	44.41	68.22	-23.81	24.42	19.99	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_7095MHz
TEST BY :Johnny

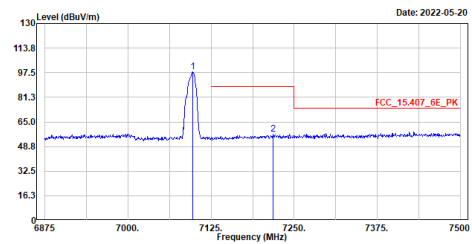


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	7097.500	97.89	-----	-----	77.93	19.96	Peak
2	7218.750	57.07	88.22	-31.15	37.09	19.98	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_7095MHz
TEST BY :Johnny

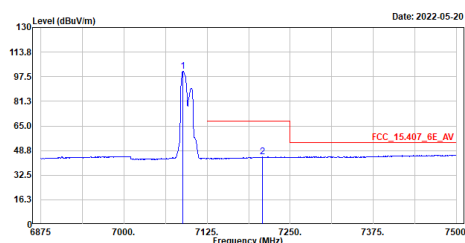


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	7089.750	101.28	-----	-----	81.36	19.92	Average
2	7208.125	44.61	68.22	-23.61	24.58	20.03	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_7095MHz
TEST BY :Johnny

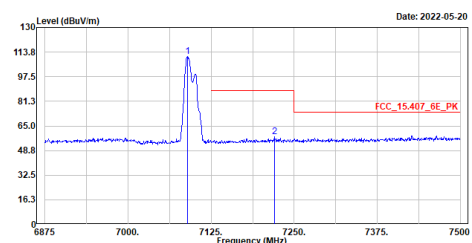


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	7089.375	110.65	-----	-----	90.72	19.93	Peak
2	7220.000	57.65	88.22	-30.57	37.67	19.98	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_6115MHz
TEST BY :Johnny

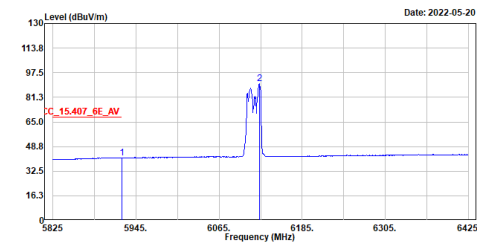

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5924.600	41.36	68.22	-26.86	23.12	18.24	Average
2	6123.200	90.03	-----	-----	71.30	18.73	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_6115MHz
TEST BY :Johnny

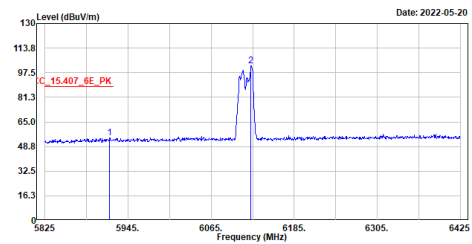

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5918.600	54.56	88.22	-33.66	36.33	18.23	Peak
2	6122.600	101.88	-----	-----	83.15	18.73	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_6115MHz
TEST BY :Johnny

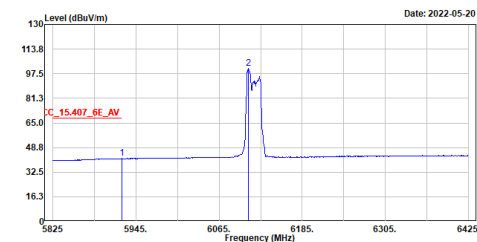

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5924.600	41.47	68.22	-26.75	23.23	18.24	Average
2	6107.600	101.25	-----	-----	82.58	18.67	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_6115MHz
TEST BY :Johnny

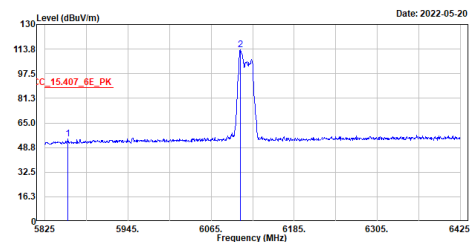

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5858.600	54.29	88.22	-33.93	36.50	17.79	Peak
2	6107.000	113.24	-----	-----	94.57	18.67	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_6435MHz
TEST BY :Johnny

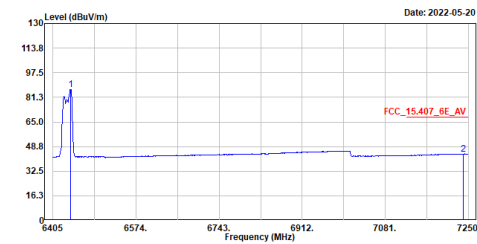

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	6448.490	86.45	-----	-----	67.24	19.21	Average
2	7239.015	43.85	68.22	-24.37	23.94	19.91	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_6435MHz
TEST BY :Johnny

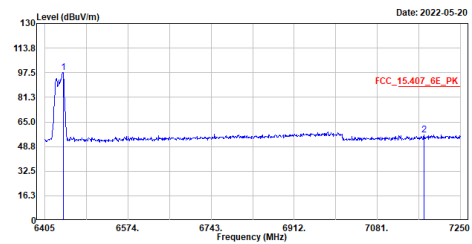

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	6442.180	97.43	-----	-----	78.22	19.21	Peak
2	7175.640	56.42	88.22	-31.80	36.49	19.93	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_6435MHz
TEST BY :Johnny

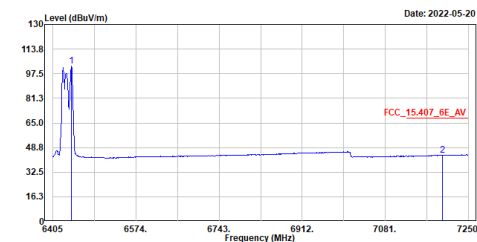

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	6443.025	102.31	-----	-----	83.10	19.21	Average
2	7197.610	43.82	68.22	-24.40	23.78	20.04	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_6435MHz
TEST BY :Johnny

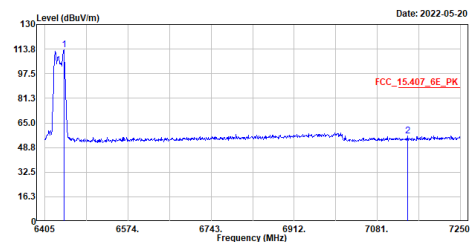

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	6443.070	113.55	-----	-----	94.34	19.21	Peak
2	7143.530	56.41	88.22	-31.81	36.58	19.83	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_6535MHz
TEST BY :Johnny

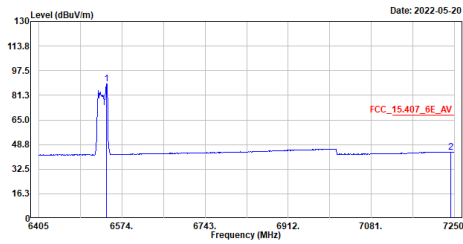

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	6542.735	88.71	-----	-----	69.46	19.25	Average
2	7243.240	43.86	68.22	-24.36	23.96	19.90	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_6535MHz
TEST BY :Johnny

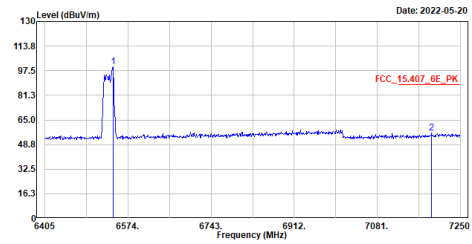

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	6543.580	100.27	-----	-----	81.02	19.25	Peak
2	7191.695	56.23	88.22	-31.99	36.22	20.01	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_6535MHz
TEST BY :Johnny

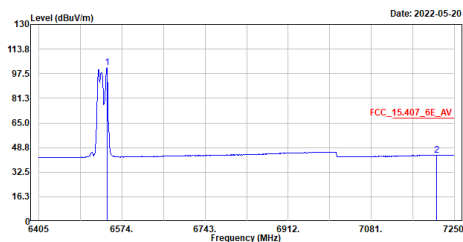

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	6543.580	101.49	-----	-----	82.24	19.25	Average
2	7213.665	43.88	68.22	-24.34	23.87	20.01	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_6535MHz
TEST BY :Johnny

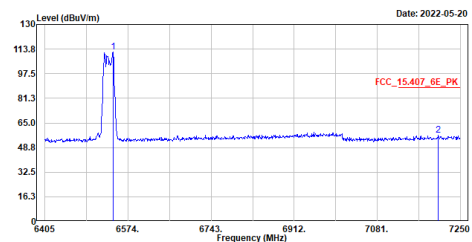

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	6543.580	112.01	-----	-----	92.76	19.25	Peak
2	7205.215	56.99	88.22	-31.23	36.95	20.04	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_7095MHz
TEST BY :Johnny

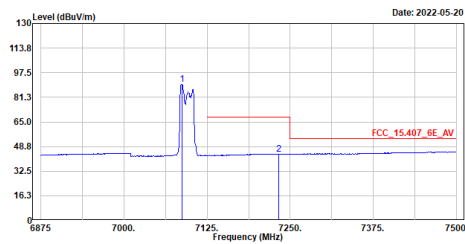

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	7086.875	89.89	-----	-----	69.97	19.92	Average
2	7232.500	43.83	68.22	-24.39	23.90	19.93	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_7095MHz
TEST BY :Johnny

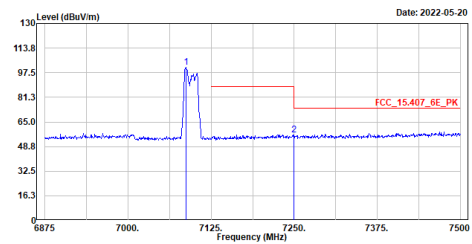

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	7086.875	101.11	-----	-----	81.19	19.92	Peak
2	7250.000	56.61	74.00	-17.39	36.73	19.88	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_7095MHz
TEST BY :Johnny

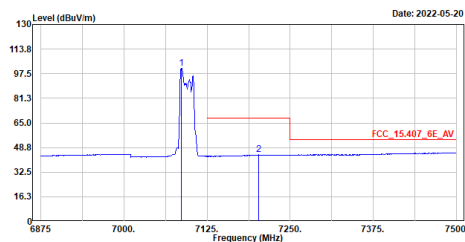

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	7086.250	101.00	-----	-----	81.08	19.92	Average
2	7202.500	43.95	68.22	-24.27	23.91	20.04	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_7095MHz
TEST BY :Johnny

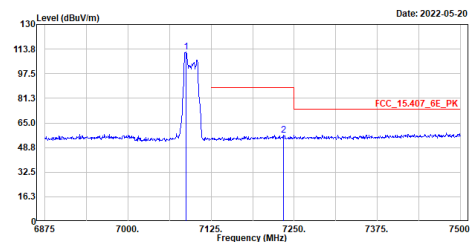

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	7086.875	111.61	-----	-----	91.69	19.92	Peak
2	7234.375	57.06	88.22	-31.16	37.13	19.93	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_6125MHz
TEST BY :Caster

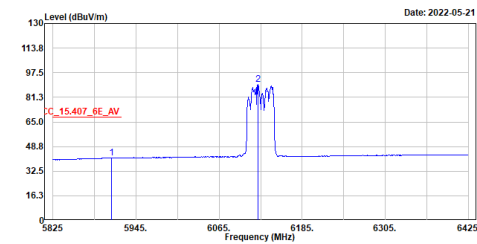

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5909.600	41.31	68.22	-26.91	23.09	18.22	Average
2	6120.800	89.97	-----	-----	71.25	18.72	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_6125MHz
TEST BY :Caster

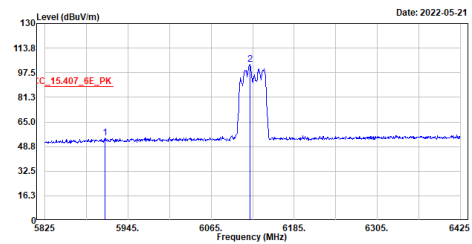

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5912.000	54.32	88.22	-33.90	36.10	18.22	Peak
2	6120.800	103.00	-----	-----	84.28	18.72	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax40_6125MHz
TEST BY :Caster

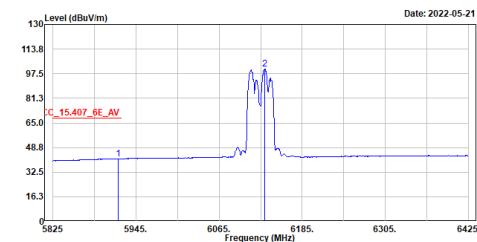

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5919.000	41.44	68.22	-26.78	23.21	18.23	Average
2	6131.000	100.69	-----	-----	81.93	18.76	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax40_6125MHz
TEST BY :Caster

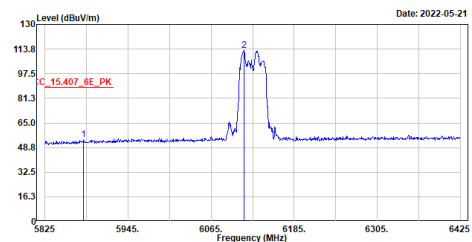

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5880.200	54.02	88.22	-34.20	36.01	18.01	Peak
2	6113.000	112.64	-----	-----	93.95	18.69	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax40_7085MHz
TEST BY :Peter

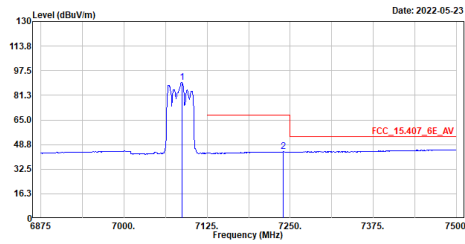


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	7086.875	89.95	-----	-----	70.03	19.92	Average
2	7240.000	43.93	68.22	-24.29	24.02	19.91	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax40_7085MHz
TEST BY :Peter

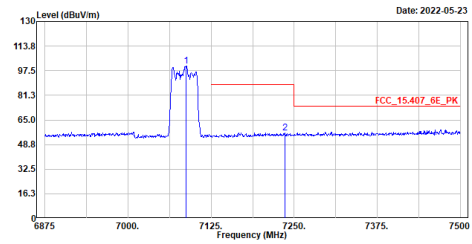


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	7087.500	100.76	-----	-----	80.84	19.92	Peak
2	7236.250	56.56	68.22	-31.66	36.63	19.93	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax40_7085MHz
TEST BY :Peter

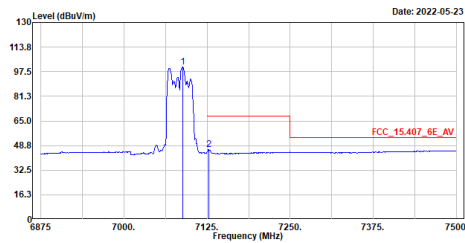


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	7080.750	100.74	-----	-----	80.82	19.92	Average
2	7127.500	46.01	68.22	-22.21	26.14	19.87	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax40_7085MHz
TEST BY :Peter

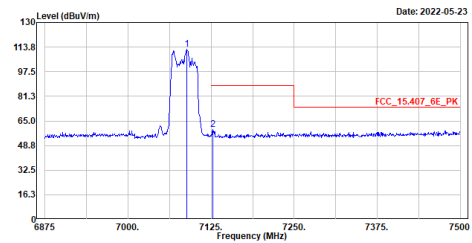


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	7080.125	112.46	-----	-----	92.54	19.92	Peak
2	7128.125	59.12	68.22	-29.10	39.25	19.87	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax80_6145MHz
TEST BY :Peter

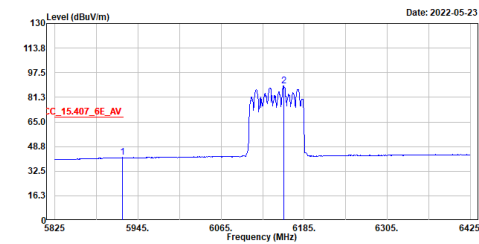

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5922.200	41.46	68.22	-26.76	23.22	18.24	Average
2	6155.600	88.87	-----	-----	70.04	18.83	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax80_6145MHz
TEST BY :Peter

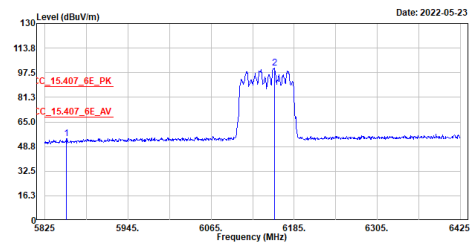

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5856.200	54.06	88.22	-34.16	36.29	17.77	Peak
2	6156.200	100.47	-----	-----	81.64	18.83	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax80_6145MHz
TEST BY :Peter

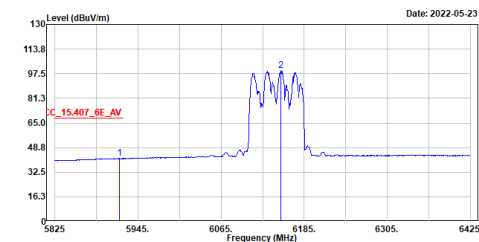

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5918.600	41.52	68.22	-26.70	23.29	18.23	Average
2	6151.400	99.67	-----	-----	80.83	18.84	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax80_6145MHz
TEST BY :Peter

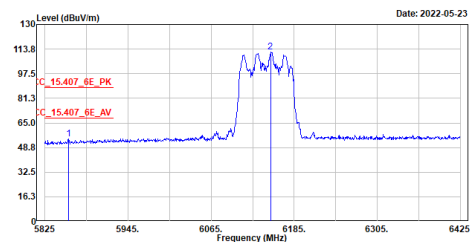

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5859.200	54.29	88.22	-33.93	36.49	17.00	Peak
2	6150.800	111.92	-----	-----	93.08	18.84	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_7025MHz
TEST BY :Caster

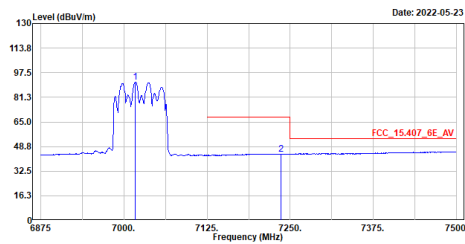


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	7016.875	91.39	-----	-----	71.58	19.81	Average
2	7236.250	43.89	68.22	-24.33	23.96	19.93	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_7025MHz
TEST BY :Caster

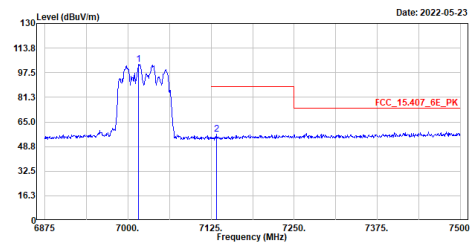


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	7016.250	102.97	-----	-----	83.16	19.81	Peak
2	7133.125	56.74	88.22	-31.48	36.88	19.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax80_7025MHz
TEST BY :Caster

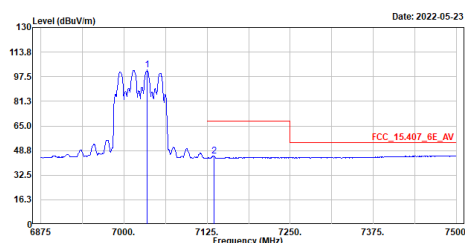


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	7035.000	101.82	-----	-----	82.04	19.78	Average
2	7135.000	45.03	68.22	-23.19	25.18	19.85	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax80_7025MHz
TEST BY :Caster

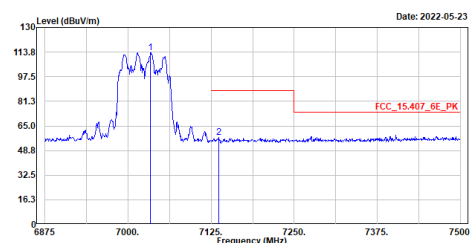


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	7033.750	113.54	-----	-----	93.76	19.78	Peak
2	7136.250	57.42	88.22	-30.80	37.57	19.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax160_6185MHz
TEST BY :Caster

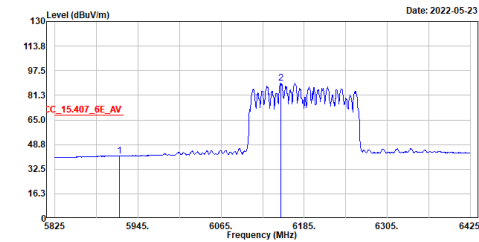

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5918.000	41.40	68.22	-26.82	23.17	18.23	Average
2	6151.400	89.49	-----	-----	70.65	18.84	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax160_6185MHz
TEST BY :Caster

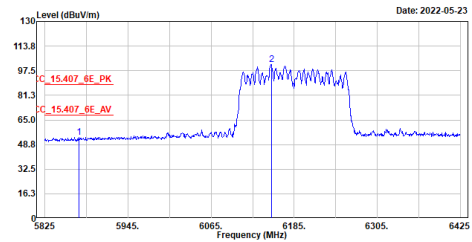

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5874.200	53.62	88.22	-34.60	35.68	17.94	Peak
2	6152.000	101.43	-----	-----	82.59	18.84	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax160_6185MHz
TEST BY :Caster

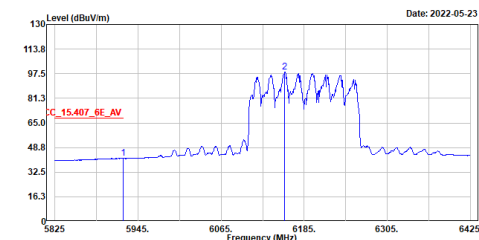

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5924.000	41.63	68.22	-26.59	23.39	18.24	Average
2	6156.000	98.57	-----	-----	79.74	18.83	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax160_6185MHz
TEST BY :Caster

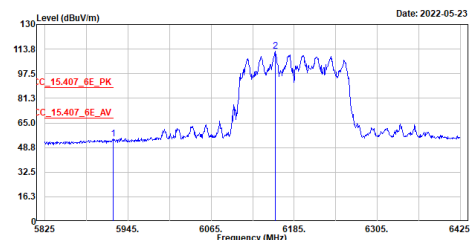

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5923.400	54.23	88.22	-33.99	35.99	18.24	Peak
2	6150.000	112.56	-----	-----	93.73	18.83	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax160_6985MHz
TEST BY :Caster

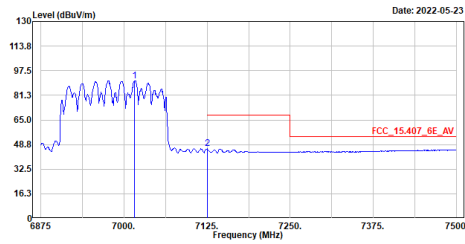


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	7016.250	90.77	-----	-----	70.96	19.81	Average
2	7125.000	45.88	68.22	-22.34	26.00	19.88	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax160_6985MHz
TEST BY :Caster

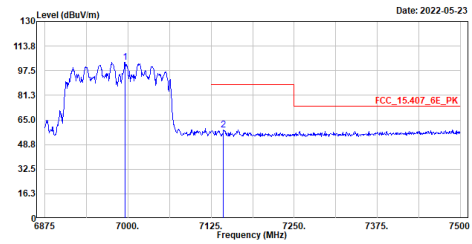


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	6995.625	103.07	-----	-----	83.26	19.81	Peak
2	7143.750	58.27	88.22	-29.95	38.44	19.83	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax160_6985MHz
TEST BY :Caster

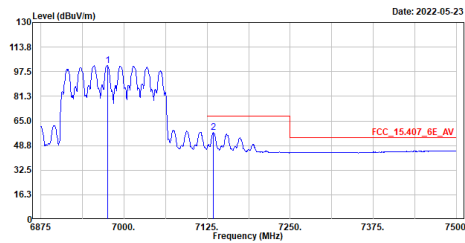


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	6975.000	101.63	-----	-----	81.88	19.75	Average
2	7134.375	57.22	68.22	-11.00	37.37	19.85	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax160_6985MHz
TEST BY :Caster

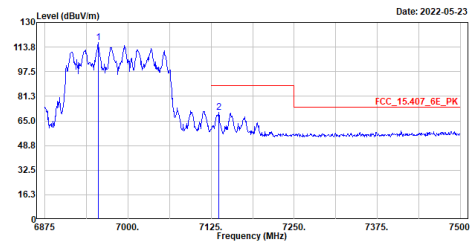

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	6955.000	116.74	-----	-----	97.05	19.69	Peak
2	7136.250	70.87	88.22	-17.35	51.02	19.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

NSS-4

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_6115MHz
TEST BY :Caster

Date: 2022-05-31

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	5896.400	41.52	68.22	-26.70	23.36	18.16	Average
2	6108.800	91.42	-----	-----	72.74	18.68	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_6115MHz
TEST BY :Caster

Date: 2022-05-31

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	5896.400	54.15	88.22	-34.07	35.99	18.16	Peak
2	6108.800	100.99	-----	-----	82.31	18.68	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_6115MHz
TEST BY :Caster

Date: 2022-05-31

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	5920.400	41.83	68.22	-26.39	23.60	18.23	Average
2	6122.000	101.96	-----	-----	83.23	18.73	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_6115MHz
TEST BY :Caster

Date: 2022-05-31

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	5916.200	54.84	88.22	-33.38	36.61	18.23	Peak
2	6122.600	111.07	-----	-----	92.34	18.73	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_6435MHz
TEST BY :Caster

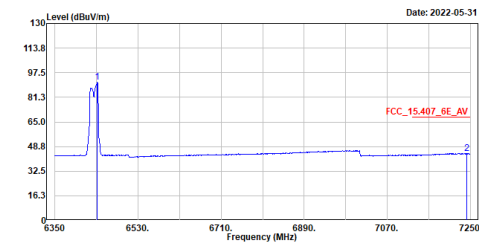


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	6441.800	91.25	-----	-----	72.04	19.21	Average
2	7242.800	44.22	68.22	-24.00	24.32	19.90	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_6435MHz
TEST BY :Caster

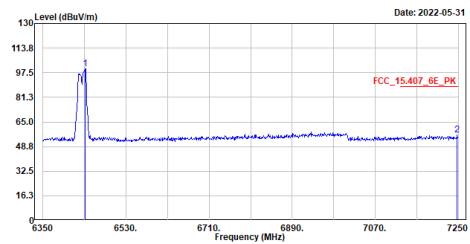


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	6441.800	100.17	-----	-----	80.96	19.21	Peak
2	7247.300	56.41	88.22	-31.81	36.53	19.88	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_6435MHz
TEST BY :Caster

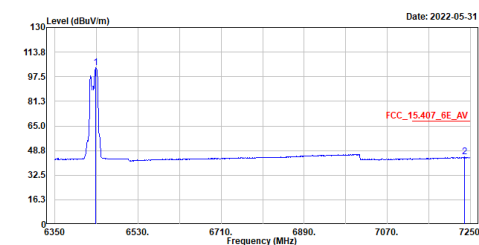


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	6439.100	103.29	-----	-----	84.08	19.21	Average
2	7237.400	44.42	68.22	-23.80	24.58	19.92	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_6435MHz
TEST BY :Caster

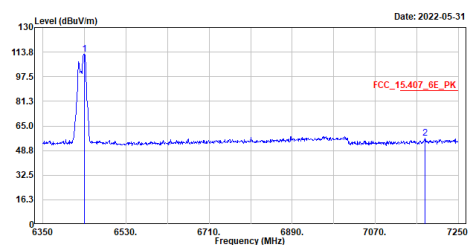


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	6440.000	112.53	-----	-----	93.32	19.21	Peak
2	7178.000	56.73	88.22	-31.49	36.79	19.94	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_6535MHz
TEST BY :Caster

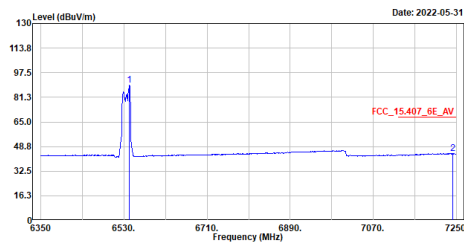


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	6541.700	89.17	-----	-----	69.92	19.25	Average
2	7241.900	44.16	68.22	-24.06	24.26	19.90	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_6535MHz
TEST BY :Caster

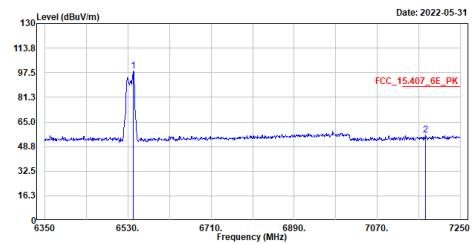


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	6541.700	98.60	-----	-----	79.35	19.25	Peak
2	7174.400	56.18	88.22	-32.04	36.25	19.93	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_6535MHz
TEST BY :Caster

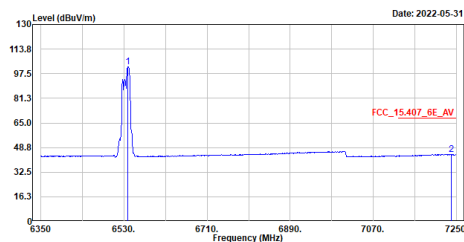


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	6539.000	102.13	-----	-----	82.89	19.24	Average
2	7238.300	44.26	68.22	-23.96	24.34	19.92	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_6535MHz
TEST BY :Caster

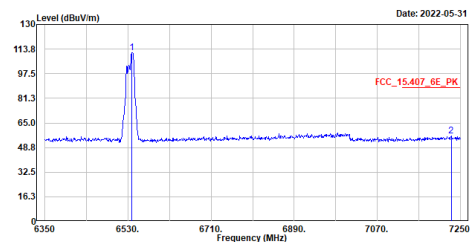


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	6539.000	111.39	-----	-----	92.15	19.24	Peak
2	7238.200	56.50	88.22	-31.72	36.56	19.94	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_7095MHz
TEST BY :Caster

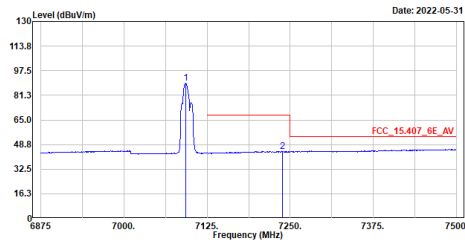


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	7092.500	89.33	-----	-----	69.39	19.94	Average
2	7238.125	44.23	68.22	-23.99	24.31	19.92	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_7095MHz
TEST BY :Caster

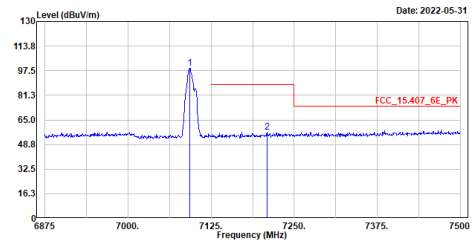


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	7093.125	99.08	-----	-----	79.14	19.94	Peak
2	7209.375	56.93	88.22	-31.29	36.91	20.02	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_7095MHz
TEST BY :Caster

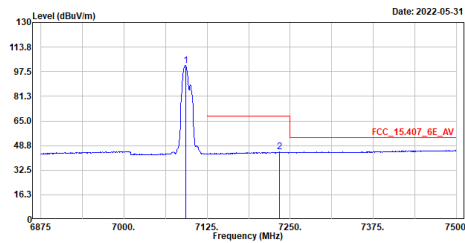


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	7092.500	101.40	-----	-----	81.46	19.94	Average
2	7234.375	44.40	68.22	-23.82	24.47	19.93	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_7095MHz
TEST BY :Caster

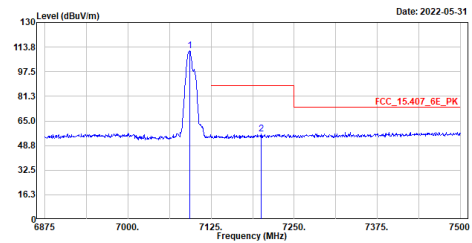


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	7092.500	111.28	-----	-----	91.34	19.94	Peak
2	7200.000	56.55	88.22	-31.67	36.50	20.05	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_6115MHz
TEST BY :Caster

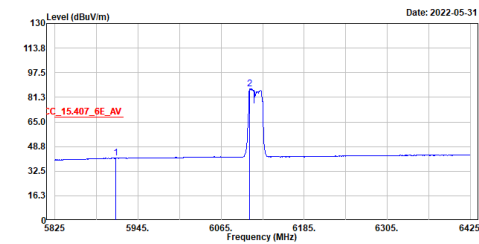

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	5913.200	41.30	68.22	-26.92	23.08	18.22	Average
2	6106.400	86.97	-----	-----	68.30	18.67	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_6115MHz
TEST BY :Caster

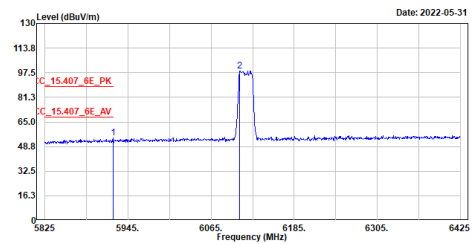

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	5923.400	54.29	88.22	-33.93	36.05	18.24	Peak
2	6106.400	98.71	-----	-----	80.04	18.67	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_6115MHz
TEST BY :Caster

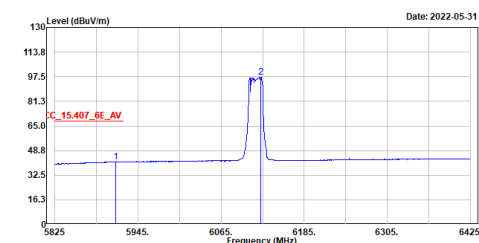

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	5913.200	41.30	68.22	-26.92	23.08	18.22	Average
2	6122.000	97.31	-----	-----	78.58	18.73	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_6115MHz
TEST BY :Caster

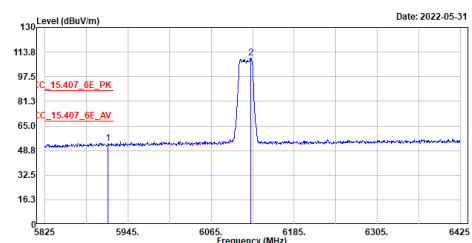

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	5916.200	53.70	88.22	-34.52	35.47	18.23	Peak
2	6122.600	109.93	-----	-----	91.20	18.73	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_6435MHz
TEST BY :Caster

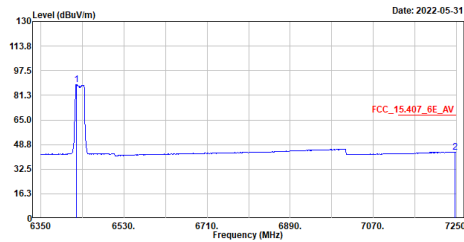

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	6426.500	88.31	-----	-----	69.10	19.21	Average
2	7246.400	43.69	68.22	-24.53	23.81	19.88	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_6435MHz
TEST BY :Caster

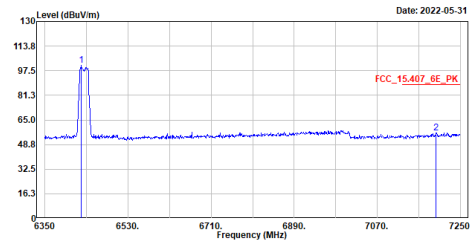

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	6428.300	101.00	-----	-----	81.79	19.21	Peak
2	7197.000	56.52	88.22	-31.70	36.48	20.04	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_6435MHz
TEST BY :Caster

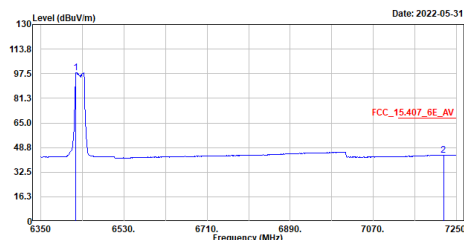

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	6425.600	98.11	-----	-----	78.90	19.21	Average
2	7222.100	43.71	68.22	-24.51	23.74	19.97	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_6435MHz
TEST BY :Caster

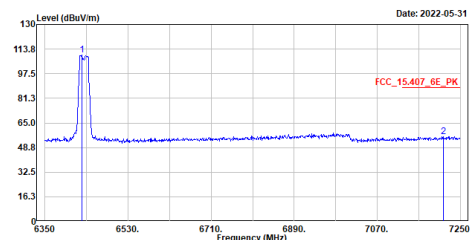

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	6431.000	109.70	-----	-----	90.50	19.20	Peak
2	7214.000	55.94	88.22	-32.28	35.94	20.00	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_6535MHz
TEST BY :Caster

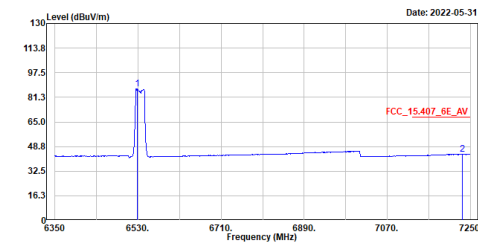


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	6529.100	86.82	-----	-----	67.63	19.19	Average
2	7232.000	43.66	68.22	-24.56	23.73	19.93	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_6535MHz
TEST BY :Caster

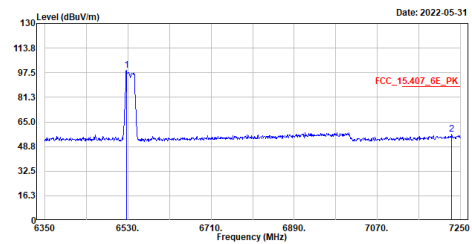


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	6526.400	98.89	-----	-----	79.71	19.18	Peak
2	7231.100	56.69	88.22	-31.53	36.75	19.94	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_6535MHz
TEST BY :Caster

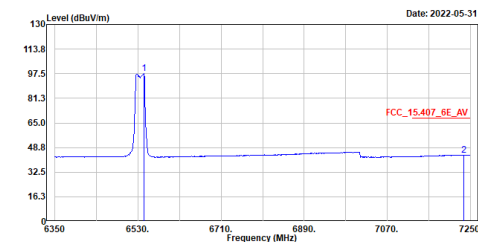


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	6543.500	97.77	-----	-----	78.52	19.25	Average
2	7235.600	43.75	68.22	-24.47	23.82	19.93	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_6535MHz
TEST BY :Caster

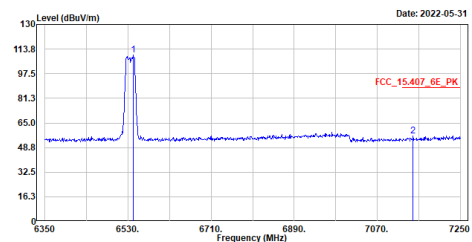


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	6540.800	109.93	-----	-----	90.69	19.24	Peak
2	7147.400	56.37	88.22	-31.85	36.55	19.82	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_7095MHz
TEST BY :Caster

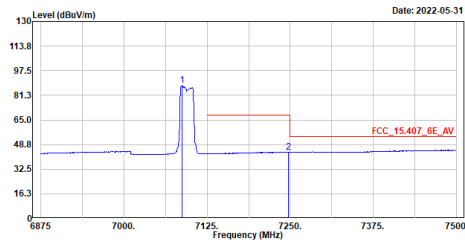

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	7086.875	87.60	-----	-----	67.68	19.92	Average
2	7246.875	43.64	68.22	-24.58	23.76	19.88	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_7095MHz
TEST BY :Caster

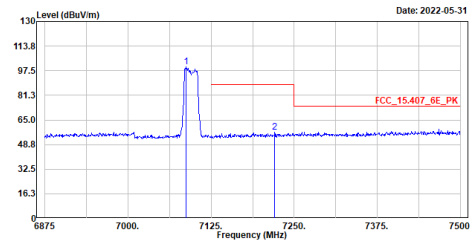

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	7086.875	100.31	-----	-----	80.39	19.92	Peak
2	7220.625	57.09	88.22	-31.13	37.11	19.98	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_7095MHz
TEST BY :Caster

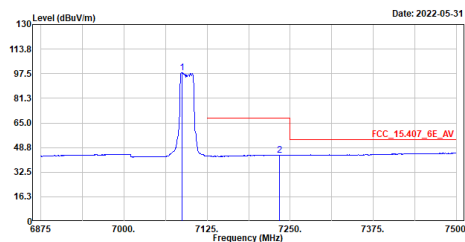

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	7087.500	98.18	-----	-----	78.26	19.92	Average
2	7233.750	43.88	68.22	-24.34	23.96	19.92	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_7095MHz
TEST BY :Caster

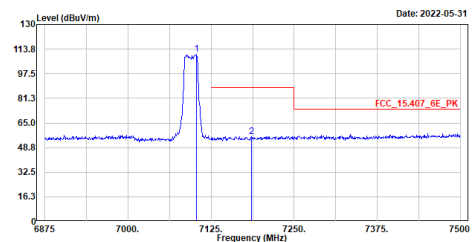

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	7103.125	110.54	-----	-----	90.58	19.96	Peak
2	7186.250	56.11	88.22	-32.11	36.12	19.99	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_6125MHz
TEST BY :Caster

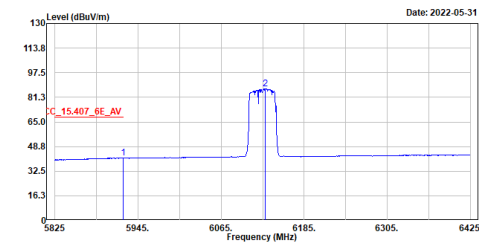

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5923.400	41.15	68.22	-27.07	22.91	18.24	Average
2	6128.600	86.94	-----	-----	68.19	18.75	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_6125MHz
TEST BY :Caster

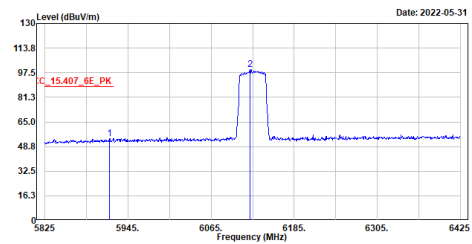

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5918.600	54.14	88.22	-34.08	35.91	18.23	Peak
2	6128.800	99.55	-----	-----	80.83	18.72	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax40_6125MHz
TEST BY :Caster

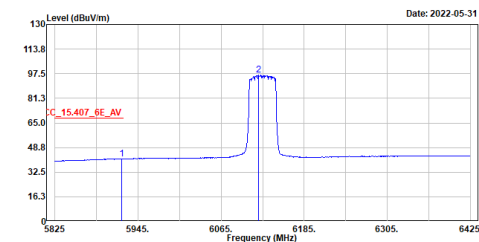

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5921.000	41.36	68.22	-26.86	23.13	18.23	Average
2	6119.600	96.49	-----	-----	77.78	18.71	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax40_6125MHz
TEST BY :Caster

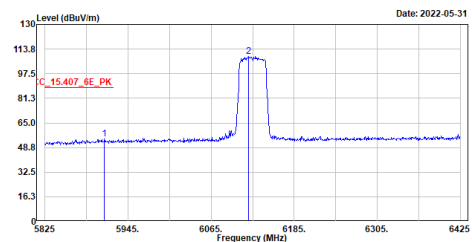

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5910.000	54.27	88.22	-33.95	36.05	18.22	Peak
2	6119.000	109.00	-----	-----	90.29	18.71	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_7085MHz
TEST BY :Caster

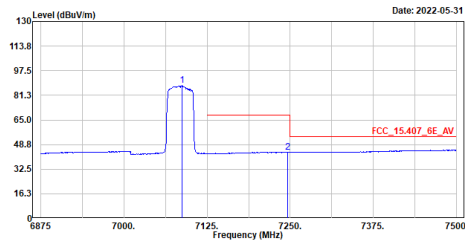


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	7087.500	87.66	-----	-----	67.74	19.92	Average
2	7246.250	43.74	68.22	-24.48	23.86	19.88	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_7085MHz
TEST BY :Caster

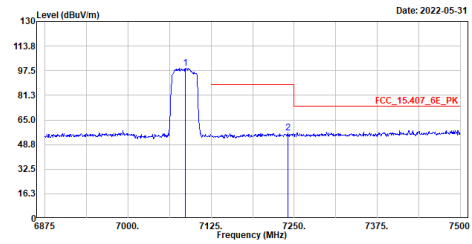


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	7086.250	99.31	-----	-----	79.39	19.92	Peak
2	7248.625	56.23	88.22	-31.99	36.32	19.91	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax40_7085MHz
TEST BY :Caster

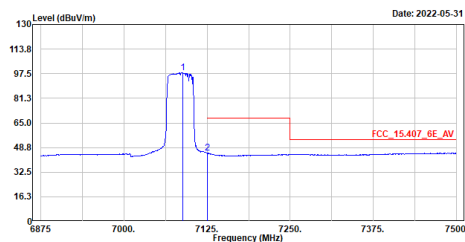


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	7088.125	98.09	-----	-----	78.17	19.92	Average
2	7125.000	45.28	68.22	-22.94	25.40	19.88	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax40_7085MHz
TEST BY :Caster

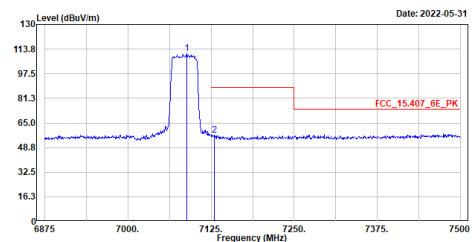


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	7088.125	110.73	-----	-----	90.81	19.92	Peak
2	7129.375	56.97	88.22	-31.25	37.10	19.87	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_6145MHz
TEST BY :Caster

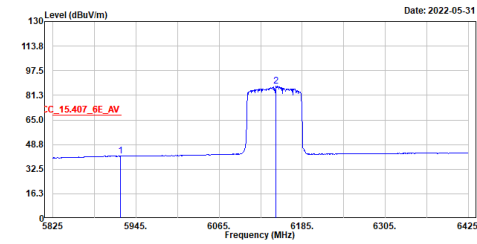

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5922.200	41.25	68.22	-26.97	23.01	18.24	Average
2	6147.200	87.16	-----	-----	68.33	18.83	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_6145MHz
TEST BY :Caster

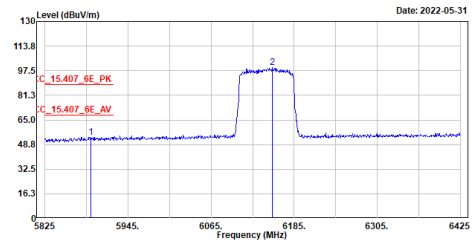

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5891.600	53.66	88.22	-34.56	35.55	18.11	Peak
2	6153.800	99.42	-----	-----	80.59	18.83	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax80_6145MHz
TEST BY :Caster

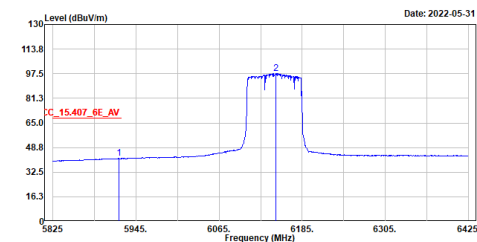

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5920.400	41.52	68.22	-26.70	23.29	18.23	Average
2	6146.600	97.62	-----	-----	78.79	18.83	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax80_6145MHz
TEST BY :Caster

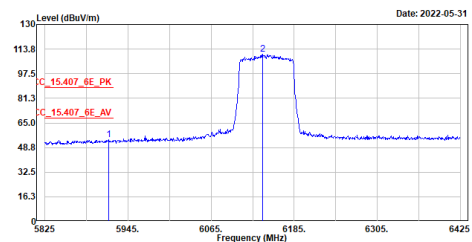

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5917.400	53.75	88.22	-34.47	35.52	18.23	Peak
2	6139.400	110.16	-----	-----	91.35	18.81	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_7025MHz
TEST BY :Caster

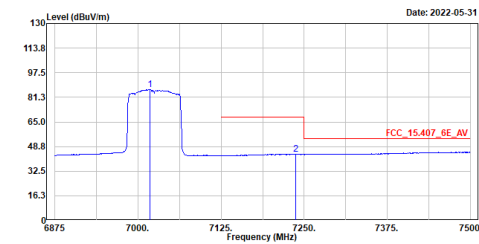


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	7017.500	86.55	-----	-----	66.75	19.80	Average
2	7237.500	43.75	68.22	-24.47	23.83	19.92	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_7025MHz
TEST BY :Caster

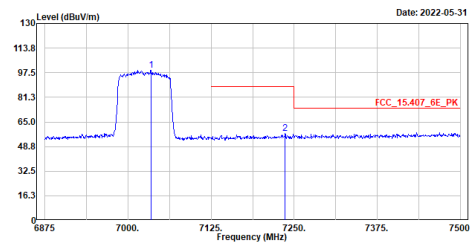


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	7034.375	99.24	-----	-----	79.46	19.78	Peak
2	7236.250	57.21	88.22	-31.01	37.28	19.93	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax80_7025MHz
TEST BY :Caster

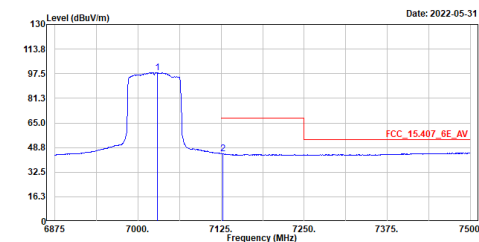


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	7020.750	98.20	-----	-----	78.41	19.79	Average
2	7127.500	44.60	68.22	-23.62	24.73	19.87	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax80_7025MHz
TEST BY :Caster

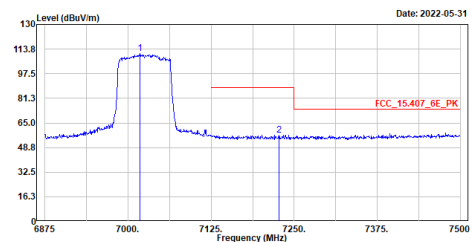


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	7017.500	111.02	-----	-----	91.22	19.80	Peak
2	7226.875	57.07	88.22	-31.15	37.12	19.95	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax160_6185MHz
TEST BY :Caster

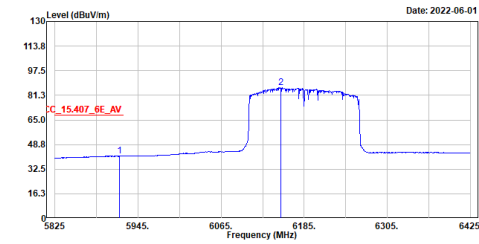

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5918.600	41.10	68.22	-27.12	22.87	18.23	Average
2	6151.400	86.34	-----	-----	67.50	18.84	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax160_6185MHz
TEST BY :Caster

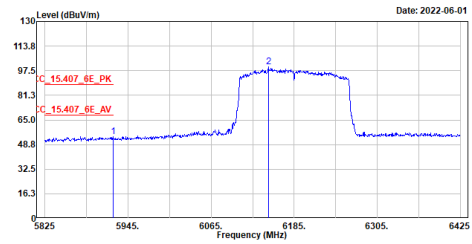

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5923.400	53.90	88.22	-34.32	35.66	18.24	Peak
2	6147.800	100.03	-----	-----	81.20	18.83	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax160_6185MHz
TEST BY :Caster

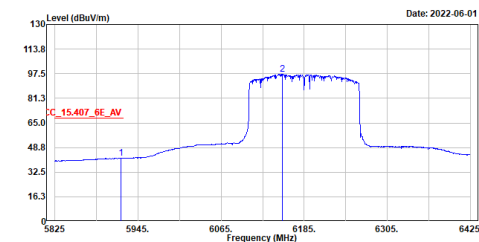

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5920.400	41.79	68.22	-26.43	23.56	18.23	Average
2	6153.800	97.00	-----	-----	78.17	18.83	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax160_6185MHz
TEST BY :Caster

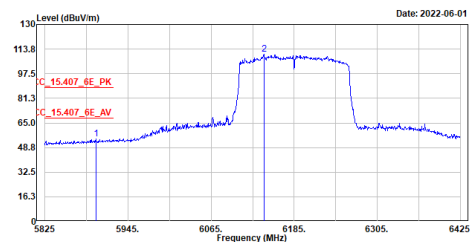

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5898.800	54.41	88.22	-33.81	36.22	18.19	Peak
2	6141.200	110.33	-----	-----	91.52	18.81	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax160_6985MHz
TEST BY :Caster

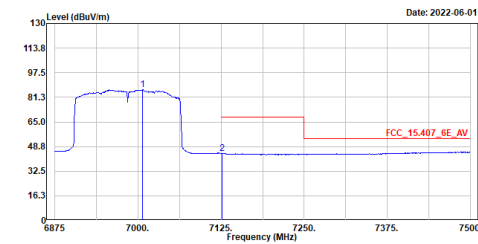

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	7006.875	86.37	-----	-----	66.55	19.82	Average
2	7126.875	44.24	68.22	-23.98	24.37	19.87	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax160_6985MHz
TEST BY :Caster

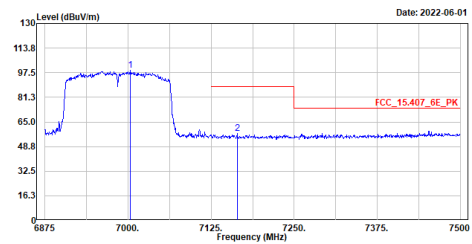

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	7003.750	98.93	-----	-----	79.11	19.82	Peak
2	7164.375	57.30	88.22	-30.92	37.42	19.88	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax160_6985MHz
TEST BY :Caster

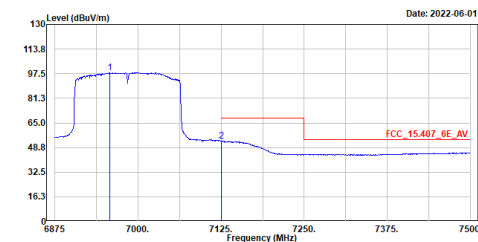

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	6957.500	98.07	-----	-----	78.38	19.69	Average
2	7125.000	53.16	68.22	-15.06	33.28	19.88	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax160_6985MHz
TEST BY :Caster

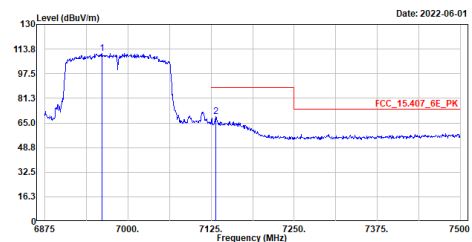


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	6960.625	111.08	-----	-----	91.38	19.70	Peak
2	7132.500	68.95	88.22	-19.27	49.69	19.86	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna- Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

8. In-Band Emission (Mask)

8.1. Test Setup

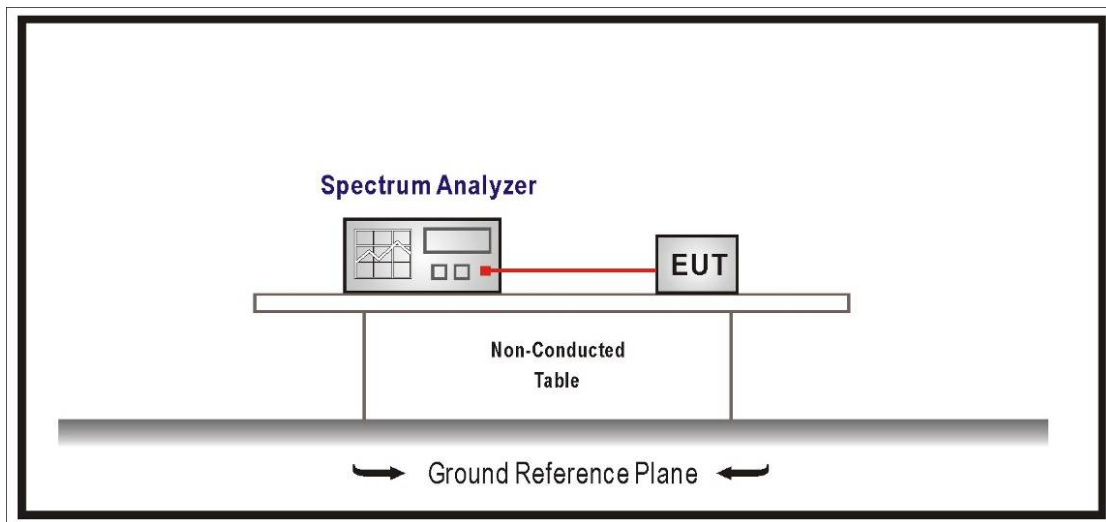

8.2. Limits

Test Items	Frequencies (MHz)	(X) dBc*1
Emission Mask	At 1MHz outside of channel edge	20
	At one channel bandwidth from the channel center*2	28
	At one- and one-half times the channel bandwidth away from channel center*3	40
	More than one- and one-half times the channel bandwidth	40

Remark:

1. The power spectral density must be suppressed by “x” dB.
2. At frequencies between one megahertz outside an unlicensed device’s channel edge and one channel bandwidth from the center of the channel, the Limits must be linearly interpolated between 20dB and 28dB suppression.
3. At frequencies between one and one- and one-half times an unlicensed device’s channel bandwidth, the Limits must be linearly interpolated between 28dB and 40dB suppression.

8.3. Test Procedure

1. Connect output of the antenna port to a spectrum analyzer and adjust appropriate attenuation.
2. Measure the 26 dB EBW using the test procedure 12.4.1 of ANSI C63.10-2013. (Determine the channel edge.)
3. Measure the power spectral density (for emissions mask reference) using the following procedure:
 - (1) Set the span to encompass the entire 26 dB EBW of the signal.
 - (2) Set RBW = same RBW used for 26 dB EBW measurement.
 - (3) Set VBW $\geq 3 \times$ RBW
 - (4) Number of points in sweep $\geq [2 \times \text{span} / \text{RBW}]$.
 - (5) Sweep time = auto.
 - (6) Detector = RMS (i.e., power averaging)
 - (7) Trace average at least 100 traces in power averaging (rms) mode.
 - (8) Use the peak search function on the instrument to find the peak of the spectrum.
4. Using the measuring equipment Limit line function, develop the emissions mask based on the following requirements. The emissions power spectral density must be reduced below the peak power spectral density (in dB) as follows:
 - (1) Suppressed by 20 dB at 1 MHz outside of the channel edge. (The channel edge is defined as the 26-dB point on either side of the carrier center frequency.)
 - (2) Suppressed by 28 dB at one channel bandwidth from the channel center.
 - (3) Suppressed by 40 dB at one- and one-half times the channel bandwidth from the channel center.
5. Adjust the span to encompass the entire mask as necessary and clear trace.
6. Trace average at least 100 traces in power averaging (rms) mode.
7. Adjust the reference level as necessary so that the crest of the channel touches the top of the emission mask.

8.4. Test Result of In-Band Emission (Mask)

