

## Installation Procedure

# TM5040 Tank Monitor



**IMPORTANT** ❶ It is critical in all installations to ensure monitor's antenna is positioned vertically. This will achieve optimal signal strength, ensuring that you receive data in a timely manner and prolong the battery life of the monitor.

**NOTES** ❶ When monitoring multiple tanks that are connected (2x420s, 3x420s etc.), it is important to connect the monitor to the tank that's showing the lowest level. If they're equal, you should monitor the tank with the regulator.  
❷ Make sure the gauge is screwed on and fastened properly. Ensure that the gauge is clean and free of dirt and debris.



Do not  
pressure wash

**WARNING** Potential electrostatic charging hazard — wipe only with a damp cloth. Model TM5040 provides non-incendive circuit when connected to either sensor HE-LEAD-CIRC-6 or HE-LEAD-CIRC-6-RA or DH-LEAD-CIRC-6 or ACDH45.

**INSTALLATION** Always follow your local regulations and standards. If locally required, consult with certified personnel to ensure your installation is compliant. Equipment must be installed in accordance with manufacturer instructions and per the Canadian Electrical Code or National Electrical Code (as applicable). Final installation is subject to acceptance by Local Authority Having Jurisdiction.

## **Support**

+1 (514) 673-0244

+1 (844) 763-3344 (toll-free)

[support@otodata.com](mailto:support@otodata.com)

[otodatatankmonitors.com/support](https://otodatatankmonitors.com/support)

## **Emergency Support**

Available 24/7

1-833-529-9499

## Specifications

Propane, fuel, gases, water, chemicals, lubricants, temperature and more.  
A tank monitor to suit your corporate needs.

---

### Input

Remote Ready Hall Effect Module, I<sup>2</sup>C, Temperature

---

### Reporting & Outputs

Reporting	Tank level (5% variation) Low battery High/Excessive draw Fill Detection Temperature
Data Interface	API Email (to supplier and/or consumer) Raw data Online dashboard Client mobile app
Automated Testing	Network status Lead sensor status Battery status

---

### Electrical Specifications

Refer to markings label for battery pack used

---

### Radio Specifications

Technologies	CAT-M1 and NB-IoT Dual SIM Bluetooth
--------------	--

---

### Environmental Specifications

Operating and storage temperature range	-40 °C to 60 °C	-40 °F to 140 °F
Relative humidity range	0% to 100%	
Enclosure rating	IP20	
Warranty	5+ years	

---

### Certifications

Hazardous location classification Monitors are third-party QPS Evaluation Services Inc. certified for use in hazardous locations. Class 1, Division 2, Groups C&D T3 Class 1, Zone 2, Groups IIB T3 ISSED, FCC.

---

### Dimensions

Height	16 cm	6.3 in
Width	13 cm	5.1 in
Depth	11 cm	4.3 in

---

### Option

GPS (mobile tank)

**This device complies with part 15 of the FCC Rules.** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. **This device is compliant with Industry Canada's RSS standards for license-exempt radio apparatuses.** Authorized use depends on the following two conditions: (1) the device must not create radio interference, and (2) the device user must accept all radio interference, even if this interference could potentially impair its functioning. **This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.** These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: —Reorient or relocate the receiving antenna. —Increase the separation between the equipment and receiver. —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. —Consult the dealer or an experienced radio/TV technician for help. **To comply with FCC RF exposure compliance recommendations, a separation distance of at least 20 cm must be maintained between the antenna of this device and all persons.**


## Vertical Tanks

### Avoid signal obstruction

Position away from walls.


Position monitor so antenna is pointing upward.

- Use the supplied cable tie to secure the unit to the collar or mag-mount it on the shoulder near the collar (you may also strap the unit to a lifting hook);
- For optimal signal strength, ensure antenna is positioned vertically;
- Slide the remote sensor into the tank's remote-ready dial until it snaps into place, ensuring that the dial is clean;
- Ensure the lead wire snaps in properly;
- Installation is now complete.

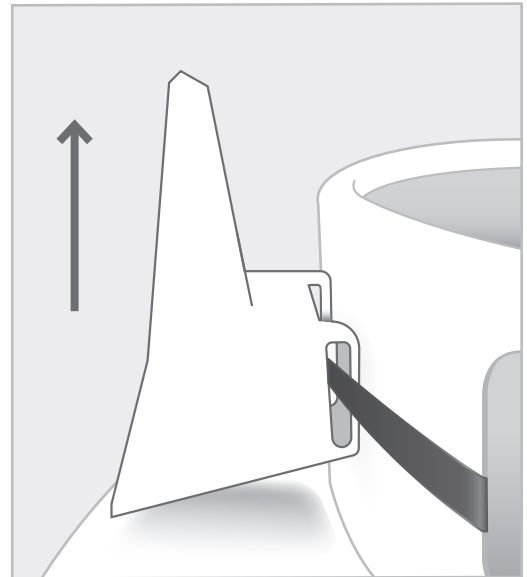


**NOTE:** For installations carried out as part of the TMAAS program, collar mounting with cable tie is mandatory.

### Optimal position

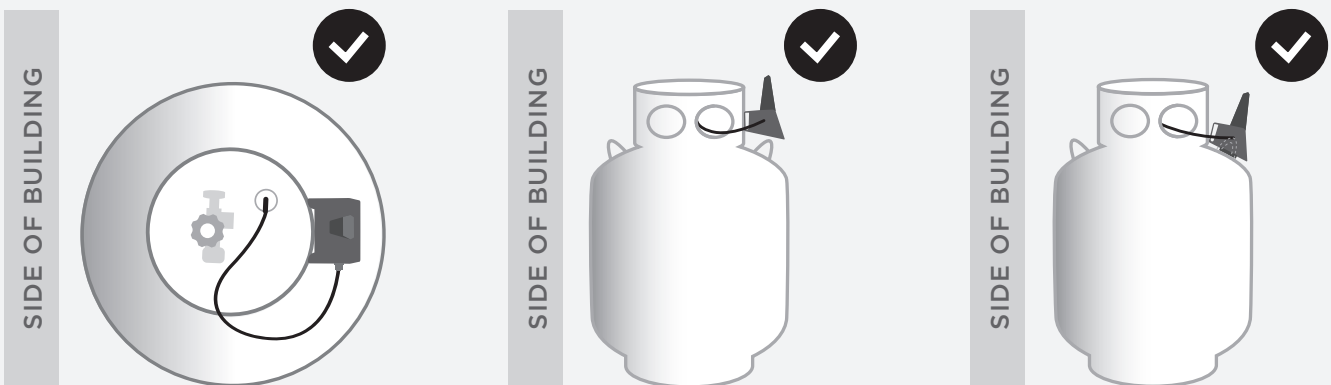

### Not optimal (may impact performance)

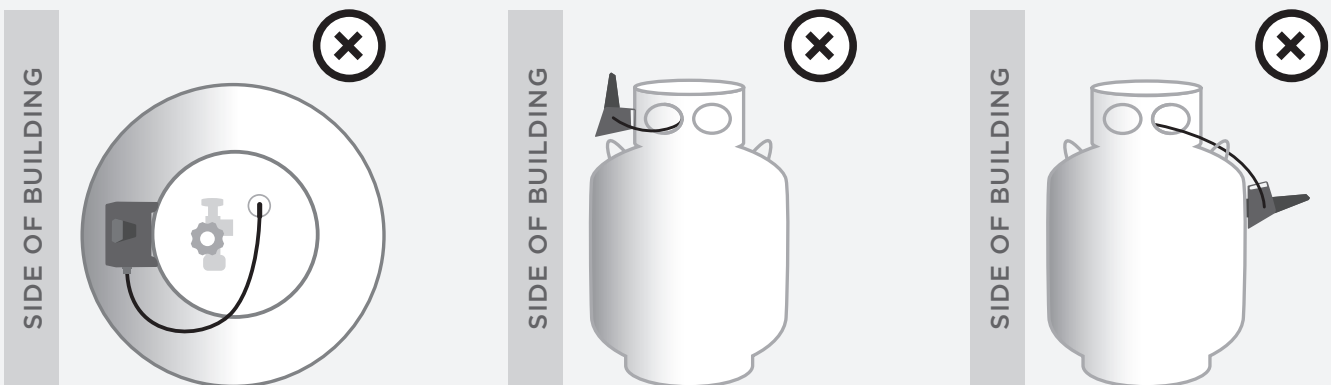


## Horizontal Tanks

### Protect your investment


To prevent lid cuts, lead wire must be fastened to feed-line.

- f) Use the supplied cable tie to secure the unit to the collar or mag-mount it on the shoulder near the collar (you may also strap the unit to a lifting hook);
- g) For optimal signal strength, please ensure the antenna is positioned vertically;
- h) Slide the remote sensor into the tank's remote-ready dial until it snaps into place, ensuring that the dial is clean;
- i) Ensure the lead wire snaps in properly;
- j) Installation is now complete.

**Installation with feedline**

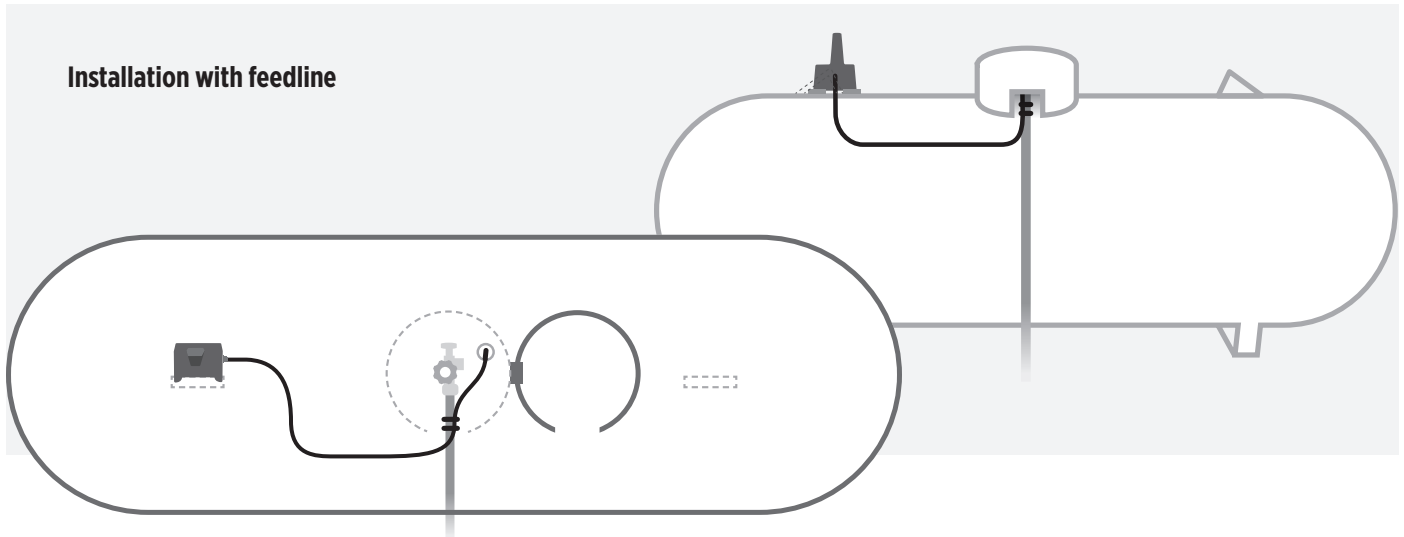

**Alternate method without feedline**

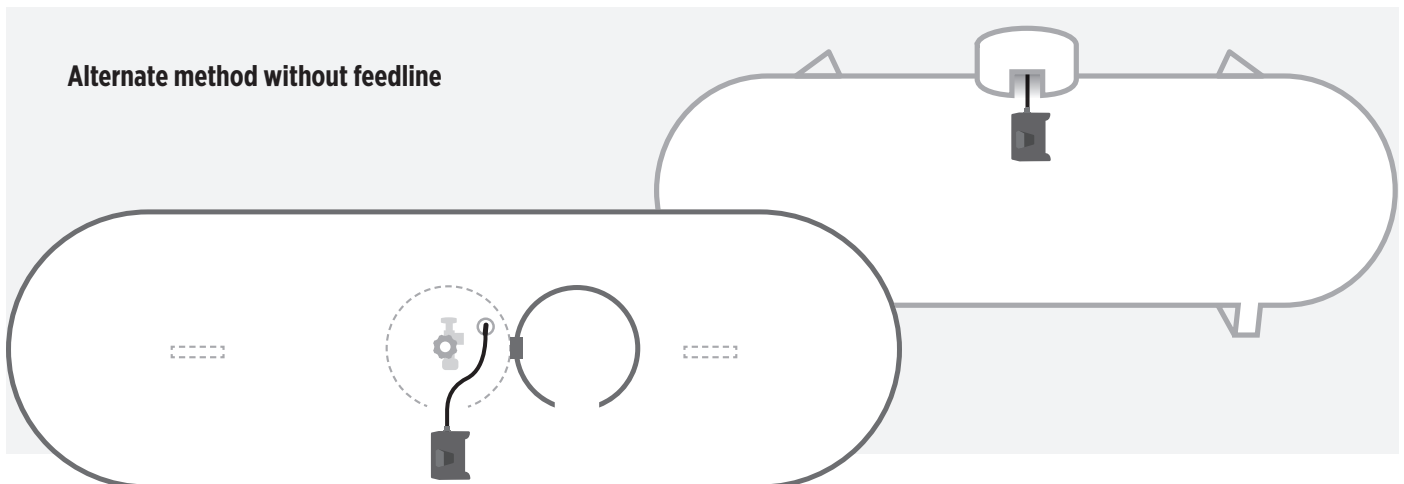

## Underground Tanks

Metal pit lids will obstruct monitor's signal

Metal pit lids will obstruct the monitor's signal. Install exclusively under plastic lids.


### AGUG Tanks

If pit walls are plastic

Pit bracket not required. Position monitor so antenna is facing *toward* plastic wall.


If pit walls are metal


Pit bracket is required (SKU ACNV04BRKT1).  
Mount monitor so antenna is facing *away* from wall.

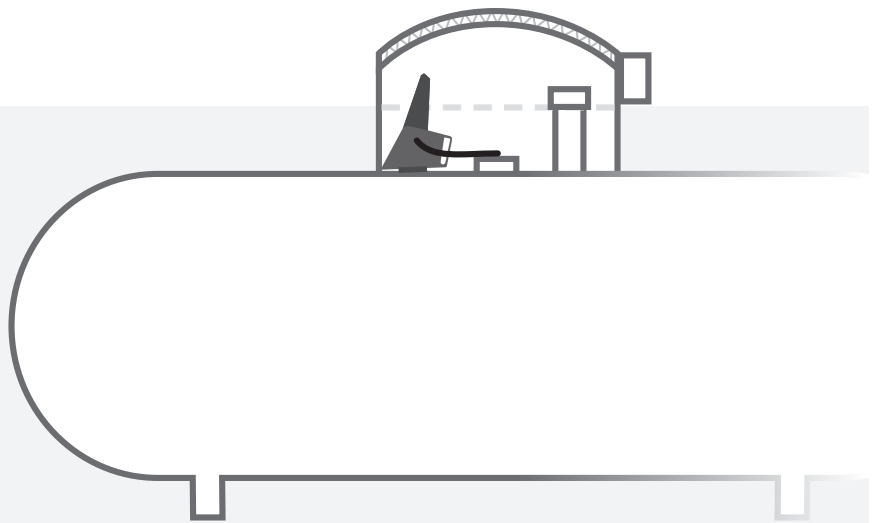

### Other Tanks

Pit bracket is required (SKU ACNV04BRKT1).  
Mount as high as possible within pit.

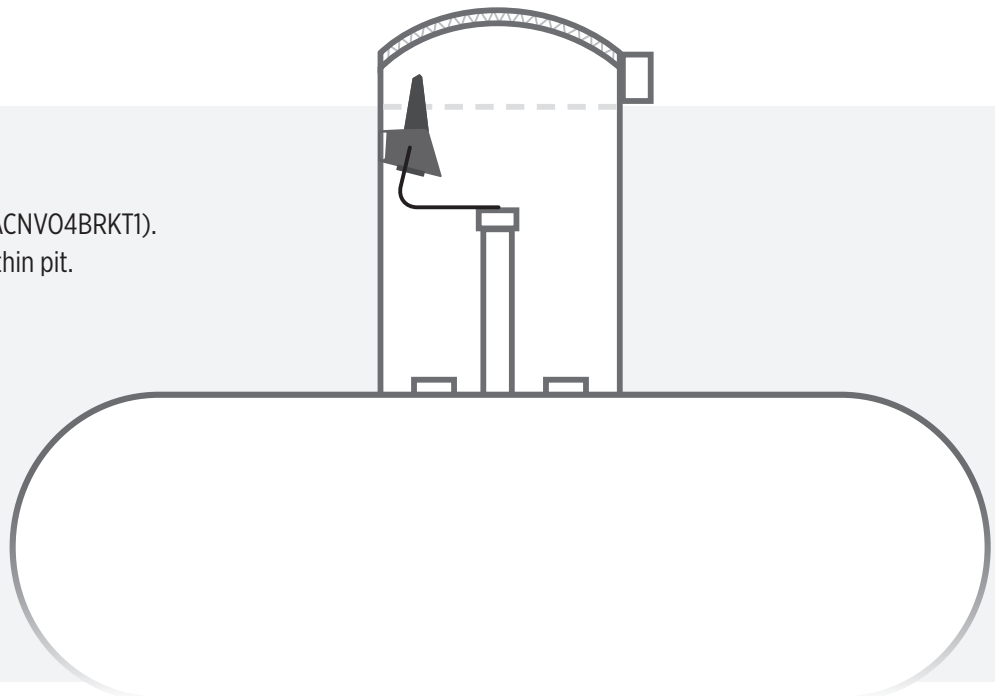

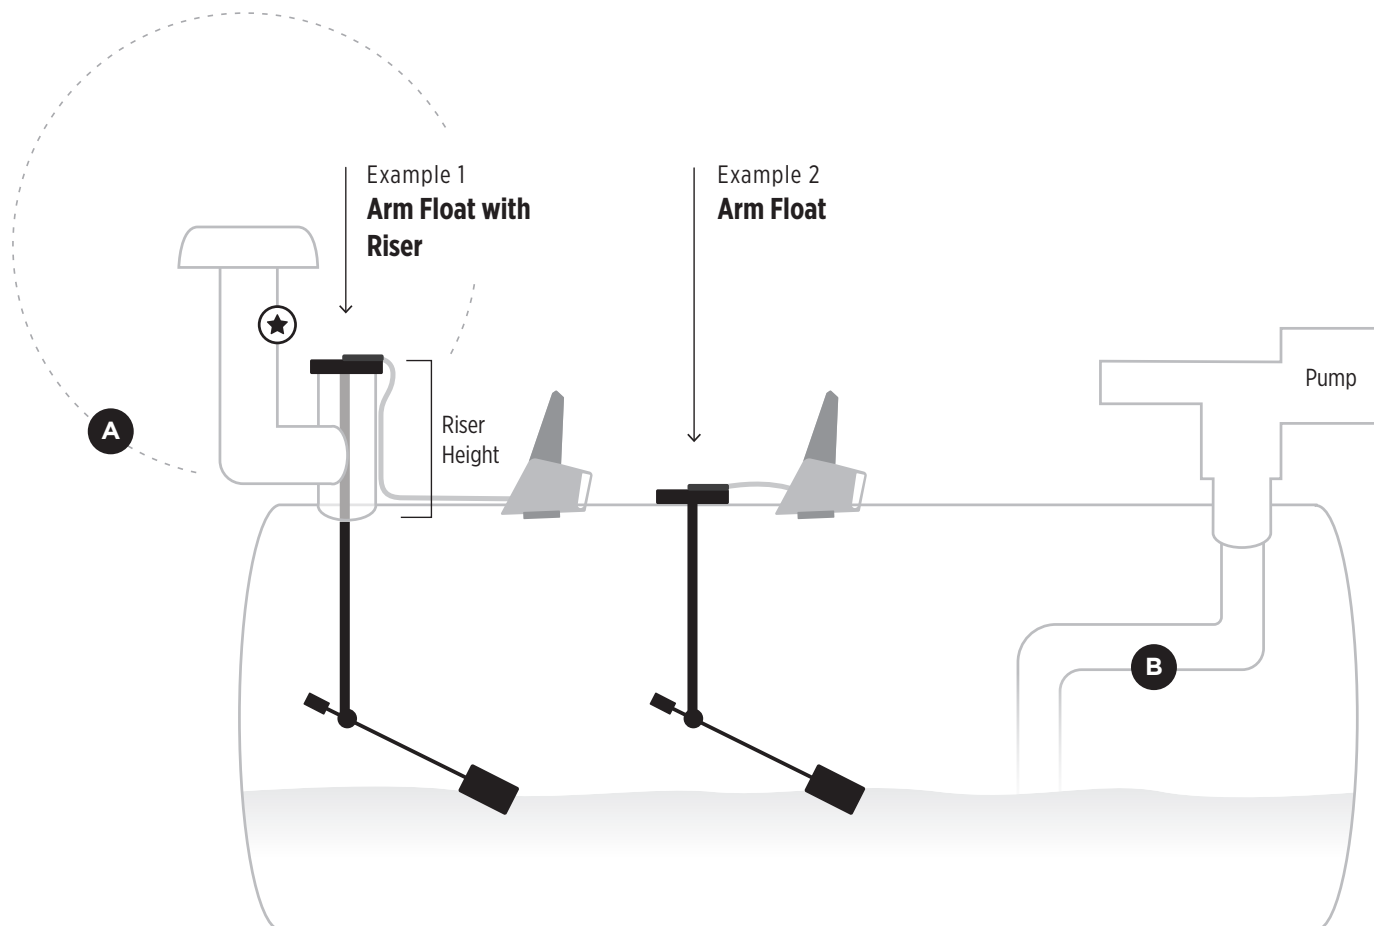

**A Hazardous Location Sphere**  
Extends 5 feet in all directions from top of venting pipe. Monitors must clear this area.

**B Obstructions May Cause Read Problems**  
Walls, piping, fuel line, in-tank braces...etc. may interfere with arm float.

**★ T-Vent Not Legal Everywhere**  
Verify local regulations.

### Important

It is critical in all installations to ensure the monitor's antenna is positioned vertically.

- a) This will achieve optimal signal strength, ensuring that you receive the data in a timely manner and;
- b) Prolong the battery life of the monitor, saving time and money in the long run.

### Installation Procedure


- a) Mount the monitor magnetically on top of the tank;
- b) Install float in tank;
- c) Clip remote-ready sensor to dial ensuring it snaps in securely;
- d) Installation complete.

### To Order Floats

Floats are made to order. We require:

- a) Inner diameter of tank (height and width);
- b) Riser height (if applicable).

### Notes

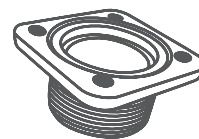

Arm Float is not threaded. Requires 4-bolt adapter (1 ½" or 2").

### Plug & Play

Save precious time and money. Plug our monitors in and walk away! No magnet swipe. No programming. Shipped active.

# IMPORTANT

## Carefully Read Directions Below Before Installation







HALL EFFECT DIAL UNDER PLASTIC COVER (2 SCREW)

**To ensure accurate readings, the Otodata Support team must calibrate monitors for ALL bulk storage dials.**

Please contact Otodata upon installation of large dials on bulk propane tanks by phone 1-844-763-3344, email [support@otodata.ca](mailto:support@otodata.ca), or RFS\*.

Please have the monitor serial number and accessory descriptions on hand.

i.e. provide dial range (5%-95% or 3%-97%), dial size (4 inch or 8 inch), and lead type:

-  Blank Dial Lead (ACKITGBLK10)
-  Right Angle Lead (ACHERA)
-  Straight Lead (ACHESL)
-  Universal/Digital Lead (ACDH45)



**Members can watch  
step-by-step installation  
videos and shop online**



**Sign up free today**

**[otodatatankmonitors.com/membership](https://otodatatankmonitors.com/membership)**

Members can purchase monitors and accessories like gauges, leads, mounting equipment and more via our online store.

# IMPORTANT

Please take a moment to carefully read the installation instructions included with your monitors, and ensure you understand and respect local regulations.

## **ABOVE-GROUND TANKS**

**Do not install monitors  
under lids.**

## **UNDERGROUND TANKS**

**Plastic lid suggested.  
Metal lids will obstruct signal.**

Reading installation instructions will ensure maximum monitoring performance on all your tanks and installations.