

SC07-MR

**Link+ Pro Combination Smoke and
Carbon Monoxide Alarm**

User Manual



Scan the QR code to
view the product model.


Introduction


All X-Sense combination smoke and carbon monoxide alarms conform with regulatory requirements, including **UL 217** and **UL 2034** standards and are designed to detect both smoke and carbon monoxide.

This alarm supports Link⁺ Pro. Please note the following:


- 1. Only devices that are advertised as supporting Link⁺ Pro can be connected to the app via the base station.*
- 2. Link⁺ Pro supports both base station connection and a customizable wireless network as separate networks. You can only connect a device to one of them at a time. If you connect them to the base station, you'll receive app notifications but lose the customizable wireless network. Choosing the customizable wireless network means disconnecting from the base station and losing app notifications. Wireless interconnection is supported regardless of your choice.*
- 3. This device can be interconnected with other Link⁺ series devices to create a customizable wireless network.*
- 4. Switching between the base station and customizable wireless network is simple and can be done at any time by following the corresponding adding method.*
- 5. Please note that the interlinked test function is not supported by the base station.*

Product Overview

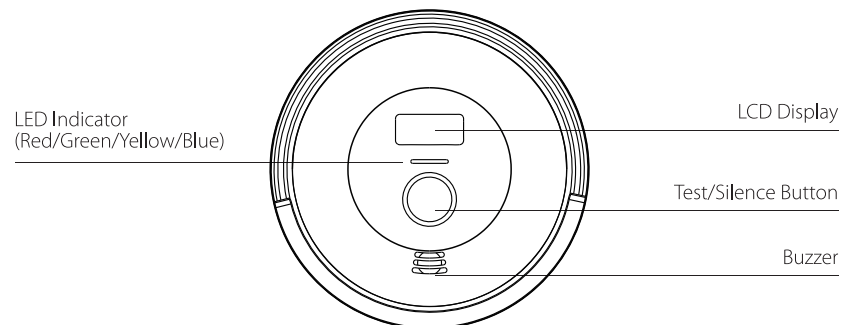





Package Contents

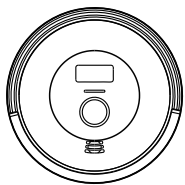


Alarm Unit
(Pre-installed Battery)

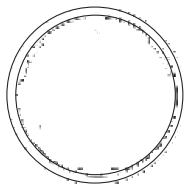

Mounting Bracket

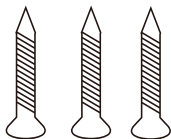

Screws

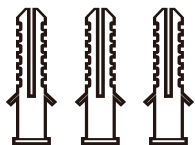


Anchor Plugs



User Manual



Battery
(pre-installed)

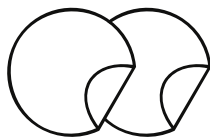

Carbon Monoxide
Safety Stickers

Safety Information

DANGERS, WARNINGS, AND CAUTIONS ALERT YOU TO IMPORTANT INSTALLATION AND OPERATING INSTRUCTIONS, OR POTENTIAL HAZARDS. PLEASE PAY ATTENTION TO THE SITUATIONS.

! IMPORTANT


1. THIS DEVICE IS NOT DESIGNED FOR HEARING-IMPAIRED PEOPLE. USE OF ALCOHOL OR DRUGS MAY IMPAIR ONE'S ABILITY TO HEAR THE ALARM.
2. FIRES IN CHIMNEYS, WALLS, ROOFS, OR BEHIND CLOSED DOORS MAY NOT BE DETECTED.
3. THIS DEVICE IS DESIGNED TO DETECT CARBON MONOXIDE GAS FROM ANY COMBUSTION SOURCE. IT IS NOT DESIGNED TO DETECT ANY OTHER GASES UNLESS THE PRODUCT HAS BEEN INVESTIGATED AND DETERMINED TO MEET APPLICABLE REQUIREMENTS.

! WARNING


1. NEVER IGNORE AN ALARM. FAILURE TO RESPOND CAN RESULT IN SERIOUS INJURY OR EVEN DEATH.
2. THE SILENCE FEATURE IS ONLY FOR YOUR CONVENIENCE AND WILL NOT CORRECT A PROBLEM. ALWAYS CHECK YOUR HOME FOR ANY POTENTIAL HAZARDS EVERY TIME AN ALARM SOUNDS.
3. TEST THIS ALARM ONCE A WEEK. IF THE ALARM FAILS TO TEST CORRECTLY, REPLACE IT IMMEDIATELY! IF THE ALARM IS NOT WORKING PROPERLY, IT WILL NOT ALERT YOU TO A PROBLEM.

Device Setup

Download the X-Sense Home Security App

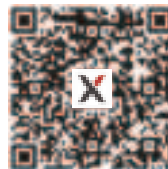

Download on the
App Store

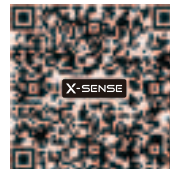

GET IT ON
Google Play

To download the **X-Sense Home Security** App, scan the QR code or search for "**X-Sense Home Security**" in the Apple App Store or Google Play Store. Sign up with a valid email address. If you already have an account, make sure the app is updated to the latest version.

NOTE: Make sure your smartphone supports iOS 11 and higher, or Android 8.0 and higher.

Before connecting devices, make sure that:

1. You know your Wi-Fi network name and password.
2. You are connecting your device using a 2.4 GHz Wi-Fi network (incompatible with 5 GHz Wi-Fi network).
3. Make sure the Bluetooth on your phone is turned on.

NOTE: When the device is configured via Wi-Fi, make sure your mobile phone and devices are as close to the router as possible, which can speed up device configuration.

Connect the Link+ Pro Alarm to the Base Station

The Link+ Pro Alarm can be connected to the base station through the wireless network. When the alarm is connected to the base station, you can receive push notifications wherever you are to stay informed of the device status, and to silence an alarm from your smartphone.

NOTE: Before adding devices to the system, make sure the base station has been successfully added to the app.

1. Tap "⊕", select "Combination Smoke and CO Alarms", and then select "Link+ Pro Combination Alarm (SC07-MR)" in the product list. After that, tap "Next" to enter the next page.
2. Follow the prompts on the page by pressing the test/silence button twice on the alarm. The device will beep once and the LED will flash blue rapidly, indicating that the device is waiting to connect to the Wi-Fi.
3. Tap "Next" to add the device. You will hear "Ready to add the device."
4. After successfully connected, the device will beep once, and the "Device added" page will appear. Then you can find the alarm in the device list.
5. If you want to add multiple devices into the system, please repeat the above steps.

NOTE: If the device is not added to the network within 60 seconds, it will automatically stop trying to connect. You will need to repeat the steps to try again.

App Features

Notifications: You will receive push notifications on the app for alarms, danger cleared, low battery, device malfunction, end of life, etc.

Device Test: Simply tap the Device Test button in the app to test whether the device is functioning properly.

Device Sharing: You can share the device with your family members and friends. They will receive app push notifications for alarms and have the ability to silence the device, view historical events, etc.

Interconnect the Alarms Without Adding to the Base Station

If you don't want to add the alarms to the base station, you can connect the alarms using RF technology to create an interconnected alarm system. However, you will no longer be able to receive push notifications on your phone from the X-Sense Home Security app.

NOTE: The SC07-MR alarms can be connected to the X-Sense Link+ Pro and Link+ alarms using wireless interconnection without being connected to the base station.

Powering On

For initial use, remove the battery insulation film to power on. The device will emit a beep, and the LCD backlight will turn on, displaying "--". The LED indicator will flash yellow, green, and red in sequence, 8 times. Then the LCD backlight will turn off, displaying "0". The LED will turn off, and the device will enter standby mode, ready for customizable network setup.

How to Set Up and Interconnect Wireless Alarms

X-Sense alarms can connect wirelessly to form a network. When one alarm goes off, all others do too. These alarms include smoke, carbon monoxide, and combination detectors. They only link with other X-Sense alarms, not different brands. If you bought a multi-pack without a base station, they're already linked. Otherwise, connect each device one by one. For multiple packs, pick one as the base and link the others to it.


NOTE: The following instructions regarding wireless interconnection are applicable to the X-Sense Link+ Pro and Link+ wireless interlinked alarms only.


How to Interconnect

1. Work with only two units at a time, ensuring they are both turned on for successful connection.
2. Press the test/silence button on one unit four times; it will enter pairing mode. Press the other unit's button twice; it will be ready to connect.
3. Upon successful search and group creation, both units will confirm connection, beep once, and exit pairing mode.
4. To add a third alarm, repeat step 2 with any of the connected units and the new device.
5. For additional units, repeat step 4.

NOTE: For XH02-M, use the pairing button on the back, not the front test/silence button.

6. Test alarms following the steps in the "Alarm Test" section.

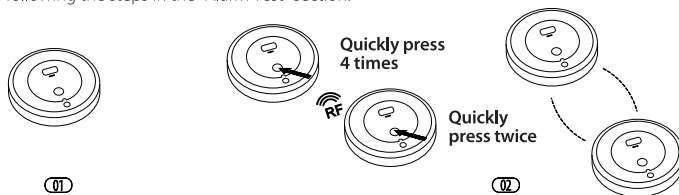

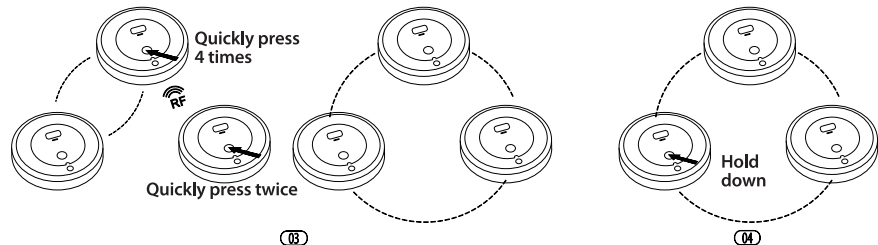

NOTES

1. The alarm enters 60-second searching/pairing mode with a flashing blue LED. Repeat step 2 after 60 seconds for connection. Press Test/Silence once to exit pairing mode and return to normal status.
2. Test all wireless alarms for interconnection before installation.
3. Maximum 24 wireless alarms can interconnect on the same network.
4. Interconnect only with the same model or other X-Sense Link+ Pro and Link+ wireless alarms.

How to Disconnect

Quickly press the test button 4 times, and the device will emit a beep while the LED indicator will flash blue slowly. Then, press and hold the test button, and the device will emit another beep. At this point, the device will exit the network and become a standalone device. Afterward, reconnect to the same or a new network.

NOTE: For multi-packs without a base station, they're pre-linked; disconnect each alarm individually to form a new network.

Alarm Test

	Test a Single Alarm	Test All Interconnected Alarms
Action	<ul style="list-style-type: none"> • Press the test/silence button. • Tap the Device Test button in the app. 	Hold down the test/silence button.
Indication	<ul style="list-style-type: none"> • The alarm will emit 2 sets of 3 long beeps followed by 2 sets of 4 quick beeps, paired with the LED flashing red. • For devices connected to the base station, a push notification will be sent to your smartphone. • Then the alarm will automatically enter standby mode. 	<ul style="list-style-type: none"> • The initiating unit will beep continuously with the LED flashing red. • Other interconnected alarms in the network will receive the test signal after 5 seconds, then they will beep continuously with the LED flashing red and green successively. Release the test/silence button and all the units will stop testing. • The testing should be completed within 3 minutes. • After testing, the units will automatically enter standby mode.

NOTE

1. Test the alarm once a week.
2. The devices connected to the base station can only be tested individually. The interconnected devices that are not connected to the base station can be tested by holding down the test/silence button on one of the devices.
3. Pressing the Test/Silence button with your finger is the recommended testing method, which comprehensively checks the sensors, electronic circuits, buzzer, battery, and other components in the alarm. Never use an open flame or any other instrument to test this device.

Installation Positioning

NOTE: Before installation, it is recommended to test the interconnected alarms in the rooms where you intend to install them to ensure that they are within transmission range and that nothing will interfere with their communication.

For your reference, the content of NFPA 72, National Fire Alarm and Signaling Code, is as follows:


29.5.1 *Required Detection.

*29.5.1.1 Where required by applicable laws, codes, or standards for a specific type of occupancy, approved single-and multiple-station smoke alarms shall be installed as follows:

- (1) *In all sleeping rooms and guest rooms
- (2) *Outside of each separate dwelling unit sleeping area, within 21 ft (6.4 m) of any door to a sleeping room, the distance measured along a path of travel
- (3) On every level of a dwelling unit, including basements
- (4) On every level of a residential board and care occupancy (small facility), including basements and excluding crawl spaces and unfinished attics
- (5) *In the living area(s) of a guest suite
- (6) In the living area(s) of a residential board and care occupancy (small facility)

Installation Locations

1. Prioritize the installation of an alarm in the bedroom and walkways, and make sure you can hear the alarm from all sleeping areas. In a home with several bedrooms, install an alarm in every bedroom. If you install only one smoke alarm in your home, install the alarm near to all bedrooms where possible, and not in a basement or furnace room.
2. Install an alarm above the stairway and on every floor of the house.
3. Smoke, heat and anything burning will spread horizontally after rising to the ceiling, so install the alarm in the middle of the ceiling where possible. Ensure the alarm is within working distance of all corners of the room.
4. If an alarm cannot be installed in the middle of a ceiling, install at a distance of 20 inches (50 cm) away from the corners of the room.
5. If an alarm is installed on a wall, it should be at a distance of 4-12 inches (10-30 cm) below the ceiling.
6. If the length of a room or hall is beyond 30 feet (900 cm), you will need to install several alarms in the same room.
7. When the wall or ceiling is angled, the alarm needs to be installed within 3 feet (90 cm) of the highest wall or ceiling point (measured horizontally) in the room.

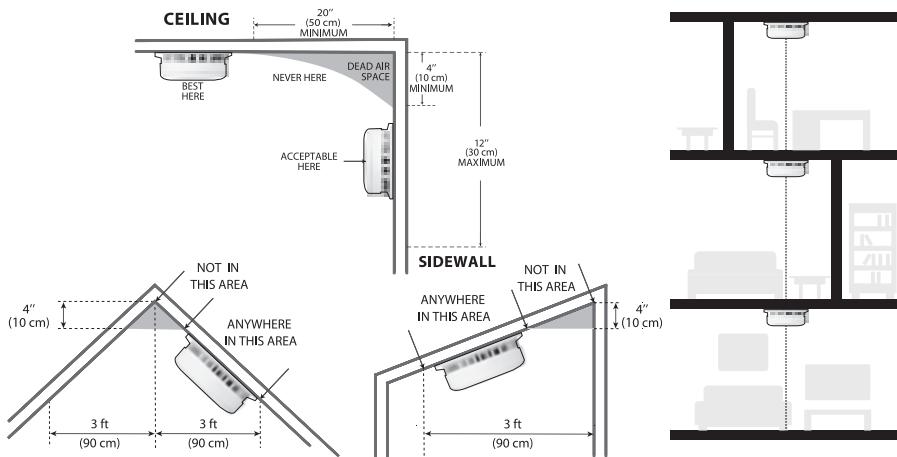

8. In multi-level houses or apartments, install at least one wireless alarm on each level and keep them installed in a straight vertical line (see diagram) with as few obstacles between each of the interconnected alarms as possible to ensure optimal signal transmission.

Locations to Avoid:


1. Near large metal surfaces and/or bundles of wire.
2. Near fluorescent lights, amateur radios, electrical equipment, or other devices that may transmit an RF signal, as electronic noise may cause nuisance alarms.

Recommended Placement

⚠ WARNING

1. THIS ALARM SHOULD BE INSTALLED BY A COMPETENT PERSON.

2. INSTALLATION OF THE ALARM SHOULD NOT BE USED AS A SUBSTITUTE FOR PROPER INSTALLATION, USE AND MAINTENANCE OF FUEL BURNING APPLIANCES INCLUDING APPROPRIATE VENTILATION AND EXHAUST SYSTEMS.

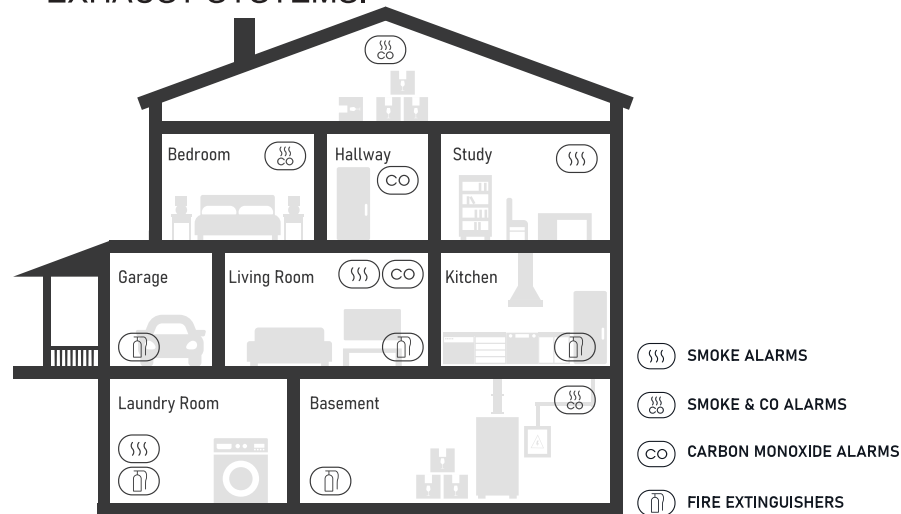

How to Install This Alarm

⚠ IMPORTANT

- THIS EQUIPMENT SHOULD BE INSTALLED IN ACCORDANCE WITH THE NATIONAL FIRE PROTECTION ASSOCIATION'S STANDARD 72 (National Fire Protection Association, Batterymarch Park, Quincy, MA 02269).
- THIS COMBINATION SMOKE/CO ALARM IS DESIGNED TO BE MOUNTED ON THE CEILING OR WALL.

⚠ WARNING

FAILURE TO PROPERLY INSTALL AND ACTIVATE THIS ALARM WILL PREVENT PROPER OPERATION OF THE ALARM AND WILL PREVENT ITS RESPONSE TO FIRE HAZARDS OR CO.

Locations to Avoid

⚠ WARNING

THIS PRODUCT IS INTENDED FOR USE IN ORDINARY INDOOR LOCATIONS OF FAMILY LIVING UNITS. IT IS NOT DESIGNED TO MEASURE CO LEVELS IN COMPLIANCE WITH THE OCCUPATIONAL SAFETY AND HEALTH ADMINISTRATION (OSHA) COMMERCIAL OR INDUSTRIAL STANDARDS.

1. Do not install in garages, kitchens, furnace rooms or bathrooms! Do not install within 5 ft (1.5 m) of cooking appliances.
2. Do not install within 3 ft (0.9 m) of the following: The door to a kitchen, or a bathroom that contains a tub or shower, forced air supply ducts used for heating or cooling, ceiling or whole house ventilating fans, or other high air flow areas. Avoid excessively dusty, dirty or greasy areas. Dust, grease or household chemicals can contaminate the alarm's sensors, causing the alarm to not operate properly.
3. Place the alarm where drapes or other objects will not block the sensors. Smoke and CO must be able to reach the sensors to accurately detect these conditions. Do not install in peaks of vaulted ceilings, "A" frame ceilings or gabled roofs. Keep out of damp and humid areas.
4. Install at least one (1) foot away from fluorescent lights, as electronic noise may cause nuisance alarms.
5. Do not place in direct sunlight and keep out of insect-infested areas. Extreme temperatures will affect the sensitivity of the smoke/CO alarm.
6. Do not install in areas where the temperature is colder than 40°F (4.4°C) or hotter than 100°F (37.8°C), such as garages and unfinished attics.

7. Do not install in areas where the relative humidity (RH) is above 85% or below 10%. Place away from doors and windows that open to the outside.
8. Smoke alarms are not to be used with detector guards unless the combination (alarm and guard) has been evaluated and found suitable for that purpose.


Possible situations where a smoke alarm may not function:

- 1) Fires where the victim is intimate with a flaming initiated fire; for example, when a person's clothes catch fire while cooking;
- 2) Fires where the smoke is prevented from reaching the smoke alarm due to a closed door or other obstruction;
- 3) Incendiary fires where the fire grows so rapidly that an occupant's egress is blocked even with properly located smoke alarms.

Mounting Steps

NOTE: Before installation, it is recommended to test the interconnected alarms in the rooms where you intend to install them to ensure they are within transmission range and that nothing will interfere with their communication.


1. Drill three Ø 6.0 mm holes in the wall or ceiling, then insert three plastic anchor plugs into the holes with a hammer.
2. Attach the mounting bracket to the surface of the wall or ceiling with three screws and mount the alarm into the bracket by pushing them together and twisting the unit clockwise.
3. Test the unit by using the Test/Silence button. Ensure the unit sounds in an alarm pattern.

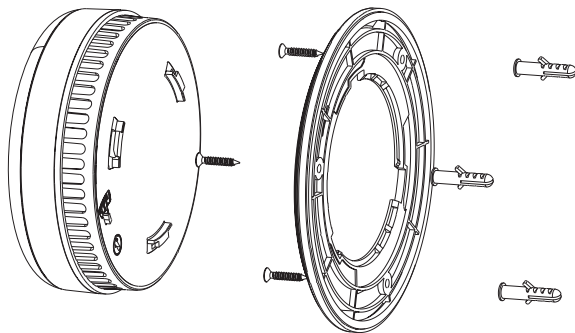

Peak CO Concentration Memory and Reset

The peak CO concentration feature is helpful in identifying if there have been any dangerous CO readings since a peak CO concentration reset.

Each time you push the test button, the LCD displays the peak CO concentration recorded since the previous reset. The peak CO concentration will be displayed for 5 seconds, and then the device will enter standby mode. In the example, 300 ppm was the maximum CO concentration recorded since the unit was last reset.



Peak CO Concentration Reset: During the 5 seconds when the LCD displays the peak CO concentration, press and hold the test button for 3 seconds, the device will beep, the LED will flash green, and the peak CO concentration will be reset with LCD displaying "0."

NOTE

- If the carbon monoxide concentration is lower than 30 ppm, it will not be recorded in the peak CO concentration.
- The peak CO record and reset function are only supported on the device itself and are not controllable through the app.

Alarm Mode

For devices connected to the base station:

- Triggered alarms show in-app messages and push notifications.
- All system-connected devices and the base station sound alarms together.
- Base station auto-mutes after 10 minutes but system devices continue.
- If the base station powers off, interconnected devices still alarm.
- Adjust base station volume and mute alarms through the app. Receive push notification if smoke or CO levels drop below the alarm threshold.
 1. If one SC07-MR alarm detects smoke, it beeps 3 times every 4 seconds with a red flashing LED. Other units follow, beeping and flashing red/green.
 2. If one CO alarm detects carbon monoxide, it beeps 4 times every 5.8 seconds with a red flashing LED. Other units follow, beeping and flashing red/green.

For more details, please see "LED Indicator and Audible Alarm".

NOTES

- Triggering one unit activates others; smoke alarm takes priority over CO alarm.
- The alarm extends the wireless network for wide detection coverage with a relay function.

⚠WARNING

THERE IS EVIDENCE TO SUGGEST THAT CURRENT RESEARCH INDICATES SMOKE ALARMS MAY NOT WAKE ALL SLEEPING INDIVIDUALS, AND THOSE IN HOUSEHOLDS CAPABLE OF ASSISTING OTHERS HAVE A RESPONSIBILITY TO AID THOSE WHO MAY NOT BE AWAKENED BY THE ALARM, OR THOSE WHO MAY BE UNABLE TO SAFELY EVACUATE THE AREA WITHOUT ASSISTANCE.

⚠WARNING

Actuation of your CO alarm indicates the presence of carbon monoxide (CO) which can KILL YOU. If alarm signal sounds:

- 1) Operate reset/silence button (test/silence button).
- 2) Call your emergency services (Telephone Number) [fire department or 911].
- 3) Immediately move to fresh air - outdoors or by an open door/window. Do a head count to check that all persons are accounted for. Do not reenter the premises nor move away from the open door/window until the emergency services responders have arrived, the premises have been aired out, and your alarm remains in its normal condition.
- 4) After following steps 1-3, if your alarm reactivates within a 24-hour period, repeat steps 1-3 and call a qualified appliance technician (Telephone Number) to investigate for sources of CO from fuel-burning equipment and appliances, and inspect for proper operation of this equipment. If problems are identified during this inspection have the equipment serviced immediately. Note any combustion equipment not inspected by the technician and consult the manufacturers' instructions, or contact the manufacturers directly, for more information about CO safety and this equipment. Make sure that motor vehicles are not, and have not been, operating in an attached garage or adjacent to the residence.

 **CAUTION**

- This alarm will only indicate the presence of carbon monoxide gas at the sensor. Carbon monoxide gas may be present in other areas.
- Individuals with health concerns may consider using a warning device that provides sound and visual signals when carbon monoxide levels are below 30 ppm.

Silence Mode

Silence the device by pressing the test/silence button or using the app. During an alarm, pressing it sends a push notification, and enters silence mode for 9 minutes. Afterward, the LED flashes green 3 times, and the device returns to normal mode.

NOTE: If the smoke concentration is too high, the device cannot be silenced.

Connected to Base Station:

- Press base station Silence or app button to silence passive devices, then test/silence on the initiating alarm.
- Use the app Locate to find the initiating alarm; others stop alarming.

Not Connected to Base Station:

- Press test/silence on one device to silence passives; silencing the initiator silences all.

- NOTES**
1. Silence all interconnected units by pressing Test/Silence on one unit. If any unit continues alarming, the initiating unit must also have its Test/Silence button pressed.
 2. During the 9-minute silence, the initiating unit can't trigger again, but other units can if danger is detected.
 3. Before silencing the alarm by pressing the silence button or via the app, please verify that there is actual smoke present at the initiating alarm.


Battery Replacement

Low Battery

The LED flashes yellow and beep once every 60 seconds.
(If you press the test button when there is low battery, the low battery signal will temporarily cease for 10 hours.)

Replacing Battery

1. To replace the battery, detach the smoke alarm from the mounting bracket by twisting counterclockwise.
2. Remove the battery, and then install a new battery, matching the correct polarity markings.
3. Test the alarm, and then mount the alarm onto the mounting bracket by twisting clockwise to lock the alarm.

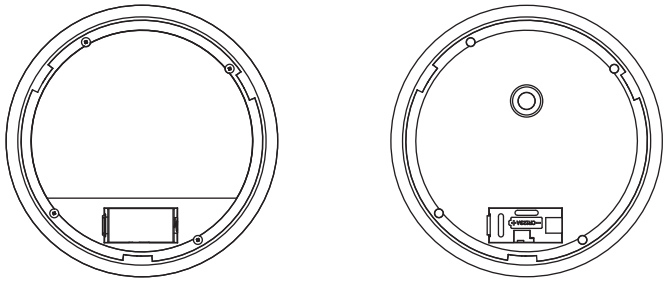

- WARNING: CONSTANT EXPOSURES TO HIGH OR LOW TEMPERATURES OR HIGH HUMIDITY MAY REDUCE BATTERY LIFE.
- WARNING: USE ONLY BATTERIES SPECIFIED IN MARKING. USE OF A DIFFERENT BATTERY WILL HAVE A DETRIMENTAL EFFECT ON ALARM OPERATION.
- WARNING: KEEP NEW OR OLD USED BATTERIES OUT OF REACH OF CHILDREN.
- In the event of a battery leaking, do not allow the liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice immediately.
- NEVER charge a battery unless it is a rechargeable battery.
- Batteries must be inserted with the correct polarity. Replacement of a battery with an incorrect type can defeat the safeguard. There will be a risk of fire or explosion if a battery is replaced by an incorrect type.












End of Life

When the device reaches its end of life, the LED will flash yellow 3 times and beep 3 times every 60 seconds. This end-of-life signal can be temporarily silenced for 22 hours by pressing the test button.
The end-of-life silence feature can only be used for a total of 30 days. After 30 days, the end-of-life signal cannot be silenced.

LED Indicator and Alarm Guide

Mode		LCD Display	LED Indicator	Buzzer	Remarks
Powering On			Runs through 8 cycles (yellow/green/red) in sequence.	1 beep.	Remove the battery insulating film from the battery compartment to turn on the device. Once the LED stops flashing, you can proceed with other operations.
Wi-Fi Pairing Mode			Flashes blue rapidly.	1 beep.	Transmission mode.
Inter-Device Pairing Status			Flashes blue slowly.	1 beep.	Reception mode.
			Flashes blue rapidly.	1 beep.	Transmission mode.
Standby Mode			Flashes green once every 60 seconds.	None.	None.
Test Mode	Test a single unit.		2 sets of 3 red flashes followed by 2 sets of 4 red flashes.	2 sets of 3 long beeps followed by 2 sets of 4 quick beeps.	Short press the Test/Silence button.
	Test all interconnected units.		Flashes red rapidly.	Continuous short beeps.	Initiating alarm. Hold down the Test/Silence button on one unit in the network.
			Flashes red and green sequentially.		Other interconnected alarms in the network.
Alarm Mode	Unit detected smoke and initiated an alarm.		Flashes red 3 times every 4 seconds.	3 long beeps every 4 seconds.	Dangerous smoke concentration is detected. Open nearby windows and doors, and immediately move to fresh air.

	Unit detected CO and initiated an alarm		A CO concentration ranging from 30 to 999 ppm has been present for a certain time period. The LED indicator flashes red 4 times every 5.8 seconds.	4 quick beeps repeating every 5.8 seconds.	Dangerous CO concentration is detected, and has reached the alarm status. Open nearby windows and doors, and immediately move to fresh air.
	Smoke/CO concentration level drops.		Flashes green once every second for 5 seconds.	None.	Alarm cancellation: when the smoke/CO concentration level drops below the alarm threshold, the alarm signal will stop.
	All other interconnected units in the network.		Flashes red and green 3 times sequentially every 4 seconds.	3 long beeps every 4 seconds.	Dangerous smoke concentration is detected by the initiating unit in the network. Please find the initiating unit and take action.
		The LED flashes red 4 times, then the LED flashes green once every 5.8 seconds.	4 quick beeps repeating every 5.8 seconds.	Dangerous CO concentration is detected by the initiating unit, and has reached the alarm status. Please find the initiating unit and take action.	
Silence Mode		Flashes red 3 times every 4 seconds.	None.	Smoke silence mode: After 9 minutes, the unit will exit silence mode.	
			3 long beeps every 4 seconds.	When the smoke concentration is too high, the sound cannot be muted by pressing the test/silence button.	
		Flashes red 4 times every 5.8 seconds.	None.	CO silence mode: After 9 minutes, the unit will exit silence mode.	
		Flashes green 3 times.	None.	After 9 minutes of silence, it will automatically exit silent mode.	
		Flashes yellow once every 60 seconds.	None.	Silence mode during low battery: After 10 hours, the unit will exit silence mode.	

		Flashes yellow 3 times every 60 seconds.	None.	Silence mode during the end of cycle: After 22 hours, the unit will exit silence mode.
Peak CO Concentration Indication		Flashes green once.	None.	Check peak CO levels.
Peak CO Concentration Reset	 	Flashes green once.	1 beep.	The peak CO concentration will be reset with LCD displaying "0."
Low Battery	 	Flashes yellow once every 60 seconds.	1 beep every 60 seconds.	Replace the unit immediately.
Fault		Flashes yellow 2 times every 60 seconds.	2 beeps every 60 seconds.	Smoke sensor malfunction. Replace the device immediately.
				Carbon monoxide sensor malfunction. Replace the device immediately.
				
End of Life		Flashes yellow 3 times every 60 seconds.	3 beeps every 60 seconds.	Replace the unit immediately.
Exit the Network		None.	1 beep.	Already exited the network, it is an independent device.

Technical Specifications

Maximum Service Life	10 years (from the date of manufacture)
Power Supply	1 × 3 V DC CR123A lithium battery (replaceable)
Battery Life	5 years (test once a week) (wireless interconnected network) 3–5 years (test once a week) (when connected to base station)
Sensor Type	Smoke: Photoelectric CO: Electrochemical
Safety Standards	UL 217:2020 Ed.9 UL 2034:2017 Ed.4
CO Sensitivity	70 ppm: 60–240 minutes 150 ppm: 10–50 minutes 400 ppm: 4–15 minutes
Smoke Sensitivity	1.29–2.36% obs/ft
Operating Temperature	40–100°F (4.4–37.8°C)
Operating Relative Humidity	10%–85% RH (non-condensing)
Alarm Loudness	≥ 85 dB at 10 ft (3 m) @ 3.2 ± 0.3 kHz pulsing alarm
Silence Duration	≤ 9 minutes
Operating Frequency	902–928 MHz
Maximum Number of Interconnected Units	24 wireless units (only compatible with X-Sense wireless alarms)
Transmission Range	Over 1,700 ft (500 m) in open air

NOTE:

1. Battery life is calculated on the current ratings in the standby mode with weekly testings. If its operation mode changes to an alarming condition, the battery life will be decreased accordingly.
2. The alarm functions between 40 and 100°F (4.4 and 37.8°C). Prolonged exposure to temperatures outside of this range can reduce battery life and affect accuracy. We do not recommend operating the device outside of this range.

Maintenance

To keep your alarm in good working order, follow these simple steps:

1. Verify the unit's alarm sound and indicator are working properly by testing the unit once a week.
2. As a minimum your alarm should be cleaned once every 3 months: Remove the unit from the ceiling and clean the alarm cover and vents with your vacuum cleaner fitted with the soft brush attachment to remove dust and dirt.

- Never use detergents or other solvents to clean the unit.
- Avoid spraying air fresheners, hair spray or other aerosols near the alarm.
- Do not paint the unit. Paint will seal the vents and interfere with the sensor's ability to detect fire or CO.
- Never attempt to disassemble the unit or clean inside. Doing so will void your warranty.
- When removed, place the alarm back in its proper location as soon as possible, to assure continuous protection from fire or carbon monoxide.
- When household cleaning supplies or similar contaminants are used, the area should be ventilated.

Troubleshooting

NOTE: If the alarm cannot function properly, please contact us for advice.

Problems	Cause	Solution
The device is not triggered when it is tested with smoke.	The device is not turned on.	Make sure the battery insulating film is removed. If the battery runs out, please replace the battery.
	The smoke is not reaching the sensor properly.	The holes on the surface of the device are for the speaker and buzzer. Smoke will not be effective. The smoke needs to enter the device from the side grille in order to trigger the alarm.
	The time duration is insufficient for the device to detect smoke.	Continuous smoke is necessary for the device to be triggered. When smoke reaches the smoke sensor, the device will be triggered in about 20 seconds.
	Insufficient smoke concentration.	This product utilizes a photoelectric sensor, requiring sufficient smoke concentration for detection. Higher smoke levels lead to faster alarm response. Avoid using an open flame for testing.
The alarm does not sound during a test.	The device does not turn on.	Remove the battery insulating film from the battery compartment to turn on the device. If the battery runs out, please replace the battery.
	You don't push the Test/Silence button firmly.	Make sure you have pushed the Test/Silence button firmly.
When the test button is held down, only one alarm sounds and the other interconnected alarms do not respond.		<ul style="list-style-type: none"> When connected to a base station, holding down the test button only tests a single device. When connected to a wireless interconnected network, holding down the test button will test all devices in the network. When exited from the wireless interconnected network, holding down the test button only tests a single device. A short press on the test button will always test a single device.

It is unclear how to judge which alarm is triggered first.	Connecting to the base station.	View through the app; only the initiating alarm will be displayed as being triggered, and the other alarms will not.
		Press the app's Locate button in alarming mode to mute the base station and all passive devices, leaving only the initiating device alarming.
		In the alarming mode, press the test/silence button on any of the devices. If all other alarms are muted, the device you pressed is the source alarm, if not, then the source alarm is the one you will hear continuing to alarm. You need to press the test/silence button to silence the initiating alarm.
		Pressing the base station button can mute the base station and all devices. The initiating alarm flashes red, and the other alarms alternate flashing red and green.
	Wireless interconnected network.	In the alarming mode, press the test/silence button on any of the devices. If all other alarms are muted, the device you pressed is the source alarm, if not, then the source alarm is the one you will hear continuing to alarm. You need to press the test/silence button to silence the initiating alarm.
False alarms are triggered intermittently when residents are cooking, taking showers, etc.	The device is improperly installed.	Install the device far away from kitchen appliances, dusty places, shower areas, and locations where the temperature is over 100°F (37.8°C) or below 40°F (4.4°C). Check the location of your alarm (see "Installation Positioning").
	The device is clogged by dirt and dust.	Clean the device periodically (see "Maintenance").
The base station failed to connect to the network.	The entered Wi-Fi name and/or password are wrong.	Enter the correct Wi-Fi name and password.
	The phone Bluetooth is not turned on.	Turn on the phone's Bluetooth.
	The base station is not entering pairing mode.	Press and hold the Pair button on the base station for 5 seconds and the LED will flash yellow while entering pairing mode.
The alarm cannot be added to the base station.	The alarm did not enter pairing mode.	Quickly press the pairing button twice on the alarm until it flashes blue rapidly, indicating it has entered pairing mode.
The alarm volume of the base station is low.	The alarm sound is set to low.	Go to "Base Station Alarm Volume" in the "Sound Settings" option to adjust the alarm sound.
The app push notification is delayed or there are no push alerts.	The app push notification permission is disabled.	Turn on the push notification permission on the phone.

	The base station is not within the network coverage of the router.	The distance between the base station and the router should be within 170 ft (50 m). Please ensure that the base station is always within the network coverage of the router.
	The communication between the alarm and base station is not stable or they are too far apart.	Reduce the obstacles between the alarm and base station. The maximum distance between the alarm and the base station in an open environment is 1,700 ft (500 m).
	The network connection of the router and the mobile phone is abnormal.	Make sure the network connection of the router and the mobile phone is working normally.
App prompts operation failure.	The battery ran out.	Replace the battery.
	The base station is not within the network coverage of the router.	The distance between the base station and the router should be within 170 ft (50 m). Please ensure that the base station is always within the network coverage of the router.
	The communication between the alarm and base station is not stable or they are too far apart.	Reduce the obstacles between the alarm and base station. The maximum distance between them in an open environment is 1,700 ft (500 m).
	The network connection of the router and the mobile phone is abnormal.	Make sure the network connection of the router and the mobile phone is working normally.
The app shows that the base station is offline.	The base station's Wi-Fi connection is disconnected.	Make sure that the router network connected to the base station is working normally.
	The base station is powered off.	Check that the base station is properly connected to the power supply.
The app shows that the alarm is offline.	The communication between the alarm and the base station is blocked or the distance is too far.	Reduce the obstacles between the alarm and the base station. The maximum distance between them is 1,700 ft (500 m) in an open environment.
	The battery ran out.	Replace the battery.
The device screen shows the concentration value, yet the app does not provide notifications or display the concentration value.	The carbon monoxide (CO) concentration value is currently below 100 ppm, and the alarm threshold time has not been reached yet.	Device won't send a "CO Alarm Precaution" alert for CO concentrations under 100 ppm to save power and avoid disturbances. App won't display values either. But if CO under 100 ppm lasts for a period of time and reaches alarm threshold, normal alarm notification is sent.
The LED flashes yellow once every 60 seconds with 1 beep.	Low battery.	The battery is low. Push the Test/Silence button once to silence for 10 hours. Replace the battery immediately.

The LED flashes yellow 2 times every 60 seconds with 2 beeps.	Malfunction.	If there is a smoke or CO sensor malfunction prompt, follow the instructions in the manual to clean the device and confirm if normal operation is restored. If not, replace the device immediately.
The LED flashes yellow 3 times every 60 seconds with 3 beeps.	End of life.	The maximum lifetime is reached. Push Test/Silence button once to silence for 22 hours. Replace the alarm immediately.

What You Need to Know About CO

CO cannot be seen, smelled or tasted and can be fatal. The build-up of CO in the blood is called the carboxyhemoglobin (COHb) level and interferes with the body's ability to supply itself with oxygen. Depending on the concentration, CO can kill in minutes. The most common sources of CO are malfunctioning gas appliance used for heating and cooking, vehicles running in an attached garage, blocked chimneys or flues, portable fuel burning heaters, fireplaces, fuel powered tools and operating a grill in an enclosed space.

Indications of carbon monoxide poisoning include symptoms similar to the flu, but with no fever. Other symptoms include dizziness, fatigue, weakness, headache, nausea, vomiting, sleepiness and confusion. Everyone is susceptible to the danger of CO, but experts agree that unborn babies, small children, pregnant women, senior citizens and people with heart or respiratory problems are at the highest risk for serious injury or death. Every year a qualified technician should inspect and clean your heating system, vents, chimney, and flues.

The following symptoms are related to carbon monoxide poisoning and should be discussed with all members of the household:

Mild exposure: Slight headache, nausea, vomiting, fatigue (often described as "flu-like" symptoms).

Medium exposure: Severe throbbing headache, drowsiness, fast heart rate.

Extreme exposure: Unconsciousness, cardiorespiratory failure, death.

The above levels of exposure relate to healthy adults. Levels differ for those at high risk. Exposure to high levels of carbon monoxide can be fatal or cause permanent damage and disabilities. Many cases of reported carbon monoxide poisoning indicate that while victims are aware they are not well, they become so disoriented they are unable to save themselves by either exiting the building, or calling for assistance. Also, young children and household pets may be the first affected. Familiarization with the effects of each level is important.

Following Conditions Can Result in Transient CO Situations:

- Excessive spillage or reverse venting of fuel-burning appliances caused by outdoor ambient conditions, such as wind direction and/or velocity, including high gusts of wind, heavy air in the vent pipes (cold/humid air with extended periods between cycles).
- Negative pressure resulting from the use of exhaust fans.

- Simultaneous operation of several fuel-burning appliances competing for limited internal air.
- Vent pipe connections vibrating loose from clothes dryers, furnaces, or water heaters.
- Obstructions in, or unconventional, vent pipe designs which can amplify the above situations.
- Extended operation of unvented fuel-burning devices (range, oven, fireplace, etc.).
- Temperature inversions which can trap exhaust gases near the ground.
- A car idling in an open or closed attached garage, or near a home.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

Environmental Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with Local Authority or retailer for recycling advice.



Manufacturer and Service Information

X-Sense Electronics Co., Ltd.

Address: Room 402, Building 4, No. 9, Jinshagang 1st Road, Shixia Village, Dalang Town, Dongguan City, 523750
Guangdong, P.R. China

Email: support@x-sense.com