

The FWR9202 High Speed Router User's Guide



indoor use only

V1.0

Table of Contents

- 1 Preface..... 5
 - 1.1 Declaration of Conformity..... 5
 - 1.1.1 Part 15 FCC Rules..... 5
 - 1.1.2 Class B Digital Device or Perpheral..... 5
 - 1.2 GNU GPL Information..... 6
- 2 Overview..... 7
 - 2.1 FWR9202..... 7
 - 2.2 LED Indicators..... 7
 - 2.2.1 FWR9202 LED Indicators..... 7
 - 2.3 Hardware Installation..... 9
 - 2.4 Voice Prompt..... 10
- 3 Configuring Basic Settings..... 13
 - 3.1 Two-Level Management..... 13
 - 3.2 Accessing Web Page..... 13
 - 3.2.1 From LAN port..... 13
 - 3.2.2 From WAN port..... 14
 - 3.3 Web Page..... 15
 - 3.4 Setting up the Time Zone..... 15
 - 3.5 Setting up the Internet Connection..... 16
 - 3.6 Setting up the Wireless Connection..... 17
 - 3.6.1 Enable Wireless and Setting SSID..... 17
 - 3.6.2 Encryption..... 17
 - 3.7 Register..... 18
 - 3.7.1 Get the Accounts..... 18
 - 3.7.2 Connections..... 18
 - 3.7.3 Configuration SIP from Webpage..... 19
 - 3.7.4 View the Register Status..... 19
 - 3.8 Make Call..... 20
 - 3.8.1 Calling phone or extension numbers..... 20
 - 3.8.2 Direct IP calls..... 20
 - 3.8.3 Call Hold..... 20
 - 3.8.4 Blind Transfer..... 20
 - 3.8.5 Attended Transfer..... 21
 - 3.8.6 Conference..... 21
- 4 Web Configuration..... 22
 - 4.1 Login..... 22
 - 4.2 Status..... 22

4.3	Network&Security.....	23
4.3.1	WAN.....	23
4.3.2	LAN.....	28
4.3.3	MAC Clone.....	30
4.3.4	VPN.....	30
4.3.5	DMZ.....	31
4.3.6	DDNS Setting.....	31
4.3.7	Port Forward.....	32
4.3.8	Advance.....	33
4.3.9	Port Setting.....	33
4.3.10	QoS.....	34
4.3.11	Routing.....	34
4.4	Wireless.....	35
4.4.1	Basic.....	35
4.4.2	Wireless Security.....	37
4.4.3	WMM.....	40
4.4.4	WDS.....	40
4.4.5	WPS.....	41
4.4.6	Station Info.....	42
4.4.7	Advanced.....	42
4.5	Wireless 5G.....	44
4.5.1	Basic.....	44
4.5.2	Wireless Security.....	46
4.5.3	WMM.....	46
4.5.4	WDS.....	46
4.5.5	WPS.....	46
4.5.6	Station Info.....	47
4.5.7	Advanced.....	47
4.6	SIP.....	48
4.6.1	SIP Settings.....	48
4.6.2	VoIP Qos.....	49
4.7	FXS1.....	50
4.7.1	SIP Account.....	50
4.7.2	Preferences.....	54
4.7.3	Dial Plan.....	57
4.7.4	Blacklist.....	59
4.7.5	Call Log.....	59
4.8	FXS2.....	61
4.9	Security.....	61
4.9.1	Filtering Setting.....	61
4.9.2	Content Filtering.....	62



4.10	Application.....	63
4.10.1	UPnP.....	63
4.10.2	IGMP.....	63
4.10.3	MLD.....	64
4.11	Storage.....	64
4.11.1	Disk Management.....	64
4.11.2	FTP Setting.....	65
4.11.3	Smb Setting.....	65
4.12	Administration.....	66
4.12.1	Management.....	66
4.12.2	Firmware Upgrade.....	69
4.12.3	Provision.....	69
4.12.4	SNMP.....	70
4.12.5	TR069.....	71
4.12.6	Diagnosis.....	72
4.12.7	Operation Mode.....	72
4.13	System Log.....	73
4.14	Logout.....	73
4.15	Reboot.....	74
5	Trouble shooting of the guide.....	75
5.1	Setting your PC gets IP automatically.....	75
5.2	Can not connect to the configuration Website.....	76
5.3	Forget the Password.....	76
5.4	Fast Bridge Setting.....	76

1 Preface

Thank you for choosing FWR9202 wireless router with VoIP. This product will allow you to make ATA call using your broadband connection, and provides Wi-Fi router function.

This manual provides basic information on how to install and connect FWR9202 wireless router with VoIP to the Internet. It also includes features and functions of wireless router with VoIP components, and how to use it correctly.

Before you can connect FWR9202 to the Internet and use it, you must have a high-speed broadband connection installed. A high-speed connection includes environments such as DSL, cable modem, and a leased line.

FWR9202 wireless router with VoIP is a stand-alone device, which requires no PC to make Internet calls. This product guarantees clear and reliable voice quality on Internet, which is fully compatible with SIP industry standard and able to interoperate with many other SIP devices and software on the market.

1.1 Declaration of Conformity

1.1.1 Part 15 FCC Rules

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference, and

This device must accept any interference received, including interference that may cause undesired operation.

1.1.2 Class B Digital Device or Peripheral

Note: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

1.2 GNU GPL Information

FWR9202 firmware contains third-party software under the GNU General Public License (GPL). FLYINGVOICE uses software under the specific terms of the GPL. Please refer to the GPL for the exact terms and conditions of the license. The original GPL license, source code of components licensed under GPL and used in Yealink products can be downloaded online:

<http://www.flyingvoice.com/index.php?m=content&c=index&a=lists&catid=169>

2 Overview

Before you use the high speed router, please get acquainted with the LED indicators and connectors first.

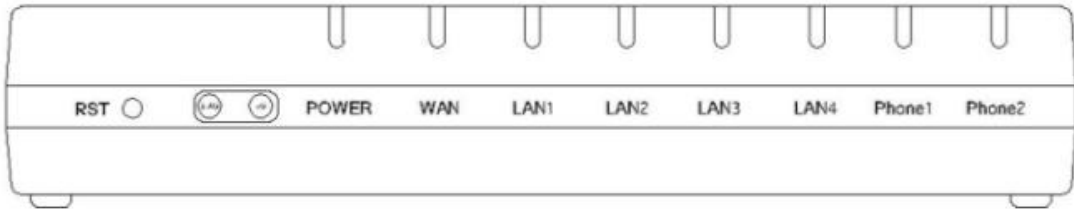
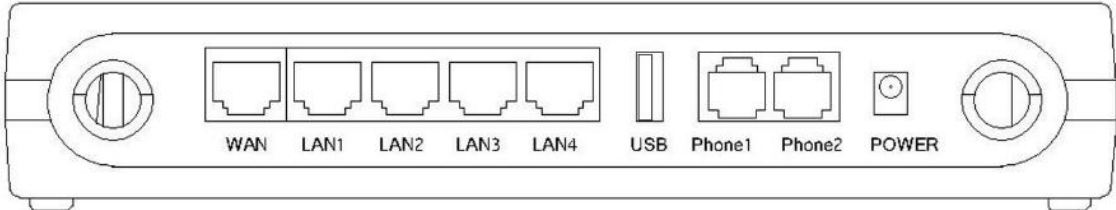
2.1 FWR9202

FWR9202		
WAN	1xGE in RJ45	
LAN	4xGE in RJ45	
WiFi	2X2 2.4G 802.11 b/g/n(300 Mbps)	
	2X2 5G 802.11ac (867 Mbps)	
USB	1X USB 2.0	
VoIP	2xFXS in RJ11	
PoE	No	Yes
Power Adapter	12V/2A	15V/3A

Trade Mark: Flyingvoive.

2.2 LED Indicators

2.2.1 FWR9202 LED Indicators

Front Panel	LED	Status	Explanation
 FWR9202 Front Panel	PHONE 1/2	Blinking(Green)	Not registered.
		On (Green)	Registered
	WLAN	On (Green)	Wireless access point is ready.
		Blinking(Green)	It will blink while wireless traffic goes through.
	LAN 1/2/3/4	On (Green)	The port is connected with 100Mbps.
		Off	The port is disconnected.
		Blinking(Green)	The data is transmitting.
	WAN	On(Green)	The port is connected with 100Mbps.
		Off	The port is disconnected.
		Blinking(Green)	It will blink while transmitting data.
	POWER	On(Green)	The router is powered on and running normally.
		Off	The router is powered off.
Rear Panel	Interface	Description	
	ON/OFF	Power Switch.	
	DC 12V/2A	Connector for a power adapter.	
	FXS	Connect to the phone.	
	WAN	Connector for accessing the Internet.	
	LAN (1/2/3/4)	Connectors for local networked devices.	

2.3 Hardware Installation

Before starting to configure the router, you have to connect your devices correctly.

Step 1. Connect Line port to land line jack with a RJ-11 cable.

Step 2. Connect the WAN port to a modem or switch or router or Internet with an Ethernet cable.

Step 3. Connect one port of 4 LAN ports to your computer with a RJ-45 cable. This device allows you to connect 4 PCs directly.

Step 4. Connect one end of the power cord to the power port of this device. Connect the other end to the wall outlet of electricity.

Step 5. Push the ON/OFF button to power on the router.

Step 6. Check the Power and WAN, LAN LEDs to assure network connections.



Warning: Please do not attempt to use other different power adapter or cut off power supply during configuration or updating the device VoIP home gateway. Using other power adapter may damage the device and will void the manufacturer warranty.



Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.*
- Increase the separation between the equipment and receiver.*
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.*
- Consult the dealer or an experienced radio/TV technician for help.*

2.4 Voice Prompt

In any circumstance, pressing the following command to enter relevant function. The following table lists command, and description.

Voice Menu Setting Options

Operation code	Contents
1	Step 1.Pick up phone and press “****” to start IVR Step 2.Choose “1”, and FWR9202 report the current WAN port connection type Step 3.Prompt "Please enter password", user need to input password with end char # if user want to configuration WAN
2	Step 1.Pick up phone and press “****” to start IVR Step 2.Choose “2”, and FWR9202 report current WAN Port IP Address Step 3.Input the new WAN port IP address and with the end char #, using “*” to replace “.”, user can input 192*168*20*168 to set the new IP address 192.168.20.168 press # key to indicate that you have finished Step 4.Report “operation successful” if user operation properly.
3	Step 1.Pick up phone and press “****” to start IVR Step 2.Choose “3”, and FWR9202 report current WAN port subnet mask Step 3.Input a new WAN port subnet mask and with the end char # using “*” to replace “.”, user can input 255*255*255*0 to set the new WAN port subnet mask 255.255.255.0 press # key to indicate that you have finished 3) Report “operation successful” if user operation properly.
4	Step 1.Pick up phone and press “****” to start IVR Step 2.Choose “4”, and FWR9202 report current gateway Step 3.Input the new gateway and with the end char # using “*” to replace “.”, user can input 192*168*20*1 to set the new gateway 192.168.20.1 press # (pound) key to indicate that you have finished 3) Report “operation successful” if user operation properly.

5	Step 1.Pick up phone and press “****” to start IVR Step 2.Choose “5”, and FWR9202 report current DNS Step 3.Input the new DNS and with the end char # using “*” to replace “.”, user can input 192*168*20*1 to set the new gateway 192.168.20.1 press # (pound) key to indicate that you have finished 3) Report “operation successful” if user operation properly.
6	Step 1.Pick up phone and press “****” to start IVR Step 2.Choose “6”, and FWR9202 report “Factory Reset” Step 3.Prompt "Please enter password", the method of inputting password is the same as operation 1. If you want to quit by the wayside, press “*”. Step 4.Prompt “operation successful” if password is right and then FWR9202 will be factory setting.
7	Step 1.Pick up phone and press “****” to start IVR Step 2.Choose “7”, and FWR9202 report “Reboot” Step 3.Prompt "Please enter password", the method of inputting password is same as operation 1. Step 4.FWR9202 will reboot if password is right and operation is properly.
8	Step 1.Pick up phone and press “****” to start IVR Step 2.Choose “8”, and FWR9202 report “WAN Port Login” Step 3.Prompt "Please enter password", the method of inputting password is same as operation 1. If you want to quit by the wayside, press “*”. Step 4.Report “operation successful” if user operation properly. Step 5.Prompt “1enable 2disable”,choose 1 or 2, and with confirm char #
9	Step 1.Pick up phone and press “****” to start IVR Step 2.Choose “9”, and FWR9202 report “ WEB Access Port” Step 3.Prompt “Please enter password”, the method of inputting password is same as operation 1. Step 4.Report “operation successful” if user operation properly. Step 5.Report the current WEB Access Port Step 6.Set the new WEB access port and with end char #
0	Step 1.Pick up phone and press “****” to start IVR Step 2.Choose “0”, and FWR9202 report current Firmware version

Notice:

1. When using Voice Menu, press * (star) to return the main menu.
2. If any changes made in the IP assignment mode, please reboot the FWR9202 to take the setting into effect.
3. When enter IP address or subnet mask, use "*" (Star) to replace "." (Dot).
4. For example, to enter the IP address 192.168.20.159 by keypad, press these keys: 192*168*20*159, use the #(pound) key to indicate that you have finished entering the IP address.
5. #(pound) key to indicate that you have finish entering the IP address or subnet mask
6. When assigning IP address in Static IP mode, setting IP address, subnet mask and default gateway is a must. If in DHCP mode, please make sure that DHCP SERVER is available in your existing broadband connection to which WAN port of FWR9202 is connected.
7. The default LAN port IP address of FWR9202 is 192.168.1.1 and do not set the WAN port IP address of FWR9202 in the same network segment of LAN port of FWR9202, otherwise it may lead to the FWR9202 fail to work properly.
8. You can enter the password by phone keypad, the matching table between number and letters as follows:
 - To input: D, E, F, d, e, f -- press '3'
 - To input: G, H, I, g, h, i -- press '4'
 - To input: J, K, L, j, k, l -- press '5'
 - To input: M, N, O, m, n, o -- press '6'
 - To input: P, Q, R, S, p, q, r, s -- press '7'
 - To input: T, U, V, t, u, v -- press '8'
 - To input: W, X, Y, Z, w, x, y, z -- press '9'
 - To input all other characters in the administrator password-----press '0',
 - E.g. password is 'admin-admin', press '236460263'

3 Configuring Basic Settings

3.1 Two-Level Management

This chapter explains how to setup a password for an administrator/root user and how to adjust basic/advanced settings for accessing Internet successfully.

FWR9202 supports two-level management: administrator and user. For administrator mode operation, please type “admin/admin” on Username/Password and click Login button to configuration. While for user mode operation, please type “user/user” on Username/Password and click Login button for full configuration.

3.2 Accessing Web Page

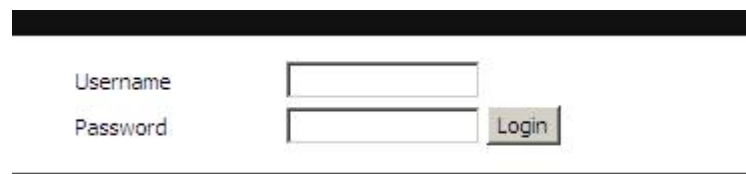
3.2.1 From LAN port

1. Make sure your PC have connected to the router’s LAN port correctly.



Notice: You may either simply set up your computer to get IP dynamically from the router or set up the IP address of the computer to be the same subnet as **the default IP address of router is 192.168.1.1**. For the detailed information, please refer to the later section - **Trouble shooting of the guide**.

2. Open a web browser on your PC and type **http://192.168.1.1**. The following window will be open to ask for username and password, and you can choose language.



3. For administrator mode operation, please type “**admin/admin**” on Username/Password and click Login to configuration. Yet, for root user mode operation, please type “**user/user**” on Username/Password and click Login for full configuration.

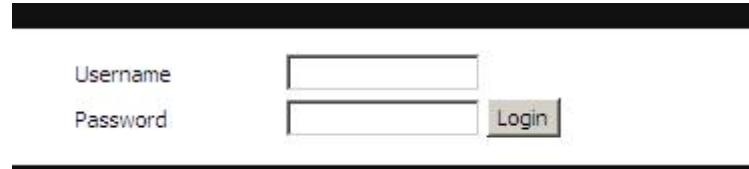


Notice: If you fail to access to the web configuration, please go to “Trouble Shooting” for detecting and solving your problem.

4. The web page can be logged out after 5 minutes without any operation.

3.2.2 From WAN port

1. Make sure your PC can connect to the router's WAN port correctly.
2. Getting the IP addresses of WAN port using Voice prompt.
3. Open a web browser on your PC and type <http://the IP address of WAN port>. The following window will be open to ask for username and password.

A screenshot of a web configuration login page. It features a black header bar at the top. Below the header, there are two input fields: 'Username' and 'Password'. To the right of the 'Password' field is a 'Login' button. The entire form is enclosed in a thin black border.

4. For administrator mode operation, please type “**admin/admin**” on Username/Password and click Login to configuration. Yet, for root user mode operation, please type “**user/user**” on Username/Password and click Login for full configuration.



Notice: If you fail to access to the web configuration, please go to “Trouble Shooting” for detecting and solving your problem.

5. The web page can be logged out after 5 minutes without any operation.

3.3 Web Page

Status Network Wireless Wireless 5G SIP FXS1 FXS2 Security Application Storage Administration		NO.	Field Name	Description
Basic Wireless Security WMM WDS WPS Station Info Advanced		1	Navigati on bar	Click navigation bar, many sub-navigation bar will appear in the place 2
Basic Wireless Settings Help Wireless Network Radio On/Off Radio On Wireless Connection Mode AP Network Mode 11b/g/n mixed mode SSID Wireless_AP001118 Hidden Isolated Max Client 16 3 Multiple SSID1 Hidden Isolated Max Client 16 Multiple SSID2 Hidden Isolated Max Client 16 Multiple SSID3 Hidden Isolated Max Client 16 Save Cancel Reboot Management Firmware Upgrade Provision Please REBOOT to make the changes effective!		2	Title	Click sub-navigation bar to choose one configuration page
		3	Paramet er	To configuration the parameters
			Save	1.Every time making some changes, user should press this button to confirm the changes. 2.After pressing the button, the red Please REBOOT to make the changes effective will appear to notice rebooting.
			Cancel	To cancel the changes.
			Reboot	Press it to reboot the router

3.4 Setting up the Time Zone

Time/Date Setting

NTP Settings

NTP Enable

Enable

Current Time

Fri Aug 16 15:46:59 GMT 2013

Sync with host

NTP Settings

(GMT+08:00) China Coast, Hong Kong

Primary NTP Server

pool.ntp.org

Secondary NTP Server

cn.pool.ntp.org

NTP synchronization(1 - 1440m)

60

Open **Administration/Management** webpage as shown left, please select the **Time Zone** for the router installed and specify the **NTP server** and set the update interval in **NTP synchronization**.

3.5 Setting up the Internet Connection

From WAN page, multi wan connection could be built or deteted. If you want to know more information about Internet Connection setting, please refer to 5.3 section.

Status

Network

Wireless

Wireless 5G

SIP

FXS1

FXS2

Security

Application

WAN

LAN

MAC Clone

VPN

DMZ

DDNS

Port Forward

Advance

Port Setting

QoS

INTERNET

INTERNET

Connect Name

1_TR069_VOICE_INTERNET_R_VID_

Delete Connect

Service

TR069_VOICE_INTERNET

IP Protocol Version

IPv4

INTERNET

DHCP

NAT Enable

Enable

VLAN Mode

Enable

VLAN ID

1

(1-4094)

802.1p

0

DNS Mode

Manual

Primary DNS Address

192.168.10.1

Secondary DNS Address

8.8.8.8

DHCP

DHCP Renew

Renew

DHCP Vendor(Optional 60)

VOIP-G802

Port Bind

Port_1

Wireless(SSID1)

Port_2

Wireless(SSID2)

Port_3

Wireless(SSID3)

Port_4

Wireless(SSID4)

Field Name	Description
Connect Name	Use keywords to indicate WAN port service model
Service	Chose the service mode.
IP Protocol Version	Only IPv4 for FWR9202
INTERNET	Choose Internet connection mode.
NAT Enable	If or not enable NAT.
VLAN Mode	If or not enable VLAN Mode.
VLAN ID	Set the VLAN ID.
802.1p	Set the priority of VLAN, Options are 0~7.
DNS Mode	The default is Manual.
Primary DNS Address	The primary DNS of Internet port.
Secondary DNS Address	The secondary DNS of Internet port.
Port Bind	Port bind is used for binding the service for different LAN ports and SSIDs.

3.6 Setting up the Wireless Connection

To set up the wireless connection, please skip the following steps.

3.6.1 Enable Wireless and Setting SSID

Open **Wireless/Basic** webpage as shown below

Status Network Wireless Wireless 5G SIP FXS1 FXS2 Security Applicat Basic Wireless Security WMM WDS WPS Station Info Advanced Basic Wireless Settings Wireless Network Radio On/Off Radio On Wireless Connection Mode AP Network Mode 11b/g/n mixed mode SSID Wireless_AP001118 Hidden Isolated Max Client 16 Multiple SSID1 Hidden Isolated Max Client 16 Multiple SSID2 Hidden Isolated Max Client 16 Multiple SSID3 Hidden Isolated Max Client 16 broadcast(SSID) ☒ Enable ☐ Disable AP Isolation ☐ Enable ☒ Disable MBSSID AP Isolation ☐ Enable ☒ Disable BSSID 00:0C:FE:00:11:18 Frequency (Channel) Auto

3.6.2 Encryption

Open Wireless/Wireless Security webpage to set the encryption of routers.

BasicWireless SecurityWMMWDSWPSStation InfoAdvanced WIFI Security Setting Select SSID SSID choiceWireless_AP001118 "Wireless_AP001118" Security ModeWPA-PSK WPA WPA Algorithms ☐ TKIP ☒ AES ☐ TKIPAES Pass Phrase23123123 Key Renewal Interval3600Second in Month (0 ~ 4194303) Access policy PolicyDisable Add a station MAC		Field Name	Description
		SSID Choice	Choose one SSID from Off-premises 1, off-premises 2 and Premises.
		Security Mode	Select an appropriate encryption mode to improve the security and privacy of your wireless data packets. Each encryption mode will bring out different web page and ask you to offer additional configuration.

3.7 Register

3.7.1 Get the Accounts

FWR9202 have a FXS port, you can use it to make SIP call, and before registering, you should get the SIP account from you administrator or provider.

3.7.2Connections

Connect FWR9202 to the Internet properly

3.7.3 Configuration SIP from Webpage

Status	Network	Wireless	Wireless 5G	SIP	FXS1	FXS2	Security	Application
SIP Account Preferences Dial Plan Blacklist Call Log								
Basic								
Basic Setup Line Enable Enable Peer To Peer Disable								
Proxy and Registration Proxy Server 192.168.10.208 Proxy Port 5060 Outbound Server Outbound Port 5060 Backup Outbound Server Backup Outbound Port 5060								
Subscriber Information Display Name 11 Phone Number 11 Account 11 Password ••								

Step 1.Open FXS1(FXS2)/SIP Account webpage, as the picture in the right side.

Step 2.Fill the SIP Server domain and SIP Server address (which get from you administrator or provider) into Domain Name parameter, into SIP Server

Step 3.Fill account which get from you administrator into Display Name parameter, Phone Number parameter, and Account parameter.

Step 4.Fill password which get from you administrator into Password parameter.

Step 5.Press button in the bottom of the webpage to save changes.

Note: if there is *Please REBOOT to make the changes effective!* , please press button to make changes effective.

3.7.4 View the Register Status

Status	Network	Wireless	Wireless 5G	SIP	FXS1	FXS2	Security	Application
Basic LAN Host Syslog								
Product Information								
Product Information Product Name FWR9202 Internet(WAN) MAC Address 00:0C:FE:00:11:19 PC(LAN) MAC Address 00:0C:FE:00:11:18 Hardware Version V1.1 Loader Version V3.01 Firmware Version V3.10(201408260214) Serial Number 123123123								
SIP Account Status								
SIP Account Status FXS 1 SIP Account Status Registered 11 FXS 2 SIP Account Status Disable								

To view the status, please open Status webpage and view the value of register status. The value is registered like the following picture which means FWR9202 have registered normally and you can make calls.

3.8 Make Call

3.8.1 Calling phone or extension numbers

To make a phone or extension number call:

1. Both ATA and the other VoIP device (i.e., another ATA or other SIP products) have public IP addresses, or
2. Both ATA and the other VoIP device (i.e., another ATA or other SIP products) are on the same LAN using private or public IP addresses, or
3. Both ATA and the other VoIP device (i.e., another ATA or other SIP products) can be connected through a router using public or private IP addresses.

To make a call, first pick up the analog phone or turn on the speakerphone on the analog phone, input the IP address directly, end with #.

3.8.2 Direct IP calls

Direct IP calling allows two phones, that is, an ATA with an analog phone and another VoIP Device, to talk to each other without a SIP proxy. VoIP calls can be made between two phones if:

1. Both ATA and the other VoIP device (i.e., another ATA or other SIP products) have public IP addresses, or
2. Both ATA and the other VoIP device (i.e., another ATA or other SIP products) are on the same LAN using private or public IP addresses, or
3. Both ATA and the other VoIP device (i.e., another ATA or other SIP products) can be connected through a router using public or private IP addresses.

To make a direct IP call, first pick up the analog phone or turn on the speakerphone on the analog phone, Input the IP address directly, with the end “#”.

3.8.3 Call Hold

While in conversation, pressing the “*77” to put the remote end on hold, then you will hear the dial tone and the remote party will hear hold tone at the same time.

Pressing the “*77” again to release the previously hold state and resume the bi-directional media.

3.8.4 Blind Transfer

Assuming that call party A and party B are in conversation. A wants to Blind Transfer B to C:

Step 1. Party A dials “*78” to get a dial tone, then dials party C’s number, and then press immediately key # (or wait for 4 seconds) to dial out.

Step 2. A can hang up.

3.8.5 Attended Transfer

Assuming that call party A and B are in conversation. A wants to Attend Transfer B to C:

Step 1. Party A dial “*77” to hold the party B, when hear the dial tone, A dial C’s number, then party A and party C are in conversation.

Step 2. Party A dial “*78” to transfer to C, then B and C now in conversation.

Step 3. If the transfer doesn’t success, then A and B in conversation again.

3.8.6 Conference

Assuming that call party A and B are in conversation. A wants to add C to the conference:

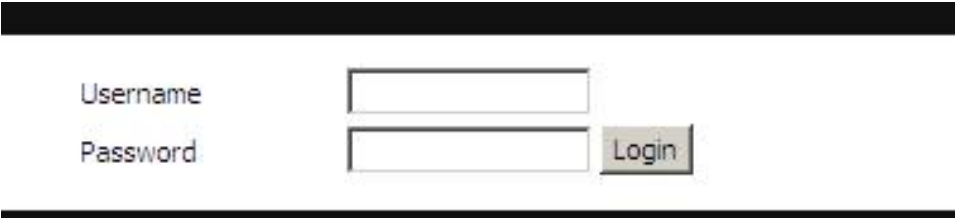
Step 1. Party A dial “*77” to hold the party B, when hear the dial tone, A dial C’s number, then party A and party C are in conversation.

Step 2. Party A dial “*88” to add C, then A, B and C now in conference.

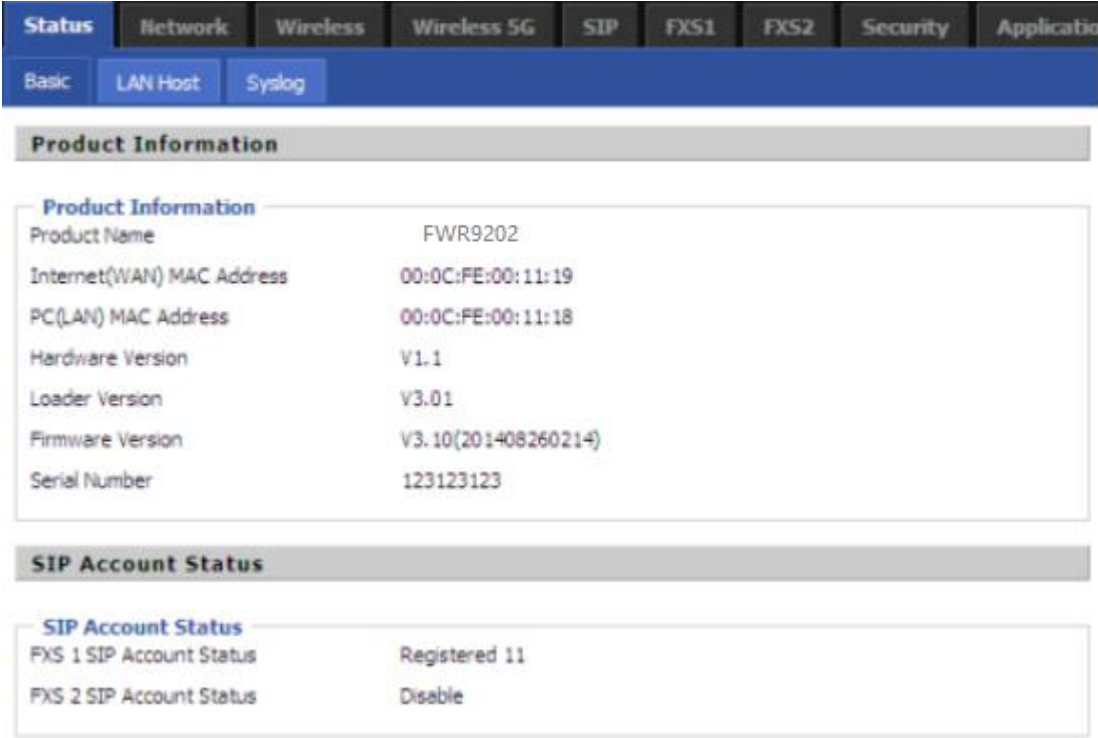
4Web Configuration

This chapter will guide users to execute advanced (full) configuration through admin mode operation.

4.1 Login

	Step 1.Connect the LAN port of the router to your PC
	Step 2.Open a web browser on your PC and type in http://192.168.1.1 . The window will ask for typing username and password. And you can choose language, too.
	Step 3.Please type “ admin/admin ” on Username/Password for administration operation.

4.2 Status

	This webpage shows the status information about product information, Network and system .
	It shows the basic information of the product, such as product name, serial number, MAC address, hardware version and software version
	It also shows the information of Link Status, WAN Port Status, and LAN Port Status.
	And it shows the current time and the running time of the product.

Network Status

Internet Port Status

Connection Type	STATIC
IP Address	192.168.10.209
Subnet Mask	255.255.255.0
Default Gateway	192.168.10.1
Primary DNS	8.8.8.8
Secondary DNS	
WAN Port Status	100Mbps Full

The picture in the left side is the FWR9202's Status webpage.

4.3 Network&Security

You can configuration the WAN port, LAN port, DDNS, Multi WAN,DMZ, MAC Clone, Port Forward and so on in these two bars.

4.3.1 WAN

This page allows you to set WAN configuration with different modes. Use the Connection Type drop down list to choose one WAN mode and then the corresponding page will be displayed.

1. Static IP

You will receive a fixed public IP address or a public subnet, namely multiple public IP addresses from your DSL or Cable ISP service providers. In most cases, a Cable service provider will offer a fixed public IP, while a DSL service provider will offer a public subnet. If you have a public subnet, you could assign an IP address to the WAN interface.

INTERNET

INTERNET

Connect Name

1_TR069_VOICE_INTERNET_R_VID_

Delete Connect

Service

TR069_VOICE_INTERNET

IP Protocol Version

IPv4

INTERNET

Static

NAT Enable

Enable

VLAN Mode

Disable

VLAN ID

1

(1-4094)

Static

IP Address

192.168.10.209

Subnet Mask

255.255.255.0

Default Gateway

192.168.10.1

DNS Mode

Manual

Primary DNS Address

8.8.8.8

Secondary DNS Address

Field Name	Description
IP Address	The IP address of Internet port
Subnet Mask	The subnet mask of Internet port.
Default Gateway	The default gateway of Internet port.
DNS Mode	In Static mode, user need set the DNS manually.
Primary DNS Address	The primary DNS of Internet port.
Secondary DNS Address	The secondary DNS of Internet port.

2. DHCP

It is not necessary for you to type any IP address manually. Simply choose this type and the system will obtain the IP address automatically from DHCP server.

INTERNET

INTERNET

Connect Name

1_TR069_VOICE_INTERNET_R_VID_

Delete Connect

Service

TR069_VOICE_INTERNET

IP Protocol Version

IPv4

INTERNET

DHCP

NAT Enable

Enable

VLAN Mode

Disable

VLAN ID

1

(1-4094)

DNS Mode

Manual

Primary DNS Address

8.8.8.8

Secondary DNS Address

DHCP

DHCP Renew

Renew

DHCP Vendor(Option 60)

VOIP-G802

Field Name	Description
DNS Mode	The Default is Manual
Primary DNS Address	The primary DNS of Internet port.
Secondary DNS Address	The secondary DNS of Internet port.
DHCP Renew	Refresh DHCP IP
DHCP Vendor(Option60)	Specify DHCP Vendor field Display the vendor and product name

3. PPPoE

PPPoE stands for **Point-to-Point Protocol over Ethernet**. It relies on two widely accepted standards: PPP and Ethernet. It connects users through an Ethernet to the Internet with a common broadband medium, such as a single DSL line, wireless device or cable modem. All the users over the Ethernet can share a common connection.

PPPoE is used for most of DSL modem users. All local users can share one PPPoE connection for accessing the Internet. Your service provider will provide you information about user name, password, and authentication mode.

INTERNET	Field Name	Description
INTERNET Connect Name 1_TR069_VOICE_INTERNET_R_VID_ Delete Connect Service TR069_VOICE_INTERNET IP Protocol Version IPv4 INTERNET PPPoE NAT Enable Enable VLAN Mode Disable VLAN ID 1 (1-4094) DNS Mode Manual Primary DNS Address 8.8.8.8 Secondary DNS Address PPPoE PPPoE Account PPPoE Password Confirm Password Service Name Leave empty to autodetect Operation Mode Keep Alive Keep Alive Redial Period(0-3600s) 5 Port Bind ☒ Port_1 ☒ Port_2 ☒ Port_3 ☒ Port_4 ☒ Wireless(SSID1) ☒ Wireless(SSID2) ☒ Wireless(SSID3) ☒ Wireless(SSID4) Note : WAN connection can not be shared between the binding port , and finally bound port WAN connections bind operation will wash away before the other WAN connection to the port binding operation !	PPPoE Account	Assign a valid user name provided by the ISP
	PPPoE Password	Assign a valid password provided by the ISP
	Confirm Password	Enter your PPPoE password again
	Operation Mode	Select the mode of operation, options are Keep Alive, On Demand and Manual: 1. When the mode is Keep Alive, user need to set the 'keep alive redial period' values range from 0 to 3600s, the default setting is 5 minutes; 2. When the mode is On Demand, user need to set the 'on demand idle time' value in the range of 0-60 minutes, the default setting is 5 minutes; Operation Mode On Demand On Demand Idle Time(0-60m) 5 3. When the mode is Manual, no need to do other settings.
	Keep Alive Redial Period	Set the interval to send Keep Alive

4. Bridge Mode

Bridge Mode under Multi WAN is different with traditional bridge setting. Bridge mode has no ip address and only work as a bridge between WAN port and LAN port. So Route Connection has to be build to give ip address to local service on device.

Under is example of bridge mode:

1_TR069_VOICE_INTERNET_R_VID_ is router connection for local service.

2_Other_B_VID_ is bridge connection for host of LAN port.

If bridge setting is complex, please refer to 6.4 section for fast setting of bridge mode.

Field Name		Description
Bridge Type	IP Bridge	Allow all ethernet packets pass. PC could connect to upper network directly.
	PPPoE Bridge	Only Allow PPPoE packets pass. PC need PPPoE dial-up software.
	Hardware IP Bridge	Packets pass through hardware switch with wired speed. Do not support wireless port bind.
DHCP Service Type	Pass Through	Dhcp packets can be forwarded between WAN and LAN, dhcp server in gateway will not allocate IP to hosts of LAN port.
	DHCP Snooping	When gateway forwards dhcp packets form LAN to WAN it will add option82 to dhcp packet, and it will remove option82 when forward dhcp packet form WAN to LAN. Local dhcp service will not allocate ip to hosts of LAN port.
	Local Service	Gateway will not forward dhcp packets between Lan and Wan, it also block dhcp packet from WAN port. Hosts of LAN port can get ip from dhcp server run in gateway.
VLAN Mode	Disable	The WAN interface is untagged. LAN is untagged.
	Enable	The WAN interface is tagged. LAN is untagged.
	Trunk	Only valid in bridge mode. All ports, include WAN and LAN, belong to this VLAN Id and all ports are tagged in this VLAN id. Tagged packets could pass through WAN and LAN.
VLAN ID		Set the VLAN ID.
802.1p		Set the priority of VLAN, Options are 0~7.

5. Connect Name and Service

Connect Name Table is as below:

Content	Define	Comment
No	1 ~ 99	WAN Connection id
Service	TR069	The connection only support management application, like TR069, WEB, SNMP and Provision
	INTERNET	The connection only support internet service
	TR069_INTERNET	The connection support management and internet application
	VOICE	The connection only support voice application, like sip and rtp
	TR069_VOICE	The connection support both management and voice application
	VOICE_INTERNET	The connection support voice and internet application
	TR069_VOICE_INTERNET	The connection support management, voice and internet application
	Other	The connection support STB
NAT Mode	B	Bridge
	R	Router
VLAN ID	VID	VLAN ID

For example:

1. 1_TR069_R_VID_2 (First Interface, Service is TR069, NAT Mode, VLAN ID is 2)
2. 2_INTERNET_B_VID_ (Second Interface, Service is INTERNET, Bridge Mode, VLAN is disabled)

4.3.2 LAN

1. LAN Port:

The most generic function of router is NAT. What NAT does is to translate the packets from public IP address to local IP address to forward the right packets to the right host and vice versa.

Status	Network	Wireless	Wireless 5G	SIP	FXS1	FXS2	Security	Applicat	
WAN	LAN	MAC Clone	VPN	DMZ	DDNS	Port Forward	Advance	Port Setting	Qo
Please REBOOT to make the changes effective!									
PC Port(LAN)									
PC Port(LAN)									
IP Address		192.168.11.1							
Local Subnet Mask		255.255.255.0							
Local DHCP Server		Enable							
DHCP Start Address		192.168.11.2							
DHCP End Address		192.168.11.254							
DNS Mode		Auto							
Primary DNS		192.168.1.1							
Secondary DNS		8.8.8.8							
Client Lease Time(0-86400s)		86400							
DHCP Client List									
DHCP Static Allotment									
NO.		MAC				IP Address			
1									
2									
3									
DNS Proxy		Disable							

Field Name	Description
IP Address	Enter the IP address of the router on the local area network, all the IP addresses of the computers which are in the router’s LAN must be in the same network segment with this address, and the default gateway of the computers must be this IP address. (The default is 192.168.1.1)
Local Subnet Mask	Enter the subnet mask to determine the size of the network (default is 255.255.255.0/24)
Local DHCP Server	If or not enable Local DHCP Server
DHCP Start Address	Enter a valid IP address as a starting IP address of the DHCP server, and if the router’s LAN IP address is 192.168.1.1, starting IP address can be 192.168.1.2 or greater, but should be less than the ending IP address.
DHCP End Address	Enter a valid IP address as an end IP address of the DHCP server.
DNS Mode	Select DNS mode, options are Auto and Manual: 1. When DNS mode is Auto, the device under LAN port will automatically obtains the preferred DNS and alternate DNS. 2. When DNS mode is Manual, the user should manually configure the preferred DNS and alternate DNS
Primary DNS	Enter the preferred DNS address.
Secondary DNS	Enter the secondary DNS address.
Client Lease Time	This option defines how long the address will be assigned to the computer within the network. In that period, the server does not assign the IP address to the other computer.
DNS Proxy	Enable or disable; If enabled, the device will forward the DNS request of LAN-side network to the WAN side network

2. DHCP Server:

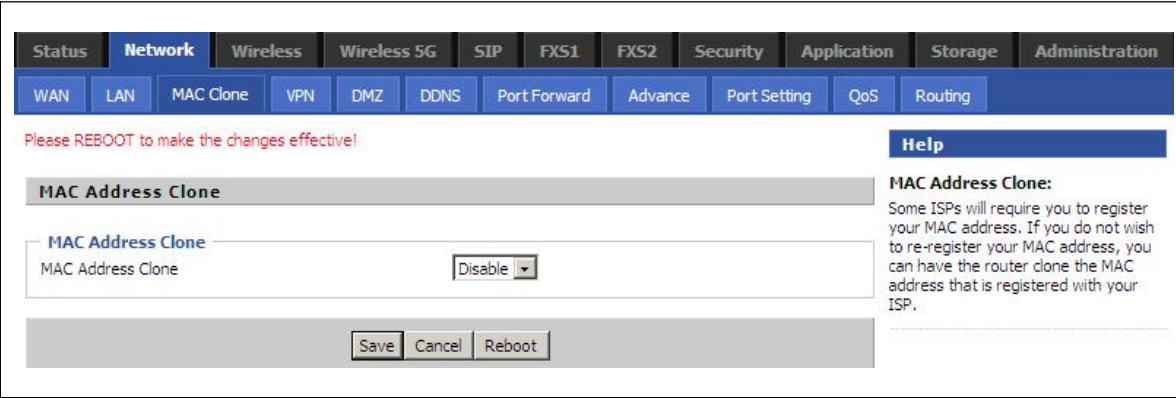
Router has a built-in DHCP server that assigns private IP address to each local host.

DHCP stands for Dynamic Host Configuration Protocol. The router by factory default acts a DHCP server for your network so it automatically dispatch related IP settings to any local user configured as a DHCP client. It is highly recommended that you leave the router enabled as a DHCP server if you do not have a DHCP server for your network.

 IP Address: 192.168.11.1 Local Subnet Mask: 255.255.255.0 Local DHCP Server: Enable DHCP Start Address: 192.168.11.2 DHCP End Address: 192.168.11.254 DNS Mode: Auto	Field Name	Description
	Local DHCP Server	If or not enable DHCP server.
	DHCP Start Address	Enter a value of the IP address pool for the DHCP server to start with when issuing IP addresses. If the LAN Interface IP
	DHCP End Address	Enter a value of the IP address pool for the DHCP server to end with when issuing IP addresses.
	DNS Mode	You should set “manual” in the “DNS Mode” if you set “DNS” by yourself. And then fill the DNS in the two following texts. Generally speaking, you can set “Auto” in the “DNS Mode” and the device will get “DNS” from DHCP Server automatically.
 Primary DNS: 192.168.1.1 Secondary DNS: 8.8.8.8 Client Lease Time(0-86400s): 86400	Primary DNS	You must specify a DNS server IP address here because your ISP should provide you with usually more than one DNS Server. If your ISP does not provide it, the router will automatically apply default DNS Server IP address: 202.96.134.33 to this field.
	Secondary DNS	You must specify a DNS server IP address here because your ISP should provide you with usually more than one DNS Server. If your ISP does not provide it, the router will automatically apply default DNS Server IP address: 202.96.128.86 to this field. If both the Primary IP and Secondary IP Address fields are left empty, the router will assign its own IP address to local users as a DNS proxy server and maintain a DNS cache.
	Client Lease Time	It allows you to set the leased time for the specified PC.

4.3.3 MAC Clone

Some ISPs will require you to register your MAC address. If you do not wish to re-register your MAC address, you can have the router clone the MAC address that is registered with your ISP. To use the Clone Address button, the computer viewing the Web-base utility screen will have the MAC address automatically entered in the Clone WAN MAC field.

	Enabling MAC address cloning 1. Press the button Get Current PC MAC gets PC's MAC address 2. Press the button Save to save your changes if users don't want to use MAC clone, press the button Cancel to cancel the changes 3. Press the button Reboot to make the changes effective.
--	--

4.3.4 VPN

A VPN is a kind of technology which establish a private network based on the public network. VPN network connection between any two nodes does not require the end to end physical connection as the traditional private network; it is structured on the network platform provided by the public network services, the user dhomes gateway are transmitted in the logical link. Through VPN technology, users can establish connection between any two devices which are connected to public network and transmit dhomes gateway.

VPN Settings	Field Name	Description
Administration VPN Enable PPTP Initial Service IP User Name Password	VPN Enable	If or not enable VPN.If enable, you can select PPTP and L2TP mode VPN.
	Initial Service IP	Fill in the VPN server IP address
	User Name	Fill in the authentication username
	Password	Fill in the authentication password

4.3.5 DMZ

StatusNetworkWirelessWireless 5GSIPFXS1FXS2SecurityApplicationStorageAdministration WANLANMAC CloneVPNDMZDDNSPort ForwardAdvancePort SettingQoSRouting		Field Name	Description
Please REBOOT to make the changes effective! Demilitarized Zone (DMZ) DMZ Setting DMZ EnableEnable DMZ Host IP Address		DMZ Enable	If or not enable DMZ.
Help DMZ Setting: Enabling this option will expose the specified host to the Internet.		DMZ Host IP Address	Enter the private IP address of the DMZ host

4.3.6 DDNS Setting

StatusNetworkWirelessWireless 5GSIPFXS1FXS2SecurityApplication WANLANMAC CloneVPNDMZDDNSPort ForwardAdvancePort SettingQoS		Field Name	Description
DDNS Setting DDNS Setting Dynamic DNS ProviderNone Account Password DDNS StatusDDNS updated Fail!		Dynamic DNS Provider	DDNS is enabled and select a DDNS service provider
		Account	Enter the DDNS service account
		Password	Enter the DDNS service account password
		DDNS	Enter the DDNS domain name or IP address
		Status	See if DDNS is successfully upgraded

4.3.7 Port Forward

Status	Network	Wireless	Wireless 5G	SIP	FXS1	FXS2	Security	Application	Storage	Adminis
WAN	LAN	MAC Clone	VPN	DMZ	DDNS	Port Forward	Advance	Port Setting	QoS	Routing

lease REBOOT to make the changes effective!

Port Forwarding

No.	Comment	IP Address	Port Range	Protocol
Delete SelectedAddEdit				
Port Forwarding	Comment			
P Address				
Port Range				
Protocol		TCP&UDP		
ApplyCancel				

Virtual Servers

No.	Comment	IP Address	Public Port	Private Port	Protocol
Delete SelectedAddEdit					
Virtual Servers	Comment				
P Address					
Public Port					
Private Port					
Protocol		TCP&UDP			
ApplyCancel					

Field Name	Description
Comment	Sets the name of a port mapping rule or comment
IP Address	The IP address of devices under the LAN port.
Port Range	Set the port range for the devices under the LAN port. (1-65535)
Protocol	You can select TCP, UDP, TCP & UDP three cases
Apply/Cancel	After finish configurations, click apply, the number will be generated under NO. List; click Cancel to if you do not want to make the changes.
Comment	To set up a virtual server notes
IP Address	Virtual server IP address
Public Port	Public port of virtual server
Private Port	Private port of virtual servers ports
Protocol	You can select from TCP, UDP, and TCP&UDP.
Apply/Cancel	After finish configurations, click apply, the number will be generated under NO. List; click Cancel to if you do not want to make the changes.

4.3.8 Advance

Status

Network

Wireless

Wireless 5G

SIP

FXS1

FXS2

Security

Application

WAN

LAN

MAC Clone

VPN

DMZ

DDNS

Port Forward

Advance

Port Setting

QoS

Please REBOOT to make the changes effective!

Most Nat connections(512-8192)

4096

Mss Mode

☐ Manual

☒ Auto

Mss Value(1260-1460)

1260

AntiDos-P

☒ Enable

☐ Disable

IP conflict detection

☒ Enable

☐ Disable

IP Conflict Detecting Interval(0-3600)

0

Save

Cancel

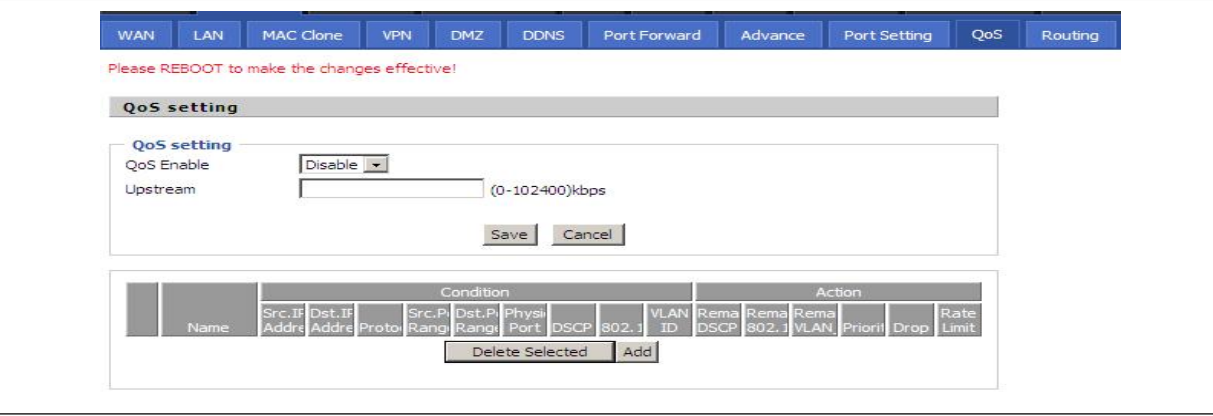
Reboot

Field Name	Description
Most Nat connections	The largest value which the FWR9202 can provide
Mss Mode	Choose Mss Mode from Manual and Auto
Mss Value	Set the value of TCP
AntiDos-p	You can choose to enable or prohibit
IP conflict detection	Select enable if enabled, phone IP conflict will have tips or prohibit;
IP conflict Detecting Interval	Detect IP address conflicts of the time interval

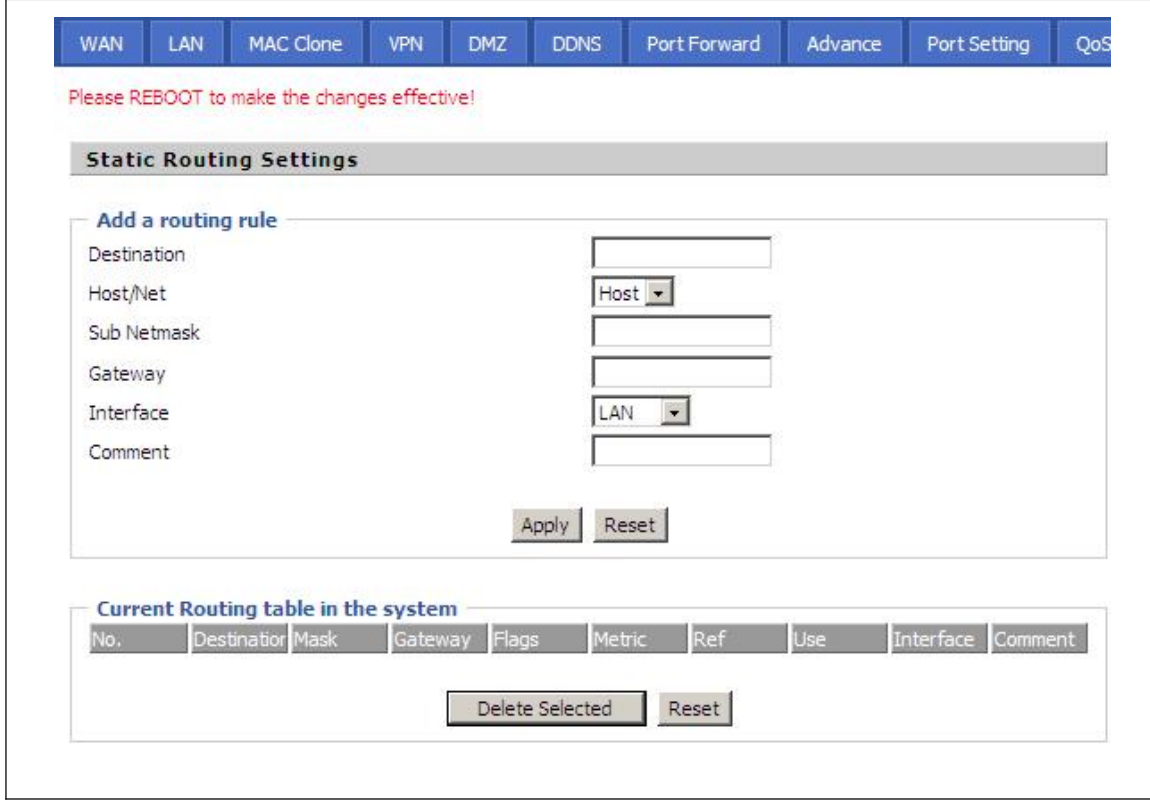
4.3.9 Port Setting

WAN	LAN	MAC Clone	VPN	DMZ	DDNS	Port Forward	Advance	Port Setting	QoS
Please REBOOT to make the changes effective!									
Port Setting Port Setting WANPort Speed Nego Auto LAN1Port Speed Nego Auto LAN2Port Speed Nego Auto LAN3Port Speed Nego Auto LAN4Port Speed Nego Auto									
Field Name		Description							
WAN Port Speed Nego		Auto-negotiation, options are Auto, 100M full, 100M half-duplex, 10M half and full, select port speed negotiation supported by methods.							
LAN1~LAN4Port Speed Nego		Auto-negotiation, options are Auto, 100M full, 100M half, 10M half and 10M full, select port speed negotiation methods.							

4.3.10 QoS

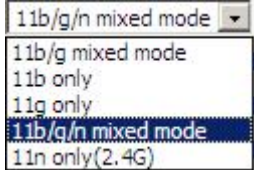
	Field Name	Description
	QoS Enable	If or not enable Qos function
	Upstream	Set the upstream bandwidth
	Delete Selected	In NO., Check the items you want to delete, click the Delete option
	Add	Click Add to add a new parameter

4.3.11 Routing

	Field Name	Description
	Destination	Destination address
	Host/Net	Both Host and Net selection
	Gateway	Gateway IP address
	Interface	LAN/WAN/Custom three options, and add the corresponding address
	Comment	Comment

4.4 Wireless

4.4.1 Basic

Basic Wireless Settings	Field Name	Description
Wireless Network Radio On/Off Radio On Wireless Connection Mode AP	Radio on/off	Select “Radio Off” to disable wireless. Select “Radio on”to enable wireless.
Network Mode 11b/g/n mixed mode	Wireless connection mode	According to the wireless client type, select one of these modes. Default is AP
SSID Wireless_AP001118 Hidden ☐ Isolated ☐ Max Client 16 Multiple SSID1 Hidden ☐ Isolated ☐ Max Client 16 Multiple SSID2 Hidden ☐ Isolated ☐ Max Client 16 Multiple SSID3 Hidden ☐ Isolated ☐ Max Client 16 broadcast(SSID) ☒ Enable ☐ Disable AP Isolation ☐ Enable ☒ Disable MBSSID AP Isolation ☐ Enable ☒ Disable BSSID 00:0C:FE:00:11:18 Frequency (Channel) Auto	Network Mode	Choose one network mode from the drop down list. Default is 11b/g/n mixed mode 
HT Physical Mode ☒ Mixed Mode ☐ Green Field Operating Mode ☐ 20 ☒ 20/40 Guard Interval ☐ Long ☒ Auto MCS Auto	SSID	It is the basic identity of wireless LAN. SSID can be any alphanumeric or a combination of special characters. It will appear in the wireless network access list.
Reverse Direction Grant(RDG) ☐ Disable ☒ Enable STBC ☐ Disable ☒ Enable	Multiple SSID1~SSID3	FWR9202 supports multiple SSIDs.
Aggregation MSDU(A-MSDU) ☒ Disable ☐ Enable Auto Block ACK ☐ Disable ☒ Enable Decline BA Request ☒ Disable ☐ Enable	Hidden	After the item is checked, the SSID is no longer displayed in the search for the Wi-Fi wireless network connection list
HT Disallow TKIP ☐ Disable ☒ Enable HT LDPC ☒ Disable ☐ Enable	Broadcast(SSID)	After initial State opening, the device broadcasts the SSID of the router to wireless network
Other 2 HT TxStream 2 HT RxStream 2	AP Isolation	If AP isolation is enabled, the clients of the AP cannot access each other.
Save Cancel Reboot	MBSSID AP Isolation	AP isolation among the devices which are not belong to this AP and along to, when the option is enabled, the devices which do not belong to this AP cannot access the devices which are

		within the AP.
	BSSID	A group of wireless stations and a WLAN access point (AP) consists of a basic access device (BSS), each computer in the BSS must be configured with the same BSSID, that is, the wireless AP logo.
	Frequency (Channel)	You can select Auto Select and channel 1/2/3/4/5/6/7/8/9/10/11.
	HT Physical Mode Operating Mode	1. Mixed Mode: In this mode, the previous wireless card can recognize and connect to the Pre-N AP, but the throughput will be affected 2. Green Field: high throughput can be achieved, but it will affect backward compatibility, and security of the system
	Channel Bandwidth	Select channel bandwidth, default is 20MHz and 20/40MHz.
	Guard Interval	The default is automatic, in order to achieve good BER performance, you must set the appropriate guard interval
	MCS	Position control signal, options are 0 to 32, the default is automatic
	Reverse Direction (RDG)	You can choose to enable or disable this privilege

4.4.2 Wireless Security

Status	Network	Wireless	Wireless 5G	SIP	FXS1	FXS2	Security	Applicati
Basic	Wireless Security	WMM	WDS	WPS	Station Info	Advanced		
Please REBOOT to make the changes effective!								
WIFI Security Setting								
Select SSID SSID choice Wireless_AP001118 "Wireless_AP001118" Security Mode WPA-PSK WPA WPA Algorithms TKIP ☒ AES TKIPAES Pass Phrase 23123123 Key Renewal Interval 3600 Second in Month (0 ~ 4194303) Access policy Policy Disable Add a station MAC								
Field Name		Description						
SSID Choice		Choose one SSID from SSID, Multiple SSID1, Multiple SSID2 and Multiple SSID3.						
Security Mode		Select an appropriate encryption mode to improve the security and privacy of your wireless data packets. Each encryption mode will bring out different web page and ask you to offer additional configuration.						

Select a different encryption mode, the web interface will be different, user can configure the corresponding parameters under the mode you select. Here are some common encryption method:

1. OPENWEP: A handshake way of WEP encryption, encryption via the WEP key:

WIFI Security Setting		Field Name	Description
Select SSID SSID choice Wireless_AP001118 "Wireless_AP001118" Security Mode OPENWEP Wire Equivalence Protection (WEP) Default Key WEP Key 1 WEP Key 2 WEP Key 3 WEP Key 4 WEP Keys WEP Key 1 Hex WEP Key 2 Hex WEP Key 3 Hex WEP Key 4 Hex		Security Mode	This is used to select one of the 4 WEP keys, key settings on the clients should be the same with this when connecting.
		WEP Keys	Set the WEP key. A-64 key need 10 Hex characters or 5 ASCII characters; choose A-128 key need 26 Hex characters or 13 ASCII characters.
		WEP represents Wired Equivalent Privacy, which is a basic encryption method.	

2. WPA-PSK, the router will use WPA way which is based on the shared key-based mode:

Field Name	Description
WPA Algorithms	This item is used to select the encryption of wireless dhome gateway algorithms, options are TKIP, AES and TKIPAES.
Pass Phrase	Setting up WPA-PSK security password.
Key Renewal Interval	Set the key scheduled update cycle, default is 3600s.

3. WPA2-PSK, the router will be based on shared key WPA2 modes:

Field Name	Description
WPA Algorithms	This item is used to select the security algorithm for encryption of wireless dhome gateway, options are TKIP, AES, TKIPAES three
Pass phrase	Setting up WPA2-PSK security password
Key Renewal Interval	Set the key scheduled update cycle, default is 3600s

4. WPAPSKWPA2PSK manner is consistent with WPA2PSK settings

Field Name	Description
WPA Algorithms	The dhome gateway is used to select the wireless security encryption algorithm options are TKIP, AES, TKIP / AES. 11N mode does not support TKIP algorithms.
Pass Phrase	Set WPA-PSK/WPA2-PSK security code
Key Renewal Interval	Set the key scheduled update cycle, default is 3600s
WPA-PSK/WPA2-PSK WPA/WPA2 security type is actually a simplified version, which is based on the WPA shared key mode, higher security setting is also relatively simple, suitable for ordinary home users and small businesses.	

5. Wireless Access Policy:

	<table border="1"> <thead> <tr> <th>Field Name</th><th>Description</th></tr> </thead> <tbody> <tr> <td>Access policy</td><td>Wireless access control is used to allow or prohibit the specified client to access to your wireless network based on the MAC address.</td></tr> <tr> <td>Policy</td><td>Prohibition: disable wireless access control policy; allow: only allow the clients in the list to access, rejected: block the clients in the list to access.</td></tr> <tr> <td>Add a station MAC</td><td>Enter the MAC address of the clients which you want to allow or prohibit</td></tr> </tbody> </table> Example: Prohibit the device whose wireless network card MAC address is 00:1F: D0: 62: BA: FF's to access the wireless network, and allow other computers to access the network. Implementation: As shown, the Policy is Reject, add 00:1F: D0: 62: BA: FF to the MAC, click Save and reboot the device settings to take effect.	Field Name	Description	Access policy	Wireless access control is used to allow or prohibit the specified client to access to your wireless network based on the MAC address.	Policy	Prohibition: disable wireless access control policy; allow: only allow the clients in the list to access, rejected: block the clients in the list to access.	Add a station MAC	Enter the MAC address of the clients which you want to allow or prohibit
Field Name	Description								
Access policy	Wireless access control is used to allow or prohibit the specified client to access to your wireless network based on the MAC address.								
Policy	Prohibition: disable wireless access control policy; allow: only allow the clients in the list to access, rejected: block the clients in the list to access.								
Add a station MAC	Enter the MAC address of the clients which you want to allow or prohibit								

4.4.3 WMM

StatusNetworkWirelessWireless 5GSIPFXS1FXS2SecurityApplication

BasicWireless SecurityWMMWDSWPSStation InfoAdvanced

Please REBOOT to make the changes effective!

WMM Parameters of Access Point

	Aifsn	CWMin	CWMax	Txop	ACM	AckPolicy
AC_BE	3	15	63	0	☐	☐
AC_BK	7	15	1023	0	☐	☐
AC_VI	1	7	15	94	☐	☐
AC_VO	1	3	7	47	☐	☐

WMM Parameters of Station

	Aifsn	CWMin	CWMax	Txop	ACM
AC_BE	3	15	1023	0	☐
AC_BK	7	15	1023	0	☐
AC_VI	2	7	15	94	☐
AC_VO	2	3	7	47	☐

Apply

Cancel

Close

WMM (Wi-Fi MultiMedia) is the QoS certificate of Wi-Fi Alliance (WFA). This provides you to configure the parameters of wireless multimedia; WMM allows wireless communication to define a priority according to the dhome gateway type. To make WMM effective, the wireless clients must also support WMM.

4.4.4 WDS

BasicWireless SecurityWMMWDSWPSStation InfoAdvanced

Please REBOOT to make the changes effective!

WPS Config

WPS Config

Wireless Distribution System(WDS)

WDS Mode

Disable

Save

Cancel

Reboot

If or not enable WDS mode

4.4.5 WPS

WPS (Wi-Fi Protected Setup) provides easy procedure to make network connection between wireless station and wireless access point (vigor router) with the encryption of WPA and WPA2.

It is the simplest way to build connection between wireless network clients and vigor router. Users do not need to select any encryption mode and type any long encryption passphrase to setup a wireless client every time. He/she only needs to press a button on wireless client, and WPS will connect for client and router automatically.

WPS Setting	Field Name	Description
WPS Config WPS Enable Apply	WPS Setting	If or not enable WPS function
WPS Summary WPS Current Status: Idle WPS Configured: Yes WPS SSID: Wireless_AP001118 WPS Auth Mode: WPA-PSK WPS Encryp Type: AES WPS Default Key Index: 2 WPS Key(ASCII): 23123123 AP PIN: 00043762 Generate Reset OOB	WPS Summary	Display the current status of WPS, including current state, SSSID name, authentication methods, encryption type and the PIN code of this AP.
	Generate	Generate a new PIN code
WPS Progress WPS Mode: ☒ PIN ☐ PBC PIN: Apply	Reset OOB	FWR9202 uses default security policy to allow other non-WPS users to access and apply.
WPS Status WSC:Idle Cancel	WPS Mode	PIN : Enter the PIN code of the wireless device which accesses to this LAN in the following option, and press apply. Then FWR9202 begins to send signals, turn on the PIN accessing method on the clients, and then it can access the wireless AP automatically. PBC: There are two ways to start PCB mode, user can press the PCB button directly on the device, or select PCB mode on the software and apply. Users can activate WPS connection in WPS mode through these two methods, only when the clients choose PCB access, the clients can connect the AP automatically.
	WPS Status	WPS shows status in three ways: WSC: Idle WSC: Start WSC Process(begin to send messages) WSC: Success; this means clients have accessed the AP successfully, WPS connects well.

4.4.6 Station Info

Status	Network	Wireless	Wireless 5G	SIP	FXS1	FXS2	Security	Application	Storage	Administration	
Basic	Wireless Security	WMM	WDS	WPS	Station Info	Advanced					

Please REBOOT to make the changes effective!

[Help](#)

Wireless Status

Wireless Status

Current Channel: Channel 8

Wireless Network

Wireless Network

MAC Address	Aid	PSM	MimoPS	MCS	BW	SGI	STBC
-------------	-----	-----	--------	-----	----	-----	------

This page shows user the clients' information which connects to the AP.

4.4.7 Advanced

Field Name	Description
BG Protection Mode	Select G protection mode, options are on, off and automatic.
Beacon Interval	The interval of sending a wireless beacon frame, within this range, it will send a beacon frame for the information of the surrounding radio network.
Data Beacon Rate(DTIM)	Specify the interval of transmitting the indication message, it is a kind of cut down operation, and it is used for informing the next client which is going to receive broadcast multi-cast.
Fragment Threshold	Specify the fragment threshold for the packet, when the length of the packet exceeds this value, the packet will be divided into multiple packets.
RTS Threshold	Specify the packet RTS threshold, when the packet exceeds this value, the router will send RTS to the destination site consultation
TX Power	Define the transmission power of the current AP, the greater it is, the stronger the signal is.
Short Preamble	Default is enable, FWR9202 system is not compatible with traditional IEEE802.11, the operation rate can be 1,2Mbps

Advanced Wireless

Advanced Wireless

BG Protection Mode: Auto

Beacon Interval: 100 ms (range 20 - 999, default 100)

Data Beacon Rate (DTIM): 3 ms (range 1 - 255, default 3)

Fragment Threshold: 2346 (range 256 - 2346, default 2346)

RTS Threshold: 2347 (range 1 - 2347, default 2347)

TX Power: 100 (range 1 - 100, default 100)

Short Preamble: ☒ Enable ☐ Disable

Short Slot: ☒ Enable ☐ Disable

Tx Burst: ☒ Enable ☐ Disable

Pkt_Aggregate: ☒ Enable ☐ Disable

IEEE 802.11H Support: ☐ Enable ☒ Disable (only in A band)

Country Code: US (United States)

Support Channel: Ch1~11

Wi-Fi Multimedia: ☒ Enable ☐ Disable


WMM Capable: ☐ Enable ☒ Disable

APSD Capable: ☐ Enable ☒ Disable

WMM Parameters: [WMM Configuration](#)

Multicast-to-Unicast Converter: ☐ Enable ☒ Disable

Multicast-to-Unicast: ☐ Enable ☒ Disable

	Short Slot	If or not enable short slot, default is enable, it is helpful in improving the transmission rate of wireless communication.
	Tx Burst	One of the features of MAC layer, it is used to improve the fairness for transmitting TCP.
	Pkt_Aggregate	It is a mechanism that is used to enhance the LAN, in order to ensure that the dhome gateway packets are sent to the destination correctly.
	IEEE802.11H support	If or not enable IEEE802.11H Support, default is disable.
	Country Code	Select country code, options are CN, US, JP, FR, TW, IE, HK and NONE.
	Wi-Fi Multimedia(WMM)	
	WMM Capable	If or not enable WMM. WMM take effects when it is enabled.
	APSD Capable	After enable this, it may affect wireless performance, but can play a role in energy-saving power
	WMM Parameters	Press  , the webpage will jump to the configuration page of Wi-Fi multimedia.
	Multicast-to-Unicast Converter	
	Multicast-to-Unicast	If or not enable Multicast-to-Unicast, by default, it is disabled, you can enable it.

4.5 Wireless 5G

4.5.1 Basic

Basic Wireless Settings	Field Name	Description
Wireless Network Radio On/Off: ☐ Radio On ☐ Radio Off Network Mode: 11vht AC/AN/A SSID: Wireless_AP_5G Hidden ☐ Isolated ☐ Max Client 16 Multiple SSID1: Hidden ☐ Isolated ☐ Max Client 16 Multiple SSID2: Hidden ☐ Isolated ☐ Max Client 16 Multiple SSID3: Hidden ☐ Isolated ☐ Max Client 16 broadcast(SSID): ☒ Enable ☐ Disable AP Isolation: ☐ Enable ☒ Disable MBSSID AP Isolation: ☐ Enable ☒ Disable BSSID: 00:0C:FE:00:11:20 Frequency (Channel): 5220MHz (Channel 44) HT Physical Mode: ☒ Mixed Mode ☐ Green Field Operating Mode: ☐ 20 ☒ 20/40 Channel BandWidth: ☐ Long ☒ Auto Guard Interval: ☐ Long ☒ Auto MCS: Auto Reverse Direction Grant(RDG): ☐ Disable ☒ Enable Extension Channel: 5240MHz (Channel 48) STBC: ☐ Disable ☒ Enable Aggregation MSDU(A-MSDU): ☒ Disable ☐ Enable Auto Block ACK: ☐ Disable ☒ Enable Decline BA Request: ☒ Disable ☐ Enable HT Disallow TKIP: ☐ Disable ☒ Enable 20/40 Coexistence: ☐ Disable ☒ Enable HT LDPC: ☒ Disable ☐ Enable VHT Option: ☒ 20/40 ☐ 80 VHT BandWidth: ☒ Disable ☐ Enable VHT STBC: ☒ Disable ☐ Enable VHT Short GI: ☒ Disable ☐ Enable VHT BW Signaling: ☒ Disable ☐ Static ☐ Dynamic VHT LDPC: ☒ Disable ☐ Enable Other: HT TxStream: 2 HT RxStream: 2	Radio on/off	Select “Radio Off” to disable wireless. Select “Radio on”to enable wireless.
	Network Mode	Choose one network mode from the drop down 11a/n mixed mode 11b/g mixed mode 11b only 11g only 11b/g/n mixed mode 11a only 11a/n mixed mode 11vht AC/AN/A 11vht AC/AN list
	SSID	It is the basic identity of wireless LAN. SSID can be any alphanumeric or a combination of special characters. It will appear in the wireless network access list.
	Multiple SSID1~SSID3	FWR9202 supports multiple SSIDs.
	Hidden	After the item is checked, the SSID is no longer displayed in the search for the Wi-Fi wireless network connection list
	Broadcast(SSID)	After initial State opening, the device broadcasts the SSID of the router to wireless network
	AP Isolation	If AP isolation is enabled, the clients of the AP cannot access each other.
	MBSSID AP Isolation	AP isolation among the devices which are not belong to this AP and along to, when the option is enabled, the devices which do not belong to this AP cannot access the devices which are within the AP.

	BSSID	A group of wireless stations and a WLAN access point (AP) consists of a basic access device (BSS), each computer in the BSS must be configured with the same BSSID, that is, the wireless AP logo.
	Frequency (Channel)	You can select Auto Select and channel 1/2/3/4/5/6/7/8/9/10/11.
	HT Physical Mode Operating Mode	1. Mixed Mode: In this mode, the previous wireless card can recognize and connect to the Pre-N AP, but the throughput will be affected 2. Green Field: high throughput can be achieved, but it will affect backward compatibility, and security of the system
	Channel Bandwidth	Select channel bandwidth, default is 20MHz and 20/40MHz.
	Guard Interval	The default is automatic, in order to achieve good BER performance, you must set the appropriate guard interval
	MCS	Position control signal, options are 0 to 32, the default is automatic
	Reverse Direction (RDG)	You can choose to enable or disable this privilege
	STBC	
	VHT Bandwidth	
	VHT STBC	
	VHT Short GI	
	VHT BW Signaling	
	VHT LDPC	

4.5.2 Wireless Security

Status Network Wireless Wireless 5G SIP FXS1 FXS2 Security Applicati Basic Wireless Security WMM WDS WPS Station Info Advanced Please REBOOT to make the changes effective! WIFI Security Setting Select SSID SSID choice Wireless_AP_5G "Wireless_AP_5G" Security Mode WPA-PSK WPA WPA Algorithms ☒ TKIP ☐ AES ☐ TKIPAES Pass Phrase 12345678 Key Renewal Interval 3600 Second in Month (0 ~ 4194303) Access policy Policy Disable Add a station MAC
--

Select a different encryption mode, the web interface will be different, user can configure the corresponding parameters under the mode you select. Please refer to 4.4.2 section.

4.5.3 WMM

Please refer to 4.4.3 section.

4.5.4 WDS

Please refer to 4.4.4 section

4.5.5 WPS

Please refer to 4.4.5 section.

4.5.6 Station Info

Please refer to 4.4.6 section.

4.5.7 Advanced

Please refer to 4.4.7 section.

4.6 SIP

4.6.1 SIP Settings

Status	Network	Wireless	Wireless 5G	SIP	FXS1	FXS2	Security	Applicati
SIP Settings VoIP QoS								
Please REBOOT to make the changes effective!								
SIP Parameters								
SIP Parameters SIP T1 500 MS SIP Reg User Agent Name Mark All AVT Packets Enable SRTP Disable Service Type Common Max Forward 70 Max Auth 2 RFC 2543 Call Hold Enable SRTP Prefer Encryption AES_CM								
NAT Traversal								
NAT Traversal NAT Traversal Disable NAT Refresh Interval(sec) 60 STUN Server Address STUN Server Port 3478								
Field Name	Description							
SIP T1	The minimum scale of retransmission time							
Max Forward	Sip packets Max Forward message header fields used to limit the request which jump in his destination . To limit the number that forwarding a request to the proxy or gateway of next node intermediate.							
SIP Reg User Agent Name	The agent name of SIP registered user							
Max Auth	The maximum number of retransmissions							
Mark All AVT Packets	Voice packet marking,to enable this item will see the mark on the voice message when the call environment changed (such as press a key during the call)							
RFC 2543 Call Hold	Enable,the Connection Information field displays the address is 0.0.0.0 in the invite message of Hold. Disable,the Connection Information field displays the device ip address in the invite message of Hold.							
SRTP	Whether to enable the call packet encryption function							
SRTP Prefer Encryption	The preferred encryption type of calling packet (the Message body of INVITE Message)							
Service Type	Choose the server type							
NAT Traversal	1. If or not enable NAT Traversal 2. FWR9202 supports STUN Traversal; If you want to traverse NAT/Firewall, select the STUN.							



	STUN Server Address	Add the correct STUN service provider IP address.
	NAT Refresh Interval	Set NAT Refresh Interval, default is 60s.
	STUN Server Port	Set STUN Server Port, default is 5060.

4.6.2 VoIP Qos

QoS Settings Layer 3 QoS SIP QoS(0-63) 0 RTP QoS(0-63) 0	Field Name	Description
	SIP /RTP QoS	The default value is 0,you can set a range of values is 0~63

4.7 FXS1

4.7.1 SIP Account

1. Basic

Set the basic information provided by your VOIP Service Provider, such as Phone Number, Account, password, SIP Proxy and so on.

Basic		Field Name	Description
Basic Setup Line Enable Enable Peer To Peer Disable		Line Enable	If or not enable the line.
Proxy and Registration Proxy Server 192.168.10.208 Proxy Port 5060 Outbound Server Outbound Port 5060 Backup Outbound Server Backup Outbound Port 5060		Peer To Peer	If or not enable PEER to PEER. If enable, SIP-1 will not send register request to SIP server; but in Status/ SIP Account Status webpage, Status is Registered; lines 1 can dial out, but the external line number cannot dialed line1.
Subscriber Information Display Name 11 Phone Number 11 Account 11 Password ..		Proxy Server	The IP address or the domain of SIP Server
		Outbound Server	The IP address or the domain of Outbound Server
		Backup Outbound Server	The IP address or the domain of Backup Outbound Server
		Proxy port	SIP Service port, default is 5060
		Outbound Port	Outbound Proxy's Service port, default is 5060
		Backup Outbound Port	Backup Outbound Proxy's Service port, default is 5060
		Display Name	The number will be displayed on LCD
		Phone Number	Enter telephone number provided by SIP Proxy
		Account	Enter SIP account provided by SIP Proxy
		Password	Enter SIP password provided by SIP Proxy

2. Audio Configuration

Audio Configuration		Field Name	Description
Codec Setup Audio Codec Type 1: G.711U Audio Codec Type 3: G.729 Audio Codec Type 5: G.723 Packet Cycle(ms): 20ms Echo Cancel: Enable T.38 Enable: Enable T.38 CNG Detect Enable: Disable gpmid attribute Enable: Disable Audio Codec Type 2: G.711A Audio Codec Type 4: G.722 G.723 Coding Speed: 5.3k bps Silence Supp: Disable Auto Gain Control: Disable T.38 Redundancy: Disable T.38 CED Detect Enable: Enable		Audio Codec Type1	Choose the audio codec type from G.711U, G.711A, G.722, G.729, G.723
		Audio Codec Type2	Choose the audio codec type from G.711U, G.711A, G.722, G.729, G.723
		Audio Codec Type3	Choose the audio codec type from G.711U, G.711A, G.722, G.729, G.723
		Audio Codec Type4	Choose the audio codec type from G.711U, G.711A, G.722, G.729, G.723
		Audio Codec Type5	Choose the audio codec type from G.711U, G.711A, G.722, G.729, G.723
		G.723 Coding Speed	Choose the speed of G.723 from 5.3kbps and 6.3kbps
		Packet Cycle	The RTP packet cycle time, default is 20ms
		Silence Supp	If or not enable silence
		Echo Cancel	If or not enable echo cancel, default is enable
		Auto Gain Control	If or not enable auto gain.
		T.38 Enable	If or not enable T.38
		T.38 Redundancy	If or not enable T.38 Redundancy
		T.38 CNG Detect Enable	If or not enable T.38 CNG Detect
		gmd attribute Enable	If or not enable gmd attribute.

3. Supplementary Service Subscription

Supplementary Service Subscription		Field Name	Description
Supplementary Services Call Waiting Enable Hot Line MWI Enable Enable Voice Mailbox Numbers MWI Subscribe Enable Disable VMWI Serv Enable DND Disable		Call Waiting	If or not enable Call Waiting
		Hot Line	Fill in the hotline number. Pickup handset or press handsfree/headset button, the device will dial out the hotline number automatically.
		MWI Enable	If or not enable MWI (message waiting indicate). If the user needs to user voice mail, please enable this feature.
		MWI Subscribe Enable	If or not enable MWI Subscribe
		Voice Mailbox Numbers	Fill in the voice mailbox phone number, Asterisk platform, for example, its default voice mail is *97
		VMWI Serv	If or not enable VMWI service.
		DND	If or not enable DND (do not disturb). If enable, any phone call cannot arrive at the device; default is disable.
Speed Dial Speed Dial 2 Speed Dial 3 Speed Dial 4 Speed Dial 5 Speed Dial 6 Speed Dial 7 Speed Dial 8 Speed Dial 9		Speed Dial	Enter the speed dial phone numbers. Dial *74 to active speed dial function. Then press the speed dial numbers, for example, press 2, phone will dial 075526099365 directly.

4. Advanced

Advanced		Field Name	Description
Advanced Setup		Domain Name Type	If or not use domain name in the SIP URI.
Domain Name Type: Enable		Carry Port Information	If or not carry port information in the SIP URI.
Signal Port: 5060		Signal Port	The local port of SIP protocol, default is 5060.
RFC2833 Payload(>=96): 101		DTMF Type	Choose the DTMF type from Inbound, RFC2833 and SIP INFO.
RTP Port: 0 (=0 auto select)		RFC2833 Payload(>=96)	User can use the default setting.
Session Refresh Time(sec): 0		Register Refresh Interval	The interval between two normal Register messages. You can use the default setting.
Prack Enable: Disable		RTP Port	Set the port to send RTP. The device will select one idle port for RTP if you set "0"; otherwise use the value which user sets.
Primary SER Detect Interval: 0		Cancel Message Enable	When you set enable, an unregistered message will be sent before registration, while you set disable, unregistered message will not be sent before registration. You should set the option for different Proxy.
Keep-alive Interval(10-60s): 15		Session Refresh Time(sec)	Time interval between two sessions, you can use the default settings.
Anonymous Call Block: Disable		Refresher	Choose refresher from UAC and UAS.
Use OB Proxy In Dialog: Disable		Prack Enable	If or not enable prack.
Dial Prefix:		SIP OPTIONS Enable	When you set enable, the device will send SIP-OPTION to the server, instead of sending periodic Hello message. The sending interval is Keep-alive interval.
Hold Method: ReINVITE		Primary SER Detect Interval	Test interval of the primary server, the default value is 0, it represents disable.
Only Recv Request From Server: Disable		Max Detect Fail Count	Interval of detection of the primary server fail; the default value is 3, it means that if detect 3
SIP Received Detection: Disable			
Country Code:			
Caller ID Header: FROM			

	times fail; the device will no longer detect the primary server.
Keep-alive Interval(10-60s)	The interval that the device will send an empty packet to proxy.
Anonymous Call	If or not enable anonymous call.
Anonymous Call Block	If or not enable anonymous call block.
Proxy DNS Type	Set the DNS server type, choose from A type and DNS SRV.
Use OB Proxy In Dialog	If or not use OB Proxy In Dialog.
Reg Subscribe Enable	If enable, subscribing will be sent after registration message, if not enable, do not send subscription.
Dial Prefix	The number will be added before your telephone number when making calls.
User Type	Choose the User Type from IP and Phone.
Hold Method	Choose the Hold Method from ReINVITE and INFO.
Request-URI User Check	If or not enable the user request URI check.
Only Recv request from server	If or not enable the only receive request from server.
Server Address	The IP address of SIP server.
SIP Received Detection	If or not enable SIP Received Detection, if enable, use it to confirm the public network address of the device.

4.7.2 Preferences

1. Volume Settings

Preferences		Field Name	Description
Volume Settings Handset Input Gain 5 Handset Volume 5		Handset Input Gain	Adjust the handset input gain from 0 to 7.
		Handset Volume	Adjust the output gain from 0 to 7.

2. Features and Call Forward

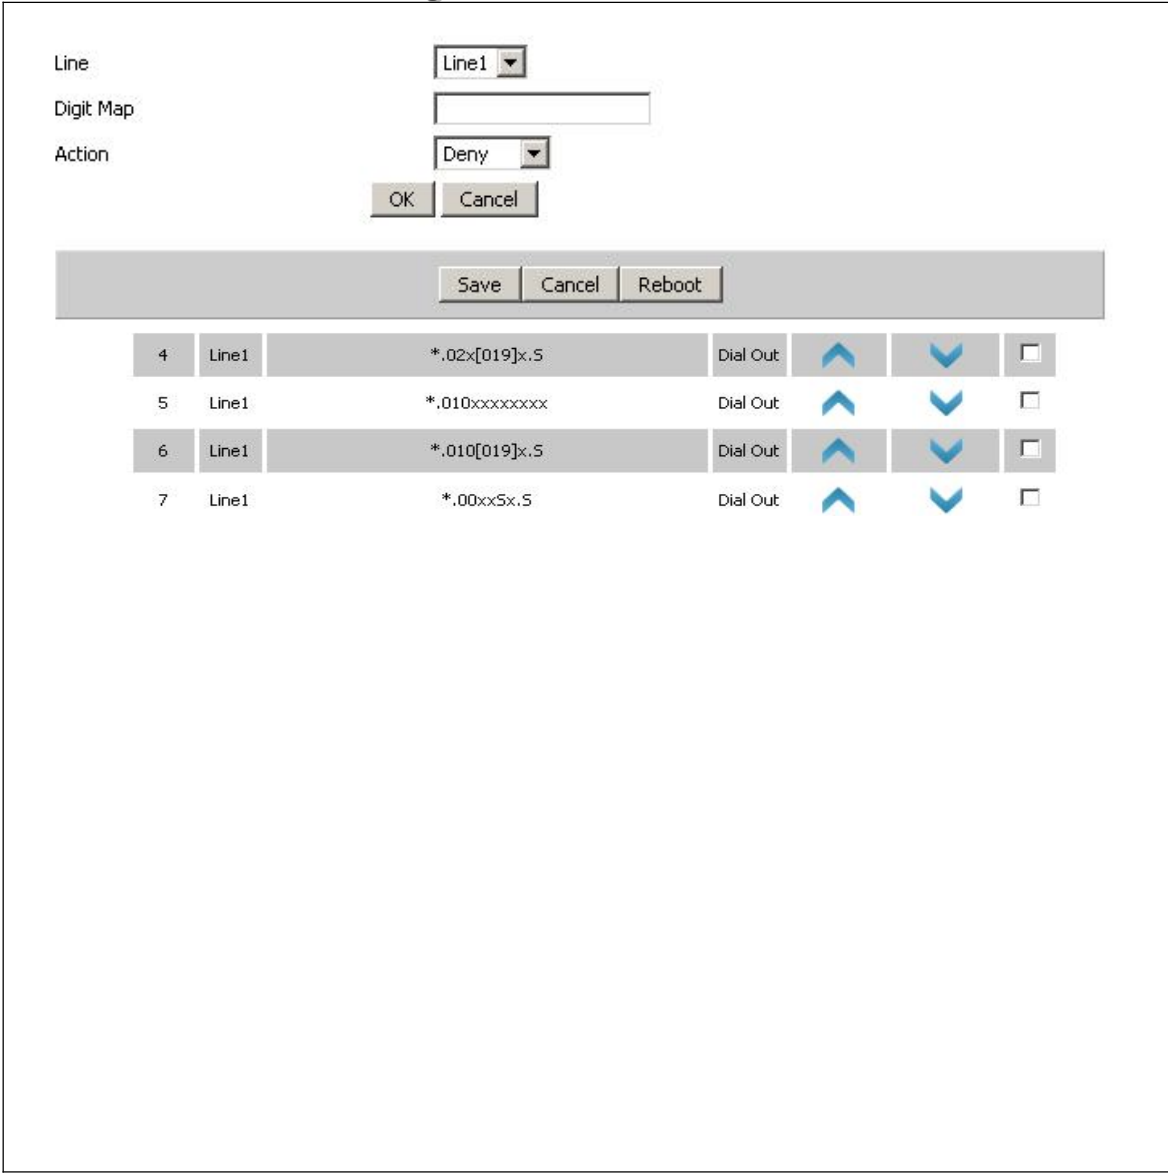
Field Name		Description
Features	All Forward	If or not enable forward all calls
	Busy Forward	If or not enable busy forward.
	No Answer Forward	If or not enable no answer forward.
Call Forward	All Forward	Set the target phone number for all forward. The device will forward all calls to the phone number immediately when there is an incoming call.
	Busy Forward	The phone number which the calls will be forwarded to when line is busy.
	No Answer Forward	The phone number which the call will be forwarded to when there's no answer.
	No Answer Timeout	The seconds to delay forwarding calls, if there is no answer at your phone.
Feature Code	Hold key code	Call hold signatures, default is *77.
	Conference key code	Signature of the tripartite session, default is *88.
	Transfer key code	Call forwarding signatures ,default is *98.
	IVR key code	Signatures of the voice menu, default is ****.
	R key enable	If or not enable R key way call features.
	R key cancel code	Set the R key cancel code, option are ranged from R1 to R9, default value is R1.
	R key hold code	Set the R key hold code, options are ranged from R1 to R9, default value is R2.
	R key transfer code	Set the R key transfer code, options are ranged from R1 to R9, default value is R4.
	R key conference code	Set the R key conference code, options are ranged from R1 to R9, default value is R3.
Speed Dial Code		Speed dial code, default is *74.

3. Miscellaneous

Miscellaneous Codec Loop Current 26 CID Service Enable Caller ID Method Bellcore Dial Time Out(IDT) 5 ICMP Ping Disable Impedance Maching US PBX,Korea,T CWCID Service Disable Call Immediately Key # Escaped char enable Disable		Field Name	Description
		Codec Loop Current	Set off-hook loop current, default is 26
		Impedance Maching	Set impedance matching, default is US PBX,Korea,Taiwan(600).
		CID service	If or not enable displaying caller ID; If enable, caller ID is displayed when there is an incoming call or it won't be displayed. Default is enable.
		CWCID Service	If or not enable CWCID. If enable, the device will display the waiting call's caller ID, or it won't display. Default is disable.
		Dial Time Out	How long FWR9202 will sound dial out tone when FWR9202 dials a number.
		Call Immediately Key	Choose call immediately key form * or #.
		ICMP Ping	If or not enable ICMP Ping. If enable this option, home gateway will ping the SIP Server every interval time, otherwise, It will send "hello" empty packet to the SIP Server.
		Escaped char enable	Open special character translation function; if enable, when you press the # key, it will be translated to 23%, when disable, it is just #

4.7.3 Dial Plan

1. Parameters and Settings

	Field Name	Description
	Dial Plan	If or not enable dial plan.
	Line	Set the line.
	Digit Map	Fill in the sequence used to match input number The syntactic, please refer to the following Dial Plan Syntactic
	Action	Choose the dial plan mode from Deny and Dial Out. Deny means FWR9202 will reject the matched number, while Dial Out means FWR9202 will dial out the matched number.
	Move Up	Press it to move up.
	Move Down	Press it to move down.

2. Adding one dial plan:

Dial Plan

General

Dial Plan

Enable

No.	FXS	Digit Map	Action	Move Up	Move Down	
FXS	FXS 1		Deny			

OK

Cancel

Step 1. Enable Dial Plan

Step 2. Click **Add** button, and the configuration table

Step 3. Fill in the value of parameters.

Step 4. Press **OK** button to end configuration.

Step 5. Press **Save** button to save changes

3. Dial Plan Syntactic

No.	String	Description
1	0 1 2 3 4 5 6 7 8 9 * #	Legal characters
2	x	Lowercase letter x stands for one legal character
3	[sequence]	To match one character form sequence. For example: 6. [0-9]: match one digit form 0 to 9 7. [23-5*]: match one character from 2 or 3 or 4 or 5 or *
4	x.	Match to $x^0, x^1, x^2, x^3, \dots, x^n$ For example: “01.”:can match ”0”, “01”, “011”, ”0111”,,”01111...”
5	<diald:substituted>	Replace diald with substituted. For example: <8:1650>123456: input is “85551212”, output is“16505551212”
6	x,y	Make outside dial tone after dialing “x”, stop until dialing character “y” For example: “9,1xxxxxxxxx”:the device reports dial tone after inputting “9”, stops tone until inputting “1” “9,8,010x”: make outside dial tone after inputting “9”, stop tone until inputting “0”
7	T	Set the delayed time. For example: “<9:111>T2”: The device will dial out the matched number “111” after 2 seconds.

4.7.4 Blacklist

In this page, user can upload or download blacklist file, and can add or delete or edit blacklist one by one.

Blacklist Upload && Download

Blacklist Upload && Download

Local File

浏览...

Upload CSV

Download CSV

Click 浏览... to select the blacklist file and click upload CSV to upload it to FWR9202; Click download CSV to save the blacklist file to your local computer.

Blacklist

Index	Name	Number	
1	Rob	12345	☐
2	Henry	123456	☐

Edit

Add

Delete

Move to phonebook

Select one contact and click edit to change the information, click delete to delete the contact, click Move to phonebook to move the contact to phonebook.

Click Add to add one blacklist, enter the name and phone number, click OK to confirm and click cancel to cancel.

Name

Number

Ded

123589

OK

Cancel

4.7.5 Call Log

To view the call log information such as redial list (incoming call), answered call and missed cal

Redial List <table><tr><th>Index</th><th>NUMBER</th><th>Start Time</th><th>Duration</th><th>☐</th></tr><tr><td>1</td><td>123</td><td>10/28 10:30</td><td>00:00:07</td><td>☐</td></tr><tr><td>2</td><td>010123</td><td>10/28 12:02</td><td>00:00:01</td><td>☐</td></tr><tr><td>3</td><td>010123</td><td>10/28 16:16</td><td>00:00:00</td><td>☐</td></tr><tr><td>4</td><td>010123</td><td>10/28 16:16</td><td>00:00:00</td><td>☐</td></tr><tr><td>5</td><td>123</td><td>10/28 16:20</td><td>00:00:13</td><td>☐</td></tr><tr><td>6</td><td>123</td><td>10/28 16:21</td><td>00:00:34</td><td>☐</td></tr><tr><td>7</td><td>123</td><td>10/29 10:50</td><td>00:00:10</td><td>☐</td></tr><tr><td>8</td><td>123</td><td>10/29 14:36</td><td>00:00:01</td><td>☐</td></tr><tr><td>9</td><td>123</td><td>10/29 15:05</td><td>00:00:23</td><td>☐</td></tr><tr><td>10</td><td>123</td><td>10/29 15:06</td><td>00:00:05</td><td>☐</td></tr><tr><td>11</td><td>123</td><td>10/29 15:07</td><td>00:00:01</td><td>☐</td></tr></table>	Index	NUMBER	Start Time	Duration	☐	1	123	10/28 10:30	00:00:07	☐	2	010123	10/28 12:02	00:00:01	☐	3	010123	10/28 16:16	00:00:00	☐	4	010123	10/28 16:16	00:00:00	☐	5	123	10/28 16:20	00:00:13	☐	6	123	10/28 16:21	00:00:34	☐	7	123	10/29 10:50	00:00:10	☐	8	123	10/29 14:36	00:00:01	☐	9	123	10/29 15:05	00:00:23	☐	10	123	10/29 15:06	00:00:05	☐	11	123	10/29 15:07	00:00:01	☐	Redial List
Index	NUMBER	Start Time	Duration	☐																																																									
1	123	10/28 10:30	00:00:07	☐																																																									
2	010123	10/28 12:02	00:00:01	☐																																																									
3	010123	10/28 16:16	00:00:00	☐																																																									
4	010123	10/28 16:16	00:00:00	☐																																																									
5	123	10/28 16:20	00:00:13	☐																																																									
6	123	10/28 16:21	00:00:34	☐																																																									
7	123	10/29 10:50	00:00:10	☐																																																									
8	123	10/29 14:36	00:00:01	☐																																																									
9	123	10/29 15:05	00:00:23	☐																																																									
10	123	10/29 15:06	00:00:05	☐																																																									
11	123	10/29 15:07	00:00:01	☐																																																									
Answered Calls <table><tr><th>Index</th><th>NUMBER</th><th>Start Time</th><th>Duration</th><th>☐</th></tr><tr><td>1</td><td>22222</td><td>10/21 09:56</td><td>00:00:40</td><td>☐</td></tr><tr><td>2</td><td>110</td><td>10/21 18:14</td><td>00:00:03</td><td>☐</td></tr><tr><td>3</td><td>110</td><td>10/21 18:15</td><td>00:00:07</td><td>☐</td></tr><tr><td>4</td><td>sipp</td><td>10/23 13:40</td><td>00:00:06</td><td>☐</td></tr><tr><td>5</td><td>sipp</td><td>10/24 18:05</td><td>00:00:05</td><td>☐</td></tr><tr><td>6</td><td>sipp</td><td>10/24 18:05</td><td>00:00:05</td><td>☐</td></tr><tr><td>7</td><td>sipp</td><td>10/25 15:38</td><td>00:00:03</td><td>☐</td></tr><tr><td>8</td><td>sipp</td><td>10/25 15:42</td><td>00:00:06</td><td>☐</td></tr><tr><td>9</td><td>sipp</td><td>10/25 15:55</td><td>00:00:10</td><td>☐</td></tr><tr><td>10</td><td>sipp</td><td>10/25 16:03</td><td>00:00:02</td><td>☐</td></tr><tr><td>11</td><td>sipp</td><td>10/25 16:17</td><td>00:00:00</td><td>☐</td></tr></table>	Index	NUMBER	Start Time	Duration	☐	1	22222	10/21 09:56	00:00:40	☐	2	110	10/21 18:14	00:00:03	☐	3	110	10/21 18:15	00:00:07	☐	4	sipp	10/23 13:40	00:00:06	☐	5	sipp	10/24 18:05	00:00:05	☐	6	sipp	10/24 18:05	00:00:05	☐	7	sipp	10/25 15:38	00:00:03	☐	8	sipp	10/25 15:42	00:00:06	☐	9	sipp	10/25 15:55	00:00:10	☐	10	sipp	10/25 16:03	00:00:02	☐	11	sipp	10/25 16:17	00:00:00	☐	Answered Calls
Index	NUMBER	Start Time	Duration	☐																																																									
1	22222	10/21 09:56	00:00:40	☐																																																									
2	110	10/21 18:14	00:00:03	☐																																																									
3	110	10/21 18:15	00:00:07	☐																																																									
4	sipp	10/23 13:40	00:00:06	☐																																																									
5	sipp	10/24 18:05	00:00:05	☐																																																									
6	sipp	10/24 18:05	00:00:05	☐																																																									
7	sipp	10/25 15:38	00:00:03	☐																																																									
8	sipp	10/25 15:42	00:00:06	☐																																																									
9	sipp	10/25 15:55	00:00:10	☐																																																									
10	sipp	10/25 16:03	00:00:02	☐																																																									
11	sipp	10/25 16:17	00:00:00	☐																																																									
Missed Calls <table><tr><th>Index</th><th>NUMBER</th><th>Start Time</th><th>Duration</th><th>☐</th></tr><tr><td>1</td><td>110</td><td>10/21 09:50</td><td>00:00:03</td><td>☐</td></tr><tr><td>2</td><td>555</td><td>10/22 12:04</td><td>00:00:03</td><td>☐</td></tr></table>	Index	NUMBER	Start Time	Duration	☐	1	110	10/21 09:50	00:00:03	☐	2	555	10/22 12:04	00:00:03	☐	Missed Call																																													
Index	NUMBER	Start Time	Duration	☐																																																									
1	110	10/21 09:50	00:00:03	☐																																																									
2	555	10/22 12:04	00:00:03	☐																																																									

4.8 FXS2

The settings of FXS2 are the same as FXS1.

4.9 Security

4.9.1 Filtering Setting

Basic Settings

Basic Settings

Filtering

Disable

Default Policy

Drop

The packet that don't match with any rules would be

Save

Cancel

IP/Port Filter Settings

Mac address

Dest IP Address

Source IP Address

Protocol

NONE

Dest. Port Range

-

Src Port Range

-

Action

Drop

Comment

(The maximum rule count is 32)

Save

Cancel

Current MAC/IP/Port filtering rules in system

No.	Mac address	Dest IP Address	Source IP Address	Protocol	Dest. Port Range	Src Port Range	A
Others would be dropped.							

Delete

Cancel

Field Name	Description
Filtering	If or not enable filter function
Default Policy	Choose to give up or accept
Mac address	Add the Mac address filtering
Dest IP address	Dest IP address
Source IP address	Source IP address
Protocol	Select a protocol name, support for TCP, UDP and TCP&UDP
Dest. Port Range	Destination port ranges
Src Port Range	Source port range
Action	You can choose to receive or give up; this should be consistent with the default policy.
Comment	Add callout
Delete	Delete selected item

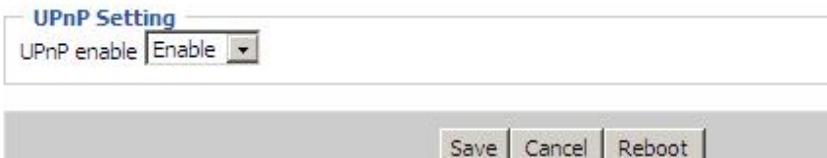
4.9.2 Content Filtering

Filtering Setting Content Filtering	Field Name	Description
Please REBOOT to make the changes effective!	Filtering	If or not enable content Filtering
Basic Settings	Default Policy	The default policy is to accept or to prohibit filtering rules
Basic Settings Filtering Disable Default Policy Accept Save Cancel	Current Webs URL Filters	List the URL filtering rules that already existed (blacklist)
Webs URL Filter Settings	Delete/Cancel	You can choose to delete or cancel the existing filter rules
Current Webs URL Filters No. URL Delete Cancel	Add a URL Filter	Add URL filtering rules
Add a URL Filter URL Add Cancel	Add/Cancel	Click adds to add one rule or click cancel.
Webs Host Filter Settings	Current Website Host Filters	List the keywords that already exist (blacklist)
Current Website Host Filters No. Keyword Delete Cancel	Delete/Cancel	You can choose to delete or cancel the existing filter rules the existing keywords.
Add a Host(keyword) Filter Keyword Add Cancel	Add a Host Filter (Keyword)	Add keywords
	Add/Cancel	Click the Add or cancel

4.10 Application

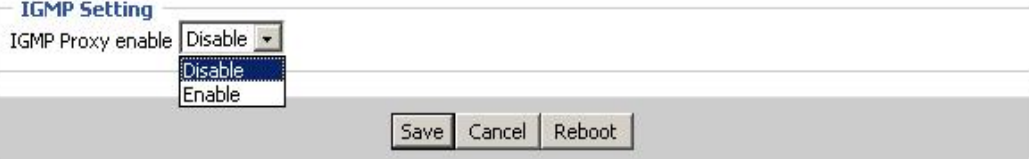
4.10.1 UPnP

UPnP (Universal Plug and Play) support zero setting networking, and can automatically discover a variety of networked devices. UPnP is enabled, allows the device supports UPnP function dynamically access network, obtain an IP address, and convey its performance information. If the network has a DHCP and DNS server, you can automatically obtain DHCP and DNS services. Supports UPnP devices can be automatically off the network, the device or other devices on the network without affecting.

UPnP	Field Name	Description
	UPnP enable	If or not enable UPnP function.

4.10.2 IGMP

Multicast has the ability to send the same data to multiple devices. IP hosts use IGMP (Internet Group Management Protocol) report multicast group memberships to the neighboring routers to transmit data, at the same time, the multicast router use IGMP to discover which hosts belong to the same multicast group.

IGMP	Field Name	Description
	IGMP Proxy enable	If or not enable IGMP function.

4.10.3 MLD

MLD MLD Setting MLD enable Disable Disable Enable Save Cancel Reboot	Field Name	Description
	MLD enable	If or not enable MLD function

4.11 Storage

4.11.1 Disk Management

This page is used to manage the USB storage device.

Disk Management Ftp Setting Smb Setting Please REBOOT to make the changes effective! Disk Management Folder List Directory Path Partition Add Delete RemoveDisk Partition Status Partition Path Format Re-allocate	Field Name	Description
	Add	Adding files to the USB storage device
	Delete	Remove the USB storage device file
	Remove Disk	Transfer files within a USB storage device
	Format	Format the USB storage device
	Re-allocate	Resetting the USB storage device

4.11.2 FTP Setting

FTP Setting		Field Name	Description
FTP Server Setup FTP Server ☐ Enable ☒ Disable FTP Server Name FTP Anonymous Login ☐ Enable ☒ Disable FTP Port 21 Max. Sessions 10 Create Directory ☒ Enable ☐ Disable Rename File/Directory ☒ Enable ☐ Disable Remove File/Directory ☒ Enable ☐ Disable Read File ☒ Enable ☐ Disable Write File ☒ Enable ☐ Disable Download Capability ☒ Enable ☐ Disable Upload Capability ☒ Enable ☐ Disable Apply Reset		FTP Server	If or not enable FTP server
		FTP Server Name	Set the FTP server name
		Anonymous Login	If or not support anonymous login
		FTP Port	Set FTP server port number
		Max. Sessions	Maximum number of connections
		Create Directory	If or not enable create directory
		Rename File/Directory	If or not enable rename file/directory
		Remove File/Directory	If or not enable transfer of files/directories
		Read File	If or not enable read files
		Write File	If or not enable write files
		Download Capability	If or not enable download capability function.
		Upload Capability	If or not enable upload capability function

4.11.3 Smb Setting

SMB Setting		Field Name	Description
SAMBA Server Setup SAMBA Server ☐ Enable ☒ Disable Workgroup Workgroup NetBIOS Name FileShare Add Edit Delete Apply Cancel		SAMBA Server	If or not enable SAMBA server
		Workgroup	Fill in the working group
		NetBIOS Name	Network basic input/output system name
		Add	Add a shared file
		Edit	Edit a shared file
		Del	Delete a shared file

4.12 Administration

Use can manage the device in these webpage; you can configure the Time/Date, password, web access, system log and associated configuration TR069

4.12.1 Management

You can configure the value of Time/Date, password, web access, and system log and so on.

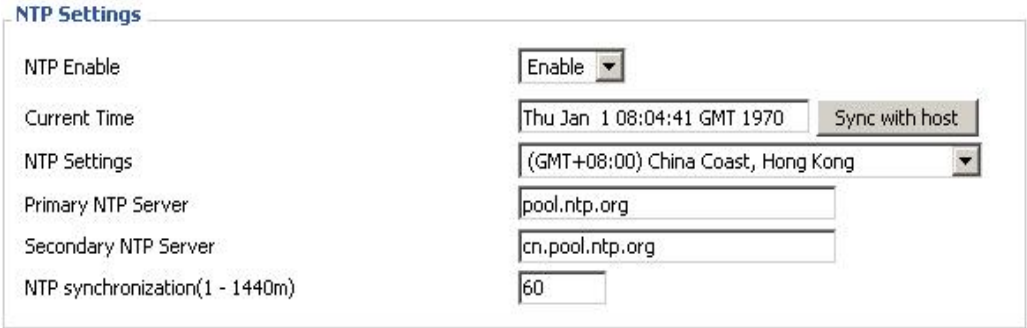
1. Save config file

Save Config File	Field Name	Description
Config File Upload && Download Local File 浏览... Upload Download	Config file	Upload: click on browse, select file in the local, press the upload button to begin uploading files
	upload and download	Download: click to download, and then select contains the path to download the configuration file

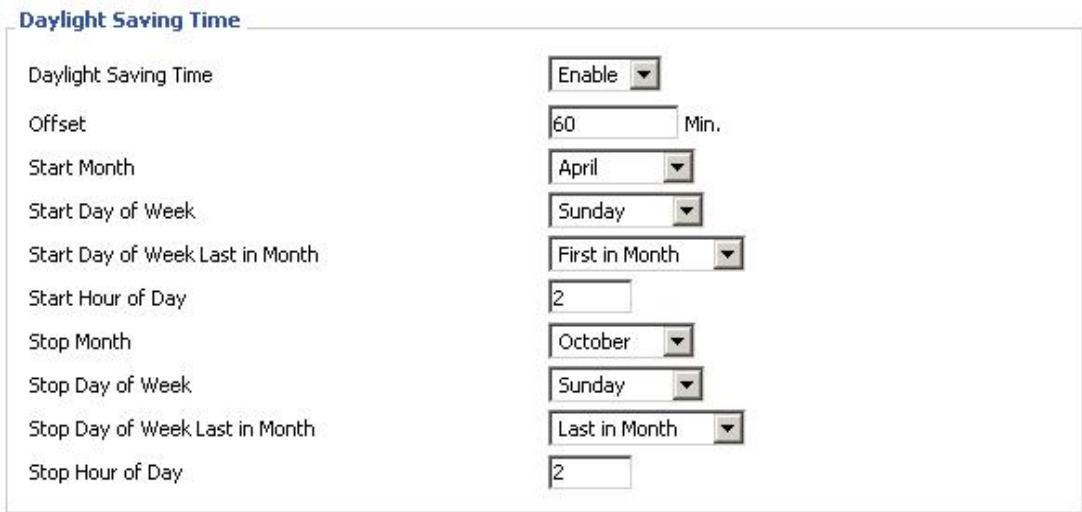
2. Administrator settings

Administrator Settings	Field Name	Description
Password Reset User Type Admin User New User Name admin New Password Confirm Password	User type	Choose the user type from admin user and normal user and basic user.
	New User Name	You can modify the user name, set up a new user name
	New Password	Input the new password
	Confirm Password	Input the new password again
Language Language English	Language	Select the language for the web, the device support Chinese, English, and Spanish and so on.
	Remote Web Login	If or not enable remote Web login
Web Access Remote Web Login Enable Web Port 80 Web Idle Timeout(0 - 60m) 5 Allowed Remote IP(IP1;IP2;...)	Web Port	Set the port value which is used to login from Internet port and PC port, default is 80.
	Web Idle timeout	Set the Web Idle timeout time. The webpage can be logged out after Web Idle Timeout without any operation.
	Allowed Remote IP(IP1,IP2,...)	Set the IP which can login the device remotely.
Telnet Access Remote Telnet Enable Telnet Port 23 Allowed Remote IP(IP1;IP2;...)	Remote Telnet	If or not enable remote telnet login
	Telnet Port	Set the port value which is used to telnet the device.

3. NTP settings

	Field Name	Description
	NTP Enable	If or not enable NTP
	Current Time	Display current time
	NTP Settings	Setting the Time Zone
	Primary NTP Server	Primary NTP server's IP address or domain name
	Secondary NTP Server	Options for NTP server's IP address or domain name
	NTP synchronization	NTP synchronization cycle, cycle time can be 1 to 1440 minutes in any one, the default setting is 60 minutes

4. Daylight Saving Time

	Set the summer time steps: Step 1. Enable Daylight Saving Time. Step 2. Set value of offset, like the upon picture Step 3: Set staring Month/Week/Day/Hour in Start Month/Start Day of Week Last in Month/Start Day of Week/Start Hour of Day, analogously set stopping Month/Week/Day/Hour in Stop Month/Stop Day of Week Last in Month/Stop Day of Week/Stop Hour of Day. Step 4.Press Saving button to save and press Reboot button to active changes.
---	--

5. System Log Setting

Syslog Setting Syslog Enable Enable Syslog Level INFO Remote Syslog Enable Enable Remote Syslog Server 192.168.10.101	Field Name	Description
	Syslog Enable	If or not enable syslog function
	Syslog Level	Select the system log, there is INFO and Debug two grades, the Debug INFO can provide more information.
	Remote Syslog Enable	If or not enable remote syslog function.
	Remote Syslog server	Add a remote server IP address.

6. Factory Defaults Setting

Factory Defaults Setting Factory Defaults Setting Factory Defaults Lock Disable	If enable this function ,the device will not be restore factory settings
--	--

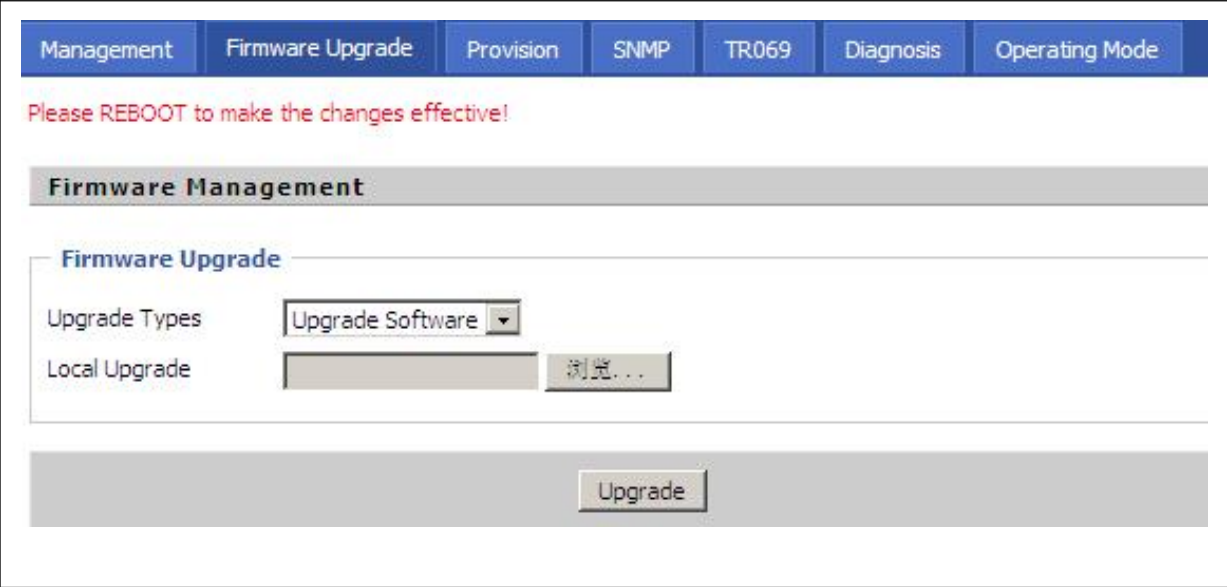

7. Packet Trace

Packet Trace Packet Trace Tracking Interface eth2 Packet Trace start stop save	Users can use the packet trace feature intercepts the packets that were sent. Click the Start button, start dhome gateway tracking and keep refreshing the page until the message trace shows to stop, click the Save button to save captured packets.
---	--

8. Factory Defaults

Factory Defaults Reset to Factory Defaults Factory Default	Click Factory Default to restore the residential gateway to factory settings.
---	---

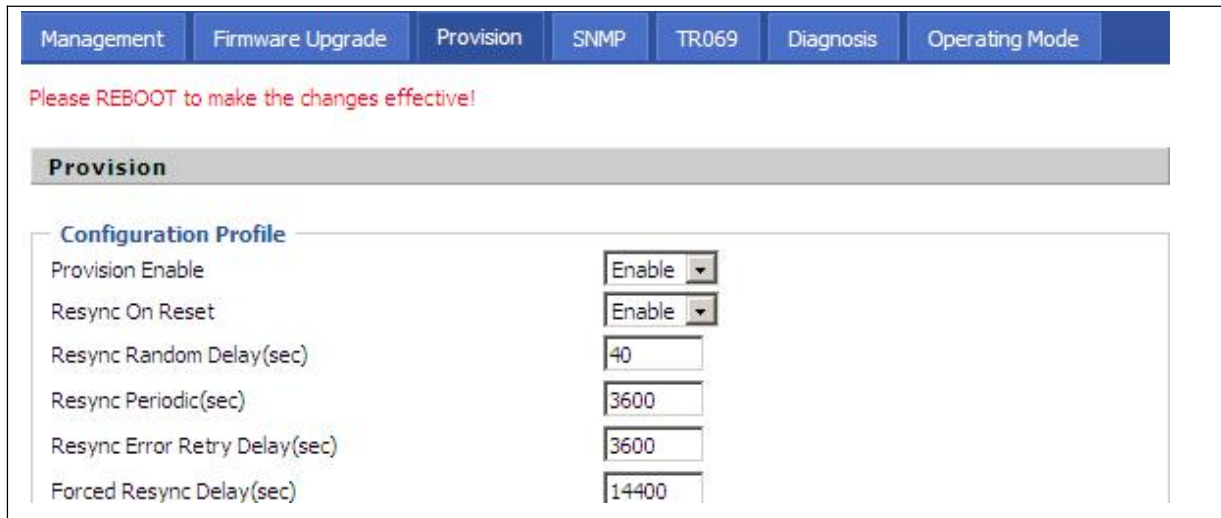
4.12.2 Firmware Upgrade

	1. Choose upgrade file type from Image File and Dial Rule 2. Press  to browser file. 3. Press  to start upgrading.
--	--

4.12.3 Provision

Provisioning allows FWR9202 auto-upgrading and auto-configuring, and Flyingvoice devices support TFTP, HTTP and HTTPS three ways.

1. Before testing or using TFTP, user should have tftp server and upgrading file and configuring file.
 2. Before testing or using HTTP, user should have http server and upgrading file and configuring file.
 3. Before testing or using HTTPS, user should have https server and upgrading file and configuring file and CA Certificate file(should same as https server's) and Client Certificate file and Private key file(HTTPS provision will be supported soon)
- User can uploading CA Certificate file and Client Certificate file and Private Key file in Security page.

Management Firmware Upgrade Provision SNMP TR069 Diagnosis Operating Mode	Field Name	Description
	Provision Enable	If or not enable provision.
	Resync on Reset	If or not enable resync after restart
	Resync Random Delay(sec)	Set the maximum delay for request the synchronization file, default is 40.
	Resync Periodic(sec)	If the last resync was failure, FWR9202 will retry resync after the “Resync Error Retry Delay ” time, default is 3600s.
	Resync Error Retry Delay(rec)	Set the periodic time for resync, default is 3600s.
	Forced Resync Delay(sec)	If it's time to resync, but FWR9202 is busy now, in this case, FWR9202 will wait for a period time, the longest is

Resync After Upgrade Enable Resync From SIP Disable Option 66 Enable Config File Name \$(MA) User Agent Profile Rule		“Forced Resync Delay”, default is 14400s, when the time over, FWR9202 will forced to resync.
	Resync After Upgrade	If or not enable firmware upgrade after resync, by default it is enabled.
	Resync From SIP	If or not enable resync from SIP.
	Option 66	It is used for In-house provision mode only. When use TFTP with option 66 to realize provisioning, user must input right configuration file name in IP542N's webpage. When disable Option 66 , this parameter has no effect.
	Config File Name	It is used for In-house provision mode only. When use TFTP with option 66 to realize provisioning, user must input right configuration file name in the webpage. When disable Option 66 , this parameter has no effect.
	Profile Rule	URL of profile provision file Note that the specified file path is relative to the TFTP server's virtual root directory.

Field Name	Description
Upgrade Enable	If or not enable firmware upgrade via provision.
Upgrade Error Retry Delay(sec)	If the last upgrade fails, FWR9202 will try upgrading again after “Upgrade Error Retry Delay” period, default is 3600s.
Upgrade Rule	URL of upgrade file

4.12.4 SNMP

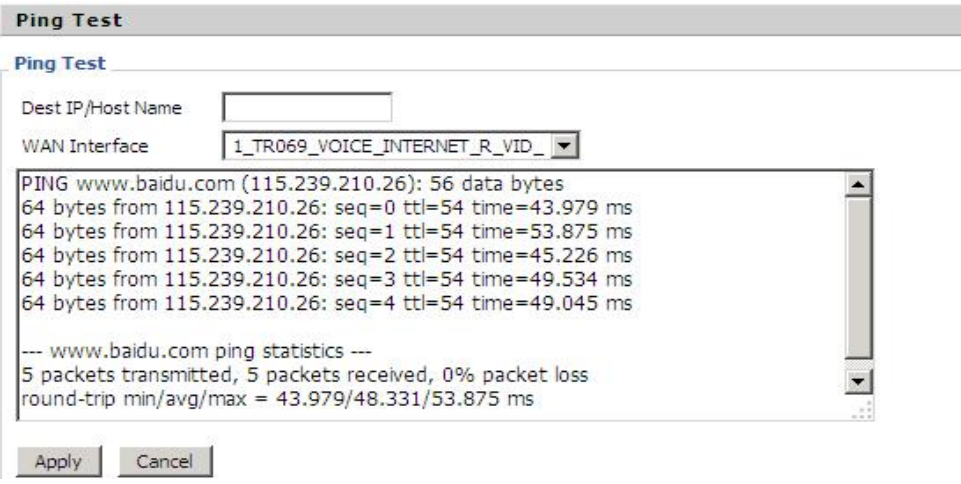
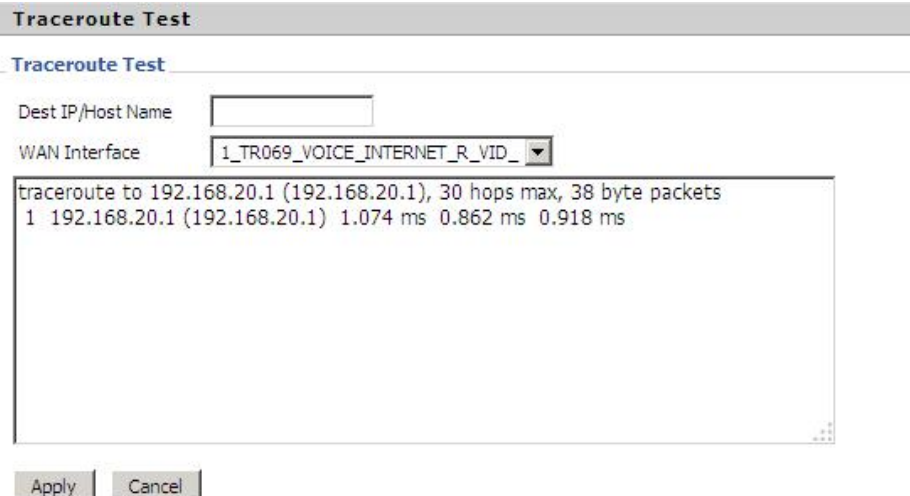
Field Name	Description
SNMP Service	If or not enable SNMP.
Trap Server Address	Enter the trap server address.
Read Community Name	String, as an express password between management progress and agent progress.
Write Community Name	String, as an express password between management progress and agent progress.
Trap Community	The community field in trap.
Trap period interval(sec)	The interval of sending trap.

4.12.5 TR069

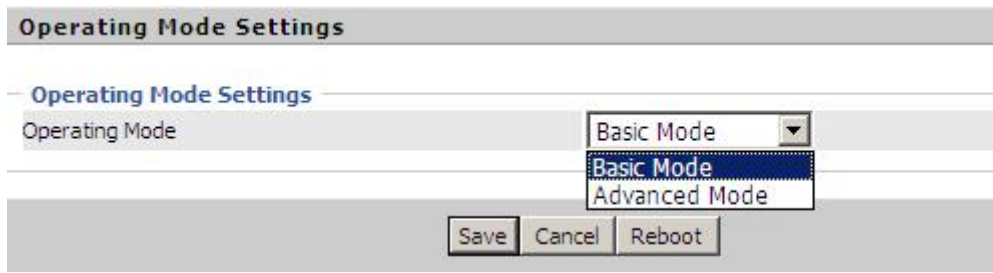
Field Name	Description
TR069 Enable	If or not enable TR069
CWMP	If or not enable CWMP
ACS URL	ACS URL address
User Name	ACS username
Password	ACS password
Periodic Inform Enable	If or not enable the function of periodic inform, default is enable
Periodic Inform Interval	Periodic notification interval, the unit is seconds, default is 43200s
User Name	The username used to connect the TR069 server to the DUT.
Password	The password used to connect the TR069 server to the DUT.

4.12.6 Diagnosis

In this page, user can do ping test and traceroute test to diagnose the device's connection status.

	1. Ping Test Enter the destination IP or host name, and then click Apply, device will perform ping test.
	2. Traceroute Test Enter the destination IP or host name, and then click Apply, device will perform traceroute test.

4.12.7 Operation Mode

	Choose the Operation Mode as Basic Mode or Advance Mode.
--	---

4.13 System Log

If you enable the system log in Status/syslog webpage, you can view the system log in this webpage.

Status

Network

Wireless

Wireless 5G

SIP

FXS1

FXS2

Se

Basic

LAN Host

Syslog

Please REBOOT to make the changes effective!

Refresh

Clear

Save

Manufacturer:VOIP

ProductClass:G802

SerialNumber:

IP:192.168.1.1

HWVer:V1.1

SWVer:V3.10

<Wed Aug 27 17:35:01 2014> ipphone[8119]: SIP0(Disable) Contact:192.168.10.12

<Wed Aug 27 17:35:01 2014> ipphone[8119]: SIP1(Disable) Contact:192.168.10.12

<Wed Aug 27 17:35:02 2014> ipphone[8117]: Start Register Client ...

<Wed Aug 27 17:38:09 2014> goahead: User:admin Login. IP:192.168.10.208

<Wed Aug 27 17:47:56 2014> provision[7563]: start to check config file

<Wed Aug 27 17:47:56 2014> provision[7563]: Update configuration fialed, retry

<Thu Jan 1 00:00:28 1970> udhcpd[2949]: udhcpd (v1.12.1) started

<Wed Aug 27 18:11:04 2014> goahead: webs v1.4 start...

<Wed Aug 27 18:11:05 2014> provision[7555]: start

<Wed Aug 27 18:11:08 2014> goahead: webs: rootWeb=/etc_ro/web.

<Wed Aug 27 18:11:08 2014> goahead: webs: Listening for HTTP requests at ac

<Wed Aug 27 18:11:19 2014> looptask[7969]: start

<Wed Aug 27 18:11:21 2014> ipphone[8105]: ****system booting****

<Wed Aug 27 18:11:21 2014> ipphone[8104]: MiscellaneousTask: start work par

<Wed Aug 27 18:11:21 2014> ipphone[8105]: SW:142(120106174008)

<Wed Aug 27 18:11:22 2014> ipphone[8125]: UISignalControl[30][9000][30][9000]

<Wed Aug 27 18:11:23 2014> ipphone[8032]: Wan If eth2.1 ip Change :0.0.0.0

<Wed Aug 27 18:11:23 2014> ipphone[8105]: Local SIP Addr:192.168.10.12

<Wed Aug 27 18:11:23 2014> ipphone[8105]: Start Init Sip Stack...

<Wed Aug 27 18:11:23 2014> ipphone[8105]: SIP all register client init

<Wed Aug 27 18:11:23 2014> ipphone[8105]: SIP0(Disable) Contact:192.168.10.12

<Wed Aug 27 18:11:23 2014> ipphone[8105]: SIP1(Disable) Contact:192.168.10.12

4.14 Logout

Firmware Version V3.10


Current Time Fri Aug 29 09:05:53 GMT 2014

Admin Mode

Logout

Press the logout button to logout, and then the login window will appear.

4.15 Reboot

Press the  button to reboot FWR9202.

5 Trouble shooting of the guide

5.1 Setting your PC gets IP automatically

Following are the process of setting your PC gets IP automatically

Step 1. Click the “begin”

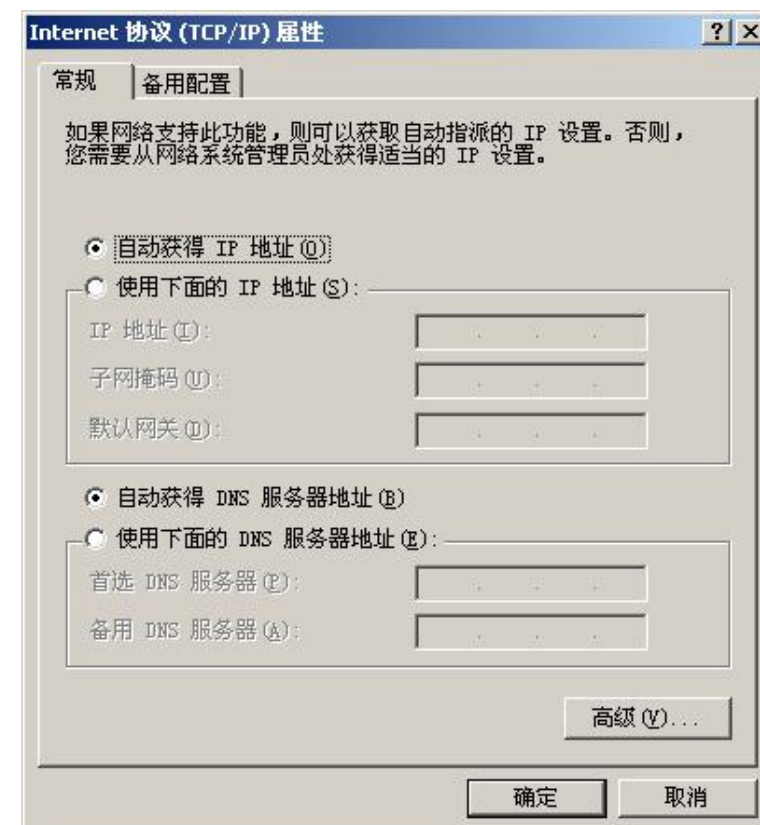
Step 2. Select “control panel”, then double click “network connections” in the “control panel”

Step 3. Right clicks the “network connection” that your PC uses, select “attribute” and you can see the interface as picture 1:

Step 4. Select “Internet Protocol (TCP/IP)”, click “attribute” button, and you can see the interface as following Picture 2 and you should click the “Get IP address automatically”.



Picture 1



Picture 2

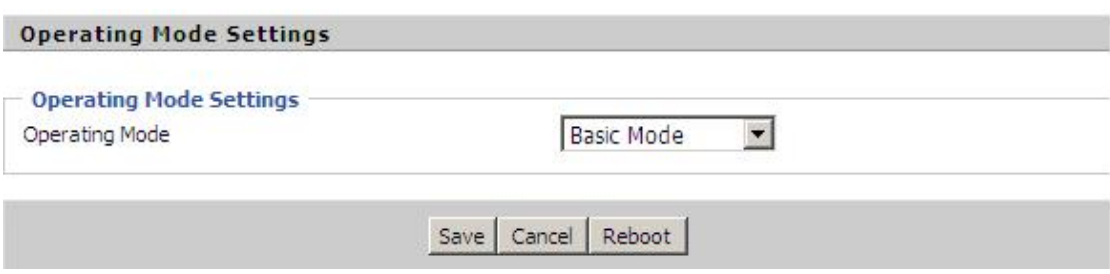
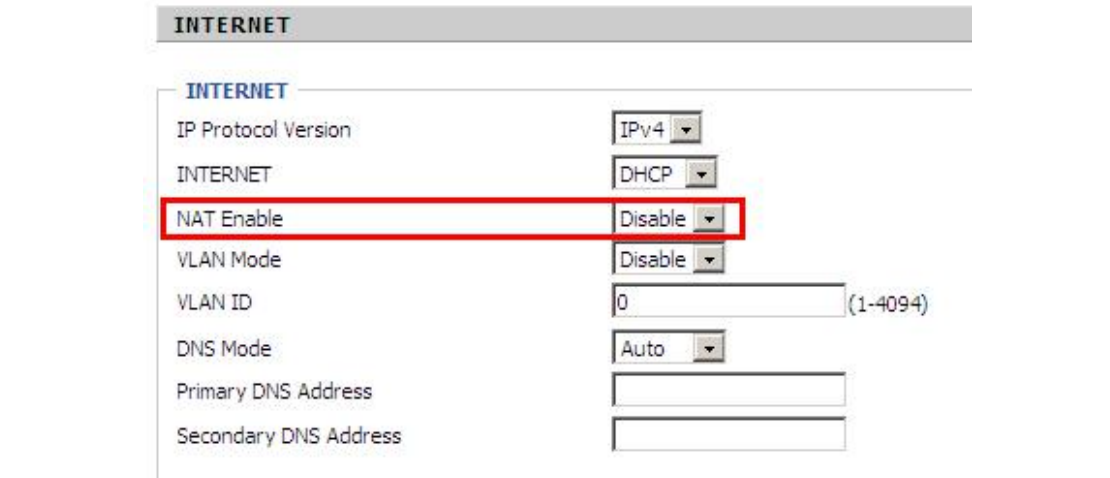
5.2 Can not connect to the configuration Website

Solution:
 Check if the Ethernet cable is properly connected, then
 Check if the URL is right wrote, the format of URL is: http:// the IP address: 8080, 8080 must be added, then
 Check if the version of IE is IE8, or use other browser such as Firefox or Mozilla, then
 Contact your administrator, supplier, or ITSP for more information or assistance.

5.3 Forget the Password

If user changed the password and then forgot, you can not access to the configuration website.
 Solution:
 To factory default: press reset button 10s.

5.4 Fast Bridge Setting

	Step 1: Login WEB of Device.Turn to Page Administration->Operating Mode. Set Operating mode to Basic Mode. Save.
	Step 2: Open Network->wan, Change Nat Enable to Disable. Save and Reboot. Now Device works in Bridge mode.

TR069_VOICE_INTERNET Vlan Status	
Connection Type	DHCP
MAC Address	00:21:F2:14:08:13
IP Address	192.168.10.225
Subnet Mask	255.255.255.0
Default Gateway	192.168.10.1
Primary DNS	192.168.10.1
Secondary DNS	
Other Vlan Status	
Connection Type	Bridge
MAC Address	
IP Address	
Subnet Mask	
Default Gateway	
Primary DNS	
Secondary DNS	
VPN Status	
VPN Type	Disable
Initial Service IP	
Virtual IP Address	
PC Port Status	
IP Address	192.168.0.1
Subnet Mask	255.255.255.0
Port Status	Link Down

Step 3: Please Login from WAN port. Under is example of Page Status->Basic.

Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by Flyingvoice Network Technology Co., Ltd may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

RF exposure statement:

The transmitter must not be colocated or operated in conjunction with any other antenna or transmitter. This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.