- 5. Select the axis (X or Y) along which to move the reticle:
 - a. Short press the Up
 ▲ or Down ▼
 Button to move
 between X and Y.
 - b. Short press the Menu M Button to select the desired axis. The selected axis will change from white to blue.
- Adjust the X/Y position of the reticle until the reticle matches the point of impact.
 - X (horizontal) is the windage and Y (vertical) is the elevation.
 - b. Upon moving the reticle, a red curse appears onscreen, representing the original position of the reticle.





c. Use the Up 🔺

Button to move in the positive direction: X= Right and Y= Up.

- d. Use the **Down ▼ Button** to move in the negative direction:
 X= Left and Y= Down.
- e. Short press the Up ▲ or Down ▼ Button to move the reticle in the corresponding direction by 1 pixel; long press to move 10 pixels.
- f. When adjusting your zero at a distance of 50 yards, a short press will change the impact point by 0.22", and a long press moves 2.16" as shown in the X and Y coordinate displays. At 100 yards that same short press moves 0.43" and a long press moves 4.32". At 200 yards a short press moves 0.86" and a long press moves 8.64".
- g. The distance of your X/Y adjustments will update automatically if you change your zero distance, for example from 100 to 200 yards.
- 7. Short press the Menu M Button to save the position for the selected axis and deselect it. When deselected, the axis will change from blue to white.

- Repeat steps 5–7 to adjust the reticle position along the second axis if needed.
- 9. Short press the **Power (b) Button** to exit the interface without saving the reticle position; **OR**
- 10. Long press the **Menu M Button** to save the reticle position for both axes and return to the home screen.
- 11. "Data saving" will appear at the bottom of the screen and the system will exit to the homepage.
- 12. Take a confirmation shot—the point of impact should now match the point of aim. If not, adjust the X/Y position of the reticle again.

ZEROING MENU > ZERO DISTANCE SUBMENU > CUSTOMIZE ZERO DISTANCE

Edit a selected zero distance

- In the submenu for the selected zero distance, short press the Up ▲ or Down ▼ Button to move to the zero distance.
- 2. Short press the Menu M Button to edit the selected zero distance. A blue arrow will appear above and below the far-left digit to mark the cursor location.
- Short press the Up ▲ or Down ▼ Button to increase or decrease the value of the selected digit from 0–9.
- Short press the Menu M Button to switch between the three digits. The two blue arrows move to indicate the selected digit.





- 5. Short press the Power
 O Button to return to the previous menu without saving changes; OR
- 6. Long press the **Menu M Button** to save the edited zero distance and return to the previous menu.

ZEROING MENU > ZERO DISTANCE SUBMENU > DELETE DISTANCE

Delete the selected zero distance

- In the submenu for the selected zero distance, short press the Up ▲ or Down ▼ Button to move to the delete fm icon.
- Short press the Menu
 Button to delete the selected distance.
- A popup window shows the message "Delete this distance?" and two options, No and Yes. No is selected by default.
- Short press the Menu
 Button to select No to return to the previous menu without deleting the zero distance; OR
- Short press the Up ▲ or Down ▼ Button to select Yes and short press the Menu M Button to delete the zero distance and return to the previous menu.

Wi-Fi 🔶

Turn Wi-Fi on / off

Turn on Wi-Fi to manipulate the RICO Mk2 via the InfiRay Outdoor App.

- Long press the Menu
 Button to enter the main menu.
- Short press the Up ▲ or Down ▼
 Button to select the Wi-Fi 奈 menu item.








- 3. Short press the Menu M Button to toggle Wi-Fi on / off. The Wi-Fi status, on 중 or off 𝔅, appears in the status bar.
- 4. Long press the $\textbf{Menu} \ \textbf{M} \ \textbf{Button}$ to return to the home screen.

Picture in Picture

Turn the picture-inpicture window on / off

- Long press the Menu
 Button to enter the main menu.
- Short press the Up ▲ or Down ▼ Button to select the picture-inpicture P menu item.
- Short press the Menu
 Button to toggle the PIP window on / off. When turned on, the

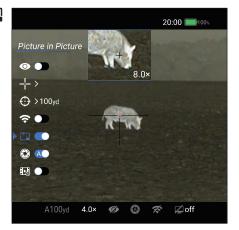


- PIP window appears at the top of the screen and displays a 2× zoomed image.
- 4. Long press the Menu \fbox Button to return to the home screen.

Calibration Mode 🔘

Set the non-uniformity correction mode to automatic or manual

- Long press the Menu
 M Button to enter the main menu.
- Short press the Up ▲ or Down ▼ Button to select the calibration mode ♥ menu item.
- Short press the Menu
 M Button to toggle between the two options: A (automatic)

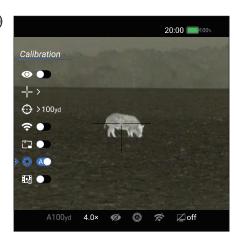

- options: A (automatic) and M (manual).
- 4. The selected NUC mode, O or O , appears in the status bar.
- 5. Long press the Menu M Button to return to the home screen.

Recoil Activated Video 🖪

Turn recoil activated video on / off

When recoil activated video is turned on, the rifle scope will record 3 seconds before the shot and 2 minutes and 57 seconds after the shot.

- Long press the Menu
 Button to enter the main menu.
- Short press the Up ▲ or Down ▼ Button to select the recoil activated video ₽ menu item.
- 3. Short press the Menu M Button to toggle recoil activated video on / off. The recoil activated video k icon appears in the top status bar when RAV is turned on. The video recording timer, in HH:MM:SS (hour, minute, second) format, will appear next to the RAV icon when video is recording.

01:00:26

A100yd 4.0× 💋 🙆 🛠 💋 off

A100yd 4.0× 💋 🙆 🛠 💋 off

Recoil Activated Video

 \odot

↔ >100yd

?.

--->

20:00 🚮 100%

20:00 100%

4. Long press the **Menu M Button** to confirm the selection and return to the home screen.

NOTES:

- When multiple shots are taken within the same 30-second period, only one video will be taken.
- When recoil activated video recording is turned on, standard video recording is unavailable.

Microphone

43

-<u>)</u>->

₽⁺+ >

ලි >

Microphone 녳

Turn the microphone on / off

- Long press the Menu
 Button to enter the main menu.
- Short press the Up ▲ or Down ▼ Button to select the microphone ↓ menu item.
- Short press the Menu
 Button to turn the microphone on / off.
- 4. When on, the microphone () icon appears in the lower-right corner of the screen.
- 5. Long press the $\textbf{Menu} \ensuremath{\overline{\textbf{M}}}$ Button to return to the home screen.

Motion Sensor 🔶

Turn the motion sensor on / off

- Long press the Menu
 Button to enter the main menu.
- Short press the Up ▲ or Down ▼ Button to select the motion sensor ♀ menu item.
- Short press the Menu
 Button to toggle the motion sensor on / off. When on, the



tilt angle appears on the left side of the screen and the pitch angle appears on the right side of the screen.

4. Long press the Menu M Button to return to the home screen.

NOTE: The tilt angle is not shown in the figure above because it is hidden by the menu.

Standby 🖾

Turn on automatic standby mode

The RICO Mk2 may be set to automatically enter standby mode.

- Long press the Menu
 Button to enter the main menu.
- Short press the Up ▲ or Down ▼ Button to select the standby ⊈ menu item.



- 3. Short press the Menu M Button to toggle auto standby on / off When turned on, the RICO Mk2 will automatically enter standby after about 5 seconds.
- 4. Long press the **Menu M Button** to confirm the selection and return to the home screen.

NOTES:

- When auto standby mode is turned on:
 - The RICO Mk2 will enter standby automatically when it is tilted up or down at an angle of more than 70° or left or right at an angle of more than 30°.



• The RICO Mk2 will not enter standby mode while it is in a level firing position.

Brightness

J D

4<u>5</u>

+++ >

63>

Brightness

A100vd 4.0×

Ø 🙆 🛪

20:00 100%

📈 off

20:00 🔲 100

100-

20:00 100%

⊠off

A100yd 11.4× 💋 🙆 ጽ 💋 off

A100yd 4.0× 💋 🐼 🛠

- Press any button to exit auto standby.
- When auto standby is turned off, the rifle scope will operate until the batteries run out.

Brightness 🔆

Adjust the screen brightness

- Long press the Menu
 Button to enter the main menu.
- Rotate the zoom lever (7) right or left to adjust the screen brightness level, from 0–100%.
- Long press the Menu
 Button to confirm the selection and return to the home screen.

Pixel Defect Correction +

Correct defective pixels

- Defective pixels are pixels that do not change correctly compared to the other image pixels—they are either brighter or darker than surrounding pixels. The RICO Mk2 has a tool that corrects defective pixels on the sensor using its internal software.
- Long press the Menu
 M Button to enter the main menu.
- Short press the Up ▲ or Down ▼ Button to select the pixel correction ++, menu item.

Pixel Correction

0

4.

(ĝ) >

- 4. The interface has the following features:
 - Pixel Cursor +: Appears in the center of the screen in place of the reticle. Move the cursor to the position of the defective pixel.



2 PIP Window:

Appears in the lower-left corner.

- **3** Navigation Cursor > Icon: Shows the cursor position in the interface.
- 4 X-Axis \leftrightarrow lcon: Select to move the pixel cursor horizontally.
- 5 Y-Axis 1 Icon: Select to move the pixel cursor vertically.
- 6 Add ⊕ Icon: Select to add a defective pixel to the "to be corrected" list.
- 7 Automatic Pixel Correction 🗐 Icon: Select to automatically correct all defective pixels.

To auto-correct defective pixels:

- Short press the Up ▲ or Down ▼ Button to move to the automatic pixel correction +, icon.
- Short press the Menu
 Button to correct all defective pixels automatically.


NOTE: If the algorithm fails to locate all defective pixels, it may be necessary to manually correct additional pixels.



To manually select and correct defective pixels:

- 1. Select the axis (X or Y) along which to move the cursor:
 - a. Short press the Up ▲ or Down ▼ Button to move between X and Y. The cursor position is indicated by a blue arrow ≥ icon.
 - b. Short press the Menu M Button to select X or Y. The selected axis will change from white to blue.

- 2. Move the cursor along the selected axis to the location of the defective pixel:
 - a. Use the Up ▲
 Button to move in the positive direction: X= Right and Y= Up.
 - b. Use the Down ▼
 Button to move in the negative direction: X= Left and Y= Down.

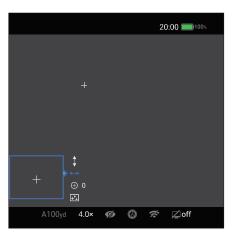

c. Short press the

Up ▲ or Down ▼ Button to move the cursor in the corresponding direction by 1 pixel; long press to move 10 pixels.

- 3. Short press the Menu M Button to save the position for the selected axis and deselect it. When deselected, the axis will change from blue to white.
- 4. Move to and select the second axis and adjust the cursor position, as needed.
- 5. Add the pixel to the "to be corrected" list:
 - a. With the cursor in position, short press the Menu
 M Button to deselect the axis of movement.
 - b. Press the Up ▲ or
 Down ▼ Button
 to move to the add
 ⊕ icon.
- 20.00 ■100↓ + + A100yd 4.0× Ø © 🌫 ⊠off
- c. Short press the Menu M Button to add the pixel. The

number of pixels to the right of the add icon will increase to indicate that one pixel has been added to the list.

- d. If the defective pixel has been added in error, short press the Menu M Button a second time from the same X/Y coordinates (do not move the cursor) to remove the pixel from the "to be corrected" list. The number of pixels shown to the right of the add icon will decrease to indicate the pixel has been removed.
- 6. Repeat steps 1–5 to add additional defective pixels as needed.

- 7. Short press the Power
 ③ Button to exit the interface without saving; OR
- When all defective pixels have been added to the list, long press the Menu M Button to confirm changes.
- 9. "Data saving.." will appear at the bottom of the screen and the system will exit to the home screen.



NOTES: The PIP window and interface controls move to the upper-left corner when the cursor moves into the lower-left corner.

Settings Menu

Adjust the general settings

- 1. Long press the Menu M Button to enter the main menu.
- 2. Short press the Up ▲ or Down ▼ Button to select the settings ② menu item.
- 3. Short press the Menu M Button to enter the settings submenu.

SETTINGS MENU > DATE

Set the date

- In the settings submenu, short press the Up ▲ or Down
 ■ Button to select the date im menu item.
- Short press the Menu
 Button to edit the date. A blue arrow will appear above and below the year digit. The date is displayed in YYYY.MM.DD format.

20:00 100%
The second se
n nu
ø Ø 🛠 ⊠off

3. Short press the Up ▲ or Down ▼ Button to

select the correct value for each digit (year, month, and day).

- 4. Short press the **Menu M Button** to switch between digits. The two arrows move to indicate the selected digit.
- 5. Long press the **Menu M Button** to save the date and return to the home screen.

SETTINGS MENU > TIME (

Set the time

- In the settings submenu, short press the Up ▲ or Down
 ■ Button to select the time () menu item.
- Short press the Menu

 M Button to edit the time. A blue arrow will appear above and below the hour digit. The time is displayed in HH.MM, in 24-hour format.



20:00 100

- Short press the Up ▲ or Down ▼ Button to select the correct value for each digit (hour and minute).
- 4. Short press the Menu M Button to switch between digits. The two arrows move to indicate the selected digit.
- 5. Long press the **Menu M Button** to save the time and return to the home screen.

U 📾

¢

+⁺+

۲

 ${\mathbb O}$

6. The time appears in the status bar.

SETTINGS MENU > UNIT

Set the units of measurement

- In the settings submenu, short press the Up ▲ or Down
 Button to select the unit menu item.
- Short press the Menu
 Button to enter the submenu.
- Short press the Up ▲ or Down ▼ Button to move through unit options, meters and yards. The selected

units, m (meters) or y (yards), display along with the selected zero profile and distance in the bottom status bar.

4.0×

💋 🙆 😤 🖾 off

4. Long press the **Menu M Button** to confirm the selection and return to the home screen.

SETTINGS MENU > LANGUAGES

Select the languages

- In the settings submenu, short press the Up or Down
 Button to select the languages menu item.
- Short press the Menu
 Button to enter the submenu.
- Short press the Up ▲ or Down ▼ Button to move through the language options.

	Nederlands Polski Čeština	R		
¢ _	and the second se			

4. Long press the **Menu M** Button to confirm the selection and return to the home screen.

SETTINGS MENU > FACTORY RESET \circlearrowright

Restore factory default settings

- In the settings submenu, short press the Up or Down
 Button to select the factory reset menu item.
- Short press the Menu
 Button to enter the factory reset submenu.
- 3. Two options, Yes and No, appear; Yes will restore factory settings and No will cancel the operation. No is selected by default.



- 4. Short press the Menu M Button to select Yes to confirm the factory reset. Factory settings will be restored and the RICO Mk2 will reboot automatically; OR
- 5. Short press the Up ▲ or Down ▼ Button to select No and short press the Menu M Button to confirm cancellation of the factory reset and return to the submenu.

FACTORY RESET NOTES:

- The screen will go dark and the factory restart will begin after a pause of about 20 seconds.
- A factory reset cannot be undone.
- The settings listed below will be reset to the factory defaults:
 - Color Palette: White Hot
 Reticle Type: 1
 - Image Sharpness: 5 Reticle Color: Black Red
 - Microphone: Off
 - Standby: Off
 - Image Contrast: 5
 Magnification: 3×

Wi-Fi: Off

.

Screen Brightness: 50%

Language: English

Ultra-Clear mode: Off

Image Brightness: 5

- Unit: Meters
- Calibration: Automatic
- Wi-Fi Password: 12345678
 Wi-Fi SSID:
- Motion Sensor: Off Zeroing Profile: A
- RH502_YYYYY_XXXXXXX


SETTINGS MENU > INFO (i)

Show device information

- In the settings submenu, short press the Up ▲ or Down
 ■ Button to select the info (i) menu item.
- Short press the Menu
 Button to enter the submenu.
- 3. The info submenu will display the following information about the RICO Mk2: the model number, the GUI, FPGA, boot, kernel, root, and

hardware versions, the part and serial numbers, and the FCC ID.

4. Long press the Menu M Button to save and return to the home screen.

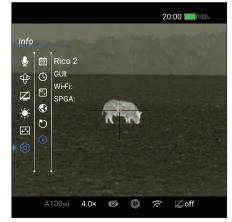

24. BASIC INSPECTION

It is recommended to carry out a technical inspection before each use. Please check the following:

- The rifle scope appearance: there should be no cracks in the body or visible damage.
- The condition of the objective lens and eyepiece: there should be no cracks, greasy spots, dirt, or other deposits on the lens.
- The internal rechargeable battery pack should be fully charged.
- The control buttons should be in working order.

25. BASIC MAINTENANCE

Always replace the objective lens cap (1) after use to avoid damaging or scratching the lens. Never touch the lens directly; oil from your skin can damage the lens coating and surface.

Basic maintenance should be carried out at least twice a year and includes the following steps:

- Wipe the surface of the external metal and plastic components with a clean, dry cotton cloth. Do not use chemical, corrosive, or abrasive cleaners. Canned air may also be used to clean the external components.
- Clean the electric contacts and battery slots on the rifle scope using a non-greasy organic solvent.
- Check the lens and eyepiece. If necessary, remove any dirt or sand from the optics; a non-contact cleaning method is preferred.
- Cleaning the exterior of the lens should only be done with the included microfiber lens cloth or a similar product. Only clean the lens when it is visibly soiled. Frequent wiping or cleaning can degrade the anti-reflective lens coating.

26.WARRANTY

At iRayUSA we're first and foremost hunters and users of our products and we understand that failure isn't an option. We also understand that having to wait extended periods for repair isn't something that a customer should have to put up with when something does go wrong. During your published warranty period, iRayUSA will repair or replace, at its discretion, any optic that becomes defective during normal use. Additionally, if we cannot fix your optic in less than one week, we will offer to replace it with a replacement product in like or better condition. If you would rather wait for your specific optic to be repaired, we can handle that too.

We know you've never seen this from a thermal manufacturer and neither have we; that's why we started iRayUSA.

Our warranty follows the product and is not tied to the original owner. The warranty period is tied to the date of sale to the dealer. This warranty only covers normal use and does not cover cosmetic damage, normal wear, intentional damage, theft, loss, any act of God, or a condition caused by use other than intended. Any product that is modified, opened, or tampered with will void any warranty coverage. Any serial number damage or alteration on the product will be considered a modification. Be sure to register your RICO Mk2 rifle scope at irayusa.com/register.

To return a product for repair:

- 1. Go to irayusa.com/warranty and click the Request an RMA button to request an RMA number. Returns will not be accepted without an RMA.
- 2. The customer is responsible for shipping the product to iRayUSA, per the instructions included with the RMA. iRayUSA will return the product at no cost.

WARRANTY NOTES:

- The one-week timeline starts from the time of receipt of the product at iRayUSA.
- iRayUSA is not liable for any damages or loss incurred when shipping to iRayUSA.
- This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Please give us a call at **800-769-7125**, visit irayusa.com/warranty, or email info@irayusa.com with any questions.

27. FCC STATEMENT

FCC ID: 2AY3N-4C-00

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by IRayUSA could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Frequency range of WLAN radio module: 2412-2462 MHz This device complies with RF exposure requirements for general population exposure conditions.

28.GENERAL TROUBLESHOOTING

The troubleshooting table on the next page lists issues that may occur when operating the RICO Mk2. Carry out the recommended troubleshooting steps in the order shown in the table. Please contact iRayUSA at 800-769-7125 or irayusa.com/support or an authorized vendor for assistance before attempting to perform any modifications or repairs beyond the scope of the troubleshooting procedures in this manual. Unauthorized repairs or modifications will void your warranty.

ISSUE	POSSIBLE CAUSES
The RICO Mk2 will not turn on.	The IBP-5 battery pack is very low or has completely discharged.
	External power supply has completely discharged.
The RICO Mk2 can not connect to a computer or external power supply.	Computer is turned off.
	USB-C or magnetic charging cable is damaged.
	Wi-Fi is not turned on.
The RICO Mk2 can not connect to the mobile device (smartphone or tablet).	Wrong Wi-Fi password entered.
	Too many Wi-Fi signals nearby, which may cause interference.
Wi-Fi signal is lost or interrupted.	The device is out of range of a strong Wi-Fi signal, or there are obstacles (such as concrete walls) between the device and the signal.
The image is blurry, the background is uneven, or vertical lines or artifacts are present.	Non-uniformity correction is required.
The image is too dark.	Screen brightness level is too low.
	The lens is not focused.
The GUI is clear, but the image is blurry.	There is dust or ice on the interior or exterior optical surfaces of the lens.
	There is condensation on the interior or exterior optical surfaces of the lens.
The aiming reticle shifts after firing rounds.	The RICO Mk2 is not mounted securely or the mount is not secured on the RICO Mk2.
Observed target disappears.	Observing the target through glass.
The RICO Mk2 will not focus.	Image settings are not optimal for the current environmental conditions or the object being observed.
Image quality is low or the detection range is reduced.	Environmental conditions, such as snow, rain, humidity, and fog.
When the RICO Mk2 is used in low-temperature conditions, the image quality of the surroundings is worse than in warm-temperature conditions.	Environmental conditions.

TROUBLESHOOTING STEPS Charge the battery pack. Check the external power supply and charge it if necessary. Power on the computer. Replace the cable. Turn on the Wi-Fi in the main menu. See Main Menu > Wi-Fi on page 36. On the mobile device, go to Settings > Wi-Fi and enter the correct password. The default password is 12345678. See Main Menu > Wi-Fi on page 36. Move the RICO Mk2 and mobile device to an area with no or fewer Wi-Fi signals. • Try again when the Wi-Fi signal is stable. Move the RICO Mk2 closer to the Wi-Fi signal. Perform a non-uniformity correction. See Non-uniformity Correction on page 21 and See Using the Quick Menu on page 18. Adjust the screen brightness in the menu. See Main Menu > Brightness on page 40. • Adjust the focus on the target by rotating the objective focus knob (2). • Adjust the image sharpness in the quick menu. See Using the Quick Menu on page 18. Wipe the external optical surface with the included microfiber lens cloth. · Wipe the external optical surface with the included microfiber lens cloth. • Allow the RICO Mk2 to dry by leaving it in a warm, dry environment for at least 4 hours. Check that the RICO Mk2 has been securely mounted. • Make sure you are using the same brand, type, and weight of the bullets as when the RICO Mk2 and weapon were initially zeroed. • If the RICO Mk2 was zeroed in different environmental conditions, a slight shift of the zero is possible. Remove any glass windows from the field of view. • Check the external surface of the objective lens and eyepiece and, where necessary, wipe away any dust, condensation, frost, etc. • In cold weather, you can use special anti-fogging coatings, such as those made for corrective glasses. • Adjust the focus on the target by rotating the objective focus knob (2). • Adjust the image sharpness in the quick menu. See Using the Quick Menu on page 18. • Adjust the image and device settings. See Quick Start Guide on page 8. • Turn on Ultra-Clear mode. See Main Menu > Ultra-Clear on page 28. Turn on Ultra-Clear mode. See Main Menu > Ultra-Clear on page 28. In warm-temperature conditions, objects being observed (surroundings and background) heat up differently because of thermal conductivity, thereby generating a high-temperature contrast. Accordingly, image quality produced by the rifle scope will be higher. In low-temperature conditions, the background will cool down to roughly the same temperature, and thus the temperature contrast is substantially reduced and image detail can go down as there is less contrast in the scene. This is a normal function of a thermal imager and is no indicator of actual detector performance.

29. NOTES



2601 State Hwy 121, Building 3, Suite 306 Lewisville, TX 75056 800-769-7125 682-499-0047 info@irayusa.com