



MEGA WHEELS®

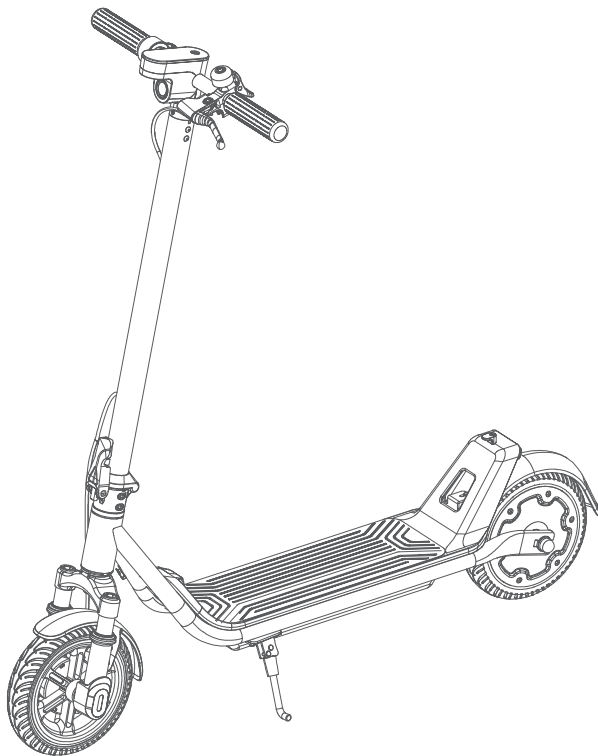


ELECTRIC SCOOTER A1C

USER MANUAL

Package Contents

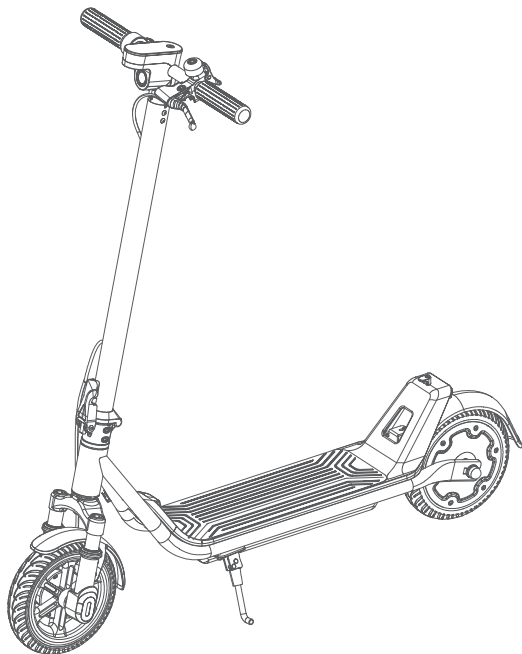

User Manual



Power Adapter




T-shape Allen Key



Screw

Function

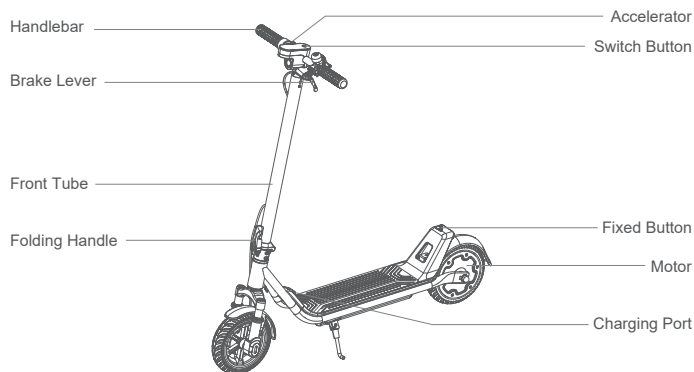

Mode display:

- Low-gear Mode (L): Speed About 3 MPH. Tail light flashes red when turn on.
- Mid-gear Mode (M): Speed About 9 MPH.
- High-gear Mode (H): Speed About 15 MPH.

Powerful, recommended to master the riding skills before considering the use.

Speedometer:

When the electric scooter is working, the speedometer shows the current travelling speed; when the electric scooter is faulty, the speedometer shows the fault error code; when the electric scooter is charging, the speedometer shows the current battery power.


Battery power display:

The remaining battery power is showed by 5 horizontal bars. Each bar represents approximately 20% of the full battery capacity of the scooter.

• **Function mode:** Walking, Bluetooth, Lock, Error prompt Light.

Power button:

1. Short press the button to switch on the electric scooter when it is off, long press the button for more than 3 seconds to switch off the electric scooter when it is on.
2. When the scooter is switched on, short press the button once to turn on/off the front light and tail light;
3. Short press the button twice in a row to switch between different riding modes.
4. Press the button three times in a row to switch between metric and imperial units.



Parameters


Product	Name	Electric Scooter
	Model	A1C
Dimensions	Vehicle: L × W × H (in)	43.03×17.32×45.08
	After Folding: L × W × H (in)	43.03×17.32×20.51
Net Weight	Vehicle Net Weight (lb)	32.85
Rider	Max. Load (lb)	220
	Age (years)	12+
	Height (in)	4.72~7.87
Assembled Electric Scooter	Max. Speed (mph)	15
	Max Range (mile)	Approx. 13
	Max. Climbing Angle (%)	Approx. 10
	Suitable Surfaces	Cement or asphalt road, with benches of less than 1 cm or crevices narrower than 3 cm
	Operating Temperature (°C)	-10 to 45
	Storage Temperature (°C)	-20 to 50
	Charging temperature range(°C)	0 to 40
	IP Rating	IPX5
	Charging Time (h)	5.5
Battery Pack	Model	N1149-008
	Nominal Voltage (VDC)	21.9
	Max. Charge Voltage (VDC)	25.2
	Rated Energy (Wh)	164.25
	Intelligent Battery Management System	Over-heating, short circuit, over-current, over-discharge, and over-charge protection
	Normal Charging Temperature Range (°C)	0 to 40
	Rated Capacity (Ah)	7.5
Wheel Motor	Rated Power (W)	250
Battery Charger	Model	GC38-242150-1A
	Output Power (W)	36.3
	Input Voltage (VAC)	100-240
	Max. Output Voltage (VDC)	24.2
	Rated Output (VDC; A)	24.2; 1.5
Tire	Front & Back Tires	Solid, Ø 8.5 × 2 straight valve, with the materials of natural rubber, synthetic rubber, carbon black, and nylon
Suspension	Front	25-mm Front Twin-tube Shock Absorber

Typical range:

Measured in standard mode at 9 mph with a full charge, 165 lbs load, ambient temperature 25°C, flat road surface and no wind. The actual range may vary due to the factors such as load, temperature, wind speed, road surface and the temperature, wind speed, road surface and operating habits.


Assembly

1. Pull the folding handle upwards until there is a click sound, and pull the folding handle to confirm whether it is locked.
2. Manually connect the fixing seat and the wire in the front tube, and check whether it is turned on normally. The arrows on the tube need to be aligned before inserting.
3. Follow the number order as illustrated to pre-tighten the six screws with the included Allen key. Make sure the handlebar is correctly installed and then tighten the screws thoroughly.

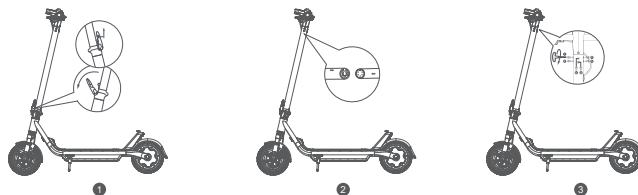

Charge Your Scooter

1. The indicator light of the charger turns green when the charger is connected to the power supply.
2. Inserting the charging plug, and the indicator light will turn from green to red.
3. After charging, the indicator light turns from red to green.

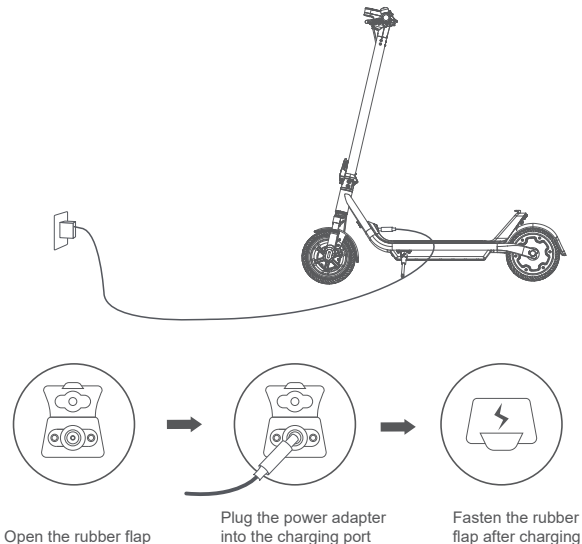


ⓘ Attention:

1. Only use the original power adapter when charging.
2. Keep away from children and animals when charging, and keep away from flammable materials.
3. Do not charge or use the battery if it emits a peculiar smell, overheats or leaks.
4. Do not open the battery pack or insert anything into the charging port as the battery contains dangerous substances.
5. When not in use for more than 30 days, fully charge, store in a cool, dry place, and fully charge every 3 months.

How to ride




1. Press the switch button to turn on the scooter and check the battery level. If the battery level is too low, please charge the scooter.

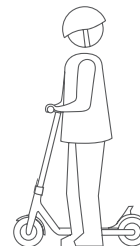


2. There will be a default power mode after the scooter is turned on. If you want to switch the power mode, you can quickly press the button twice to switch between L, M, and H. L, M, and H stand for low, medium, and high speeds, respectively. Press 3 times quickly to switch between metric and imperial units.



3. Stand with your foot on the pedal and thrust against the ground with your foot. When the speed of scooter is ≥ 3 mph, press the accelerator to start the motor, and keep speeding.

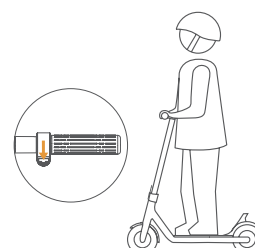

4. During the sliding, keep your balance, place the other foot on the pedal and lightly press the accelerator to move forward.

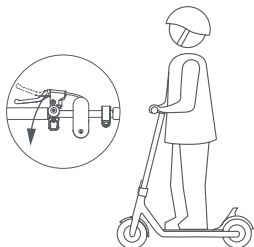

5. When steering or decelerating, release the accelerator and use the brake lever to brake.



6. When the electric scooter is stationary, press and hold the button for 3 seconds to turn off the electric scooter.

Light on/off function


This electric scooter features an automatic light control function. When the scooter transitions from a bright environment to a dark one, the front and rear lights automatically turn on. Conversely, when the scooter moves from a dark environment to a bright one, the front and rear lights automatically turn off. However, these functions only activate when the photosensitive sensor is activated. The photosensitive sensor operates under two conditions:

1. After shutting down and rebooting the scooter;
2. After locking and unlocking the scooter using the APP.


For instance, if the scooter enters a dark environment from a bright one and the lights turn on automatically, pressing the power button to turn off the lights will deactivate the photosensitive sensor. To reactivate the photosensitive sensor, you need to shut down and reboot the scooter or lock and unlock it using the APP.

Folding

Flip the fold switch up and turn on the fold wrench. Fold and lower the front tube, place the folding hook of the rear into the hook holder on the bell.

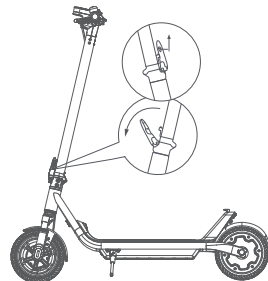


1

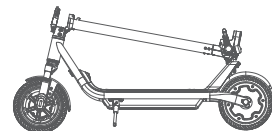

2

Unfolding

Press the red button in the folding hook to remove the folding hook from the hook fixing buckle, straighten the front tube, close the folding handle until there is a "click" sound; flip the folding handle and make sure it is locked.

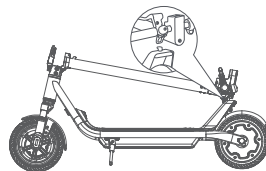

1



2

LEQISMA APP

Scan the QR code below with your mobile phone or search for "LEQISMA" in the APP market, download and install the APP.

- ❗ If the APP has already been downloaded on your mobile phone, please upgrade the APP to the latest version.



STEP 1

Search or scan to download LEQISMA APP, Open the APP. For the first use, please register / log in to your account according to the APP guide and select [Allow all permissions].



STEP 2

Press the button to turn on the scooter and turn on the Bluetooth function of the mobile phone. Move your phone close to the scooter.



STEP 3

Enter on APP homepage, select "Search for binding". The APP will scan the scooter to be configured with "LEQISMA" and add the device, click "bind" and then name your scooter.

When the scooter is connected to the APP, locking and unlocking operations are performed through the APP. When locked, the display shows a Bluetooth icon and displays a "P" code indicating parking mode. If the scooter is moved after locking, it triggers an alarm with rapid flashing of the rear light for anti-theft purposes. Unlocking removes the Bluetooth icon and "P" code, restoring normal functionality.

Safety Precautions

1. Please carefully read the User Manual, which will assist in explaining the basic working principles and provide tips on how to best enjoy your scooter experience.
2. Please wear all appropriate safety and protective gear as previously mentioned in the User Manual before operating the scooter.
3. Always wear shoes, make sure to wear comfortable clothes.
4. Do not use any accessories or additional items not approved by the manufacturer with the scooter. Do not try to open or modify your scooter, as doing so will void your manufacture warranty, and may cause failure to your device leading to serious bodily injury or death.
5. WARNING! Keep plastic covering away from children to avoid suffocation.
6. Do not operate the scooter while under the influence of drugs and/or alcohol.
7. Do not operate the scooter when you are restless or sleepy.
8. Use your best judgment to keep yourself out of dangerous situations with your scooter.
9. The scooters have a range of about 13 miles and a maximum speed of 15 mph.
10. Do not turn sharply, especially at high speeds.
11. Do not abuse your scooter, doing so can damage your unit and cause failure to the operating system leading to injury.
12. Do not drive in or near puddles of water, mud, sand, stones gravel, debris or near rough and rugged terrain.
13. The scooter can be used on paved roads that are flat and even. If you encounter uneven pavement, please lift your scooter over and past the obstruction.
14. Do not ride in dangerous weather: snow, rain, hail, sleet, on icy roads or in extreme heat.
15. Do not ride in or near pools or other large bodies of water.
16. Traffic in the city has many obstacles to cross such as curbs or steps. It is important to anticipate and adapt your trajectory and speed to those of a pedestrian before crossing these obstacles. It is also recommended to get out

of the vehicle when these obstacles become dangerous due to their shape, height or slippage.

17. Do not attempt to ride over bumps or objects greater than 0.6 inch even when prepared and bending your knees.

18. PAY ATTENTION -look to where you are riding and be attentive of the road conditions, people, places, property and objects around you.

19. Do not operate the scooter in crowded areas.

20. Operate your scooter with extreme caution when indoors, especially around people, property, and narrow spaces like doorways.

21. Pay special precautions in dark environments; be careful not to touch the brake disc.

22. Do not operate the scooter while talking, texting, or looking at your phone.

23. Do not ride your scooter where it is not permitted.

24. Do not ride your scooter near motor vehicles or on public roads.

25. Do not climb or travel down steep hills with your scooter.

26. The scooter is intended for use by a single individual, do not attempt to operate the scooter with two or more people. Do not carry anything while riding the scooter.

27. People who lack balance should not attempt to operate a scooter.

28. Women who are pregnant or are preparing for pregnancy should not operate the scooter.

29. Young children and the elderly should not operate the scooter without proper instruction and supervision from a certified scooter trainer.

30. At higher speeds, always take into consideration longer stopping distances.

31. Do not step forward off your scooter.

32. Do not attempt to jump on or off your scooter.

33. Do not attempt any stunts or tricks with your scooter.

34. Do not ride the scooter in dark or poorly lit areas.

35. Ride the scooter on the roads or areas permitted by local regulations and laws and park it in the areas permitted. The maximum speed of the scooter is

limited to 15 mph. If the local regulations and laws have different provisions on the maximum speed, the local regulations and laws will prevail. Please respect and follow the road safety and vehicle rules.

36. Do not ride the scooter near or over potholes, cracks or uneven pavement.

37. Do not operate your scooter off-road.

38. Do not exceed the maximum weight limit of 220 lbs.

39. Avoid driving the scooter in unsafe places, including near areas with flammable gas, steam, liquid, dust, fiber, which could cause fire and explosion accidents.

40. Scooter users are recommended to be 12+.

41. Anticipate your trajectory and your speed while respecting the code of the road, the code of the sidewalk and the most vulnerable. Notify your presence when approaching a pedestrian or cyclist when you are not seen or heard.

42. Walk when crossing protected passages.

43. In all cases, take care of yourself and others.

44. Do not divert the scooter beyond its intended use.

45. This vehicle is not intended for any sort of acrobatic use.

46. Caution, the brakes may become hot after use. Avoid touching them after riding.

47. WARNING! It is recommended to preform periodic inspections of the frame, fork and suspension attachments (if any).

48. Regularly check the tightening of the various bolted elements. in particular the wheel axles, the folding system, the steering system and the brake shaft.

49. Do not modify or transform the vehicle, including the steering tube and sleeve, stem, folding mechanism and rear brake.

50. WARNING! As with any mechanical component, a vehicle is subject to high stresses and wear. The various materials and components may react differently to wear or fatigue. If the expected service life for a component has been exceeded, it may break suddenly, therefore risking causing injuries to the user. Cracks, scratches and discoloration in the areas subject to high stresses indicate that the component has exceeded its service life and should be replaced.

51. The list regarding general maintenance can be performed by the user

themselves without a trained professional.

52. Do not place the scooter in a high temperature higher than 122F or a low temperature lower than -4F. Do not put the scooter into a fire, otherwise it may lead to battery failure, overheating, and even fire risk.

53. When not in use for more than 30 days, fully charge, store in a cool, dry place, and fully charge every 30 days.

54. The equipment contains a radio transmitting module with type approval code ; Do not use wireless devices in places where the use of wireless devices is prohibited. Otherwise, it may interfere with other electronic devices or cause other risks.

55. Take the time to learn the basics of the practice to avoid any serious accident that can take place in the first few months.

56. Be sure to keep and read the instructions for your future reference.

57. Persons shall be advised not to allow hands, feet, hair, body parts, clothing, or similar articles to come in contact with moving parts, wheels, or drivetrain, while the engine is running. Persons with the following conditions shall be cautioned not to operate: Those with heart conditions: Persons with head, back, or neck ailments, or prior surgeries to those areas of the body.

58. an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could avoid the user's authority to operate the equipment.

59. it can use silicone oil Emulsion, and model name is YA1 or other models (lubrication), it will help to replace wheel once you want to change tyre.

60. Before each cycle of operation, the operator shall perform the preoperation checks specified by the manufacturer:

61. That all guards and pads originally supplied by the manufacturer are in proper place and in serviceable condition;

62. That the area that the unit is to be operated in is safe and suitable for safe operation;

63. That the braking system is functioning properly;

64. That all safety labels are in place and understood by the operator and any passenger;

65. That any and all axle guards, chain guards, or other covers or guards supplied by the manufacturer are in place and in serviceable condition; and.

66. WARNING - Risk of Fire No User Serviceable Parts.

67. Prolonged Exposure to UV Rays, Rain and the Elements May Damage the Enclosure Materials, Store in doors When Not in Use.

Cleaning and Storage

If there are stains on the surface of the scooter, use a soft cloth to dip in a small amount of water to wipe; If there are stains that are difficult to clean, smear them with toothpaste and brush them repeatedly, then clean them with a damp cloth. If the plastic parts of the body are scratched, use sandpaper or other abrasive materials to polish them.

ⓘ Attention:

Do not use alcohol, gasoline, kerosene or other corrosive and volatile chemical solvents to clean, otherwise it will seriously damage the appearance and internal structure of the car body. It is forbidden to use pressure water gun to spray and wash. Ensure that the scooter is off and the charging port rubber cover is tightly fastened during cleaning, otherwise electric shock or serious failure may occur due to internal water inflow. When not in use, store in a dry and cool place indoors. Avoid outdoor storage for a long time. Long-term sun exposure, overheating and cold outdoor environment will accelerate the appearance and tire aging of the scooter, and reduce the service life of the scooter and battery pack.

Battery Maintenance

- Do not use battery packs of other models or brands, or else there may be safety risks. It is strictly forbidden to disassemble, squeeze, or puncture this product; it is forbidden to throw this product into water, fire (including heat sources such as stove, heater, etc.) or expose it to an environment with a temperature higher than 50°C.
- Water entering the battery may cause damage to the internal circuit, and there is a risk of fire or even explosion; if the battery is suspected of water entering, please stop using it immediately and contact the after-sales service.
- Do not touch the battery contacts, disassemble or puncture the case. Avoid metal objects contacting the battery contacts, or else it may cause short circuits, damage to the battery or personal injury or death.
- Avoid recharging after the battery is completely depleted, and try to charge as soon as possible, so as to prolong the service life of the battery.
- Only use the original power adapter when charging, or else there is a danger of damage or fire.
- Please fully charge the battery before storing it after each use, which will help to extend the battery life.
- Do not place the scooter in an environment above 50°C or below -20°C (for example: in a car exposed to the sun in summer). It is forbidden to throw the scooter into a fire, or else it may cause the battery to fail, overheat, and even cause a fire.

- When used at normal temperature, the battery pack can exert a higher range and performance; if used in an environment below 0°C, the battery life and performance will decrease. For details, please refer to the remaining mileage display in the APP.
- If it won't be used for a long time, please fully charge it first, store in a cool and dry place, and fully charge it every 30 days, or else the battery may be damaged and such damage is not covered by the warranty.
- Improper disposal of used batteries may seriously pollute the environment. Please abide by local regulations when disposing of the battery pack. Do not throw away the battery pack in order to protect the natural environment.

Environmental Protection

This product contains battery or recyclable electronic waste, and the built-in rechargeable battery contains substances that may pollute the environment. When disposing of the product, please do not pile it with general household waste, but hand it to the electronic waste collection point designated by the state, which is beneficial to environmental protection.

Limited Warranty Statement

30 DAY SATISFACTION GUARANTEED RETURN POLICY

If you are unsatisfied with your purchase, MEGAWHEELS return policy allows you to return the product purchased on the Authorization channel within 30 days counting from the date of receipt of shipment, and request a refund from the Authorization channel for any reason. NOTE: Express shipping cost is nonrefundable.

For the return request, MEGAWHEELS is not responsible for lost packages due to the carrier, or products received that cannot be verified. Received products that have damage determined to have been caused by the end-user may be subject to denial of the return request.

TO QUALIFY FOR A REFUND, ALL THE FOLLOWING CONDITIONS MUST BE MET:

1. A Return Merchandise Authorization (RMA) must be requested from MEGAWHEELS within 30 days from the date of receipt of shipment. To request an RMA, contact MEGAWHEELS Service: support@megawheels.com
2. The cost of return shipping will be borne by the customer.
3. For warranty service, please keep your receipt and/or invoice to validate proof of purchase.
4. Returned product must be in good physical condition (not physically broken or damaged).
5. All accessories originally included with your purchase must be included with your return.
6. If you return a product to MEGAWHEELS (a) without an RMA from MEGAWHEELS(b) without all parts included in the original package, MEGAWHEELS retains the right to refuse delivery of such return.

HOW TO OBTAIN WARRANTY SERVICE

A Warranty Service Order must be requested from MEGAWHEELS within Warranty Period from the date of receipt of shipment. To request a Warranty Service Order, contact

MEGAWHEELS: support@megawheels.com

To obtain warranty service, you must deliver the product, in either its original packaging or packaging providing an equal degree of protection, to the address specified by MEGAWHEELS. In accordance with applicable law, MEGAWHEELS may require the customer to furnish proof of purchase details and/or comply with registration requirements before receiving warranty service, period or thirty (30) days, whichever is longer, or for any additional period of time that may be applicable in your jurisdiction.

Warranty Content

Type	Parts	Times
Main parts	Frame body, motor components, controllers, handles, meters, handle mounts, front tubes, drum brake components, front fork components	12 Months
Attachment	Battery body, charger, throttle dial, brake lever, folding hook, front wheel, brake cable, connecting cable, foot support group	6 Months
Wearing parts	Cover, front and rear lights, front and rear fenders, silicone pad, atmosphere lamp, rubber plug, instrument cover, reflective strip, frame bottom cover, charging seat, hook fixing seat	3 Months

Question & Answer

1. What if the E-Scooter arrived missing accessory or broken part?

A: Please take a photo and send it to MEGAWHEELS Support Team by sending an email: m_scooter@hotmail.com

And MEGAWHEELS Support Team will reply to you soon and send the correct accessory or part replacement.

2. Is that possible to replace some components for example the tire?

A: Yes, please take a photo and send it to MEGAWHEELS Support Team by sending an email: m_scooter@hotmail.com

And MEGAWHEELS Support Team will reply to you soon.

3. Is there an Android/iOS APP? If so, what does it do?

A: Yes, the APP is LEQISMAART APP. The APP can be installed by scanning the QR code in the manual or searching "LEQISMAART" in the Google Play. Simply pair Megawheels scooter via Bluetooth and use the app to view current speed, remaining miles, and other realtime riding statistics.

Contact US

Contact us if you experience issues relating to riding, maintenance and safety, or errors/faults with your electric scooters.

For order from our official website (megawheels.com), please send an email to: support@megawheels.com.

- For order from our Amazon store, please send an email to: m_scooter@hotmail.com.

- For order from our eBay store, please send an email to: ebay-support@megawheels.com.



1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.