



## Energizer Solar Peak 1800

Model: ENPP01800USBL

### User Manual

# Contents

<b>Parameters</b>	<b>1</b>
<hr/>	
<b>Safety Guidelines</b>	
<hr/>	
Warning	2
Discard	3
<hr/>	
<b>User Guidelines</b>	
<hr/>	
Product Overview	4
LCD Screen	6
How to Use	6
AC Charging	9
PV Charging	10
Car Charging	10
Intelligent inversions	11
Energizer Solar Portable Power App	11
EPS Function	12
<b>FAQ's</b>	12
<hr/>	
<b>Error Messages &amp; Solutions</b>	13
<hr/>	
<b>What's in the box</b>	15
<hr/>	
<b>Maintenance</b>	15
<hr/>	
<b>Disclaimer</b>	15
<hr/>	

# Parameters

General	
Net Weight	22kg (48.5lbs)
Dimensions (W x H x D)	432 x 270 x 300mm (17" x 10.6" x 11.8")
Battery Capacity	1229Wh 51.2V $\approx$ ,24Ah
WiFi	Supported
Output (EU/FR/AU/ZA)	
AC Output x 3 (Inverter mode)	Pure sine-wave, total 1800W (peak 3000W), 220-240V~(50/60Hz), 12A Max.
AC Output (Bypass mode)	220-240V~(50/60Hz), 1800W Max, 10A Max.
Output (UK)	
AC Output x 4 (Inverter mode)	Pure sine-wave, total 1800W (peak 3000W), 220-240V~(50/60Hz), 13A Max.
AC Output (Bypass mode)	220-240V~(50/60Hz), 1800W Max, 10A Max.
Output (US)	
AC Output x 4 (Inverter mode)	Pure sine-wave, total 1800W (peak 3000W), 120V~(60Hz), 15A Max.
AC Output (Bypass mode)	100-120V~(60Hz), 1500W Max, 12A Max.
Other Outputs	
USB-A1/A2	5V $\approx$ 3A, 9V $\approx$ 2A, 12V $\approx$ 1.5A, 18W Max.
USB-A3/A4	5V $\approx$ 2.4A, 12W Max.
USB-C x 2	5/9/12/15V $\approx$ 3A, 20V $\approx$ 5A, 100W Max.
Car Charger	12.6V $\approx$ 10A, 126W Max.
DC5521 Output x 2	12.6V $\approx$ 3A
<div> * Car charge and DC5521 share power, 126W Max.  * Inverter mode: the output AC power comes from the battery, not the grid.  * Bypass mode: the output AC power comes from the grid, not the battery. </div>	
Input (EU/UK/FR/AU/ZA)	
AC Input Power	1800W Max., 10A
AC Input Voltage	220-240V~(50/60Hz)
Input (US)	
AC Input Power	1500W Max., 12A
AC Input Voltage	100-120V~(60Hz)
Other Inputs	
PV Panel	13-45V $\approx$ 12A, 400W Max.
Car Charging Input	12V/24V Battery Supported, 8A by default

# Parameters

<b>Input Charging</b>	
<b>AC Charging Power</b>	1200W Max.
<b>PV/Car Charging Power x 2</b>	400W Max.
<b>AC+PV Charging Power</b>	1200W Max.
<b>Battery</b>	
<b>Cell Type</b>	Lithium Iron Phosphate Battery (LiFePO <sub>4</sub> )
<b>Life Cycle</b>	3,000 cycles
<b>Protection Type</b>	Over temperature protection, low temperature protection, over discharge protection, over charge protection, over load protection, short circuit protection, over current protection
<b>Operating Temperature</b>	
<b>Optimum Operating Temperature</b>	20°C ~ 30°C (68°F ~ -6°F)
<b>Discharge Ambient Temperature</b>	-20°C ~ 45°C (-4°F ~ 113°F)
<b>Charge Ambient Temperature</b>	0°C ~ 45°C (32°F ~ -113°F)
<b>Storage Ambient Temperature</b>	-20°C ~ 45°C (-4°F ~ 113°F)

\*Whether the product can be charged or discharged is subject to the actual battery pack temperature.

# Safety Guidelines

## Warning

1. Do not let a working power station be close to a heat source, such as a fire or a heater.
2. Do not let the power station come into contact with any liquid.
3. Do not use the power station in a strong electrostatic or strong magnetic field environment.
4. Do not disassemble the power station in any way or pierce it with a sharp object.
5. Do not use wires or other metal objects to short-circuit the product.
6. Avoid stepping, sitting or climbing on the power station.
7. Do not use parts or accessories that are not officially supplied. If a replacement is required, please contact Energizer Solar at [www.energizersolar.com](http://www.energizersolar.com).
8. When using the power station, please follow the temperature guidelines outlined in this user manual. Excessively high temperatures can lead to a risk of battery ignition, while excessively low temperatures will significantly compromise the power station's performance and may affect its normal operation.
9. Do not place heavy objects on top of the power station.
10. Do not forcibly stop the fan or expose the power station to unventilated or dusty environments while it's operating.
11. Please avoid dropping and violent vibration. If severe impact happens, shut down the power station immediately. Please secure the power station during transportation to avoid vibration and impact.
12. If the power station accidentally falls into water, place it in a safe and spacious area, and maintain a safe distance until its completely dry. Even after the product has dried do not attempt to use the product again. Dispose of it properly according to the discard section in this user manual. If the power station is on fire, please use the recommended fire extinguishing methods in the following order: water or water mist, sand, fire blanket, dry powder, dioxide carbon fire extinguisher.


13. If the surface is dirty, clean it with a microfibre cloth.
14. Handle the power station with care to prevent damage. In the event of a severe impact causing the power station to tip over and sustain significant damage, turn it off immediately. Place the power station in a well-ventilated area, away from flammable materials and people. Dispose of it in accordance with local laws and regulations.
15. Keep the power station out of the reach of children and pets.
16. Keep the power station in a dry and ventilated place.
17. In humid environments, such as seaside locations or areas near water, it is advisable to use a moisture-proof bag with the power station. If you discover water inside the power station, refrain from using or starting it again. Take precautions to prevent electric shock before handling the power station. Place it in a safe, waterproof location and promptly contact customer service.
18. It is not recommended to use the power station to provide power for safety-critical emergency medical equipment, such as medical-grade breathing machines (hospital version CPAP: Continuous Positive Airway Pressure) and artificial lungs (ECMO: Extracorporeal Membrane Oxygenation). However, it is suitable for powering a home version CPAP at home, which does not require continuous professional monitoring. Always follow your doctor's recommendations and consult Energizer Solar for any device usage restrictions. For general medical equipment, please monitor the power levels to ensure power does not run out.
19. Power supplies generate electromagnetic fields that may interfere with implantable medical devices or the normal operation of personal medical devices, such as pacemakers, cochlear implants, hearing aids, and defibrillators.
20. When the power station is connected to a refrigerator, it may automatically shut down because of the power fluctuation property of the refrigerator. When connecting the power supply to a refrigerator that stores medicine, vaccines or other valuable items, it is recommended to set the AC output to "Never off" in the Energizer Solar Portable Power App, so as to ensure continuous power. Users should pay attention to power consumption.
21. During the push-pull movement of this product, it is strongly recommended to avoid placing other items on the power station.



## Discard

1. When conditions allow, ensure the battery is completely discharged before placing the power station in a designated battery recycling bin. The power station contains potentially hazardous batteries, so it is important not to dispose of them in regular waste bins. Refer to local laws and regulations for guidance on proper battery recycling and disposal procedures.
2. If the battery cannot be fully discharged due to product malfunction, avoid placing it directly in the battery recycling bin. Instead, contact a professional battery recycling company for appropriate disposal.
3. If the battery fails to restart after over-discharging, it should be safely disposed of as waste.


# User Guidelines

## Product Overview

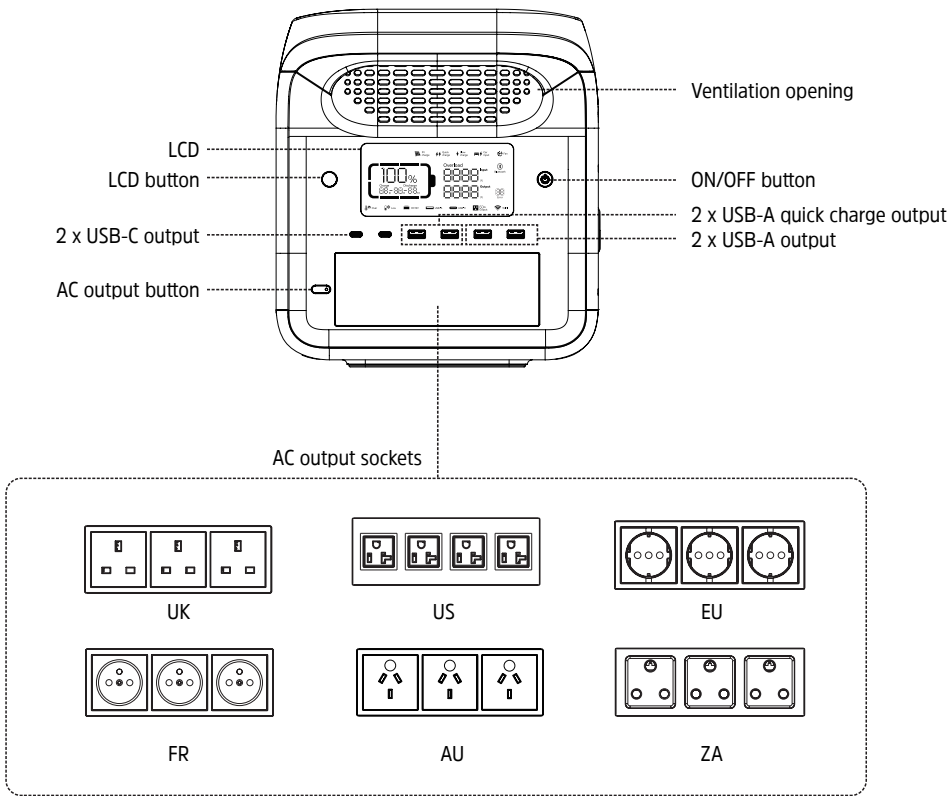

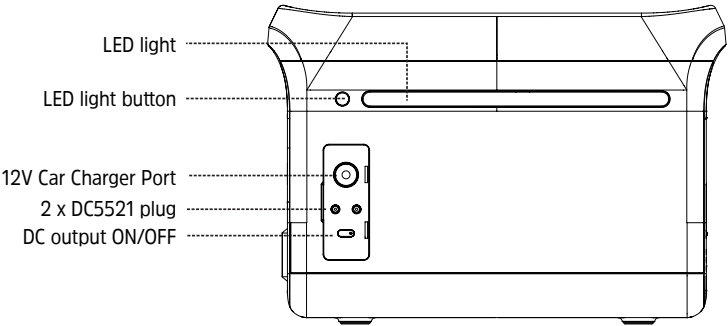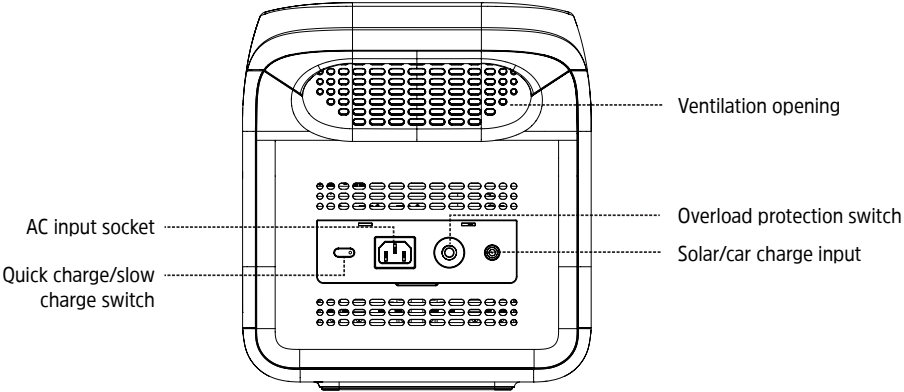

## LCD Screen

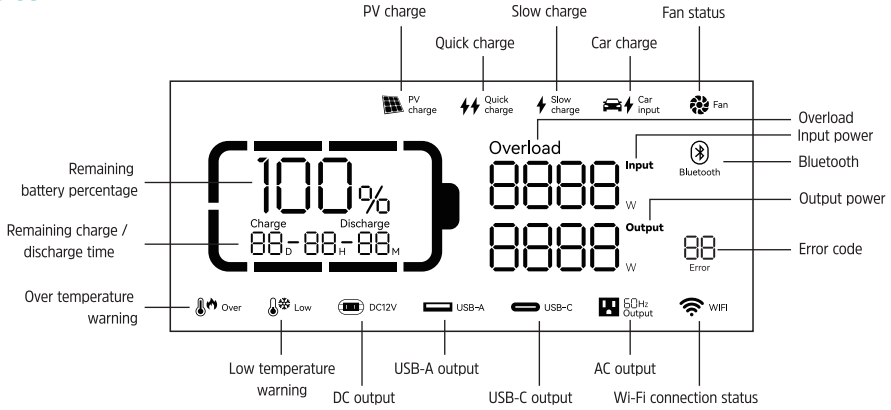


**Battery capacity:** When the power station is being charged, the SOC icon will flicker.

**Wi-Fi connection status:** The flickering icon indicates that power station is ready for pairing. The icon will keep flickering if a mobile phone and power station are connected by hotspot. After network connection succeeds, the icon will always be on. If connection fails, the icon will be off.

\* Please refer to Error Messages & Solutions for more details regarding error messages.

## How to Use

**Note:** Long press the ON/OFF button to restart the BMS and clear the fault information.

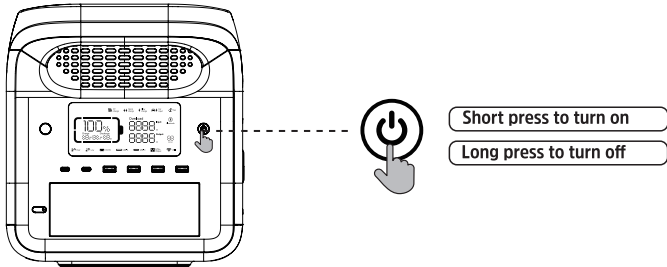


### On and off

- Press the main power switch to turn on the device, then the screen will be lit and the main power indicator will enter the slowly blinking light mode.
- If no operation is performed to the power station for 5 minutes, the power station will enter hibernation state and the LCD will automatically turn off. When there is load change or operation to the power station, the LCD screen will illuminate automatically. Press the main power switch to turn on or turn off the LCD.
- Press and hold the main power switch to toggle the LCD on or off.
- In the normal mode (the power is above 5%), the default standby time of this product is 2 hours; when the AC output switch is not turned on, and there is no charge or discharge for 2 hours, the product will automatically shut down, and the standby time can be set it on the Energizer Solar Portable Power App; when the power is 5% or below, the product will be forced to enter the low power mode. In the case of no charge or discharge, the product will adjust the standby time according to the power and automatically shut down.




- In normal mode, long press the LED light button to exit the automatic shutdown setting, and the battery icon ( ) on the screen will flash. Long press again to enter the automatic shutdown setting, and the battery icon ( ) will not flash. The automatic shutdown setting is to protect the battery from low power, exiting this setting may damage the battery life, please use it with caution.

**Note:** With no AC input active, long press the above AC output button, you can switch the AC off-grid output frequency ( 50Hz Output / 60Hz Output ), long press 2s to switch, the AC output icon will flash 3 times after successful switching.

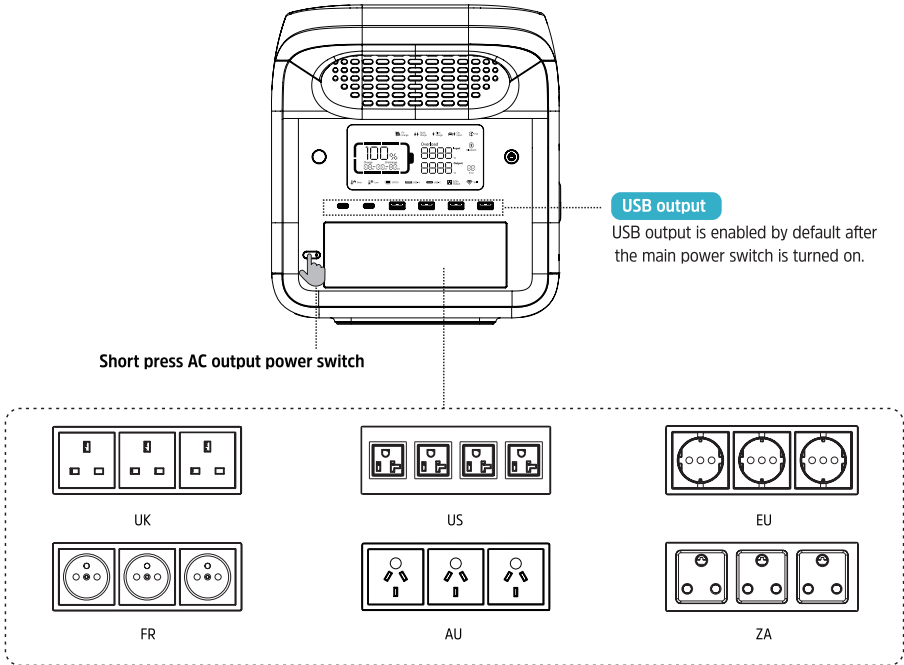

## AC output


- After ensuring that the main power is turned on, short press the AC output power switch to turn on the AC output. Short press the AC output power switch again to turn it off.
- The default standby time of the AC output port is 1 hour. After 1 hour without any load on the AC output port of this product, the AC output power will be automatically turned off. In normal mode, long press the LED light button, the AC output power switch can exit the automatic shutdown setting, and the battery icon ( ) on the screen will flash. Long press again, the AC output power switch enters the automatic shutdown setting, and the battery icon ( ) does not flash.
- Long press the LED light button to exit the AC automatic shutdown setting: it is applicable to AC equipment below 10W and pulse working equipment.
- When the AC output is not in use, turn it off to save power consumption.

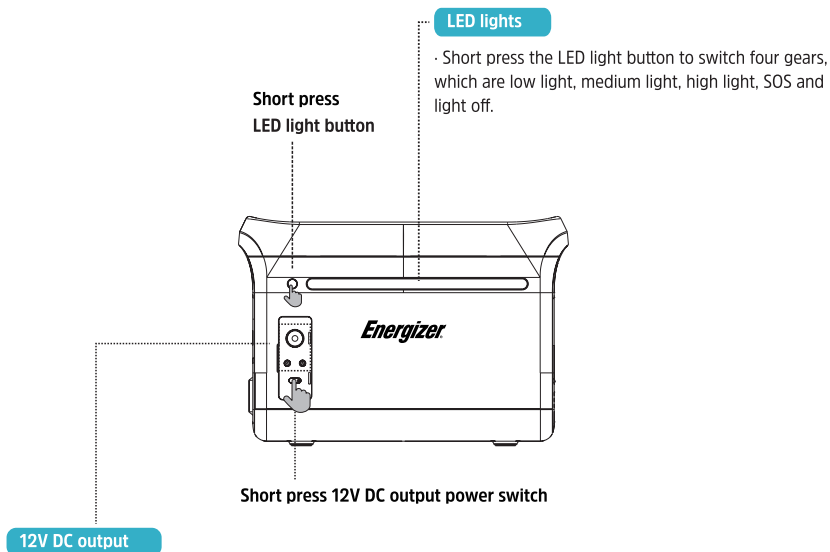


- After the main power switch is turned on, press the 12V DC output power switch to enable the DC output port.
- Press the 12V DC output power switch again to turn it off.
- When the 12V DC output power switch is turned on, the power station does not shut down automatically.

AC Charging

Quick charging technology is designed for AC charging. You can control the charging power via the AC charging speed switch. The slow charge mode is on by default when power station is turned on, and can be switched to quick charge mode by the button. Quick and slow charging mode switching can also be set by the Energizer Solar Portable Power App. If the current is continuously higher than 20A, the charging input port will start the self-protection function, and the charging overload protection switch will automatically trip. Press the charge overload protection switch to restore charging after confirming no fault.

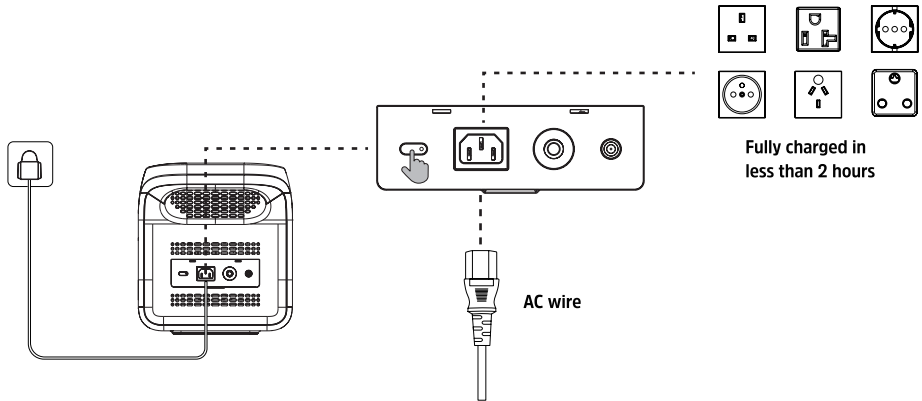


Quick charge and slow charge can be switched by the button.

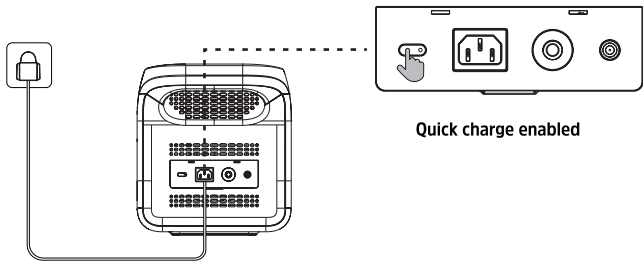

The charging power range can be adjusted by the Energizer Solar Portable Power App.

Please use the standard AC charging cable for fast charging. The AC charging cable should directly plug into a 10A (or above) wall-mounted socket. Energizer Solar is not liable for any damages resulting from the use of unofficial AC charging cables or failure to follow instructions.

## PV Charging

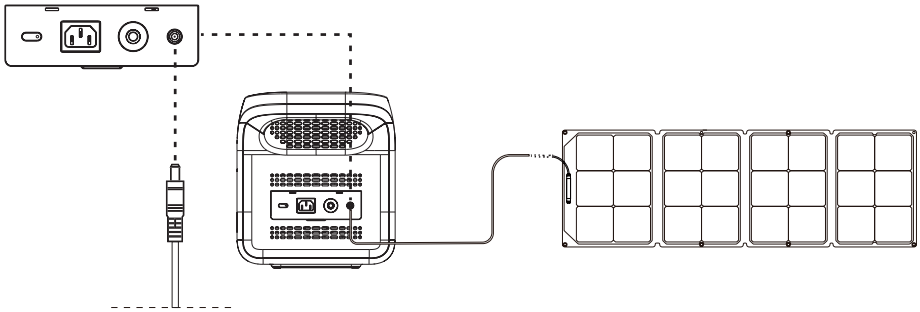

A Solar panel can be used to charge the power station as shown in the above diagram


**Charge the power station by solar panel.**

### \*Solar charging cable (DC7909)

- Please follow the Energizer Solar Sunpack user manual to connect the solar panels.
- Before connecting the solar panel, check whether its output voltage is within the power station specifications to avoid damage to power station.

\*The interface of this product is DC7909. If you need an adapter cable from MC4 to DC7909, please contact Energizer Solar at [www.energizersolar.com](http://www.energizersolar.com) on how to purchase.

## Car Charging

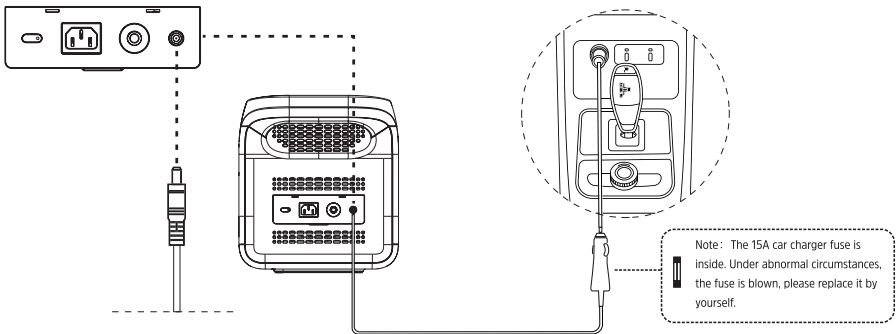

### \*Car charger cable (DC7909)

Power station can be charged by a car charging port. It should be charged after the car starts, so as to avoid the car battery loss and failure to start. At the same time, ensure good connection between the car charging port and cigarette lighter. We take no responsibilities for any loss caused by improper operation.

## Intelligent Inversion

To avoid operation faults arising from charging overload, when the total output power is over the rated output power, the constant output power will be automatically enabled, so that power station can supply power to the high power device at rated output power.

Please take note of the following while using constant power:


1. The constant power output function is not enabled by default, which can be turned on or off by App.
2. In the following cases, constant power output function is not enabled:
  - (1) AC output turned on in charging status (bypass mode).
  - (2) Constant power output turned off.
3. Constant power output function is more suitable for heater and motor instead of all electrical equipment. It is not suitable for some electrical appliances with voltage protection (such as precision instruments). Constant power output function application is subject to actual testing.

## Energizer Solar Portable Power App

You are able to view information and data and control this product via the Energizer Solar Portable Power App. To download the app, search for **[Energizer Solar Portable Power]** in the Google App Store or Apple App Store. Once downloaded, create an account and register your product to manage and control how you use your Energizer Solar Portable Power Station. For WiFi connection instructions, visit [www.energizersolar.com](http://www.energizersolar.com) and go to the resources page.

## UPS Function

This product supports the UPS function when you are connecting the product to the power grid via the AC input port of this product through the AC charging cable. When connected to the power grid, the appliance can use the AC output port of the product. At this time, it is in bypass mode (AC power from the grid, not the battery); when the grid suddenly loses power, the product can automatically switch to the battery-powered mode within 14ms, which is the inverter mode (the AC power comes from the battery, not the grid). Please do not connect it to devices that require high uninterrupted power supply, such as data servers and workstations. Only use the product for this purpose after multiple tests to confirm whether it is compatible. It is recommended to use only one connected device when using this mode, and do not connect multiple devices at the same time to avoid overload protection of the product. If the device does not operate normally or data is lost due to failure to follow the instructions, our company will not bear the corresponding responsibility.

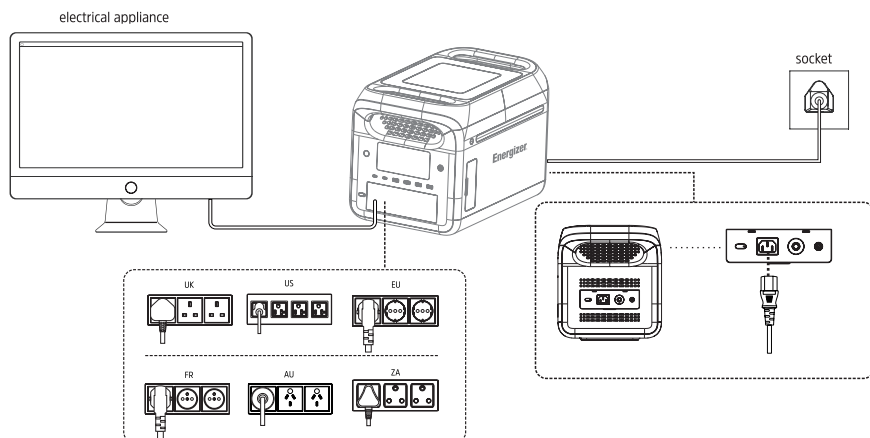

## FAQ's

### 1. What kind of battery is used?

Lithium iron phosphate battery (LiFePO4).

### 2. What equipment can be connected to the AC output ports?

The AC output has high rating power and maximum power, which enables it to supply power to most household appliances. Suggest check the equipment power prior to connecting and make sure power of all equipment lower than rated power.

### 3. How to know the supply time?

Time shows in the LCD, which can be referred to for estimation for equipment with stable power consumption.

### 4. How to know it is charging?

When in charge, the LCD shows remaining charging time. The SOC flickers, and input power is shown.

### 5. How to clean the unit?

Clean the unit with a microfibre cloth.

### 6. How to store the unit?

Turn it off, and keep it in a dry and ventilated place. Do not expose it close to water. For long-term storage, suggest discharge to 0% and charge to 100% every 3 months to extend the service life.

### 7. Can it be taken on a plane?

No, the Energizer Solar Peak 1800 does not comply with aviation standards.

# Error Messages & Solutions


Icon	Icon Characteristics	Fault Description	Solution
01 Error	Error code always on	Serious battery fault	Turn on and off, contact after sales if still not fixed.
02 Error	Error code always on	$\Delta V$ too big	Auto shutdown, fault will be cleared after reboot.
03 Error	Error code always on	BMS voltage	Auto shutdown, fault will be cleared after reboot.
 Over 04 Error	High Temperature icon flashes / Error code always on	Battery over temperature	Auto shutdown, temperature recovery enables starting up.
 Low 05 Error	Low Temperature icon flashes / Error code always on	Battery under temperature	Auto shutdown, temperature recovery enables starting up.
06 Error	Error code always on	Over current protection	Auto shutdown, fault will be cleared after reboot.
 Over 07 Error		Over temperature	Auto shutdown, delayed start.
08 Error	Error code always on	Pre-charge fault	Auto shutdown, fault will be cleared after reboot.
09 Error	Error code always on	Battery under voltage fault	Auto shutdown and charge, contact after sales if still not fixed after multiple charging failures.
10 Error	Error code always on	Abnormal parallelization	Check the connection cable. Contact after sales if still not fixed. Single power station function is not affected.
11 Error	Error code always on	Abnormal INV battery voltage	Auto recover after fault is cleared.
12 Error	Error code always on	Grid voltage or frequency fault	The fault is cleared when the grid returns to normal.
13 Error	Error code always on	Abnormal INV BUS voltage	Auto recover after fault is cleared.
14 Error	Error code always on	Abnormal INV output	Auto recover after fault is cleared.
Overload 15 Error	Overload icon flashes / Error code always on	INV discharge overload	Remove over-power device. Auto recover after fault is cleared.
Overload 16 Error	Overload icon flashes / Error code always on	Charge overload	Auto recover after fault is cleared.
17 Error	Error code always on	INV Tz	Auto recover after fault is cleared.
18 Error	Error code always on	Battery short	Fault will be cleared after reboot.
19 Error	Error code always on	INV output short	Fault will be cleared after reboot.
 Over 20 Error	High Temperature icon flashes / Error code always on	MOSFET OTP fault	Auto recover after product is cooled down.
21 Error	Error code always on	Fan stop	Turn on and off, contact after sales if still not fixed.
22 Error	Error code always on	Discharge soft start fault	Auto recover after fault is cleared.

Icon	Icon Characteristics	Fault Description	Solution
 23 Error	Error code always on	Charge soft start fault	Auto recover after fault is cleared
 Low 24 Error	Low Temperature icon flashes / Error code always on	MOSFET UTP fault	Turn on and off, contact after sales if still not fixed.
 25 Error	Error code always on	Anderson hardware OCP fault	Remove PV charge, auto recover after connecting PV and turn on.
 26 Error	Error code always on	Anderson software OCP fault	Turn off output, manual recover after fault is cleared.
 27 Error	Error code always on	PV hardware OCP fault	Remove PV charge, auto recover after connecting PV and turn on.
 28 Error	Error code always on	PV1 software OCP fault	Stop PV1 charging, auto recover after connecting PV and turn on.
 29 Error	Error code always on	PV2 software OCP fault	Stop PV2 charging, auto recover after connecting PV and turn on.
 30 Error	Error code always on	Car charge output OCP fault	Turn off output, manual recover after fault is cleared.
 31 Error	Error code always on	PV output OVP (over voltage protection) fault	Stop PV. Auto recover after fault is cleared.
 32 Error	Error code always on	PV1 input OVP fault	Stop PV1. Auto recover after fault is cleared.
 33 Error	Error code always on	PV2 input OVP fault	Stop PV2. Auto recover after fault is cleared.
 Over 34 Error	High Temperature icon flashes / Error code always on	Anderson OTP fault	Turn off output, manual recover after fault is cleared.
 Over 35 Error	High Temperature icon flashes / Error code always on	PV1 OTP fault	Stop PV1. Auto recover after fault is cleared.
 Over 36 Error	High Temperature icon flashes / Error code always on	PV2 OTP fault	Stop PV2. Auto recover after fault is cleared.
 38 Error	Error code always on	Car charge output OTP fault	Turn off output, manual recover after fault is cleared.
 Over 37 Error	High Temperature icon flashes / Error code always on	Abnormal communication	Turn on and off, or change operation environment. Contact after sales if still not fixed.
 USB-A 39 Error	USB-A icon flashes / Error code always on	Abnormal USB	Auto recover after removing abnormal USB.
 USB-C 40 Error	USB-C icon flashes / Error code always on	Abnormal type C	Auto recover after removing abnormal type C.


If there is a warning occurs during the use of this product, and the warning icon still does not disappear after restarting the device, please stop using it immediately (do not try to charge or discharge). If none of the above information can solve problem you encounter, please contact Energizer Solar at [www.energizersolar.com](http://www.energizersolar.com)




## What's in the Box

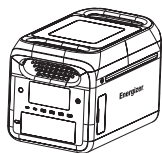


Power station

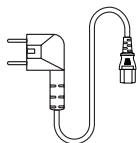

AC cable



Car charge cable



User manual

## Maintenance

- It is recommended to use or store the power station between the optimum operating temperature range. Ensure it is kept away from water, heaters, and metal surfaces.
- For long-term storage, charge and discharge every 3 months, i.e. discharge to 0% then charge to 100%.
- For safety reasons, avoid storing the power station at temperatures above 45°C (113°F) or below -20°C (4°F).
- If the capacity is lower than 1%, please charge to 60%. Long-term storage with serious power shortage will cause irreversible damage to the battery cells and shorten the service life of the product.
- If the battery capacity becomes critically low, and the device remains idle for an extended period, the product will enter deep sleep mode and can only be used again after being recharged.

## Disclaimer

- The product features a built-in battery management system, which has various protection measures, including overcharge, overdischarge, overcurrent, short circuit, high and low temperature, and abnormal communication. During the use of this product, these protection mechanisms may activate and temporarily cause output interruption. Any potential loss stemming from accidental power interruptions while supplying power to specific equipment, such as medical devices or servers, is not the responsibility of Energizer Solar.
- Before using the power station, please read this user manual to ensure understanding and proper use. After reading the user manual, please keep it safe for future reference. Improper operation may cause serious injury to yourself or others, or result in product damage and property loss. Once using the power station, you are deemed to have understood and accepted all terms and contents herein. Users are expected to take responsibility for their actions and any resulting consequences. Energizer Solar is not responsible for any losses that may occur if users do not adhere to the instructions in this user manual.
- In compliance with laws and regulations, the company reserves the right of final interpretation of this document and all related documents of this product. Subject to update, revision or termination without prior notice, please visit [www.energizersolar.com](http://www.energizersolar.com) for the latest product information.

**Stay powered up wherever you roam  
with the Energizer Solar Peak 1800.  
The unrivaled portable power station  
that ensures you're always equipped  
with reliable, worry-free energy.**



# ***Energizer*** **SOLAR**



## **Discover the Energizer Solar Portable Power range!**

The Energizer Solar Portable Power range offers reliable and sustainable charging solutions for all your electronic devices. Harnessing the power of the sun, these portable power products provide a convenient and eco-friendly way to stay connected on the go. With advanced technologies and durable construction, Energizer Solar Portable Power ensures high performance and long-lasting power supply in any outdoor adventure or emergency situation.



[energizersolar.com](https://energizersolar.com)

## ISED Statement

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development

Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.

2. This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement. Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.

## FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.



**North America**  
888 Prospect Street, Suite 200  
La Jolla California 92037  
+1 424 254 5344

**Europe**  
The Black Church, St Mary's Place  
Dublin D07 P4AX, Ireland  
+353 1 254 8222

**Australia**  
Level 35, 477 Collins St, Melbourne  
Victoria 3000, Australia  
+61 1300 757 827



[energizersolar.com](http://energizersolar.com)