

Shenzhen Shengyang Musical Instruments Technology Co., Ltd.



SUNRISE MELODY


MK Electronic Wind Instrument Manual



Contents

Panel introduction-----	1
Detailed introduction of functions-----	1
Preparing to play-----	5
Connect external devices-----	6
Charging method-----	6
Bluetooth connection-----	7
Timbre table-----	7
Four fingering charts-----	9
Must read for users-----	14
Troubleshooting-----	15
Product parameters-----	15

Panel introduction

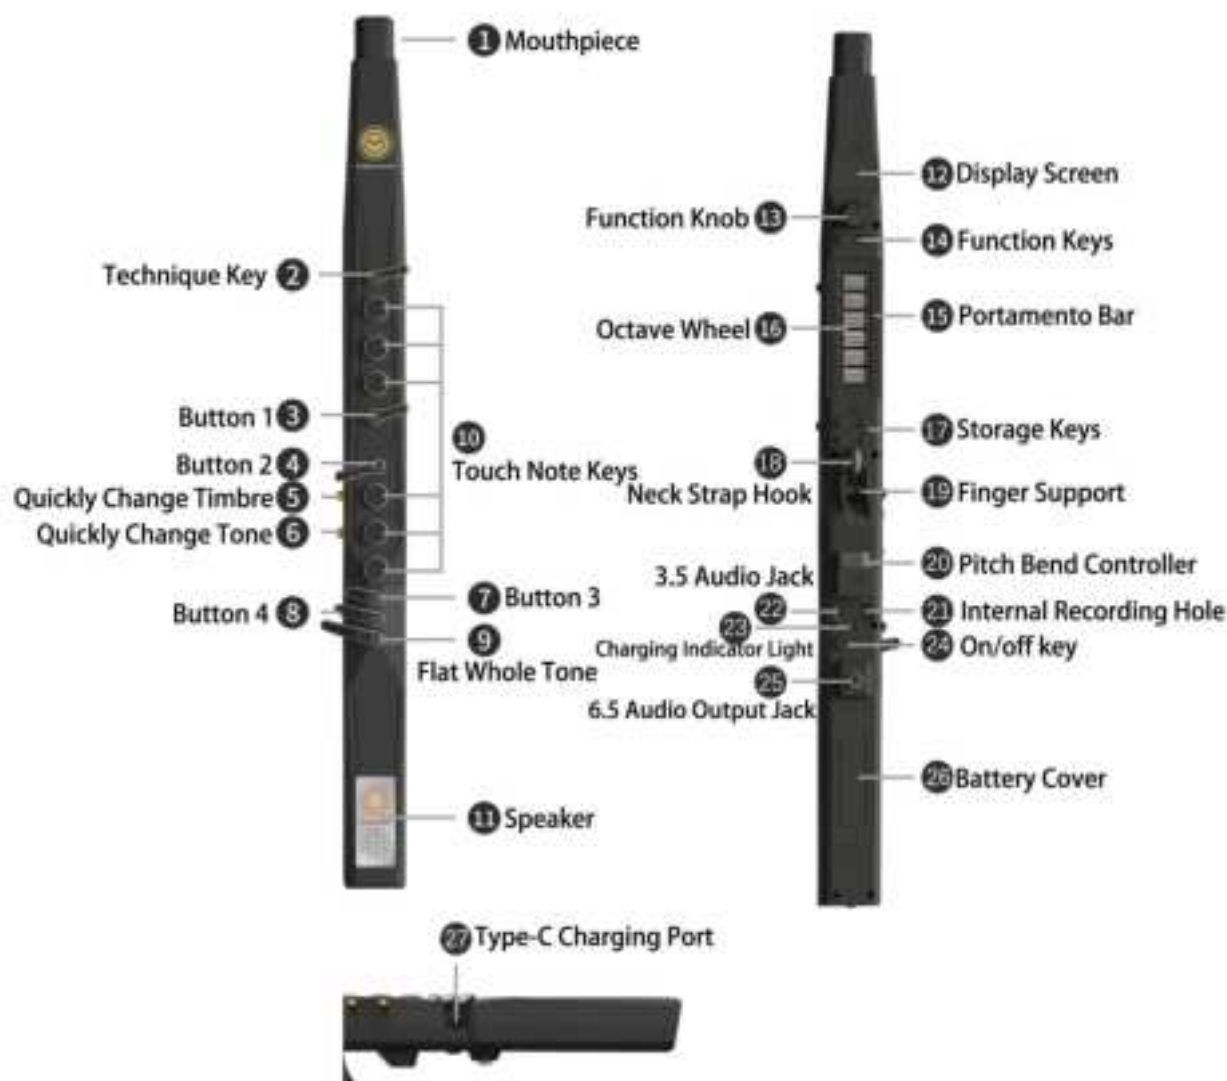

Detailed introduction of functions

1. Mouthpiece

Made of silica gel, it is hygienic and safe, and convenient to replace and clean. There is a vibrato sensor inside the mouthpiece. Select semi-automatic vibrato. When playing, bite down on the mouthpiece with a little force and do not let go, and there will be a uniform vibrato. Select emotional bite vibrato. When playing, bite and release repeatedly and there will be corresponding vibrato.

2. Technique key (Technique \ Vibrato \ Sharp semitone \ Flat semitone \ High octave \ Off).

The following functions can be adjusted and switched by entering the technique key through the function rotation key.

- A. Technique: When switching to the technique function, you can achieve one-key wheel fingering and one-key flutter tongue.
- B. Vibrato: When switching to the vibrato function, manual vibrato can be achieved (this can only be achieved by adjusting the biting vibrato mode)
- C. Sharp semitone: When switching to the semitone sharp function, the semitone sharp function can be realized.
- D. Flat semitone: When switching to the flat semitone function, the flat semitone function can be realized.
- E. High octave: When switching to the high octave function, touching this key can achieve a high octave.
- F. When this function is switched on, nothing happens when you touch this key.

3. Button 1 (Technique \ Vibrato \ Sharp semitone \ Flat semitone \ High octave \ Off) see technique key (technique key, button 1, and button 2 can be used in combination).

4. Button 2 (Technique \ Vibrato \ Sharp semitone \ Flat semitone \ High octave \ Off) see technique key (technique key, button 1, and button 2 can be used in combination).

5. Quickly change timbre

Press to quickly switch to the timbre stored in advance (Instant timbre change)

The timbre stored through the storage key can be quickly switched by pressing this key to realize the storage of timbres.

6. Quickly change tone

Press to quickly switch to the tone stored in advance (Instant tone change)

The tone stored through the storage key can be quickly switched by pressing this key to realize the storage of tones.

7. Button 3 (Sharp semitone \ Flat semitone \ Off)

The following functions can be switched and adjusted by entering button 3 through the function rotation key.

- A. Sharp semitone: When switched to the sharp function, the sharp function can be realized.
- B. Flat semitone: When switched to the flat function, the flat function can be realized.
- C. Off: When switched to this function, touching this key will have no reaction.

8. Button 4 (Sharp semitone \ Flat semitone \ Off)

See button 3. (Button 3 and button 4 can be set for sharp, flat or off according to your own preference.)

9. Flat whole tone

Touching this key will flat the whole tone, for example: 3 tone becomes 2 by touching this key.

10. Touch note keys

The touch-type note keys are responsive. When you touch the corresponding note keys, you can make the corresponding sound.

11. Speaker

Built-in 5W speaker, suitable for practicing indoors.

12. Display screen

Displays the battery power and the parameters, timbre, tonality, etc. during adjustment, making it easy to view during adjustment.

13. Function knob

The function knob needs to be used in combination with the function keys. Press the function key to select, and rotate the function knob to find the function you need and set it.

14. Function keys

By default, the screen is for timbre switching (switching by rotating left and right). Press key A once, and you can rotate left and right to switch timbre, transposition, blowing force, fingering, high-frequency setting, low-frequency setting, octave speed, note speed, volume and other parameter settings. After selection, press key A again to enter parameter adjustment. If you want to return to the previous level menu, press the knob briefly. Press key B once, and you can rotate left and right to switch vibrato rate, vibrato amplitude, vibrato setting, portamento rate, portamento setting, reverb adjustment, left and right hand setting, flutter-tongue rate, beat setting, rhythm switch, rhythm track, rhythm volume, rhythm tempo, pitch bend sensitivity, technique key, button 1, button 2, button 3, button 4, Bluetooth activation and other parameter settings. After selection, press key B again to enter parameter adjustment. If you want to return to the previous level menu, press the knob briefly.

Timbre adjustment: Rotating left and right allows you to freely select your favorite timbre. There are a total of 68 kinds.

Transposition adjustment: Rotation can be used to select and adjust the required tonality. 12 tonalities can be switched by rotating. There are a total of 7 octaves.

Blowing force adjustment: 01-100. The larger the number, the less force is needed for blowing. When the number exceeds 60, a self-chirping will appear.

Fingering adjustment: Freely switch among four fingering methods: electric flute fingering, flute fingering, electric sax fingering, and cucurbit flute fingering.

High-frequency setting: -12 - 12: The larger the number, the more obvious the high frequency.

Low-frequency setting: -12 - 12: The larger the number, the more obvious the low frequency.

Octave speed: 01-100 The larger the number, the more sensitive the button will be, and vice versa, the less obvious it will be.

Note speed: 01-100. The larger the number, the more sensitive the key will be, and vice versa, the less obvious it will be.

Volume adjustment: volume range 01-100, the larger the number, the greater the volume.

Vibrato rate: 01-100. The larger the number, the faster the vibrato speed, and vice versa.

Vibrato amplitude: 01-100. The larger the number, the more obvious the vibrato will be, and vice versa, the less obvious it will be.

Vibrato setting: Adjustable automatic vibrate, free vibrato, manual vibrato, and semi-automatic vibrato (If you bite still will produce the set vibrato rate). There are a total of four vibrato modes.

Portamento rate: 01-100. The smaller the number, the faster the portamento, and vice versa.

Portamento setting: equal velocity, equal time, rotate the function key left or right to switch.

Reverb adjustment: The larger the number 01-100, the greater the reverberation, and vice versa, the less obvious the reverberation will be.

Left and right hand adjustment: left hand on top, right hand on top, rotate and switch freely.

Flutter tongue speed: 01-100. The larger the number, the faster the flutter tongue speed is, and vice versa.

Beat setting: Including off, 1/4 beat, 2/4 beat, 3/4 beat, and 4/4 beat. Rotate the function knob left and right to select.

Rhythm switch: Rotate to on, and the rhythm function is turned on at this time. Rotate to off, and the rhythm function is turned off at this time.

Rhythm tracks: There are a total of 26 tracks to choose from. Select your favorite rhythm track through the knob for performance.

Rhythm volume: The rhythm volume range is 01-100. The larger the number, the louder the volume.

Rhythm tempo: The rhythm tempo range is 30-250. The larger the number, the faster the rhythm tempo. Conversely, the slower it is.

Pitch bend sensitivity: The range is 01-127. The smaller the number, the more sensitive it is. Conversely, the slower it is.

Technique key: By rotating the function key, set and switch Technique \ Vibrato \ Sharp semitone \ Flat semitone \ High octave \ Off.

Button 1: By rotating the function key, set and switch Technique \ Vibrato \ Sharp semitone \ Flat semitone \ High octave \ Off.

Button 2: By rotating the function key, set and switch Technique \ Vibrato \ Sharp semitone \ Flat semitone \ High octave \ Off.

Button 3: By rotating the function key, set and switch Sharp semitone \ Flat semitone \ Off.

Button 4: By rotating the function key, set and switch Sharp semitone \ Flat semitone \ Off.

Bluetooth: Bluetooth on, Bluetooth off. Switch by rotating. When Bluetooth is turned on, mobile phones or tablets can search for the Bluetooth name. Click to connect the device and it can be used.

Restore factory settings: Press and hold the function knob + key 1.

Calibration: Press and hold the function knob + key 3 (do not touch any touch keys).

15. Portamento bar

Touching the portamento bar while playing will produce a portamento effect.

16. Octave wheel

Realize high and low pitch conversion through the rollers. Place the thumb between the two rollers to switch octaves (a total of seven octaves)

17. Storage keys

First, select the corresponding timbre or tone. Press and hold any of the four keys to display the saved timbre or tone. Short press to call the stored timbre or tone.

18. Neck strap hook

If it feels too heavy, you can use the neck strap. Hang the neck strap hook at the hook, and the other end on the neck, and adjust it to the tightness that suits you.

19. Finger support

Put your thumb here to balance and support. You can adjust it up and down according to your own situation, and adjust it to the position that suits the size of your fingers.

20. Pitch bend controller

Touch-type pitch bend. Press down with the thumb to produce pitch bend. The amplitude of the pitch bend depends on the touch surface of the finger. The larger the touch, the more obvious the pitch bend. Conversely, the less obvious it is. The speed of pressing and releasing determines the speed of the pitch bend.

21. Internal recording hole

An internal recording cable can be inserted through this hole, and the other end is inserted into the mobile phone. If there is no round head jack, it can be inserted through an adapter that supports internal recording. Internal recording can be achieved by recording videos or audios through mobile phones.

22. 3.5 audio jack

A headset can be inserted through this output jack. It can also be connected to audio equipment or tuning devices. After this jack is connected, the speaker is automatically turned off.

23. Charging indicator light

It shows a red light during charging and turns green when fully charged.

24. On/off key

Press and hold for 2 seconds to turn on/off the device.

25. 6.5 audio output jack

External devices such as speakers can be connected through this jack.

26. Battery cover

When opening this cover, you can see the built-in high-capacity lithium battery.

27. Type-C charging port

Through direct current, it can be charged with an ordinary mobile phone charging cable or USB port. Do not use a fast charging adapters to charge it, otherwise the main board will be burned. Damage caused by this situation is not covered by free warranty.

Preparing to play

1. Press and hold the on/off key for 2 seconds to turn on the EWI.

2. Hang the neck strap on the hook, hang the other end around your neck, and tighten it.

3. Adjust the setting parameters to the appropriate position

For example: volume 75, blowing power 50, etc. Appropriate parameters have been set at the factory and can be adjusted later according to your own preferences.

4. Choose the fingering method that suits you, choose the timbre you like, and then you can play the songs you like.

5. Raise both arms naturally. Place the left hand on top and the right hand on the bottom (the opposite for left-handed people). Relax the little finger naturally and try to touch the keys with the fingertip as

much as possible. Keep the body straight and look straight ahead. A EWI at an angle of about 45 degrees to the body is the most appropriate.

6. Place the mouthpiece between the lips and teeth. There is a bite vibrato piece inside the mouthpiece. When you want to use bite vibrato, play according to different biting methods, and corresponding vibrato effects will be produced.

Connect external devices

6.5mm audio output jack, you can insert the audio cable to connect the speaker through the 6.5mm audio output jack. At this time, there is no sound from the built-in speaker.



3.5mm audio output jack, you can plug in headphones through the 3.5mm audio output jack, and the built-in speaker will not make any sound.



Charging method

The charging port is on the side of the EWI and there is a built-in battery. Insert the charging cable into the charging port. When charging, there is a red light indication, and the battery level grid on the screen will flash. When fully charged, it turns green and the battery level grid on the screen stops flashing. When the battery shows the last grid, charge it as soon as possible. Do not use it during charging. It will automatically shut down when the battery is too low.



Bluetooth connection

First, turn on the Bluetooth function of the EWI. Turn on Bluetooth on your mobile phone or tablet, search for the Bluetooth name MK_BT, and click to pair. After successful pairing, the Bluetooth symbol will be displayed on the screen of the electronic wind instrument.

Timbre table

Serial number	Timbre	Serial number	Timbre
1	Electronic music 1	35	Trumpet
2	Electronic music 2	36	Popular trumpet
3	Electronic music 3	37	Tuba
4	Electronic music 4	38	Clarinet
5	Electronic music 5	39	Oboe
6	Electronic music 6	40	Piccolo
7	Sawtooth wave	41	Trombone
8	Electronic flute	42	Wind unison
9	Miao Yin 1	43	Brass
10	Miao Yin 2	44	Harmonica
11	Classic solo	45	Piano
12	Electronic solo	46	Sanxian
13	Soft alto saxophone	47	Morin khuur 1
14	Bamboo flute	48	Morin khuur 2
15	Vibrato flute	49	Pan flute
16	Cucurbit flute	50	Xun
17	Bawu	51	Dongxiao
18	Suona	52	Sheng
19	Pipa	53	Guqin
20	Erhu 1	54	Dulcimer
21	Erhu 2	55	Gaohu
22	Chinese zither	56	Xiao

23	Popular flute	57	Jinghu
24	Violin 1	58	Banhu
25	Violin 2	59	Pastoral flute
26	Viola	60	Accordion
27	Cello	61	Melodica
28	Bright alto saxophone	62	Chinese percussion
29	Tenor saxophone 1	63	Contrabass
30	Tenor saxophone 2	64	Strings 1
31	Soprano saxophone	65	Strings 2
32	High medium saxophone	66	Guitar
33	Alto saxophone	67	Drum set
34	French horn	68	DJ percussion

Four fingering charts

Flute fingering

1(do)



2(re)



3(mi)



4(fa)



5(sol)



6(la)



7(si)



1̣(do)



Electric flute fingering

1(do)



2(re)



3(mi)



4(fa)



5(sol)



6(la)



7(si)



1(do)



Electric saxophone fingering

1(do)



2(re)



3(mi)



4(fa)



5(sol)



6(la)



7(si)



1(do)



Cucurbit flute fingering

3(mi)



5(sol)



6(la)



7(si)



1(do)



2(re)



3(mi)



4(fa)



5(sol)



6(la)



7(si)



1(do)



2(re)



3(mi)



4(fa)



5(sol)



Must read for users

1. Keep it dry: If saliva, sweat or other liquids flow outside the tube and are not cleaned in time, the liquid will enter the tube from the gap outside the tube or the outer screen, causing internal circuit failure. This failure is not covered by the after-sales warranty.
2. If the equipment fails, please do not disassemble or modify it without permission, otherwise you will not be entitled to the warranty service during the warranty period.
3. Wipe it with a soft cloth or cotton towel after use to prevent sweat from corroding the keys.
4. Avoid dropping or bumping. The EWI is an electronic product with a plastic shell, which is not drop-resistant. After use, place the EWI in a bag or stand upright to avoid dropping or damaging it.
5. Avoid dropping the instrument into water or other liquids. If dropped into liquids, turn it off immediately. Damage caused by human factors is not covered by the warranty.
6. In humid weather, it is necessary to take good moisture-proof measures and put it in the bag after use. You can put some desiccant in the bag.
7. Rinse your mouth after eating before playing to avoid clogging the pipes.
8. Try to keep your fingers clean and do not play when there is water or sweat.
9. If there is too much saliva when playing, it may be that the mouthpiece is held too deep or the way of pronouncing the sound is wrong.
10. Avoid shaking the electric blowpipe with force, which may cause the water inlet of the sensor and the heavy parts inside to loosen.
11. If you don't use it for a long time, you can charge it frequently to prevent the battery from being unusable due to power loss.
12. Do not wait until the battery is completely exhausted before charging. Frequent battery exhaustion will affect the battery life. Do not use a mobile phone fast charger to charge the battery.
13. To replace the mouthpiece, first loosen the fixing screws. Do not shake it too hard to prevent the bite plate from breaking.
14. High temperature protection: Do not place this product in high temperature, fire, sunlight or electromagnetic interference environment.
15. Note: Fast charging is prohibited.
16. This product is not equipped with an adapter.

Troubleshooting

1. Can't turn on the EWI

You can try to remove the battery and plug it in again. If it still can't turn on, please contact customer service.

2. Out of tune

You can try calibration first (press and hold the function key and storage key No. 3 at the same time). During calibration, do not touch any metal keys with your fingers. You can also turn it off and restart. If it is still inaccurate after restarting, please pay attention to observing whether the half-tone keys are touching each other. If there is no problem with any of these, generally there is a problem with the fingering selection.

3. Self-chirping

Turn function key A to find the blowing force adjustment, and the value should not exceed 60. If the number is lower than 60 and it still self-chirping, please leave it for a while and wait for the saliva to dry.

4. The method to deal with the instrument that does not sound or the sound is small is as follows:

- (1) Rotate function key A to find the volume setting and increase the volume.
- (2) Rotate the function key A knob to find the blowing force adjustment, and increase the blowing force, but not beyond 60.
- (3) Check if there are plugs inserted into the 6.5mm jack and the 3.5mm jack, if so, remove them.
- (4) Check whether the external speaker is connected well and whether the speaker volume is adjusted to the optimal position.
- (5) If there is a problem with the settings, please calibrate or restore the factory settings (Press and hold the function knob and the No. 1 storage key at the same time).

Product parameters

Model: MK

Timbre: 68 types

Mouthpiece: silicone material

Tonality: 12

Speaker: 5W

Material: environmentally friendly plastic material

Battery: 3.7V 2600mAh

Weight: 560g

Display: LCD display

Size: 570*40*38mm

Interface: 3.5 headphone audio port, 6.5 audio output port, TYPE-C charging hole

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Shenzhen Shengyang Musical Instruments Technology Co., Ltd.



SUNRISE MELODY

Website: www.sunrisemelody.com