



AIRAVE 4 LTE

Sprint® Setup Instructions

Quick Start Guide

Check that all these components are in the box:

NOTE: You will also need a working electrical outlet



AIRAVE 4 LTE



Ethernet Cable




External GPS Antenna



Power Supply

Install your AIRAVE 4 LTE

1. Turn the unit to expose the back of the unit.
2. Connect one end of the Ethernet cable to an available LAN port on your broadband connection modem, or to a LAN port on your network. If on network:
 - Open UDP ports 53, 67, 500 and 4500 bi-directionally
 - Contact your IT administrator for assistance
3. Place the other end of the Ethernet cable to the Airave 4 Ethernet port.
4. Connect the external GPS antenna to the GPS connection, under the cap.
5. Plug the power supply cable into the DC port on the back.
6. Place the GPS antenna base on a flat surface next to a closed window.
7. Plug the other end of the power supply into an available electrical outlet.
(We recommend a surge protected outlet)

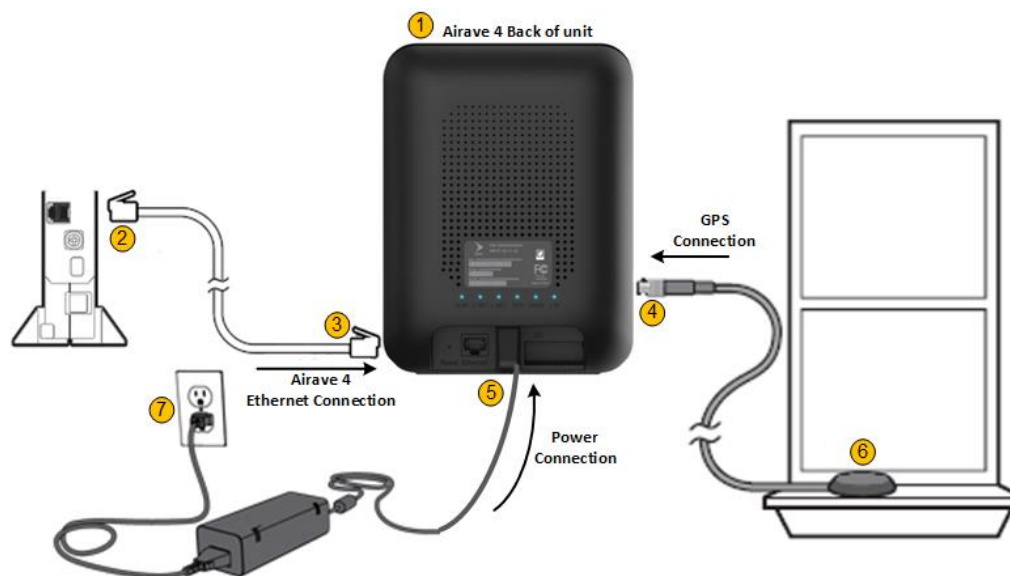

Place the Unit

- In an elevated location, such as the top of a shelf or tall cabinet
- Within 10 to 20 feet of a clear view of the sky
- Within reach of your broadband modem or router
- Within reach of an electrical outlet
- Turn the unit so the front faces into the room and carefully move all cables.

NOTE: There is room for the cables to come from the sides of the unit once it is facing forward.

Quick Start Guide

Begin Self Installation

1. During boot-up the device LEDs will be solid green for a few seconds during initial hardware tests. This takes approximately 8 to 10 seconds.
2. The WAN LED will turn solid green; all other LEDs will be OFF. This takes approximately 2 minutes.
3. The WAN LED will stay solid green; all other LEDs will blink red.
NOTE: Steps 1 through 3 are expected behavior.
4. The C-NET & L-NET LEDs will turn solid green. This will take approximately 15 minutes.

NOTE: If the WAN or NET are solid red after 15 minutes, talk to your IT administrator to diagnose problems with your Internet connection.

Take a Break

Your AIRAVE 4 LTE will go through a self-installation process during which it may download new software images and perform automatic synchronization.

 **This process may take up to 60 minutes**

The unit may restart a couple of times during this process. At the end of this process, all LEDs should be solid Green:

- WAN LED: Indicates successful connection to Internet
- C-NET LED: Indicates successful connection to Sprint's Core Network
- L-NET LED: Indicates successful connection local area network
- GPS LED: Indicates GPS lock achieved
- CDMA LED Indicates CDMA Voice Services available




Troubleshooting

The Reset button is located on the back to the left side of the Ethernet port.

Note: To prevent it being pressed accidentally the Reset button is accessible only by a pin or similar thin object.

- A short press (less than 9 seconds) will initiate a reset of the unit
- A long press (more than 10 seconds) will reset the unit to its factory default

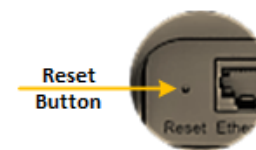

LEDs Behavior

LEDs are used to indicate - WAN, C-NET, L-NET, GPS, CDMA and LTE access.

Connected



Not Connected



Loading



Need Help and Important Information

If you need help with your Sprint AIRAVE 4 LTE contact customer care. By using your AIRAVE 4 LTE, you are accepting the AIRAVE 4 LTE terms and conditions.



ONLINE: sprint.com/airave

- Terms and conditions, FAQs, FCC Statement, technical documentation and more

PHONE: Sprint Customer Care (866-556-7310)



For radiofrequency exposure compliance, this device must be installed and operated to provide a minimum safe distance of at least 20 cm (8 in) from all persons.

