

 Nakamichi

# DRAGON 11.4.6



## Owners Manual






## IMPORTANT SAFETY INSTRUCTIONS

DRAGON is designed and manufactured to operate within defined design limits, and misuse may result in electric shock or fire. To prevent DRAGON from being damaged, the following rules should be observed for its installation, use and maintenance. Please read the following safety instructions before operating DRAGON. Keep these instructions in a safe place for future reference.

- Read, keep and follow all instructions.
- Heed all warnings.
- Do not use DRAGON near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from DRAGON.
- Only use attachments / accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with DRAGON. When a cart is used, use caution when moving the cart / DRAGON combination to avoid injury from tipover.
- Unplug DRAGON during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when DRAGON has been damaged in any way, such as when the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into DRAGON, DRAGON has been exposed to rain or moisture, does not operate normally, or has been dropped.
- To reduce the risk of electric shock or component damage, switch off the power before connecting other components to DRAGON.
- Unplug the power cord before cleaning DRAGON. A damp cloth is sufficient for cleaning. Do not use a liquid or a spray cleaner on DRAGON. Do not use abrasive cleaners.
- Always use the accessories recommended by the manufacturer to ensure compatibility.
- When moving DRAGON from an area of low temperature to an area of high temperature, condensation may form in the housing. Wait before turning on DRAGON to avoid causing fire, electric shock, or component damage.
- Slots and openings in the back and bottom of the cabinet are provided for ventilation. To ensure reliable operation of DRAGON and to protect it from overheating, be sure these openings are not blocked or covered. Do not place DRAGON in a bookcase or cabinet unless proper ventilation is provided.
- Never push any objects into the slots and openings on DRAGON's enclosure. Do not place any objects on the top of DRAGON. Doing so could short circuit parts causing a fire or electric shock. Never spill liquids on DRAGON.
- When connected to a power outlet, power is always flowing into DRAGON. To totally disconnect power, unplug the power cord.
- Do not overload power strips and extension cords. Overloading can result in fire or electric shock.
- The wall socket should be located near DRAGON and be easily accessible.
- Keep DRAGON away from moisture. Do not expose DRAGON to rain or moisture. If water penetrates into DRAGON, unplug the power cord and contact your dealer. Continuous use in this case may result in fire or electric shock.
- Do not use DRAGON if an abnormality occurs. If any smoke or odor becomes apparent, unplug the power cord and contact your dealer immediately. Do not try to repair DRAGON yourself.
- Avoid using dropped or damaged appliances. If DRAGON is dropped and the housing is damaged, the internal components may function abnormally. Unplug the power cord immediately and contact your dealer for repair.
- Continued use of DRAGON may cause fire or electric shock.
- Do not install DRAGON in an area with heavy dust or high humidity.
- Operating DRAGON in environments with heavy dust or high humidity may cause fire or electric shock.
- Ensure that the power cord and any other cables are unplugged before moving DRAGON.
- When unplugging DRAGON, hold the power plug, not the cord. Pulling on the power cord may damage the wires inside the cord and cause fire or electric shock. When DRAGON will not be used for an extended period of time, unplug the power cord.
- To reduce risk of electric shock, do not touch the connector with wet hands.
- Insert the remote control batteries in accordance with instructions.
- Incorrect polarity may cause the battery to leak which can damage the remote control or injure the operator.
- The marking label of the subwoofer was located on the external bottom enclosure of the product.
- The equipment shall be used at maximum 95F ambient temperature. See the important note and rating located on the back of the unit.
- **WARNING** - This equipment is not waterproof. To prevent a fire or shock hazard, do not place any container filled with liquid near the equipment (such as a vase or flower pot) or expose it to dripping, splashing, rain or moisture.
- To prevent injury, DRAGON must be securely attached to the floor / wall in accordance with the installation instructions.
- **CAUTION** - Danger of explosion or fire if batteries are mistreated.
- Replace only with the same or specified type.
- Do not leave the batteries exposed to direct sunlight for a long period of time with doors and windows closed. Do not disassemble the batteries or dispose of it in fire.
- Where the MAINS plug or appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

When purchasing power supply for use with the soundbar, choose an appropriate product that is safety approved or certified. A Listed power supply that carries a mark by on the Nationally Recognized Testing Laboratories (For example, the "UL Listed" mark).

**WARNING:** To reduce the risk of fire or electric shock, do not expose DRAGON to rain or moisture.

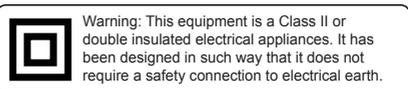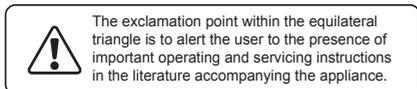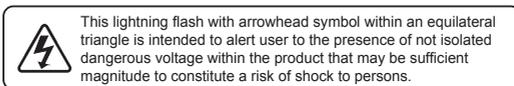

# Table of Contents

<b>1. Meet DRAGON</b>		
Package Contents	5	
Controls & Connections	6	
<b>2. Set Up</b>		
Main Unit and Subwoofers	12	
Surround Speakers	13	
PerfectHeight Mechanism	14	
<b>3. Connect</b>		
Power on DRAGON	17	
Set-up HDMI ARC/eARC with your TV	18	
Recommended Device Audio Settings	21	
Configure your TV for 4K120/8K60	22	
Video Passthrough		
Using Bluetooth® Wireless Audio	23	
<b>4. Control</b>		
Remote Functions	25	
Surround, EQ & Night Mode (DRC)	26	
<b>5. Personalize</b>		
BASS and Treble	32	
Channel Configuration	33	
Subwoofer Adjustments	34	
Channel Volume Adjustments	35	
Height Channel Volume	36	
Adaptive Height Dispersion	37	
Save your Favorite Settings	38	
Using the INFO button	39	
<b>6. On-Screen Display</b>		
Using the OSD	42	
Audio Settings	43	
Video Settings	44	
Calibration Settings	45	
System Settings	49	
<b>9. Surround and Diagnostic Demo Tracks</b>		52
<b>10. Mobile Application</b>		
Installation		55
Functions		
<b>11. Firmware Upgrade</b>		
Check the Firmware Version		57
Perform a Firmware Upgrade		58
<b>12. Reconnect Components</b>		
Check Wireless Speakers Connection Status		60
Re-pairing Subwoofers		61
Re-pairing Surround Speakers		63
Re-pairing Bluetooth Remote Control		65
<b>13. Product Information</b>		
Specifications		67
Glossary		70
Legal and Compliance		72
<b>14. Support</b>		
Warranty Information		74
Sound Optimization Tips		76
Help & Troubleshooting		77

Learn more about DRAGON's advanced functions by scanning the QR Code or visiting: [bit.ly/dragon-advanced-guide](http://bit.ly/dragon-advanced-guide)


3.3 CONNECTING YOUR TV VIA DIGITAL OPTICAL / AUX IN  
7. EXTERNAL AUDIO OUTPUT  
8. INTEGRATE DRAGON WITH LEARNING UNIVERSAL REMOTES




SECTION 1

# MEET DRAGON


# 1.1 Package Contents

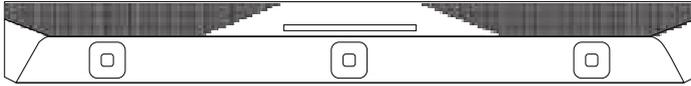

DRAGON main unit x 1

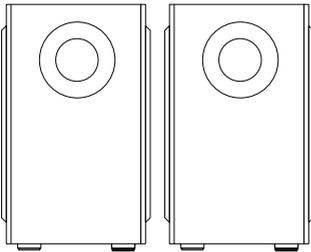

Dual 8" Wireless Subwoofers x 2

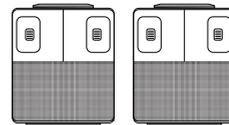

Omni-Motion  
Reference Surrounds x 2



Remote Control w/  
Batteries x 1



HDMI 2.1 Cable x 1  
(Length: 6.5 ft)



Surround Speaker Power Cables x 2  
Subwoofer Power Cables x 2  
(Length: 10 ft each)




Main Unit  
Power Cable x 1  
(Length: 5 ft)



Main Unit Power Adapter x 1  
(Length: 5 ft)

# 1.2 Controls & Connections

## A. Main Unit

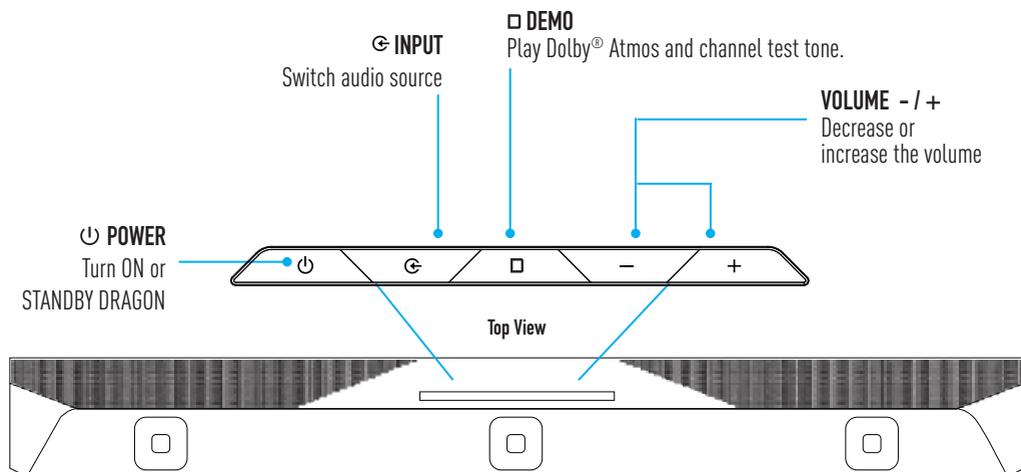

Top View



Bottom View

### BEST

<b>HDMI IN</b> [2] / [3] / [4]:	HDMI 2.1 input*
<b>HDMI Out (TV)</b> [1]:	HDMI 2.1 output with ARC/eARC*


<b>Aux Out</b>	3.5mm stereo analog audio output
<b>Opt Out</b>	Optical audio output
<b>Aux In</b>	3.5mm stereo analog audio input
<b>Opt In</b>	Optical audio input
<b>USB</b>	For firmware upgrade only
<b>DC IN</b>	Power Supply

\*All the HDMI inputs and output support 4K120, 8K60, Dolby Vision, 4K HDR Passthrough, HDCP 2.3, VRR, ALLM, QFT


# 1.2 Controls & Connections

## B. Quad Subwoofers

### Back of Subwoofers

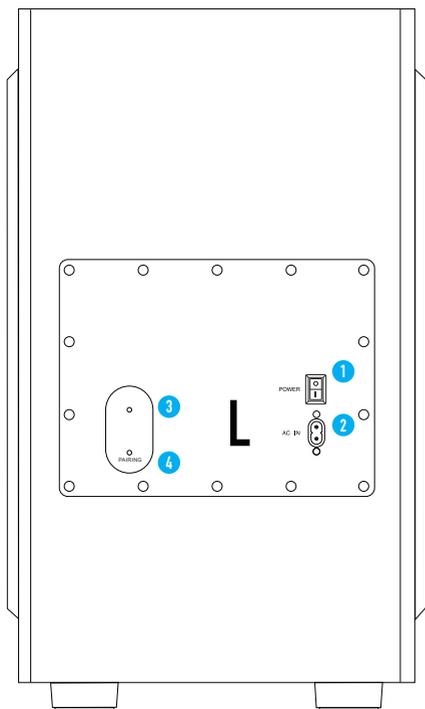

Left Subwoofer

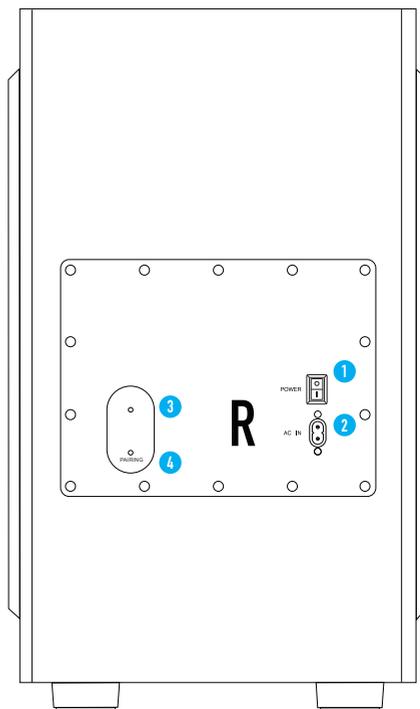


Right Subwoofer

- 1 Power Switch
- 2 Power Port
- 3 Pairing Status Indicator
- 4 Pairing Button

# 1.2 Controls & Connections


## C. Omni-Motion Reference Surrounds

Back of Surround Speakers

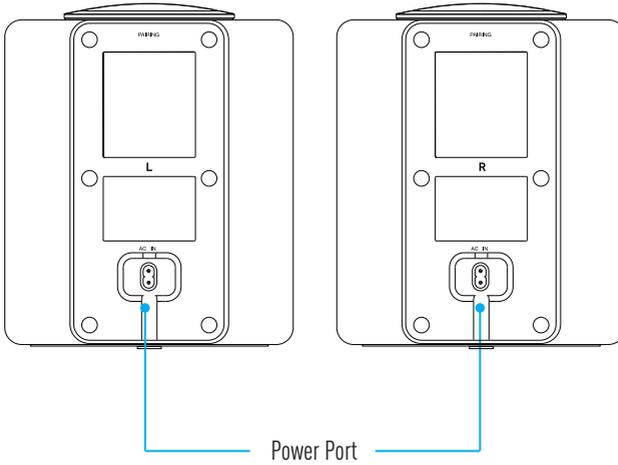

Top of Surround Speaker

Pairing Button with Status Indicator

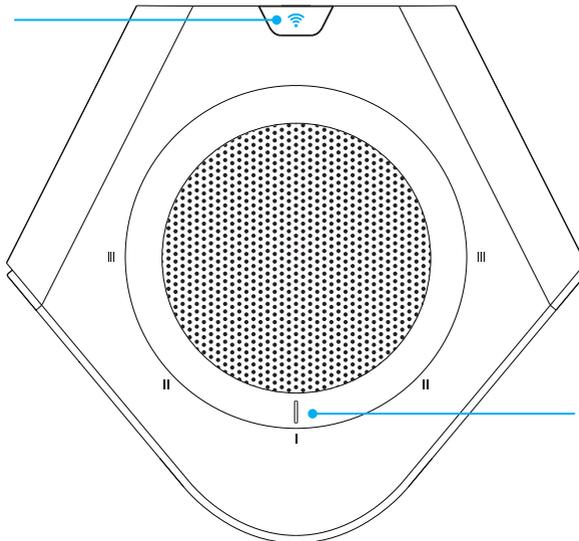

PerfectHeight Mechanism (Pg 14)


# 1.2 Controls & Connections

## D. Remote Control

Insert Batteries before using the Remote Control (AAA Batteries x 2)

1. Slide the back cover in the direction of the arrow until it is completely removed.
2. Insert 2 x AAA Batteries and gently push the cover back into place.

### Back of Remote Control

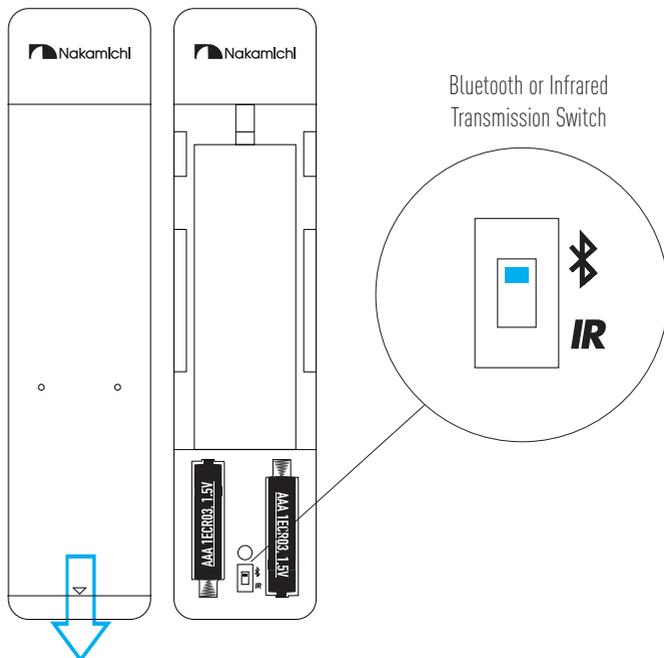

### Bluetooth or Infrared Transmission Switch

Switch the remote control's transmission mode with DRAGON between Bluetooth or Infrared.

-  Bluetooth: The default mode (recommended). Allows remote control to communicate with DRAGON without line of sight with main unit
- Infrared: Use only when programming a universal remote to work with DRAGON

Once TV HDMI connection is established, use your TV / content device's remote control to power ON the entire system. Always use your TV's remote control to power OFF the entire system.

Infrared Transmission Mode allows Learning Universal Remotes to control DRAGON. Scan QR code to access Chapter 8 for more info.





# 1.2 Controls & Connections

## E. Optional Accessories

Pair DRAGON's main unit and surround speakers with optional wall mounting accessories from Nakamichi.

### Wall Mounts (Sold Separately)

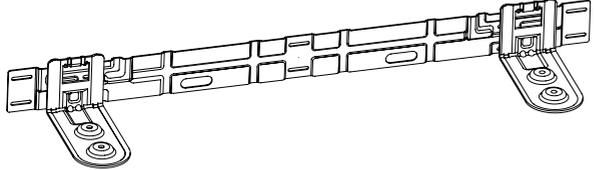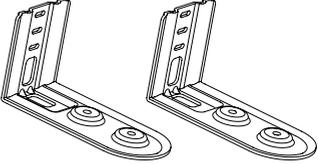 <p>Main Unit Wall Mount Bracket</p>	 <p>Surround Speaker Wall Mount Bracket</p>
<p>Purchase your main unit and surround speaker wall mount brackets here: <a href="https://bit.ly/dragon-wall-mount">bit.ly/dragon-wall-mount</a></p> 	


 If you are unfamiliar with power tools, installation, or the layout of electrical wiring in the walls of your home, consult a professional installer.

### Speaker Stands (Sold Separately)

Nakamichi recommends using **DRAGON** speaker stands for best fit with the surround speakers.



Purchase your Speaker Stands here:  
[bit.ly/dragon-speaker-stands](https://bit.ly/dragon-speaker-stands)

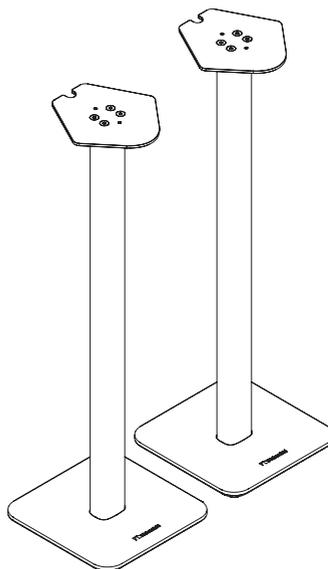

Optional Nakamichi DRAGON Surround Speakers stands.

SECTION 2

# SET UP

# 2.1 Main Unit & Subwoofers

Wireless subwoofers and surround speakers provide ultimate placement flexibility that suits your listening environment.

 Refer to the back of each subwoofer to check if it is the Left or Right subwoofer.

## BEST

### i. Front corners of the room (Recommended)



Allows bass frequencies to blend with front channels.  
Corner placement maximizes bass performance.


### ii. Center




If placement (i) is not possible, move the subwoofers to other locations along the front stage, or closer to the center of the room.

## BETTER

### iii. Diagonal

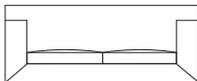

### iv. Back of Room

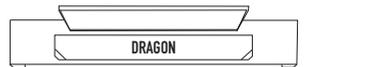



Recommended if placement (i) or (ii) are not possible in your room.

-  DRAGON's main unit can be wall mounted with our optional, custom designed wall bracket. See Section 1.2E.
- Do not block the vents at the rear and bottom of the Main Unit. These vents are essential for performance. Leave a minimum of an inch of gap around these ventilation holes.
- Wireless antennas are built into the main unit and wireless subwoofers. Keep all speaker units away from water and metal objects.
- For optimal bass performance, leave a few inches of gap around the subwoofer ports and grilles.
- If bass performance seems too strong/overpowering, or you have a room with uneven wall distances, refer to section 14.2, pg 76 to optimize DRAGON for your room acoustics.

## 2.2 Surround Speakers



Refer to the back of each surround speaker to check if it is the Left or Right surround speaker.

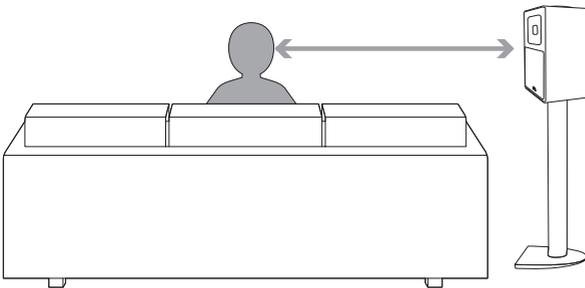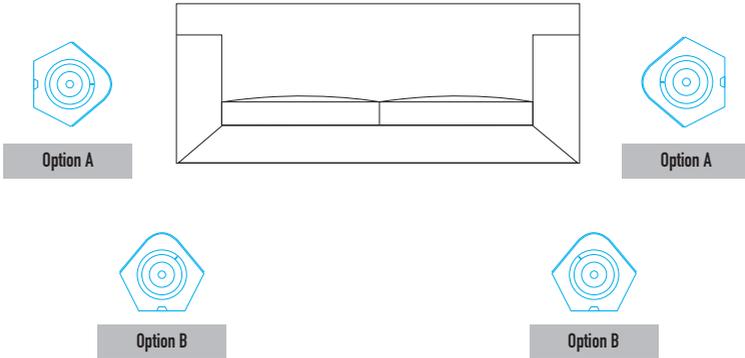

**Note:** Illustration is not to scale. Speaker stands are not included.



- The bottom speaker driver of the surround speakers should be at ear level.
- For optimal performance, position the surround speaker such that the back surrounds are pointed directly at the listener's seating area.
- Wireless antennas are built into each wireless speaker. Keep all speakers away from fish tanks, water and metal objects.

Purchase optional speaker stands and wall mounts customized for DRAGON here:  
[bit.ly/dragon-speaker-stands](https://bit.ly/dragon-speaker-stands)




## 2.3 PerfectHeight Mechanism

### A. Setting PerfectHeight

The PerfectHeight Mechanism is a patented innovation developed by Nakamichi that allows height effects to be directed towards the listener, regardless of placement, room shape or seating position.


#### Setting PerfectHeight™

Turn the rotatable PerfectHeight Mechanism such that the position marker points towards the listening area.

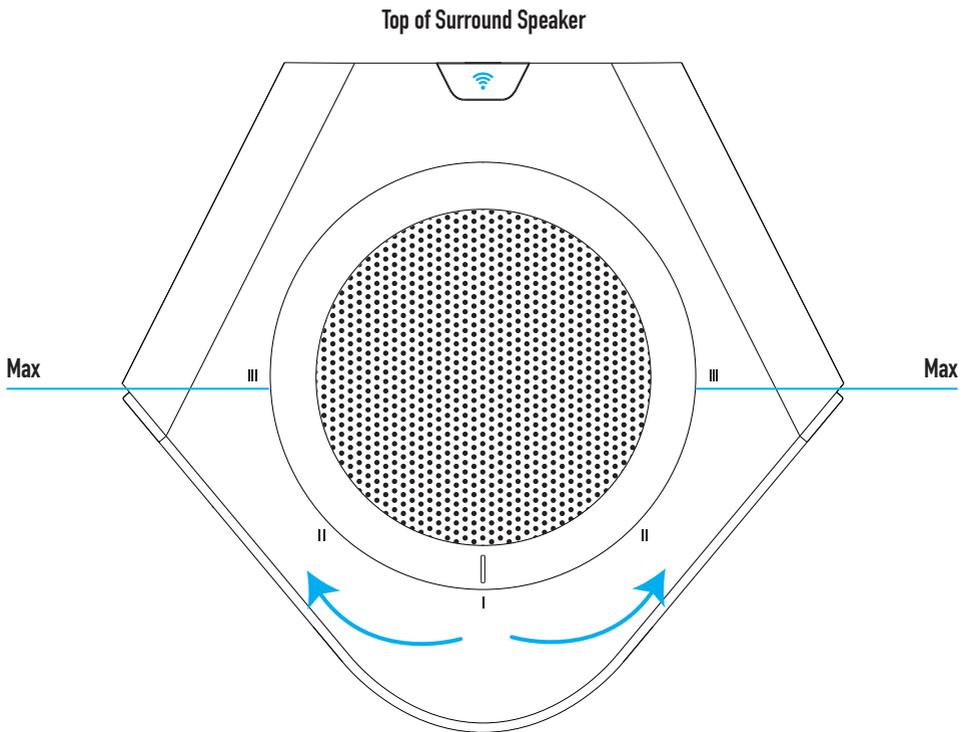

## 2.3 PerfectHeight Mechanism

### B. Reference Placement

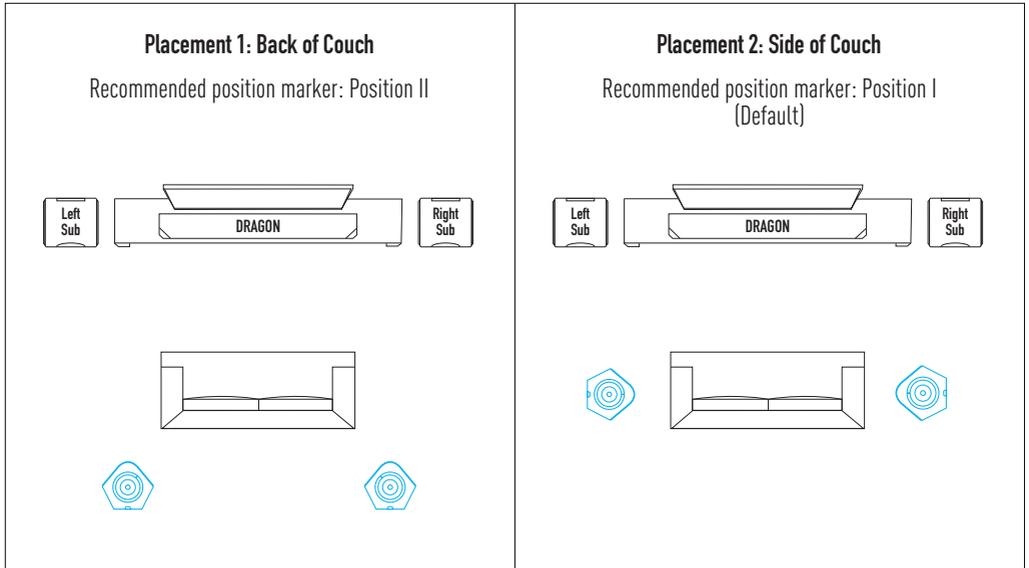

 The PerfectHeight Mechanism is designed to be rotated **up to 90°** from its default position. Do not force or twist the mechanism beyond its designed range of movement.


 Does your room have uneven ceilings? Optimize height channel balance by referring to section 14.2, pg 77.

SECTION 3

# CONNECT

# 3.1 Power On Dragon


1. Connect power to the subwoofer. Toggle the power switch to "ON" position.

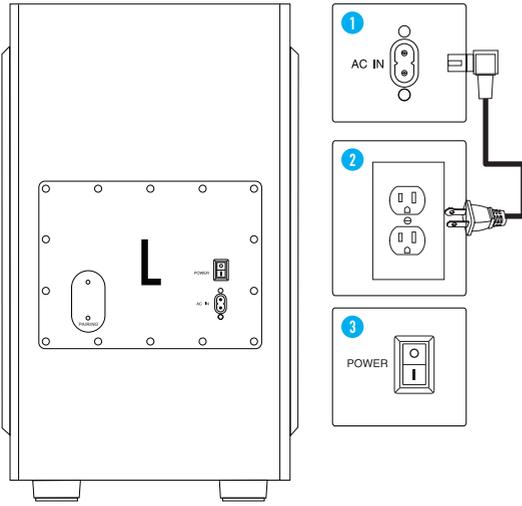

(Applies for right subwoofer)


2. Connect power to the surround speakers.

Note: No power switch for surround speakers.

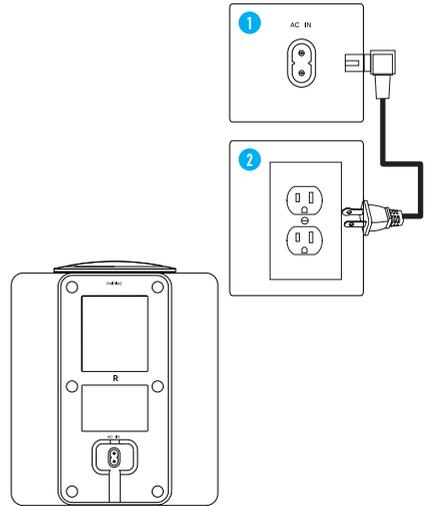

(Applies for left surround speaker)

3. Connect power to the main unit (Bottom)

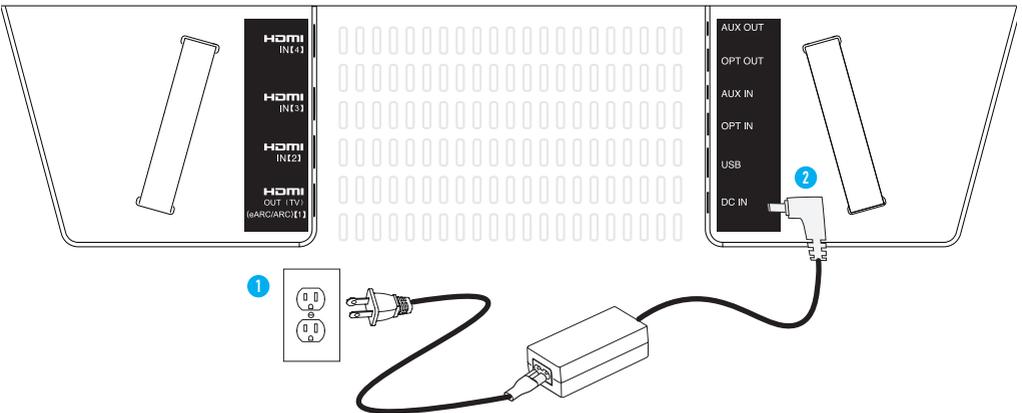


4. The Subwoofer and Surround Speakers are automatically connected when the main unit is turned on.

 Once the main unit is powered off, the subwoofers and surround speakers will go into standby mode. You do not need to turn off the subwoofers and surround speakers after each use.

## 3.2 Set-up HDMI ARC/eARC with your TV

### A. Establishing a Connection

Using the **Nakamichi HDMI 2.1 cable**, connect **DRAGON** to your **TV's HDMI IN (ARC/eARC)** port.

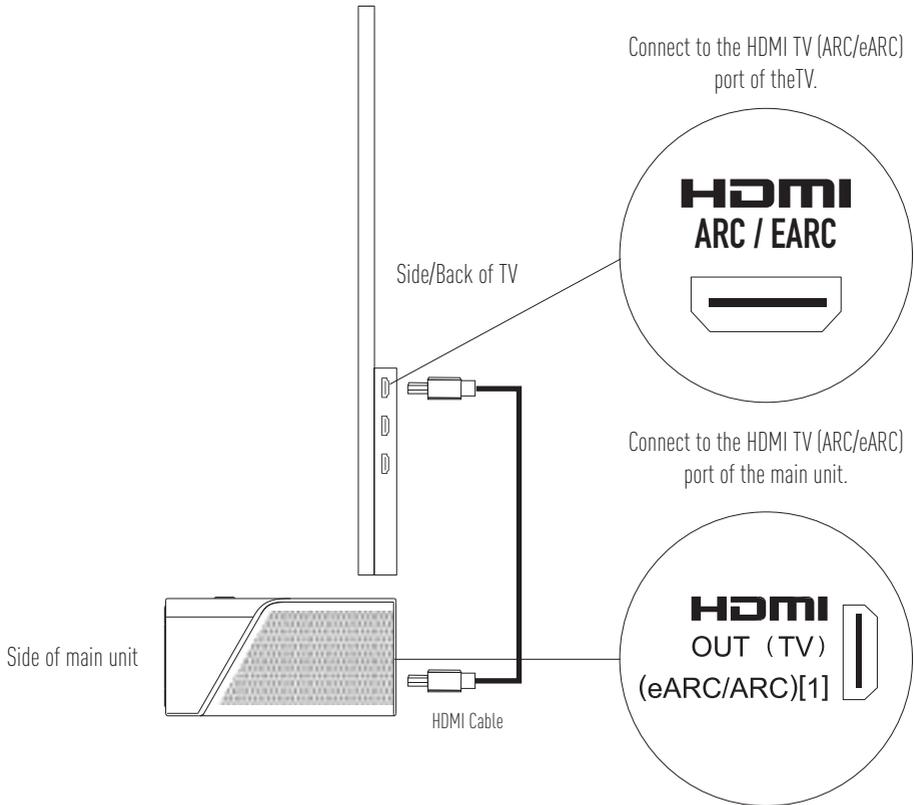

 HDMI Audio Return Channel (ARC)/enhanced Audio Return Channel (eARC) offers two-way communication between your audio system and TV over a single HDMI connection. Essentially, HDMI ARC/eARC enables a single TV's HDMI port to function as both a video input and audio output.

 eARC supports advanced audio formats, including Dolby Atmos TrueHD and Dolby Atmos Digital Plus™.

 **Do not connect DRAGON to a TV via Bluetooth.** Bluetooth audio connections are unable to deliver surround sound to sound systems and will degrade overall sound quality.

# 3.2 Set-up HDMI ARC/eARC with your TV

## B. Audio Settings for TV

Configure your TV's audio settings for optimal surround sound output to DRAGON.

### Setting the audio output:

- Go to Settings > Sound.
- Select Speaker Settings. Set to HDMI Audio Out.
- For eARC equipped TVs, check your TV settings and turn on eARC mode if available. This might be found under the advanced/expert options of your TV.

### Setting the audio format:

- Go to Settings > Sound > Additional Settings.
- Select Speaker Audio Format.
- Set as Dolby Digital / DTS / Bitstream (whichever is available).



For brand specific TV audio settings, scan QR code or visit: [bit.ly/dragon-best-sound](https://bit.ly/dragon-best-sound)

## C. Set Up Control Communication Between DRAGON and TV

CEC is an HDMI protocol that allows the TV to control DRAGON's functions (e.g. power, volume, source selection) via a single TV remote.

### Requirements

1. Your TV is CEC enabled. (Check with your TV manufacturer for more information)
2. DRAGON and TV are connected via a HDMI cable through the ARC/eARC ports.

### Enabling CEC

- From the TV's SYSTEM menu, enable CEC<sup>^</sup> and ARC<sup>^</sup> functions.
- From the CEC menu, select Device Discovery to register DRAGON with the TV.
- Enable CEC for TV only. Do not enable CEC for other device sources or inputs may switch randomly.
- To disable CEC on DRAGON, see pg 44 (Disabling HDMI CEC One Touch Play).

\* Steps may differ based on TV brand. Refer to your TV's user manual for more information.

<sup>^</sup> HDMI-CEC TV trade names: Samsung (Anynet+), LG (SIMPLINK), Vizio (CEC), Sony (Bravia Sync), TCL (CEC), Hisense (CEC), Philips (EasyLink), Sharp (Aquaos Link), Panasonic (HDAVI Control / EZ Sync / Viera Link). Naming may differ based on TV brand. Refer to your TV's user manual for more information.

Visit [bit.ly/dragon-best-sound](https://bit.ly/dragon-best-sound) for expanded list of TVs' audio settings instructions. Visit [bit.ly/dragon-hdmi-cec-settings](https://bit.ly/dragon-hdmi-cec-settings) or scan QR Code for HDMI-CEC setup instructions by device.

If your devices are not listed on our website, please check with the device manufacturer's manual.




# 3.2 Set-up HDMI ARC/eARC with your TV

## D. Connecting Content Devices

Use our Perfect Device Matching Tool to create a custom setup guide based on your TV and devices. Scan QR code or visit [bit.ly/dragon-perfect-device-matching](https://bit.ly/dragon-perfect-device-matching)



Using a TV without HDMI eARC/ARC? Scan this QR code to learn how to connect your TV to DRAGON. [bit.ly/dragon-optical](https://bit.ly/dragon-optical)

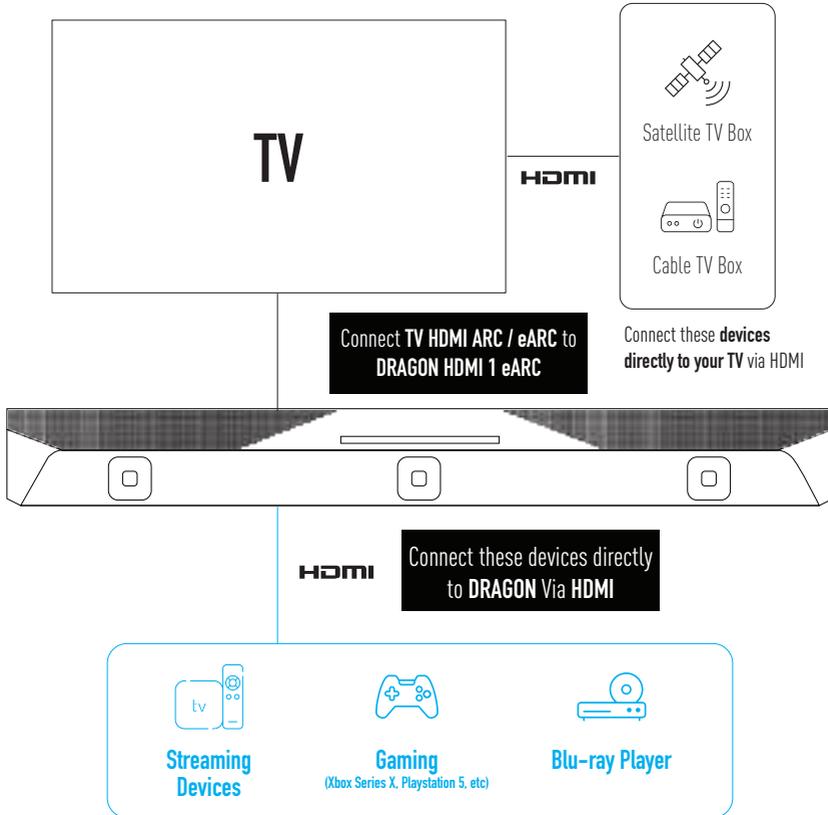

 HDMI cables transmit both audio and video. To view video from devices connected to the audio system, turn DRAGON on, then set the audio system input to HDMI 2, 3 or 4. Set your TV input to the HDMI ARC / eARC port which DRAGON is connected to.

Switch the DRAGON's source to TV when playing from the TV's built in streaming apps, or audio from devices connected to the TV. Audio is passthrough using TV's ARC/eARC connection. Dolby Atmos and DTS:X audio are not supported on ARC connection.

Connect devices with the same HDCP standards for seamless switching between sources. If there are devices with different HDCP standards, connect all HDCP 2.3 devices to DRAGON while connecting HDCP 1.4 devices to TV to avoid audio and video instability.

# 3.4 Recommended Device Audio Settings

As the configurable settings for devices are always evolving, please scan the QR codes below to view our recommended settings for each device.

Device	QR Code	Device	QR Code
Apple TV		Amazon Fire Stick / Fire Cube Streaming Devices	
Roku Premiere		Roku Ultra 4K	
Nvidia SHIELD PRO 4K		PlayStation 5	
XBOX Series X		Nintendo Switch	
Sony Blu-ray Player		DIRECTV™	
DISH Satellite TV Box		Xfinity TV Box	

For the other devices, scan the QR code or visit:  
[bit.ly/dragon-best-sound](https://bit.ly/dragon-best-sound)



# 3.5 Configure your TV for 4K120/8K60 Video Passthrough

Do this only if a device that supports 4K120/8K60 is connected to DRAGON.

Tip: 4K120Hz/8K60 video passthrough typically needs to be activated manually through your TV's video settings. Visit our Helpdesk to discover and apply optimized settings for your TV.



## General guide to enable 4K120/8K60 video passthrough on your TV\*

- Go to Settings > Video.
- Select External Inputs > HDMI Signal Format.
- For the HDMI eARC port which DRAGON is connected to, either change the setting to "HDMI 2.1" or "Enhanced". Alternatively, look for "Game Mode" on the TV and switch it to "Auto/On".

\*Feature is only available on select TVs that support 4K120/8K60 input.

# 3.6 Using Bluetooth® Wireless Audio

## A. Bluetooth 5.0 with APTX™ HD

Stream music wirelessly from your favorite devices via Bluetooth (📶/BT) with Qualcomm aptX™ HD. aptX™ HD enables Bluetooth to transmit audio at a maximum bitrate up to 1.8x higher than standard Bluetooth codecs, enabling 24-bit high-resolution audio to be transmitted wirelessly.

Bluetooth 5.0 also brings meaningful improvements to wireless stability, allowing your favorite devices to stream audio content to DRAGON at further distances than previous Bluetooth protocols.

**Best Transmission:** If you hear any break-up or disconnect while streaming music from your device, move the source device closer to DRAGON.

**Note:** DRAGON will automatically be switched to ALL CHANNEL STEREO when in Bluetooth mode.

## B. Bluetooth Connection

**Switch DRAGON to Bluetooth mode:**

Press the Bluetooth (📶) button once.

**Pairing DRAGON with a Bluetooth device:**

1. Set your Bluetooth device into Bluetooth pairing mode (to make it discoverable).
2. Press and hold the Bluetooth (📶) button on the remote control until the LED display on the main unit shows "PAIRING".
3. "BT" will start flashing on DRAGON's display. You can now search for DRAGON on your Bluetooth device, and pair/connect to it. For more information, refer to the user documentation of your device. "BT" will stop flashing and display constantly on the main unit display when successful connection has been established.
4. Play audio from your Bluetooth device. Volume can be controlled via your source device or DRAGON's remote control.

Note: Whenever DRAGON is switched to Bluetooth mode, it will attempt to reconnect with the last device it was paired to.

**To disconnect DRAGON from a paired Bluetooth device:**

1. Press and hold the 📶 button on the remote control until "PAIRING" is shown on DRAGON's LED display.
2. Then, "BT" will start flashing on DRAGON's display. DRAGON is now ready to pair with a new device.



DRAGON is not equipped with a microphone, so it cannot operate as a hands-free device.



Reduce the volume levels on DRAGON and your devices before playing audio content. High volume levels can damage your hearing.

To pair DRAGON with voice assistants like Google Home or Amazon Alexa, scan QR code on the right or visit the link:  
**[bit.ly/dragon-va-pairing](https://bit.ly/dragon-va-pairing)**



**SECTION 4**

# **CONTROL**

# 4.1 Remote Functions

## A. Remote Functions at a Glance

### Power On / Off DRAGON

After setting up a HDMI connection with your TV, always power on DRAGON by using your TV or content device's remote control power ON button. Always use your TV's remote control to power OFF the entire system.

**OUTPUT:** Plays audio content using external devices connected to DRAGON's Optical/Aux Out. Dragon will be muted. (Chapter 10)

Press "ALL CH STEREO" when listening to stereo content (e.g. music).

**All Channel Stereo (Recommended):** Upmixes stereo playback to surround speakers. Best for music, YouTube™ and content with minimal rear surround effects.

**Stereo Only:** Enables playback with main unit + subwoofers only (no surround)

### ■ INFO button and Navigation:

Displays essential info on TV screen and DRAGON's LED display. (pg 39)


**HOME:** Access On-Screen Display (OSD) Settings. Use     to navigate OSD menu. (pg 42).

**When OSD is not active:** Bluetooth playback Controls



### Favorite Settings 1 and 2

Save and recall personalized settings. See pg 38 for details

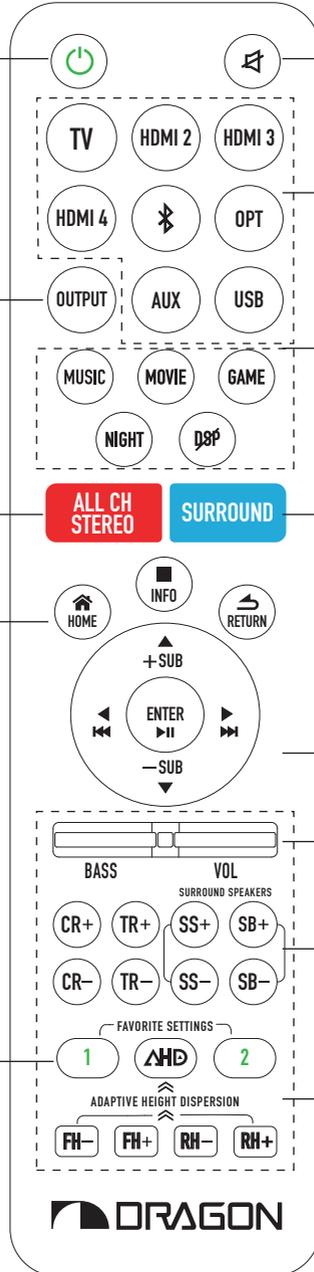

Mute or Unmute DRAGON 

### Input Sources

Press "TV" to listen to audio from devices connected to TV or streaming apps built into TV (via ARC / eARC).

**For other devices connected to DRAGON, press "HDMI 2 / 3 / 4 / Bluetooth / Optical / Aux"**

### Equalizer & Night Mode

Enjoy audio optimized for various contents. (Pg 29 (Section 4.2B))

Press SURROUND when watching Dolby, DTS or Multi-Ch PCM content for a full surround with height experience.

 **DOLBY Surround:** For Dolby/LPCM/PCM audio

 **DTS Neural:X:** For DTS audio

**STUDIO:** 4 side surround speakers on the main unit augment the left and right channels for strong front presence.

**DTS DIRECT / NATIVE:** Directly decodes 2.1 / 5.1 / 7.1 channel without upmixing. (See pg 27 (Section 4.2B) for more details)

### Subwoofers, Tonal & Surround Adjustments

Enable more ( +SUB) or less ( -SUB) subwoofers. Default = Quad Enabled.

**Bass, Master Volume:** Push the buttons up or down to adjust the levels.

Center (CR), Treble (TR), Surround Side (SS), Surround Back (SB), Front Height (FH) and Rear Height (RH) Channel Volume. See Chapter 5 (pg 33) for more details

**AHD:** Configure DRAGON's proprietary technology for enhanced height effects. See pg 36 for details


For expanded remote control guide, scan QR code or visit: [bit.ly/dragon-remote-guide](https://bit.ly/dragon-remote-guide)

# 4.1 Remote Functions

## B. Selecting Different Input Sources

Press one of the input source buttons to select an input source.  
Each input source will be displayed on the main unit's front LED display.

When viewing content from HDMI devices connected to DRAGON, the on-screen display (OSD) will also show the selected input.

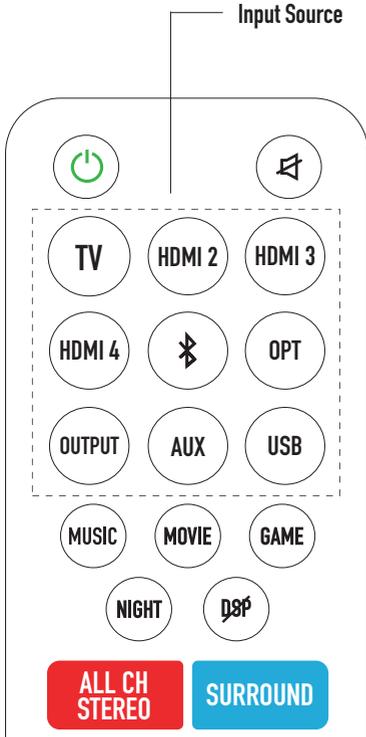

Button	LED Display
TV	<b>TV</b>
HDMI 2	<b>HDMI 2</b> (Also shown on OSD)
HDMI 3	<b>HDMI 3</b> (Also shown on OSD)
HDMI 4	<b>HDMI 4</b> (Also shown on OSD)
OPT (Optical)	<b>OPTICAL</b>
Bluetooth	<b>BT</b>
AUX (Auxiliary / 3.5mm Stereo input)	<b>AUX</b>

# 4.2 Surround, EQ & Night Mode (DRC)

## A. Surround Mode

Channel mapping / upmixing is essential because most content is not encoded in 11.4.6 channels. DRAGON utilizes different channel mapping methods to optimize your listening experience. Dolby and DTS decode content with their respective proprietary upmixing technologies to optimize surround performance.



**SURROUND** Button

**Dolby Upmixing (for Dolby Digital / Dolby Digital Plus / Dolby TrueHD / Dolby Atmos and LPCM 7.1 / LPCM 5.1 / PCM content)**

Upmixing	Description
<b>Dolby Surround (Default)</b>	<p>Dolby technology will upmix audio content to all audio channels with vertical surround effects.</p> <p style="text-align: center;"><b>DOLBY SURROUND</b></p>
<b>Native</b>	Dolby/PCM/LPCM content are directly decoded without audio upmixing.

**DTS Upmixing (for DTS / DTS-HD / DTS-HD MA / DTS:X content)**


Note: DTS Modes cannot be selected when Dolby or PCM content is playing.

<b>DTS Neural:X (Default)</b>	<p>DTS Neural:X technology will upmix DTS encoded audio content to all audio channels with vertical surround effects.</p> <p>DTS:X content will be decoded and upmixed to DTS:X PRO.</p> <p style="text-align: center;"><b>DTS NEURAL:X</b></p>
<b>DTS Direct / Native</b>	DTS content are directly decoded without audio upmixing.



# 4.2 Surround, EQ & Night Mode (DRC)

## A. Surround Mode

### Studio Mode

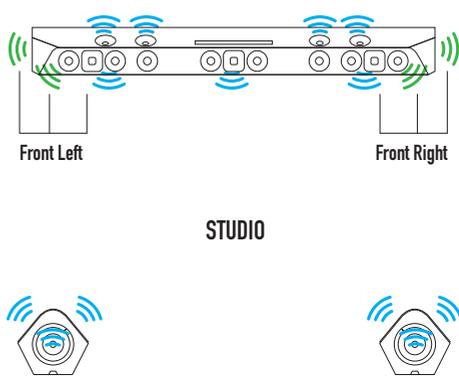
<p><b>Studio</b></p>	<p>Studio mode uses the same channel upmixing fundamentals as Dolby Surround and DTS Neural:X.</p> <p>The only difference is that the <b>side surround speakers</b> in the main unit are repurposed into Left and Right channels. In this mode, the Left and Right channels are powered by 4 speaker drivers and an AMT tweeter on each side, significantly enhancing the front soundstage presence.</p>	 <p>The diagram shows a top-down view of a main unit with two sets of speakers labeled 'Front Left' and 'Front Right'. Each set includes four drivers and an AMT tweeter. Below the main unit, two separate speaker icons are shown, each with four drivers and an AMT tweeter, representing the repurposed side surround speakers.</p> <p><b>STUDIO</b></p>
----------------------	--	--

**ALL CH STEREO** Button
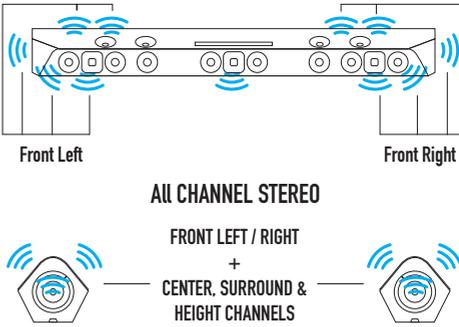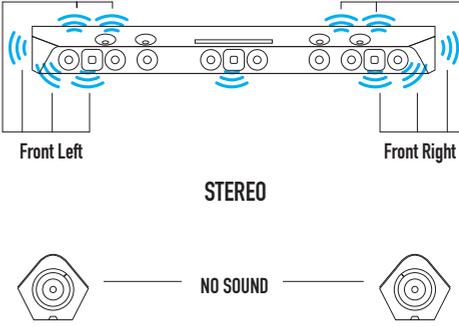
<p><b>All Channel Stereo</b></p>	<p>Left, Right and Center channel signals (if available) are upmixed and sent to the surround speakers to boost rear surround output.</p>	 <p>The diagram shows the main unit with 'Front Left' and 'Front Right' speaker sets. Below, two speaker icons are shown with the text 'FRONT LEFT / RIGHT + CENTER, SURROUND &amp; HEIGHT CHANNELS' between them, indicating that all channels are upmixed to these speakers.</p> <p><b>ALL CHANNEL STEREO</b></p> <p>FRONT LEFT / RIGHT + CENTER, SURROUND &amp; HEIGHT CHANNELS</p>
<p><b>Stereo</b></p>	<p>Enables stereo playback using all speakers in the main unit.</p>	 <p>The diagram shows the main unit with 'Front Left' and 'Front Right' speaker sets. Below, two speaker icons are shown with the text 'NO SOUND' between them, indicating that no sound is sent to these external speakers.</p> <p><b>STEREO</b></p> <p>NO SOUND</p>

# 4.2 Surround, EQ & Night Mode (DRC)

## B. Equalizer (Audio Presets and Night Mode)

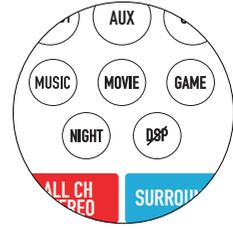


### EQ (EQUALIZER)

Press these EQ buttons on your remote to select your desired EQ settings. The system will remember the last setting.

Button	Equalizer Mode (Shown on Display/OSD)	Description
Music  (Default: Music 1)	Music 1	Front-row concert listening experience. Enjoy maximum punch and sound pressure level (loudness).
	Music 2	Optimizes between sound pressure level (loudness) and dynamic range.
	Music 3	Prioritize music details and dynamic range over volume. More vibrant, spacious and natural sounding.
Movie  (Default: Movie 2)	Movie 1	Experience a thrilling environment that puts you in the center of the action. Enjoy maximum intensity and sound pressure level (loudness).
	Movie 2	Optimizes between sound pressure level (loudness) and dynamic range. Feel greater immersion, depth and clarity.
	Movie 3	Prioritize movie details and dynamic range over volume. More vibrant, spacious and natural sounding.
Game	Game	Experience enhanced depth and spaciousness from surround sound effects of all game genres.
	News	Feel like you are seated at the front row of a live talk show. Hear crystal clear dialog.
	Sports	Experience the energetic environment of live sports broadcasts. Hear the commentator's voice take center stage, while sounds that fill the stadium surround you.
DSP OFF	DSP OFF	Audio playback without using any predefined Nakamichi EQ setting.

# 4.2 Surround, EQ & Night Mode (DRC)

## B. Equalizer (Audio Presets and Night Mode)

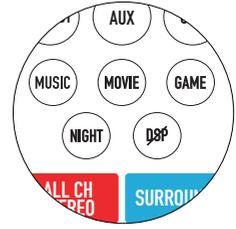

### EQ (EQUALIZER)

Press these EQ buttons on your remote to select your desired EQ settings. The system will remember the last setting.

### Night Mode (Dynamic Range Compression)

This function allows you to retain a theater-like environment at low volume levels. When watching a movie late at night, you will be able to hear the dialog clearly even at a low volume level. Available with DTS and DOLBY encoded content on HDMI, HDMI ARC / eARC and Optical inputs.


Button	Equalizer Mode (Shown on Display/OSD)	Description
Night	NIGHT OFF	Volume normalization OFF (default).
	NIGHT 50%	50% of volume normalization.
	NIGHT 100%	100% of volume normalization, recommended for nighttime listening.
	NIGHT AUTO	Automatic contextual volume normalization (DOLBY content only).



SECTION 5

# PERSONALIZE

# 5.1 BASS and Treble


DRAGON comes with a variety of tonal adjustments that allow you to personalize the listening experience. Tone controls can be adjusted from 1 to 10 steps.

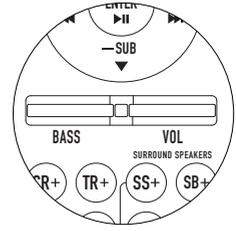

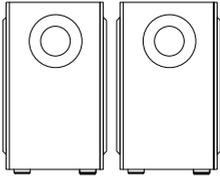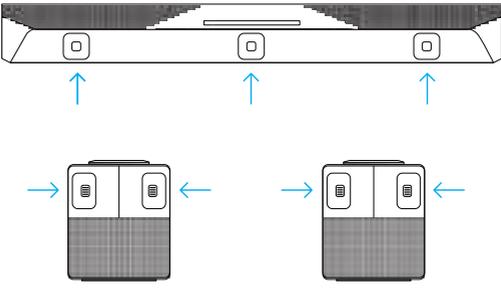
Button	OSD Display	Description	LED Display
BASS	BASS__	<p>Adjusts the overall volume of low-frequency notes.</p> <p>Toggle the button up or down to adjust the level.</p> 	BASS__
TR +/-	Treble__	<p>Adjusts the volume of high-frequency notes.</p> 	TREBLE__

# 5.2 Channel Configuration



## Main Unit

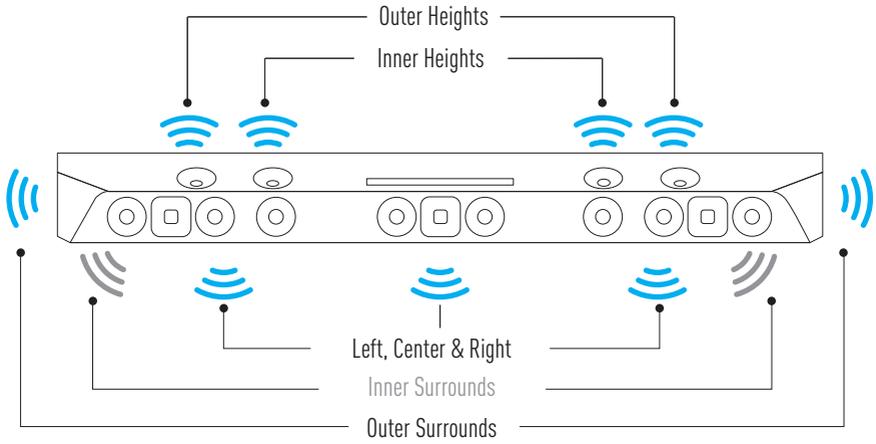

### Left Subwoofer

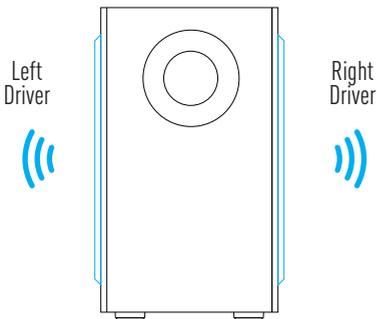


### Right Subwoofer

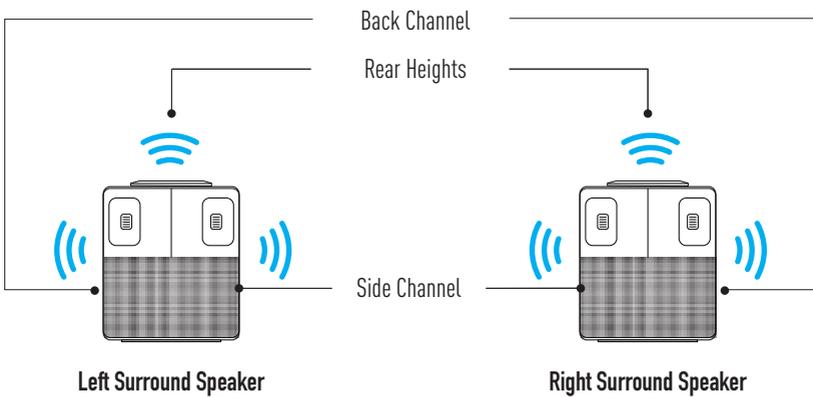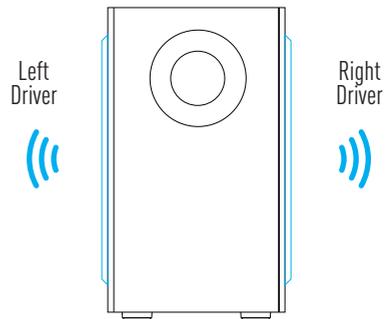

# 5.3 Subwoofer Adjustments

Enable/Disable a number of subwoofer drivers to suit your listening preferences. Press ▲/▼ on the remote when the OSD is not being displayed.

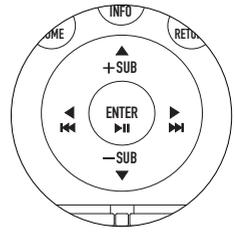


## Settings Available

QUAD SUBS		TRIPLE SUBS	
DUAL SUBS		SINGLE SUB	
Left Subwoofer	Right Subwoofer	Left Subwoofer	Right Subwoofer


# 5.4 Channel Volume Adjustments

Channel Volume controls can be adjusted from 1 to 10 steps.

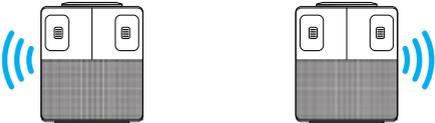
Button	OSD Display	Description	LED Display
CR +/-	Center ____	Adjusts the volume of the <b>Center channel</b> in the <b>main unit</b> (delivers most of the dialog for video content).  	CENTER _
SS +/-	Sur speakers side ____	Adjusts the volume of the <b>Side channels</b> in the <b>Surround Speakers</b> .  	REAR S _
SB +/-	Sur speakers back ____	Adjusts the volume of the <b>Back channels</b> in the <b>Surround Speakers</b> .  	REAR B _


# 5.5 Height Channel Volume

DRAGON has a total of 6 up-firing speakers. The main unit features 4 up-firing speakers positioned at 10° and 20° angles (also known as outer and inner heights). The remaining 2 up-firing speakers are in the surround speakers and can be rotated towards the listening area.

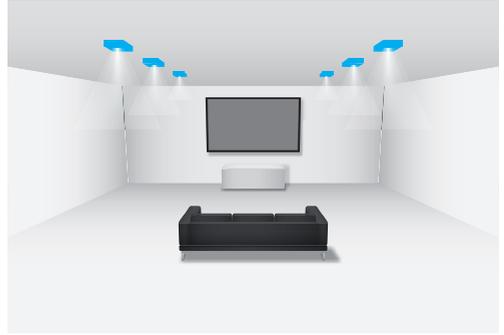

## Adjusting the height channel volume

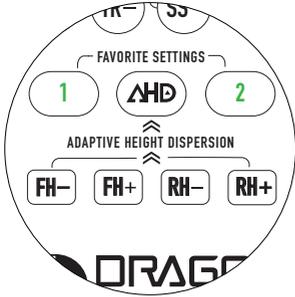


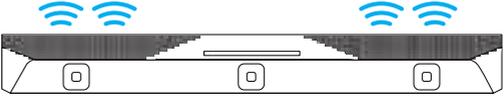Button	OSD Display	Description	LED Display
FH +/-	Main height: Inner 10, Outer 10	Adjusts the volume of inner and outer height channels 	F HGHT __
RH +/-	Sur Speakers Height __	Adjusts the volume of rear height channels 	R HGHT __

- The volume of inner and outer height speakers in the main unit can be configured independently via the OSD. Simply Press  HOME, then navigate to Audio Setup > Channel Volume Level Setup.
- If the inner and outer height channels have different volume levels, the LED display will show the highest number between either channels.
- Does your room have uneven ceilings? Optimize height channel balance by referring to section 14.2, pg 77.

# 5.6 Adaptive Height Dispersion

Get the most immersive height surround performance based on the acoustics of your listening environment with Nakamichi's proprietary Adaptive Height Dispersion (AHD) processing technology.

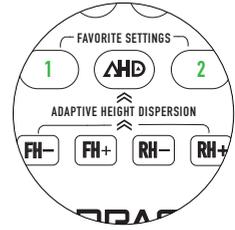

AHD Modes/ OSD Display	Function
Off	Delivers height performance like the movie director intended.
Focal	Optimizes height delivery for a center focused 3D soundstage. Most height action happens in a narrow field of view.
Wide	Delivers height effects above and around you, creating an expansive sense of height effects happening in a wider field of view.
Max (Default)	Maximum height effects, regardless of content type.


Scan the QR Code to visualize how AHD optimizes your content with each mode.

Alternatively, visit [bit.ly/dragon-ahd-visualized](https://bit.ly/dragon-ahd-visualized)



# 5.7 Save Your Favorite Settings

2 sets of audio settings can be saved onto DRAGON's memory, allowing quick access to your favorite audio preferences for different content (e.g. movies and music).

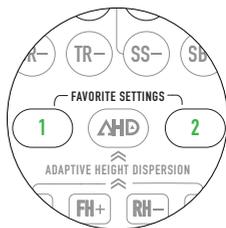

## A. Saving Settings to System Memory

1. Personalize your settings.
2. Press and hold the "FAVORITE SETTINGS 1 / 2" button on the remote.
3. The following will be displayed when settings have been successfully saved:

Button	OSD Display/Function	Main Unit Display
1	Favorite 1 Saved	FAV1 SAVED
2	Favorite 2 Saved	FAV2 SAVED

 Use the OSD to save audio settings to system memory. Press "HOME" button on the remote and navigate to "Audio Setup". Personalize your settings. Once done, press and hold "FAVORITE SETTINGS 1 / 2". The main unit display will show "FAV 1 / 2 SAVED".

-  The following audio settings will be saved and recalled as your favorite settings:
1. Master Volume
  2. Equalizer
  3. Surround Mode
  4. Bass and Treble
  5. Channel Volume and Balance for all channels (including center, surround and height)
  6. AHD Option
  7. Subwoofer drivers that are active

## B. Loading Favorite Settings

1. Press the "FAVORITE SETTINGS 1 / 2" button once. The corresponding settings will be loaded.
2. The following will be displayed when all settings are loaded.


Button	OSD Display/Function	Main Unit Display
1	Favorite 1 Loaded	FAV1
2	Favorite 2 Loaded	FAV2

 If no settings have been saved to either button, a pop-up OSD will indicate: "Favorite \_ not set". The main unit display will show "FAV\_ NOT SET".

# 5.8 Using the Info Button

The Info button allows you to see the source audio format, audio processing and essential system configurations at a glance.

To access, press the “■ INFO” button once.  
You can exit INFO screen by pressing any key on the remote.

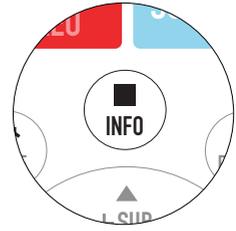

## A. View Audio Formats

The audio format will be displayed on DRAGON's LED display when the “■ INFO” button is pressed.

LED Display	Content Format / Codec
DOLBY ATMOS TRUEHD	Dolby Atmos encoded in Dolby TrueHD
DOLBY ATMOS DD+	Dolby Atmos encoded in Dolby Digital Plus
DOLBY ATMOS MAT	Dolby Atmos metadata into lossless pulse-code modulation** <small>** XBOX SERIES X / One X/S and Apple TV 4K come with a Dolby Atmos MAT encoder, which is designed to encode, decode and incorporate Dolby Atmos metadata into lossless pulse-code modulation (LPCM) audio.</small>
DOLBY TRUEHD	Dolby TrueHD content
DOLBY D+	Dolby Digital Plus content
DOLBY DIGITAL	Dolby Digital content
DTSX PRO	DTS:X PRO content / DTS:X content, rendered with DTS:X PRO
DTS-HD MA	DTS HD Master Audio
DTS-HD	DTS High-Definition Audio
DTS 2.0 / DTS 5.1	DTS Digital
LPCM 7.1	Linear Pulse Code Modulation 7.1
LPCM 5.1	Linear Pulse Code Modulation 5.1
PCM 2.0	Pulse-Code Modulation

# 5.8 Using the Info Button

## B. Information displayed via OSD on TV

When viewing content from source devices connected to DRAGON's HDMI inputs, additional information about the audio format, video format and DRAGON's audio processing modes will be displayed on-screen.

Information Displayed	Description
Source	Displays current HDMI input.
Audio Format	Displays the type of audio content being received by source device.
Video Type	Displays the video resolution and indicates if HDR content is being received by the source device* (e.g 3840 x 2160 Dolby Vision).
Surround Mode	Displays the currently selected upmixing mode. <i>(Dolby Surround, DTS NeuralX, DTS Direct, Studio, Native, All Channel Stereo, Stereo)</i>
EQ	Displays the currently selected Equalizer mode. <i>(Movie 1/2/3, Music 1/2/3, Game, News, Sports, DSP OFF)</i>
AHD Mode	Displays the Adaptive Height Dispersion Mode. <i>(Off, Focal, Wide, Max)</i>
Master Volume	Shows the current system volume. <i>(1 to 100)</i>
Active Subwoofers	Displays the number of subwoofers that are active.^ <i>(L1, L2, R3, R4)</i>
Surround Speakers	Shows if surround speakers are turned on or off.



Disclaimer: Diagrams included in the manual are for illustration purposes only. Actual screen text may vary.

\* Information is only accurate when viewing content from HDMI devices connected to main unit.

^Subwoofers 1 and 2 refer to subwoofer drivers in the left subwoofer.

Subwoofers 3 and 4 refer to subwoofer drivers in the right subwoofer.

SECTION 6


# ON-SCREEN DISPLAY

# 6.1 Using the OSD

The Nakamichi DRAGON is equipped with On-Screen Display (OSD) capabilities. Access advanced settings or view playback information with ease.

## A. Accessing the OSD


1. Power on your TV and DRAGON.
2. Press the “🏠 HOME” Button.

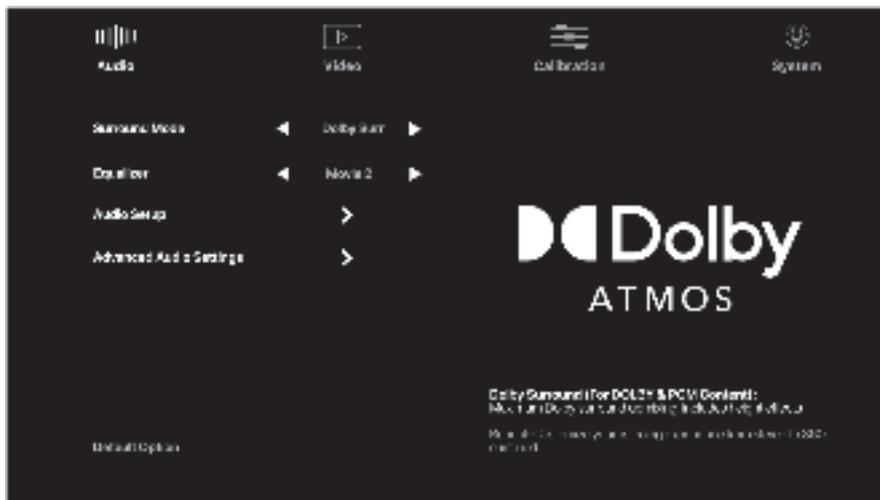

Disclaimer: Diagrams included in the manual are for illustration purposes only. Actual screen text may vary.

## B. Navigating the OSD

- Use ▲▼▶◀ on your remote to browse the OSD menu.
- For sub-menus, press “ENTER” to access additional options.
- Press the ↵ return button to quit the current action/exit the sub-menu, and go back to the previous list of settings.
- To exit the OSD press the “🏠 HOME” button.

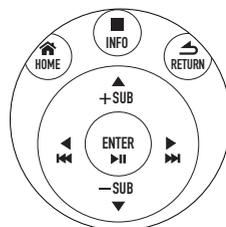

## C. Additional Information

- There are 4 setting tabs: **Audio, Video, Calibration and System**. To switch between tabs, go to the first page and line of settings. Then press “▲” on the remote.
- Helpful information about each setting will be shown on screen when selected.
- The default option for each setting is indicated in orange.

# 6.2 Audio Settings

LED Display	Content Format / Codec
<p><b>Surround Mode</b></p> <p><i>Default: Dolby Surround</i></p>	<p>Select from different channel mapping options.  <i>(Options: Dolby Surround, DTS Neural:X, DTS Direct, Studio, Native, All Channel Stereo, Stereo)</i></p>
<p><b>Equalizer</b></p> <p><i>Default: Movie 2</i></p>	<p>Optimize playback for your content with Nakamichi audio presets.  <i>(Options: Movie 1/2/3, Music 1/2/3, Game, News, Sports, DSP OFF)</i></p>
<p><b>Audio Setup</b></p> <p><i>Default settings are highlighted in orange</i></p>	<ul style="list-style-type: none"> <li>● <b>Channel Level Volume Setup:</b> Fine-tune each channel's volume and balance to best fit your room.</li> <li>● <b>Quad Subwoofers Setup:</b> Enable the number of active subwoofers and control the output of each subwoofer driver.</li> <li>● <b>Height Effects Setup:</b> Adjust Adaptive Height Dispersion (AHD) mode, height channel volume and balance.</li> </ul> <p>Master volume, bass, treble and equalizer can also be adjusted here.</p>
<p><b>Audio Setup</b></p> <p><i>Default:</i></p> <ul style="list-style-type: none"> <li>● <i>Night Mode: OFF</i></li> <li>● <i>Surround Speakers: ON</i></li> <li>● <i>Lip Sync Adjustment: 0ms</i></li> <li>● <i>Subwoofer Crossover: 200Hz</i></li> <li>● <i>DTS:X DIALOG Control: 3</i></li> </ul>	<ul style="list-style-type: none"> <li>● <b>Night Mode (Dynamic Range Compression):</b> Decrease the volume difference between loud and quiet passages when turned on. See pg 30. <i>(Options: OFF, 50%, 100%, Auto)</i></li> <li>● <b>Surround Speakers:</b> Enable/Disable audio playback from the rear speakers.</li> <li>● <b>Lip Sync Adjustments:</b> When TV video appears slower than the audio produced by DRAGON, adjust this until both are in sync. <i>(Options: 0ms - 200ms)</i></li> <li>● <b>Subwoofer Crossover:</b> Set the highest bass frequencies the subwoofer will play. <i>(Options: 120 - 200Hz, in 10 Hz Increments)</i></li> <li>● <b>DTS:X Dialog Control:</b> Increase dialog levels in contrast with background sound and boost vocals separately (For select DTS:X Blu-Ray disc content). <i>(Options: Level 1 - 6)</i></li> </ul>

## 6.3 Video Settings

LED Display	Content Format / Codec
<b>HDMI Passthrough</b> <i>Default: Off</i>	Transmit selected content from DRAGON's HDMI input to the TV's eARC port when system is on standby. <i>(Options: OFF, HDMI 2, HDMI 3, HDMI 4)</i>
<b>HDMI Audio Playback</b> <i>Default: DRAGON</i>	Use TV speakers or DRAGON for audio playback. <i>(Options: DRAGON, TV)</i>
<b>HDMI CEC One Touch Play<sup>^</sup></b> <i>Default: On</i>	Enable/Disable HDMI CEC commands between DRAGON and external CEC-enabled source devices (e.g. TV), allowing the device to turn on the TV and switch its HDMI port automatically. <i>(Options: On, Off)</i>
<b>Video Upscaling</b> <i>Default: Auto</i>	Upscale 1080p content up to 4K resolution. <i>(Options: Auto, Off)</i>
<b>Personalized Source Name</b>	Customize the name of each HDMI device connected to DRAGON.

<sup>^</sup>HDMI CEC ONE TOUCH PLAY: When you start playback on your source device, it will switch the TV and DRAGON to the HDMI input that the device is using. For example, when you insert a disc into your Blu-ray player and press play, the TV and DRAGON automatically switches to the HDMI input that the Blu-ray player is using.

# 6.4 Calibration Settings


## A. Easy Sound Setup

The Calibration tab allows you to further adapt DRAGON's playback to your listening environment.


Easy sound setup customizes and delivers instant room calibration for most rooms.

Simply select the option closest to your actual room size.


**Small**

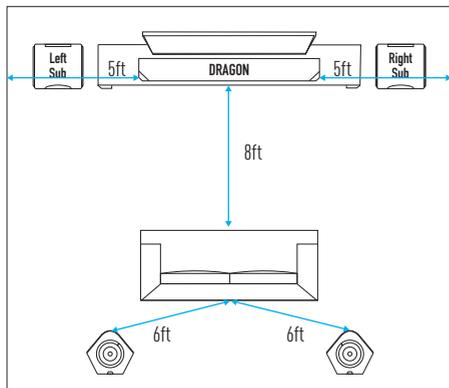

**Medium**

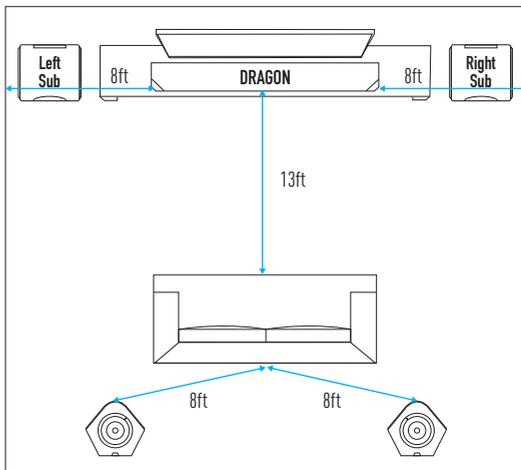

**Large**

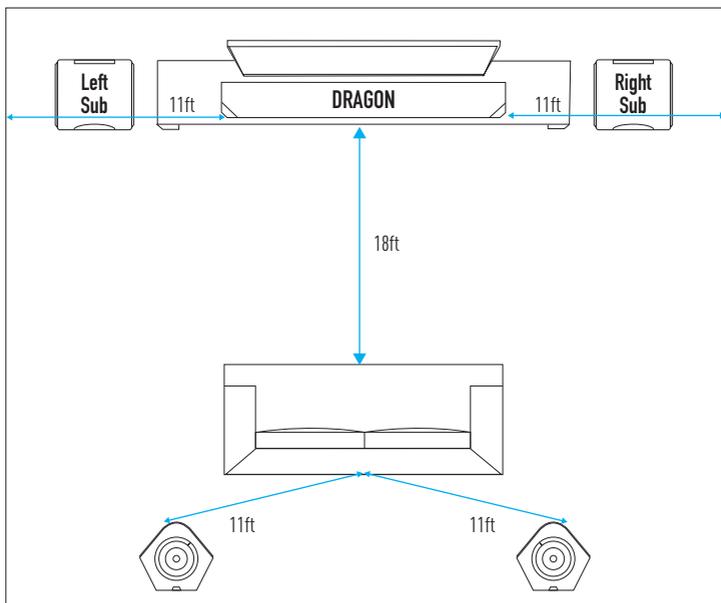

# 6.4 Calibration Settings

## B. Room Size Calibration

Advanced users can access a wide range of calibration options to optimize DRAGON's output to their listening environment.

This sub-category allows you to manually input the distances based on your room environment.

Speaker Unit	Distance to	Range / Placement
Main Unit	Listening Area	5 - 25 ft+
	Side Wall (Left / Right)	1 - 15 ft+
	Ceiling	2 - 20 ft+
	Surround Speakers	5 - 30 ft+
Quad Subwoofers	Listening Area (Left Subwoofer)	2 - 25 ft+
	Listening Area (Right Subwoofer)	2 - 25 ft+
	Location in the Room	Front, Back, Center, Diagonal
Surround Speakers	Listening Area (Left)	2 - 15 ft+
	Listening Area (Right)	2 - 15 ft+

# 6.4 Calibration Settings

## C. Volume Level Calibration


Use this function to calibrate the volume balance between each speaker.

### Pink Noise Calibration

To aid with the calibration process, DRAGON has 3 pink noise playback options that users can select from:



 Protect your hearing. Ensure the volume is at a comfortable level before attempting the calibration process.

Test Tone Options	Description
Off	Default
Individual	Plays pink noise only on selected channels
All	Plays pink noise across ALL channels

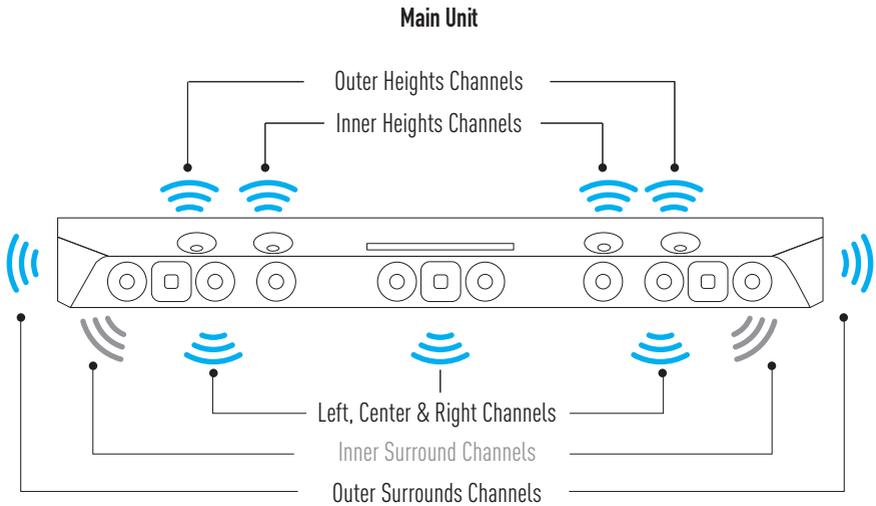

# 6.4 Calibration Settings

## C. Volume Level Calibration

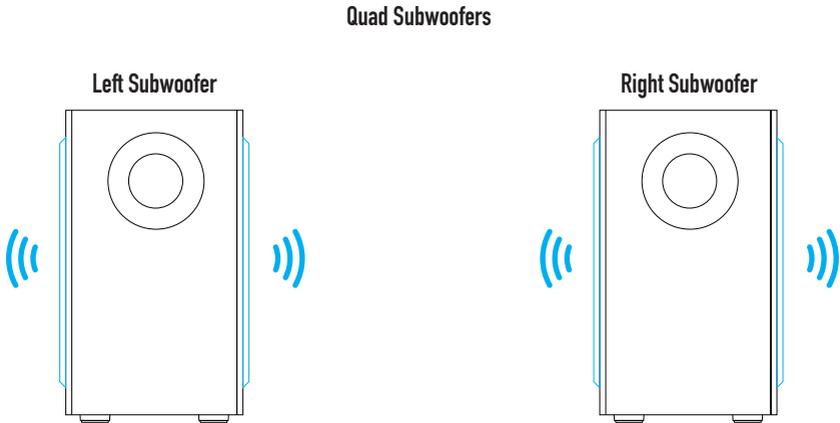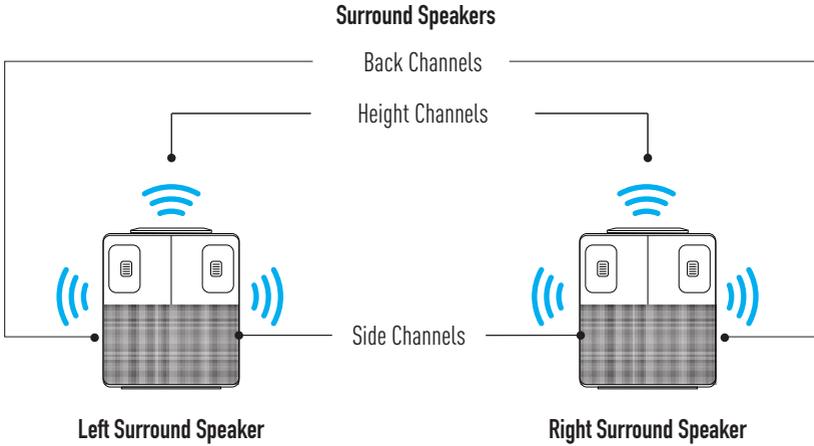

# 6.5 System Settings

## A. Wireless Settings

The System tab provides access to essential system operation settings.

By default, DRAGON utilizes an auto-switching 5GHz wireless frequency to communicate with its wireless subwoofers and surround speakers. In rare instances, nearby wireless networks (e.g. Home Wi-Fi) may conflict with DRAGON's wireless transmission, resulting in audio interruptions from the surround speakers and/or subwoofers.

You can change the following settings to optimize DRAGON's wireless capabilities for your home's environment.

 These settings should only be changed if you are facing audio interruptions from DRAGON's wireless surround speakers or subwoofers.

Scan the QR Code or visit [bit.ly/dragon-wireless-optimization](https://bit.ly/dragon-wireless-optimization) for recommendations tailored to your home.



Setting	Description
<b>Subs + Surr Wireless Freq (Step 1)</b>	<b>Subwoofer + Surround Speaker Wireless Frequency</b> Default: DRAGON communicates using the 5.8GHz bandwidth Auto 1: DRAGON communicates using the 5.2GHz bandwidth
<b>Wireless Freq Strength (Step 2)</b> <i>Default: 2</i>	<b>Wireless Frequency Strength</b> Varying degrees of wireless communication strength (1, 2, 3, 3+). Use the setting that enables smooth wireless communication between DRAGON's system components.  To access 3+, select option 3. Then, on your remote, press "ENTER" button 5 times.

# 6.5 System Settings

## B. Subwoofer, Surround Speakers and Remote Control Manual Pairing

The following options are available to check the connection status and facilitate manual pairing of DRAGON's components.

### Manual Pairing

Setting	Description
Subwoofer Manual Pairing	If a surround speaker, subwoofer or remote control is disconnected, <a href="#">instructions</a> to connect the missing speaker or remote will be shown on OSD screen. See pg 59 for more instructions
Surrounds Manual Pairing	
Remote Control Pairing	

# 6.5 System Settings

## C. Miscellaneous Options

### System Operation

Setting	Description
<b>Energy Saving Mode</b>  <i>Default: 30 Minutes</i>	Select the period of time before DRAGON goes into standby mode when no signal is detected.  <i>(Options: After 30/90/120 Minutes, OFF (Disables energy saving mode))</i>
<b>Restore Factory Settings</b>	Refresh DRAGON's software and restore factory default settings. System will power off when factory reset is completed.  Press "▶" to select "Yes", then press "ENTER" to perform factory reset
<b>Firmware Upgrade</b>	The firmware version for DRAGON is displayed.  See pg 57 to learn how to upgrade firmware.

### Main Unit Display

Setting	Description
<b>Brightness</b>  <i>Default: +3</i>	Increase or reduce the brightness of DRAGON's main unit display.  <i>(Options: +1, +2, +3: Changes the LED display brightness.)</i> <i>0: Main unit display turns off after a few seconds. Press any key to wake the display.</i>

### Miscellaneous

Setting	Description
<b>Popup Location</b>  <i>Default: Bottom Left</i>	Select the location of On-Screen display when adjustments are made.  <i>(Options: Bottom left, Bottom center, Bottom right, Top left, Top center, Top right)</i>
<b>Popup Duration</b>	Adjusts the On-Screen Display fade out time.  <i>(Options: 3 - 15 Seconds)</i>
<b>Units</b>  <i>Default: Feet (Imperial)</i>	Select your preferred unit measurement.  <i>(Options: Feet (Imperial) or Meters (Metric))</i>

**SECTION 9**

**SURROUND & DIAGNOSTIC  
DEMO TRACKS**

# 9 Surround and Diagnostic Demo Tracks

Showcase DRAGON with on-board surround soundtracks.

## Playing the Demo:

1. Power on the main unit.
2. Press **□** at the top of the main unit.
3. To skip a track, press **⏮/⏭** on your remote, or press **□** again.
4. Press **↩ RETURN** on remote to end Demo at anytime.

The following tracks will be played.

Main Unit Display	Description
Demo 1	Plays Dolby Atmos Amaze Surround Soundtrack.
Demo 2	Plays Dolby Atmos 747 Surround Soundtrack.
Name of Channel being played:  Starting from LEFT CH	<p>Plays diagnostic tones across each channel, using the following sequence:</p> <p>1. LEFT CH</p> <p>2. RIGHT CH</p> <p>3. CENTER CH</p> <p>4. INNER SUR CH MAIN</p> <p>5. OUTER SUR CH MAIN</p> <p>6. OUTER HEIGHT CH MAIN</p> <p>7. INNER HEIGHT CH MAIN</p> <p>10. L REAR BACK SUR CH</p> <p>11. R REAR BACK SUR CH</p> <p>12. L REAR HEIGHT CH</p> <p>13. R REAR HEIGHT CH</p> <p>14. LEFT SUBWOOFERS</p> <p>15. RIGHT SUBWOOFERS</p> <p>16. QUAD SUBWOOFERS</p>

**SECTION 10**

# **MOBILE APPLICATION**

# 10.1 Installation

You can use your smartphone as a remote control to control DRAGON.

Scan the QR Code below to download the mobile application:



Open the mobile application. Follow the instructions to connect your smartphone to DRAGON.

# 10.2 Functions

The mobile app comes with the following functions:

- Turn your phone into a virtual remote control for DRAGON. All remote functionalities can be accessed via the mobile app.
- Register your warranty.
- Access to Quick Start Guide or manual.
- Access to DRAGON Concierge.



Registering DRAGON's warranty takes only a few minutes. **Register yours through the mobile app today!**

**SECTION 11**

# **FIRMWARE UPGRADE**

# 11.1 Check the Firmware Version

Firmware upgrades that provide additional features and performance improvements are released periodically. For more information, visit [bit.ly/dragon-firmware](http://bit.ly/dragon-firmware)

Watch this video to learn how to perform a firmware upgrade:



1. Press “ HOME” on remote. The OSD will be shown on screen.
2. Navigate to “System”.
3. Firmware version will be displayed under the “Firmware Upgrade” option.

This procedure must only be done with official firmware files that are provided by Nakamichi and designed for your surround system. Failure to use the correct files could result in a damaged system that will not be covered by warranty.

Ensure Surround Speakers, Subwoofers and Bluetooth Remote Control are connected before running a firmware upgrade. These components will be upgraded wirelessly.

# 11.2 Perform a Firmware Upgrade

Use a USB 2.0/3.0 Flash Drive. Maximum drive size: 128GB, formatted with FAT32 or exFAT.

DO NOT INTERRUPT THE FIRMWARE UPGRADE PROCESS by turning off, restarting any of DRAGON's speakers or pressing any remote control buttons while the firmware process is ongoing; even if the LED display does not seem to indicate any progress. Doing so could result in a damaged unit not covered by warranty. The upgrading process can take up to 25 minutes.

## Method 1: Perform a firmware upgrade without the OSD (Recommended)

1. Power DRAGON on. Insert a USB Drive with DRAGON's firmware (.upd file extension).
2. Press “USB” on your remote.
3. DRAGON will search your USB Drive for firmware files. If upgrade files are found, LED display will show

**Firmware Upgrade?**

4. Press “ENTER”.
5. The firmware upgrade process will begin. Once the upgrade is completed, the main unit will shut down and restart automatically after 10 seconds.
6. Initiate a factory reset by pressing and holding on the main unit for 8 seconds. The LED display will show:

**Factory Reset**

- And power off.
7. Wait a few seconds. Power DRAGON on. Firmware upgrade is complete!

# 11.2 Perform a Firmware Upgrade

Method 2. Performing a firmware upgrade through the OSD (Follow this if Method 1 does not work)

1. Power DRAGON on.
2. Switch to USB mode.
3. Press "HOME". The OSD will be shown on screen.
4. Navigate to System > Firmware Upgrade. Press "▶" on your remote to navigate to "Upgrade".
5. Insert a USB Drive with DRAGON's firmware.
6. Press "ENTER" to start the firmware upgrade process.
7. Wait for the firmware upgrade process to complete. The pairing lights on DRAGON's speakers may flash. In addition, the OSD will stop displaying.
7. The firmware upgrade process will be displayed on the LED screen. Once the upgrade is completed, the main unit will shut down and restart automatically after 10 seconds.
8. Press the "HOME" Button. On the OSD, navigate to: System > Restore Factory Settings.
9. Press "▶" to select "Yes". Press "ENTER". The main unit will power off.
10. Wait a few seconds. Power DRAGON on. Firmware upgrade is complete!

**Once firmware upgrade is complete, remove your USB drive from DRAGON.**

## Firmware Upgrade Progress

The firmware upgrade process may take up to 25 minutes. The upgrade progress will be displayed as a numeric percentage on the front panel display while the upgrade process is ongoing.

Press "ENTER" to begin upgrade	<b>Firmware Upgrade?</b>
UPGRADING With percentage indicator	<b>UPGRADING 10%</b>
Wait for DRAGON to fully upgrade	<b>UPGRADING 100%</b>

After the upgrade is complete, DRAGON will power off and restart automatically after 10 seconds. Then, it will indicate if the upgrade was successful.

Upgrade successful	<b>Upgrade Success</b>
--------------------	------------------------

**SECTION 12**

# **RECONNECTING COMPONENTS**

# 12.1 Check Wireless Speakers Connection Status

## Method 1: Check LED Light on the subwoofers/surround speakers

The subwoofer has a LED light on its back panel. The surround speaker has a LED light at the top of the speaker. These LED lights indicate the status of the wireless speakers.

LED Indicator	Status
Solid blue	Connected to DRAGON
Blinking Blue Light	Subwoofer is turned on, looking for main unit to pair with
Off	Subwoofer is on standby mode
Rapidly blinking Blue Light	Subwoofer in pairing mode, searching for main unit to connect to

## Method 2: Via the OSD

1. Press “**HOME**” button to open OSD menu.
2. Navigate to System > Subwoofers/Surrounds Manual Pairing. Press “**ENTER**”.
3. The state of connection for each speaker will be indicated.




Disclaimer: Diagrams included in the manual are for illustration purposes only. Actual screen text may vary.

# 12.2 Re-Pairing Subwoofers

1. Connect the subwoofers to power. Toggle the switch to "ON".

2. Press and hold the pairing button behind the subwoofers until the blue LED blinks rapidly.

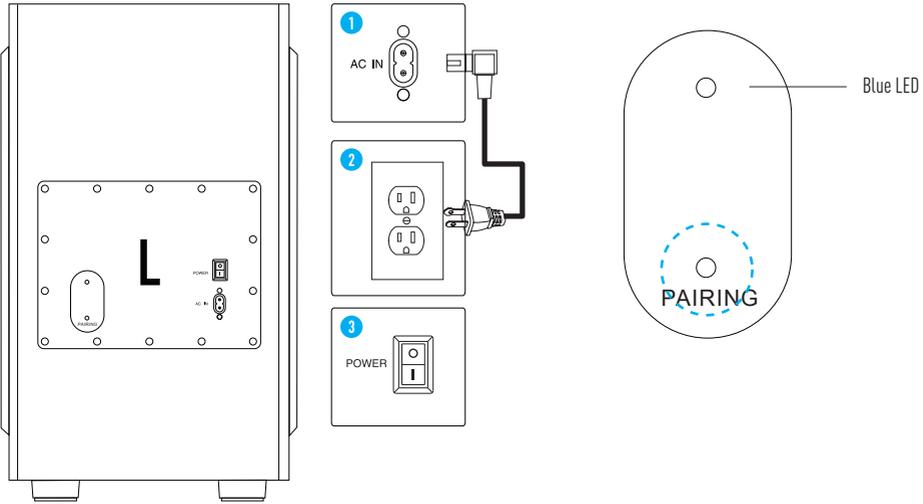

(Applies for right subwoofer)



The subwoofers will stay in pairing mode for 120 seconds. Complete the remaining steps within this timeframe.

3. Press and hold  on top of the main unit for 8 seconds while system is on.



4. DRAGON's main unit display will show "WIRELESS PAIRING". DRAGON's main unit display will show:

## WIRELESS PAIRING

L SUR (LS) + R SUR (RS) + L SUB (LW) + R SUB (RW)



L SUR (LS) and R SUR (RS) represents the Left and Right Surround Speakers.

L SUB (LW) and R SUB (RW) represents the Left and Right Subwoofers.

# 12.2 Re-Pairing Subwoofers

5. The connection status of all wireless speaker connections will be displayed. Speakers that were placed in pairing mode will be detected and paired with the main unit.



The subwoofers are successfully paired once its blue LED turns solid and the main unit display indicates successful connection.


6. If a wireless subwoofer is not paired successfully, the affected speaker will be represented with a " - " sign. If DRAGON stops displaying the following, retry steps 2-5.



 If the above steps do not allow you to pair the subwoofer(s), temporarily shift the speaker closer to the main unit. Then retry steps 2-5.


# 12.3 Re-pairing Surround Speakers

1. Connect the surround speakers to power.

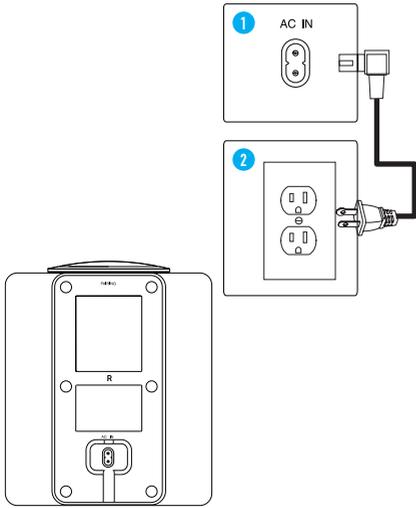

Bottom of the Left and Right surround speaker.

2. Press and hold the pairing button on the top of the surround speaker until the blue LED blinks rapidly.

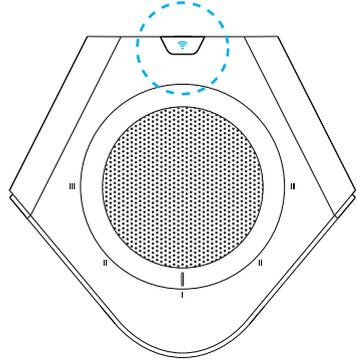

The surround speakers will stay in pairing mode for 120 seconds. Complete the remaining steps within this timeframe.

3. Press and hold  on top of the main unit for 8 seconds while system is on.



4. DRAGON's main unit display will show "WIRELESS PAIRING". DRAGON's main unit display will show:

**WIRELESS PAIRING**  
**L SUR (LS) + R SUR (RS) + L SUB (LW) + R SUB (RW)**



**L SUR (LS)** and **R SUR (RS)** represents the **Left** and **Right Surround Speakers**.  
**L SUB (LW)** and **R SUB (RW)** represents the **Left** and **Right Subwoofers**.


## 12.3 Re-pairing Surround Speakers

- The connection status of all wireless speaker connections will be displayed. Speakers that were placed in pairing mode will be detected and paired with the main unit.



The surround speakers are successfully paired once its blue LED turns solid and the main unit display indicates successful connection.

- If a surround speaker is not paired successfully, the affected speaker will be represented with a " - " sign. If DRAGON stops displaying the following, retry steps 2-5.

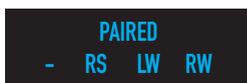

 If the above steps do not allow you to pair the surround speaker(s), temporarily move the speaker closer to the main unit. Then retry steps 2-5.

# 12.4 Re-Pairing Bluetooth Remote Control

DRAGON remote that is on infrared transmission can be used immediately without going through the pairing process. You will only need to perform the pairing instructions below when the remote is on Bluetooth transmission.

## Unpair Bluetooth Remote

1. Power on DRAGON via the main unit's touch panel.
2. Press and hold  on the main unit for 8 seconds.
3. DRAGON will disconnect and forget its Bluetooth connection with the current remote. The main unit display will show the following:



**BT REMOTE  
DISCONNECTED**

 Performing this action will cause DRAGON to "forget" the previous remote. You will need to follow the instructions below to connect a remote using Bluetooth.

## Pair Bluetooth remote control:

1. After disconnecting from the previous remote, DRAGON will search for a new Bluetooth remote.

**SEARCHING . . .  
BT REMOTE**

2. Reinsert batteries in the remote. Then, press " HOME" and " RETURN" on the remote for 5 seconds. Bluetooth remote will enter pairing mode.
3. Wait for DRAGON to search and pair with the remote. Upon successful connection, DRAGON will display the following:

**BT REMOTE  
CONNECTED**

 If DRAGON shows "**BT REMOTE NOT FOUND/UNABLE TO PAIR**", press and hold  for 8 seconds to reactivate the Bluetooth remote pairing function on the main unit. Then, follow the steps again to pair your Bluetooth remote control.

If you have issues with Bluetooth remote connectivity, as a temporary solution, switch to Infrared Mode by toggling a switch hidden by the battery cover (Pg 9). Then, contact DRAGON Concierge for a solution.

**SECTION 13**

# **PRODUCT INFORMATION**

# 13.1 Specifications

Speaker Driver and Power Specifications	
<b>Main Unit</b>	58" chassis with dedicated chambers for each channel, containing: 10 x 3" Drivers 4 x 3" Dual-Angled Up-firing Speakers 3 x 1.5" Air Motion Tweeters  Peak Power: 1500W
<b>Wireless Subwoofers (2 Modules)</b>	2 x 8" Subwoofer drivers each  Peak Power: 500W per subwoofer module
<b>Wireless Omni-Motion Reference Surrounds (2 Modules)</b>	2 x 1.5" Air Motion Tweeters each 2 x 3.5" Drivers each 1 x 3" Rotatable Up-firing driver each  Peak Power: 250W per surround speaker module
<b>Total Channels</b>	11.4.6
<b>Total Peak Power</b>	3000W
<b>Total Loudness</b>	Up to 125dB
<b>Overall Frequency Response:</b>	20Hz - 40kHz

Inputs and Outputs	
<b>HDMI Connectivity</b>	3 x HDMI 2.1 Inputs 1 x HDMI Out (eARC to TV) (HDCP 2.3) Up to 4K120Hz/8K60Hz with VRR/ALLM/FRL, Dolby Vision passthrough support with video upscaling functionality
<b>Other Inputs</b>	1 x Optical Input 1 x Aux Audio Input Bluetooth 5.0 with aptX™ HD 1 x USB (For Firmware Upgrade Only)
<b>Audio Outputs (Stereo Only)</b>	1 x Optical Output 1 x Aux Audio Output

# 13.1 Specifications

Core Features	
Codecs and Formats Supported	Dolby Atmos Supported Codecs: Dolby TrueHD, Dolby MAT, Dolby Digital Plus, Dolby Digital
	DTS:X PRO Certified Codecs: DTS-HD Master Audio, DTS-HD High Resolution Audio, DTS Digital Surround
	LPCM 7.1, LPCM 5.1, PCM
Audio Enhancements	8 EQ Modes: Movie 1/2/3, Music 1/2/3, Game, News, Sports, Night
	Adaptive Height Dispersion (AHD) Technology
	Channel Volume Control, Quad Subwoofer and Height Effects setup
	Volume and Room Size Calibration
	Surround Modes: Dolby Surround, DTS Neural:X, DTS Direct, Studio, Native, All Channel Stereo, Stereo Only

Miscellaneous	
Display Functionality	On-Screen Display (OSD via TV HDMI Input only) Dot-Matrix LED display (on main unit)
Remote Control	45-Key - backlit LED with brushed aluminum finish Bluetooth and IR Compatible Smartphone remote application supported
Power Input	110 - 240V, 50 / 60Hz

Dimensions and Weight	Dimensions	Weight
Main Unit	58.1 x 7.7 x 4.4 inch	32.1lbs each
Subwoofer	8.6 x 12.5 x 20.5 inch	33.3lbs each
Surround Speakers	9.0 x 8.4 x 10.7 inch	9.2lbs each

# 13.1 Specifications

DRAGON is compatible with the following audio codecs and formats:

## HDMI inputs/ARC/eARC

Audio Signal Types	Audio Signal Formats	Compatible Inputs
2 Ch Linear PCM	2 Ch, 32-192kHz, 16/24-bit	TV HDMI ARC/eARC, HDMI Inputs
Multi-Ch Linear PCM	7.1 Ch, 32-192kHz, 16/24-bit	TV HDMI ARC/eARC, HDMI Inputs
Bitstream (SD) - 5.1ch	Dolby Digital, DTS, AAC	TV HDMI ARC/eARC, HDMI Inputs
Bitstream (HD Audio)	Dolby Digital Plus, Dolby Atmos Digital Plus	TV HDMI ARC/eARC, HDMI Inputs
Bitstream (HD Audio)	Dolby TrueHD, Dolby Atmos TrueHD, Dolby Atmos MAT, DTS-HD High Resolution Audio, DTS-HD Master Audio, DTS:X	TV HDMI eARC, HDMI Inputs

## Digital Audio Signal (Optical)

Recommended for: CD / DVD playback and devices without HDMI output.

Audio Signal Types	Audio Signal Formats
2 Ch Linear PCM	2 Ch, 32-192kHz, 16 / 24-bit
Bitstream (5.1ch)	Dolby Digital, DTS, AAC

**Aux In:** 2 Ch Linear PCM, 32 – 192kHz, 16 / 24-bit

- Refer to documentation supplied with the playback device, and set the device appropriately.
- To decode audio bitstream signals on this unit, set the input source device appropriately so that the device outputs bitstream audio signals . Refer to documentation supplied with the device for details.

# 13.2 Glossary

This section explains the technical terms used in this user manual.

## **Adaptive Height Dispersion (AHD)**

Nakamichi's exclusive height processing technology that unlocks the maximum potential of height effects for different content types and listening preferences.

## **Dolby Atmos object-based audio**

Dolby Atmos is an object-based audio format with the capability to reproduce up to 128 simultaneous objects. Every sound in a scene can be represented as a separate audio object that can be positioned and moved throughout the 3D space. For more information, visit <https://www.dolby.com/us/en/brands/dolby-atmos.html>

## **Dolby Digital**

Dolby Digital is a compressed digital audio format developed by Dolby Laboratories, Inc. that supports 5.1-channel audio. This technology is used for audio on most DVD discs.

## **Dolby Digital Plus**

Dolby Digital Plus, also known as Enhanced AC-3 is a digital audio compression scheme developed by Dolby Labs for transport and storage of multi-channel digital audio. This format is commonly found on many streaming services, including Netflix, Amazon Prime, Disney+, HBO Max and many more.

## **Dolby MAT**

Dolby MAT is used by live TV broadcasts, certain streaming devices and game consoles for on-the-fly encoding, and can include Dolby Atmos Metadata.

## **Dolby Surround**

Dolby Surround expands on stereo to deliver sound from the sides, behind, and even above you, creating a natural, multidimensional sonic environment based on the science of how humans hear. Dolby audio in your home theater improves the power, clarity, and realism of sound by upmixing content into 11.4.6 channels.

## **Dolby TrueHD**

Dolby TrueHD is a lossless multi-channel audio codec developed by Dolby Laboratories which is used in home-entertainment equipment such as Blu-ray disc players and home theater systems. It competes with DTS-HD Master Audio, a lossless codec from DTS.

## **Dolby Vision**

Dolby Vision transforms your TV experience with dramatic imaging with incredible brightness, contrast, color, details and dimensionality. And with the advanced capabilities in Dolby Vision, you'll see there's more to the story that generic HDR cannot reveal.

## **DTS Digital Surround**

DTS Digital Surround is a compressed digital audio format developed by DTS that supports 5.1-channel audio. This technology is used for audio on most DVD discs.

## **DTS-HD High Resolution Audio**

DTS-HD High Resolution Audio is a compressed digital audio format that supports 7.1-channel and up to 96kHz / 24-bit audio. It remains fully compatible with the existing DTS multichannel audio systems.

## **DTS-HD Master Audio**

DTS-HD Master Audio is an advanced lossless audio format developed to offer a high-definition home theater experience by DTS, Inc. It is commonly found on Blu-ray discs and it can carry up to eight channels of 96kHz / 24-bit audio (up to six channels of 192kHz / 24-bit audio) simultaneously.

## **DTS NEURAL:X**

DTS Neural:X is the latest down-mixing / up-mixing and spatial remapping technology from DTS. It is built in to DTS:X to provide upmix of Neural:X-encoded data. DTS: Neural:X will upmix DTS content into 11.4.6 channels to match the capabilities of DRAGON.

## **DTS:X Dialog Control**

DTS:X Dialog Control allows you to boost the volume of dialog, increasing its intelligibility. People with impaired hearing may also benefit. Note: Content creators may disable the use of this feature on their content, so this feature may not always be available.

## **DTS:X object-based audio**

DTS:X uses a technology called object-based audio that processes each sound contained in an audio source as an "object" and memorizes each object's sound changes and positional changes in a sound field to control these changes during playback. For more information, visit <https://dts.com/dtsx>

## **DTS:X PRO**

DTS:X PRO is a premium home cinema technology that is an evolution of DTS:X, rendering object-based audio information for up to 32 connected speakers, enabling greater spatial resolution and realism. It is a substantial upgrade compared to the standard home theater DTS:X renderer that natively supports rendering of up to 12 speakers. For more information, see <https://dts.com/dtsx-pro-technology-puts-you-there/>

## **Dynamic Range Compression (DRC)**

DRC is an audio signal processing operation that reduces the volume of loud sounds, while amplifying quiet sounds. This reduces (or compresses) an audio signal's dynamic range. DRC is also known as volume normalization.

## **Energy Saving Mode**

Automatically switches off the system after a period of inactivity to promote eco-friendliness.

## **HDMI**

HDMI (High-Definition Multimedia Interface) is the world-wide standard interface for digital audio/video signal transmission. This interface transmits both digital audio and digital video signals using a single cable without any loss. HDMI complies with HDCP (High-bandwidth Digital Content Protection) and provides a secure audio/video interface. For further information on HDMI, visit the HDMI website at "<http://www.hdmi.org/>".

# 13.2 Glossary

## **HDMI ARC / eARC**

HDMI Audio Return Channel (ARC) / enhanced Audio Return Channel (eARC) offers two-way communication between DRAGON and TV over a single HDMI connection. Essentially, the HDMI ARC port lets you use HDMI as both an input and an audio output.

## **HDMI-CEC CONTROL**

HDMI-CEC Control allows you to operate external devices via HDMI. If you connect a TV that supports HDMI CEC to DRAGON, you can control DRAGON with your TV's remote control. Functions supported include:

- Standby synchronization.
- Volume control, including mute.

## **HDMI Passthrough**

HDMI Passthrough allows DRAGON to send video/audio content from a selected HDMI input on the main unit to the TV, even during standby.

## **HDCP**

HDCP (High-bandwidth Digital Content Protection) is a digital copy protection form that prevents copying of digital contents as it travels across connections (such as HDMI).

## **Lip Sync**

Video output sometimes lags behind audio output due to the complexity of signal processing caused by an increase in video signal capacity and internet streaming delay. Lip Sync is a technique to compensate the timing lag between audio and video output.

## **LPCM**

Linear Pulse-Code Modulation is a method of digitally encoding uncompressed (lossless) audio information, generally used for transmitting uncompressed 5.1 or 7.1 channel audio.

## **On Screen Display (OSD)**

An OSD allows you to control the surround system with ease, displaying all settings on a user-friendly interface. DRAGON's OSD includes helpful visuals to aid with each adjustment option.

## **PCM (Pulse Code Modulation)**

Pulse-Code Modulation is a digital representation of uncompressed (lossless) analog audio signals.

## **PerfectHeight Mechanism**

A patented innovation developed by Nakamichi that allows for the up-firing drivers on the Omni-Motion Reference Surrounds to be rotated up to 180 degrees to accommodate any environment and seating position.

## **Qualcomm aptX™ HD**

Qualcomm® aptX™ HD was designed to answer the growing demand for high resolution audio. This enhanced codec supports 24-bit music quality over Bluetooth. This allows listeners to hear even the smallest details in their music.

## **Room Calibration**

Room Calibration optimizes the level and timing of different sonic frequency ranges to your room placement. Easy sound setup is recommended for basic users. Advanced room calibration is also available for prosumers.

## **Smart Home**

Smart Home systems allow homeowners to control their appliances and home theater systems remotely using an internet-connected hub, either through a smartphone, tablet or voice commands.

## **Subwoofer Crossover Frequency**

The subwoofer crossover frequency is the frequency at which your speakers start to roll off and your subwoofer kicks in with low frequency effects and bass notes.

## **Video Upscaling**

Video upscaling enhances and sharpens lower resolution content for optimized viewing on today's 4K or 8K screens.

## **Volume Level Calibration**

Volume Level Calibration allows advanced users to use a sound pressure level meter at their primary listening position to calibrate each speaker to their room for theater-like sound.

## **Universal Remote**

A universal remote can be programmed to operate one or more types of consumer electronics from various brands.

# 13.3 Legal and Compliance

## FCC Supplier's Declaration of Conformity

**Product Name:** ATMOS Soundbar, Nakamichi Dragon11.4.6 Home Surround Sound System, Nakamichi Dragon11.4.6B Home Surround Sound System

**Model number:** Dragon11.4.6, Dragon11.4.6B

**Suppliers Name:** Alan Graham

**Suppliers Address (USA):** 9888 W Belleview Ave Ste 2142 Denver, CO 80123, United States

**Suppliers FRN:** 0033407131

**Contact Email/Telephone:** alan.graham@vish-tec.com/ ( 571 ) 4007350

**FCC Compliance Statement:**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

## I C S t a t e m e n t :

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s)

. Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

Cet émetteur ne doit pas être Co-placé ou ne fonctionnant en même temps qu'aucune autre antenne ou émetteur.

Cet équipement devrait être installé et actionné avec une distance minimum de 20 centimètres entre le radiateur et votre corps.

# 13.3 Legal and Compliance

 	<p>Dolby, Dolby Vision, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012–2023 Dolby Laboratories. All rights reserved.</p>
 	<p>For DTS patents, see <a href="http://patents.dts.com">http://patents.dts.com</a>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, DTS in combination with the Symbol, DTS:X, and the DTS:X logo are registered trademarks or trademarks of DTS, Inc. in the United States and/or other countries. ©DTS, Inc. All Rights Reserved.</p>
	<p>The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.</p>
	<p>The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Nakamichi LLC is under license. Other trademarks and trade names are those of their respective owners.</p>
	<p>Qualcomm® aptX™ HD is a product of Qualcomm Technologies, Inc. and/or its subsidiaries. Qualcomm is a trademark of Qualcomm Incorporated, registered in the United States and other countries. aptX™ is a trademark of Qualcomm Technologies International, Ltd., registered in the United States and other countries.</p>

**SECTION 14**

# **SUPPORT**

# 14.1 Warranty Information

## LIMITED WARRANTY (U.S. Only)

Nakamichi LLC ("Nakamichi") warrants this product against defects in material or workmanship for the time periods and set forth below. Pursuant to this Limited Warranty, Nakamichi will, at its option, (i) repair the product using new or refurbished parts or (ii) replace the product with a new or refurbished product. For purposes of this Limited Warranty, "refurbished" means a product or part that has been returned to its original specifications. In the event of a defect, these are your exclusive remedies.

**Labor:** For a period of one (1) year from the original date of purchase of the product ("Labor Warranty"), Nakamichi will, at its option, repair or replace with new or refurbished product, product determined to be defective. If Nakamichi elects to replace the product after this Labor Warranty has expired but while the Parts Warranty below is still in effect, it will do so for the applicable labor charge.

**Parts:** For a period of one (1) year from the original date of purchase of product ("Parts Warranty"), Nakamichi will supply new or refurbished replacement parts in exchange for parts determined to be defective.

This Limited Warranty covers only the hardware components packaged with the Product. It does not cover technical assistance for hardware or software usage and it does not cover any software products whether or not contained in the Product; any such software is provided "AS IS" unless expressly provided for in any enclosed software Limited Warranty. Please refer to the End User License Agreements included with the Product for your rights and obligations with respect to the software.

**Instructions:** To obtain warranty service, you must deliver the product, freight prepaid by product owner, in either its original packaging or packaging affording an equal degree of protection to the Nakamichi authorized service facility specified. It is your responsibility to backup any data, software or other materials you may have stored or preserved on DRAGON. It is likely that such data, software, or other materials will be lost or reformatted during service and Nakamichi will not be responsible for any such damage or loss. A dated purchase receipt is required.

**Repair / Replacement Warranty:** This Limited Warranty shall apply to any repair, replacement part or replacement product for the remainder of the original Limited Warranty period or for ninety (90) days, whichever is longer. Any parts or product replaced under this Limited Warranty will become the property of Nakamichi.

This Limited Warranty only covers product issues caused by defects in material or workmanship during ordinary consumer use; it does not cover product issues caused by any other reason, including but not limited to product issues due to commercial use, acts of God, misuse, limitations of technology, or modification of or to any part of the Nakamichi product. This Limited Warranty does not cover Nakamichi products sold AS IS or WITH ALL FAULTS or consumables (such as fuses or batteries). This Limited Warranty is invalid if the factory-applied serial number has been altered or removed from the product.

This Limited Warranty is valid only in the United States. This Limited Warranty is valid only for Nakamichi products purchased from the following authorized retailers with a valid receipt stating date, product description and purchase price:

1. Amazon.com (under seller "Nakamichi LLC")
2. Best Buy
3. Ebay (under seller "nakamichi-usa")
4. B&H Photo Video
5. Nakamichi Online Store (nakamichi-usa.com)

**LIMITATION ON DAMAGES:** NAKAMICHI SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT.

**DURATION OF IMPLIED WARRANTIES:** EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This Limited Warranty gives you specific legal rights any you may have other rights which vary from state to state.

## DRAGON CONCIERGE

If you have any questions or comments, you may reach us at the following:

Visit our website at [www.dragon.nakamichi-usa.com](http://www.dragon.nakamichi-usa.com)

Email us at [dragonvip@nakamichi-usa.com](mailto:dragonvip@nakamichi-usa.com)

Phone Support: +1 (415) 888 9626 (Weekdays 10am - 6:45pm PST; Saturday 10am - 4:45pm PST)

Join our Community: [community.nakamichi-usa.com](http://community.nakamichi-usa.com)

# 14.2 Sound Optimization Tips

Room acoustics can significantly affect your overall experience. Try these tips to maximize performance.

Symptom	Remedy
Bass too strong/overpowering	<ol style="list-style-type: none"><li>1. Lower volume of left and right subwoofers<ol style="list-style-type: none"><li>a. On the remote control, lower the bass volume level.</li></ol></li><li>2. Lower the number of active subwoofers. See Section 5.3, pg 34.</li><li>3. Change EQ to Movie/Music 2 or 3. See Section 4.2B, pg 29.</li><li>4. Lower subwoofer crossover<ol style="list-style-type: none"><li>a. Press "HOME" to access the OSD.</li><li>b. Under the "Audio" tab, select "Advanced Audio Settings". Lower the subwoofer crossover (default is 200Hz).</li></ol></li><li>5. If bass seems to be louder on either side,<ol style="list-style-type: none"><li>a. Press "HOME" to access the OSD.</li><li>b. Under the "Audio" tab, go to Audio Setup &gt; Quad Subwoofers Setup.</li><li>c. Adjust "Quad Subs Balance" to even out bass distribution.</li></ol></li></ol>
Surround channels too loud	<ol style="list-style-type: none"><li>1. Press "SURROUND" button on your remote to switch to "Dolby Surround" (or "Neural X", for DTS Content only). Avoid using "All Channel Stereo" when watching content with surround sound.</li><li>2. Decrease the volume of side and back surrounds. Press "SS-" and "SB-" on your remote.</li><li>3. Adjust surround channel volume<ol style="list-style-type: none"><li>a. Press "HOME". Go to Calibration &gt; Advanced Sound Setup &gt; Volume Level Calibration</li><li>b. Increase the volume of "Left + Right" and "Center" channel.</li></ol></li></ol>
Surround channels too soft	<ol style="list-style-type: none"><li>1. Ensure content being played has surround sound (e.g. 5.1ch or Dolby Atmos). When playing content with weak/no surround effects, Press "All Channel Stereo" on your remote. Front channels will be upmixed to the surround speakers.</li><li>2. Lower the volume of front channels<ol style="list-style-type: none"><li>a. Press "HOME". Go to Calibration &gt; Advanced Sound Setup &gt; Volume Level Calibration.</li><li>b. Lower the volume of "Left + Right" and "Center" channel.</li></ol></li></ol>

# 14.2 Sound Optimization Tips

Symptom	Remedy
<b>Either surround channel (left or right) louder than the other</b>	<ol style="list-style-type: none"><li>1. If your room only has one side wall (either side),<ol style="list-style-type: none"><li>a. Press "🏠 HOME". Under the "Audio" tab, go to Audio setup &gt; Channel Level Volume Setup.</li><li>b. Adjust "Front Surround Balance" to project more sound towards area with no side wall.</li></ol></li><li>2. If surround speakers are not placed at equal distances from listening position,<ol style="list-style-type: none"><li>a. Press "🏠 HOME" to access the OSD.</li><li>b. Under the "Audio" tab, go to Audio setup &gt; Channel Level Volume Setup.</li><li>c. Adjust "Surround Speaker Balance" to increase output of the surround speaker that is placed further away.</li></ol></li><li>3. Calibrate DRAGON to your room size<ol style="list-style-type: none"><li>a. Go to "🏠 HOME" &gt; "Calibration" &gt; Easy Sound Setup. Switch between Small, Medium or Large rooms.</li><li>b. For more precise calibration, go to Advanced Sound Setup &gt; Room Size Calibration to manually set distances of each speaker to listening position.</li></ol></li></ol>
<b>Height channels too soft</b>	<ol style="list-style-type: none"><li>1. Adjust AHD setting<ol style="list-style-type: none"><li>a. Press "AHD" on your remote. Set AHD to "Max".</li></ol></li><li>2. Adjust Height Channel Volume<ol style="list-style-type: none"><li>a. Press "FH+" and "RH+" on your remote to increase height channel volume.</li></ol></li></ol>
<b>Height channels too soft</b>	<ol style="list-style-type: none"><li>1. Adjust rear height balance<ol style="list-style-type: none"><li>a. Press "🏠 HOME" to access the OSD.</li><li>b. Go to the "Audio" Tab. Select Audio Setup &gt; Height Effects Setup.</li><li>c. Adjust the rear height speaker balance.</li></ol></li></ol>

# 14.3 Help and Troubleshooting

## 1. HDMI eARC / ARC – No sound or video / System works erratically

### Restore DRAGON's factory settings to refresh HDMI settings

#### A. Restoring Factory Settings ("Soft Reset")

##### Method 1: Without OSD

- i. Power ON DRAGON.
- ii. Press and hold  on the main unit for 8 seconds. Factory settings will be reapplied. The main unit will turn off when reset is complete.
- iii. After a few seconds, press  to power ON DRAGON. DRAGON will go to TV (ARC/eARC) by default.

##### Method 2: Via On-Screen Display (OSD)

- i. Press  HOME". Navigate to the "System" tab.
- ii. Scroll down to "Restore Factory Settings". Press  to scroll to "YES".
- iii. Press "ENTER". Factory settings will be reapplied. The main unit will power off when reset is complete.
- iv. After a few seconds, press  to power ON DRAGON. DRAGON will go to TV (ARC/eARC) by default.

**If your TV was connected to another sound system via HDMI previously, perform a hard reset by following these steps to establish a new HDMI handshake.**

#### B. DRAGON & TV Hard Reset + HDMI Connection Refresh

- i. While all source devices are on, disconnect **all** HDMI cables connected to the TV and DRAGON (including the cable that links the TV to DRAGON).
- ii. Power OFF TV, DRAGON and all source devices.
- iii. Unplug all devices from the AC outlets.
- iv. Wait for 5 minutes before plugging the TV, DRAGON and source devices back to the AC outlets.
- v. Power ON DRAGON, TV and all source devices.
- vi. While they are on, connect the TV and DRAGON via HDMI eARC/ARC.

Once the connection is established, connect other source devices one at a time. Then, use the Perfect Device Matching Tool on the right to optimize audio settings.



## 2. No sound from entire DRAGON system

- i. Press the "OUTPUT" button on your remote. Ensure external output is set to "EXT OFF".
- ii. Ensure DRAGON's volume is set to an audible level. Press  on the main unit. If sound is output from all speakers, the issue may be with the device connected to DRAGON.
- iii. Check the volume of your external device.
- iv. Check all cable connections connecting your device to DRAGON.
- v. Try a soft reset, followed by a hard reset + HDMI Connection Refresh (See question 1).

# 14.3 Help & Troubleshooting

## 3. TV is not sending sound from streaming apps/devices connected to it to DRAGON

- i. Ensure DRAGON is connected to the TV via the designated HDMI eARC/ARC ports on both devices. Use the HDMI 2.1 cable included in box.
- ii. HDMI eARC and HDMI - CEC may need to be enabled from your TV settings. Check your TV documentation or go to the following website to view recommended audio settings for your TV.

For brand specific TV audio settings, scan the QR code or visit: [bit.ly/dragon-best-sound](https://bit.ly/dragon-best-sound)



## 4. DRAGON does not power on automatically with the TV

When you power off the DRAGON while watching TV, power synchronization with the TV is disabled. Once DRAGON is connected to the TV, always use the TV remote to power DRAGON ON/OFF.

## 5. Sound is always output by the TV, rather than DRAGON

**\*Applies to HDMI inputs only (switch main unit to eARC for TV audio.)**

- i. Press "🏠 HOME" button. Go to VIDEO tab.
- ii. Under "HDMI Audio Playback", select "NAKAMICHI".

## 6. Intermittent audio cut out or no sound

- i. Perform a soft reset. See 1A (above).
- ii. Disconnect the source device that is having issues from the main unit or TV. Unplug the source device from the AC outlet for 5 minutes before powering it back on.
- iii. While the source device is on, connect it to the main unit or TV. Use Perfect Device Matching Tool ([bit.ly/dragon-matching-tool](https://bit.ly/dragon-matching-tool)) to create a customized setup guide based on your device.
- iv. Get the best audio performance using recommended audio settings ([bit.ly/dragon-audio-settings](https://bit.ly/dragon-audio-settings)).

# 14.3 Help & Troubleshooting

## 7. No sound from wireless subwoofers or surround speakers

### A. Ensure power is connected

Check that the power cord is inserted firmly into the speaker/adaptor power sockets and AC outlet, and that power is being sent to all speakers. Ensure that the subwoofer's physical power switch is toggled to "ON". Then, power on the main unit.

### B. Check wireless connection

- i. With the main unit powered on, check if the LED indicator on the rear of the subwoofer and surround speakers are lit with solid blue light. If the LED indicator for any wireless speaker is flashing or turned off, Perform the pairing procedure in Section 12.2 or 12.3, pg 61 to 64.
- ii. If a wireless speaker refuses to power on or connect, disconnect power to the affected wireless speakers for 5 minutes, and retry this procedure.

### C. Soundcheck

If all wireless speakers have a solid blue light while DRAGON is powered on, press **□** (Demo) on the main unit. If sound is output from all speakers, nothing is wrong with the wireless connection between speakers.

If the sound is intermittent, see steps in the next section.

## 8. Subwoofer or surround speakers sound abnormalities

Cut out / crackling / popping / distortion: When there is a 5.8GHz wireless device in close range to DRAGON that is using the same frequency (e.g. Home Wi-Fi router), the main unit's wireless connection to the subwoofer and surround speakers may be affected. This can be resolved by tweaking the following:

### A. Remove any obstructions or potential sources of interference.

- i. Remove any obstacles between the main unit and the affected wireless speakers.
- ii. Other devices sending radio frequency signals in proximity may interrupt the connection. Where possible, keep your speakers away from such devices. Alternatively, change DRAGON's wireless channel (see 8B).
- iii. Bring the subwoofers and surround speakers closer to the main unit. See Section 2.1 - 2.2 for recommended speaker placement.

### B. Change DRAGON's wireless channel

- i. Press the **🏠 HOME** button on your remote. Navigate to the "System" tab.
- ii. Go to "Subs + Surr Wireless Freq", and change to either of the following:

Selection	Wireless Frequency (GHz)	Frequencies Occupied <sup>9</sup>
Default	5.8 GHz	Channels 149 - 163
Auto 1	5.2 GHz	Channels 32 - 50

# 14.3 Help & Troubleshooting

## Notes:

1. The default channel is optimized for avoiding wireless interference from external devices. If there is no audio popping /crackling /cut out from subwoofer(s) or surround speakers, it is recommended to keep using the default channel.
2. Changing the radio frequency channel and strength may affect the performance of other near wireless devices (e.g. wireless LAN) using the same frequency bandwidth.
3. DRAGON's wireless transmission will automatically analyze and use smaller range of frequency channels mentioned for the best wireless performance.

### C. Adjusting your home's wireless router

Visit our helpdesk to view recommended settings for your Wi-Fi router and optimize the performance of DRAGON's wireless communication. Scan the QR code on the right.

Optimize your Home Wi-Fi for wireless surround systems



### D. Change DRAGON's wireless strength

- i. Press the "HOME" button on your remote. Navigate to the "System" tab.
- ii. Go to "Wireless Freq Strength", change "2: Default" to 3 or 3+ . (See Section 6.5, pg 49)
- iii. Play content. Audio playback from subwoofer and surround speakers should be optimized.

## 9. No surround sound or surround sound volume is lower than expected

- i. Ensure your device is sending surround sound to DRAGON. Only devices connected via HDMI or optical can send surround sound to DRAGON. Bluetooth transmissions are limited to stereo sound.
- ii. When using Bluetooth or Aux-In to play stereo content with weak surround content, press "All Channel Stereo" to send stereo sound to the surround speakers.
- iii. Press SS+/SB+ on your remote to increase the volume of surround effects.

## 10. Bass seems weaker than expected

- i. Check the power connections of both subwoofer units. Power on the system. Ensure the LED indicators on both subwoofers are lit with solid blue. If any subwoofer has a flashing blue LED, perform the subwoofer pairing procedure in Section 12.2 (pg 61).
- ii. Press SUB+ on your remote, until "Quad Subs" is shown on the main unit display. Push up the Bass button on your remote to increase bass output.
- iii. Press "Home" to open DRAGON's OSD. Navigate to Calibration > Volume Level Calibration. Scroll down and ensure the subwoofer level for both subwoofers are set to at least 5 (default).
- iv. Certain content may be recorded with weak bass effects. Try playing content that is encoded with 5.1 channels or above.
- v. Experiment with subwoofer placement (See recommendations in Section 2.1, pg 12).

# 14.3 Help & Troubleshooting

## 11. Remote Control does not work

- i. Replace the batteries with new ones.
- ii. Try re-pairing the remote control to the main unit (Section 12.4, pg 65).
- iii. Use the remote within reasonable proximity to the main unit.

## 12. My Device cannot connect to DRAGON via Bluetooth

- i. DRAGON is only able to playback content from a connected device when it is set to BT Mode. Press  on your remote to switch to it.
- ii. If DRAGON's LED display shows BT without blinking, this indicates that another device is connected to DRAGON. Press and hold  until BT starts flashing. DRAGON is now ready to pair with a new device.
- iii. If your device is still unable to connect to DRAGON, make the source device forget "DRAGON". Restart the device and try pairing it to DRAGON again.

## 13. Sound drops out when connected via Bluetooth

- i. Some devices can cause radio interference if they are located too close to the main unit. e.g. microwaves, wireless routers, telephones, computer peripherals etc.
- ii. If your device that is connected via Bluetooth moves too far away from the main unit, it may cause the sound to drop out. Move the device closer to the main unit.
- iii. If the main unit is installed on metal furniture or has obstructions between it and your device, the sound may drop out. Check your installation environment.

## HELPDESK

[bit.ly/dragon-helpdesk](https://bit.ly/dragon-helpdesk)



## SPEAK TO OUR DRAGON CONCIERGE BASED IN CALIFORNIA



[dragonvip@nakamichi-usa.com](mailto:dragonvip@nakamichi-usa.com)



(415) 888 9626



(Weekdays 10am - 6:45pm PST; Saturday 10am - 4:45pm PST)

**NAKAMICHI USA. ALL RIGHTS RESERVED.**