

PRELIMINARY

Zebra® MZ Series
Mobile Printers
Quick Start Guide
Introduction

Thank you for choosing one of our Zebra MZ Series Mobile Printers. These rugged printers will become productive and efficient additions to your workplace thanks to their innovative design. Because they are made by Zebra Technologies Corporation, you can be assured of world-class support for all of your bar code printers, software, and supplies.

This document provides an easy reference for operating and maintaining the MZ Series Mobile Printers. Complete documentation for this printer series is provided by the **MZ Series User Guide** available on the Internet at: <http://www.zebra.com>.


Zebra Technologies International, LLC
333 Corporate Woods Parkway
Vernon Hills, Illinois 60061-3109 USA

QSG-MZS-001 rev. A

© ZIH Corp. 2006


MZ Series Overview

(MZ 220 Illustrated)

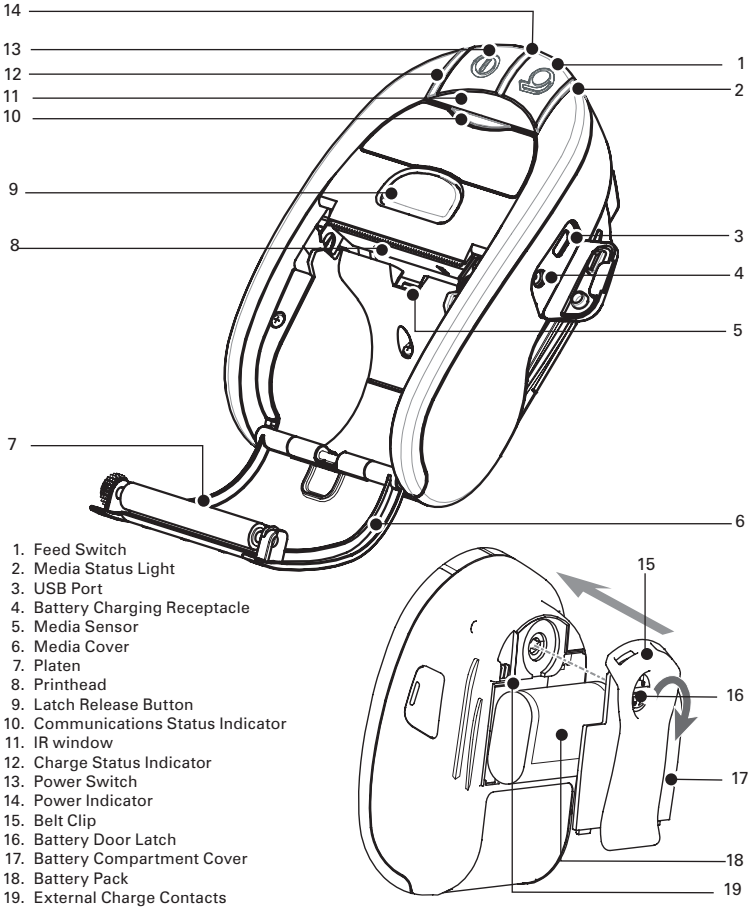

Installing the Battery


! Batteries are shipped uncharged. Remove any protective packaging from new battery packs, install it in the printer and charge completely prior to initial use.

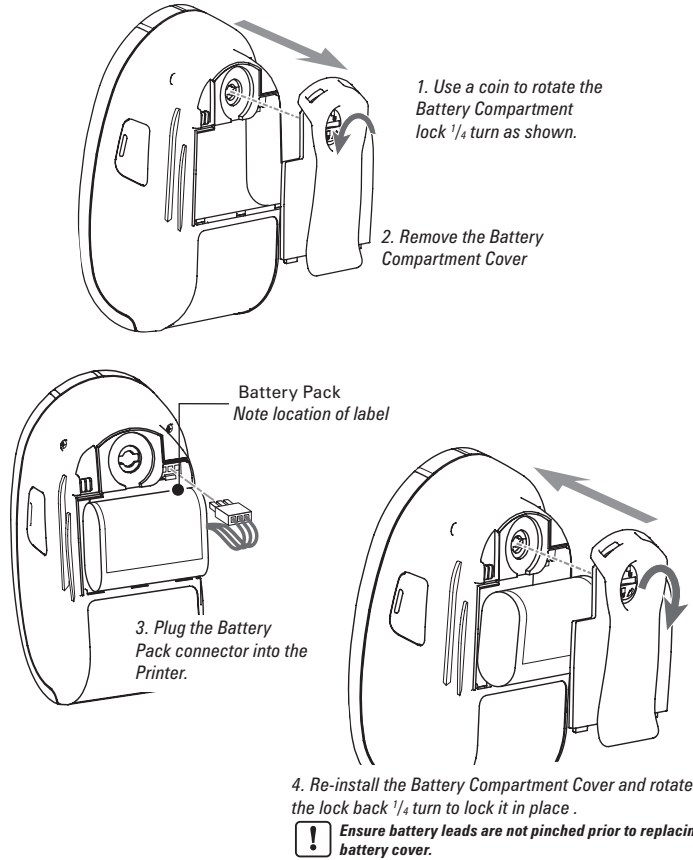


Charging the Battery

Preparing the Charger Power Supply

Remove the power supply from its box. Remove and discard the shipping ring from the mains receptacle cavity.

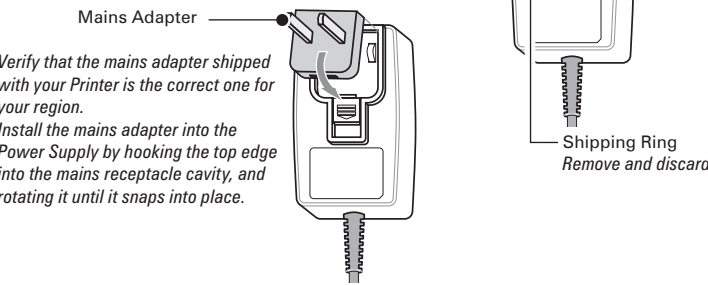

Using the Charger Power Supply

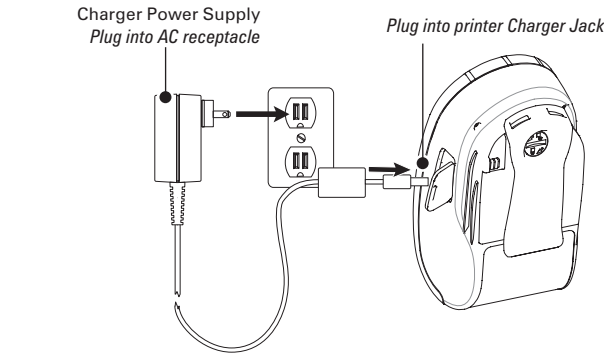

! The printer may be used while charging the battery. However, prolonged use of the printer while charging will greatly increase charge times.

Important Safety Information

Static Discharge and Thermal Printing

- Caution • Static Discharge**
The discharge of electrostatic energy can damage or destroy the printhead or electronic components used in this device. DO NOT TOUCH the printhead or any exposed electronic components.
- Caution • Printhead**
The printhead can become hot after prolonged printing. Use only the supplied cleaning pen to perform maintenance on the printhead.

Battery Safety

- !** Always observe the safety precaution in the Lithium-Ion Battery Technical Bulletin included with each Battery Pack.
- Caution • Short Circuits**
Avoid accidental short circuiting of any battery. Allowing battery terminals to contact conductive material will create a short circuit which could cause burns and other injuries or could start a fire.
- Li-ion Important • Lithium-Ion (Li-ion) Battery Disposal**
Always dispose of used printer batteries properly. Disposal regulations may vary by location. Refer to the MZ series Users Guide for more battery recycling information.
- Caution • Use Zebra Chargers**
Use of any charger not approved specifically by Zebra for use with its batteries could cause damage to the Battery Pack or the Printer and will void the warranty.

Product Support


For product support, contact Zebra Technologies at: www.zebra.com

In the Americas contact:
Zebra Technologies International, LLC
333 Corporate Woods Parkway
Vernon Hills, Illinois 60061-3109 USA
Phone: +1.847.793.2600 or +1.800.423.0422
Fax: +1.847.913.8766


In Europe, Africa, the Middle East, and India contact
Zebra Technologies Europe Limited
Zebra House
The Valley Centre, Gordon Road
High Wycombe
Buckinghamshire HP13 6EQ, UK
Phone: +44.1494.472872
Fax: +44.1494.450103

In the Asia Pacific region contact:
Zebra Technologies Asia Pacific, LLC
16 New Industrial Road
#05-03 Hudson TechnoCentre
Singapore 536204
Phone: +65-6858 0722
Fax: +65-6885 0838


Loading Media

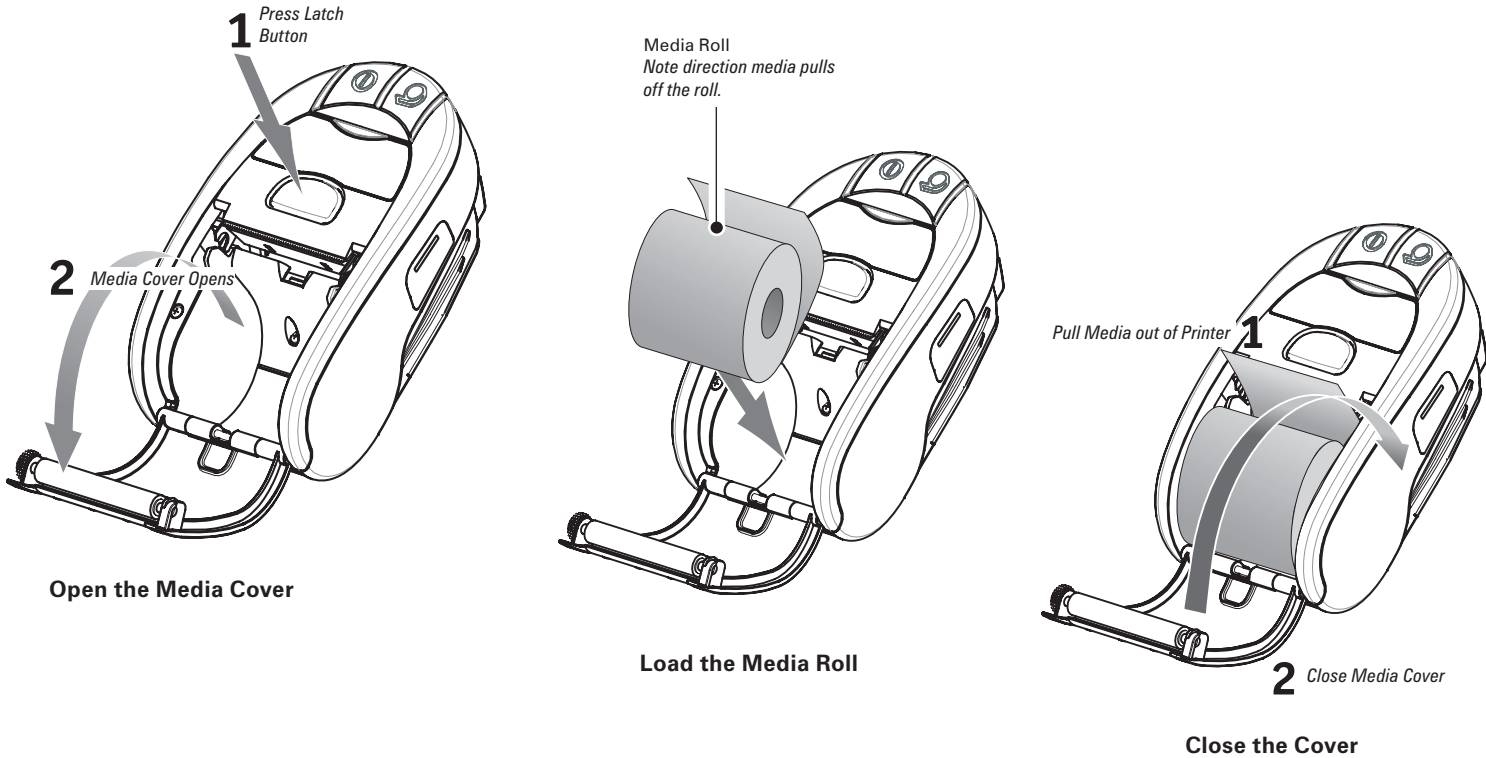

Printer Controls

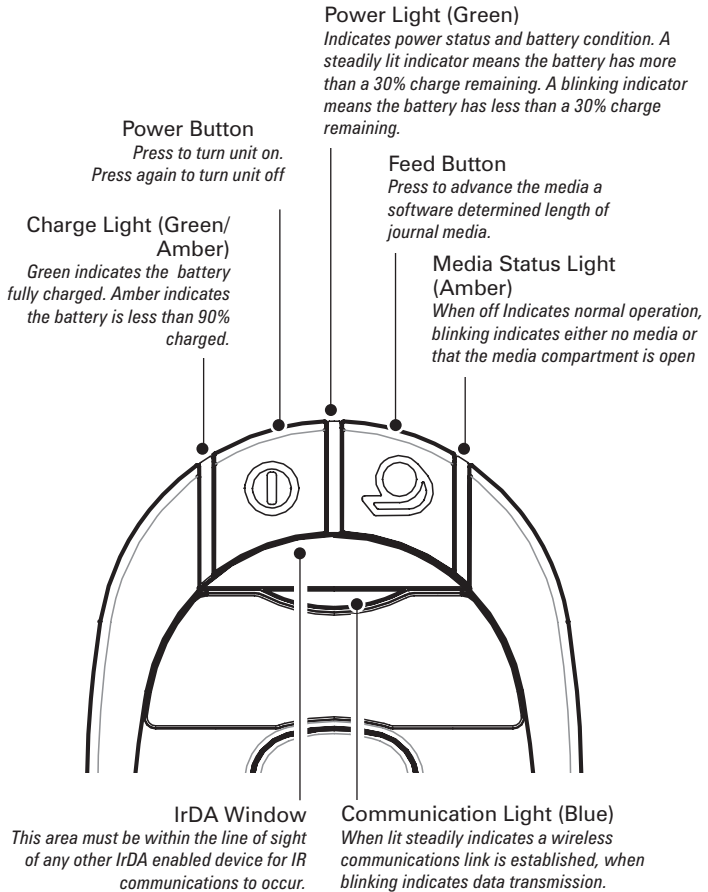

Cleaning the Printer

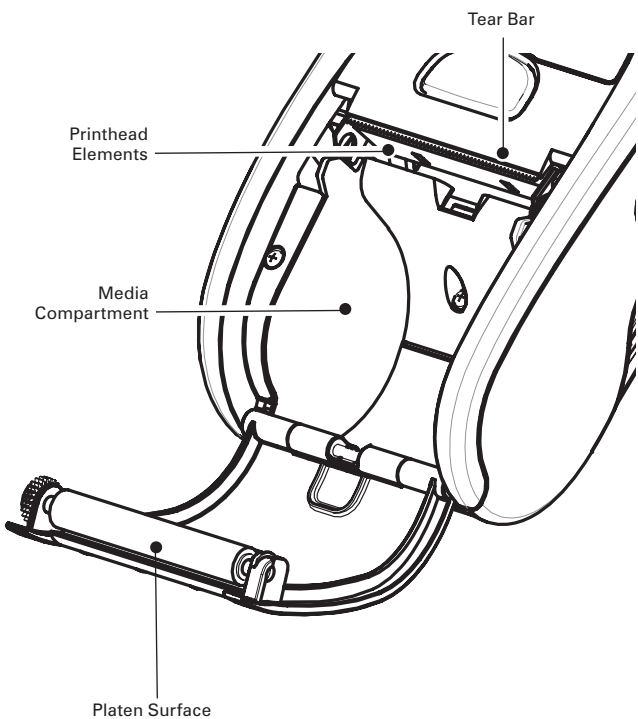

Area	Method	Interval
Printhead	Use a Zebra cleaning pen or a 70% isopropyl alcohol solution on a cotton swab to clean the print elements from end to end (the print elements are located in the thin gray line on the printhead).	After every five rolls of media (or more often, if needed)
Platen	Rotate the platen roller and clean it thoroughly with a Zebra cleaning pen or a 70% isopropyl alcohol solution and a cotton swab.	
Tear bar	Clean thoroughly with a Zebra cleaning pen or a 70% isopropyl alcohol solution and a cotton swab.	
Exterior	Water dampened cloth	As needed
Media Compartment Interior	Brush/air blow.	After every five rolls of media (or more often, if needed)



Note • Twelve packs of approved cleaning pens are available from Zebra as p/n AN11209-1.




Caution • To avoid possible personal injury or damage to the Printer, never insert any pointed or sharp objects into the Printer.

Wearing the Printer


Belt Clip (standard on all printers)

To use: hook the clip over your belt and ensure that the clip is securely attached to the belt. The belt clip will pivot to allow you to move freely while wearing the Printer.

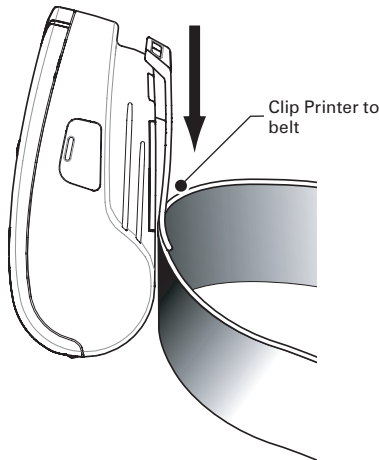


Adjustable Shoulder Strap (Accessory Kit)

Refer to figure below. Secure each end of the shoulder strap by looping through the slots on the belt clip and securing with the buckle.

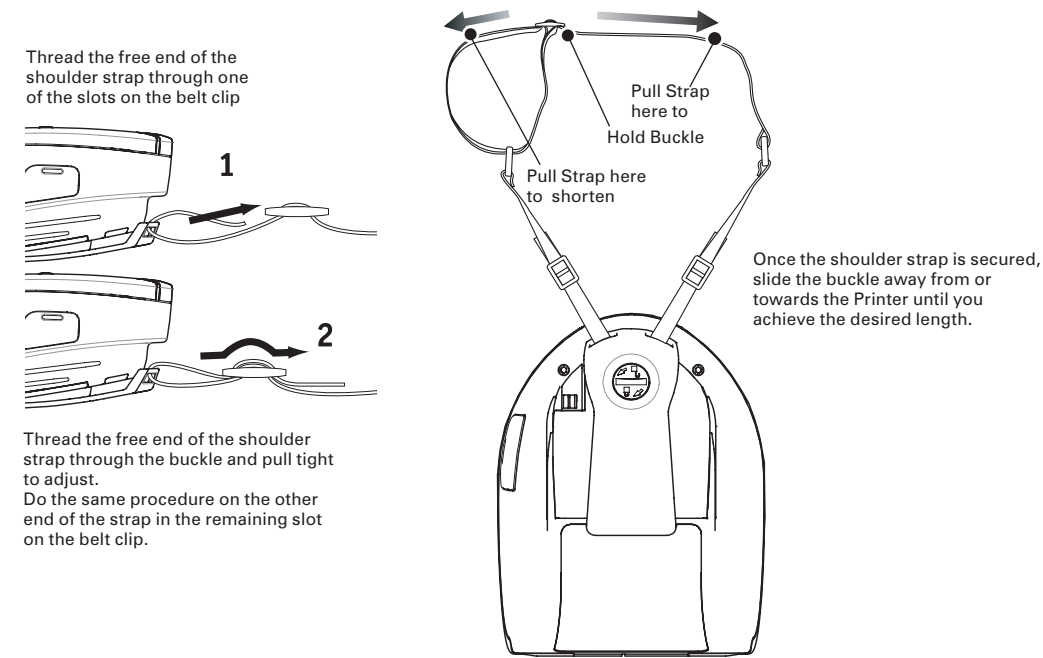


Connecting the Printer

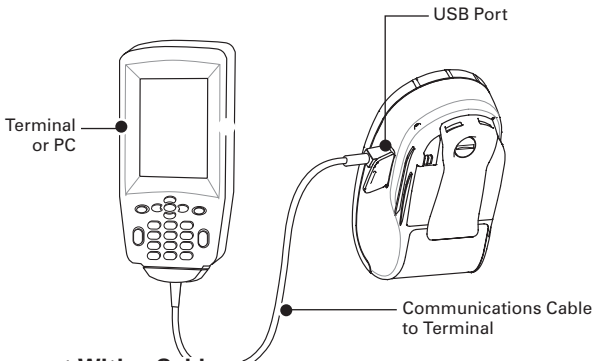

Connect With a Cable

Refer to the Label Vista™ application on the Internet at <http://www.zebra.com> for help on setting up the Printer.

If you are connecting to a PC you may need to install the Zebra Universal Driver available on the Internet at : <http://www.zebra.com>.

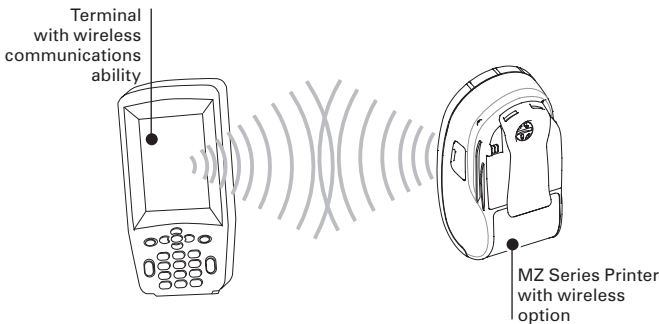

Connect by Radio

Refer to the Wireless Quick Start Guide on the Internet at <http://www.zebra.com> for help on setting up your wireless printer.

Troubleshooting

Interpreting Indicators

The printer's indicators display various printer functions and their status. Check the indicator status, then refer to the Troubleshooting topic referenced in the chart.

Function	Indicator Color	Indicator Status: Steady	Indicator Status: Blinking	Troubleshooting Topic
Power	Green	Indicates printer is on and battery condition is OK to use.	Blinking signifies Low Battery	3
Charger	Amber/ Green	Off indicates battery is not charging. Amber indicates battery is charging. Green indicates battery is charged.	N/A	1,6,10
Error	Amber	Off indicates no error condition	No media or media door is open. Application may be missing or corrupted	2,4,7,9
Commu- nications	Blue	Cable/IrDA: N/A	Data is being received	5,8
		Bluetooth: Printer has paired with another Bluetooth device.	Data is being received	5,8
		802.11g: Radio is associated with a WLAN	Radio is trying to associate with a WLAN.	5,8

Troubleshooting Topics

1. No power:

- Check that battery is installed properly.
- Recharge or replace battery as necessary.

2. Media does not feed:

- Be sure Media Cover is closed and latched.
- Check media compartment. Ensure media is not binding on the sides of the compartment.

3. Poor or faded print

- Clean printhead.
- Check battery for possible damage. Recharge or replace as necessary.
- Check quality of media.

4. Partial or missing print:

- Check media alignment.
- Clean printhead.
- Ensure Media Cover is properly closed and latched.

5. No print:

- Replace battery.
- Check cable to terminal.
- (Wireless units only) Restore wireless connection.

6. Reduced battery life:

- Check battery date code — if battery is one to two years old, short life may be due to normal aging.
- Recharge or replace battery.

7. Flashing Amber indicator:

- Check that media is loaded and that printhead is closed and securely latched.
- If media is present and latch is closed, indicates that no application is present or application is corrupted. Program must be re-loaded.

8. Communication Error:

- (Wireless units only) Check that media is loaded, head is closed and blue communication link light is on.
- Replace cable to terminal.

9. Label Jam:

- Open media cover.
- Generously apply alcohol to Printer in area of jammed label.

10. Battery Pack Is Hard to Install

- Do not force the battery into place. Verify you have not pinched any wires between the battery and the printer.
- Verify you are plugging the battery connector into the printer correctly.



Resetting an MZ Series Printer

If the printer has locked up and is not responding to any operator inputs or external commands, either from a connected terminal or from a linked LAN, you can perform a forced reset as follows:

1. Open the media compartment and remove any media.
2. Press the Feed button and hold it approximately ten seconds until the Power, Communications and Error indicators turn off and stay off.
3. After the three indicators turn off wait ten more seconds and press the Power button. The Printer will restart and normal operation can resume.